
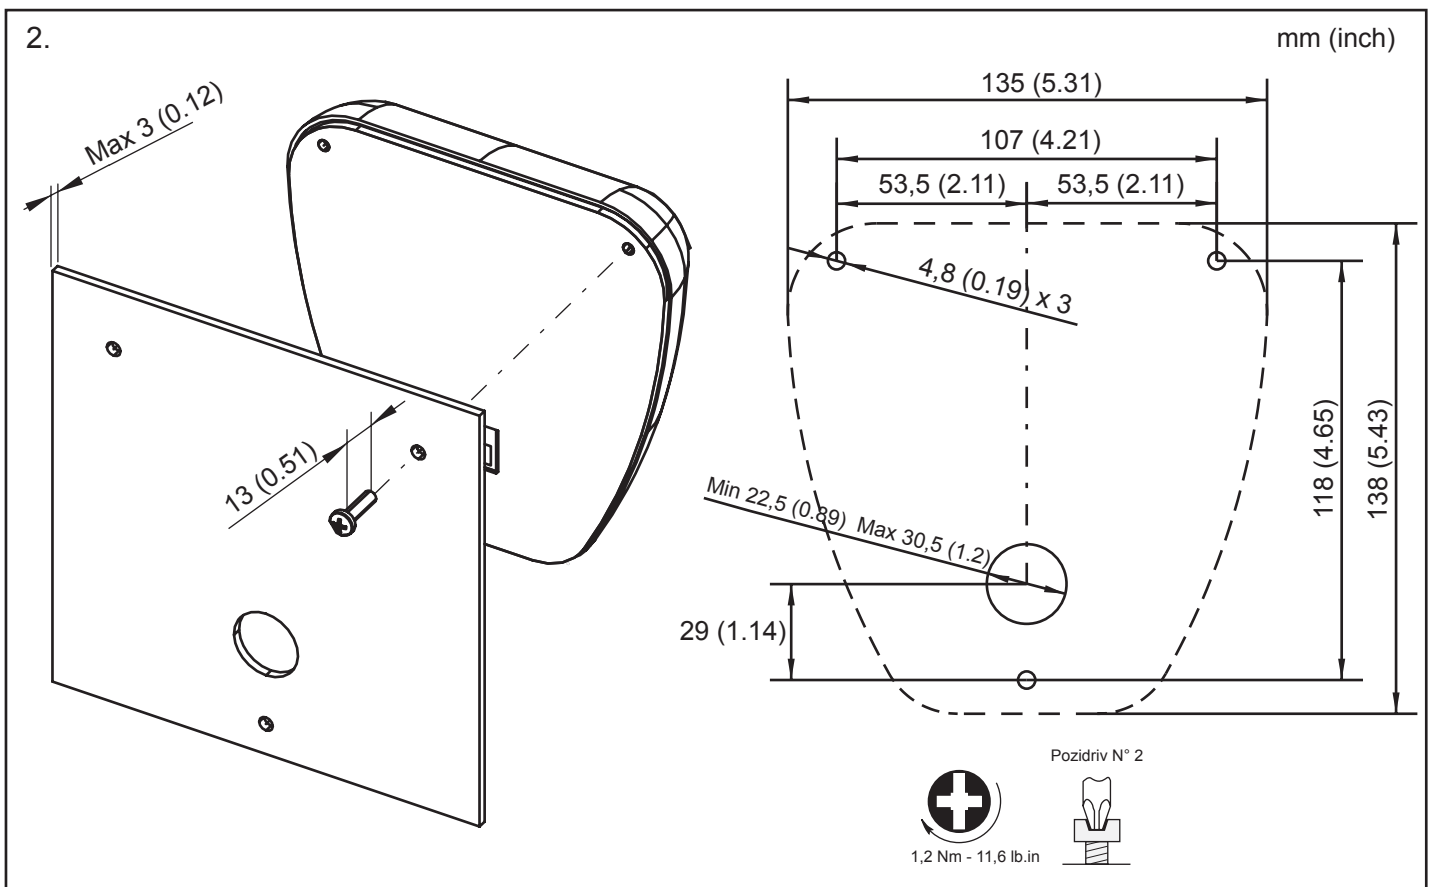


PSTEK


1SFC 132015M0201, June 2004

External keypad
Externes Bedienpanel
Clavier externe
Extern keypad
安装说明
Teclado externo
Tastiera esterna
Consola
Внешняя клавиатура
Harici tus takimi
Extern toetsenbord
Ulkoinen näppäimistö


Installation instructions
Installations- und Wartungshinweise
Instructions de montage
Installationsanleitung
外部键盘
Instrucciones de instalación
Istruzioni di installazione
Instruções de instalação
Инструкция по установке
Montaj talimati
Installatie instructies
Asennusohjeet

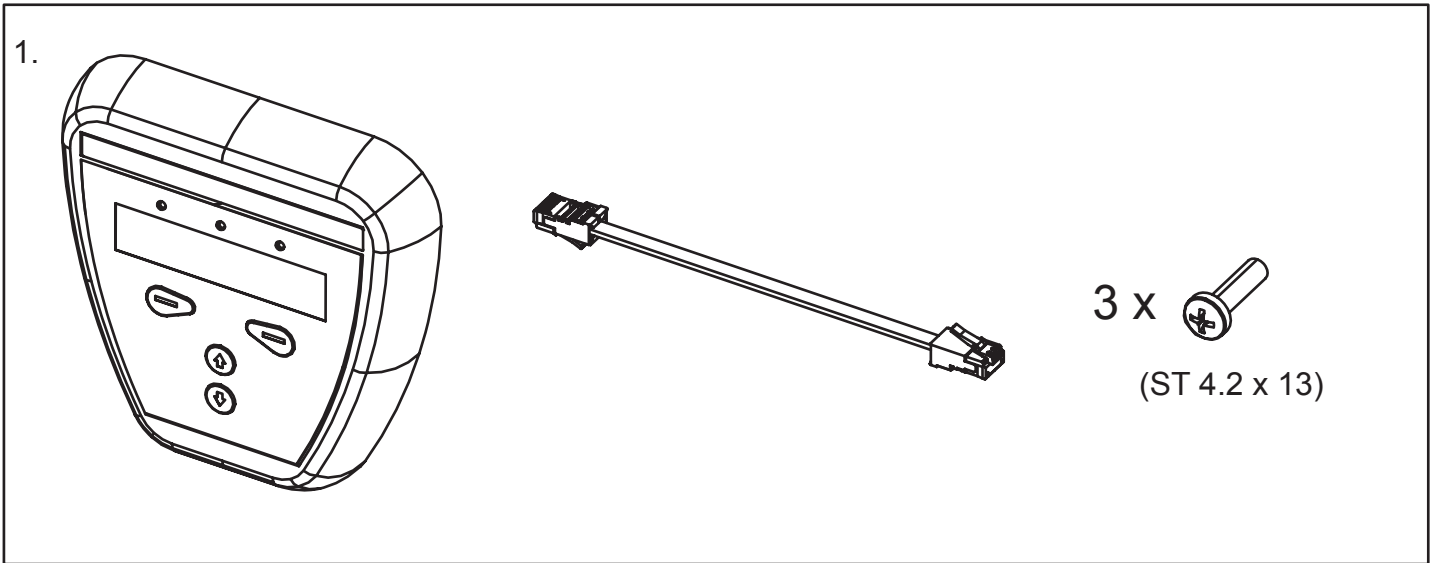

3.

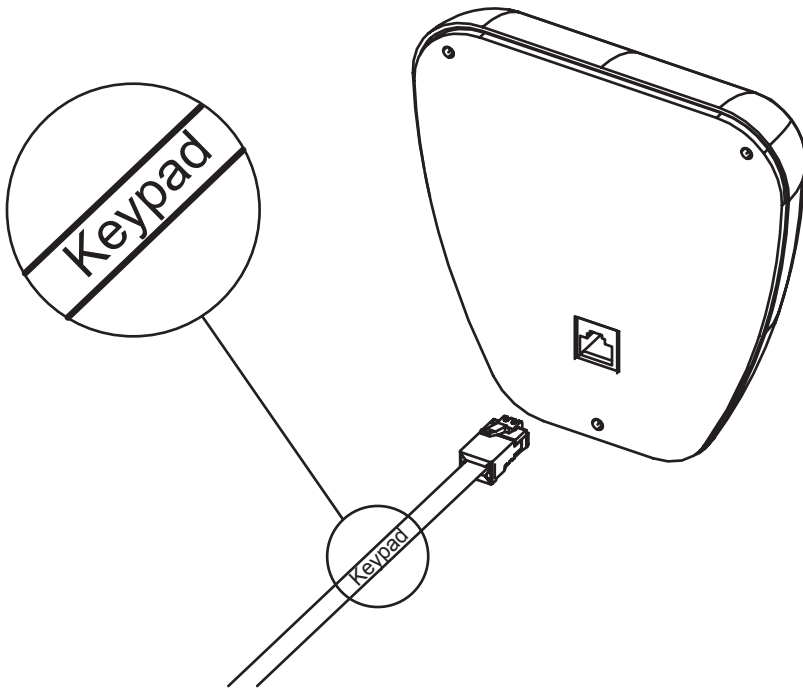

4.

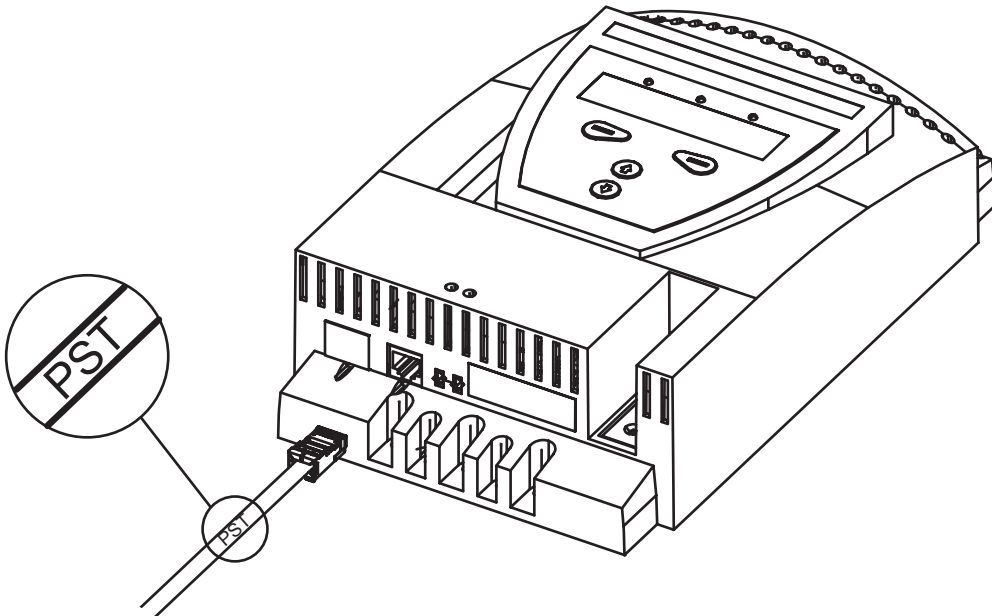

5.

For operating instructions see PST(B) Manual or www.abb.com/lowvoltage
Für weitere Instruktionen siehe PST(B) Bedienungsanleitung oder www.abb.com/lowvoltage
Pour la mise en service, voir le manuel PST(B) ou www.abb.com/lowvoltage
För användarinstruktion, se PST(B) Manual eller www.abb.com/lowvoltage
操作说明请见 PST(B) 安装手册或 www.abb.com/lowvoltage
Para instrucciones de uso, ver manual de PST(B) o acceder a la web www.abb.com/lowvoltage
Per le istruzioni d'uso vedere il manuale dei PST(B) o il sito www.abb.com/lowvoltage
Para instruções de parametrização, favor consultar o manual do PST(B) ou www.abb.com/lowvoltage
Инструкция по эксплуатации поставляется с PST(B) или на www.abb.com/lowvoltage
Calistirma için PST(B) manueline veya www.abb.com/lowvoltage bakınız
Voor meer informatie zie de PST(B) handleiding of kijk op www.abb.com/lowvoltage
Käyttöohjeet PST(B) Asennus- ja käyttöönotto-oppaassa tai www.abb.com/lowvoltage