
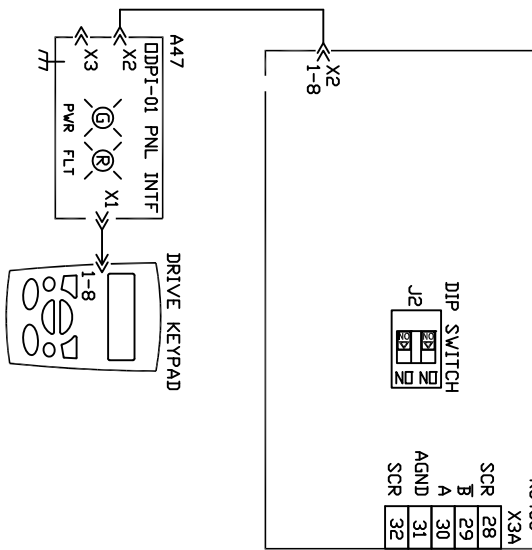


A B C D E F G H I J K L M N P R S T W X Y

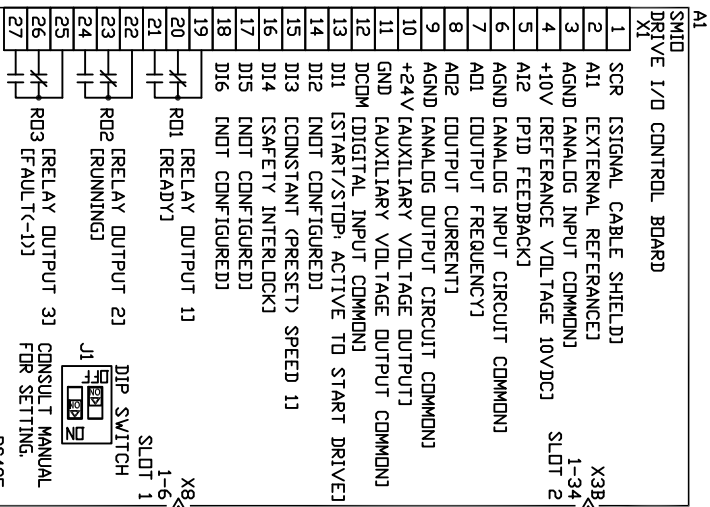

- NOTES:
1. APPLICATION MACRO: HVAC DEFAULT, CONSULT USER'S MANUAL FOR OTHER MACRO DEFAULT CONTROL SIGNALS.
 2. CONSULT USER'S MANUAL FOR I/O RATINGS.

4. COPPER WIRE RATED FOR 60°C INSULATION IF RATED LESS THAN 100A OR 75°C IF RATED 100A OR MORE MUST BE USED.
5. REFER TO USER MANUAL FOR OPERATION, CONNECTIONS AND TIGHTENING TORQUE VALUES.
6. CUSTOMER REQUIRED TO PROVIDE BRANCH CIRCUIT PROTECTION AND DISCONNECT MEANS PER NEC AND LOCAL CODE.

Rev	Description	Date	App'd	Revision	Project Name	Approved By	Responsible	Date	Reference Number	Sheet
L	SEE ECN 10003203	06/23/09	DC	ACX550	ACH550 DRIVE I/O	J. Truettner	ABB	9/19/2007	POPDR056CC-A	B
Based On	Control Wiring Diagram									