

---

ABB DRIVES FOR WATER

# ACQ580-01 drives

Hardware manual

(0.75 to 250 kW, 1.0 to 350 hp)



Related documents are listed on page [25](#).



[ACQ580-01 manuals](#)



# Hardware manual

**ACQ580-01 drives**  
**(0.75 to 250 kW, 1.0 to 350 hp)**

Table of contents



1. Safety instructions



4. Mechanical installation



6. Electrical installation





# Table of contents

---

## 1. Safety instructions

Contents of this chapter	13
Use of warnings and notes in this manual	13
General safety in installation, start-up and maintenance	14
Electrical safety in installation, start-up and maintenance	16
Precautions before electrical work	16
Additional instructions and notes	17
Grounding	18
Additional instructions for permanent magnet motor drives	20
Safety in installation, start-up and maintenance	20
General safety in operation	21

## 2. Introduction to the manual

Contents of this chapter	23
Applicability	23
Target audience	23
Purpose of the manual	23
Contents of this manual	24
Categorization by frame (size)	25
Related documents	25
Quick installation and commissioning flowchart	27
Terms and abbreviations	28



## 3. Operation principle and hardware description

Contents of this chapter	31
Operation principle	32
Layout	33
Overview of power and control connections	39
External control connection terminals, frames R1...R5	40
External control connection terminals, frames R6...R9	41
Control panel	42
Control panel door mounting kits	43
Type designation label	43
Locations of the labels on the drive	44
Type designation key	45

## 4. Mechanical installation

Contents of this chapter	47
Safety	47
Checking the installation site	48
Required tools	51
Moving the drive	51

---

## 6 Table of contents

Unpacking and examining delivery, frames R1 and R2	52
Frames R1 and R2 cable box (IP21, UL Type 1)	53
Unpacking and examining delivery, frame R3	54
Unpacking and examining delivery, frame R4	56
Unpacking and examining delivery, frame R5	58
Frame R5 cable box (IP21, UL Type 1)	59
Unpacking and examining delivery, frames R6...R9	60
Frame R6 cable box (IP21, UL Type 1)	61
Frame R7 cable box (IP21, UL Type 1)	62
Frame R8 cable box (IP21, UL Type 1)	63
Frame R9 cable box (IP21, UL Type 1)	64
Installing the drive	65
Installing the drive vertically, frames R1...R4	65
Install the cable box, frames R1...R2	66
Installing the drive vertically, frame R5	67
Installing the drive vertically, frames R6...R9	70
Installing the drive vertically side by side	71
Installing the drive horizontally, frames R1...R5	72
Flange mounting	72



## 5. Planning the electrical installation

Contents of this chapter	73
Limitation of liability	73
Selecting the supply disconnecting device	73
European Union	74
Other regions	74
Checking the compatibility of the motor and drive	75
Protecting the motor insulation and bearings	75
Requirements table	76
Selecting the power cables	80
General rules	80
Typical power cable sizes	81
Alternative power cable types	82
Motor cable shield	83
Additional US requirements	83
Selecting the control cables	84
Shielding	84
Signals in separate cables	84
Signals allowed to be run in the same cable	84
Relay cable	85
Control panel cable	85
Drive composer PC tool cable	85
FPBA-01 PROFIBUS DP adapter module connectors	85
Routing the cables	86
General rules	86
Separate control cable ducts	87
Continuous motor cable shield or enclosure for equipment on the motor cable	87
Implementing thermal overload and short-circuit protection	88
Protecting the drive and input power cable in short-circuits	88
Protecting the motor and motor cable in short-circuits	88

---

Protecting the drive and the input power and motor cables against thermal overload . . .	89
Protecting the motor against thermal overload . . . . .	89
Protecting the drive against ground faults . . . . .	89
Residual current device compatibility . . . . .	89
Implementing the Emergency stop function . . . . .	90
Implementing the Safe torque off function . . . . .	90
Implementing the ATEX-certified Safe motor disconnection function (option +Q971) . . . . .	90
Implementing the undervoltage control (power-loss ride-through) . . . . .	90
Using a safety switch between the drive and the motor . . . . .	90
Using a contactor between the drive and the motor . . . . .	90
Protecting the contacts of relay outputs . . . . .	91
Limiting relay output maximum voltages at high installation altitudes . . . . .	92
Implementing a motor temperature sensor connection . . . . .	93

## 6. Electrical installation

Contents of this chapter . . . . .	95
Warnings . . . . .	95
Required tools . . . . .	95
Checking the insulation of the assembly . . . . .	96
Drive . . . . .	96
Input power cable . . . . .	96
Motor and motor cable . . . . .	96
Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (IEC) . . . . .	97
EMC filter . . . . .	97
Ground-to-phase varistor . . . . .	97
When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems . . . . .	98
Guidelines for installing the drive to a TT system . . . . .	99
Identifying different types of electrical power systems . . . . .	99
Frames R1...R3 . . . . .	101
Frames R4...R9 . . . . .	102
Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (North America) . . . . .	104
EMC filter . . . . .	104
Ground-to-phase varistor . . . . .	104
When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems . . . . .	105
Guidelines for installing the drive to a TT system . . . . .	106
Identifying different types of electrical power systems . . . . .	107
Frames R1...R3 . . . . .	108
Frames R4...R9 . . . . .	110
Connecting the power cables . . . . .	112
Connection diagram . . . . .	112
Connection procedure, frames R1...R4 . . . . .	113
Connection procedure, frame R5 . . . . .	120
Connection procedure, frames R6...R9 . . . . .	126
DC connection . . . . .	130
Connecting the control cables . . . . .	131
Default I/O connection diagram (Water default configuration) . . . . .	132



## 8 Table of contents

Control cable connection procedure R1...R9	142
Installing option modules	148
Mechanical installation of option modules	148
Wiring the modules	150
Reinstalling covers	151
Reinstalling cover, frames R1...R4	151
Reinstalling covers, frame R5	152
Reinstalling side plates and covers, frames R6...R9	153
Installing UL Type 12 hood	154
Connecting a PC	155

### 7. Installation checklist

Contents of this chapter	157
Warnings	157
Checklist	157

### 8. Maintenance and hardware diagnostics

Contents of this chapter	159
Maintenance intervals	159
Description of symbols	160
Recommended annual actions by the user	160
Recommended maintenance actions by the user	160
Heatsink	161
Fans	162
Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R1...R4	163
Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R8	165
Replacing the main cooling fans, IP21 and IP55 (UL Type 1 and UL Type 12) frame R9	166
Replacing the auxiliary cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R9	167
Replacing the auxiliary cooling fan, IP55 (UL Type 12) frames R1...R2	168
Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R3	169
Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R4	170
Replacing the second auxiliary cooling fan, IP55 (UL Type 12) frames R8...R9	171
Capacitors	172
Reforming the capacitors	172
Control panel	173
Cleaning the control panel	173
Replacing the battery in the control panel	173
LEDs	174
Drive LEDs	174
Control panel LEDs	175

### 9. Technical data

Contents of this chapter	177
Ratings	178



IEC ratings at UN = 400 V	178
IEC ratings at UN = 480 V	179
UL (NEC) ratings at UN = 460 V	180
Definitions	180
Sizing	181
Derating	182
Ambient temperature derating, IP21 (UL Type 1)	184
Ambient temperature derating, IP55 (UL Type 12)	185
Altitude derating	188
Switching frequency derating	189
Fuses (IEC)	190
gG fuses	191
uR and aR fuses	192
Circuit breakers	193
Fuses (UL)	195
Dimensions, weights and free space requirements	196
Losses, cooling data and noise	199
Cooling air flow, heat dissipation and noise for stand-alone drives	199
Cooling air flow and heat dissipation for flange mounting (option +C135)	201
Terminal and lead-through data for the power cables	202
IEC	202
UL (NEC)	203
Terminal and lead-through data for the control cables	204
IEC	204
UL (NEC)	204
Electrical power network specification	205
Voltage (U1)	205
Motor connection data	205
Control connection data	208
Efficiency	214
Degree of protection	214
Ambient conditions	214
Materials	216
Applicable standards	217
CE marking	218
Compliance with the European Low Voltage Directive	218
Compliance with the European EMC Directive	218
Compliance with the European ROHS II Directive 2011/65/EU	218
Compliance with the European Machinery Directive 2006/42/EC 2nd Edition – June 2010	218
Compliance with the EN 61800-3:2004 + A1:2012	219
Definitions	219
Category C1	219
Category C2	220
Category C3	220
Category C4	221
UL marking	222
UL checklist	222
China RoHS marking	224
RCM marking	224
WEEE marking	224



EAC marking	224
Disclaimer	224
Cyber security disclaimer	224

## 10. Dimension drawings

Contents of this chapter	227
Frame R1, IP21 (UL Type 1)	228
Frame R1, IP55 (UL Type 12)	229
Frame R2, IP21 (UL Type 1)	230
Frame R2, IP55 (UL Type 12)	231
Frame R3, IP21 (UL Type 1)	232
Frame R3, IP55 (UL Type 12)	233
Frame R4, IP21 (UL Type 1)	234
Frame R4, IP55 (UL Type 12)	235
Frame R5, IP21 (UL Type 1)	236
Frame R5, IP55 (UL Type 12)	237
Frame R6, IP21 (UL Type 1)	238
Frame R6, IP55 (UL Type 12)	239
Frame R7, IP21 (UL Type 1)	240
Frame R7, IP55 (UL Type 12)	241
Frame R8, IP21 (UL Type 1)	242
Frame R8, IP55 (UL Type 12)	243
Frame R9, IP21 (UL Type 1)	244
Frame R9, IP55 (UL Type 12)	245



## 11. Safe torque off function

Contents of this chapter	247
Description	247
Compliance with the European Machinery Directive	248
Connection principle	249
Connection with internal +24 V DC power supply	249
Connection with internal +24 V DC power supply, single line	250
Connection with external +24 V DC power supply	251
Wiring examples	251
Activation switch	252
Cable types and lengths	252
Grounding of protective shields	253
Operation principle	253
Start-up including acceptance test	253
Competence	254
Acceptance test reports	254
Acceptance test procedure	255
Use	256
Maintenance	258
Competence	258
Fault tracing	258
Safety data	260
Abbreviations	262
Declaration of conformity	262



Certificate .....	262
-------------------	-----

## 12. Optional I/O extension modules

Contents of this chapter .....	263
CHDI-01 115/230 V digital input extension module .....	263
Safety instructions .....	263
Hardware description .....	263
Mechanical installation .....	264
Electrical installation .....	265
Start-up .....	267
Diagnostics .....	267
Technical data .....	268
CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O) .....	270
Safety instructions .....	270
Hardware description .....	270
Mechanical installation .....	271
Electrical installation .....	272
Start-up .....	274
Diagnostics .....	275
Technical data .....	276
CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface) .....	279
Safety instructions .....	279
Hardware description .....	279
Mechanical installation .....	280
Electrical installation .....	281
Start-up .....	283
Diagnostics .....	284
Technical data .....	285



## 13. Common mode and du/dt filters

Content of this chapter .....	287
Common mode filters .....	287
When is a common mode filter needed? .....	287
du/dt filters .....	287
When is a du/dt filter needed? .....	287
Common mode filter types .....	288
du/dt filter types .....	288
Description, installation and technical data of the FOCH filters .....	289
Description, installation and technical data of the NOCH filters .....	289

## Further information

Product and service inquiries .....	291
Product training .....	291
Providing feedback on ABB Drives manuals .....	291
Document library on the Internet .....	291



## 1

# Safety instructions

---




## Contents of this chapter

This chapter contains the safety instructions which you must obey when you install and operate the drive and do maintenance on the drive. If you ignore the safety instructions, injury, death or damage can occur.

## Use of warnings and notes in this manual

Warnings tell you about conditions which can cause injury or death, or damage to the equipment. They also tell you how to prevent the danger. Notes draw attention to a particular condition or fact, or give information on a subject.


The manual uses these warning symbols:

	<b>Electricity warning</b> tells about hazards from electricity which can cause injury or death, or damage to the equipment.
	<b>General warning</b> tells about conditions, other than those caused by electricity, which can cause injury or death, or damage to the equipment.
	<b>Electrostatic sensitive devices warning</b> tells you about the risk of electrostatic discharge which can cause damage to the equipment.




## General safety in installation, start-up and maintenance

These instructions are for all personnel that install the drive and do maintenance work on it.

 **WARNING!** Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

- Use safety shoes with a metal toe cap to avoid foot injury. Wear protective gloves and long sleeves. Some parts have sharp edges.
- Handle the drive carefully.
  - Frames R5...R9: Lift the drive with a lifting device. Use the lifting eyes of the drive.
  - Frames R5...R9: Do not tilt the drive. The drive is heavy and its center of gravity is high. An overturning drive can cause physical injury.

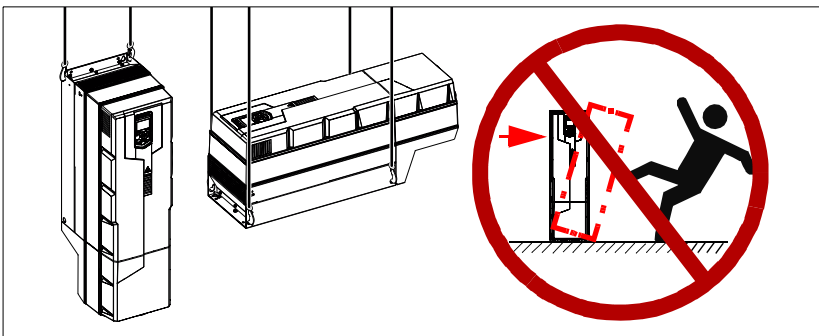

- Beware of hot surfaces. Some parts, such as heatsinks of power semiconductors, remain hot for a while after disconnection of the electrical supply.
- Keep the drive in its package or protect it otherwise from dust and burr from drilling and grinding until you install it.
- Protect also the installed drive against dust and burr. Electrically conductive debris inside the drive may cause damage or malfunction.
- Vacuum clean the area below the drive before the start-up to prevent the drive cooling fan from drawing the dust inside the drive.
- Do not cover the air inlet and outlet when the drive runs.
- Make sure that there is sufficient cooling. See sections [Checking the installation site](#) on page 48 and [Losses, cooling data and noise](#) on page 199 for more information.
- Before you connect voltage to the drive, make sure that the drive covers are on. Keep the covers on during the operation.
- Before you adjust the drive operation limits, make sure that the motor and all driven equipment can operate throughout the set operation limits.

- Before you activate the automatic fault reset or automatic restart functions of the drive control program, make sure that no dangerous situations can occur. These functions reset the drive automatically and continue operation after a fault or supply break. If these functions are activated, the installation must be clearly marked as defined in IEC/EN 61800-5-1, subclause 6.5.3, for example, "THIS MACHINE STARTS AUTOMATICALLY".
- The maximum number of drive power-ups is five in ten minutes. Too frequent power-ups can damage the charging circuit of the DC capacitors.
- If you have connected safety circuits to the drive (for example, emergency stop and Safe torque off), validate them at the start up. For the validation of the Safe torque off, see *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]). For the validation of other safety circuits, see the instructions provided with them.

**Note:**

- If you select an external source for start command and it is on, and the start command is level-triggered, the drive will start immediately after fault reset. See parameters 20.02 Ext1 start trigger type and 20.07 Ext2 start trigger type in *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]).
  - Frames R1...R5: Do not attempt to repair a malfunctioning drive; contact your local representative for replacement or repair by authorized persons.  
Frames R6...R9: Can be repaired by authorized persons.
- 



## Electrical safety in installation, start-up and maintenance

### ■ Precautions before electrical work

These warnings are for all personnel who do work on the drive, motor cable or motor.



**WARNING!** Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical installation or maintenance work. Go through these steps before you begin any installation or maintenance work.

1. Clearly identify the work location.
  2. Disconnect all possible voltage sources. Lock and tag.
    - Open the main disconnecter at the power supply of the drive.
    - Make sure that reconnection is not possible.
    - Disconnect any external power sources from the control circuits.
    - After you disconnect the drive, always wait for 5 minutes to let the intermediate circuit capacitors discharge before you continue.
  3. Protect any other energized parts in the work location against contact.
  4. Take special precautions when close to bare conductors.
  5. Measure that the installation is de-energized.
    - Use a multimeter with an impedance of at least 1 Mohm.
    - Make sure that the voltage between the drive input power terminals (L1, L2, L3) and the grounding terminal (PE) is close to 0 V.
    - Make sure that the drive DC voltage is close to 0 V.  
Frames R1...R3: Measure the voltage between the drive UDC+ terminal and grounding terminal (PE) with one multimeter. As there is no UDC- terminal, measure the voltage between the drive T1/U terminal and grounding terminal (PE) with another multimeter. Make sure that the voltage difference between the multimeters is close to 0 V.  
Frames R4...R9: Measure the voltage between the drive DC terminals (UDC+ and UDC-) and the grounding terminal (PE) and make sure that it is close to 0 V.
  6. Install temporary grounding as required by the local regulations.
  7. Ask for a permit to work from the person in control of the electrical installation work
- 



## Additional instructions and notes



**WARNING!** Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

- A drive with the internal EMC filter connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, check if you must disconnect the EMC filter. See sections
  - **IEC:** *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems* on page 98, and *Guidelines for installing the drive to a TT system* on page 99.
  - **North America:** *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems* on page 105, and *Guidelines for installing the drive to a TT system* on page 106.



**WARNING!** Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

**Note:** When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section *EMC compatibility and motor cable length* on page 207.

- A drive with the ground-to-phase varistor connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, check if you must disconnect the varistor. See sections
  - **IEC:** *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems* on page 98, and *Guidelines for installing the drive to a TT system* on page 99.
  - **North America:** *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems* on page 105, and *Guidelines for installing the drive to a TT system* on page 106.



**WARNING!** Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

- Use all ELV (extra low voltage) circuits connected to the drive only within a zone of equipotential bonding, that is, within a zone where all simultaneously accessible conductive parts are electrically connected to prevent hazardous voltages appearing between them. You can accomplish this by a proper factory grounding, that is, make sure that all simultaneously accessible conductive parts are grounded to the protective earth (PE) bus of the building.
- Do not do insulation or voltage withstand tests on the drive or drive modules.



**Note:**

- The motor cable terminals of the drive are at a dangerous voltage when the input power is on, regardless of whether the motor is running or not.
  - External wiring can supply dangerous voltages to the terminals of relay outputs (RO1, RO2 and RO3).
  - The Safe torque off function does not remove the voltage from the main and auxiliary circuits. The function is not effective against deliberate sabotage or misuse.
- 



**WARNING!** Use a grounding wrist band when you handle the printed circuit boards. Do not touch the boards unnecessarily. The boards contain components sensitive to electrostatic discharge.

---

■ **Grounding**

These instructions are for all personnel who are responsible for the electrical installation, including the grounding of the drive.

---



**WARNING!** Obey these instructions. If you ignore them, injury or death, or equipment malfunction can occur, and electromagnetic interference can increase.

- If you are not a qualified electrical professional, do not do grounding work.
  - Always ground the drive, the motor and adjoining equipment to the protective earth (PE) bus of the power supply. This is necessary for the personnel safety. Proper grounding also reduces electromagnetic emission and interference.
  - In a multiple-drive installation, connect each drive separately to the protective earth (PE) bus of the power supply.
  - Make sure that the conductivity of the protective earth (PE) conductors is sufficient. See section [Selecting the power cables](#) on page 80. Obey the local regulations.
  - Connect the power cable shields to the protective earth (PE) terminals of the drive.
  - Make a 360° grounding of the power and control cable shields at the cable entries to suppress electromagnetic disturbances.
-



**Note:**

- You can use power cable shields as grounding conductors only when their conductivity is sufficient.
  - Standards IEC/EN 61800-5-1 (section 4.3.5.5.2.) and UL 68100-5-1 require that as the normal touch current of the drive is higher than 3.5 mA AC or 10 mA DC, you must use a fixed protective earth (PE) connection. In addition,
    - install a second protective earth conductor of the same cross-sectional area as the original protective earthing conductor,or
    - install a protective earth conductor with a cross-section of at least 10 mm<sup>2</sup> Cu or 16 mm<sup>2</sup> Al,or
    - install a device which automatically disconnects the supply if the protective earth conductor breaks.
- 



## Additional instructions for permanent magnet motor drives

### ■ Safety in installation, start-up and maintenance

These are additional warnings concerning permanent magnet motor drives. The other safety instructions in this chapter are also valid.



**WARNING!** Obey these instructions. If you ignore them, injury or death and damage to the equipment can occur.

- Do not work on a drive when a rotating permanent magnet motor is connected to it. A rotating permanent magnet motor energizes the drive including its input power terminals.

Before installation, start-up and maintenance work on the drive:

- Stop the motor.
- Disconnect the motor from the drive with a safety switch or by other means.
- If you cannot disconnect the motor, make sure that the motor cannot rotate during work. Make sure that no other system can rotate the motor directly or through any mechanical connection.
- Measure that the installation is de-energized.
  - Use a multimeter with an impedance of at least 1 Mohm.
  - Make sure that the voltage between the drive output terminals (T1/U, T2/V, T3/W) and the grounding (PE) busbar is close to 0 V.
  - Make sure that the voltage between the drive input power terminals (L1, L2, L3) and the grounding (PE) busbar is close to 0 V.
  - Make sure that the voltage between the drive DC terminals (UDC+, UDC-) and the grounding (PE) terminal is close to 0 V.
- Install temporary grounding to the drive output terminals (T1/U, T2/V, T3/W). Connect the output terminals together as well as to the PE.

Start-up and operation:

- Make sure that the motor cannot be run into overspeed, e.g. driven by the load. Motor overspeed causes overvoltage that can damage or destroy the capacitors in the intermediate circuit of the drive.
-

## General safety in operation

These instructions are for all personnel that operate the drive.



**WARNING!** Obey these instructions. If you ignore them, injury or death, or damage to the equipment can occur.

- Do not control the motor with the disconnecter at the drive power supply; instead, use the control panel start and stop keys or commands through the I/O terminals of the drive.
  - Give a stop command to the drive before you reset a fault. If you have an external source for the start command and the start is on, the drive will start immediately after the fault reset, unless you configure the drive for pulse start. See the firmware manual.
  - Before you activate automatic fault reset functions of the drive control program, make sure that no dangerous situations can occur. These functions reset the drive automatically and continue operation after a fault.
- 







# Introduction to the manual

---

## Contents of this chapter

The chapter describes applicability, target audience and purpose of this manual. It describes the contents of this manual and refers to a list of related manuals for more information. The chapter also contains a flowchart of steps for checking the delivery, installing and commissioning the drive. The flowchart refers to chapters/sections in this manual.

## Applicability

The manual applies to the ACQ580-01 drives, including the new (2017) R1...R3 frames (see all applicable types in section [Ratings](#) on page [178](#)).

**Note:** The manual does not apply to R0...R3 frames with type codes ACQ580-01: 02A6-4, 03A3-4, 04A0-4, 05A6-4, 07A2-4, 09A-4, 12A6-4, 017A-4, 025A-4, 032A-4, 038A-4, 045A-4. For these types, see *ACQ580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual* (3AXD50000035866[English]).

## Target audience

The reader is expected to know the fundamentals of electricity, wiring, electrical components and electrical schematic symbols.

The manual is written for readers worldwide. Both SI and imperial units are shown. Special US instructions for installations in the United States are given.

## Purpose of the manual

This manual provides information needed for planning the installation, installing, and servicing the drive.

---

## Contents of this manual

The manual consists of the following chapters:

- [Safety instructions](#) (page 13) gives safety instructions you must obey when installing, commissioning, operating and servicing the drive.
  - [Introduction to the manual](#) (this chapter, page 23) describes applicability, target audience, purpose and contents of this manual. It also contains a quick installation and commissioning flowchart. At the end, it lists terms and abbreviations.
  - [Operation principle and hardware description](#) (page 31) describes the operation principle, layout, power connections and control interfaces, type designation label and type designation information in short.
  - [Mechanical installation](#) (page 47) describes how to check the installation site, unpack, check the delivery and install the drive mechanically.
  - [Planning the electrical installation](#) (page 73) describes how to plan the electrical installation of the drive, for example, how to check the compatibility of the motor and the drive and select cables, protections and cable routing.
  - [Electrical installation](#) (page 95) describes how to check the insulation of the assembly and the compatibility with IT (ungrounded) and corner-grounded TN systems. It then shows how to connect the power and control cables, install optional modules and connect a PC.
  - [Installation checklist](#) (page 157) contains a checklist for checking the mechanical and electrical installation of the drive before start-up.
  - [Maintenance and hardware diagnostics](#) (page 159) contains preventive maintenance instructions and LED indicator descriptions.
  - [Technical data](#) (page 177) contains technical specifications of the drive, eg ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE and other marks.
  - [Dimension drawings](#) (page 227) shows dimension drawings of the drive.
  - [Safe torque off function](#) (page 247) describes STO features, installation and technical data.
  - [Optional I/O extension modules](#) (page 263) describes CMOD-01, CMOD-02, and CHDI-01 extension modules, their installation, start-up, diagnostics and technical data.
  - [Common mode and du/dt filters](#) (page 287) describes selection of external filters for the drive.
  - [Further information](#) (inside of the back cover, page 291) tells how to make product and service inquiries, get information on product training, provide feedback on manuals and find documents on the Internet.
-

## Categorization by frame (size)

The ACQ580-01 is manufactured in frames (frame sizes) R1...R9. Some instructions and other information that only concern certain frames are marked with the symbol of the frame (R1...R9). The frame is marked on the type designation label attached to the drive, see section [Type designation label](#) on page 43.

## Related documents

You can find manuals and other product documents in PDF format on the Internet. See section [Document library on the Internet](#) on the inside of the back cover. For manuals not available in the Document library, contact your local ABB representative.

<b>Drive manuals and guides</b>	<b>Code (English)</b>
<i>ACQ580 pump control program firmware manual</i>	<a href="#">3AXD50000035867</a>
<i>ACQ580 pump control program firmware manual, Part 1</i>	<a href="#">3AXD50000266449</a>
<i>ACQ580 pump control program firmware manual, Part 2</i>	<a href="#">3AXD50000266463</a>
<i>Parameters</i>	
<i>ACQ580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual</i>	<a href="#">3AXD50000044862</a>
<i>ACQ580-01 quick installation and start-up guide for frames R1 to R5</i>	<a href="#">3AXD50000044864</a>
<i>ACQ580-01 quick installation and start-up guide for frames R6 to R9</i>	<a href="#">3AXD50000037301</a>
<i>ACX-AP-X assistant control panels user's manual</i>	<a href="#">3AUA0000085685</a>
<b>Option manuals and guides</b>	
<i>ACS580, ACH580 and ACQ580 drive module frames R3 and R5 to R9 for cabinet installation (options +P940 and +P944) supplement</i>	<a href="#">3AXD50000210305</a>
<i>CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual</i>	<a href="#">3AXD50000030058</a>
<i>CDPI-01 communication adapter module user's manual</i>	<a href="#">3AXD50000009929</a>
<i>DPMP-01 mounting platform for control panels</i>	<a href="#">3AUA0000100140</a>
<i>DPMP-02/03 mounting platform for control panels</i>	<a href="#">3AUA0000136205</a>
<i>FDNA-01 DeviceNet™ adapter module user's manual</i>	<a href="#">3AFE68573360</a>
<i>FENA-01/-11/-21 Ethernet adapter module user's manual</i>	<a href="#">3AUA0000093568</a>
<i>FPBA-01 PROFIBUS DP adapter module user's manual</i>	<a href="#">3AFE68573271</a>
<i>FSCA-01 RS-485 adapter module user's manual</i>	<a href="#">3AUA0000109533</a>
<i>Flange mounting kit installation supplement</i>	<a href="#">3AXD50000019100</a>
<i>Flange mounting kit quick installation guide for ACX580-01 frames R0 to R5</i>	<a href="#">3AXD50000036610</a>
<i>Flange mounting kit quick installation guide for ACS880-01 and ACX580-01 frames R6 to R9</i>	<a href="#">3AXD50000019099</a>
<i>Main switch and EMC C1 filter options (+F278, +F316, +E223) installation supplement for ACS580-01, ACH580-01 and ACH580-01 frames R1 to R5</i>	<a href="#">3AXD50000155132</a>
<i>UL Type 12 hood quick installation guide for ACS580-01, ACH580-01 and ACQ580-01 frames R1 to R9</i>	<a href="#">3AXD50000196067</a>


**Tool and maintenance manuals and guides**

---

<i>Drive composer PC tool user's manual</i>	<a href="#">3AUA0000094606</a>
<i>Converter module capacitor reforming instructions</i>	<a href="#">3BFE64059629</a>
<i>NETA-21 remote monitoring tool user's manual</i>	<a href="#">3AUA0000096939</a>
<i>NETA-21 remote monitoring tool installation and start-up guide</i>	<a href="#">3AUA0000096881</a>



## Quick installation and commissioning flowchart

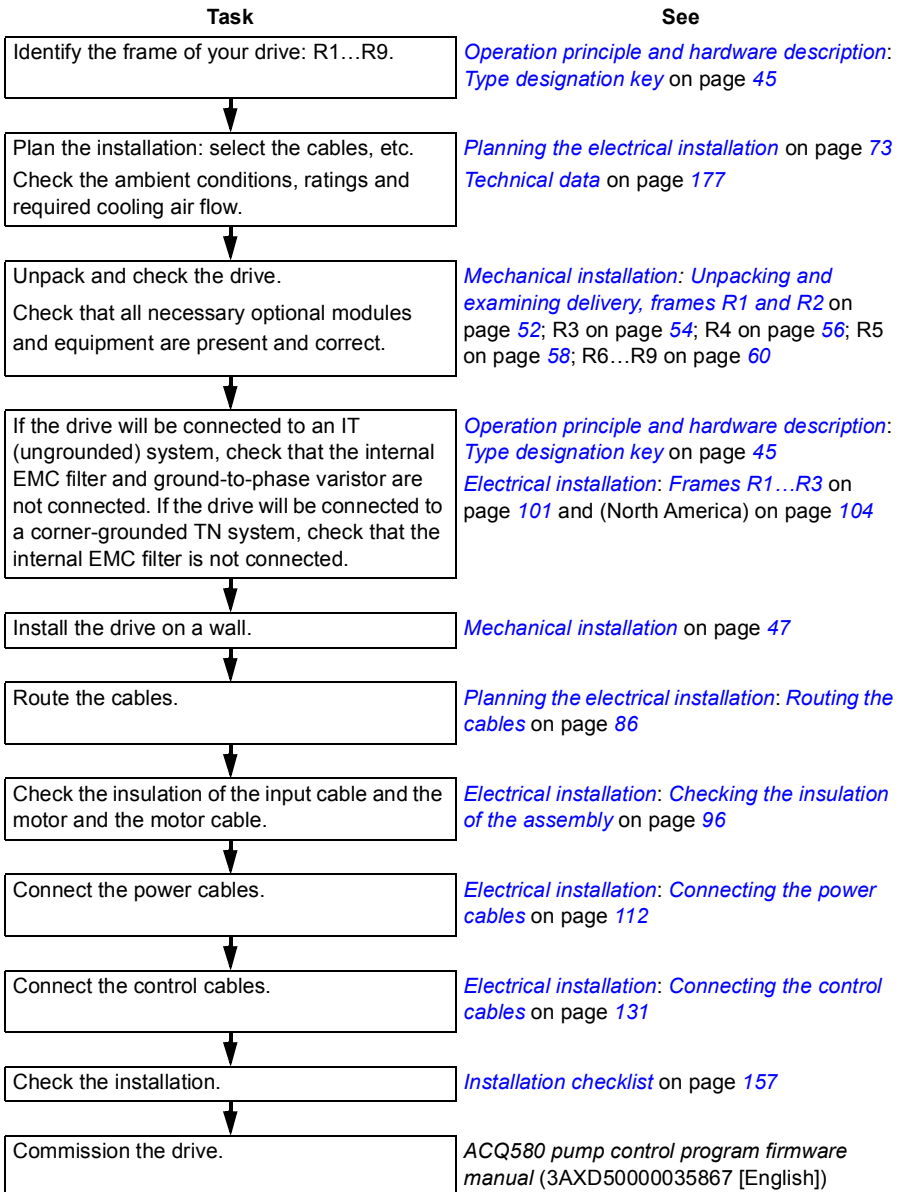

## Terms and abbreviations

Term/abbreviation	Explanation
ACH-AP-H	Assistant control panel with Hand-Off-Auto functionality for the ACQ580
ACH-AP-W	Assistant control panel with Hand-Off-Auto functionality and Bluetooth interface for the ACQ580
ACS-AP-x	Assistant control panel, advanced operator keypad for communication with the drive. The ACQ580 offers limited support of ACS-AP-I and ACS-AP-W. The Start, Stop, Loc/Rem buttons on these panels act as Hand, Auto and Off buttons, respectively, when used with the ACQ580. You can use parameters and Primary settings menus with ACS-AP-I and parameters and I/O with ACS-AP-W.
Control board	Circuit board in which the control program runs.
Capacitor bank	See <a href="#">DC link capacitors</a> .
CDPI-01	Communication adapter module
CCA-01	Configuration adapter
CHDI-01	Optional 115/230 V digital input extension module
CMOD-01	Optional multifunction extension module (external 24 V AC/DC and digital I/O extension)
CMOD-02	Optional multifunction extension module (external 24 V AC/DC and isolated PTC interface)
CPTC-02	Optional multifunction extension module (external 24 V and ATEX certified PTC interface)
DC link	DC circuit between rectifier and inverter
DC link capacitors	Energy storage which stabilizes the intermediate circuit DC voltage
DPMP-01	Mounting platform for ACH-AP control panel (flange mounting). CDP-01 communication adapter module is needed to connect the DMP0-01 to the drive. For up to 32 drives on a panel bus with a single panel on cabinet door, one DMP-02 with one CDPI-01 per each drive are used.
DPMP-02	Mounting platform for ACH-AP control panel (surface mounting). CDP-01 communication adapter module is needed to connect the DMP0-02 to the drive. For up to 32 drives on a panel bus with a single panel on cabinet door, one DMP-02 with one CDPI-01 per each drive are used.
DPMP-EXT	Door mounting kit for the panel. For one drive; contains both DPMP-02 and CDPI-01, which connects the DPMP-02 to the drive.
Drive	Frequency converter for controlling AC motors
EMC	Electromagnetic compatibility
EFB	Embedded fieldbus
FBA	Fieldbus adapter
FCAN-01	Optional CANopen adapter module
FDNA-01	Optional DeviceNet adapter module

Term/abbreviation	Explanation
FENA-11/-21	Optional Ethernet adapter module for EtherNet/IP, Modbus TCP and PROFINET IO protocols
FPBA-01	Optional PROFIBUS DP adapter module
Frame (size)	Refers to drive physical size, for example R1 and R2. The type designation label attached to the drive shows the frame of the drive, see section <a href="#">Type designation key</a> on page 45.
FSCA-01	Optional EIA-485 adapter module
I/O	Input/Output
IGBT	Insulated gate bipolar transistor
Intermediate circuit	See <a href="#">DC link</a> .
Inverter	Converts direct current and voltage to alternating current and voltage.
NETA-21	Remote monitoring tool
Network control	With fieldbus protocols based on the Common Industrial Protocol (CIP™), such as DeviceNet and Ethernet/IP, denotes the control of the drive using the Net Ctrl and Net Ref objects of the ODVA AC/DC Drive Profile. For more information, see <a href="http://www.odva.org">www.odva.org</a> , and the following manuals: <ul style="list-style-type: none"> <li>• <i>FDNA-01 DeviceNet adapter module user's manual</i> (3AFE68573360 [English]), and</li> <li>• <i>FENA-01/-11/-21 Ethernet adapter module user's manual</i> (3AUA0000093568 [English]).</li> </ul>
Parameter	User-adjustable operation instruction to the drive, or signal measured or calculated by the drive
PLC	Programmable logic controller
PROFIBUS, PROFIBUS DP, PROFINET IO	Registered trademarks of PI - PROFIBUS & PROFINET International
PTC	Positive temperature coefficient (PTC) refers to materials that experience an increase in electrical resistance when their temperature is raised.
R1, R2, ...	<a href="#">Frame (size)</a>
Rectifier	Converts alternating current and voltage to direct current and voltage.
SIL	Safety integrity level. See chapter <a href="#">Safe torque off function</a> on page 247.
STO	Safe torque off. See chapter <a href="#">Safe torque off function</a> on page 247.





# Operation principle and hardware description

---


## Contents of this chapter

This chapter briefly describes the operation principle, layout, type designation label and type designation information. It also shows a general diagram of power connections and control interfaces.

## Operation principle

The ACQ580-01 is a drive for controlling asynchronous AC induction motors, permanent magnet motors and synchronous reluctance motors (SynRM).

The figure below shows the simplified main circuit diagram of the drive.

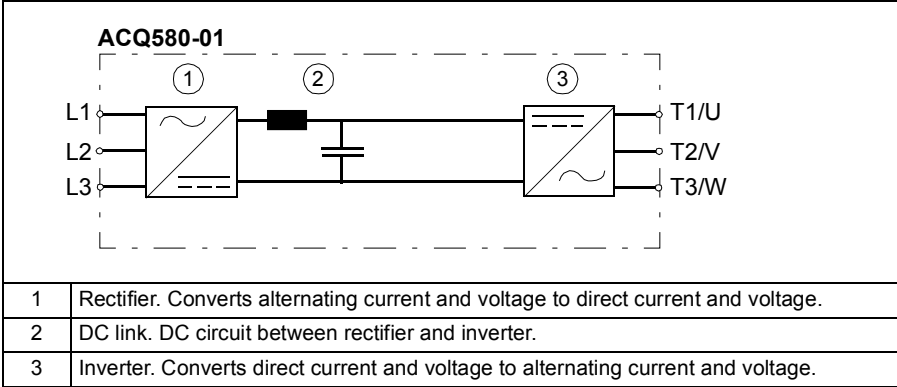


# Layout

## Frames R1...R2

The layout of a frame R1 drive is presented below. The main structure of frame R2 is similar to R1. IP55 / UL Type 12 frames are also slightly different from IP21 / UL Type 1 frames, for example, IP21 / UL Type 1 front cover has two parts while IP55 / UL Type 12 front cover only has one part.

### R1 IP21 / UL Type 1

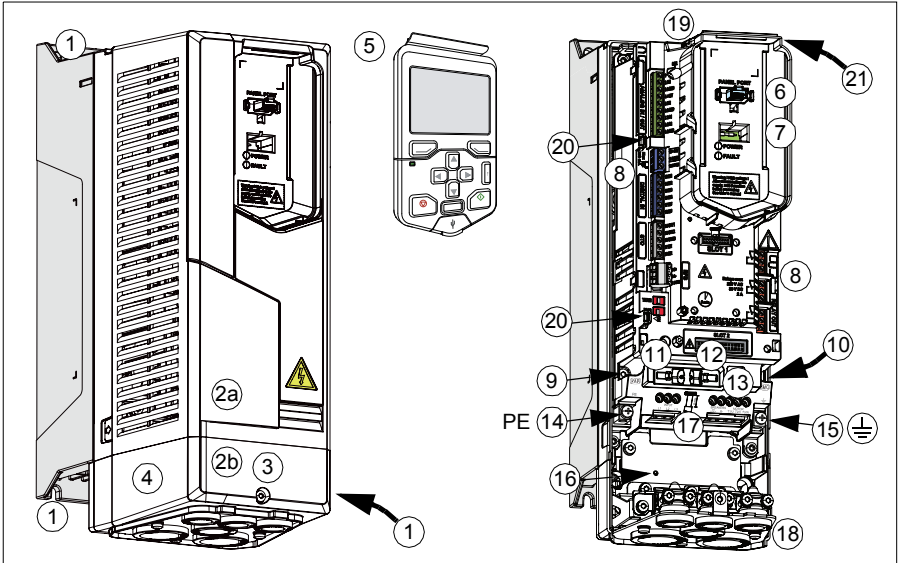


1	Mounting points (4 pieces)
2	Cover: upper part (2a), lower part (2b)
3	Cover screw
4	Cable/conduit box
5	Control panel
6	Control panel connection
7	Cold configuration connection for CCA-01
7	Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 174.
8	I/O connections. See section <a href="#">External control connection terminals, frames R1...R5</a> on page 40.
9	Varistor grounding screw (VAR). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.

10	EMC filter grounding screw (EMC). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.
11	Place for storing the removed VAR screw
12	Place for storing the removed EMC screw
13	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and brake connection (R-, R+)
14	PE connection (power line)
15	Grounding connection (motor)
16	Additional grounding connection
17	Stripping length (8 mm) checker
18	Cable entry
19	Main cooling fan
20	Cable tie mounts for I/O cables
21	Auxiliary cooling fan connector

This is an example of IP55 / UL Type 12 frames. They have one-piece front cover, which has a transparent window to leave the control panel visible. UL Type 12 frames have a hood, whose construction depends on the frame size.

**R1 IP55 / UL Type 12**

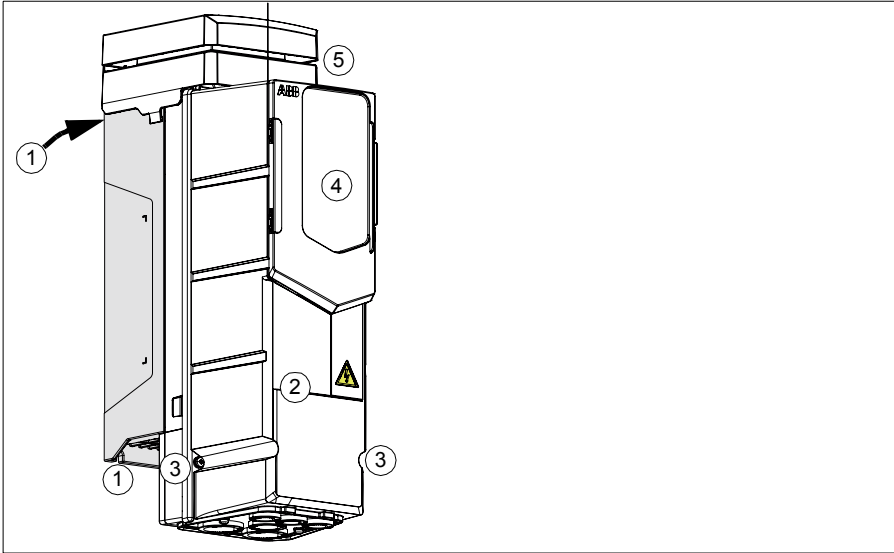


1	Mounting points (4 pieces), top points are under the hood, which is installed last.
2	Front cover
3	Cover screws (2 pieces)
4	Control panel behind the transparent window
5	Hood, UL Type 12 only. Hood types vary by the frame size, see page 197.



### Frame R3

#### R3 IP21 / UL Type 1

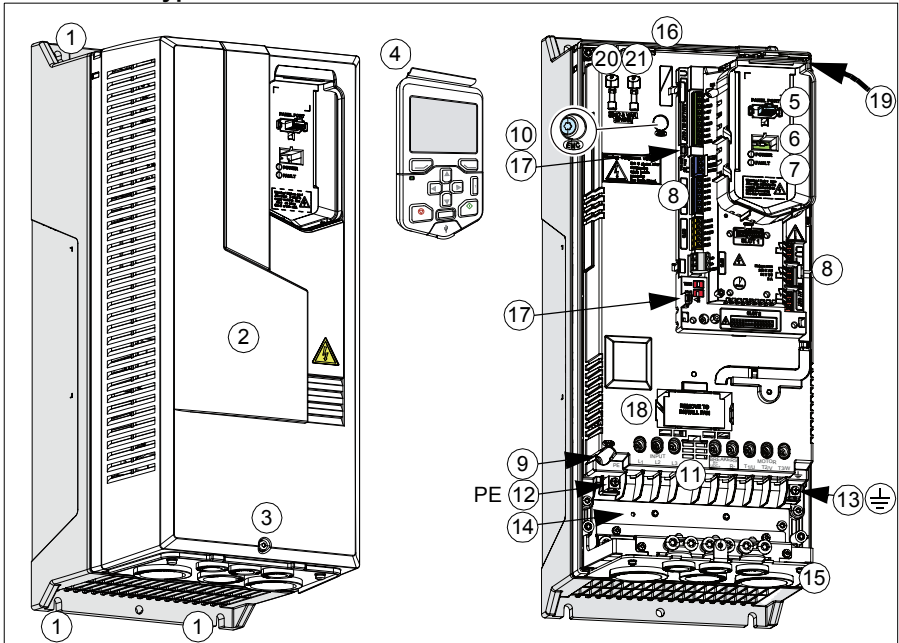


1	Mounting points (4 pieces)
2	Cover
3	Cover screw
4	Control panel
5	Control panel connection
6	Cold configuration connection for CCA-01
7	Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 174.
8	I/O connections. See section <a href="#">External control connection terminals, frames R1...R5</a> on page 40.
9	Varistor grounding screw (VAR). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.
10	EMC filter grounding screw (EMC). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.

11	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and brake connection (R-, R+)
12	PE connection (power line)
13	Grounding connection (motor)
14	Additional grounding connection
15	Cable entry
16	Main cooling fan
17	Cable tie mounts for I/O cables
18	Auxiliary cooling fan. For IP55/UL Type 12 drives only.
19	Auxiliary cooling fan connector
20	Place for storing the removed EMC screw
21	Place for storing the removed VAR screw

## Frame R4


## R4 IP21 / UL Type 1

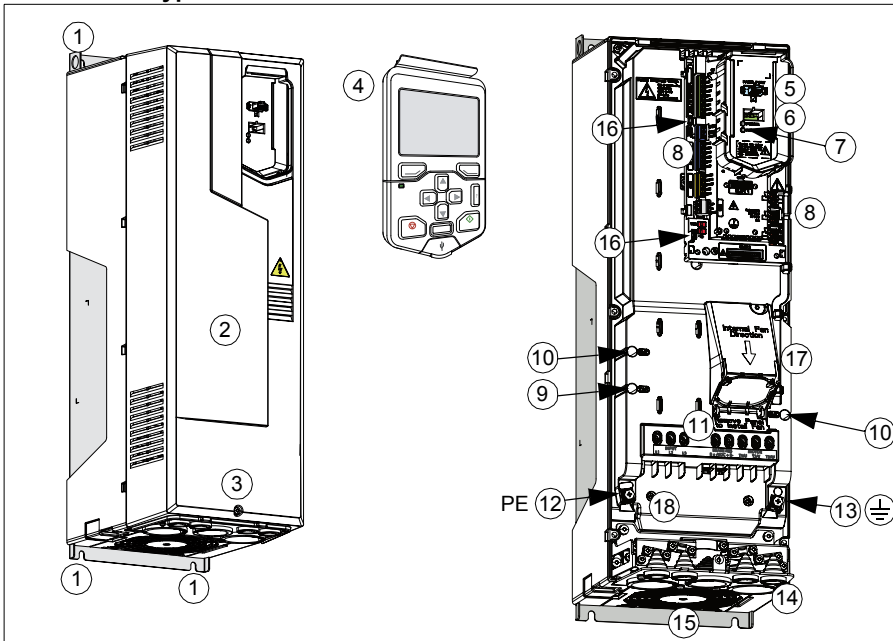

1	Mounting points (4 pieces)	10	Two EMC filter grounding screws (EMC). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.
2	Cover	11	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and DC connection (UDC+, UDC-)
3	Cover screw	12	PE connection (power line)
4	Control panel	13	Grounding connection (motor)
5	Control panel connection	14	Cable entry
6	Cold configuration connection for CCA-01	15	Main cooling fan
7	Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 174.	16	Cable tie mounts for I/O cables
8	I/O connections. See section <a href="#">External control connection terminals, frames R1...R5</a> on page 40.	17	Auxiliary cooling fan. For IP55/UL Type 12 drives only.
9	Varistor grounding screw (VAR). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.		

## Frame R5

### R5 IP21 / UL Type 1

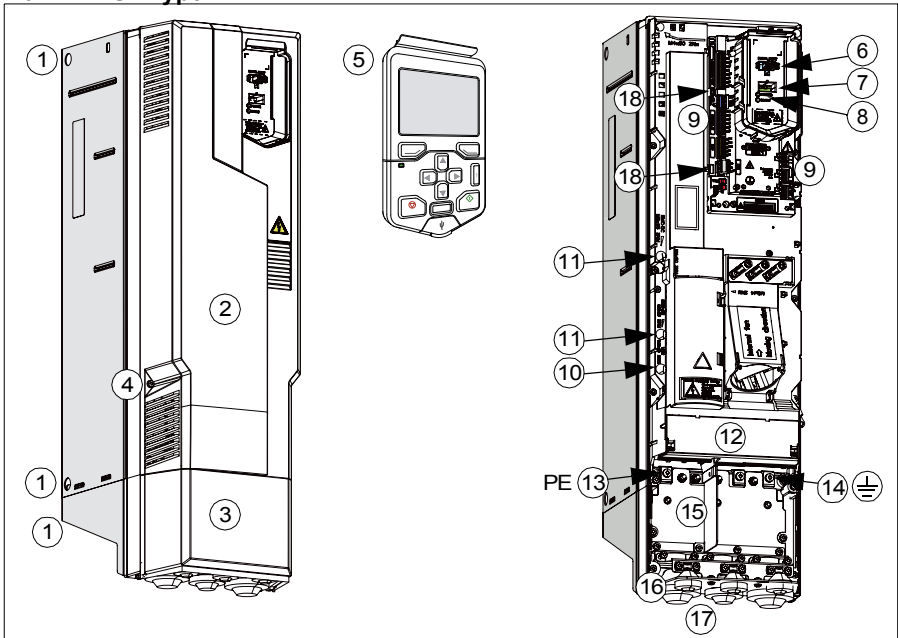


1	Mounting points (6 pieces: 2 at the top, 2 at the bottom of the main part of the frame, 2 at the top of the cable box)
2	Cover
3	Cable/conduit box
4	Cover screws (2 pieces)
5	Control panel
6	Control panel connection
7	Cold configuration connection for CCA-01
8	Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 174.
9	I/O connections. See section <a href="#">External control connection terminals, frames R1...R5</a> on page 40.
10	Varistor grounding screw (VAR). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.

11	Two EMC filter grounding screws (EMC). See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.
12	Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and DC connection (UDC+, UDC-) under the shroud
13	PE connection (power line)
14	Grounding connection (motor)
15	Cable box plate
16	Cable entry
17	Main cooling fan
18	Cable tie mounts for I/O cables

## Frames R6...R9

The layout of a frame R6 drive is presented below. The constructions of frames R6...R9 differ to some extent.

### R6 IP21 / UL Type 1

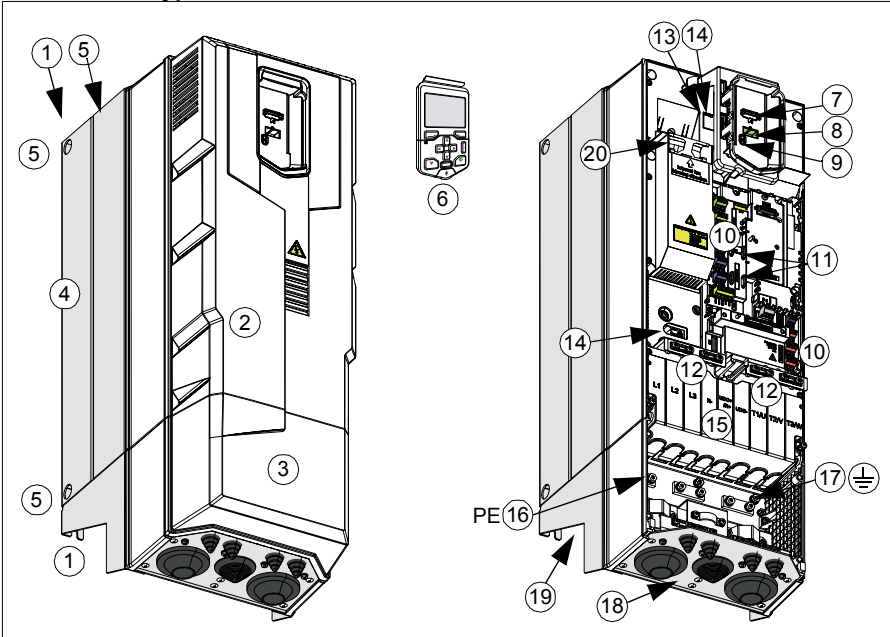


1	Mounting points (6 pieces: 2 at the top, 2 at the bottom of the main part of the frame, 2 at the top of the cable box)
2	Cover
3	Cable/conduit box
4	Heatsink
5	Lifting holes (6 pieces)
6	Control panel
7	Control panel connection
8	Cold configuration connection for CCA-01
9	Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 174.
10	I/O connections. See section <a href="#">External control connection terminals, frames R6...R9</a> on page 41.
11	Cable tie mounts for I/O cables
12	Clamps for I/O cable mechanical support

13	Varistor grounding screw (VAR), under the control panel platform
14	Two EMC filter grounding screws (EMC), one under the control panel platform and one at the left, above the shroud. See <a href="#">Frames R1...R3</a> on page 101 and (North America) on page 104.
15	Shroud. Under the shroud: Input power connection (L1, L2, L3), motor connection (T1/U, T2/V, T3/W) and DC connection (UDC+, UDC-).
16	PE connection (power line)
17	Grounding connection (motor), under the shroud (15).
18	Cable entry
19	Main cooling fan
20	Auxiliary cooling fan

## Overview of power and control connections


The logical diagram below shows the power connections and control interfaces of the drive.

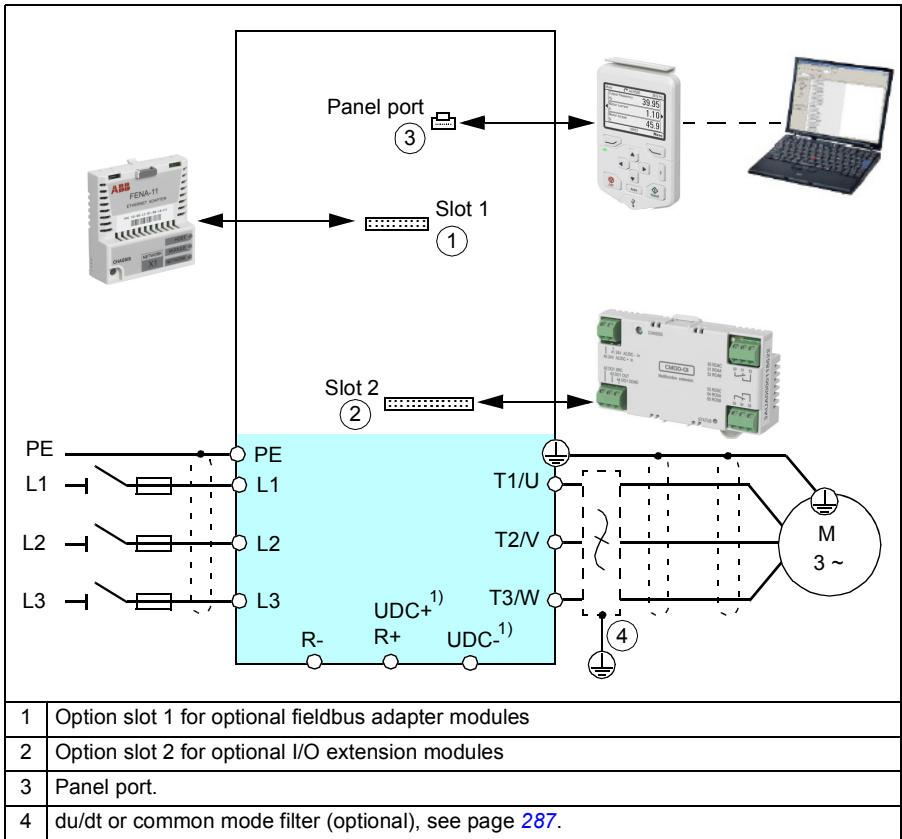

<sup>1)</sup> Not in all frame sizes.

## External control connection terminals, frames R1...R5


The layout of the external control connection terminals of the R1 frame is shown below. Layout of the external control connection terminals is identical in frames R1...R5 but the location of the control board with the terminals is different in frames R3...R5.

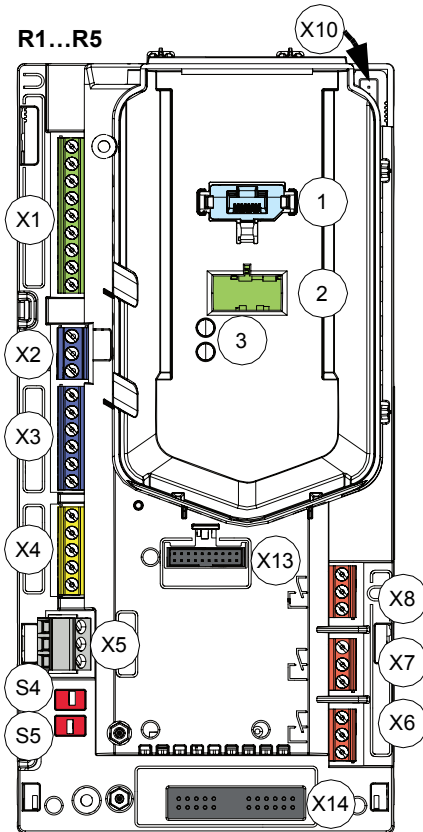

	Description
X1	Analog inputs and outputs
X2	Aux. voltage output
X3	Programmable digital inputs
X4	Safe torque off connection
X5	Embedded fieldbus
X6	Relay output 3
X7	Relay output 2
X8	Relay output 1
X10	Auxiliary fan connection (IP55)
X13	Option slot 1 (fieldbus adapter modules)
X14	Option slot 2 (I/O extension modules)
S4, S5	Termination switch (S4), bias resistor switch (S5), see section <a href="#">Switches</a> on page 135
1	Panel port (control panel connection)
2	Cold configuration connection. This connector is used with the CCA-01 configuration adapter.
3	Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 174.

External control connection terminals, frames R6...R9

The layout of the external control connection terminals of frames R6...R9 is shown below.

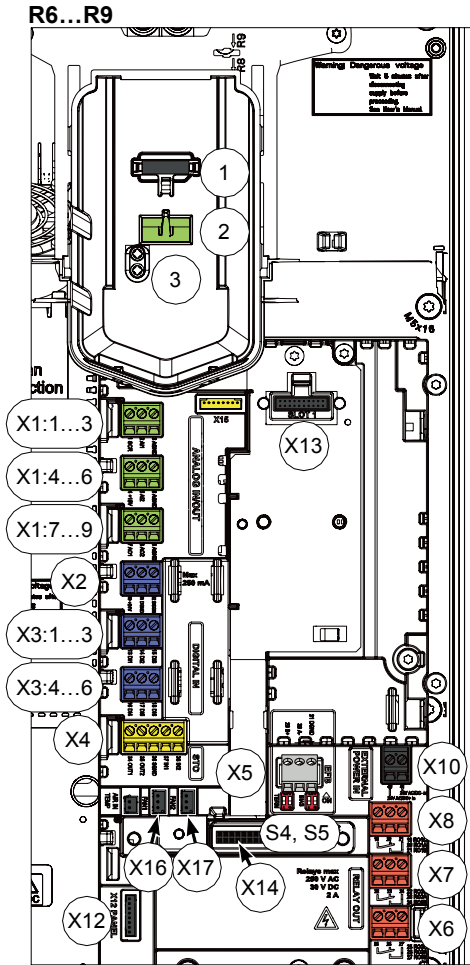


	Description
X1	Analog inputs and outputs
X2	Aux. voltage output
X3	Digital inputs
X4	Safe torque off connection
X5	Connection to embedded EIA-485 fieldbus adapter module
X6	Relay output 3
X7	Relay output 2
X8	Relay output 1
X10	External +24 V AC/DC input connection
X12	Panel connection
X13	Option slot 1 (fieldbus adapter modules)
X14	Option slot 2 (I/O extension modules)
X16	Auxiliary fan 1 connection
X17	Auxiliary fan 2 connection
S4, S5	Termination switch (S4), bias resistor switch (S5), see section <a href="#">Switches</a> on page 135
1	Panel port (control panel connection)
2	Cold configuration connection. This connector is used with the CCA-01 configuration adapter.
3	Power OK and Fault LEDs. See section <a href="#">LEDs</a> on page 174.




**WARNING!** Do not connect the +24 V AC cable to the control board ground when the control board is powered using an external 24 V AC supply.

## Control panel

To remove the control panel, press the retaining clip at the top (1a) and pull it forward from the top edge (1b).

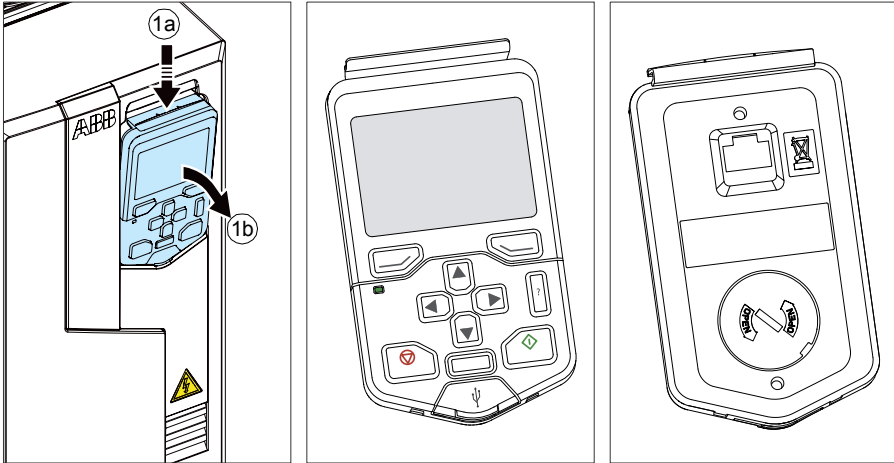

To reinstall the control panel, put the bottom of the container in position (1a), press the retaining clip at the top (1b) and push the control panel in at the top edge (1c).

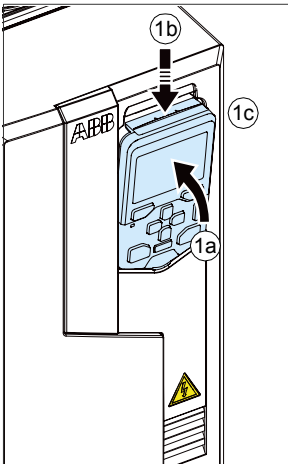

For the use of the control panel, see *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]) and *ACX-AP-X assistant control panels user's manual* (3AUA0000085685 [English]).




## Control panel door mounting kits

Door mounting kits for the control panel are available. For more information see *DPMP-01 mounting platform for control panels* (3AUA0000100140 [English]) or *DPMP-02/03 mounting platform for control panels* (3AUA0000136205 [English]).


## Type designation label



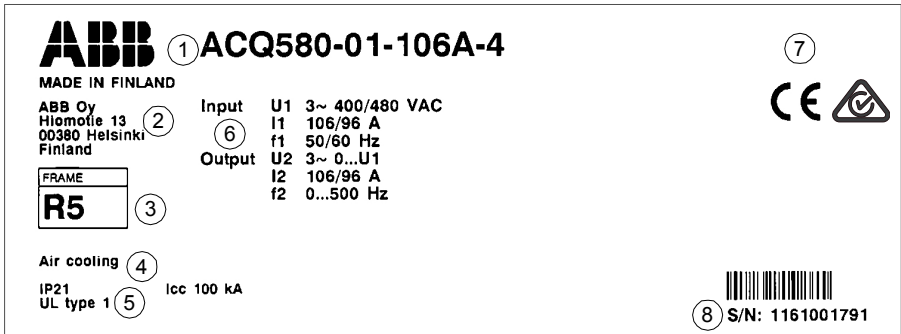

The type designation label includes IEC and UL (NEC) ratings, appropriate markings and the type designation and serial number, which allow identification of each drive. The type designation label is located on the left side of the drive, see section [Locations of the labels on the drive](#). An example label is shown below.

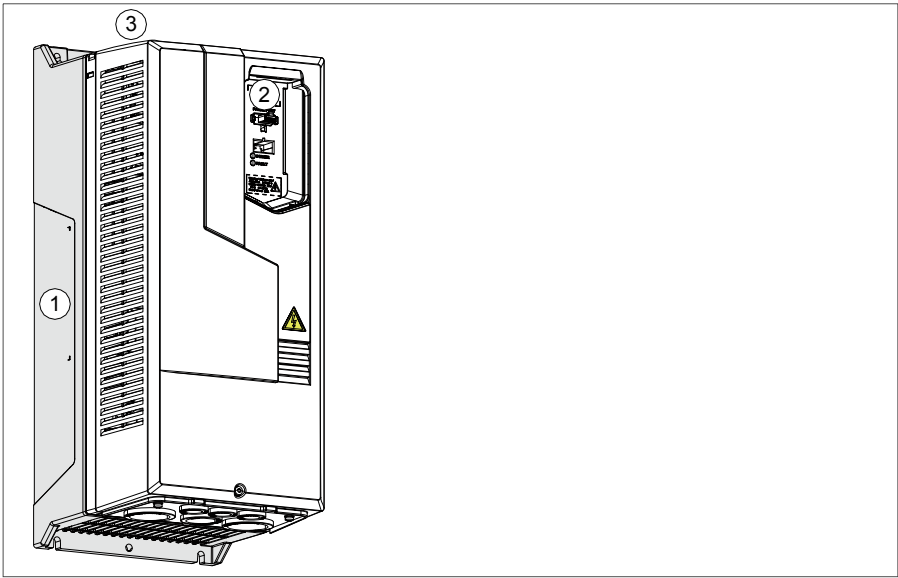

No.	Description
1	Type designation, see section <a href="#">Type designation key</a> on page 45.
2	Name and address of the manufacturer
3	Frame (size)
4	Type of the drive, for example, with Air cooling or Liquid cooling, and so on.
5	Degree of protection
6	Nominal ratings in the supply voltage range, see section <a href="#">Ratings</a> on page 178, section <a href="#">Electrical power network specification</a> on page 205 and section <a href="#">Motor connection data</a> on page 205. Input voltage range 3~ 380...480V AC. This is indicated in the type designation label as typical input voltage levels ( $U_1$ ) (3~ 400/480V AC). See page 205 for further information.
7	Valid markings
8	S/N: Serial number of format MYYWWXXXX, where M: Manufacturing plant YY: 16, 17, 18, ... for 2016, 2017, 2018, ... WW: 01, 02, 03, ... for week 1, week 2, week 3, ... XXXXX: Digits making the serial number unique


■ Locations of the labels on the drive



<p>1</p>	<p><b>ABB</b> ACQ580-01-106A-4          MADE IN FINLAND          ABB Oy          Hiemotie 13          00380 Helsinki          Finland</p> <table border="1"> <tr> <td>FRAME</td> </tr> <tr> <td><b>R5</b></td> </tr> </table> <p>Input U1 3~ 400/480 VAC          I1 106/96 A          f1 50/60 Hz          Output U2 3~ 0...U1          I2 106/96 A          f2 0...500 Hz</p> <p>Air cooling          IP21 Icc 100 kA          UL type 1</p> <p>  </p> <p>          S/N: 1161001791</p>	FRAME	<b>R5</b>
FRAME			
<b>R5</b>			
<p>2</p>	<p>ACQ580-01-106A-4          S/N: 1161001791          SW v1.70</p>		
<p>3</p>	<p>U1 3~ 400/480 VAC          I2 106/96 A          Pn 55 kW/75 hp</p> <p>ACQ580-01-106A-4            S/N: 1161001791</p> <p><b>Note:</b> Pn is not shown in UL (NEC) drive labels.</p>		

## Type designation key

 The type designation contains information on the specifications and configuration of the drive. You find the type designation on the type designation label attached to the drive. The first digits from the left express the basic configuration, for example, ACQ580-01-12A7-4. The optional selections are given after that, separated by plus signs, for example, +L501. The main selections are described below. Not all selections are available for all types.



	CODE	DESCRIPTION
	<b>Basic codes</b>	
①	ACQ580	Product series
	01	When no options are selected: Wall mounted, IP21 (UL Type 1), control panel with a USB port, choke, EMC C2 filter (internal EMC filter), safe torque off, coated boards, cable lead through entry from the bottom, cable box or the conduit plate with cable entries, quick installation and start-up guide (multilingual).
②	<b>Size</b>	
	xxxx	Refer to the rating table, page <a href="#">178</a>
③	<b>Voltage rating</b>	
	4	400/480 V (380...480 V). See page <a href="#">205</a> for further information.
④	<b>Option codes (plus codes)</b>	
	<b>Control panel and panel options</b>	
	J400	ACH-AP-H Hand-Off-Auto control panel (as standard)
	J429	ACH-AP-W Hand-Off-Auto control panel with a Bluetooth interface
	J424	CDUM-01 Blank control panel cover (no control panel)
	<b>I/O (one slot available for I/O options)</b>	
	L501	CMOD-01 External 24 V AC/DC and digital I/O extension (2×RO and 1×DO)
	L523	CMOD-02 External 24 V AC/DC and isolated PTC interface
	L512	CHDI-01 115/230 V Digital input extension (6×DI and 2×RO)
	L537	CPTC-02 ATEX certified PTC interface and external 24 V. Requires option Q971.
	<b>Safety</b>	
	Q971	ATEX certified safe disconnection function, EX II (2) GD. Available only with option L357.

CODE	DESCRIPTION
<b>Fieldbus adapters</b>	
K452	FLON-01 LONWORKS®
K454	FPBA-01 PROFIBUS DP
K457	FCAN-01 CANopen
K451	FDNA-01 DeviceNet™
K473	FENA-11 Ethernet (EtherNet/IP™, Modbus/TCP, PROFINET)
K458	FSCA-01 Modbus/RTU
K475	FENA-21 2-port Ethernet (EtherNet/IP™, Modbus/TCP, PROFINET)
<b>Embedded fieldbus</b>	
	Embedded fieldbus, EIA-485 as standard
<b>Construction</b>	
B056	IP55 (UL type 12). Factory option, retro-fit not possible.
C135	Flange mounting kit
E223	EMC filter, category C1. Requires option B056.
F278	Main switch. Requires option B056.
F316	Main switch and EMC filter, category C1. Requires option B056.
H358	Cable conduit plate, blank.
<b>Full set of printed manuals in selected language. Note:</b> The delivered manual set may include manuals in English if the translation is not available.	
R700	English
R701	German
R702	Italian
R705	Swedish
R707	French
R708	Spanish
R711	Russian

3AXD10000468818

## 4

# Mechanical installation


---


## Contents of this chapter

This chapter tells how to check the installation site, unpack, check the delivery and install the drive mechanically.

## Safety

---


 **WARNING!** Frames R5...R9: Lift the drive with a lifting device. Use the lifting eyes of the drive. Do not tilt the drive. **The drive is heavy and its center of gravity is high. An overturning drive can cause physical injury.**

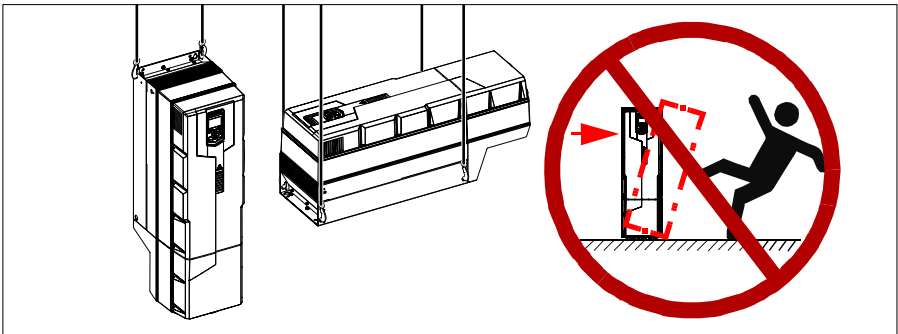

## Checking the installation site

The drive must be installed on the wall. There are three alternative ways to install it:

- Vertically alone. Do not install the drive upside down.

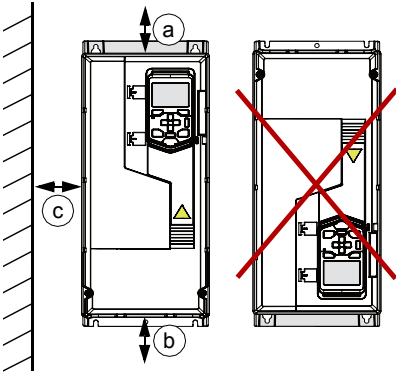

Frame size	Vertical installation - Free space					
	Above (a) <sup>1)</sup>		Below (b) <sup>2)</sup>		Beside (c) <sup>3)</sup>	
	mm	in	mm	in	mm	in
R1	200	7.87	150	5.91	150	5.91
R2	200	7.87	150	5.91	150	5.91
R3	200	7.87	200	7.87	150	5.91
R4	100	3.94	200	7.87	150	5.91
R5	100	3.94	200	7.87	150	5.91
R6	155	6.10	300	11.81	150	5.91
R7	155	6.10	300	11.81	150	5.91
R8	155	6.10	300	11.81	150	5.91
R9	200	7.87	300	11.81	150	5.91

3AXD0000586715.xls K

- 1) Free space above is measured from the frame, not from the hood used in UL Type 12 frames.

**Note:** The height of the hood for frames R4 and R9 exceeds the requirement of free space above for these frames.


Frame size	R4	R9
Hood height (in)	2.83	9.06
Hood height (mm)	72	230

- 2) Free space below is always measured from the drive frame, not from the cable box.

- 3) Free space between the drive and other objects, e.g. wall.



• Vertically side by side

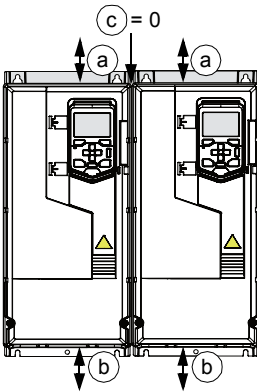

Frame size	Vertical installation side by side - Free space					
	Above (a) <sup>1)</sup>		Below (b) <sup>2)</sup>		Between (c)	
	mm	in	mm	in	mm	in
R1	200	7.87	200	7.87	0	0
R2	200	7.87	200	7.87	0	0
R3	200	7.87	200	7.87	0	0
R4	200	7.87	200	7.87	0	0
R5	200	7.87	200	7.87	0	0
R6	200	7.87	300	11.81	0	0
R7	200	7.87	300	11.81	0	0
R8	200	7.87	300	11.81	0	0
R9	200	7.87	300	11.81	0	0

3AXD00000586715.xls K

1) Free space above is measured from the frame, not from the hood used in UL Type 12 frames.

**Note:** The height of the hood for frames R4 and R9 exceeds the requirement of free space above for these frames.

Frame size	R4	R9
Hood height (in)	2.83	9.06
Hood height (mm)	72	230

2) Free space below is always measured from the drive frame, not from the cable box.




- Horizontally alone, IP20 only

**Note 1:** You can install IP21 / UL Type 1 drives horizontally but the installation meets IP20 requirements only.

**Note 2:** In the horizontal mounting, the drive is not protected from dripping water.

**Note 3:** The vibration specification in section [Ambient conditions](#) on page 214 may not be fulfilled.

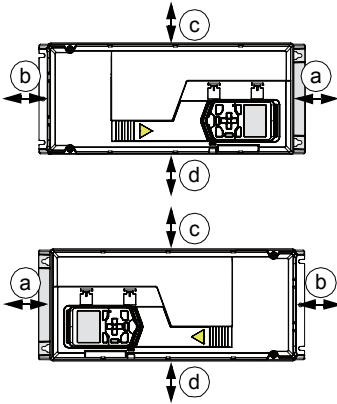

Frame size	Horizontal installation - Free space			
	Above (a)		Below (b) <sup>1)</sup>	
	mm	in	mm	in
R1	200	7.87	150	5.91
R2	200	7.87	150	5.91
R3	200	7.87	200	7.87
R4	100	3.94	200	7.87
R5	100	3.94	200	7.87
Frame size	Side up (c)		Side down (d)	
	mm	in	mm	in
	R1	150	5.91	150
R2	150	5.91	150	5.91
R3	150	5.91	150	5.91
R4	150	5.91	150	5.91
R5	150	5.91	150	5.91

3AXD00000586715.xls K

<sup>1)</sup> Free space below is always measured from the drive frame, not from the cable box.



Check the installation site according to the requirements below:

- The installation site is sufficiently ventilated or cooled to remove the heat away from the drive. See section [Losses, cooling data and noise](#) on page 199.
- The operation conditions of the drive meet the specifications given in section [Ambient conditions](#) on page 214.
- The wall is as close to vertical as possible, of non-flammable material and strong enough to carry the weight of the drive, see section [Dimensions, weights and free space requirements](#) on page 196.
- The floor/material below the installation is non-flammable.
- There is enough free space above and below the drive to enable cooling air flow, service and maintenance, See the required free space tables for each of the different mounting alignments on page 48 (or page 196).



## Required tools

To install the drive mechanically, you need the following tools:

- drill with suitable bits
- screwdriver and/or wrench with a set of suitable bits (as appropriate for the installation hardware used)
- tape measure, if you will not be using the provided mounting template.


## Moving the drive

Frames R5...R9: Move the transport package by pallet truck to the installation site.



## Unpacking and examining delivery, frames R1 and R2

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 43.

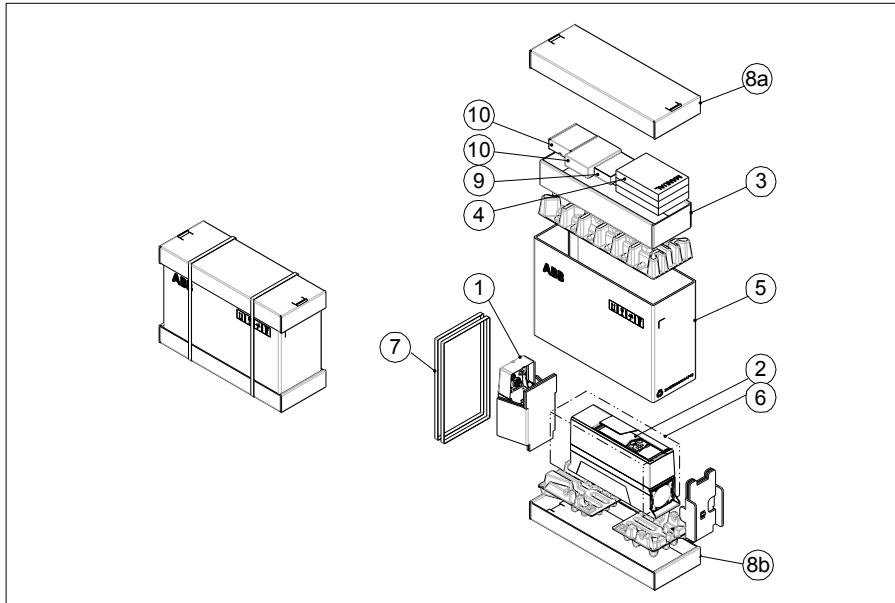


1	Cable box package. <b>Note:</b> The cable box is mounted to the IP55 drive module frame at the factory.	6	Plastic bag
2	Drive	7	Straps
3	Option tray	8	Tray
4	In the option tray <ul style="list-style-type: none"> <li>• Multilingual quick installation and start-up guide</li> <li>• Hardware and firmware manuals (if ordered with a plus code)</li> <li>• Multilingual residual voltage warning stickers</li> </ul>	9	Control panel selected in the order (in a separate package) in the option box. US: Control panel factory installed.
5	Cardboard box. Mounting template in the cardboard box.	10	Possible options in separate packages, if they have been ordered with a plus code, such as for example +K457 (FCAN-01 CANopen adapter module) in the option box. US: Options may be ordered as factory installed.
		<b>Note:</b> Hood included with option +B056 (IP55/UL Type 12) in North America	

To unpack:

- Cut the straps (7).
- Remove the upper tray (8a) and option tray (3).
- Remove the cardboard box (5).
- Remove the plastic bag (6).
- Lift the drive (2).


### ■ Frames R1 and R2 cable box (IP21, UL Type 1)

This illustration shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive module frame.

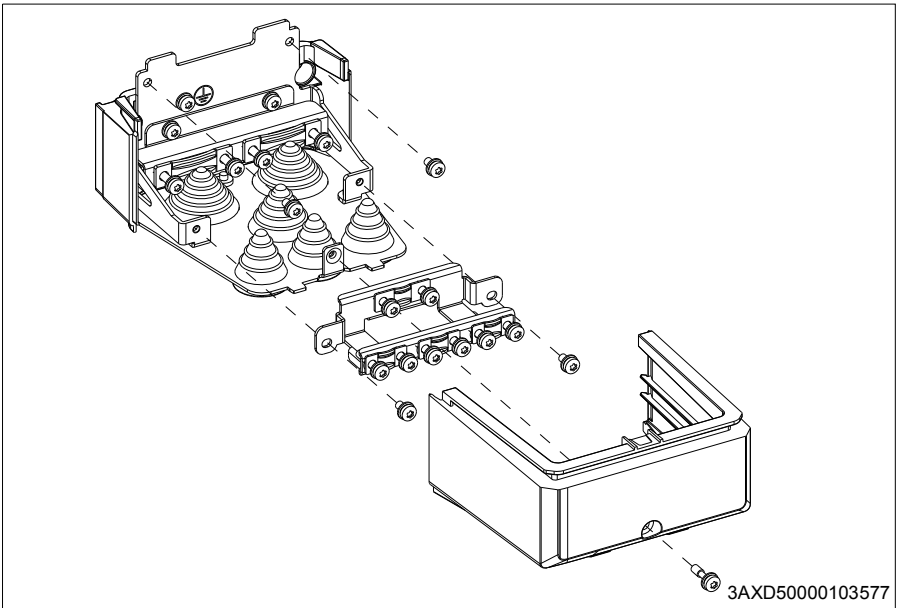

## Unpacking and examining delivery, frame R3

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 43.

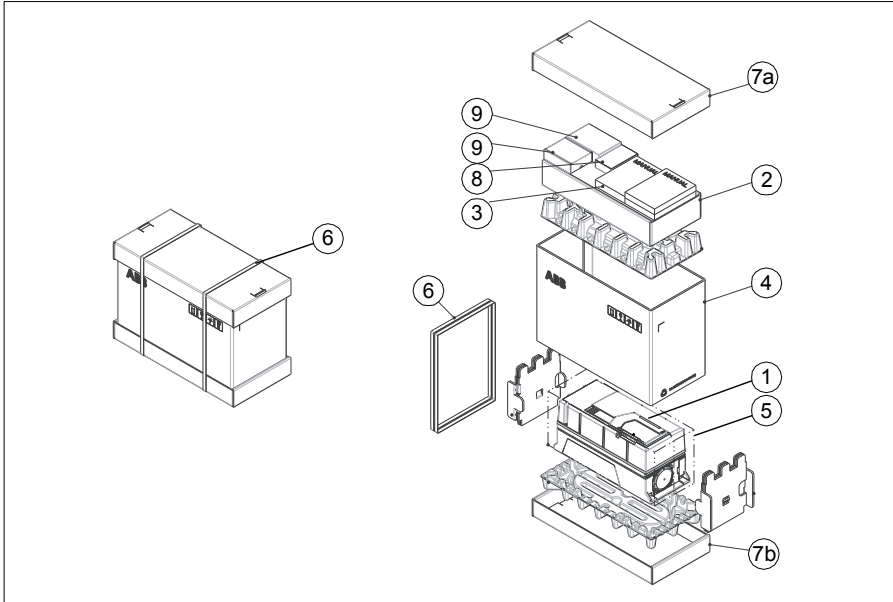

1	Drive
2	Option tray
3	In the option tray <ul style="list-style-type: none"> <li>• Multilingual quick installation and start-up guide</li> <li>• Hardware and firmware manuals (if ordered with a plus code)</li> <li>• Multilingual residual voltage warning stickers</li> <li>• Mounting template</li> </ul>
4	Cardboard box.

5	Plastic bag
6	Straps
7	Tray
8	Control panel selected in the order (in a separate package) in the option box. US: Control panel factory installed.
9	Possible options in separate packages, if they have been ordered with a plus code, such as for example +K457 (FCAN-01 CANopen adapter module) in the option box. US: Options may be ordered as factory installed.

**Note:** Hood included with option +B056 (IP55/UL Type 12) in North America


To unpack:

- Cut the straps (6).
- Remove the upper tray (7a) and option tray (2).
- Remove the cardboard box (4).
- Remove the plastic bag (5).
- Lift the drive (2).



## Unpacking and examining delivery, frame R4

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 43.

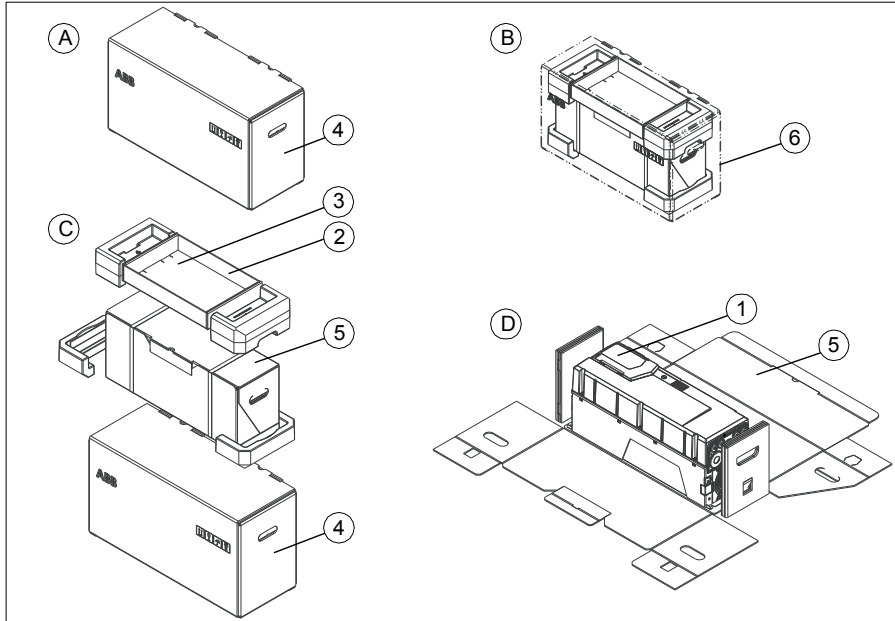

1	Drive
2	Option tray
3	In the option tray <ul style="list-style-type: none"> <li>• Multilingual quick installation and start-up guide</li> <li>• Hardware and firmware manuals (if ordered with a plus code)</li> <li>• Multilingual residual voltage warning stickers</li> <li>• Control panel selected in the order (in a separate package) in the option box. US: Control panel factory installed.</li> </ul>

	<ul style="list-style-type: none"> <li>• Possible options in separate packages, if they have been ordered with a plus code, such as for example +K457 (FCAN-01 CANopen adapter module) in the option box. US: Options may be ordered as factory installed.</li> </ul>
4	Cardboard box
5	Inner box with edge boards and cushions. Mounting template in the inner box.
6	Plastic bag
<b>Note:</b> Hood included with option +B056 (IP55/UL Type 12) in North America	


To unpack:

- Cut the straps.
- Open box (4) and remove top cushions and option tray (2).
- Lift out the inner box (5).
- Open the inner box (5), lift the drive (1) and remove plastic bag (7).



## Unpacking and examining delivery, frame R5

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 43.

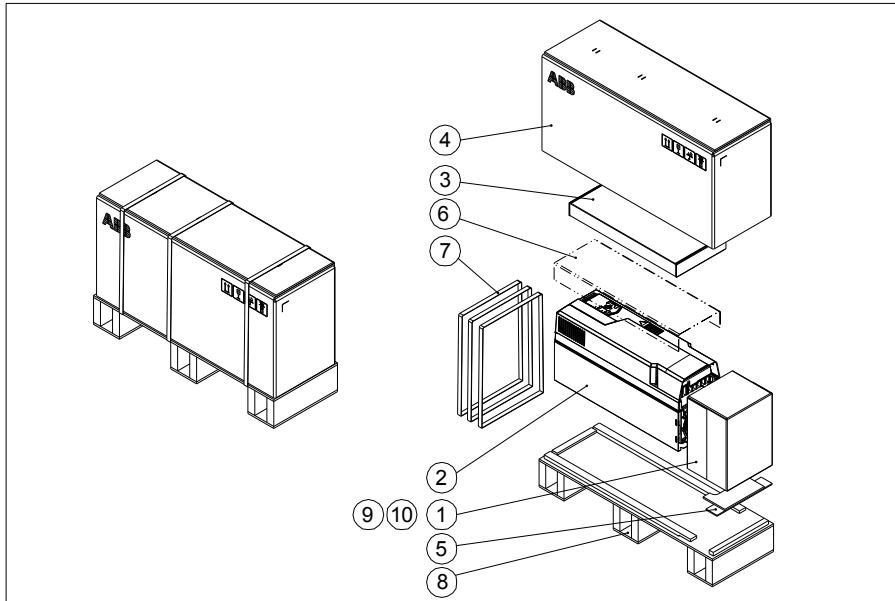

1	Cable box package. <b>Note:</b> The cable box is mounted to the IP55 drive module frame at the factory.	5	Stopper
2	Drive	6	Cover protecting film
3	In the option box <ul style="list-style-type: none"> <li>• Multilingual quick installation and start-up guide</li> <li>• Hardware and firmware manuals (if ordered with a plus code)</li> <li>• Multilingual residual voltage warning stickers</li> </ul>	7	Straps
4	Cardboard box. Mounting template in the cardboard box.	8	Pallet
		9	Control panel selected in the order (in a separate package) in the option box. US: Control panel factory installed.
		10	Possible options in separate packages, if they have been ordered with a plus code, such as for example +K457 (FCAN-01 CANopen adapter module) in the option box. US: Options may be ordered as factory installed.
		<b>Note:</b> Hood included with option +B056 (IP55/UL Type 12) in North America	




To unpack:

- Cut the straps (7).
- Remove the cardboard box (4) and option box (3).
- Remove the cover protecting film (6).
- Lift the drive (2).

### ■ Frame R5 cable box (IP21, UL Type 1)


This illustration shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive module frame.

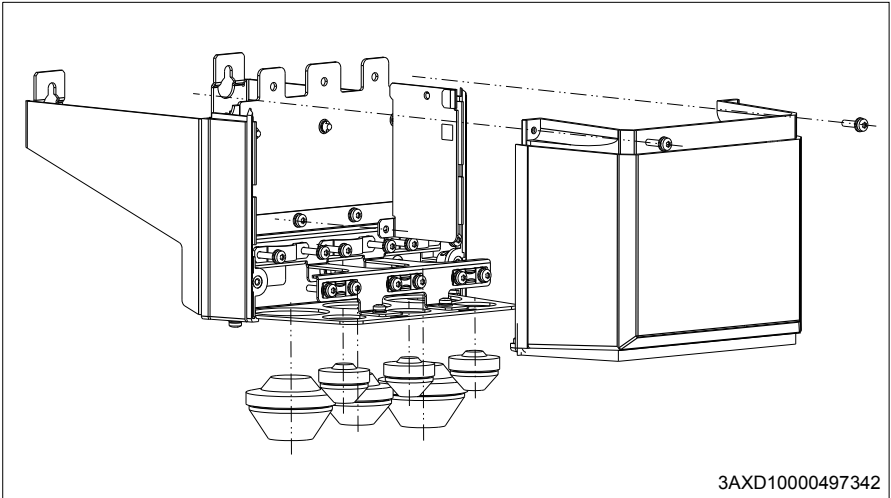

3AXD10000497342

## Unpacking and examining delivery, frames R6...R9

The figure below shows the layout of the transport package. Examine that all items are present and there are no signs of damage. Read the data on the type designation label of the drive to make sure that the drive is of the correct type. See section [Type designation label](#) on page 43.

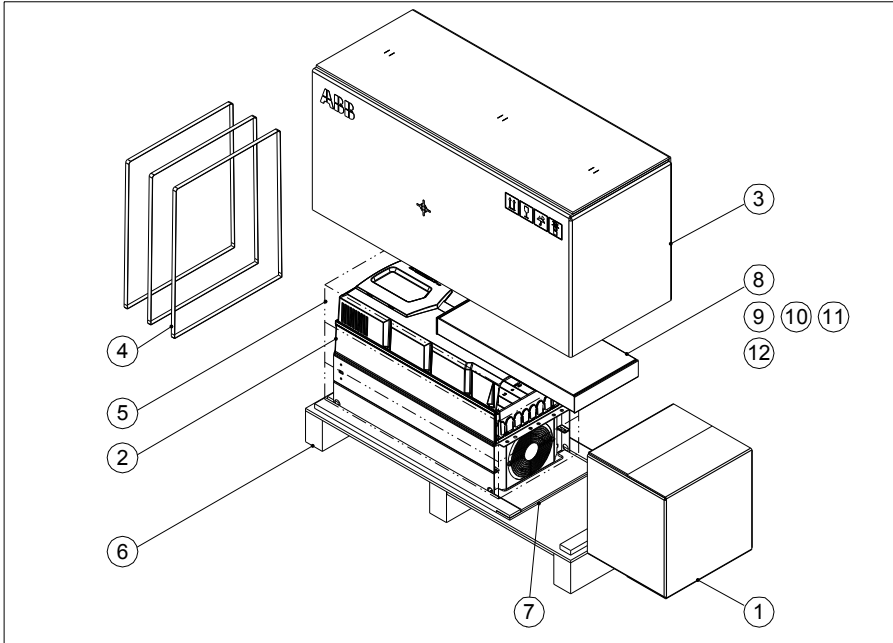

1	Cable box. Power and control cable grounding shelves in a plastic bag, assembly drawing. <b>Note:</b> The cable box is mounted to the IP55 drive module frame at the factory.
2	Drive with factory installed options.
3	Cardboard box
4	Straps
5	VCI bag for protecting against corrosion
6	Pallet
7	Stopper
8	Option tray
9	In the option tray <ul style="list-style-type: none"> <li>Multilingual quick installation and start-up guide</li> </ul>


	<ul style="list-style-type: none"> <li>Hardware and firmware manuals (if ordered with a plus code)</li> <li>Multilingual residual voltage warning stickers</li> </ul>
10	Control panel selected in the order (in a separate package) in the option tray. US: Control panel factory installed.
11	Possible options in separate packages, if they have been ordered with a plus code, such as for example +K457 (FCAN-01 CANopen adapter module) in the option tray. US: Options may be ordered as factory installed.
12	Mounting template on top of the option tray
<b>Note:</b> Hood included with option +B056 (IP55/UL Type 12) in North America	

To unpack:

- Cut the straps (4).
- Remove the cardboard box (3) and option tray (8).
- Remove the VCI bag (5).
- Attach lifting hooks to the lifting eyes of the drive (see the figure on page 47). Lift the drive with a hoist.


### ■ Frame R6 cable box (IP21, UL Type 1)

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive frame.

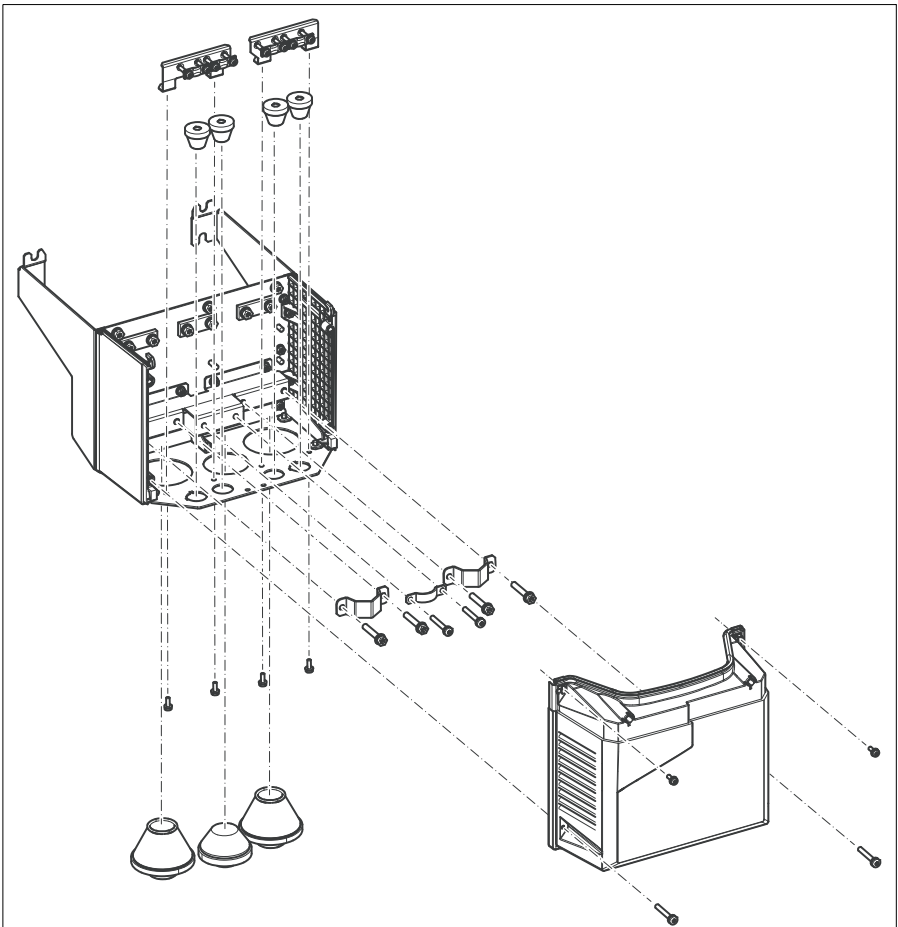


### ■ Frame R7 cable box (IP21, UL Type 1)

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install cable box to the drive frame.

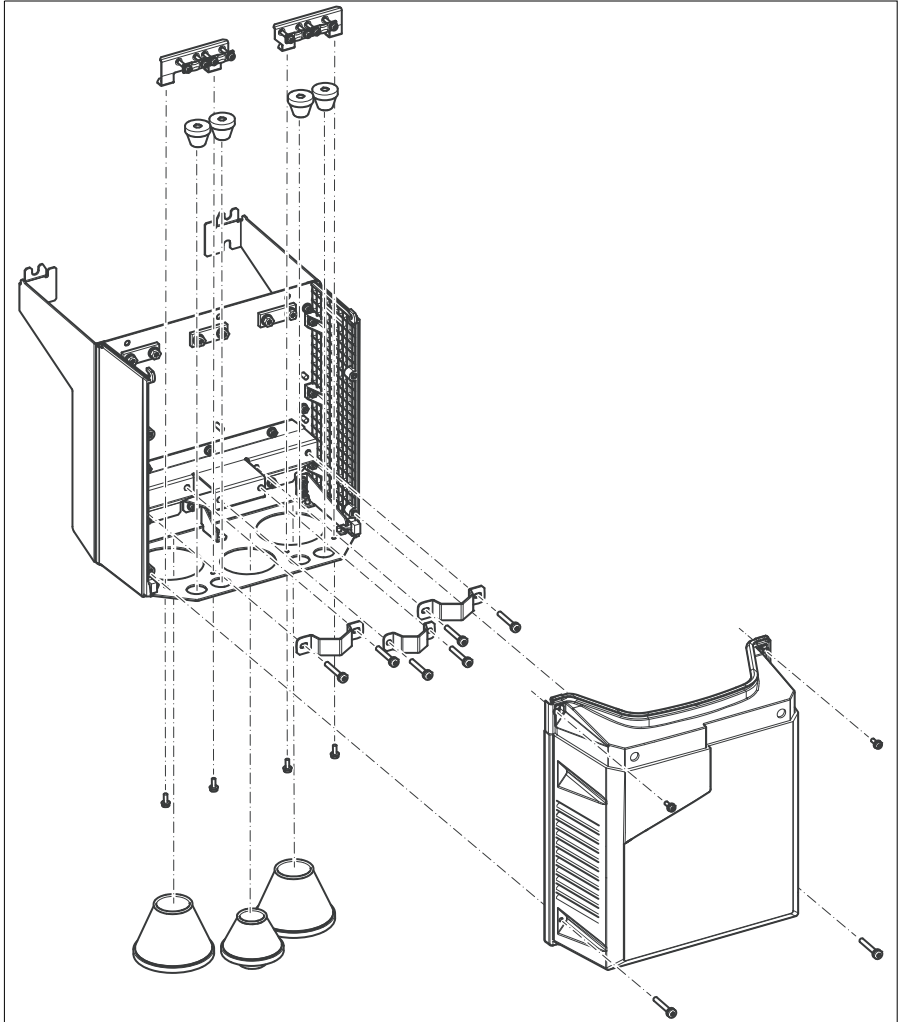


■ **Frame R8 cable box (IP21, UL Type 1)**

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive frame.

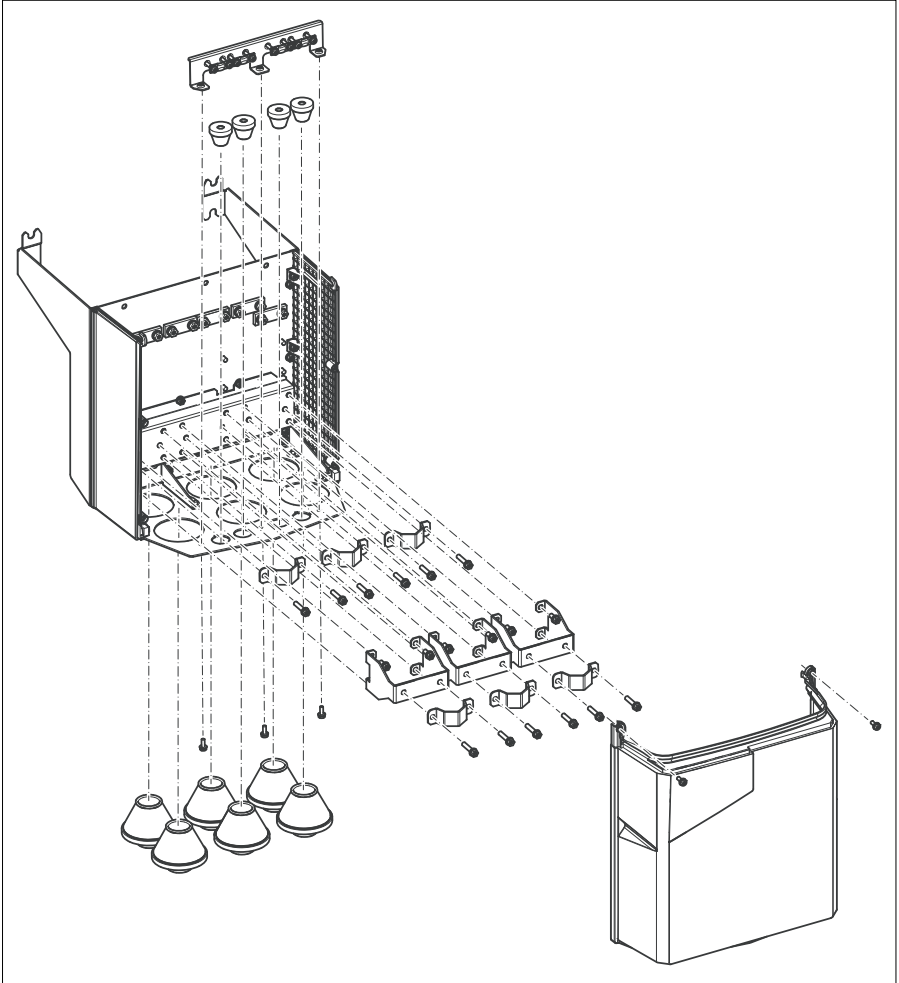

### ■ Frame R9 cable box (IP21, UL Type 1)

The figure below shows the contents of the cable box package. The package also includes an assembly drawing which shows how to install the cable box to the drive frame.

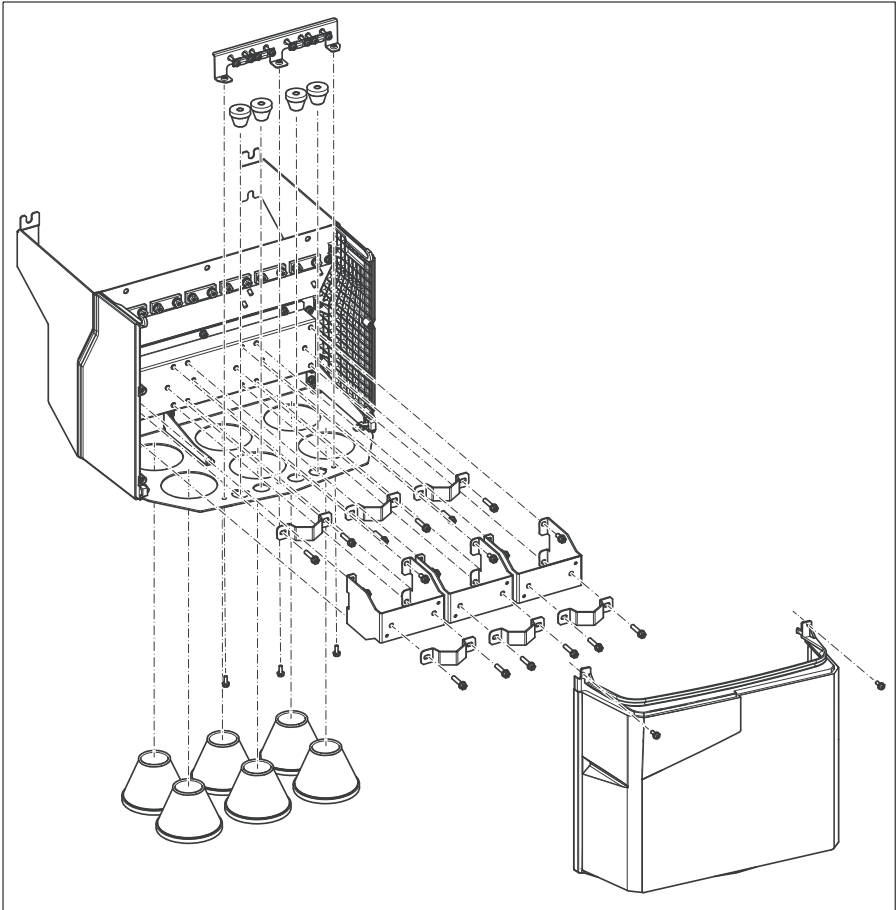


## Installing the drive

### ■ Installing the drive vertically, frames R1...R4

The figures show frame R3 as an example.


1. Mark the hole locations using the mounting template included in the package. Do not leave the mounting template under the drive. The drive dimensions and hole locations are also shown in the drawings in chapter [Dimension drawings](#) on page 227.
2. Drill the mounting holes.
3. Insert anchors or plugs into the holes and start the bolts into the anchors or plugs. Use long enough bolts to make them carry the weight of the drive.

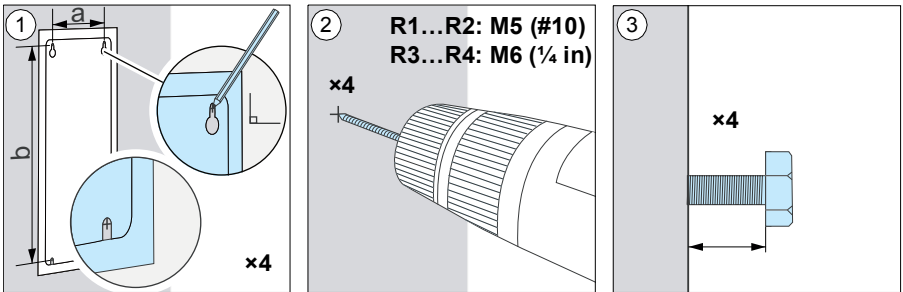

	R1		R2		R3		R4	
	mm	in	mm	in	mm	in	mm	in
<b>a</b>	98	3.86	98	3.86	160	6.30	160	6.30
<b>b</b>	317	12.48	417	16.42	473	18.62	619	24.37
<b>Weight</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>
<b>IP21 (UL Type 1)</b>	4.6	10.1	6.6	14.6	11.8	26.0	19.0	41.9
<b>Weight</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>
<b>IP55 (UL Type 12)</b>	4.8	10.6	6.8	15.0	13.0	28.7	20.0	44.1




4. Position the drive onto the bolts on the wall.
5. Tighten the bolts in the wall securely.

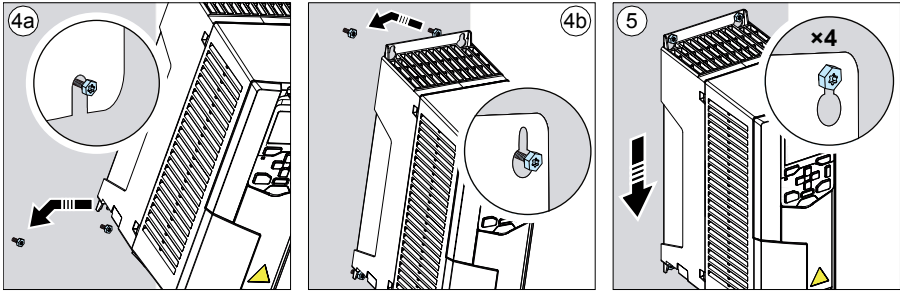

### ■ Install the cable box, frames R1...R2

6. Remove the screw (6a) and lift the cover off (6b) from the separate cable box.
7. Attach the cable box cover to the front cover.
8. Install the cable box to the frame. Position the cable box (8a) and tighten the screws (8b).

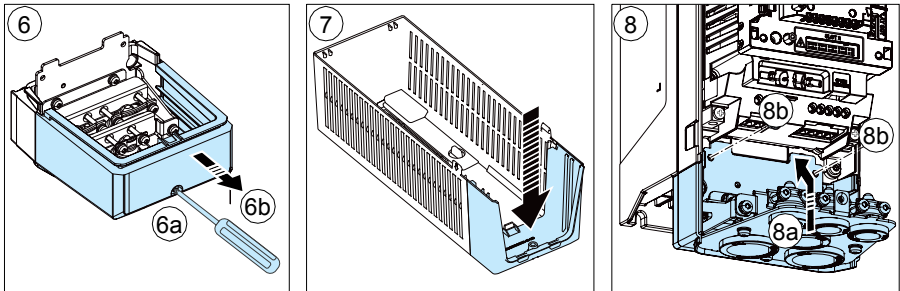


**Note:** Install the hood to UL Type 12 drives after you have installed the drive electrically and reinstalled covers, see page [154](#).



**■ Installing the drive vertically, frame R5**



1. Mark the hole locations using the mounting template included in the package. Do not leave the mounting template under the drive. The drive dimensions and hole locations are also shown in the drawings in chapter *Dimension drawings* on page 227.
2. Drill the mounting holes.
3. Insert fixing anchors or plugs into the holes. Start the two upper bolts and the two lowest bolts into the anchors or plugs.

Use long enough bolts to make them carry the weight of the drive.

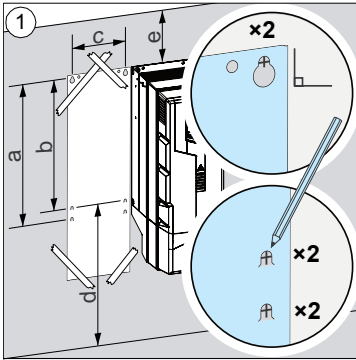






	R5 IP21 (UL Type 1)		R5 IP55 (UL Type 12)	
	mm	in	mm	in
<b>a</b>	612	24.09	612	24.09
<b>b</b>	581	22.87	581	22.87
<b>c</b>	160	6.30	160	6.30
<b>d &gt;</b>	200	7.87	200	7.87
<b>e &gt;</b>	100	3.94	100	3.94

⚠	R5 IP21 (UL Type 1)		R5 IP55 (UL Type 12)	
	kg	lb	kg	lb
	28.3	62.4	29.0	64.0

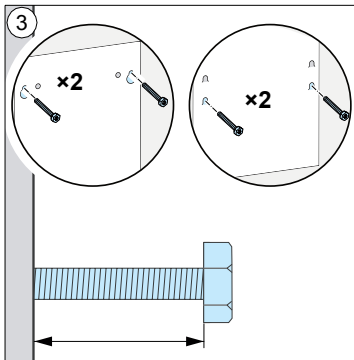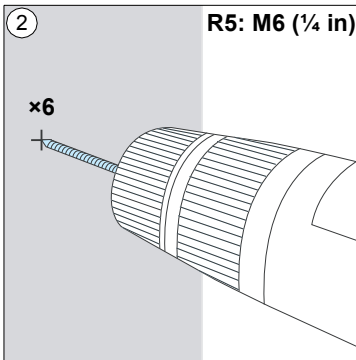


### IP21 (UL Type 1)

4. Remove the front cover: Remove the fastening screws (4a) with a T20 Torx screwdriver and lift the cover from the bottom upwards (4b) and then to the top side (4c).
5. Attach the cable box to the drive frame.
6. Tighten the box nuts.
7. Slide the box cover from the bottom (7a) and tighten the retaining screws (7b).
8. Put the tabs at the top of the front cover in their counterparts on the housing and then press at the bottom (8a) and tighten the retaining screws (8b).

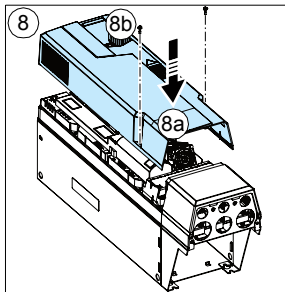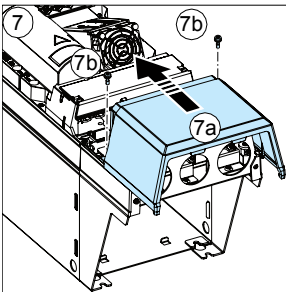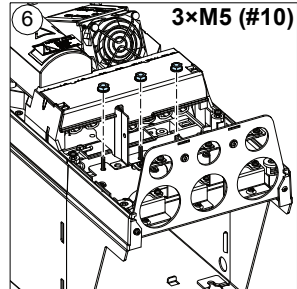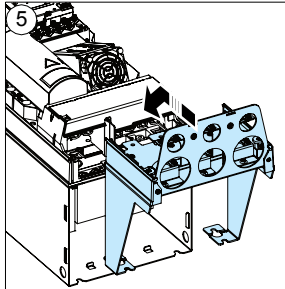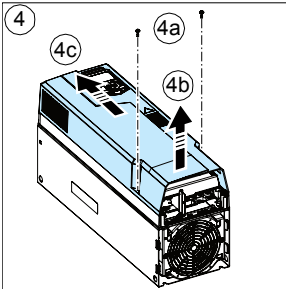

**IP21 (UL Type 1), IP55 (UL Type 12)**

9. Position the drive onto the four bolts on the wall. Lift the drive with another person or with a lifting device as it is heavy. Tighten the bolts in the wall securely.
10. Tighten the two remaining bolts securely.

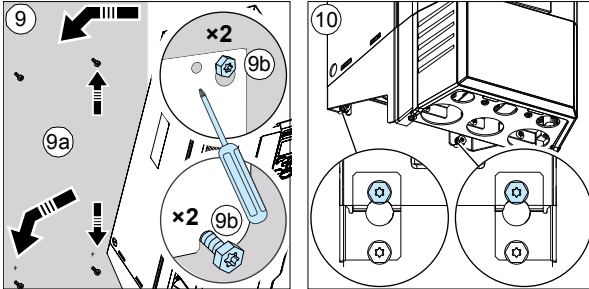

**Note:** Install the hood on UL Type 12 drives after you have installed the drive electrically and reinstalled covers, see page [154](#).




## ■ Installing the drive vertically, frames R6...R9

1. Mark the hole locations for the six mounting holes using the mounting template included in the package. Do not leave the mounting template under the drive.

The drive dimensions and hole locations are also shown in the drawings in chapter [Dimension drawings](#) on page [227](#).

**Note:** You can use only two bolts instead of four to attach the lower part of the drive.



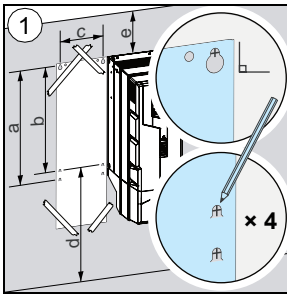


	R6		R7		R8		R9	
	mm	in	mm	in	mm	in	mm	in
<b>a</b>	571	22.5	623	24.5	701	27.6	718	28.3
<b>b</b>	531	20.9	583	23.0	658	25.9	658	25.9
<b>c</b>	213	8.4	245	9.7	263	10.3	345	13.6
<b>d</b>	300	11.8	300	11.8	300	11.8	300	11.8
<b>e</b>	155	6.1	155	6.1	155	6.1	200	7.9
<b>IP21, UL Type 1</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>
	42.4	93.5	54	119.1	69	152.2	97	213.9
<b>IP55, UL Type 12</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>	<b>kg</b>	<b>lb</b>
	43.0	94.8	56	123.5	77	169.8	103	227.1

2. Drill the mounting holes.
3. Insert fixing anchors or plugs into the holes and start the bolts into the anchors or plugs.


Use a sufficient number of bolts that are long enough to make them carry the weight of the drive.

4. Position the drive onto the bolts on the wall. Lift the drive with a lifting device as it is heavy.
5. Tighten the top two bolts in the wall securely.

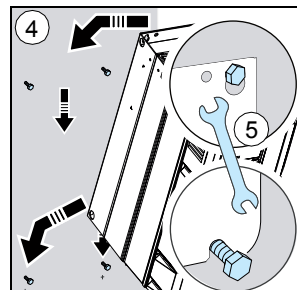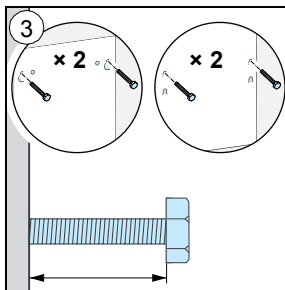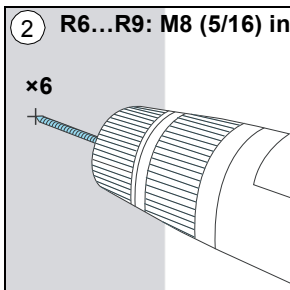


### IP21 (UL Type 1)

6. Remove the front cover: Remove the fastening screws (a) with a T20 Torx screwdriver, move the cover to the top side (b) and then up (c).
7. Attach the cable box to the drive frame.
8. Tighten the box bolts: three at the top (8a) and two at the bottom (8b). Also tighten the bottom bolts started in step 3 (8c).

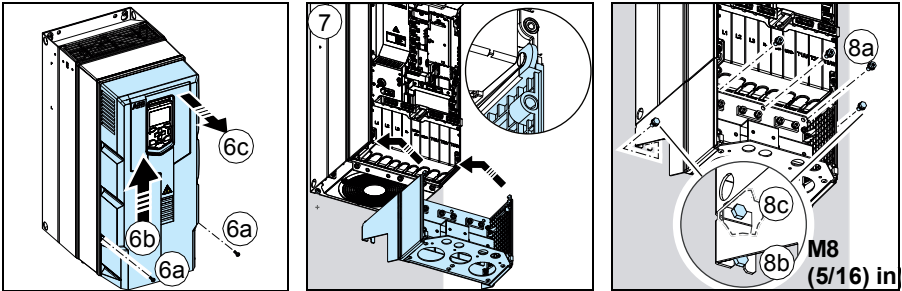

### IP55 (UL Type 12)

9. Remove the front cover: Remove the fastening screws (a) with a T20 Torx screwdriver, move the cover to the top side (b) and then up (c).

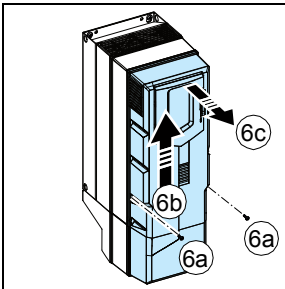

**Note:** Install the hood for UL Type 12 drives after you have installed the drive electrically and reinstalled covers, see page 154.

### ■ Installing the drive vertically side by side

Install the drive following the steps in the appropriate section *Installing the drive vertically, frames R1...R4* (page 65), *Installing the drive vertically, frame R5* (page 67) or *Installing the drive vertically, frames R6...R9* (page 70).



## ■ Installing the drive horizontally, frames R1...R5

Install the drive following the steps in the appropriate section [Installing the drive vertically, frames R1...R4](#) (page 65) or [Installing the drive vertically, frame R5](#) (page 67). The drive can be installed either the left or right side up.

## Flange mounting

Instructions for flange mounting are delivered with the flange mounting kit: *Flange mounting kit quick installation guide for ACX580-01 frames R1 to R5* (3AXD50000201877 [English]) or *Flange mounting kit quick installation guide for ACS880-01 and ACX580-01 frames R6 to R9* (3AXD50000019099 [English]). For more information on flange mounting, see *Flange mounting kit installation supplement* (3AXD50000019100 [English]).



# 5

## Planning the electrical installation

---

### Contents of this chapter

This chapter contains instructions for planning the electrical installation of the drive, for example, for checking the compatibility of the motor and drive, selecting cables, protections and cable routing.

### Limitation of liability

The installation must always be designed and made according to applicable local laws and regulations. The manufacturer does not assume any liability whatsoever for any installation which breaches the local laws and/or other regulations. Furthermore, if the recommendations given by the manufacturer are not followed, the drive may experience problems that the warranty does not cover.

### Selecting the supply disconnecting device

Install a hand-operated input disconnecting device between the AC power source and the drive. The disconnecting device must be of a type that can be locked to the open position for installation and maintenance work.

---

## ■ **European Union**

To meet the European Union Directives, according to standard EN 60204-1, *Safety of Machinery*, the disconnecting device must be one of the following types:

- switch-disconnector of utilization category AC-23B (EN 60947-3)
- disconnector that has an auxiliary contact that in all cases causes switching devices to break the load circuit before the opening of the main contacts of the disconnector (EN 60947-3)
- circuit breaker suitable for isolation in accordance with EN 60947-2.

## ■ **Other regions**

The disconnecting device must conform to the applicable local safety regulations.

---



## Checking the compatibility of the motor and drive

Use an asynchronous AC induction motor, permanent magnet motor or synchronous reluctance motor with the drive. Several induction motors can be operated at a time when using scalar mode. Operation of permanent magnet motors is limited to one connection to the drive at a time.

Check that the motor and the drive are compatible according to the rating table in section [Ratings](#) on page 178. The table lists the typical motor power for each drive type.

Ensure that the motor withstands the maximum peak voltage in the motor terminals. See the [Requirements table](#) on page 76. For basics of protecting the motor insulation and bearings in drive systems, refer to section [Protecting the motor insulation and bearings](#) below.

### Note:

- Consult the motor manufacturer before using a motor whose nominal voltage differs from the AC line voltage connected to the drive input.
- The voltage peaks at the motor terminals are relative to the supply voltage of the drive, not the drive output voltage.
- If the motor and drive are not of the same size, consider the following operation limits of the drive control program:
  - motor nominal voltage range  $1/6 \dots 2 \cdot U_N$
  - motor nominal current range  $1/6 \dots 2 \cdot I_N$  of the drive in vector control and  $0 \dots 2 \cdot I_N$  in scalar control. The control mode is selected by a drive parameter.

## ■ Protecting the motor insulation and bearings

The drive employs modern IGBT inverter technology. Regardless of frequency, the drive output comprises pulses of approximately the drive DC voltage with a very short rise time. The pulse voltage can almost double at the motor terminals, depending on the attenuation and reflection properties of the motor cable and the terminals. This can cause additional stress on the motor and motor cable insulation.

Modern variable speed drives with their fast rising voltage pulses and high switching frequencies can generate current pulses that flow through the motor bearings. This can gradually erode the bearing races and rolling elements.

Optional du/dt filters protect motor insulation system and reduce bearing currents. Optional common mode filters mainly reduce bearing currents. Insulated N-end (non-drive end) bearings protect the motor bearings.

## ■ Requirements table

The following table shows how to select the motor insulation system and when an optional drive du/dt and common mode filters and insulated N-end (non-drive end) motor bearings are required. Ignoring the requirements or improper installation may shorten motor life or damage the motor bearings and voids the warranty.

Motor type	Nominal AC supply voltage	Requirement for		
		Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings	
			$P_N < 100$ kW and frame size < IEC 315	$100 \text{ kW} \leq P_N < 350$ kW or IEC 315 $\leq$ frame size < IEC 400
			$P_N < 134$ hp and frame size < NEMA 500	$134 \text{ hp} \leq P_N < 469$ hp or NEMA 500 $\leq$ frame size $\leq$ NEMA 580
<b>ABB motors</b>				
Random-wound M2_, M3_ and M4_	$U_N \leq 500$ V	Standard	-	+ N
Form-wound HX_ and AM_	$380 \text{ V} < U_N \leq 690$ V	Standard	n.a.	+ N + CMF
Old* form-wound HX_ and modular	$380 \text{ V} < U_N \leq 690$ V	Check with the motor manufacturer.	+ du/dt with voltages over 500 V + N + CMF	
Random-wound HX_ and AM_ **	$0 \text{ V} < U_N \leq 500$ V	Enameled wire with fiber glass taping	+ N + CMF	

\* manufactured before 1.1.1998

\*\* For motors manufactured before 1.1.1998, check for additional instructions with the motor manufacturer.

Motor type	Nominal AC supply voltage	Requirement for		
		Motor insulation system	ABB du/dt and common mode filters, insulated N-end motor bearings	
			$P_N < 100$ kW and frame size < IEC 315	$100 \text{ kW} \leq P_N < 350$ kW or IEC 315 $\leq$ frame size < IEC 400
		$P_N < 134$ hp and frame size < NEMA 500	$134 \text{ hp} \leq P_N < 469$ hp or NEMA 500 $\leq$ frame size $\leq$ NEMA 580	
<b>Non-ABB motors</b>				
Random-wound and form-wound	$U_N \leq 420$ V	Standard: $\hat{U}_{LL} = 1300$ V	-	+ N or CMF
	$420 \text{ V} < U_N \leq 500$ V	Standard: $\hat{U}_{LL} = 1300$ V	+ du/dt	+ du/dt + (N or CMF)
		or Reinforced: $\hat{U}_{LL} = 1600$ V, 0.2 microsecond rise time	-	+ N or CMF

The abbreviations used in the table are defined below.

Abbr.	Definition
$U_N$	Nominal AC line voltage
$\hat{U}_{LL}$	Peak line-to-line voltage at motor terminals which the motor insulation must withstand
$P_N$	Motor nominal power
du/dt	du/dt filter at the output of the drive. Available from ABB as an optional add-on kit.
CMF	Common mode filter. Depending on the drive type, CMF is available from ABB as an optional add-on kit.
N	N-end bearing: insulated motor non-drive end bearing
n.a.	Motors of this power range are not available as standard units. Consult the motor manufacturer.

### Additional requirements for the braking applications

When the motor brakes the machinery, the intermediate circuit DC voltage of the drive increases, the effect being similar to increasing the motor supply voltage by up to 20 percent. Consider this voltage increase when specifying the motor insulation requirements if the motor will be braking a large part of its operation time.


**Example:** Motor insulation requirement for a 400 V AC line voltage application must be selected as if the drive were supplied with 480 V.

### **Additional data for calculating the rise time and the peak line-to-line voltage**


If you need to calculate the actual peak voltage and voltage rise time considering the actual cable length, proceed as follows:

- Peak line-to line voltage: Read the relative  $\hat{U}_{LL}/U_N$  value from the appropriate diagram below and multiply it by the nominal supply voltage ( $U_N$ ).
  - Voltage rise time: Read the relative values  $\hat{U}_{LL}/U_N$  and  $(du/dt)/U_N$  from the appropriate diagram below. Multiply the values by the nominal supply voltage ( $U_N$ ) and substitute into equation  $t = 0.8 \cdot \hat{U}_{LL}/(du/dt)$ .
-

A

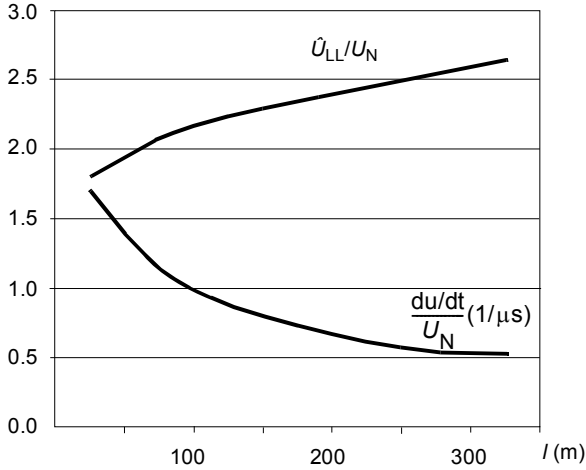

B

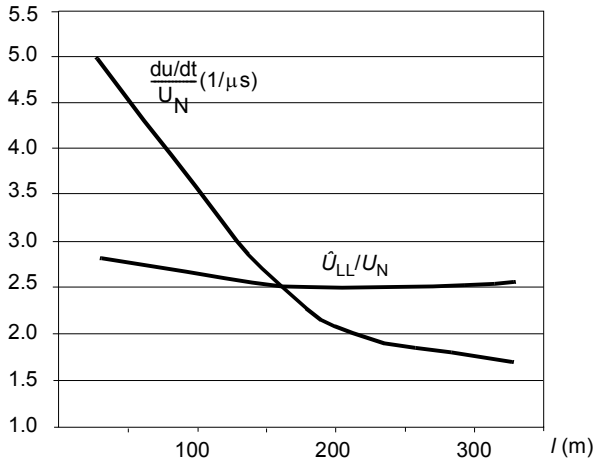

A	Drive with du/dt filter
B	Drive without du/dt filter
$l$	Motor cable length
$\hat{U}_{LL}/U_N$	Relative peak line-to-line voltage
$(du/dt)/U_N$	Relative du/dt value
<b>Note:</b> $\hat{U}_{LL}$ and du/dt values are approximately 20% higher with resistor braking.	

## Selecting the power cables

### ■ General rules

Select the input power and motor cables **according to local regulations**:

- Select a cable capable of carrying the drive nominal current. See section *Ratings* (page 178) for the rated currents.
- Select a cable rated for at least 70 °C maximum permissible temperature of conductor in continuous use. For US, see *Additional US requirements*, page 83.
- The conductivity of the PE conductor must be sufficient, see the table on page 80.
- 600 V AC cable is accepted for up to 500 V AC.

To comply with the EMC requirements of the CE mark, use one of the approved cable types in section *Recommended power cable types* on page 82.

Symmetrical shielded cable reduces electromagnetic emission of the whole drive system as well as the stress on motor insulation, bearing currents and wear.

The protective conductor must always have an adequate conductivity.

Unless local wiring regulations state otherwise, the cross-sectional area of the protective conductor must agree with the conditions that require automatic disconnection of the supply required in 411.3.2. of IEC 60364-4-41:2005 and be capable of withstanding the prospective fault current during the disconnection time of the protective device.

The cross-sectional area of the protective conductor can either be selected from the table below or calculated according to 543.1 of IEC 60364-5-54.

The table below shows the minimum cross-sectional area related to the phase conductor size according to IEC 61800-5-1 when the phase conductor and the protective conductor are made of the same metal. If this is not so, the cross-sectional area of the protective earthing conductor shall be determined in a manner which produces a conductance equivalent to that which results from the application of this table.

Cross-sectional area of the phase conductors $S$ (mm <sup>2</sup> )	Minimum cross-sectional area of the corresponding protective conductor $S_p$ (mm <sup>2</sup> )
$S \leq 16$	$S$
$16 < S \leq 35$	16
$35 < S$	$S/2$

**Note:** See the IEC/EN 61800-5-1 requirement on grounding in the Note on page 19.

## ■ Typical power cable sizes

The table below gives copper cable types with concentric copper shield for the drives with nominal current. The value separated by the plus sign means the diameter of the PE conductor.

IEC type ACQ580 -01-	Frame size	IEC <sup>1)</sup>		UL <sup>3)</sup>		UL (NEC) type ACQ580 -01-
		Cu cable type	Al cable type <sup>2)</sup>	Cu cable type	Al cable type <sup>4)</sup>	
		mm <sup>2</sup>	mm <sup>2</sup>	AWG/kcmil	AWG/kcmil	
<b>3-phase <math>U_N = 400</math> V (380...480 V)</b>						
02A7-4	R1	3×1.5 + 1.5	-	14	-	02A1-4
03A4-4	R1	3×1.5 + 1.5	-	14	-	03A0-4
04A1-4	R1	3×1.5 + 1.5	-	14	-	03A5-4
05A7-4	R1	3×1.5 + 1.5	-	14	-	04A8-4
07A3-4	R1	3×1.5 + 1.5	-	14	-	06A0-4
09A5-4	R1	3×2.5 + 2.5	-	14	-	07A6-4
12A7-4	R1	3×2.5 + 2.5	-	14	-	012A-4
018A-4	R2	3×2.5 + 2.5	-	14	-	014A-4
026A-4	R2	3×6 + 6	-	10	-	023A-4
033A-4	R3	3×10 + 10	-	8	-	027A-4
039A-4	R3	3×10 + 10	-	8	-	034A-4
046A-4	R3	3×10 + 10	-	6	-	044A-4
062A-4	R4	3×25 + 16	-	4	-	052A-4
073A-4	R4	3×35 + 16	-	2	-	065A-4
-	R4	3×35 + 16	-	2	-	077A-4
088A-4	R5	3×50 + 25	3×70	1/0	-	078A-4
106A-4	R5	3×70 + 35	3×70	2/0	-	096A-4
145A-4	R6	3×95 + 50	3×120	3/0	-	124A-4
169A-4	R7	3×120 + 70	3×150	250 MCM	-	156A-4
206A-4	R7	3×150 + 70	3×240	300 MCM	-	180A-4
246A-4	R8	2×(3×70+35)	2×(3×95)	2×2/0	-	240A-4
293A-4	R8	2×(3×95+50)	2×(3×120)	2×3/0	-	260A-4
-	R9	2×(3×95+50)	2×(3×120)	2×4/0	-	302A-4
363A-4	R9	2×(3×120+70)	2×(3×185)	2×300 MCM	-	361A-4
430A-4	R9	2×(3×150+70)	2×(3×240)	2×350 MCM	-	414A-4

3AXD0000586715.xls K

<sup>1)</sup> The cable sizing is based on max. 6 cables laid on a cable ladder side by side, ambient temperature 30 °C, PVC insulation, surface temperature 70 °C (EN 60204-1 and IEC 60364-5-52/2001). For other conditions, size the cables according to local safety regulations, appropriate input voltage and the load current of the drive. See also page 202 for the accepted cable sizes of the drive.

<sup>2)</sup> Aluminum cables must not be used with frames R1...R4.

<sup>3)</sup> The cable sizing is based on NEC Table 310.15 (B) (16) Formerly table 310.16 for copper wires, 75 °C (167 °F) wire insulation at 40 °C (104 °F) ambient temperature. Not more than three current-carrying conductors in raceway or cable or earth (directly buried). For other conditions, size the cables according to local safety regulations, appropriate input voltage and the load current of the drive. See also page 203 for the accepted cable sizes of the drive.




<sup>4)</sup> In UL installations, aluminum cables must not be used.

See also section [Terminal and lead-through data for the power cables](#) on page 202.


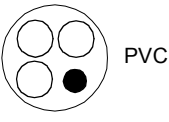

### Alternative power cable types

The recommended and the not allowed power cable types to be used with the drive are presented below.


#### Recommended power cable types

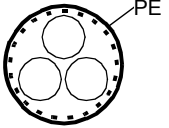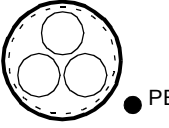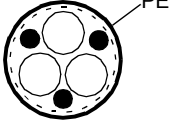	<p>Symmetrical shielded cable with three phase conductors and a concentric PE conductor as the shield. The shield must meet the requirements of IEC 61800-5-1, see page 80. Check with local/state/country electrical codes for allowance.</p>
	<p>Symmetrical shielded cable with three phase conductors and a concentric PE conductor as the shield. A separate PE conductor is required if the shield does not meet the requirements of IEC 61800-5-1, see page 80.</p>
	<p>Symmetrical shielded cable with three phase conductors and a symmetrical PE conductor, and a shield. The PE conductor must meet the requirements of IEC 61800-5-1, see page 80.</p>

#### Power cable types for limited use

	<p>A four-conductor system (three phase conductors and a protective conductor on a cable tray) is <b>not allowed for motor cabling</b> (it is allowed for input cabling).</p>
	<p>A four-conductor system (three phase conductors and a PE conductor in a PVC conduit) is <b>allowed for input cabling with phase conductor cross-section less than 10 mm<sup>2</sup> (8 AWG) or motors ≤ 30 kW (40 hp)</b>. Not allowed in the USA.</p>
	<p>Corrugated or EMT cable with three phase conductors and a protective conductor is allowed for motor cabling with phase conductor cross section less than 10 mm<sup>2</sup> (8 AWG) or motors ≤ 30 kW (40 hp).</p>

#### Not allowed power cable types

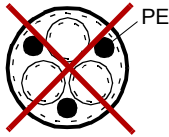
	<p>Symmetrical shielded cable with individual shields for each phase conductor is not allowed on any cable size for input or motor cabling.</p>
--	---



### ■ Motor cable shield

If the motor cable shield is used as the sole protective earth conductor of the motor, make sure that the conductivity of the shield is sufficient. See section [General rules](#) on page 80, or IEC 61800-5-1.

To effectively suppress radiated and conducted radio-frequency emissions, the cable shield conductivity must be at least 1/10 of the phase conductor conductivity. The requirements are easily met with a copper or aluminum shield. The minimum requirement of the motor cable shield of the drive is shown below. It consists of a concentric layer of copper wires with an open helix of copper tape or copper wire. The better and tighter the shield, the lower the emission level and bearing currents.

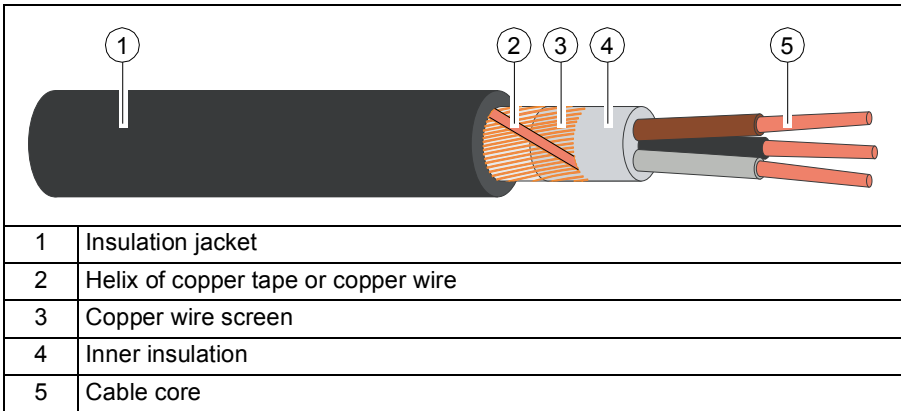

### ■ Additional US requirements

Use type MC continuous corrugated armor cable with symmetrical grounds or shielded power cable for the motor cables if metallic conduit is not used. For the North American market, 600 V AC cable is accepted for up to 500 V AC. 1000 V AC cable is required above 500 V AC (below 600 V AC). Power cables must be rated for 75 °C (167 °F) or higher.

#### Conduit

Couple separate parts of a conduit together: bridge the joints with a ground conductor bonded to the conduit on each side of the joint. Also bond the conduits to the drive enclosure and motor frame. Use separate conduits for input power, motor, and control wiring. When conduit is employed, type MC continuous corrugated aluminum armor cable or shielded cable is not required. A dedicated ground cable is always required.

**Note:** Do not run motor wiring from more than one drive in the same conduit.

## Armored cable / shielded power cable

Six-conductor (three phases and three ground) type MC continuous corrugated armor cable with symmetrical grounds is available from the following suppliers (trade names in parentheses):

- Anixter Wire & Cable (Philsheath)
- BICC General Corp (Philsheath)
- Rockbestos Co. (Gardex)
- Oaknite (CLX).

Shielded power cables are available from the following suppliers:

- Belden
- LAPPKABEL (ÖLFLEX)
- Pirelli.


## Selecting the control cables

### ■ Shielding

All control cables must be shielded.

Use a double-shielded twisted pair cable (figure a below) for analog signals. Employ one individually shielded pair for each signal. Do not use common return for different analog signals.

A double-shielded cable is the best alternative for low-voltage digital signals but single-shielded (b) twisted pair cable is also acceptable.

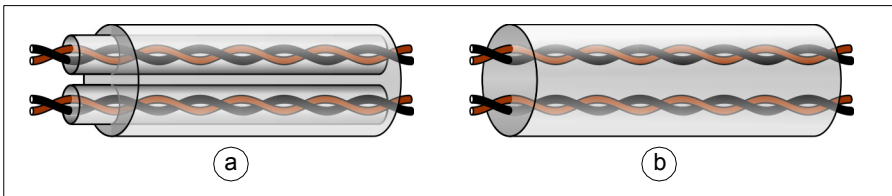

### ■ Signals in separate cables

Run analog and digital signals in separate, shielded cables.

Do not mix 24 V AC/DC and 115/230 V AC signals in the same cable.

### ■ Signals allowed to be run in the same cable

Relay-controlled signals, providing their voltage does not exceed 48 V, can be run in the same cables as digital input signals. The relay-controlled signals should be run as twisted pairs.

### ■ Relay cable

The cable type with braided metallic screen (for example ÖLFLEX by LAPPKABEL, Germany) has been tested and approved by the manufacturer.

### ■ Control panel cable

In remote use, the cable connecting the control panel to the drive must not exceed 100 m (330 ft). If multiple drives are connected, the total length of the panel bus must not exceed 100 m (330 ft).

The cable type tested and approved by the manufacturer is used in control panel option kits. Suitable cables are CAT 5e unshielded or shielded twisted pair cables.


### ■ Drive composer PC tool cable

Connect the Drive composer PC tool to the drive through the USB port of the control panel. Use a USB type A (PC) - type B (control panel) cable. The maximum length of the cable is 3 m (9.8 ft).

### ■ FPBA-01 PROFIBUS DP adapter module connectors

Frames R1...R3: The following connector types have been tested to fit in the tight space for option slot 1.

- Phoenix Contact SUBCON-PLUS-PROFIB/PG/SC2, part number 2708245. Lead the cable through the control cable hole on the right in the lead-through plate (1).
- Siemens, part number 6GK1 500 0EA02. Lead the cable through the middle control cable hole in the lead-through plate (2).

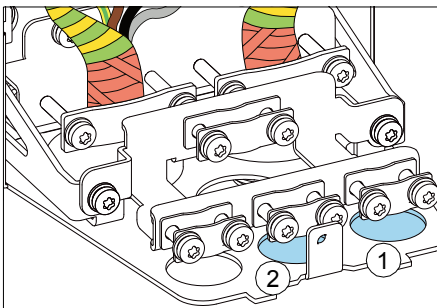

## Routing the cables


### General rules

Route the motor cable away from other cable routes. Motor cables of several drives can be run in parallel installed next to each other. The motor cable, input power cable and control cables should be installed on separate trays. Avoid long parallel runs of motor cables with other cables in order to decrease electromagnetic interference caused by the rapid changes in the drive output voltage.

Where control cables must cross power cables, make sure they are arranged at an angle as near to 90 degrees as possible. Do not run extra cables through the drive.


The cable trays must have good electrical bonding to each other and to the grounding electrodes. Aluminum tray systems can be used to improve local equalizing of potential.

A diagram of the cable routing is shown below.

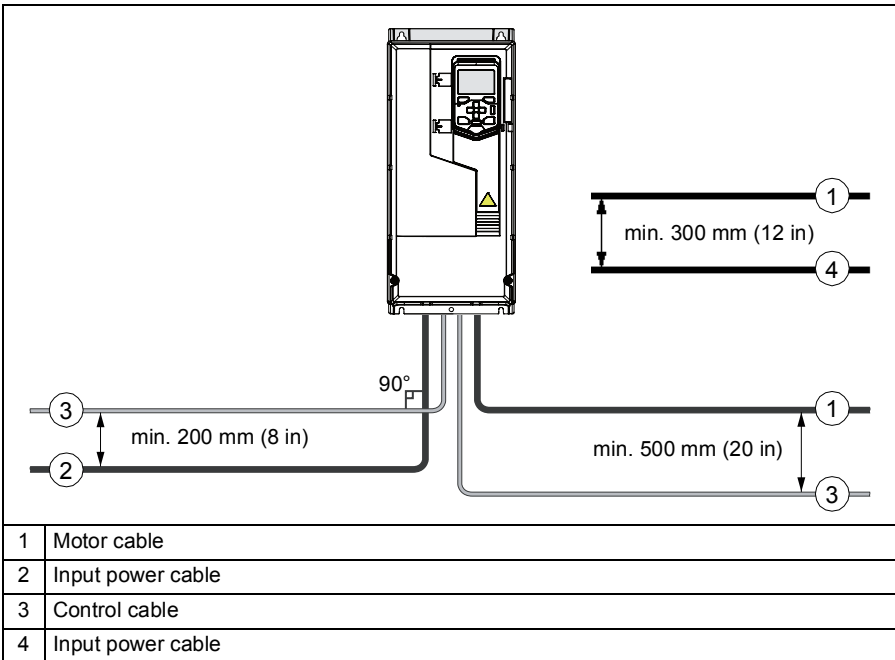

### ■ Separate control cable ducts

Lead 24 V and 230 V (120 V) control cables in separate ducts unless the 24 V cable is insulated for 230 V (120 V) or insulated with an insulation sleeving for 230 V (120 V).

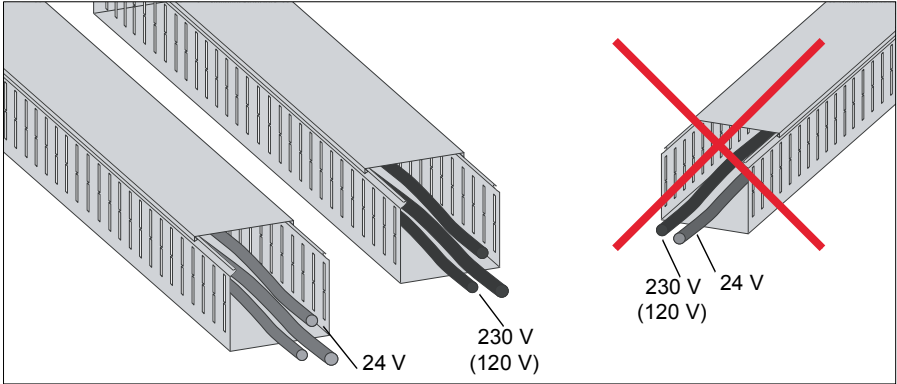

### ■ Continuous motor cable shield or enclosure for equipment on the motor cable


To minimize the emission level when safety switches, contactors, connection boxes or similar equipment are installed on the motor cable between the drive and the motor:

- European Union: Install the equipment in a metal enclosure with 360 degree grounding for the shields of both the incoming and outgoing cable, or connect the shields of the cables otherwise together.
- US: Install the equipment in a metal enclosure in a way that the conduit or motor cable shielding runs consistently without breaks from the drive to the motor.

## Implementing thermal overload and short-circuit protection

### ■ Protecting the drive and input power cable in short-circuits

Protect the drive and input cable with fuses as follows:

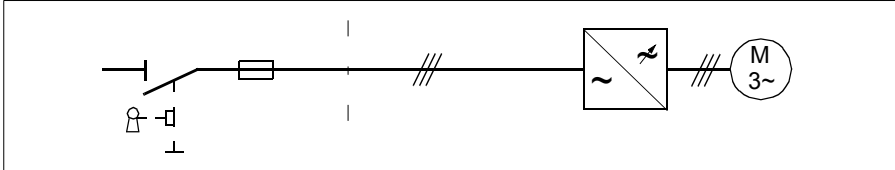

Size the fuses at the distribution board according to instructions given in chapter [Technical data](#), page 190. The fuses will protect the input cable in short-circuit situations, restrict drive damage and prevent damage to adjoining equipment in case of a short-circuit inside the drive.

### Circuit breakers

The protective characteristics of circuit breakers depend on the type, construction and settings of the breakers. There are also limitations pertaining to the short-circuit capacity of the supply network. Your local ABB representative can help you in selecting the breaker type when the supply network characteristics are known.



**WARNING!** Due to the inherent operating principle and construction of circuit breakers, independent of the manufacturer, hot ionized gases can escape from the breaker enclosure in case of a short-circuit. To ensure safe use, pay special attention to the installation and placement of the breakers. Obey the manufacturer's instructions.

---

You can use the circuit breakers listed in chapter [Technical data](#), page 196. Other circuit breakers can be used with drive if they provide the same electrical characteristics. ABB does not assume any liability whatsoever for the correct function and protection with circuit breakers not listed below. Furthermore, if the recommendations given by ABB are not obeyed, the drive can experience problems that warranty does not cover.

### ■ Protecting the motor and motor cable in short-circuits

The drive protects the motor cable and motor in a short-circuit situation when the motor cable is sized according to the nominal current of the drive. No additional protection devices are needed.

---

## ■ Protecting the drive and the input power and motor cables against thermal overload

The drive protects itself and the input and motor cables against thermal overload when the cables are sized according to the nominal current of the drive. No additional thermal protection devices are needed.



**WARNING!** If the drive is connected to multiple motors, use a separate circuit breaker or fuses for protecting each motor cable and motor against overload. The drive overload protection is tuned for the total motor load. It may not trip due to an overload in one motor circuit only

---

## ■ Protecting the motor against thermal overload

According to regulations, the motor must be protected against thermal overload and the current must be switched off when overload is detected. The drive includes a motor thermal protection function that protects the motor and switches off the current when necessary. Depending on a drive parameter value, the function either monitors a calculated temperature value (based on a motor thermal model) or an actual temperature indication given by motor temperature sensors. The user can tune the thermal model further by feeding in additional motor and load data.

The most common temperature sensors are:

- motor sizes IEC180...225: thermal switch, eg, Klixon
- motor sizes IEC200...250 and larger: PTC or Pt100.

For more information, see *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]).

## Protecting the drive against ground faults

The drive is equipped with an internal ground fault protective function to protect the unit against ground faults in the motor and motor cable. This is not a personnel safety or a fire protection feature. The ground fault protective function can be reduced with a parameter 31.20 Earth fault.

## ■ Residual current device compatibility


The drive is suitable to be used with residual current devices of Type B.

**Note:** The EMC filter of the drive includes capacitors connected between the main circuit and the frame. These capacitors and long motor cables increase the ground leakage current and may cause fault current circuit breakers to function.

---

## Implementing the Emergency stop function

For safety reasons, install the emergency stop devices at each operator control station and at other operating stations where emergency stop may be needed. Design the emergency stop according to relevant standards.

**Note:** Pressing the off key  on the control panel of the drive does not generate an emergency stop of the motor or separate the drive from dangerous potential.

## Implementing the Safe torque off function

See chapter [Safe torque off function](#) on page 247.

## Implementing the ATEX-certified Safe motor disconnection function (option +Q971)

With option +Q971, the drive supplies ATEX-certified safe motor disconnection without contactor that uses the drive Safe torque off function. For more information, see *CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual* (3AXD50000030058 [English]).

## Implementing the undervoltage control (power-loss ride-through)

See *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]).

## Using a safety switch between the drive and the motor

It is recommended to install a safety switch between the permanent magnet motor and the drive output. This is needed to isolate the motor from the drive during maintenance work on the drive.

## Using a contactor between the drive and the motor

Implementing the control of the output contactor depends on how you select the drive to operate.

When you have selected to use

- Vector control mode and motor ramp stop,
- open the contactor as follows:
1. Give a stop command to the drive.
  1. Wait until the drive decelerates the motor to zero speed.
  2. Open the contactor.



When you have selected to use

- Vector control mode and motor coast stop; or scalar control mode,

open the contactor as follows:

1. Give a stop command to the drive.
2. Open the contactor.



**WARNING!** When the Vector control mode is in use, never open the output contactor while the drive controls the motor. The vector control operate extremely fast, much faster than it takes for the contactor to open its contacts. When the contactor starts opening while the drive controls the motor, the vector control will try to maintain the load current by immediately increasing the drive output voltage to the maximum. This will damage or destroy the contactor completely.

---


## Protecting the contacts of relay outputs

Inductive loads (relays, contactors, motors) cause voltage transients when switched off.

It is highly recommended that inductive loads are equipped with noise attenuating circuits (varistors, RC filters [AC] or diodes [DC]) in order to minimize the EMC emission at switch-off. If not suppressed, the disturbances may connect capacitively or inductively to other conductors in the control cable and form a risk of malfunction in other parts of the system.

Install the protective component as close to the inductive load as possible. Do not install protective components at the relay outputs.

---

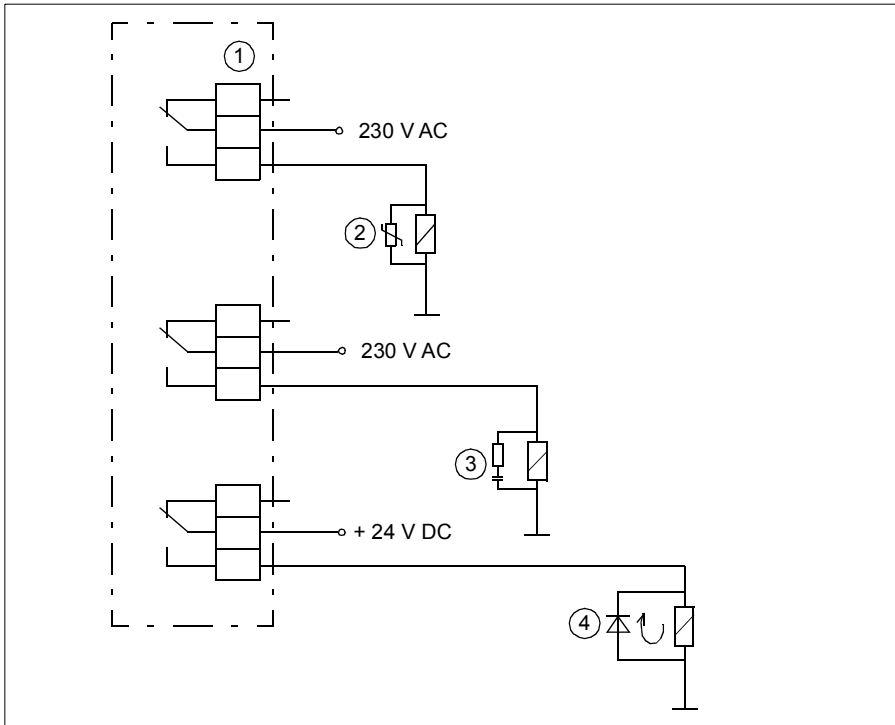

1	Relay outputs
2	Varistor
3	RC filter
4	Diode

## Limiting relay output maximum voltages at high installation altitudes

See sections *Isolation areas, R1...R5* on page 210 and *Isolation areas, R6...R9* on page 211.

## Implementing a motor temperature sensor connection

---



**WARNING!** IEC 60664 requires double or reinforced insulation between live parts and the surface of accessible parts of electrical equipment which are either non-conductive or conductive but not connected to the protective earth..

---

To connect a motor temperature sensor and other similar components to the drive, you have four alternatives:

1. If there is double or reinforced insulation between the sensor and the live parts of the motor, you can connect the sensor directly to the inputs of the drive.
2. If there is basic insulation between the sensor and the live parts of the motor, you can connect the sensor to the inputs of the drive if all circuits connected to the drive's digital and analog inputs (typically extra-low voltage circuits) are protected against contact and insulated with basic insulation from other low-voltage circuits. The insulation must be rated for the same voltage level as the drive main circuit. Note that extra-low voltage circuits (such as 24 V DC) typically do not meet these requirements.
3. You can connect the sensor to an extension module with reinforced insulation (eg, CMOD-02) between the sensor connector and the other connectors of the module. See the table below for the sensor insulation requirement. For sensor connection to the extension module, see its manual.
4. You can connect a sensor to an external thermistor relay the insulation of which is rated for the main circuit voltage of the drive.

See:

- section *AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1)* on page 141
  - section *CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)* on page 279
  - *CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual (3AXD50000030058 [English])*.
-

The table shows what temperature sensor types you can connect to the drive I/O extension modules as well as the insulation requirement for the sensor.

Extension module		Temperature sensor type		
Type	Insulation	PTC	KTY	Pt100, Pt1000
CMOD-02	Reinforced insulation between the motor thermistor connector and the other connectors of the module (including drive control unit connector). → No special requirements for the thermistor insulation level. (The drive control board is PELV compatible also when the module and a thermistor protection circuit are installed.)	X	-	-
CPTC-02		X	-	-

# 6

## Electrical installation

---

### Contents of this chapter

This chapter describes how to check the insulation of the assembly and the compatibility with IT (ungrounded) and corner-grounded TN systems. It then shows how to connect the power and control cables, install optional modules and connect a PC.

### Warnings



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. If you ignore them, injury or death, or damage to the equipment can occur.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

---

### Required tools

To do the electrical installation, you need the these tools:

- wire stripper
  - screwdriver and/or wrench with a set of suitable bits.
-

## Checking the insulation of the assembly

### ■ Drive

Do not make any voltage tolerance or insulation resistance tests on any part of the drive as testing can damage the drive. Every drive has been tested for insulation between the main circuit and the chassis at the factory. Also, there are voltage-limiting circuits inside the drive which cut down the testing voltage automatically.

### ■ Input power cable


Check the insulation of the input cable according to local regulations before connecting it to the drive.

### ■ Motor and motor cable

Check the insulation of the motor and motor cable as follows:

1. Check that the motor cable is disconnected from the drive output terminals T1/U, T2/V and T3/W.
2. Measure the insulation resistance between the phase conductors and between each phase conductor and the Protective Earth conductor. Use a measuring voltage of 1000 V DC. The insulation resistance of a motor must exceed 100 Mohm (reference value at 25 °C or 77 °F). For the insulation resistance of other motors, please consult the manufacturer's instructions.

**Note:** Moisture inside the motor casing will reduce the insulation resistance. If moisture is suspected, dry the motor and repeat the measurement.

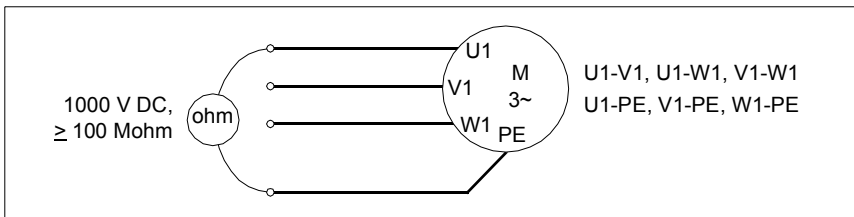

## Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (IEC)

### ■ EMC filter

A drive with the internal EMC filter connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the EMC filter. See sections *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems* on page 98, and *Guidelines for installing the drive to a TT system* on page 99.



**WARNING!** Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

---

**Note:** When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section *EMC compatibility and motor cable length* on page 204.

### ■ Ground-to-phase varistor

A drive with the ground-to-phase varistor connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the varistor. See sections *When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems* on page 98, and *Guidelines for installing the drive to a TT system* on page 99.




**WARNING!** Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

---

**When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems**

Frame	Symmetrically grounded TN-S systems <sup>1</sup>	Corner-grounded and midpoint-grounded delta systems <sup>2</sup>	IT systems (ungrounded or high-resistance grounded [ $>30$ ohms]) <sup>3</sup>
R1...R3	Do not disconnect EMC or VAR screws.	Disconnect EMC screw. Do not disconnect VAR screw.	Disconnect EMC and VAR screws.
R4...R5	Do not disconnect EMC or VAR screws.	See Note 1 below.	Disconnect EMC screws (2 pcs) and VAR screw.
R6...R9	Do not disconnect EMC or VAR screws.	Do not disconnect EMC AC or VAR screws. Disconnect EMC DC screw.	Disconnect EMC screws (2 pcs) and VAR screw.

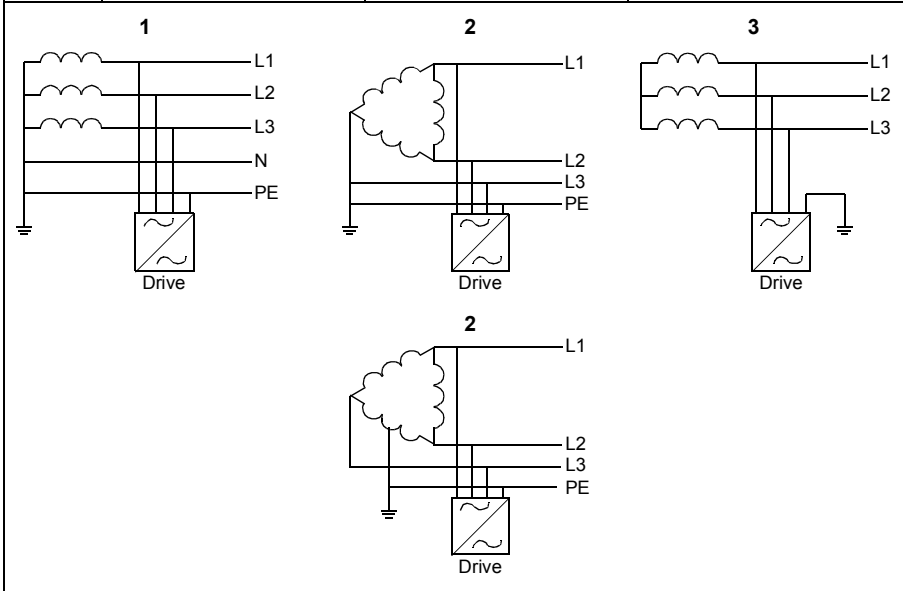

**Note 1:** Frames R4 and R5 are evaluated for use on corner-grounded delta and midpoint-grounded delta systems by UL standards: Do not disconnect EMC AC or VAR screws. Disconnect EMC DC screw. Frames R4 and R5 are not evaluated for use on corner-grounded or midpoint-grounded delta systems by IEC standards.

**Note 2:** These are the EMC filter and varistor screws in different drive frame sizes.

Frame	EMC filter screws	Ground-to-phase varistor screw
R1...R3	EMC screw	VAR
R4...R5	Two EMC screws	VAR
R6...R9	Two EMC screws	VAR




## ■ Guidelines for installing the drive to a TT system

The drive can be installed to a TT system under these conditions:

1. Residual current device has been installed in the supply system.
2. These screws have been disconnected. Otherwise EMC filter and ground-to-phase varistor capacitor leakage current will cause the residual current device to trip.

Frame size	EMC filter screws	Ground-to-phase varistor screw
R1...R3	EMC screw	VAR
R4...R5	Two EMC screws	VAR
R6...R9	Two EMC screws	VAR

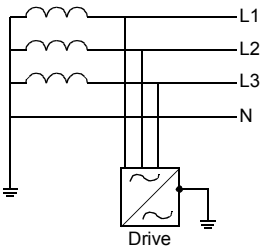The diagram illustrates the electrical connection of a drive to a TT system. It shows three phase lines (L1, L2, L3) and a neutral line (N) entering the drive. The drive is connected to a ground point, which is also connected to the neutral line. The diagram shows the internal connections of the drive, including the EMC filter and the ground-to-phase varistor.

3AXD1000681917

### Note:

- Because the EMC filter screws have been disconnected, ABB does not guarantee the EMC category.
- ABB does not guarantee the functioning of the ground leakage detector built inside the drive.
- In large systems the residual current device can trip without a real reason.

## ■ Identifying different types of electrical power systems

To identify the electrical power system type, find out the supply transformer connection. If that is not possible, measure these voltages at the distribution board before you connect power to the drive:

1. input voltage line to line ( $U_{L-L}$ )
2. input voltage line 1 to ground ( $U_{L1-G}$ )
3. input voltage line 2 to ground ( $U_{L2-G}$ )
4. input voltage line 3 to ground ( $U_{L3-G}$ ).

The line-to-ground voltages in relation to the line-to-line voltage of the electrical power system types are shown below.


$U_{L-L}$	$U_{L1-G}$	$U_{L2-G}$	$U_{L3-G}$	<b>Electrical power system type</b>
X	$0.58 \cdot X$	$0.58 \cdot X$	$0.58 \cdot X$	Symmetrically grounded TN system (TN-S system)
X	$1.0 \cdot X$	$1.0 \cdot X$	0	Corner-grounded delta system (non-symmetrical)
X	$0.5 \cdot X$	$0.5 \cdot X$	$0.57 \cdot X$	Midpoint-grounded delta system (non-symmetrical)
X	Varying level versus time	Varying level versus time	Varying level versus time	IT systems (ungrounded or high-resistance-grounded [ $>30$ ohms]) non-symmetrical
X				TT system (the protective earth connection for the consumer is provided by a local earth electrode, and there is another independently installed at the generator.)

## Frames R1...R3


To disconnect the internal EMC filter or ground-to-phase varistor, if needed, do as follows:

1. Switch off the power from the drive.
2. Open the front cover, if not already opened, see page 113.
3. To disconnect the internal EMC filter, remove the EMC screw (3a) and place it in the storage place (3b).
4. To disconnect the ground-to-phase varistor, remove the varistor screw (4a) and place it in the storage place (4b).


R1

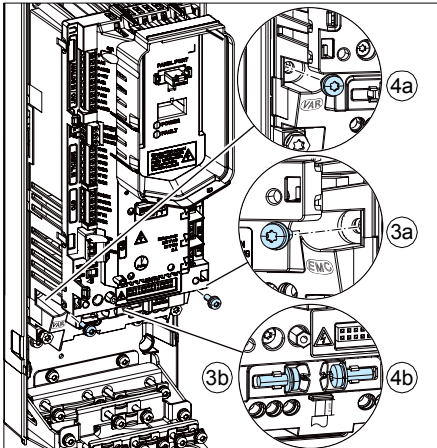

R2

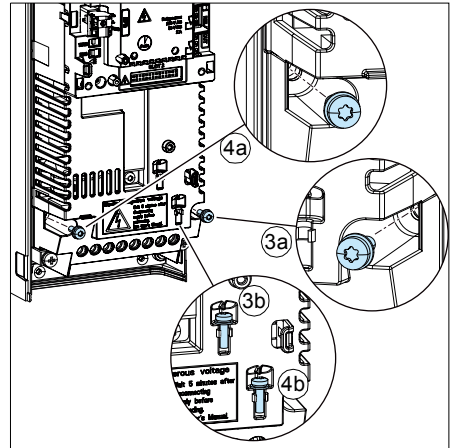

R3

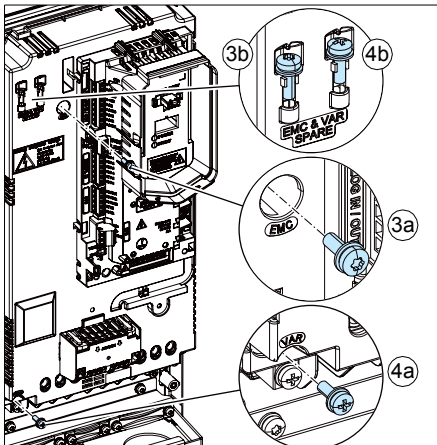


## ■ Frames R4...R9


To disconnect the internal EMC filter or ground-to-phase varistor, if needed, do as follows:

1. Switch off the power from the drive.
2. Open the cover, if not already opened. Frame R4: see page [113](#), frame R5: see page [120](#), frames R6...R9: see page [71](#).
3. To disconnect the internal EMC filter, remove the two EMC screws.
4. To disconnect the ground-to-phase varistor, remove the varistor screw.


### R4

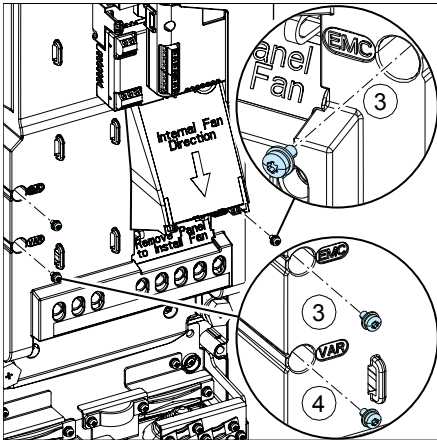

### R5

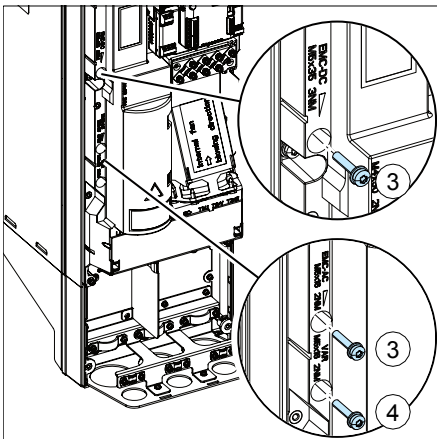

R6...R9

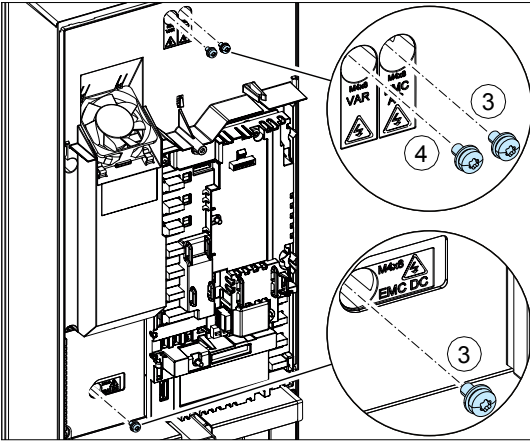

## Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (North America)

### ■ EMC filter

A drive with the internal EMC filter connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the EMC filter. See sections [When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems](#) on page 105, and [Guidelines for installing the drive to a TT system](#) on page 106.



**WARNING!** Do not install a drive with the EMC filter connected to a system that the filter is not suitable for. This can cause danger, or damage the drive.

---

**Note:** When the internal EMC filter is disconnected, the EMC compatibility of the drive is considerably reduced. See section [EMC compatibility and motor cable length](#) on page 204.

### ■ Ground-to-phase varistor

A drive with the ground-to-phase varistor connected can be installed to a symmetrically grounded TN-S system. If you install the drive to another system, you may need to disconnect the varistor. See sections [When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems](#) on page 105, and [Guidelines for installing the drive to a TT system](#) on page 106.




**WARNING!** Do not install a drive with the ground-to-phase varistor connected to a system that the varistor is not suitable for. If you do, the varistor circuit can be damaged.

---

■ When to disconnect EMC filter or ground-to-phase varistor: TN-S, IT, corner-grounded delta, and mid-point grounded delta systems

Configure the ACH580 EMC filter based on the electrical system of the installation site					
Frame size	Screw label	Factory default screw material	Symmetrically grounded TN systems (TN-S systems), i.e. center-grounded-wye. <sup>1</sup>	Corner grounded TN Systems and point-grounded delta systems <sup>2</sup>	IT Systems (ungrounded or high-resistance grounded [ $>30$ ohms]) <sup>3</sup>
R1...R3	EMC (DC)	Plastic	OK to install metal screw	Maintain the plastic screw	Maintain the plastic screw
	VAR	Metal	Maintain the metal screw	Remove the metal screw	Remove the metal screw
R4...R5	EMC (AC)	Metal	Maintain the metal screw	Remove the metal screw	Remove the metal screw
	EMC (DC)	Plastic	OK to install metal screw	Maintain the plastic screw	Maintain the plastic screw
	VAR	Metal	Maintain the metal screw	Maintain the metal screw	Remove the metal screw
R6...R9	EMC (AC)	Metal	Maintain the metal screw	Remove the metal screw	Remove the metal screw
	EMC (DC)	Plastic	OK to install metal screw	Maintain the plastic screw	Maintain the plastic screw
	VAR	Metal	Maintain the metal screw	Maintain the metal screw	Remove the metal screw

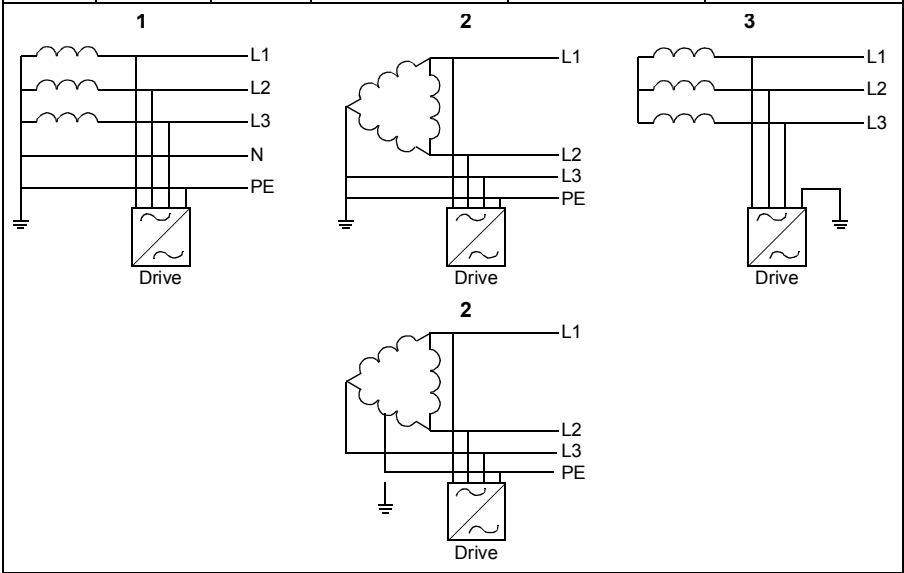

**Note 1:** Frames R4 and R5 are evaluated for use on corner-grounded delta and midpoint-grounded delta systems by UL standards  
 Frames R4 and R5 are not evaluated for use on corner-grounded or midpoint-grounded delta systems by IEC standards.

**Note 2:** The VAR screw on R1...R3 also connects the EMC (AC) circuit internally within the drive.

**Note 3:** Failure to remove a metal screw, when indicated in the table above, may result in drive failure.

**Note 4:** These are the EMC filter and varistor screws and their material in different drive frame sizes.

Frame	EMC filter screws	Ground-to-phase varistor screw
R1...R3	Plastic EMC (DC)	Metal VAR
R4...R5	Plastic EMC (DC), Plastic EMC (AC)	Metal VAR
R6...R9	Plastic EMC (DC), Plastic EMC (AC)	Metal VAR

**Guidelines for installing the drive to a TT system**

The drive can be installed to a TT system under these conditions:

TBA

Frame size	EMC filter screws	Ground-to-phase varistor screw
R1...R3	Plastic EMC (DC)	Metal VAR
R4...R5	Plastic EMC (DC), Plastic EMC (AC)	Metal VAR
R6...R9	Plastic EMC (DC), Plastic EMC (AC)	Metal VAR

The diagram shows a three-phase AC supply with lines labeled L1, L2, and L3, and a neutral line labeled N. The neutral line is grounded to earth. The three phase lines are connected to the input terminals of a drive unit, which is represented by a square box with a diagonal line and a wavy line inside. The drive unit is also grounded to earth at its base.



**Note:**

- Because the EMC filter screws have been disconnected, ABB does not guarantee the EMC category.
- ABB does not guarantee the functioning of the ground leakage detector built inside the drive.
- In large systems the residual current device can trip without a real reason.

### ■ Identifying different types of electrical power systems

To identify the electrical power system type, find out the supply transformer connection. If that is not possible, measure these voltages at the distribution board before you connect power to the drive:

1. input voltage line to line ( $U_{L-L}$ )
2. input voltage line 1 to ground ( $U_{L1-G}$ )
3. input voltage line 2 to ground ( $U_{L2-G}$ )
4. input voltage line 3 to ground ( $U_{L3-G}$ ).

The line-to-ground voltages in relation to the line-to-line voltage of the electrical power system types are shown below.


$U_{L-L}$	$U_{L1-G}$	$U_{L2-G}$	$U_{L3-G}$	Electrical power system type
X	$0.58 \cdot X$	$0.58 \cdot X$	$0.58 \cdot X$	Symmetrically grounded TN system (TN-S system)
X	$1.0 \cdot X$	$1.0 \cdot X$	0	Corner-grounded delta system (non-symmetrical)
X	$0.5 \cdot X$	$0.5 \cdot X$	$0.57 \cdot X$	Midpoint-grounded delta system (non-symmetrical)
X	Varying level versus time	Varying level versus time	Varying level versus time	IT systems (ungrounded or high-resistance-grounded [ $>30$ ohms]) non-symmetrical
X				TT system (the protective earth connection for the consumer is provided by a local earth electrode, and there is another independently installed at the generator.

### ■ Frames R1...R3


To disconnect the internal EMC filter or ground-to-phase varistor, if needed, do as follows:

1. Switch off the power from the drive.
2. Open the front cover, if not already opened, see page [113](#).
3. The internal DC EMC filter is disconnected by default with a plastic screw (3a).
4. To disconnect the ground-to-phase varistor, replace the metal varistor screw (4a) with the plastic screw provided in the package, and place the metal screw in the storage place (4b).

R1

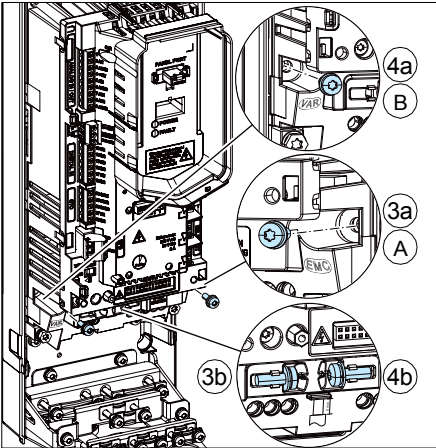


R2

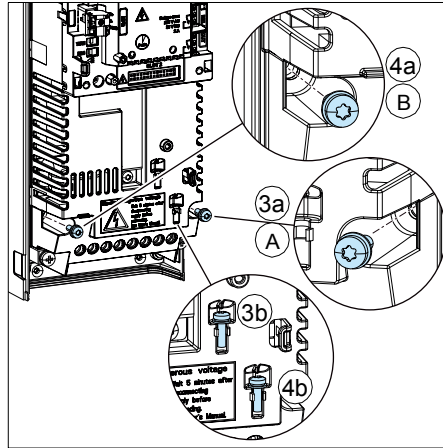

	Screw	Default material
A	EMC (DC)	Plastic
B	VAR	Metal

R3

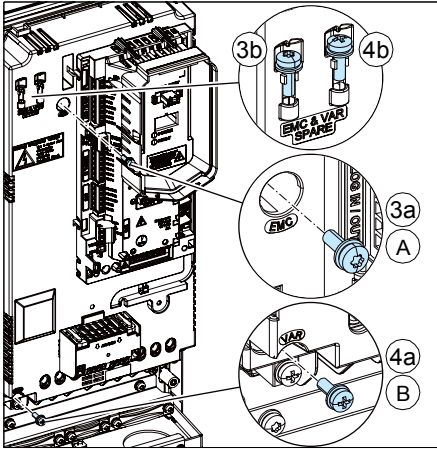


	Screw	Default material
A	EMC (DC)	Plastic
B	VAR	Metal

## ■ Frames R4...R9

To disconnect the internal EMC filter or ground-to-phase varistor, if needed, do as follows:


1. Switch off the power from the drive.
2. Open the cover, if not already opened. Frame R4: see page [113](#), frame R5: see page [120](#), frames R6...R9: see page [71](#).
3. To disconnect the internal EMC filters:  
The DC EMC filter is disconnected by default with a plastic screw (3a). To disconnect the AC EMC filter, replace the metal AC EMC screw (3b) with the plastic screw provided in the package.
4. To disconnect the ground-to-phase varistor, replace the metal varistor screw (4) with the plastic screw provided in the package.

### R4

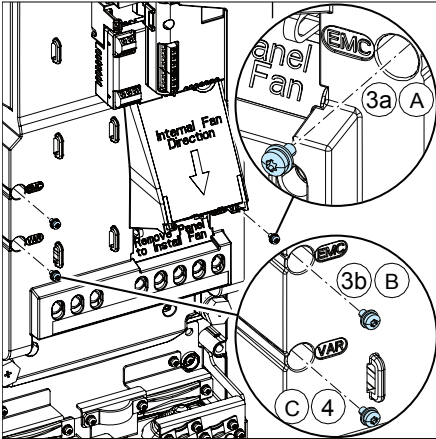


	Screw	Default material
A	EMC (DC)	Plastic
B	EMC (AC)	Metal
C	VAR	Metal

**R5**

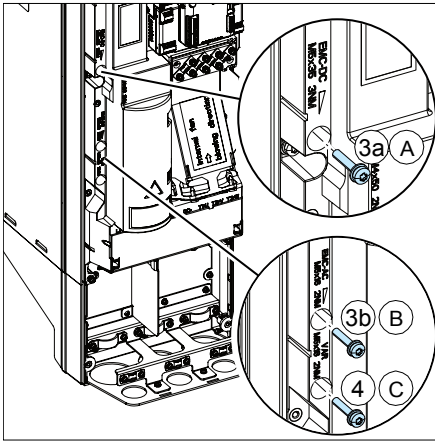

	Screw	Default material
A	EMC (DC)	Plastic
B	EMC (AC)	Metal
C	VAR	Metal


**R6...R9**

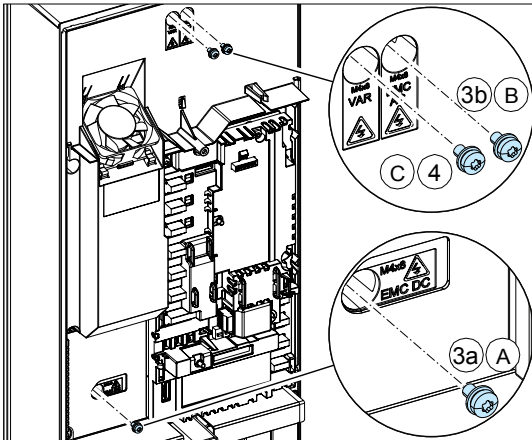

	Screw	Default material
A	EMC (DC)	Plastic
B	EMC (AC)	Metal
C	VAR	Metal

## Connecting the power cables


### ■ Connection diagram

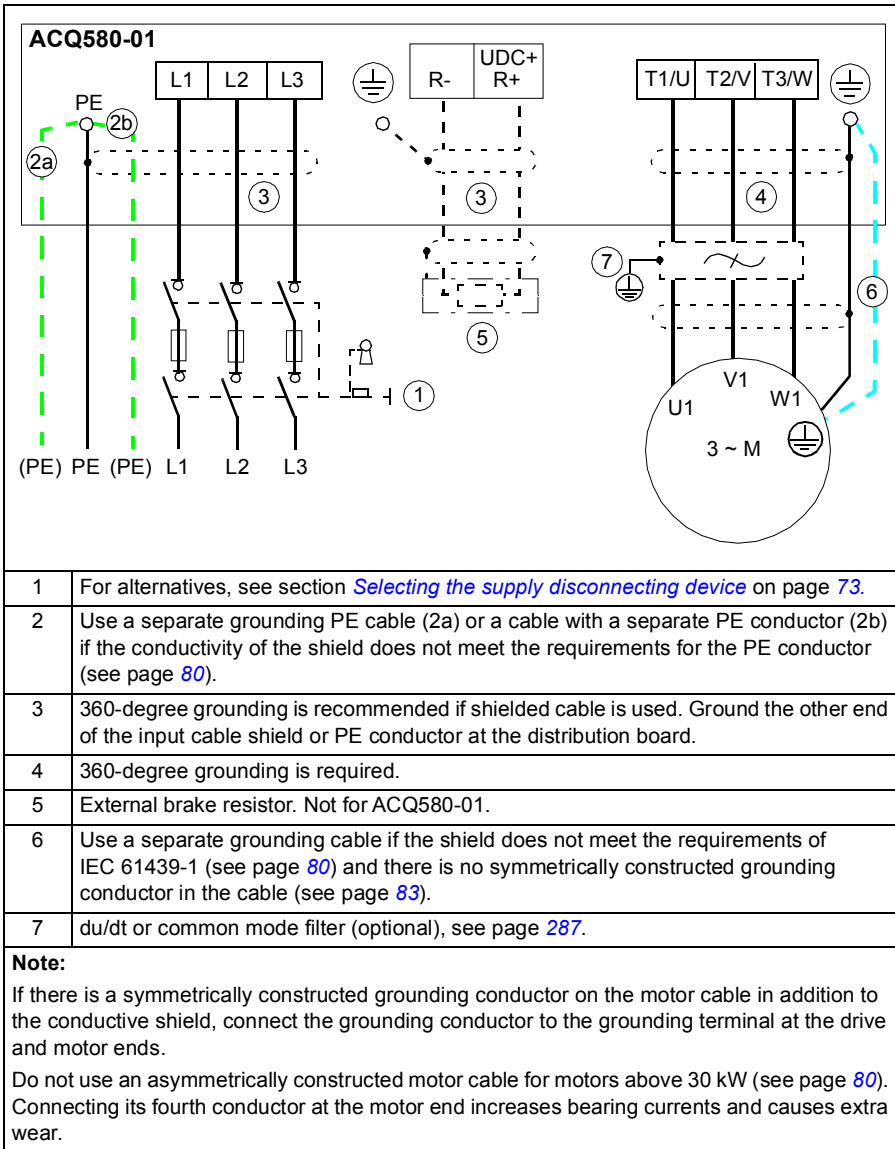


■ Connection procedure, frames R1...R4

1. Remove the front cover: Loosen the retaining screw with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).


IP21 (UL Type 1),  
R1...R2

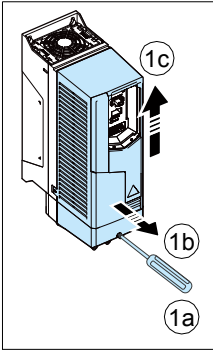


IP21 (UL Type 12),  
R3...R4

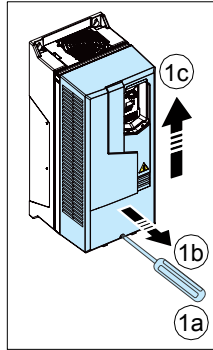

IP55 (UL Type 12),  
R1...R3

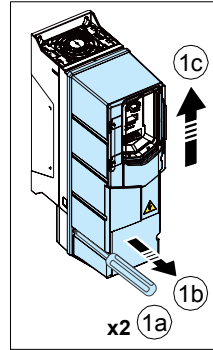


IP55 (UL Type 12),  
R4

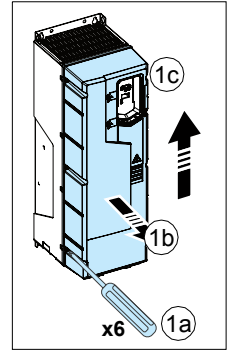


**⚠ WARNING!** If the drive will be connected on an IT (ungrounded) system, make sure you have disconnected the EMC filter and ground-to-phase varistor. See page 101. If the drive will be connected on a corner-grounded TN system, make sure you have disconnected the EMC filter. See page 101.

2. Attach the residual voltage warning sticker in the local language.


R1

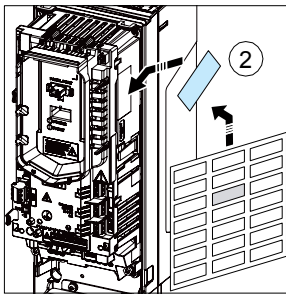

R2

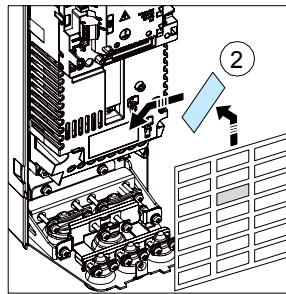


R3...R4

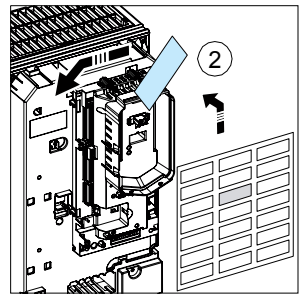

3. Remove the rubber grommets from the cable entry if they point up. (The grommets may point up or down when you open the package, depending on the frame size.)




R1...R3: The grommets point down and at this point you need to remove only the grommets for motor and input power cable. Remove the grommets for the control cables when you are connecting them.

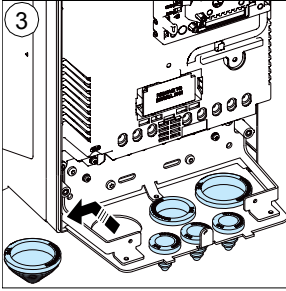




**Motor cable**

4. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
5. Prepare the ends of the cable as illustrated in the figure. In frames R1 and R2 there are markings on the drive frame near the power cable terminals helping you to strip the wires to the correct length of 8 mm. If you use aluminum cables, put grease to the peeled aluminum cable before connecting it to the drive. Two different motor cable types are shown in the figures (6a, 6b). **Note:** The bare shield will be grounded 360 degrees.

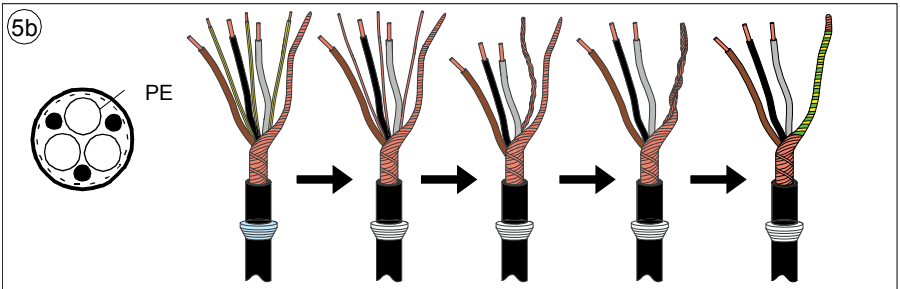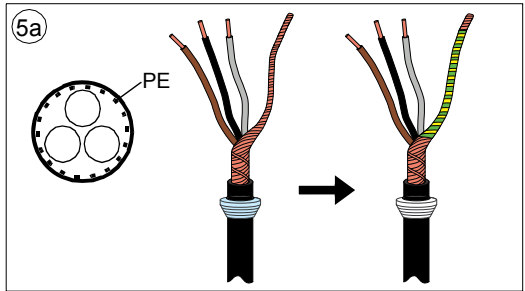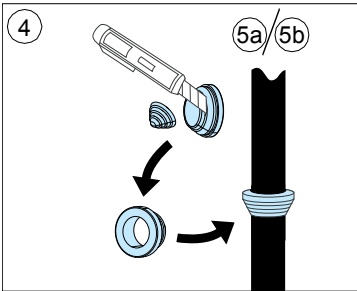


6. Slide the cable through the hole in the cable entry and attach the grommet to the hole.

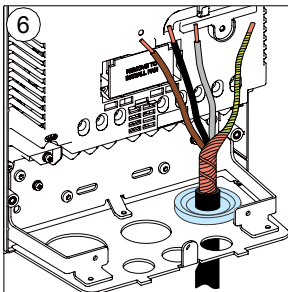


7. Connect the motor cable:

- Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable. (7a)
- Connect the twisted shield of the cable to the grounding terminal. (7b)
- Connect the phase conductors of the cable to the T1/U, T2/V and T3/W terminals. Tighten the screws to the torque given below the figure. (7c).


R1...R2

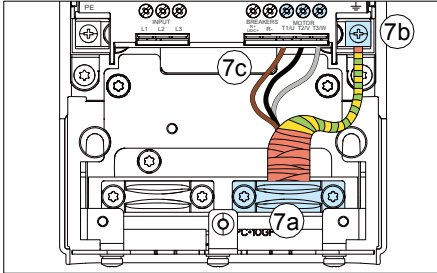

R3

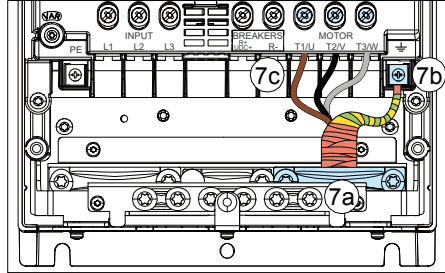

R4

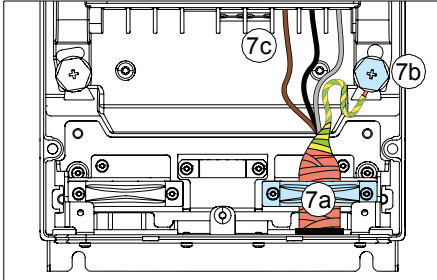


Frame size	R1		R2	
	N-m	lbf-ft	N-m	lbf-ft
T1/U, T2/V, T3/W	1.0	0.7	1.5	1.1
PE, ⊕	1.5	1.1	1.5	1.1
⊕	1.2	0.9	1.2	0.9

Frame size	R3		R4	
	N-m	lbf-ft	N-m	lbf-ft
T1/U, T2/V, T3/W	3.5	2.6	4.0	3.0
PE, ⊕	1.5	1.1	2.9	2.1
⊕	1.2	0.9	1.2	0.9

**Input power cable**

8. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
9. Prepare the ends of the cable as illustrated in the figure. If you use aluminum cables, put grease to the peeled aluminum cable before connecting it to the drive.  
**Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.


10. Slide the cable through the hole in the cable entry and attach the grommet to the hole.

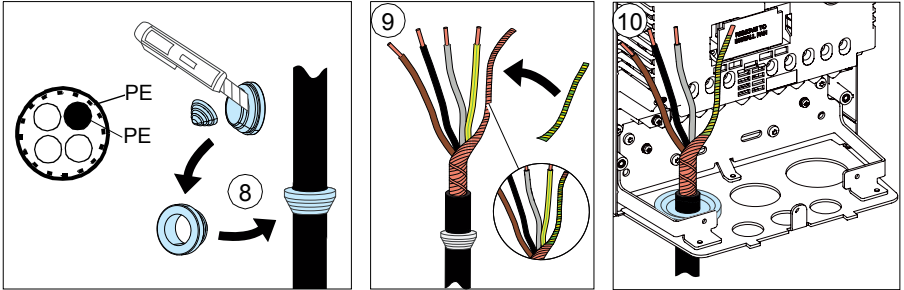


11. Connect the input power cable:

- Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable. (11a)
- Connect the twisted shield of the cable to the grounding terminal. (11b)
- Connect the additional PE conductor (see the note on page 18 in chapter *Safety instructions*) of the cable (11c).
- Connect the phase conductors of the cable to the L1, L2 and L3 terminals. Tighten the screws to the torque given below the figure. (11d).


R1...R2

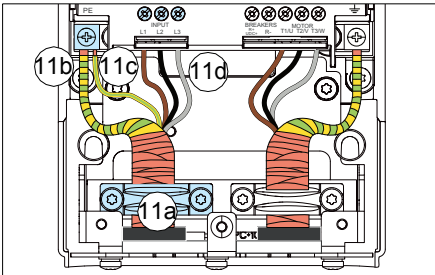

R3

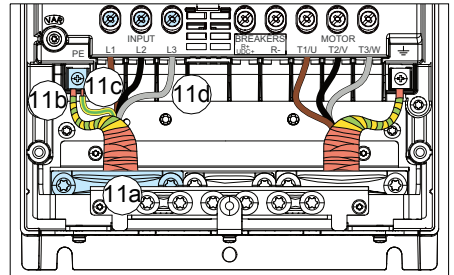

R4

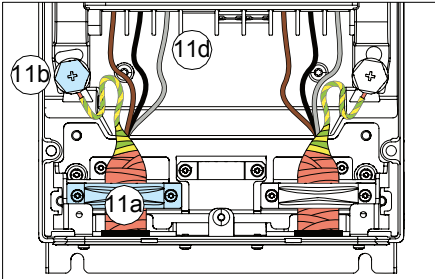


Frame size	R1		R2	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	1.0	0.7	1.5	1.1
PE, ⊕	1.5	1.1	1.5	1.1
⊕	1.2	0.9	1.2	0.9

Frame size	R3		R4	
	N·m	lbf·ft	N·m	lbf·ft
L1, L2, L3	3.5	2.6	4.0	3.0
PE, ⊕	1.5	1.1	2.9	2.1
⊕	1.2	0.9	1.2	0.9


## Grounding shelf

12. Frames R1...R2, R4: Install the grounding shelf (included with the mounting screws in a plastic bag in the delivery).

R1...R2

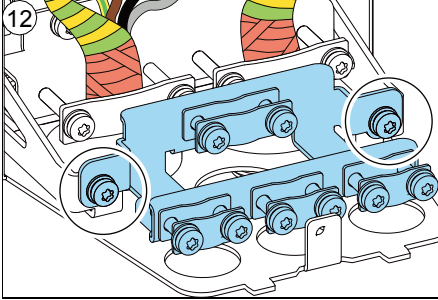

R4

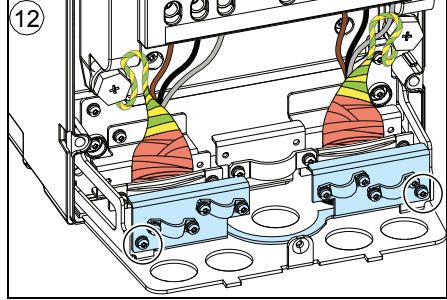

13. Not for ACQ580-01.


14. Not for ACQ580-01.

## Finalization


**Note:** Frame R1: You have to install any optional I/O extension module, if used, in options slot 2 at this point. See section [Installing option modules](#) on page 148.

15. Put the (so far) unused rubber grommets to the holes in the cable entry, unless you will continue with installing the control cables.


R1...R2

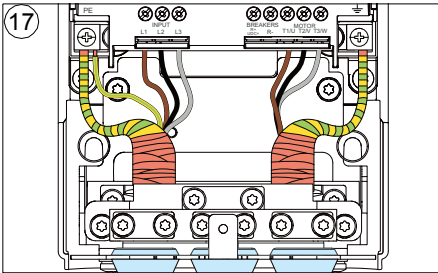

R3

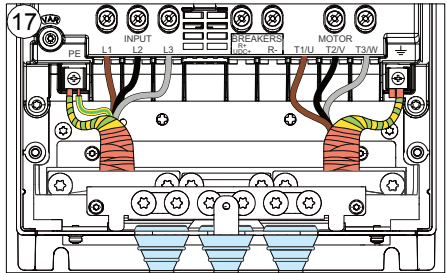


R4

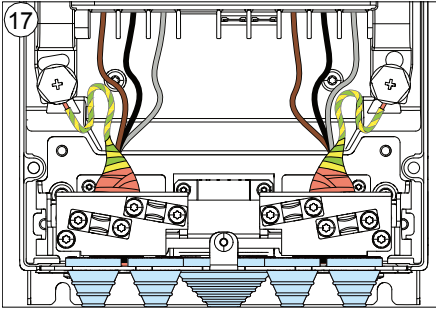

16. Secure the cables outside the unit mechanically.

17. Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.

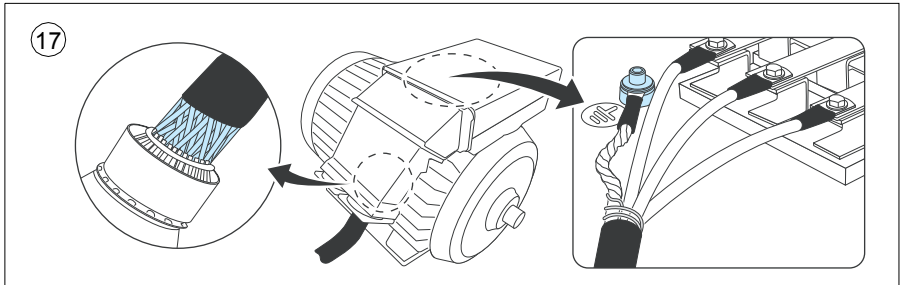

## ■ Connection procedure, frame R5


### IP21 (UL Type 1)

1. Remove the module cover: Loosen the retaining screws with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).  
Remove the box cover: Loosen the retaining screws with a screwdriver (1d) and slide the cover downwards (1e).


### IP55 (UL Type 12)

1. Remove the front cover: Loosen the retaining screws with a T20 Torx screwdriver (1a) and lift the cover from the bottom outwards (1b) and then up (1c).


IP21 (UL Type 1)

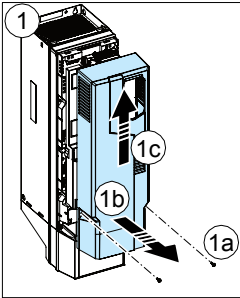

IP21 (UL Type 1)


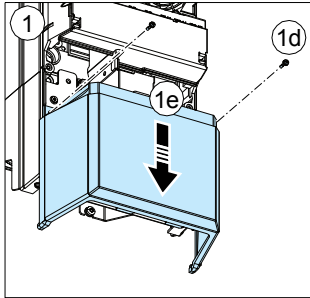


IP55 (UL Type 12)

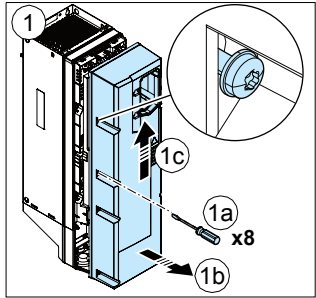

**WARNING!** If the drive will be connected on an IT (ungrounded) system, make sure you have disconnected the EMC filter and ground-to-phase varistor. See page [101](#). If the drive will be connected on a corner-grounded TN system, make sure you have disconnected the EMC filter. See page [101](#).



2. Attach the residual voltage warning sticker in the local language next to the control board.
3. Remove the shroud on the power cable terminals by releasing the clips with a screwdriver (3a) and pulling the shroud out (3b).

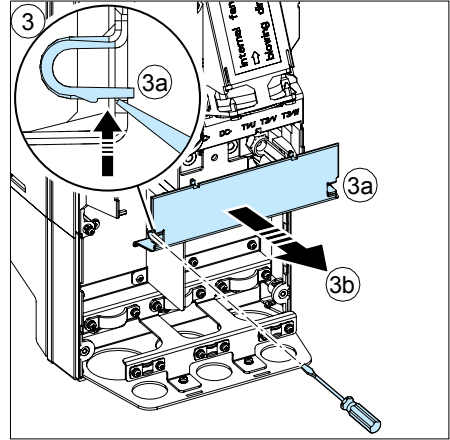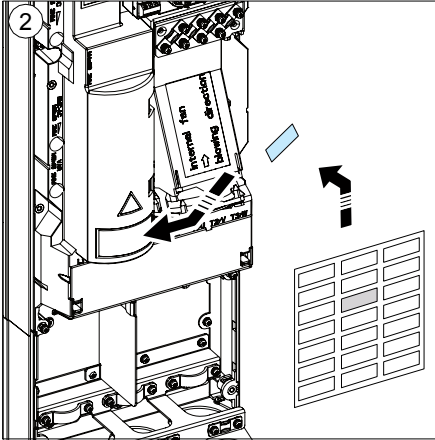

### Motor cable



Use symmetrical shielded cable for motor cabling. If the cable shield is the sole PE conductor for drive or motor, make sure that it has sufficient conductivity for the PE.

4. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
5. Prepare the ends of the motor cable as illustrated in figures 5a and 5b (two different motor cable types are shown). If you use aluminum cables, put grease to the peeled aluminum cable before connecting it to the drive. **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.

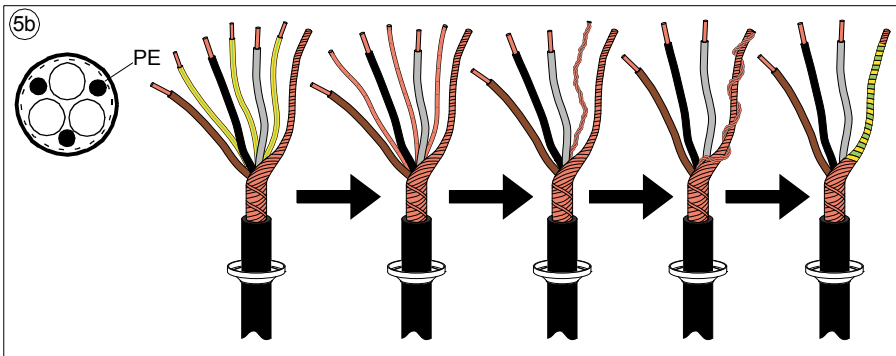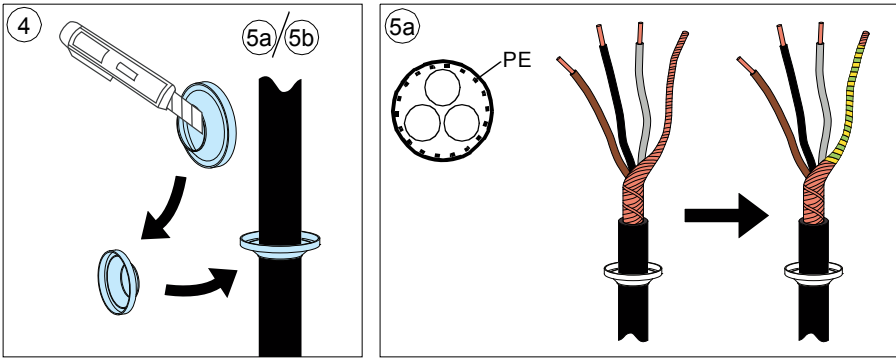




6. Slide the cable through the hole of the bottom plate and attach the grommet to the hole.
7. Connect the motor cable:
  - Ground the shield 360 degrees by tightening the clamp of the power cable grounding shelf onto the stripped part of the cable (7a).
  - Connect the twisted shield of the cable to the grounding terminal (7b).
  - Connect the phase conductors of the cable to the T1/U, T2/V and T3/W terminals (7c). Tighten the screws to the torque given in the figure.

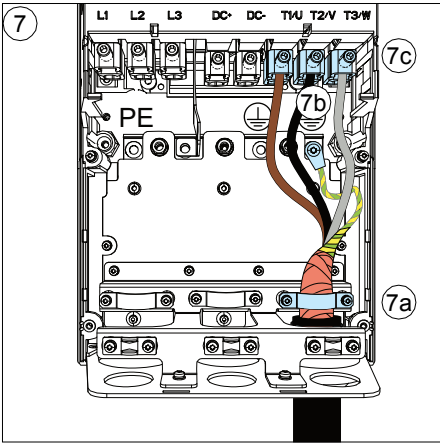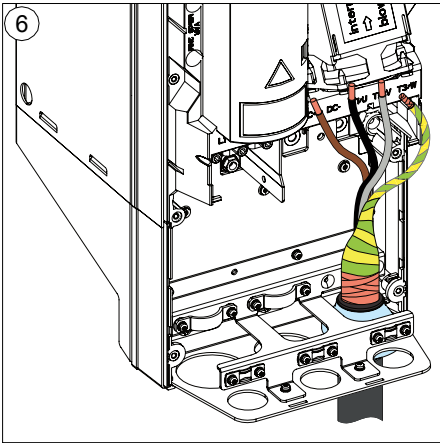

Frame size	T1/U, T2/V, T3/W		PE, $\perp$				
	N·m	lbf·ft	M	N·m	lbf·ft	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1.6	1.2	0.9


### Input power cable

8. Repeat steps 4...6 for the input power cable.

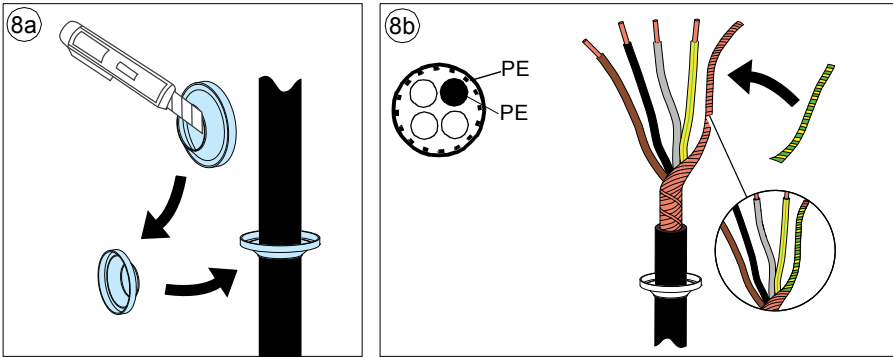


9. Connect the input power cable. Tighten the screws to the torque given in the figure.

10. Install the cable box plate. Position the plate and tighten the screw.

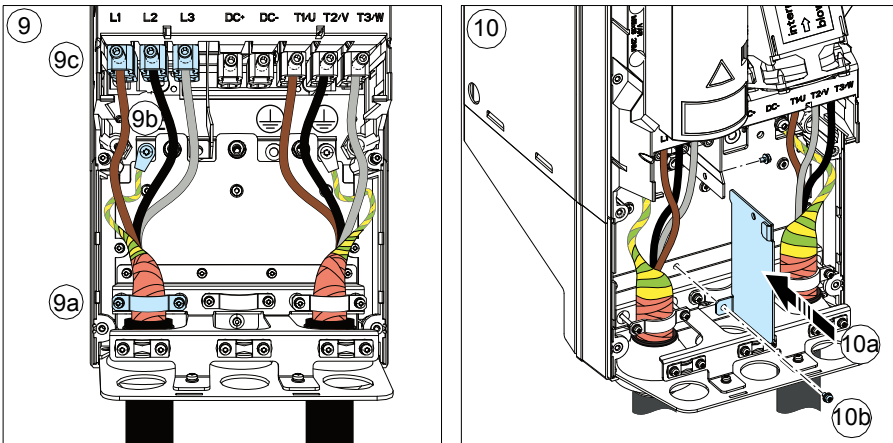


Frame size	L1, L2, L3		PE, $\perp$				
	N·m	lbf·ft	M	N·m	lbf·ft	N·m	lbf·ft
R5	5.6	4.1	M5	2.2	1.6	1.2	0.9

11. Reinstall the shroud on the power terminals by putting the tabs at the top of the shroud in their counterparts on the drive frame and then pressing the shroud in place.

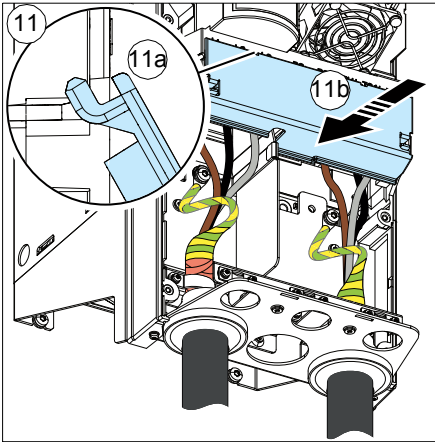

### Finalization


12. Secure the cables outside the unit mechanically.
13. Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.

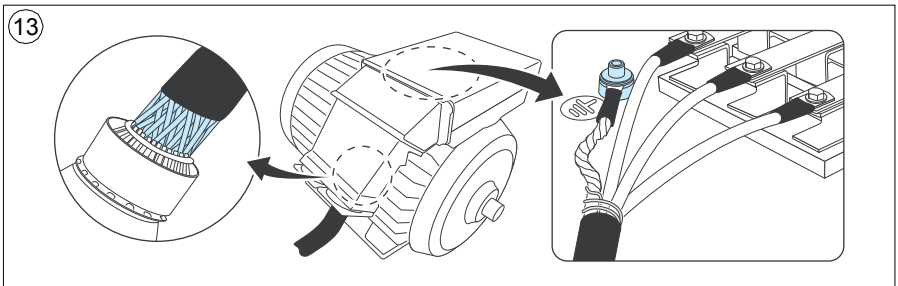


## ■ Connection procedure, frames R6...R9

**⚠ WARNING!** If the drive will be connected on an IT (ungrounded) system, make sure you have disconnected the EMC filter and ground-to-phase varistor. See page 101. If the drive will be connected on a corner-grounded TN system, make sure you have disconnected the EMC filter. See page 101.

1. Attach the residual voltage warning sticker in the local language next to the control board.
2. Remove the side plates of the cable box: Remove the retaining screws and slide the walls out.

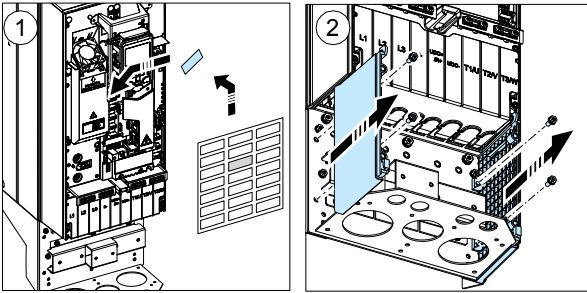


3. Remove the shroud on the power cable terminals by releasing the clips with a screwdriver and pulling the shroud out.
4. Knock out holes in the shroud for the cables to be installed.
5. Frames R8...R9: If you install parallel cables, also knock out holes in the lower shroud for the cables to be installed.

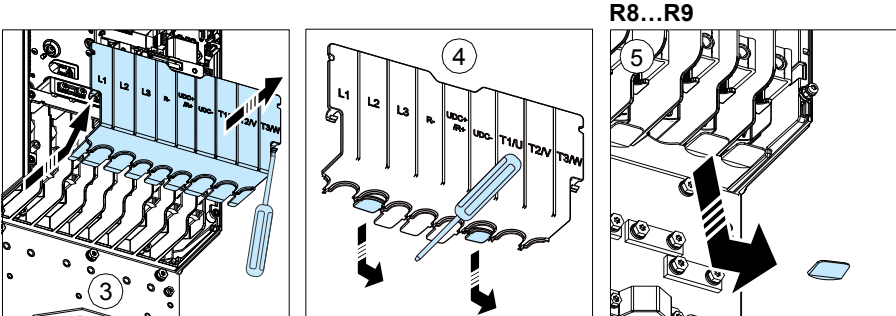

**R8...R9**

## Motor cable

6. Cut an adequate hole into the rubber grommet. Slide the grommet onto the cable.
7. Prepare the ends of the input power cable and motor cable as illustrated in the figure. If you use aluminum cables, put grease to the peeled aluminum cable before connecting it to the drive. Two different motor cable types are shown in the figures (7a, 7b). **Note:** The bare shield will be grounded 360 degrees. Mark the pigtail made from the shield as a PE conductor with yellow-and-green color.

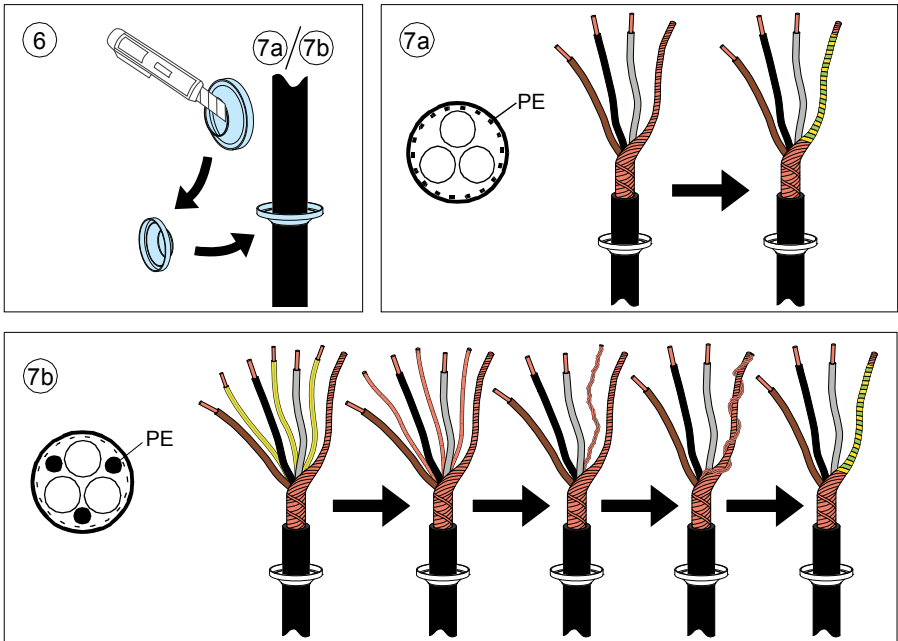


8. Slide the cables through the holes in the cable entry and attach the grommets to the holes (the motor cable to the right and the input power cable to the left).
9. Connect the motor cable:
  - Ground the shield 360 degrees under the grounding clamps.
  - Connect the twisted shield of the cable to the grounding terminal (9a).
  - Connect the phase conductors of the cable to terminals T1/U, T2/V and T3/W. Tighten the screws to the torque given in the figure (9b).

**Note 1 for frames R8...R9:** If you connect only one conductor to the connector, we recommend that you put it under the upper pressure plate.

**Note 2 for frames R8...R9:** The connectors are detachable but we do not recommend that you detach them. If you do, detach and reinstall the connectors as follows.

## Input power cable

10. Connect the input power cable as in step 9. Use terminals L1, L2 and L3.

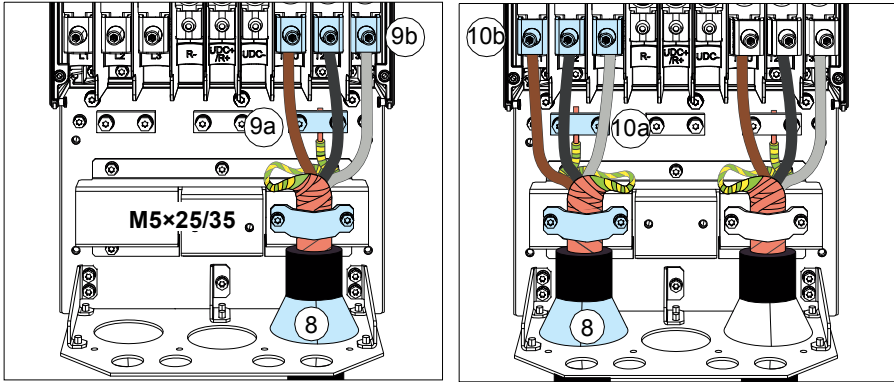

Frame size	L1, L2, L3, T1/U, T2/V, T3/W		PE,			
	N·m	lbf·ft	N·m	N·m	N·m	lbf·ft
R6	30	22.1	9.8	7.2	1.2	0.9
R7	40	29.5	9.8	7.2	1.2	0.9
R8	40	29.5	9.8	7.2	1.2	0.9
R9	70	51.6	9.8	7.2	1.2	0.9

### Terminals T1/U, T2/V and T3/W

- Remove the nut that attaches the connector to its busbar.
- Put the conductor under the connector pressure plate and pre-tighten the conductor.
- Put the connector back to its busbar. Start the nut, and turn it at least two rotations by hand.



**WARNING!** Before using tools, make sure that the nut/screw is not cross-threading. Cross-threading will damage the drive and cause danger.

- Tighten the nut to a torque of 30 N·m (22 lbf·ft).
- Tighten the conductor(s) to 40 N·m (30 lbf·ft) for frame R8 or to 70 N·m (52 lbf·ft) for frame R9.

Terminals L1, L2 and L3



- Remove the combi screw that attaches the connector to its terminal post, and pull the connector off.
- Put the conductor under the connector pressure plate and pre-tighten the conductor.
- Put the connector back onto the terminal post. Start the combi screw, and turn it at least two rotations by hand.



**WARNING!** Before using tools, make sure that the nut/screw is not cross-threading. Cross-threading will damage the drive and cause danger.

- Tighten the combi screw to a torque of 30 N·m (22 lbf·ft).
- Tighten the conductor(s) to 40 N·m (30 lbf·ft) for frame R8 or to 70 N·m (52 lbf·ft) for frame R9.



11. Frames R8...R9: If you install parallel cables, install the second grounding shelf for the parallel power cables (11a). Repeat steps 6...11 (11b).

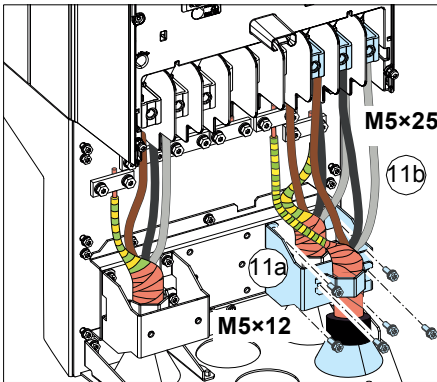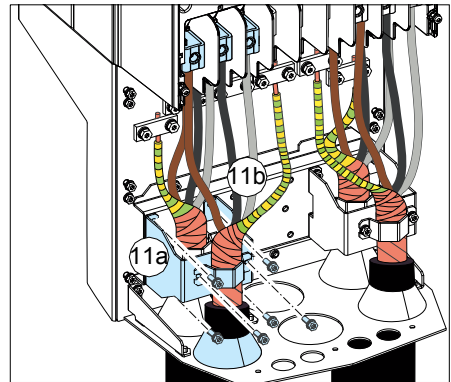**R8...R9****R8...R9**


12. Install the grounding shelf of the control cables.

13. Reinstall the shroud on the power terminals.

14. Secure the cables outside the unit mechanically.

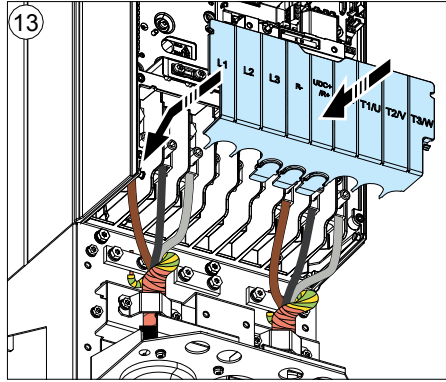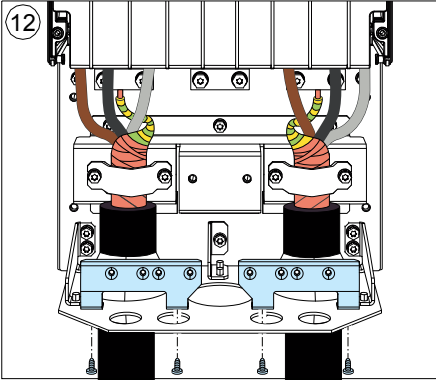

15. Ground the motor cable shield at the motor end. For minimum radio frequency interference, ground the motor cable shield 360 degrees at the cable entry of the motor terminal box.

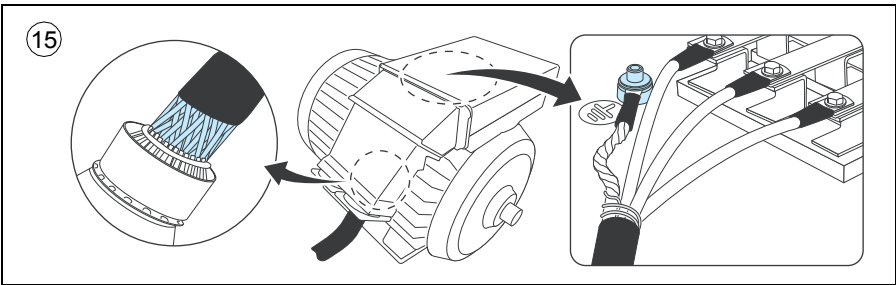

## DC connection

The UDC+ and UDC- terminals (as standard in frames R4...R9) are for using external brake chopper units.



## Connecting the control cables


See section [Default I/O connection diagram \(Water default configuration\)](#) on page [132](#) for the default I/O connections of the Water default configuration.

Connect the cables as described under [Control cable connection procedure R1...R9](#) on page [142](#).

---

■ Default I/O connection diagram (Water default configuration)

R1...R5

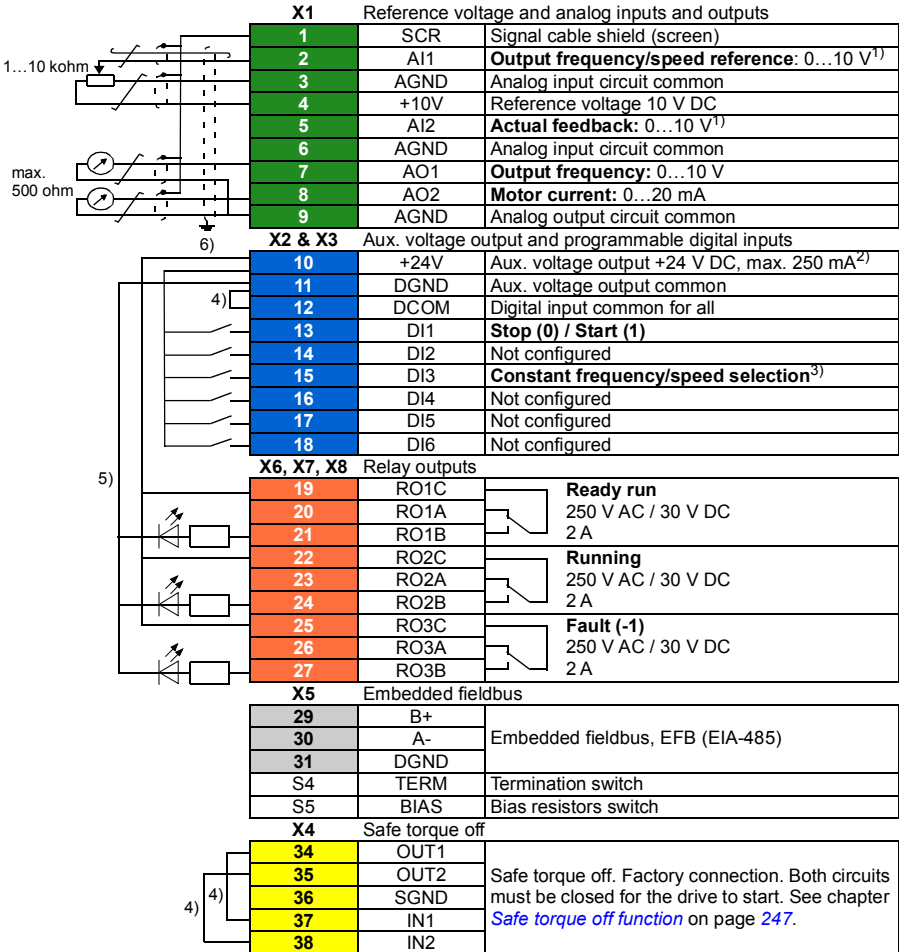

See the notes on page 133.

Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).


Wire sizes:

0.2...2.5 mm<sup>2</sup> (24...14 AWG): Terminals +24V, DGND, DCOM, B+, A-, DGND, Ext. 24V

0.14...1.5 mm<sup>2</sup> (26...16 AWG): Terminals DI, AI, AO, AGND, RO, STO

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)

R6...R9

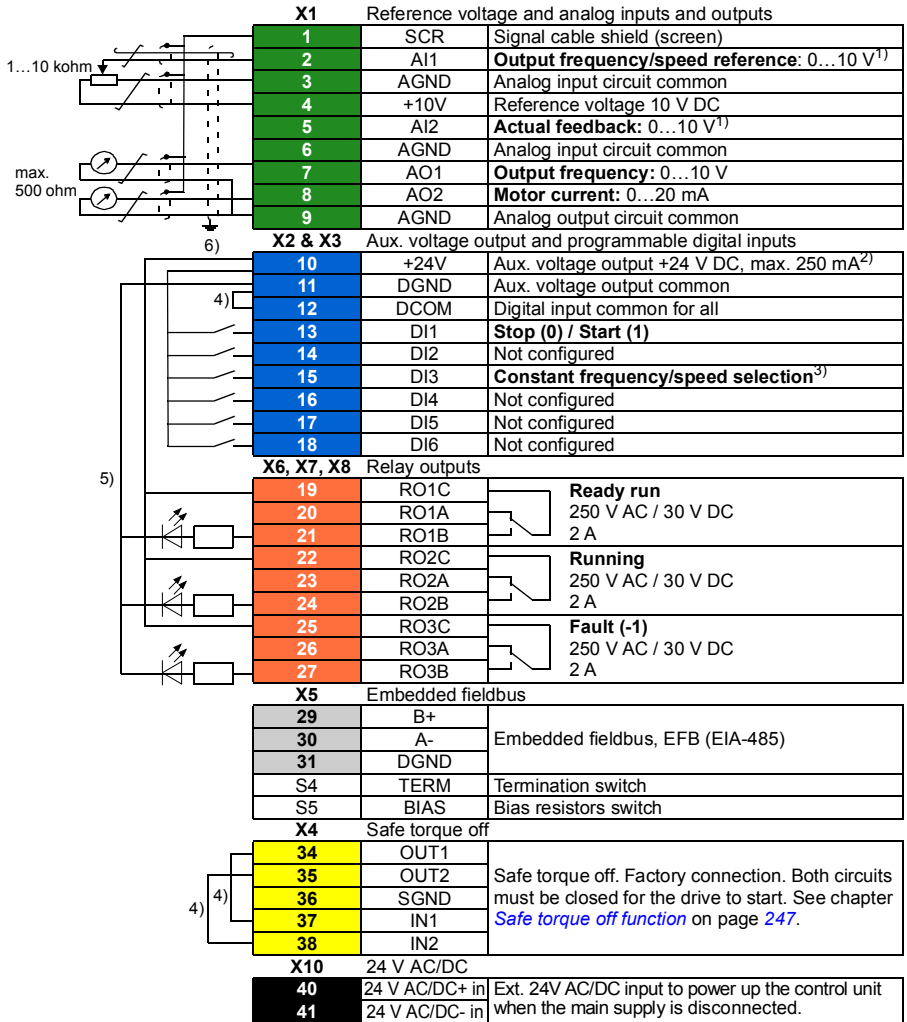

See the notes on page 133.

Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V DC).

Wire sizes: 0.14...2.5 mm<sup>2</sup> (26...16 AWG): All terminals

Tightening torques: 0.5...0.6 N·m (0.4 lbf·ft)





**Notes:**

- 1) Current [0(4)...20 mA,  $R_{in} = 100 \text{ ohm}$ ] or voltage [ 0(2)...10 V,  $R_{in} > 200 \text{ kohm}$ ]. Change of setting requires changing the corresponding parameter.
- 2) Total load capacity of the Auxiliary voltage output +24V (X2:10) is 6.0 W (250 mA / 24 V) minus the power taken by the option modules installed on the board.
- 3) In scalar control: See **Menu > Primary settings > Start, stop, reference > Constant speeds / constant frequencies** or parameter group 28 Frequency reference chain.  
In vector control: See **Menu > Primary setting > Start, stop, reference > Constant speeds / constant frequencies** or parameter group 22 Speed reference selection.
- 4) Connected with jumpers at the factory.
- 5) Use shielded twisted-pair cables for digital signals.
- 6) Ground the outer shield of the cable 360 degrees under the grounding clamp on the grounding shelf for the control cables.

Further information on the usage of the connectors and switches is given in the sections below. See also section [Control connection data](#) on page 208.


---

## Switches

Switch	Description	Position	
<b>S4</b> <b>(TERM)</b>	EFB link termination. Must be set to the terminated (ON) position when the drive is the first or last unit on the link.	ON  TERM	Bus not terminated <b>(default)</b>
		ON  TERM	Bus terminated
<b>S5</b> <b>(BIAS)</b>	Switches on the biasing voltages to the bus. One (and only one) device, preferably at the end of the bus must have the bias on.	ON  BIAS	Bias off <b>(default)</b>
		ON  BIAS	Bias on

### PNP configuration for digital inputs


Internal and external +24 V power supply connections for PNP configuration are shown in the figure below.

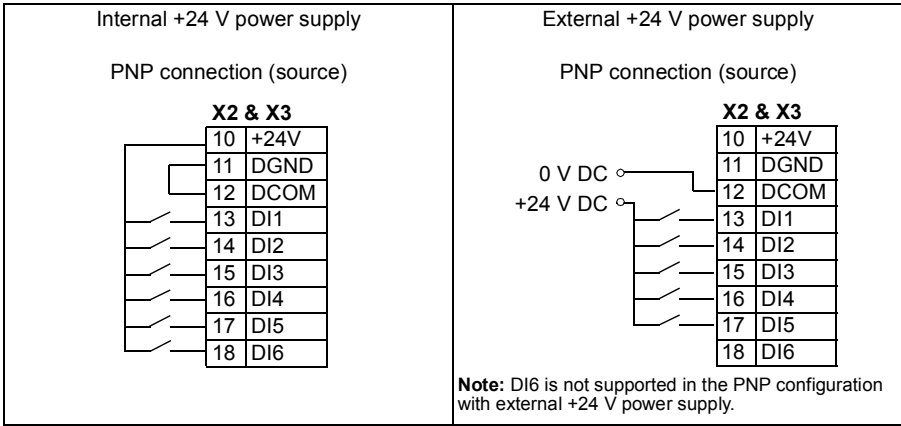

**WARNING!** Do not connect the +24 V AC cable to the control board ground when the control board is powered using an external 24 V AC supply.

### NPN configuration for digital inputs

Internal and external +24 V power supply connections for NPN configuration are shown in the figure below.

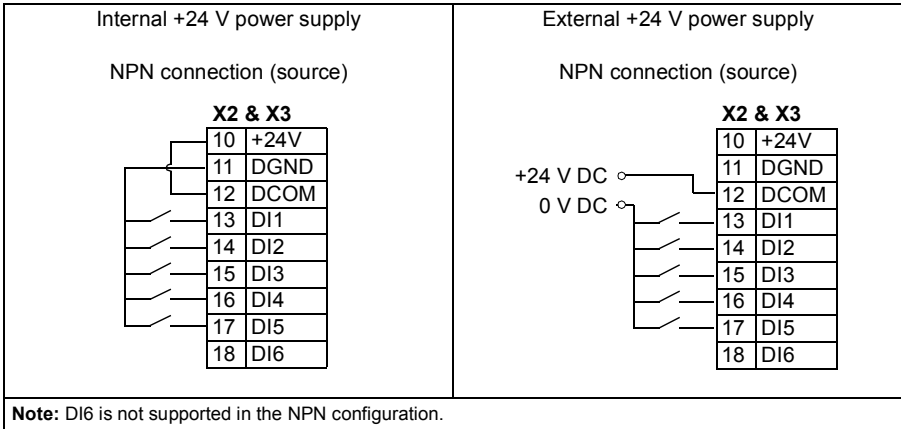




**WARNING!** Do not connect the +24 V AC cable to the control board ground when the control board is powered using an external 24 V AC supply.

---

### Connection for obtaining 0...10 V from analog output 2 (AO2)

To obtain 0...10 V from analog output AO2, connect a 500 ohm resistor (or two 1 kohm resistors in parallel) between the analog output 2 AO2 and analog common ground AGND.

Examples are shown in the figure below.

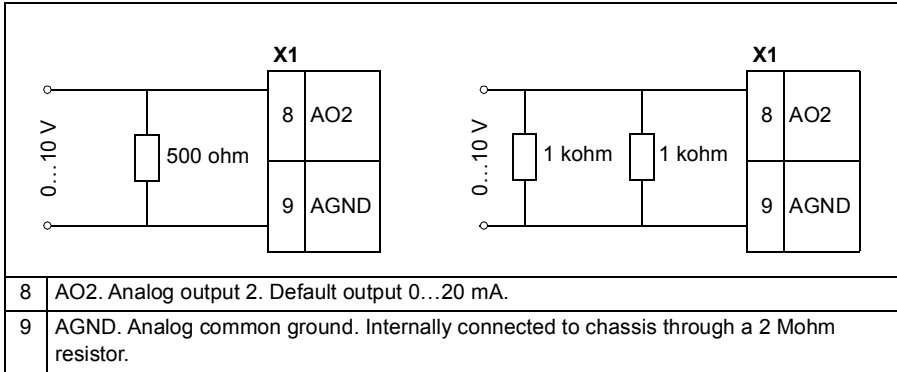




### Connection examples of two-wire and three-wire sensors


**Note:** Maximum capability of the auxiliary 24 V DC (250 mA) output must not be exceeded.

#### Two-wire sensor/transmitter

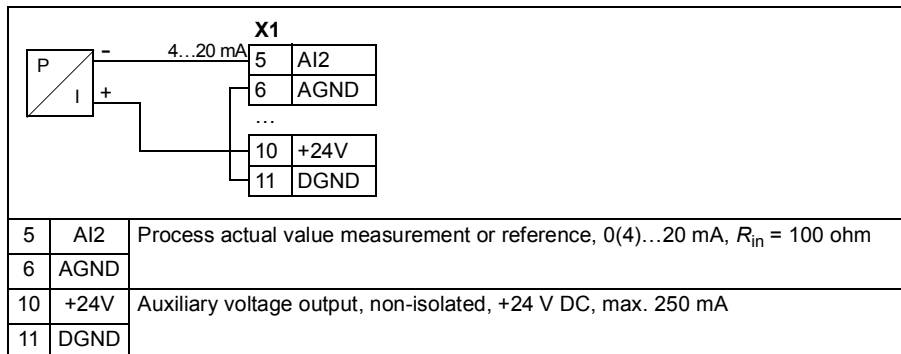

#### Three-wire sensor/transmitter

**Note:** The sensor is supplied through its current output and the drive feeds the supply voltage (+24 V DC). Thus the output signal must be 4...20 mA, not 0...20 mA.

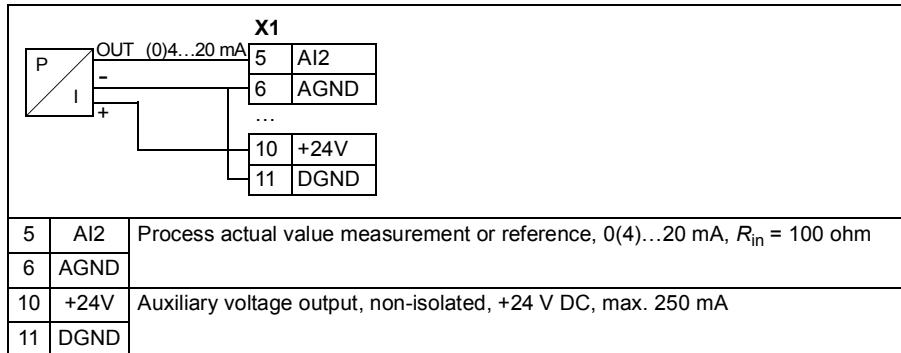


### DI5 as frequency input

For setting the parameters for the digital frequency input, see *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]).

### DI6 as PTC input


If DI6 is used as a PTC input, see *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]) for how to set parameters accordingly.

**Note:** If DI6 is used as PTC input, the wiring and the PTC sensor need to be double isolated. Otherwise the CMOD-02 I/O extension module must be used.

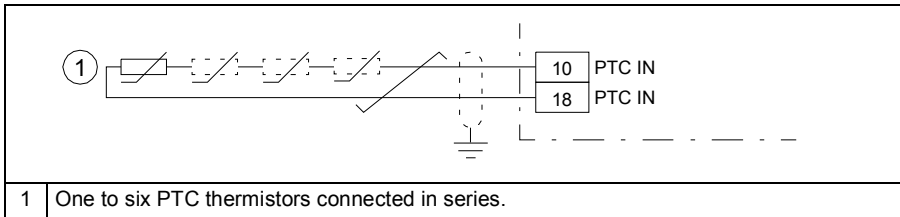

**AI1 and AI2 as Pt100, Pt1000, Ni1000, KTY83 and KTY84 sensor inputs (X1)**

One, two or three Pt100 sensors; one, two or three Pt1000 sensors; or one Ni1000, KTY83 or KTY84 sensor for motor temperature measurement can be connected between an analog input and output as shown below. Do not connect both ends of the cable shields directly to ground. If a capacitor cannot be used at one end, leave that end of the shield unconnected.

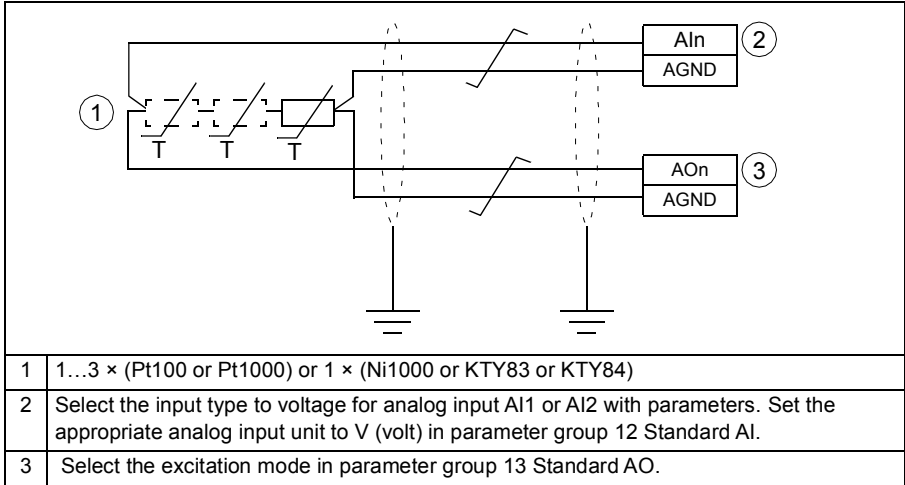

**WARNING!** As the inputs pictured above are not insulated according to IEC 60664, the connection of the motor temperature sensor requires double or reinforced insulation between motor live parts and the sensor. If the assembly does not fulfill the requirement, the I/O board terminals must be protected against contact and must not be connected to other equipment or the temperature sensor must be isolated from the I/O terminals.

**Safe torque off (X4)**

For the drive to start, both connections (+24 V DC to IN1 and +24 V DC to IN2) must be closed. By default, the terminal block has jumpers to close the circuit. Remove the jumpers before connecting an external Safe torque off circuitry to the drive. See chapter [Safe torque off function](#) on page 247.

**Note:** Only 24 V DC can be used for STO. Only PNP input configuration can be used.

## ■ Control cable connection procedure R1...R9



**WARNING!** Obey the instructions in chapter *Safety instructions* on page 13. If you ignore them, injury or death, or damage to the equipment can occur.

---

1. Stop the drive and do the steps in section *Precautions before electrical work* on page 16 before you start the work.
2. Remove the front cover(s) if not already removed. See page 113 (R1...R4), page 120 (R5) or page 71 (R6...R9).

### Analog signals

The figures for frames R1...R2 and R3 (page 144), R4 (page 145), R5 (page 146) and R6...R9 (page 147) show an example of connecting a cable. Make the connections according to the default configuration.

3. Cut an adequate hole into the rubber grommet and slide the grommet onto the cable. Slide the cable through a hole in the cable entry and attach the grommet to the hole.
4. Ground the outer shield of the cable 360 degrees under the grounding clamp. Keep the cable unstripped as close to the terminals of the control board as possible.  
Frames R5...R9: Secure the cables mechanically at the clamps below the control board.  
Ground also the pair-cable shields and grounding wire at the SCR terminal.
5. Route the cable as shown in the figures on pages 144 (R1...R2 and R3), 145 (R4), 146 (R5) or 147 (R6...R9).
6. Connect the conductors to the appropriate terminals of the control board and tighten to 0.5...0.6 N·m (0.4 lbf·ft).

### Digital signals

The figures for frames R1...R2 and R3 (page 144), R4 (page 145), R5 (page 146) and R6...R9 (page 147) show an example of connecting a cable. Make the connections according to the default configuration.


7. Cut an adequate hole into the rubber grommet and slide the grommet onto the cable. Slide the cable through the hole in the cable entry and attach the grommet to the hole.
  8. Ground the outer shield of the cable 360 degrees under the grounding clamp. Keep the cable unstripped as close to the terminals of the control board as possible.  
Frames R5...R9: Secure the cables mechanically at the clamps below the control board.  
If you use double-shielded cables, ground also the pair-cable shields and grounding wire at the SCR terminal.
-

9. Route the cable as shown in the figures on pages 144 (R1...R2 and R3), 145 (R4), 146 (R5) or 147 (R6...R9).
10. Connect the conductors to the appropriate terminals of the control board and tighten to 0.5...0.6 N·m (0.4 lbf·ft).
11. Tie all control cables to the provided cable tie mounts.

**Note:**


- Leave the other ends of the control cable shields unconnected or ground them indirectly via a high-frequency capacitor with a few nanofarads, eg, 3.3 nF / 630 V. The shield can also be grounded directly at both ends if they are *in the same ground line* with no significant voltage drop between the end points.
  - Keep any signal wire pairs twisted as close to the terminals as possible. Twisting the wire with its return wire reduces disturbances caused by inductive coupling.
-

R1...R2

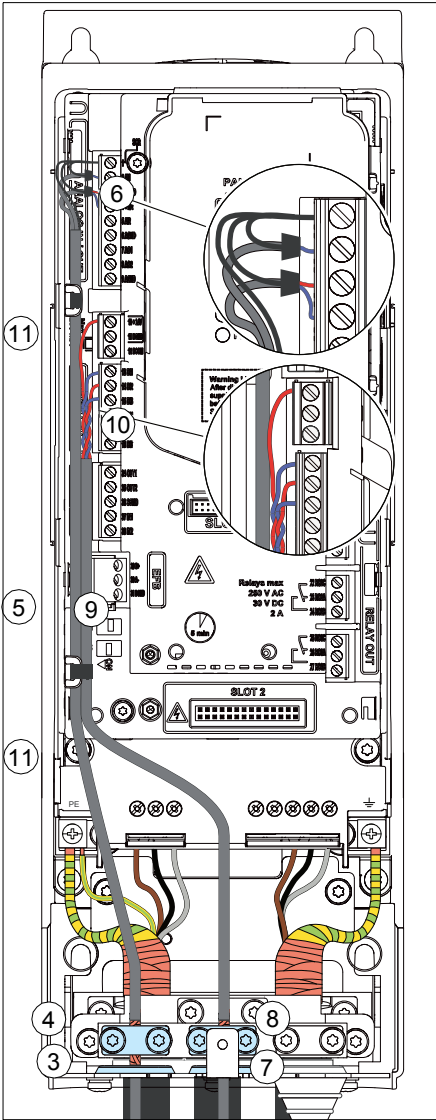


R1...R2: 0.5...0.6 N·m (0.4 lbf·ft)

R3

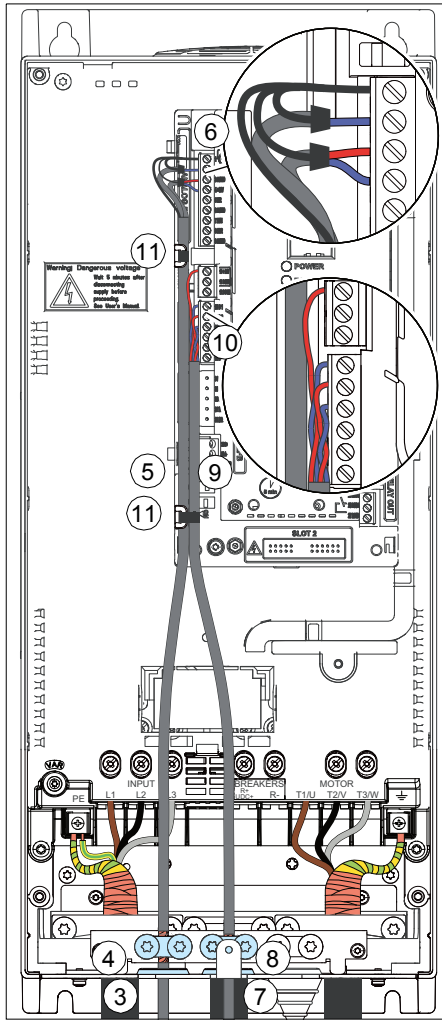


R3: 0.5...0.6 N·m (0.4 lbf·ft)

R4

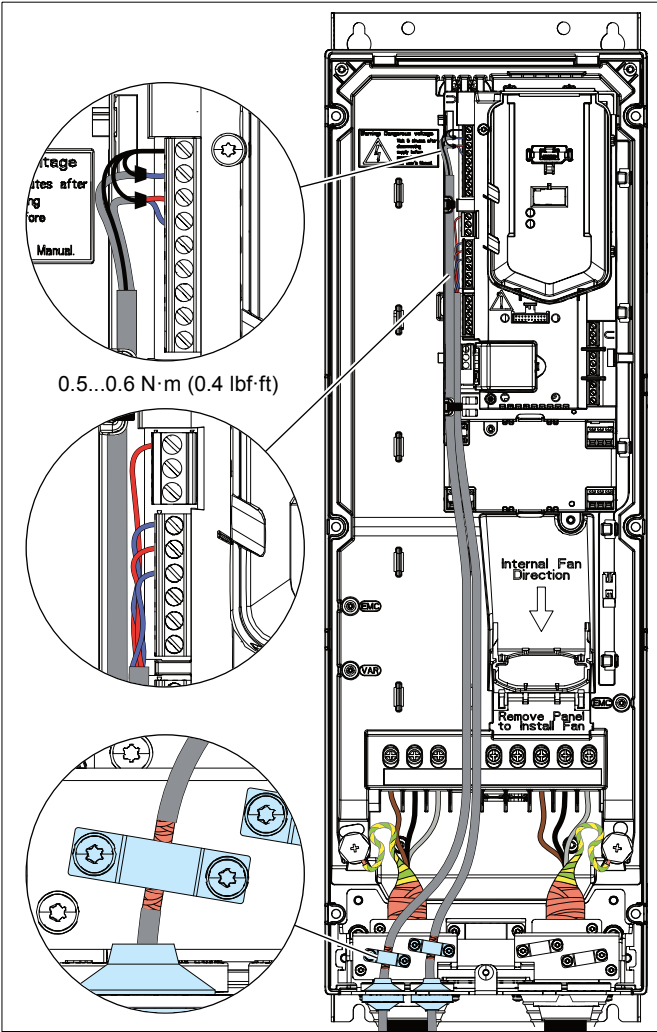


R5

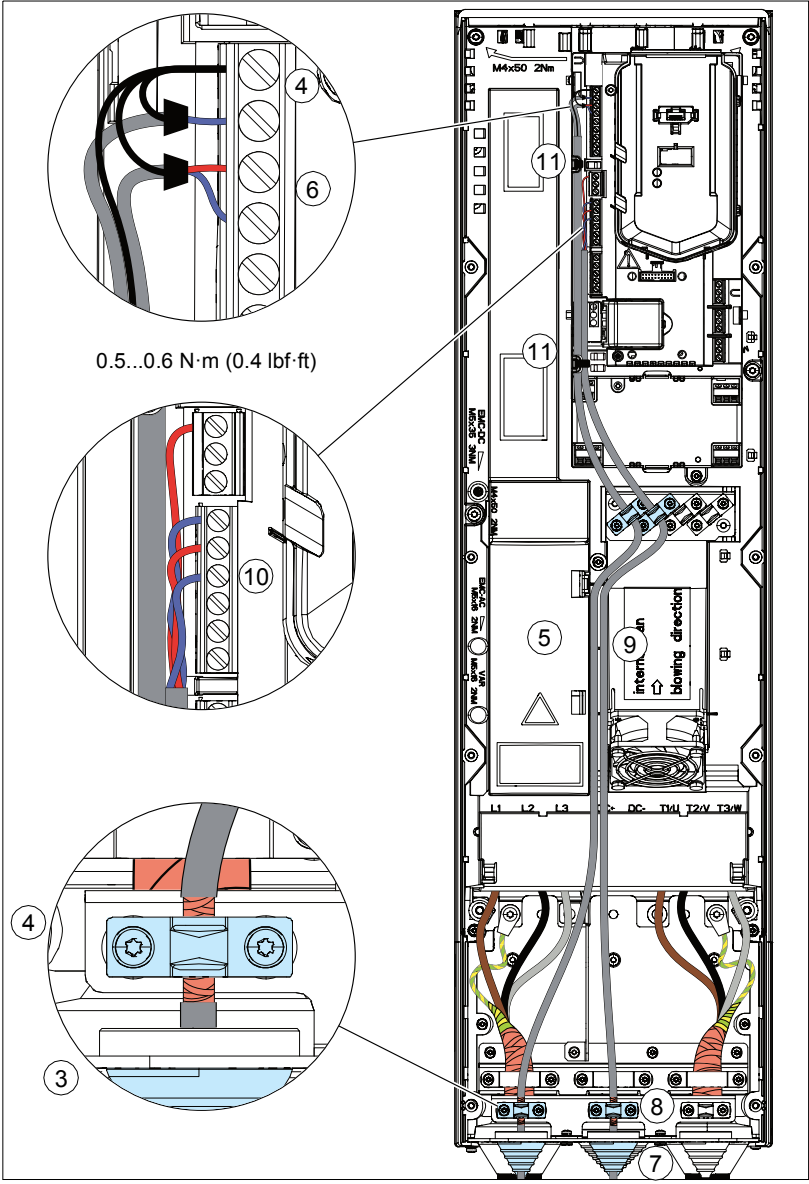




**R6...R9**



0.5...0.6  
N·m

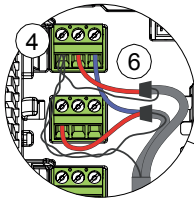

0.5...0.6 N·m  
(0.4 lbf·ft)

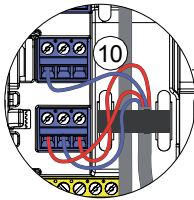

M4×20

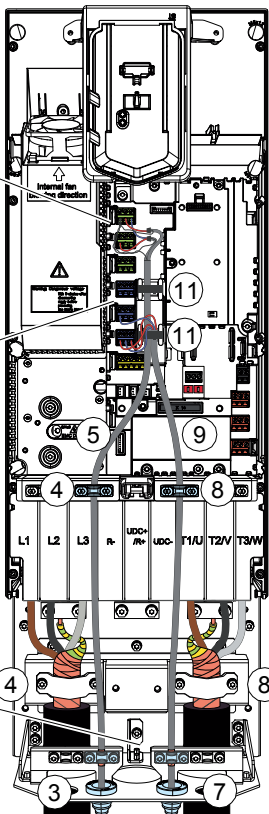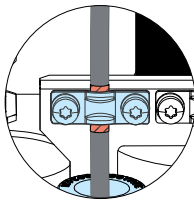

## Installing option modules

**Note:** In US deliveries, options may be ordered as factory installed.

**Note:** If you will install the FPBA-01 module, see section [FPBA-01 PROFIBUS DP adapter module connectors](#) on page 85 for suitable connector types.

### ■ Mechanical installation of option modules

See section [Overview of power and control connections](#) page 39 for the available slots for each module. Install the option modules as follows:



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. If you ignore them, injury or death, or damage to the equipment can occur.

**Note:** Slot 2 in frames R1...R5 is at  $U_{DC}$  potential. You must disconnect power supplies before installing or removing an I/O extension module.

---

Stop the drive and do the steps in section [Precautions before electrical work](#) on page 16 before you start the work.

1. Remove the front cover(s) if not already removed. See page 113 (R1...R4), page 120 (R5) or page 71 (R6...R9).

The figures for frames R1...R5 (page 149) and R6...R9 (page 150) show an example of installing option modules.

#### Option slot 2 (I/O extension modules)


2. Frame R1 only: Install the option mounting.
3. Put the module carefully into its position on the control board.
4. Tighten the mounting screw.
5. Tighten the grounding screw (CHASSIS). **Note:** The screw grounds the module. It is necessary for fulfilling the EMC requirements and for proper operation of the module.

**Note:** Frame R1: The module in option slot 2 covers the power terminals. Do not install a module in option slot 2 before you have installed the power cables.


#### Option slot 1 (fieldbus adapter modules)

6. Put the module carefully into its position on the control board.
  7. Tighten the mounting screw (CHASSIS). **Note:** The screw tightens the connections and grounds the module. It is necessary for fulfilling the EMC requirements and for proper operation of the module.
-


R1...R2

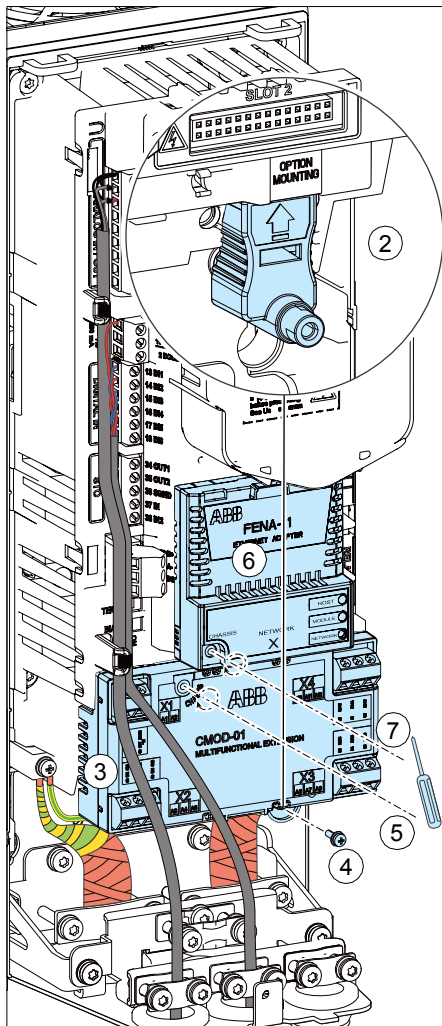

R3...R5

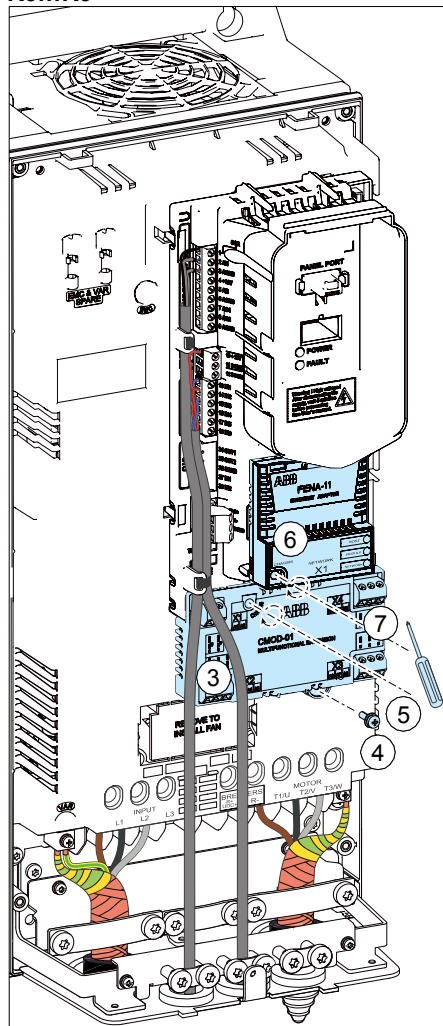

R6...R9

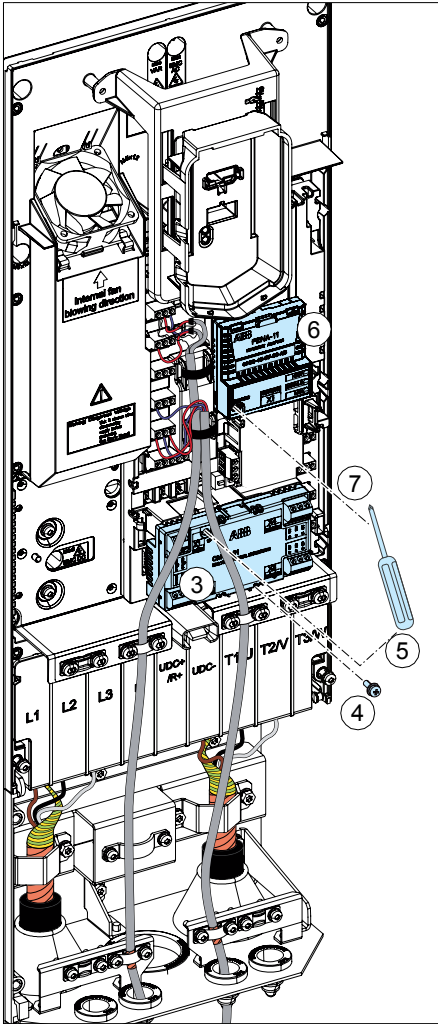

■ Wiring the modules


See the appropriate option module manual for specific installation and wiring instructions.

## Reinstalling covers


### ■ Reinstalling cover, frames R1...R4

1. Reinstall the cover: Put the tabs on the cover top in their counterparts on the housing (1a) and then press the cover (1b).
2. Tighten the retaining screw at the bottom with a T20 Torx screwdriver.


IP21 (UL Type 1) R1...R2

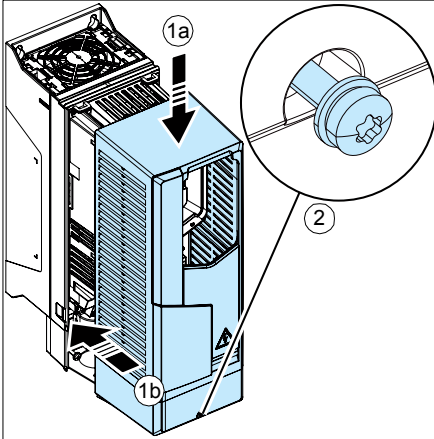


IP21 (UL Type 1) R3...R4

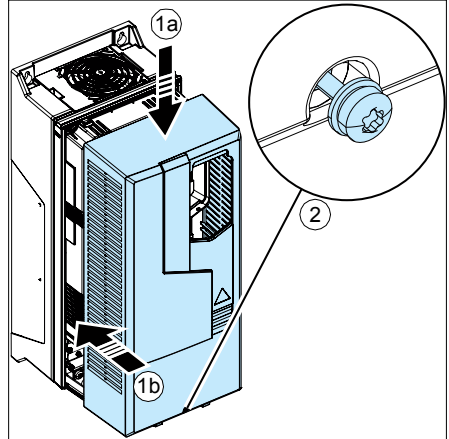

IP55 (UL Type 12) R1...R3

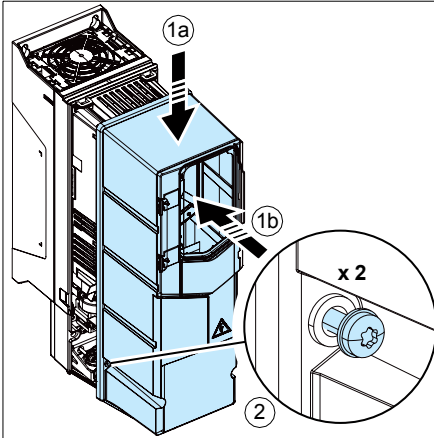

IP55 (UL Type 12) R4

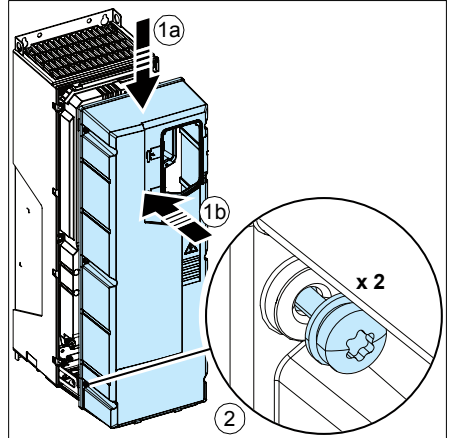

## ■ Reinstalling covers, frame R5


### IP21 (UL Type 1)

1. Reinstall the box cover: Slide the cover upwards (1a) and tighten the retaining screws (1b) with a T20 Torx screwdriver.
2. Reinstall the module cover: Press the cover at the bottom (2a) and tighten the retaining screws (2b).


### IP55 (UL Type 12)

1. Reinstall the front cover: Press the cover at the bottom (1a) and tighten the retaining screws (1b) with a T20 Torx screwdriver.


#### IP21 (UL Type 1)

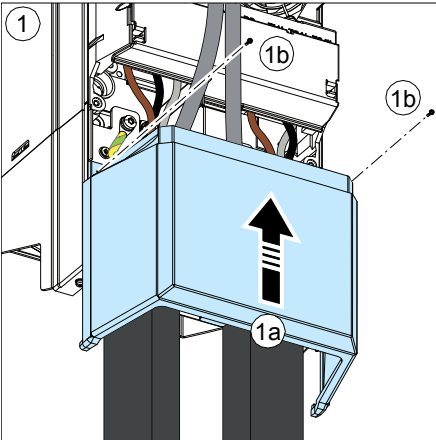

#### IP21 (UL Type 1)

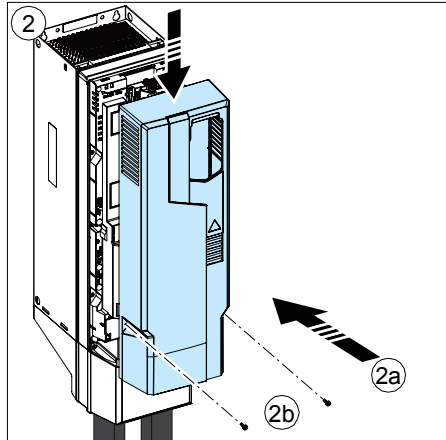

#### IP55 (UL Type 12)

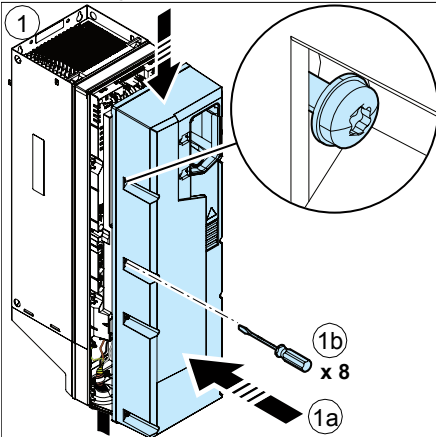

■ Reinstalling side plates and covers, frames R6...R9


**IP21 (UL Type 1)**

1. Reinstall the side plates of the cable box. Tighten the retaining screws with a screwdriver with a T20 Torx screwdriver.
2. Slide the cover of the cable box on the module from below until the cover snaps into place.
3. Reinstall the module cover. Tighten the two retaining screws with a screwdriver.


**IP55 (UL Type 12)**

1. Reinstall the side plates of the cable box. Tighten the retaining screws with a screwdriver with a T20 Torx screwdriver.


**IP21 (UL Type 1)**

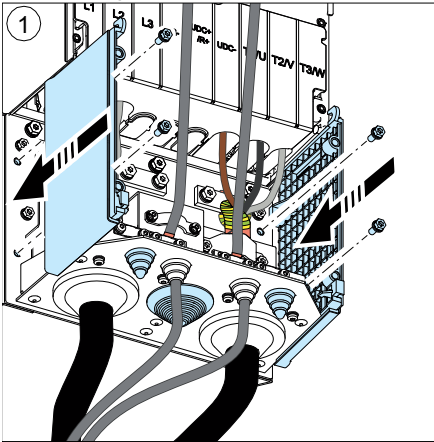


**IP21 (UL Type 1)**

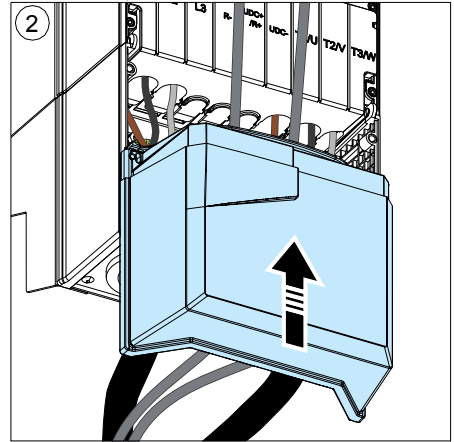

**IP21 (UL Type 1)**

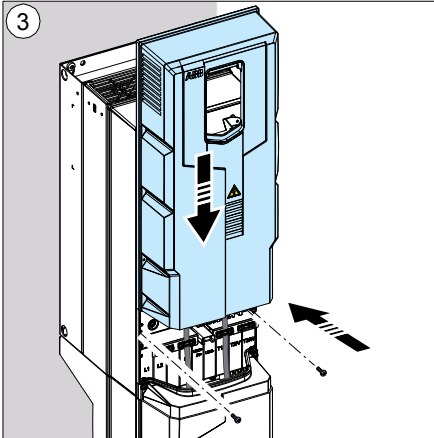

**IP55 (UL Type 1)**

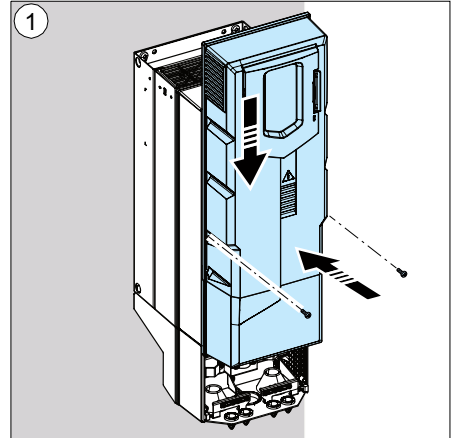

### ■ **Installing UL Type 12 hood**

See *UL Type 12 hood quick installation guide for ACS580-01, ACH580-01 and ACQ580-01 frames R1 to R9* (3AXD50000196067 [English]) which is included in the hood package.

---




## Connecting a PC

To be able to connect a PC to the drive, you need an assistant control panel (ACH-AP-H or ACH-AP-W). It is also possible to use the CCA-01 configuration adapter when the drive is not connected to the power supply network or external 24 V supply; the CCA-01 does not work if the drive is powered.

Connect a PC to the drive with a USB data cable (USB Type A <-> USB Type Mini-B) as follows:

1. Lift the USB connector cover from bottom upwards.
2. Put the USB cable Mini-B plug in the control panel USB connector.
3. Put the USB cable A-plug in the USB connector of the PC (3a). The panel displays text “USB connected” (3b).

**Note:** Panel keys cannot be used when a USB data cable is connected to the panel.

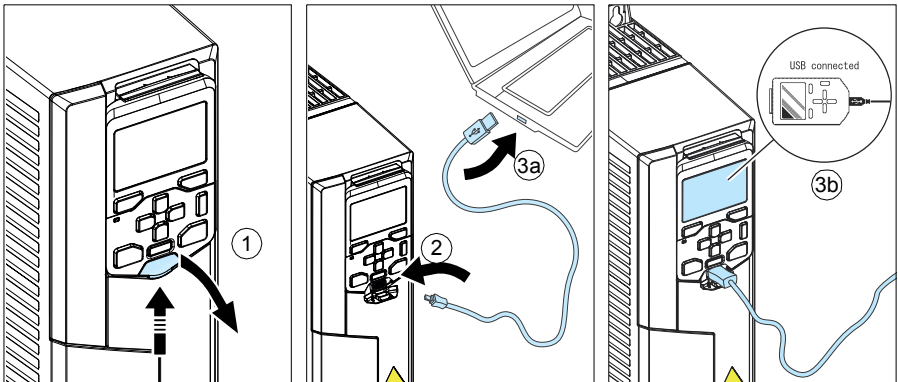

For information on using the Drive composer PC tool, see *Drive composer PC tool user's manual* (3AUA0000094606 [English]).

You can connect a remote ACH-AP-H or ACH-AP-W control panel to the drive, or to chain the control panel or a PC to several drives on a panel bus with a CDPI-01 communication adapter module. See *CDPI-01 communication adapter module user's manual* (3AXD5000009929 [English]).



## 7

# Installation checklist

---

## Contents of this chapter

This chapter contains an installation checklist which you must complete before you start up the drive.

## Warnings



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. If you ignore them, injury or death, or damage to the equipment can occur.

---

## Checklist

Do the steps in section [Precautions before electrical work](#) on page 16 before you start the work. Go through the checklist together with another person.

<input checked="" type="checkbox"/>	Check that ...
<input type="checkbox"/>	The ambient operating conditions meet the specification in section <a href="#">Ambient conditions</a> on page 214.
<input type="checkbox"/>	<p>If the drive will be connected to another system than symmetrically grounded TN-S system: Check if you must disconnect the EMC filter. See section</p> <ul style="list-style-type: none"> <li>• <a href="#">IEC: Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (IEC)</a> on page 97, or</li> <li>• <a href="#">North America: Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (North America)</a> on page 104.</li> </ul>

---

<input checked="" type="checkbox"/>	<b>Check that ...</b>
<input type="checkbox"/>	<p>If the drive will be connected to another system than symmetrically grounded TN-S system: Check if you must disconnect the ground-to-phase varistor. See section</p> <ul style="list-style-type: none"> <li>• <b>IEC:</b> <i>Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (IEC)</i> on page 97, or</li> <li>• <b>North America:</b> <i>Checking the compatibility with IT (ungrounded), corner-grounded delta, midpoint-grounded delta, and TT systems (North America)</i> on page 104.</li> </ul>
<input type="checkbox"/>	<p>If the drive has not been powered (either in storage or unused) over one year: The electrolytic DC capacitors in the DC link of the drive have been reformed. See section <i>Replacing the auxiliary cooling fan, IP55 (UL Type 12) frames R1...R2</i> on page 168.</p>
<input type="checkbox"/>	There is an adequately sized protective earth (ground) conductor between the drive and the switchboard.
<input type="checkbox"/>	There is an adequately sized protective earth (ground) conductor between the motor and the drive.
<input type="checkbox"/>	All protective earth (ground) conductors have been connected to the appropriate terminals and the terminals have been tightened (pull conductors to check).
<input type="checkbox"/>	The supply voltage matches the nominal input voltage of the drive. Check the type designation label.
<input type="checkbox"/>	The input power cable has been connected to appropriate terminals, the phase order is correct, and the terminals have been properly tightened. (Pull conductors to check.)
<input type="checkbox"/>	Appropriate supply fuses and disconnectors have been installed.
<input type="checkbox"/>	The motor cable has been connected to appropriate terminals, the phase order is right, and the terminals have been tightened. (Pull conductors to check.)
<input type="checkbox"/>	The motor cable has been routed away from other cables.
<input type="checkbox"/>	The control cables (if any) have been connected to the control board.
<input type="checkbox"/>	There are no tools, foreign objects or dust from drilling inside the drive.
<input type="checkbox"/>	Drive and motor connection box covers are in place.
<input type="checkbox"/>	The motor and the driven equipment are ready for start-up.



# Maintenance and hardware diagnostics

---

## Contents of this chapter

This chapter contains preventive maintenance instructions and LED indicator descriptions.

## Maintenance intervals

The table below shows the maintenance tasks which can be done by the end user. The complete maintenance schedule is available on the Internet ([www.abb.com/drivesservices](http://www.abb.com/drivesservices)). For more information, consult your local ABB Service representative ([www.abb.com/searchchannels](http://www.abb.com/searchchannels)).

Maintenance and component replacement intervals are based on the assumption that the equipment is operated within the specified ratings and ambient conditions. ABB recommends annual drive inspections to ensure the highest reliability and optimum performance.

**Note:** Long term operation near the specified maximum ratings or ambient conditions may require shorter maintenance intervals for certain components. Consult your local ABB Service representative for additional maintenance recommendations.

---

## ■ Description of symbols

Action	Description
I	<b>Inspection</b> (visual inspection and maintenance action if needed)
P	<b>Performance</b> of on/off-site work (commissioning, tests, measurements or other work)
R	<b>Replacement</b>

## ■ Recommended annual actions by the user

Action	Description
P	Quality of supply voltage
I	Spare parts
P	Capacitor reforming for spare drives and spare capacitors (page 172)
I	Tightness of terminals
I	Dustiness, corrosion or temperature
P	Heat sink cleaning (page 161)

## ■ Recommended maintenance actions by the user

Component	Years from start-up						
	3	6	9	12	15	18	21
<b>Cooling</b>							
<b>Fans, IP21 (UL Type 1) frames R1 to R9</b>							
Main cooling fan R1...R4: page 163, R5: page 165		R		R		R	
Main cooling fan LONGLIFE R6...R8: page 165, R9: page 166			R			R	
Auxiliary cooling fan (LONGLIFE) for circuit boards, R5...R9 only: page 167			R			R	
<b>Fans, IP55 (UL Type 12) frames R1 to R9</b>							
Main cooling fan R1...R4: page 163, R5: page 165		R		R		R	
Main cooling fan LONGLIFE R6...R8: page 165, R9: page 166			R			R	
Auxiliary cooling fan for circuit boards R1...R2 <sup>1)</sup> : page 168		R		R		R	
Auxiliary cooling fan (LONGLIFE) for circuit boards R3: page 169, R4: page 170, R5...R9: page 167			R			R	
Second auxiliary cooling fan (LONGLIFE) R8 and R9: page 171			R			R	
<b>Aging</b>							
Control panel battery: page 173			R			R	

<sup>1)</sup> Valid for ACQ580-01 type codes listed in this manual. For other type codes, see ACQ580-01 (0.75 to 250 kW, 1.0 to 350 hp) hardware manual (3AXD50000035866[English]).

## Heatsink

The drive heatsink fins pick up dust from the cooling air. The drive can run into overtemperature warnings and faults if the heatsink is not clean. When necessary, clean the heatsink as follows.



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page [13](#). Ignoring the instructions can cause physical injury or death, or damage to the equipment.

---



**WARNING!** Use a vacuum cleaner with antistatic hose and nozzle. Using a normal vacuum cleaner creates static discharges which can damage circuit boards.

---

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page [16](#) before you start the work.
  2. Remove the cooling fan(s). See section [Fans](#) on page [162](#).
  3. Blow clean, dry and oil free compressed air from bottom to top and simultaneously use a vacuum cleaner at the air outlet to trap the dust.  
**Note:** If there is a risk of dust entering adjoining equipment, do the cleaning in another room.
  4. Reinstall the cooling fan(s).
-

## Fans

See section [Maintenance intervals](#) on page [159](#) for the fan replacement interval in average operation conditions.

In a speed-controlled fan, the speed of the fan matches the cooling needs. This increases the life span of the fan.


Main fans are speed controlled. When the drive is stopped, the main fan is kept running at low speed to cool the control board. IP21 (UL Type 1) frames R5...R9 and all IP55 (UL Type 12) frames have auxiliary fans that are not speed controlled and run all the time when the control board is powered.

Replacement fans are available from the manufacturer. Do not use other than specified spare parts.

---



## ■ Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R1...R4

 **WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page 16 before you start the work.

### R1...R3




2. Lever the fan assembly off the drive frame with for example a screwdriver (2a) and pull out the fan assembly (2b) until you can unplug the fan power supply wires from the fan assembly (2c).

3. Install the fan assembly in reverse order.




R1...R2: Put the connector and extra length of wires in the groove so that the wires do not get caught in the revolving fan.

R3: Put the extra length of wires under the fan assembly so that the wires do not get caught in the revolving fan.

### R1...R2

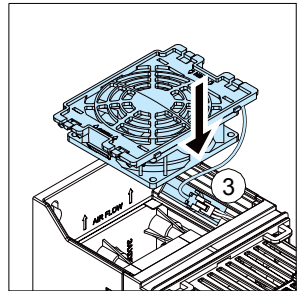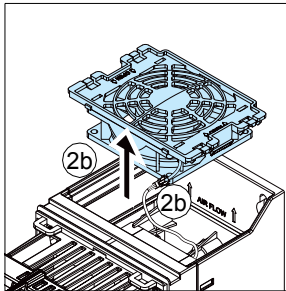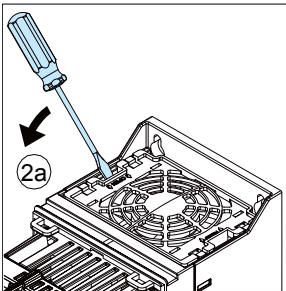



### R3

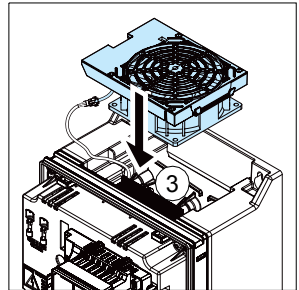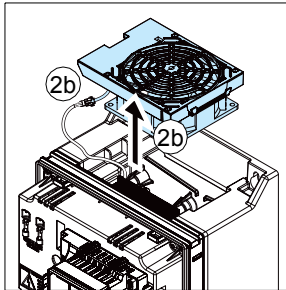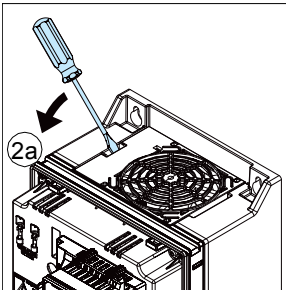

**R4**

2. Lever the fan assembly off the drive frame with for example a screwdriver (2a) and pull out the fan assembly (2b).
3. Install the fan assembly in reverse order.

**R4**

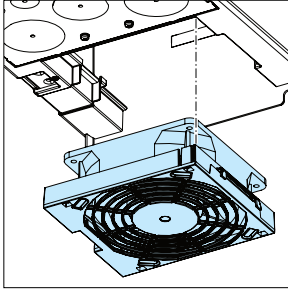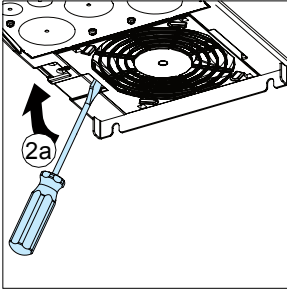



## ■ Replacing the main cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R8



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. Ignoring the instructions can cause physical injury or death, or damage to the equipment.


---

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page 16 before you start the work.
2. Remove the two mounting screws of the fan mounting plate at the bottom of the drive.
3. Pull the fan mounting plate down from the side edge.
4. Unplug the fan power supply wires from the drive.
5. Lift the fan mounting plate off.
6. Remove the fan from the mounting plate.
7. Install the new fan in reverse order.

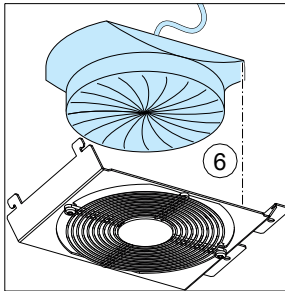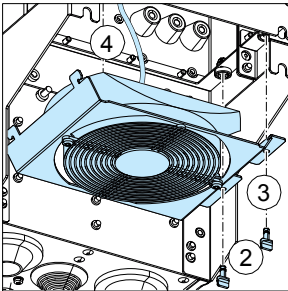




## ■ Replacing the main cooling fans, IP21 and IP55 (UL Type 1 and UL Type 12) frame R9

---

 **WARNING!** Obey the instructions in chapter [Safety instructions](#) on page [13](#). Ignoring the instructions can cause physical injury or death, or damage to the equipment.

---

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page [16](#) before you start the work.
2. Remove the two mounting screws of the fan mounting plate.
3. Turn the mounting plate downwards.
4. Unplug the fan power supply wires from the drive.
5. Remove the fan mounting plate.
6. Remove the fans by removing the two mounting screws.
7. Install the new fans in reverse order.

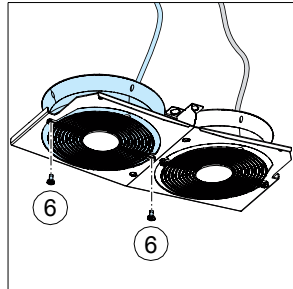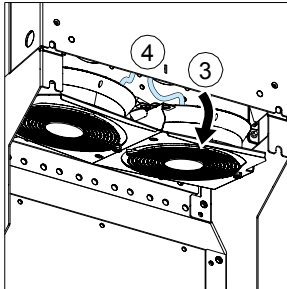
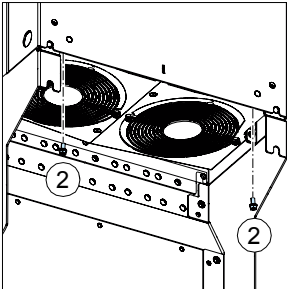


## ■ Replacing the auxiliary cooling fan, IP21 and IP55 (UL Type 1 and UL Type 12) frames R5...R9



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. Ignoring the instructions can cause physical injury or death, or damage to the equipment.




1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page 16 before you start the work.
  2. Remove the front cover (see page 71).
  3. Unplug fan power supply wires from the drive.
  4. Release the retaining clips.
  5. Lift the fan off.
  6. Install the new fan in reverse order.
- Note:** Make sure that the arrow on the fan points up.

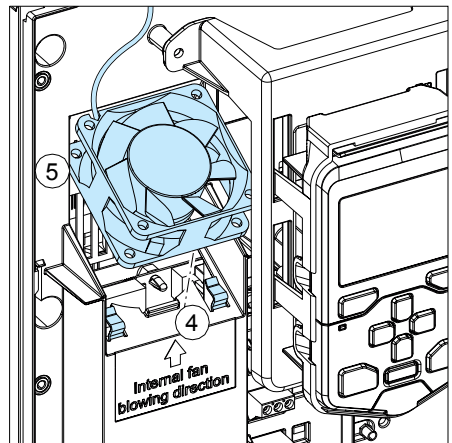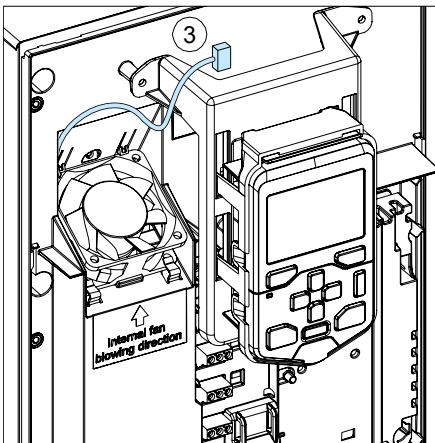


## ■ Replacing the auxiliary cooling fan, IP55 (UL Type 12) frames R1...R2

**⚠ WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. Ignoring the instructions can cause physical injury or death, or damage to the equipment.




1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page 16 before you start the work.
2. Remove the control panel: Press the retaining clip of the IP55 panel cover (2a) and open the cover (2b). Press the retaining clip of the control panel at the top (2c) and pull it forward from the top edge (2d).
3. Remove the front cover: Loosen the retaining screws with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).
4. Unplug the fan power supply wires from the drive.
5. Remove the fingerguard: Insert a screwdriver into the hole of the fingerguard (5a), bend the front edge of the fingerguard a little away from the drive frame with the screwdriver (5b) and pull the fingerguard out of the groove (5c).
6. Pull off the fan.
7. Install the new fan assembly in reverse order. Route the wires round the pins.  
**Note:** Make sure that the arrow on the fan points to the same direction as the arrow on the drive frame.

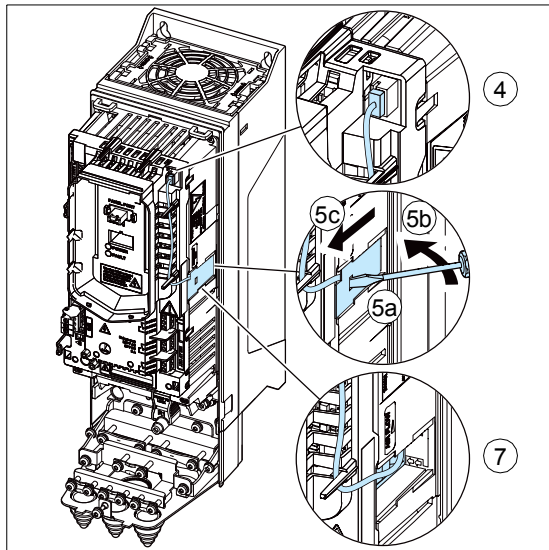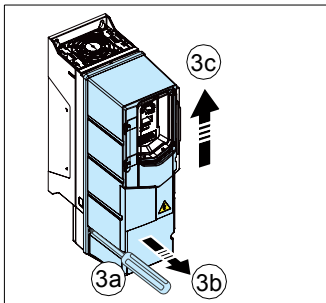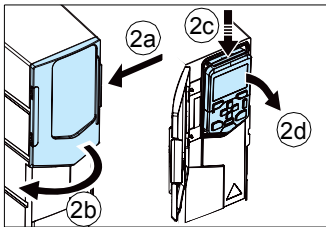

## ■ Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R3

 **WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page 16 before you start the work.
2. Remove the control panel: Press the retaining clip of the IP55 panel cover (2a) and open the cover (2b). Press the retaining clip of the control panel at the top (2c) and pull it forward from the top edge (2d).
3. Remove the front cover: Loosen the retaining screw with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).
4. Unplug the fan power supply wires from the drive.
5. Detach the fan cable from the holders.
6. Pull off the plastic housing.
7. Pull off the fan.
8. Install the new fan and housing in reverse order.  
**Note:** Make sure that the arrow on the fan points to the same direction as the arrow on the plastic housing (down).

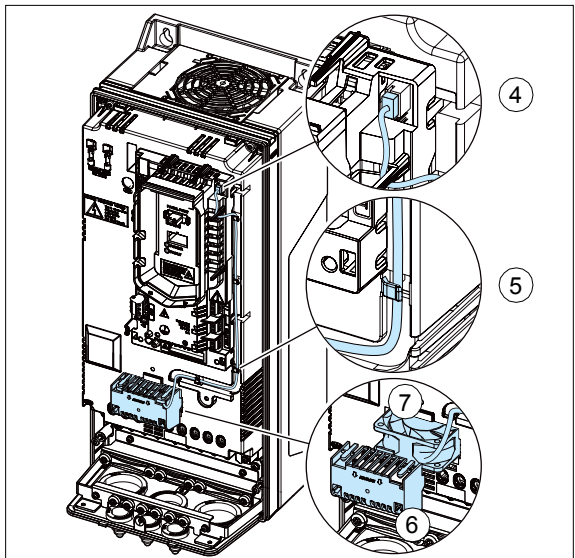
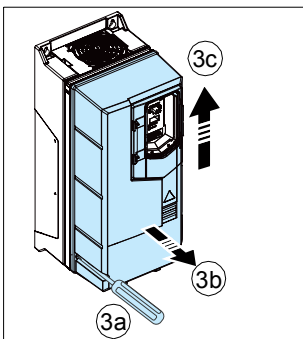
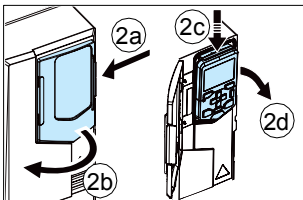


## ■ Replacing the auxiliary cooling fan, IP55 (UL Type 12) frame R4

**⚠ WARNING!** Obey the instructions in chapter [Safety instructions](#) on page [13](#). Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page [16](#) before you start the work.
2. Remove the control panel: Press the retaining clip of the IP55 panel cover (2a) and open the cover (2b). Press the retaining clip of the control panel at the top (2c) and pull it forward from the top edge (2d).
3. Remove the front cover: Loosen the retaining screws (6 pieces) with a screwdriver (3a) and lift the cover from the bottom outwards (3b) and then up (3c).
4. Unplug the fan power supply wires from the drive.
5. Detach the fan cable from the clips.
6. Pull the fan off.
7. Install the new fan in reverse order.

**Note:** Make sure that the arrow on the fan points down.

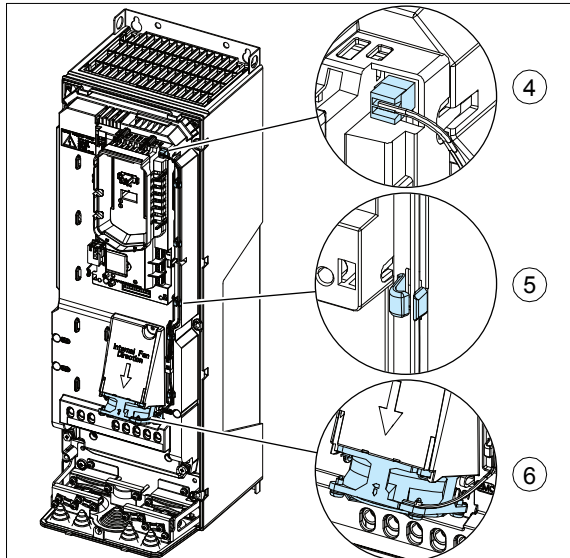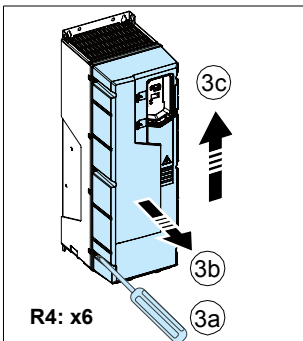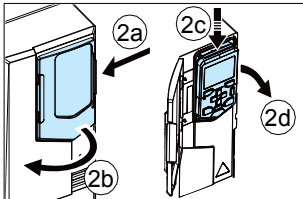






## ■ Replacing the second auxiliary cooling fan, IP55 (UL Type 12) frames R8...R9



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. Ignoring the instructions can cause physical injury or death, or damage to the equipment.

1. Stop the drive and disconnect it from the power line. Wait for 5 minutes and then make sure by measuring that there is no voltage. See section [Precautions before electrical work](#) on page 16 before you start the work.
2. Remove the front cover: Loosen the retaining screws (14 pieces) with a screwdriver (2a) and lift the cover from the bottom outwards (2b) and then up (2c).
3. Remove the lower cover panel from the cover.
4. Unplug the fan power supply wires from the connector on the other side of the IP55 (UL Type 12) front cover.
5. Remove the retaining screws (5a) and pull off the fan (5b).
6. Install the new fan in reverse order.  
**Note:** Make sure that the arrow on the fan points up.

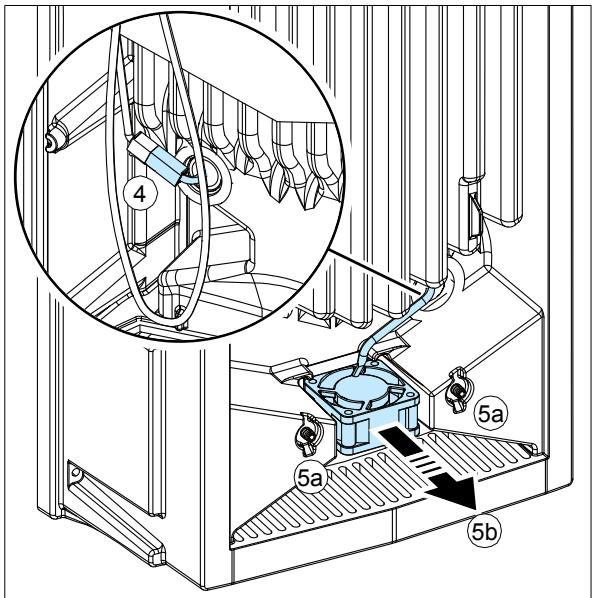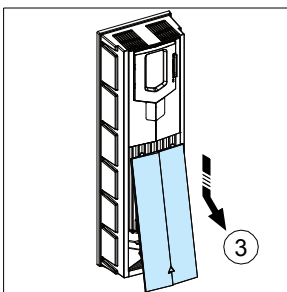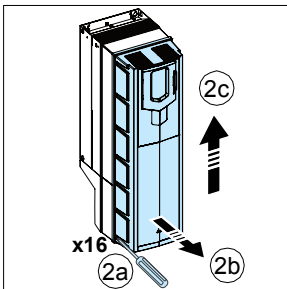

## Capacitors

The drive intermediate DC circuit employs several electrolytic capacitors. Their lifespan depends on the operating time of the drive, loading and ambient temperature. Capacitor life can be prolonged by lowering the ambient temperature.

Capacitor failure is usually followed by damage to the drive and an input cable fuse failure, or a fault trip. Contact the manufacturer if capacitor failure is suspected. Replacements are available from the manufacturer. Do not use other than specified spare parts.

### ■ Reforming the capacitors

The capacitors must be reformed if the drive has not been powered (either in storage or unused) for a year or more. See section *Type designation label* on page 43 for how to find out the manufacturing date from the serial number.

For information on reforming the capacitors, see *Converter module capacitor reforming instructions* (3BFE64059629 [English]), available on the Internet (go to <http://www.abb.com> and enter the document code in the Search field).

---

## Control panel

### ■ Cleaning the control panel

Use a soft damp cloth to clean the control panel. Avoid harsh cleaners which could scratch the display window.


### ■ Replacing the battery in the control panel

A battery is used in all control panels to keep the clock operating in memory during power interruptions.

The expected life for the battery is greater than ten years.

**Note:** The battery is NOT required for any control panel or drive functions, except the clock.

1. Remove the control panel from the drive. See section [Control panel](#) on page 42.
2. To remove the battery, use a coin to rotate the battery cover on the back of the control panel.
3. Replace the battery with type CR2032. Dispose the old battery according to local disposal rules or applicable laws.

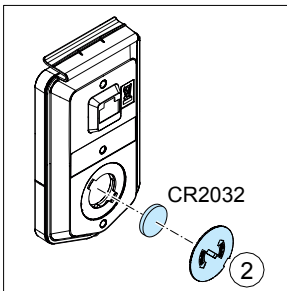

## LEDs

### ■ Drive LEDs

There is a green POWER and a red FAULT LED on the front of the drive. They are visible through the panel cover but invisible if a control panel is attached to the drive. The table below describes the drive LED indications.

<b>Drive LEDs POWER and FAULT, on the front of the drive, under the control panel / panel cover</b>				
If a control panel is attached to the drive, switch to remote control (otherwise a fault will be generated), and then remove the panel to be able to see the LEDs				
<b>LEDs off</b>	<b>LED lit and steady</b>		<b>LED blinking</b>	
No power	Green (POWER)	Power supply on the board OK	Green (POWER)	<u>Blinking:</u> Drive in an alarm state <u>Blinking for one second:</u> Drive selected on the control panel when multiple drives are connected to the same panel bus.
	Red (FAULT)	Active fault in the drive. To reset the fault, press RESET from the control panel or switch off the drive power.	Red (FAULT)	Active fault in the drive. To reset the fault, switch off the drive power.

## ■ Control panel LEDs

The control panel has one LED. The table below describes the control panel LED indications. For more information see *ACX-AP-x assistant control panels user's manual* (3AUA0000085685 [English]).

Control panel LED, at the left edge of the control panel			
LED off	LED lit and steady		LED blinking/flickering
Panel has no power	Green	Drive functioning normally. Connection between the drive and control panel may be faulty or lost, or the panel and drive may be incompatible. Check the control panel display.	Green <u>Blinking:</u> Active warning in the drive <u>Flickering:</u> Data transferred between the PC tool and drive through the USB connection of the control panel
	Red	Check the display to see where the fault is. <ul style="list-style-type: none"> <li>• Active fault in the drive. Reset the fault.</li> <li>• Active fault in another drive in the panel bus. Switch to the drive in question and check and reset the fault.</li> </ul>	Red Active fault in the drive. To reset the fault, cycle the drive power.
			Blue Panels with a Bluetooth interface only. <u>Blinking:</u> Bluetooth interface is enabled. It is in discoverable mode and ready for pairing. <u>Flickering:</u> Data is transferred through the Bluetooth interface of the control panel.





# Technical data

---

## Contents of this chapter

This chapter contains the technical specifications of the drive, for example ratings, sizes and technical requirements as well as provisions for fulfilling the requirements for CE, UL and other approval marks.

## Ratings

### ■ IEC ratings at $U_N = 400\text{ V}$

Type ACQ580 -01-	Input rating	Max. current	Output ratings		Heat dissipation	Air flow	Frame size
			Nominal use				
	$I_1$	$I_{\max}$	$I_N$	$P_N$	W	m <sup>3</sup> /h	
	A	A	A	kW			
<b>3-phase <math>U_N = 400\text{ V}</math> (380...415 V)</b>							
02A7-4	2.6	3.2	2.6	0.75	45	43	R1
03A4-4	3.3	4.7	3.3	1.1	55	43	R1
04A1-4	4.0	5.9	4.0	1.5	66	43	R1
05A7-4	5.6	7.2	5.6	2.2	84	43	R1
07A3-4	7.2	10.1	7.2	3.0	106	43	R1
09A5-4	9.4	13.0	9.4	4.0	133	43	R1
12A7-4	12.6	14.1	12.6	5.5	174	43	R1
018A-4	17.0	22.7	17.0	7.5	228	101	R2
026A-4	25.0	30.6	25.0	11.0	322	101	R2
033A-4	32.0	44.3	32.0	15.0	430	179	R3
039A-4	38.0	56.9	38.0	18.5	525	179	R3
046A-4	45.0	67.9	45.0	22.0	619	179	R3
062A-4	62	76	62	30	835	134	R4
073A-4	73	104	73	37	1024	134	R4
088A-4	88	122	88	45	1240	139	R5
106A-4	106	148	106	55	1510	139	R5
145A-4	145	178	145	75	1476	435	R6
169A-4	169	247	169	90	1976	450	R7
206A-4	206	287	206	110	2346	450	R7
246A-4	246	350	246	132	3336	550	R8
293A-4	293	418	293	160	3936	550	R8
363A-4	363	498	363	200	4836	1150	R9
430A-4	430	545	430	250	6036	1150	R9

3AXD00000586715.xls K

See definitions and notes on page [180](#).



■ IEC ratings at  $U_N = 480\text{ V}$

Type ACQ580 -01-	Input rating		Max. current		Output ratings		Heat dissipation	Air flow	Frame size	North American type ACQ580 -01-
	Nominal use									
	$I_1$ A	$I_{max}$ A	$I_{LD}$ A	$P_{LD}$ hp	W	ft <sup>3</sup> /min				
<b>3-phase <math>U_N = 480\text{ V}</math> (440...480 V)</b>										
02A7-4	2.1	2.9	2.1	1.0	45	25	R1	02A1-4		
03A4-4	3.0	3.8	3.0	1.5	55	25	R1	03A0-4		
04A1-4	3.4	5.4	3.5	2.0	66	25	R1	03A5-4		
05A7-4	4.8	6.1	4.8	3.0	84	25	R1	04A8-4		
07A3-4	6.0	7.2	6.0	3.0	106	25	R1	06A0-4		
09A5-4	7.6	8.6	7.6	5.0	133	25	R1	07A6-4		
12A7-4	11.0	11.4	12.0	7.5	174	25	R1	012A-4		
018A-4	14.0	19.8	14.0	10.0	228	59	R2	014A-4		
026A-4	21.0	25.2	23.0	15.0	322	59	R2	023A-4		
033A-4	27.0	37.8	27.0	20.0	430	105	R3	027A-4		
039A-4	34.0	48.6	34.0	25.0	525	105	R3	034A-4		
046A-4	40.0	61.2	44.0	30.0	619	105	R3	044A-4		
062A-4	52	76	52	40	835	79	R4	052A-4		
073A-4	65	104	65	50	1024	79	R4	065A-4		
088A-4	77	122	77	60	1240	82	R5	078A-4		
106A-4	96	148	96	75	1510	82	R5	096A-4		
145A-4	124	178	124	100	1476	256	R6	124A-4		
169A-4	156	247	156	125	1976	265	R7	156A-4		
206A-4	180	287	180	150	2346	265	R7	180A-4		
246A-4	240	350	240	200	3336	324	R8	240A-4		
293A-4	260	418	260	200	3936	324	R8	0260-A		
363A-4	361	542	361	300	4836	677	R9	361A-4		
430A-4	414	542	414	350	6036	677	R9	414A-4		

3AXD00000586715.xls K

See definitions and notes on page 180.

## ■ UL (NEC) ratings at $U_N = 460$ V

Type ACQ580 -01-	Input rating	Max. current	Output ratings		Heat dissipation	Air flow	Frame size
			Light duty use				
	$I_1$ A	$I_{max}$ A	$I_{LD}$ A	$P_{Ld}$ hp	W	ft <sup>3</sup> /min	
<b>3-phase <math>U_N = 460</math> V (380...415 V / 440...480 V)</b>							
Power ratings are valid at nominal voltage, 460V.							
02A1-4	2.1	2.9	2.1	1.0	45	25	R1
03A0-4	3.0	3.8	3.0	1.5	55	25	R1
03A5-4	3.5	5.4	3.5	2.0	66	25	R1
04A8-4	4.8	6.1	4.8	3.0	84	25	R1
06A0-4	6.0	7.2	6.0	3.0	106	25	R1
07A6-4	7.6	8.6	7.6	5.0	133	25	R1
012A-4	12.0	13.7	12.0	7.5	174	25	R1
014A-4	14.0	19.8	14.0	10.0	228	59	R2
023A-4	23.0	25.2	23.0	15.0	322	59	R2
027A-4	27.0	37.8	27.0	20.0	430	105	R3
034A-4	34.0	48.6	34.0	25.0	525	105	R3
044A-4	44.0	61.2	44.0	30.0	619	105	R3
052A-4	52	76	52	40	835	79	R4
065A-4	65	104	65	50	1024	79	R4
077A-4	77	-	77	60	1240	82	R4
078A-4	77	-	77	60	1240	82	R5
096A-4	96	148	96	75	1510	82	R5
124A-4	124	178	124	100	1476	256	R6
156A-4	156	247	156	125	1976	265	R7
180A-4	180	287	180	150	2346	265	R7
240A-4	240	350	240	200	3336	324	R8
260A-4	260	418	260	200	3936	324	R8
302A-4	-	-	302	-	3936	324	R9
361A-4	361	542	361	300	4836	677	R9
414A-4	414	542	414	350	6036	677	R9

3AXD00000586715.xls K

## ■ Definitions

- $U_N$  Nominal output voltage of the drive. For input voltage range  $U_1$ , see section [Electrical power network specification](#) on page 205.
- $I_1$  Nominal input current. Continuous rms input current (for dimensioning cables and fuses).
- $I_{max}$  Maximum output current. Available for two seconds at start.
- $I_N$  Nominal output current. Maximum continuous rms output current allowed (no overload). This is indicated in the type designation label as output current I2.
- $P_N$  Nominal power of the drive. Typical motor power (no overloading). The kilowatt ratings apply to most IEC 4-pole motors. The horsepower ratings apply to most NEMA 4-pole motors.

$I_{Ld}$	Maximum current with 110% overload, allowed for one minute every ten minutes
$P_{Ld}$	Typical motor power in light-duty use (110% overload). The horsepower ratings apply to most NEMA 4-pole motors.
$I_{Hd}$	Maximum current with 150% overload, allowed for one minute every ten minutes <ol style="list-style-type: none"> <li>1) Maximum current with 130% overload, allowed for one minute every ten minutes</li> <li>2) Maximum current with 125% overload, allowed for one minute every ten minutes</li> </ol>
$P_{Hd}$	Typical motor power in heavy-duty use (150% overload)

## ■ Sizing

Drive sizing is based on the rated motor current, voltage and power. To achieve the rated motor power given in the table, the rated current of the drive must be higher than or equal to the rated motor current. Also the rated power of the drive must be higher than or equal to the rated motor power. The power ratings are the same regardless of the supply voltage within one voltage range.

**Note:** The ratings apply at ambient temperature of 40 °C (104 °F) for  $I_N$  ( $I_{Ld}$  for UL (NEC)). Above these temperatures derating is required.

**Note:** The DriveSize dimensioning PC tool available from ABB (<http://new.abb.com/drives/software-tools/drivesize>) is recommended for selecting the drive, motor and gear combination.

## Derating

The load capacity ( $I_N$ ,  $I_{LD}$ ,  $I_{HD}$ ; note that  $I_{max}$  is not derated) decreases in certain situations. In such situations, where full motor power is required, oversize the drive so that the derated value provides sufficient capacity.

**Note:** The DriveSize dimensioning PC tool available from ABB (<http://new.abb.com/drives/software-tools/drivesize>) is also suitable for derating.

**Note:** If several situations are present at a time, the effects of derating are cumulative.

### Example 1, IEC: How to calculate the derated current

The IP21 / UL Type 1 drive type is ACQ580-01-062A-4, which has motor current 62 A. Calculate the derated motor current ( $I_N$ ) at 4kHz switching frequency, at 1500 m altitude and at 50 °C ambient temperature as follows:

*Switching frequency derating* (page 189):

No derating needed for 4 kHz.

*Altitude derating* (page 188):

The derating factor for 1500 m is  $1 - 1/10\ 000\ m \cdot (1500 - 1000)\ m = 0.95$ .

The motor becomes  $I_N = 0.95 \cdot 62\ A = 58.9\ A$ .

*Ambient temperature derating, IP21 (UL Type 1)* (page 184):

The derating factor for 50 °C ambient temperature = 0.90.

The derated motor current becomes then  $I_N = 0.90 \cdot 58.9\ A = 53.01\ A$ .

### Example 1, UL (NEC): How to calculate the derated current

The IP21 / UL Type 1 drive type is ACQ580-01-052A-4, which has motor current 52 A. Calculate the derated motor current ( $I_{LD}$ ) at 4kHz switching frequency, at 1500 m altitude and at 50 °C ambient temperature as follows:

*Switching frequency derating* (page 189):

No derating needed for 4 kHz.

*Altitude derating* (page 188):

The derating factor for 1500 m is  $1 - 1/10\ 000\ m \cdot (1500 - 1000)\ m = 0.95$ .

The motor becomes  $I_{LD} = 0.95 \cdot 52\ A = 49.4\ A$ .

*Ambient temperature derating, IP21 (UL Type 1)* (page 184):

The derating factor for 50 °C ambient temperature = 0.90.

The derated motor current becomes then  $I_{LD} = 0.90 \cdot 49.4\ A = 44.46\ A$ .

### Example 2, IEC: How to calculate the required drive

If your application requires continuous 12.0 A of motor current ( $I_N$ ) at 8 kHz switching frequency, the supply voltage is 400 V and the drive is situated at 1500 m altitude and at 35 °C ambient temperature, calculate the appropriate IP21 / UL Type 1 drive size requirement as follows:

*Switching frequency derating* (page 189):

The minimum size required is  $I_N = 12.0\ A / 0.65 = 18.46\ A$ ,

where 0.65 is the derating for 8 kHz switching frequency (frames R2...R3).

**Altitude derating** (page 188):

The derating factor for 1500 m is  $1 - 1/10\,000 \text{ m} \cdot (1500 - 1000) \text{ m} = 0.95$ .

The minimum size required becomes then  $I_N = 18.46 \text{ A} / 0.95 = 19.43 \text{ A}$ .

**Ambient temperature derating, IP21 (UL Type 1)** (page 184):

No derating needed for 35 °C ambient temperature.

Referring to  $I_N$  in the ratings tables (starting from page 178), drive type ACQ580-01-026A-4 exceeds the  $I_N$  requirement of 19.43 A.

**Example 2, UL (NEC):** How to calculate the required drive

If your application requires continuous maximum current with 110% overload 12.0 A of motor current ( $I_{LD}$ ) at 8 kHz switching frequency, the supply voltage is 460 V and the drive is situated at 1500 m altitude and at 35 °C ambient temperature, calculate the appropriate IP21 / UL Type 1 drive size requirement as follows:

**Switching frequency derating** (page 189):

The minimum size required is  $I_{LD} = 12.0 \text{ A} / 0.65 = 18.46 \text{ A}$ ,

where 0.65 is the derating for 8 kHz switching frequency (frames R2...R3).

**Altitude derating** (page 188):

The derating factor for 1500 m is  $1 - 1/10\,000 \text{ m} \cdot (1500 - 1000) \text{ m} = 0.95$ .

The minimum size required becomes then  $I_{LD} = 18.46 \text{ A} / 0.95 = 19.43 \text{ A}$ .

**Ambient temperature derating, IP21 (UL Type 1)** (page 184):


No derating needed for 35 °C ambient temperature.

Referring to  $I_{LD}$  in the ratings tables (starting from page 180), drive type ACQ580-01-023A-4 exceeds the  $I_{LD}$  requirement of 19.43 A.

■ Ambient temperature derating, IP21 (UL Type 1)

**IP21 (UL Type 1) drive types, other than the exceptions below**


In the temperature range +40...50 °C (+104...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k, in the diagram below).

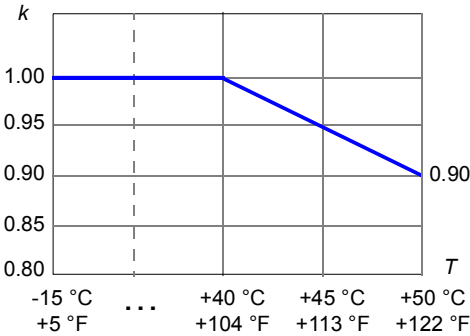


**IP21 (UL Type 1) drive type -077A-4, -078A-4 and -302A-4**

-077A-4: The derating factors not yet available.

-078A-4: In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). In the temperature range +45...50 °C (+113...122 °F), the rated output current is derated by 2% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):

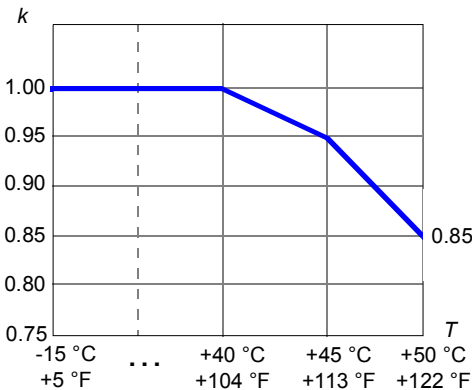


**-302A-4:** In the temperature range +40...50 °C (+104...122 °F), the rated output current is not derated at all.

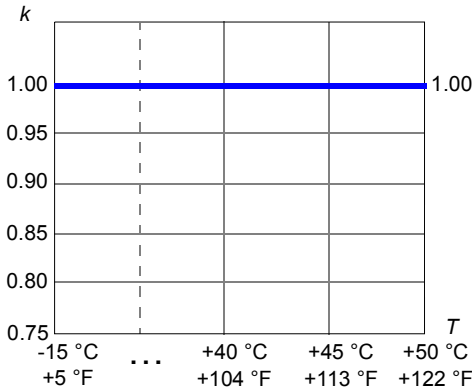

**Ambient temperature derating, IP55 (UL Type 12)**

**IP55 (UL Type 12) drive types, other than the exceptions below**

In the temperature range +40...50 °C (+104...122 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):

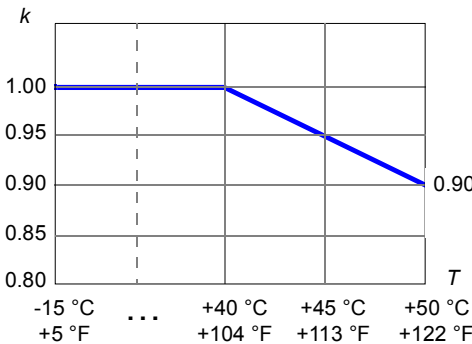


**P55 (UL Type 12) drive type -077A-4, -078A-4, -260A-4-293A-4 and -302A-4**


**-077A-4:** The derating factors not yet available.

**-078A-4:** In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). In the temperature range +45...50 °C (+113...122 °F), the rated output current is derated by 2% for every

added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):

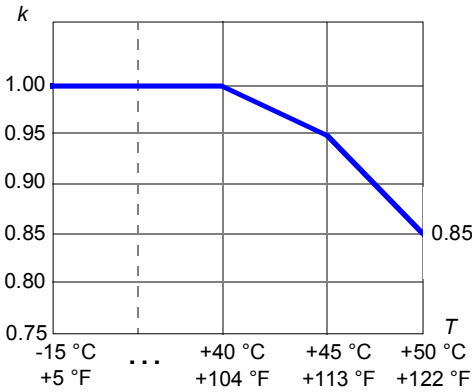


-260A-4 and -293A-4: In the temperature range +40...45 °C (+104...113 °F), the rated output current is derated by 1% for every added 1 °C (1.8 °F). In the temperature range +45...50 °C (+113...122 °F), the rated output current is derated by 2.5% for every added 1 °C (1.8 °F). The output current can be calculated by multiplying the current given in the rating table by the derating factor (k):

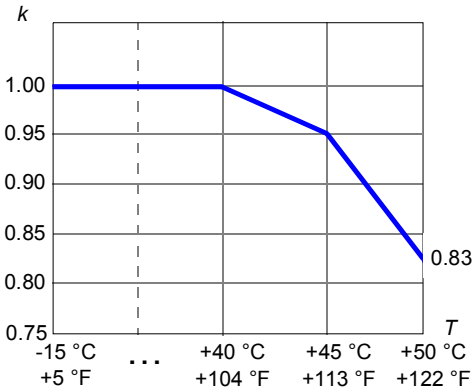



-302A-4: In the temperature range +40...50 °C (+104...122 °F), the rated output current is not derated at all.

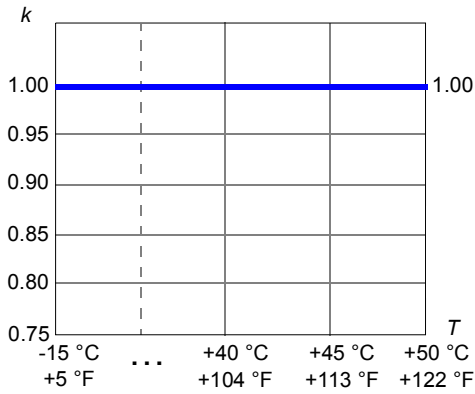

### Altitude derating


In altitudes 1000...4000 m (3300...13120 ft) above sea level, the derating is 1% for every 100 m (330 ft).

The output current is calculated by multiplying the current given in the rating table by the derating factor k, which for x meters (1000 m ≤ x ≤ 4000 m) is:

$$k = 1 - \frac{1}{10\,000\text{ m}} \cdot (x - 1000)\text{ m}$$

### Altitude and ambient temperature

If ambient temperature is below 40 °C (+104 °F), the derating can be reduced by 1.5% for every 1 °C (1.8 °F) reduction in temperature. A few altitude derating curves are shown below. For a more accurate derating, use the DriveSize dimensioning PC tool.

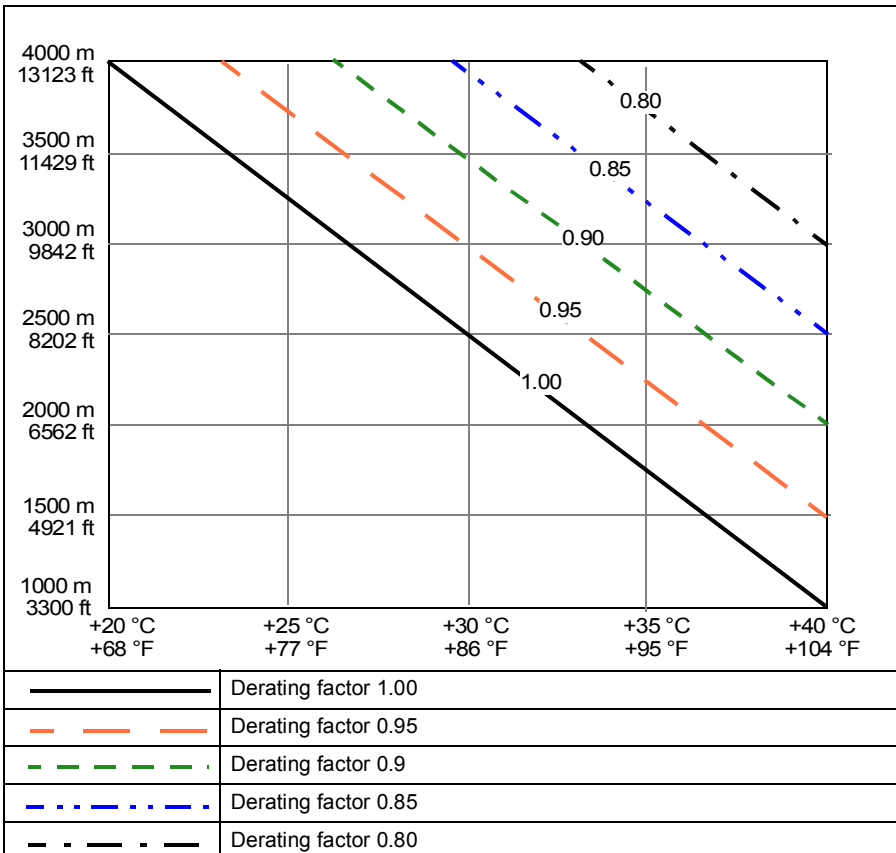

The altitude derating can be reduced if the temperature is below +40 °C, for example, if the temperature is 30 °C, the derating factor is  $1 - 1.5\% \cdot 10 = 0.85$ . You can reduce the output current by 35% instead of 40% at 4000 meter above the sea level.

**Note:** Check the supply network compatibility restrictions above 2000 m (6562 ft), see [Installation site altitude](#) on page 214. Check also PELV limitation on relay output terminals above 2000 m (6562 ft), see sections [Isolation areas, R1...R5](#) on page 210 and [Isolation areas, R6...R9](#) on page 211.

### ■ Switching frequency derating

The output current is calculated by multiplying the current given in the rating table by the derating factor given in the table below.

**Note:** If you change the minimum switching frequency with parameter 97.02 Minimum switching frequency, derate according to the table below. Changing parameter 97.01 Switching frequency reference does not require derating.

Frame size	Type ACQ580 -01-	Derating factor (k) for the minimum switching frequencies				
		1.5 kHz	2 kHz	4kHz	8 kHz	12 kHz
R1	02A1-4...12A7-4	-	1	1	0.67	0.5
R2	014A-4...026A-4	-	1	1	0.65	0.48
R3	027A-4...046A-4	-	1	1	0.65	0.48
R4	052A-4...062A-4	-	1	1	0.82	0.64
R4	065A-4...077A-4	-	1	1	0.73	0.55
R5	078A-4...106A-4	-	1	1	0.71	0.57
R6	124A-4...145A-4	1	1	0.84	0.66	0.52
R7	156A-4...206A-4	1	1	0.89	0.71	0.53
R8	240A-4...293A-4	1	1	0.82	0.61	0.45
R9	302A-4...430A-4	1	1	0.79	0.58	0.43

3AXD00000586715.xls K

## Fuses (IEC)

gG as well as uR or aR fuses for protection against short-circuit in the input power cable or drive are listed below. Either fuse type can be used for frames R1...R9 if it operates rapidly enough. The operating time depends on the supply network impedance and the cross-sectional area and length of the supply cable.

**Note 1:** See also [Implementing thermal overload and short-circuit protection](#) on page 88.

**Note 2:** Fuses with higher current rating than the recommended ones must not be used.

**Note 3:** Fuses from other manufacturers can be used if they meet the ratings and the melting curve of the fuse does not exceed the melting curve of the fuse mentioned in the table.

---

■ gG fuses

Check on the fuse time-current curve to ensure the operating time of the fuse is below 0.5 seconds. Obey the local regulations.

Type ACQ580 -01-	Min. short- circuit current <sup>1)</sup>	Input current	gG (IEC 60269)					North American type ACQ580 -01-	$I_{LD}$
			Nominal current	$I^2t$	Voltage rating	ABB type	IEC 60269 size		
			A	A <sup>2</sup> s					
<b>3-phase <math>U_N = 400</math> or <math>480</math> V (380...415 V or 440...480 V)</b>							<b><math>U_N = 480</math> V</b>		
02A7-4	32	2.6	4	55	500	OFAF000H4	000	02A1-4	2.1
03A4-4	48	3.3	6	110	500	OFAF000H6	000	03A0-4	3.0
04A1-4	48	4.0	6	110	500	OFAF000H6	000	03A5-4	3.5
05A7-4	80	5.6	10	360	500	OFAF000H10	000	04A8-4	4.8
07A3-4	80	7.2	10	360	500	OFAF000H10	000	06A0-4	6.0
09A5-4	128	9.4	16	740	500	OFAF000H16	000	07A6-4	7.6
12A7-4	128	12.6	16	740	500	OFAF000H16	000	012A-4	12.0
018A-4	200	17.0	25	2500	500	OFAF000H25	000	014A-4	14.0
026A-4	256	25.0	32	4000	500	OFAF000H32	000	023A-4	23.0
033A-4	320	32.0	40	7700	500	OFAF000H40	000	027A-4	27.0
039A-4	400	38.0	50	16000	500	OFAF000H50	000	034A-4	34.0
046A-4	500	45.0	63	20100	500	OFAF000H63	000	044A-4	44.0
062A-4	800	62	80	37500	500	OFAF000H80	000	052A-4	52
073A-4	1000	73	100	65000	500	OFAF000H100	000	065A-4	65
088A-4	1000	88	100	65000	500	OFAF000H100	000	078A-4	77
106A-4	1300	106	125	103000	500	OFAF00H125	00	096A-4	96
145A-4	1700	145	160	185000	500	OFAF00H160	00	124A-4	124
169A-4	3300	169	250	600000	500	OFAF0H250	0	156A-4	156
206A-4	5500	206	315	710000	500	OFAF1H315	1	180A-4	180
246A-4	6400	246	355	920000	500	OFAF1H355	1	240A-4	240
293A-4	7800	293	425	1300000	500	OFAF2H425	2	260A-4	260
363A-4	9400	363	500	2000000	500	OFAF2H500	2	361A-4	361
430A-4	10200	430	630	2800000	500	OFAF3H630	3	414A-4	414

3AXD00000586715.xls K

<sup>1)</sup> Minimum short-circuit current of the installation

## ■ uR and aR fuses

Type ACQ580 -01-	Min. short- circuit current <sup>1)</sup>	Input current	uR or aR				
			Nominal current	$I_t^2$	Voltage rating	Bussmann type	IEC 60269 size
			A	A <sup>2</sup> s	V		
<b>3-phase <math>U_N = 400</math> or <math>480</math> V (380...415 V, 440...480 V)</b>							
02A7-4	65	2.6	25	130	690	170M1561	000
03A4-4	65	3.3	25	130	690	170M1561	000
04A1-4	65	4.0	25	130	690	170M1561	000
05A7-4	65	5.6	25	130	690	170M1561	000
07A3-4	65	7.2	25	130	690	170M1561	000
09A5-4	65	9.4	25	130	690	170M1561	000
12A7-4	65	12.6	25	130	690	170M1561	000
018A-4	120	17.0	40	460	690	170M1563	000
026A-4	120	25.0	40	460	690	170M1563	000
033A-4	170	32.0	63	1450	690	170M1565	000
039A-4	170	38.0	63	1450	690	170M1565	000
046A-4	280	45.0	80	2550	690	170M1566	000
062A-4	380	62	100	4650	690	170M1567	000
073A-4	480	73	125	8500	690	170M1568	000
088A-4	480	88	160	16000	690	170M1569	000
106A-4	700	106	200	15000	690	170M3815	1
145A-4	700	145	250	28500	690	170M3816	1
169A-4	1280	169	315	46500	690	170M3817	1
206A-4	1520	206	350	68500	690	170M3818	1
246A-4	2050	246	450	105000	690	170M5809	2
293A-4	2200	293	500	145000	690	170M5810	2
363A-4	3100	363	630	275000	690	170M5812	2
430A-4	3600	430	700	405000	690	170M5813	2

3AXD0000586715.xls K

<sup>1)</sup> Minimum short-circuit current of the installation

## Circuit breakers

This section does not apply to the North American market. See section *Fuses (UL)* for branch circuit protection on page 195.

The protective characteristics of circuit breakers depend on the type, construction and settings of the breakers. There are also limitations pertaining to the short-circuit capacity of the supply network. Your local ABB representative can help you in selecting the breaker type when the supply network characteristics are known.



**WARNING!** Due to the inherent operating principle and construction of circuit breakers, independent of the manufacturer, hot ionized gases can escape from the breaker enclosure in case of a short-circuit. To ensure safe use, pay special attention to the installation and placement of the breakers. Obey the manufacturer's instructions.

You can use the circuit breakers listed below. Other circuit breakers can be used with drive if they provide the same electrical characteristics. ABB does not assume any liability whatsoever for the correct function and protection with circuit breakers not listed below. Furthermore, if the recommendations given by ABB are not obeyed, the drive can experience problems that the warranty does not cover.

Type ACQ580 -01-	MCBs and MCCBs					
	ABB type	Max. short-circuit	Tmax frame XT / T class	Tmax rating	Electronic release	SACE ordering code for breaker and release unit
		$I_{sc}$ kA				
<b>3-phase <math>U_N = 400</math> or <math>480</math> V (380...415 V, 440...480 V)</b>						
02A7-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
03A4-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
04A1-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
05A7-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
07A3-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
09A5-4	S 203P-B/C/Z 10	20	N/A	N/A	N/A	N/A
12A7-4	S 203P-B/C/Z 16	20	N/A	N/A	N/A	N/A
018A-4	S 203P-B/C/Z 20	20	N/A	N/A	N/A	N/A
026A-4	S 203P-B/C/Z 25	20	N/A	N/A	N/A	N/A
033A-4	S 203P-B/C/Z 32	12	N/A	N/A	N/A	N/A
039A-4	S 203P-B/C/Z 40	12	N/A	N/A	N/A	N/A
046A-4	S 203P-B/C/Z 50	12	N/A	N/A	N/A	N/A
062A-4	S 803S-B/C 80	50	N/A	N/A	N/A	N/A
073A-4	S 803S-B/C 80	50	N/A	N/A	N/A	N/A
088A-4	S 803S-B/C 100	50	N/A	N/A	N/A	N/A
106A-4	S 803S-B/C 125	50	N/A	N/A	N/A	N/A

Type ACQ580 -01-	MCBs and MCCBs					
	ABB type	Max. short- circuit	Tmax frame XT / T class	Tmax rating	Electronic release	SACE ordering code for breaker and release unit
		$I_{sc}$ kA	A	A	A	
145A-4	XT4 L 250 Ekip LS/I In=250 3p F F	65	XT4	250	250	1SDA068555R1
169A-4	XT4 L 250 Ekip LS/I In=250 3p F F	65	XT4	250	250	1SDA068555R1
206A-4	T4 L 320 PR221DS- LS/I In=320 3p F F	65	T4	320	320	1SDA054141R1
246A-4	T5 L 400 PR221DS- LS/I In=400 3p F F	65	T5	400	400	1SDA054365R1
293A-4	T5 L 630 PR221DS- LS/I In=630 3p F F	65	T5	630	630	1SDA054420R1
363A-4	T5 L 630 PR221DS- LS/I In=630 3p F F	65	T5	630	630	1SDA054420R1
430A-4	T5 L 630 PR221DS- LS/I In=630 3p F F	65	T5	630	630	1SDA054420R1

3AXD00000586715.xls K



## Fuses (UL)

The UL listed fuses in the table are the required branch circuit protection. Fuses are to be provided as part of the installation.

**Note 1:** Fuses are not included in the purchased drive and must be provided by others.

**Note 2:** Fuses with higher current rating than specified must not be used.

**Note 3:** Fuses with lower current rating than specified may be used if they are of the same class and voltage rating. It is the user's responsibility to verify that lower current rated fuses are compliant with local regulations and appropriate for the application.

**Note 4:** Drive fuses must be used to maintain the drive UL listing. Additional protection can be used. Refer to local codes and regulations.

UL/NEC type ACQ580 -01-	Input current	UL				IEC type ACQ580 -01-
		Maximum current	Voltage rating	Bussmann type	UL class	
	A	A	V			
02A1-4	2.1	15	600	JJS-15	T	02A7-4
03A0-4	3.0	15	600	JJS-15	T	03A4-4
03A5-4	3.5	15	600	JJS-15	T	04A1-4
04A8-4	4.8	15	600	JJS-15	T	05A7-4
06A0-4	6.0	15	600	JJS-15	T	07A3-4
07A6-4	7.6	15	600	JJS-15	T	09A5-4
012A-4	12.0	15	600	JJS-15	T	12A7-4
014A-4	14.0	30	600	JJS-30	T	018A-4
023A-4	23.0	30	600	JJS-30	T	026A-4
027A-4	27.0	40	600	JJS-40	T	033A-4
034A-4	34.0	60	600	JJS-60	T	039A-4
044A-4	44.0	60	600	JJS-60	T	046A-4
052A-4	52	80	600	JJS-80	T	062A-4
065A-4	62	90	600	JJS-100	T	073A-4
077A-4	77	110	600	JJS-100	T	-
078A-4	78	110	600	JJS-110	T	088A-4
096A-4	106	150	600	JJS-150	T	106A-4
124A-4	145	200	600	JJS-200	T	145A-4
156A-4	169	225	600	JJS-225	T	169A-4
180A-4	206	300	600	JJS-300	T	206A-4
240A-4	246	350	600	JJS-350	T	246A-4
260A-4	293	400	600	JJS-400	T	293A-4
361A-4	363	500	600	JJS-500	T	363A-4
414A-4	430	600	600	JJS-600	T	430A-4


## Dimensions, weights and free space requirements

Frame size	Dimensions and weights							Dimensions and weights							
	IP21							UL Type 1							
	H1	H2	H3	H4	W	D	Weight	H1	H2	H3	H4	W	D	Weight	
	mm	mm	mm	mm	mm	mm	kg	in	in	in	in	in	in	in	lb
R1	N/A	N/A	373	331	125	223	4.6	N/A	N/A	14.69	13.03	4.92	8.78	10.1	
R2	N/A	N/A	473	432	125	229	6.6	N/A	N/A	18.62	17.01	4.92	9.00	14.6	
R3	N/A <sup>1</sup>	N/A <sup>1</sup>	454	490	203	229	11.8	N/A <sup>1</sup>	N/A <sup>1</sup>	17.87	19.29	7.99	9.02	26.0	
R4	N/A <sup>1</sup>	N/A <sup>1</sup>	600	636	203	257	19.0	N/A <sup>1</sup>	N/A <sup>1</sup>	23.62	25.04	7.99	10.12	41.9	
R5	596	596	732	633	203	295	28.3	23.46	23.46	28.82	24.90	7.99	11.61	62.4	
R6	548	549	727	589	252	369	42.4	21.57	21.63	28.62	23.20	9.92	14.53	93.5	
R7	600	601	880	641	284	370	54	23.62	23.67	34.65	25.25	11.18	14.57	119.1	
R8	680	677	965	721	300	393	69	26.77	23.67	37.99	28.39	11.81	15.47	152.2	
R9	680	680	955	741	380	418	97	26.77	26.77	37.60	29.19	14.96	16.46	213.9	


<sup>1</sup> Frames with an integrated cable/conduit box

3AXD0000586715.xls K

IP21 (UL Type 1), R3...R4

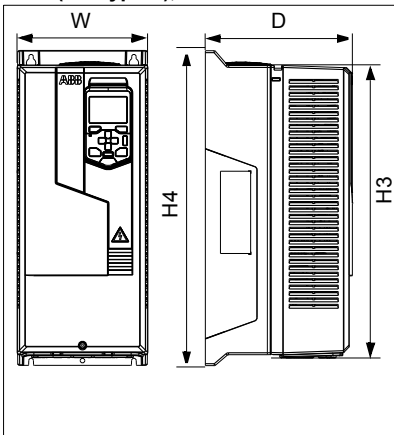

IP21 (UL Type 1), R5...R9

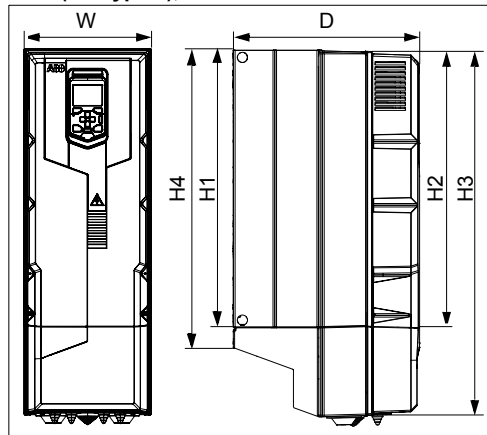


### Symbols

#### IP21 / UL Type 1

- H1** R5....R9: Height back without cable/conduit box
- H2** R5....R9: Height front without cable/conduit box
- H3** R3....R4: Height front, R1...R2, R5....R9: Height front with cable/conduit box
- H4** R1....R4: Height back, R5....R9: Height back with cable/conduit box
- W** Width
- D** Depth


IP21 (UL Type 1) & IP55 (UL Type 12), R1...R2

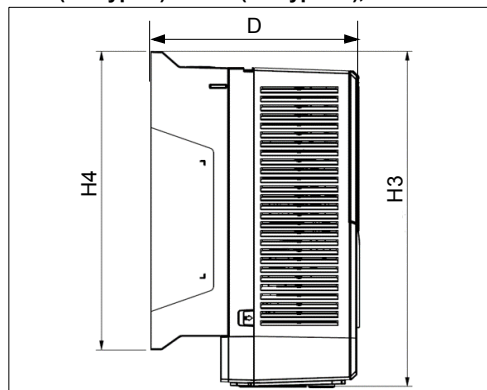


Frame size	Dimensions and weights											
	IP55					UL Type 12						
	H3 mm	H4 mm	W mm	D mm	Weight kg	H3 in	H4 in	W in	D in	Weight lb	HH in	HW in
R1	403	331	128	233	4.8	15.87	13.03	5.04	9.17	10.58	2.56	5.09
R2	503	432	128	239	6.8	19.80	17.01	5.04	9.41	14.99	2.56	5.10
R3	456	490	206	237	13.0	17.95	19.29	8.11	9.33	28.67	2.52	8.16
R4	600	636	203	265	20.0	23.62	25.04	7.99	10.43	44.10	2.83	8.59
R5	732	633	203	320	29.0	28.82	24.90	7.99	12.60	63.95	3.15	8.58
R6	727	589	252	380	43.0	28.62	23.20	9.92	14.96	94.82	6.10	11.46
R7	880	641	284	381	56	34.65	25.25	11.18	15.00	123.48	6.10	13.00
R8	965	721	300	452	77	37.99	28.39	11.81	17.80	169.79	6.10	13.80
R9	955	741	380	477	103	37.60	29.19	14.96	18.78	227.12	9.06	16.95

3AXD0000586715.xls K


IP55 (UL Type 12<sup>1</sup>), R3...R4

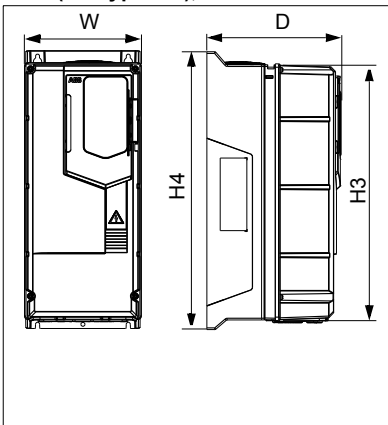


IP55 (UL Type 12<sup>1</sup>), R5...R9

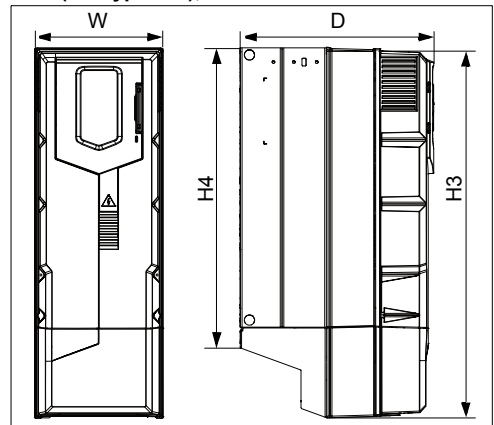


UL Type 12, R1...R3

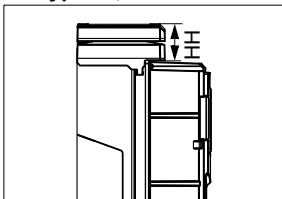

UL Type 12, R4...R5

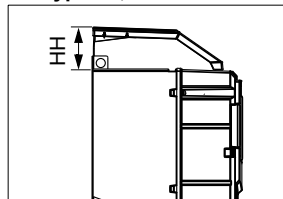

UL Type 12, R6...R9

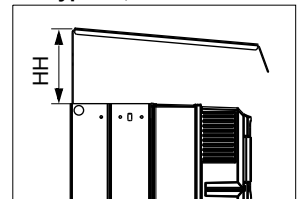

**Symbols**

IP55 / UL Type 12<sup>1</sup> without hood

**H3** R3...R4: Height front, R1...R2<sup>2</sup> and R5...R9: Height front with cable/conduit box

**H4** R3...R4: Height back, R1...R2<sup>2</sup> and R5...R9: Height back with cable/conduit box

**W** Width

**D** Depth

**HH** Hood height

**HW** Hood width

<sup>2</sup> See H3 and H4 location for R1...R2 in the figure on 196

Frame size	Free space, IP21 (UL Type 1) and IP55 (UL Type 12)											
	Vertical mounting stand alone						Vertical mounting side by side					
	Above		Below <sup>1)</sup>		Beside		Above		Below <sup>1)</sup>		Between	
	mm	in	mm	in	mm	in	mm	in	mm	in	mm	in
R1	200	7.87	150	5.91	150	5.91	200	7.87	200	7.87	0	0
R2	200	7.87	150	5.91	150	5.91	200	7.87	200	7.87	0	0
R3	200	7.87	200	7.87	150	5.91	200	7.87	200	7.87	0	0
R4	100	3.94	200	7.87	150	5.91	200	7.87	200	7.87	0	0
R5	100	3.94	200	7.87	150	5.91	200	7.87	200	7.87	0	0
R6	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R7	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R8	155	6.10	300	11.81	150	5.91	200	7.87	300	11.81	0	0
R9	200	7.87	300	11.81	150	5.91	200	7.87	300	11.81	0	0

3AXD00000586715.xls K

1) Free space below is always measured from the drive frame, not from the cable box.

Frame size	Free space, IP21 (UL Type 1) <sup>1)</sup>					
	Horizontal mounting					
	Above <sup>2)</sup>		Below <sup>2,3)</sup>		Between <sup>2)</sup>	
	mm	in	mm	in	mm	in
R1	200	7.87	150	5.91	150/150	5.91/5.91
R2	200	7.87	150	5.91	150/150	5.91/5.91
R3	200	7.87	200	7.87	150/150	5.91/5.91
R4	100	3.94	200	7.87	150/150	5.91/5.91
R5	100	3.94	200	7.87	150/150	5.91/5.91

3AXD00000586715.xls K

1) **Note:** Horizontal installation meets IP20 requirements only.

2) For definition, see the figure on page 50.

3) Free space below is always measured from the drive frame, not from the cable box.

See the figures in section [Checking the installation site](#) on page 48.

**Note:** IP55 (UL Type 12) does not imply that the drive can be installed outside/outdoors. To install outside, contact local your ABB representative directly for specific instructions. The warranty will be void if installed outdoors without using these special instructions.

## Losses, cooling data and noise

The air flow direction is from bottom to top.

### ■ Cooling air flow, heat dissipation and noise for stand-alone drives

The table below specifies the heat dissipation in the main circuit at nominal load and in the control circuit with minimum load (I/O, options and panel not in use) and maximum load (all digital inputs and relays in the ON state, and the panel, fieldbus and fan in use). The total heat dissipation is the sum of the heat dissipation in the main and control circuits. Use the maximum heat dissipation when designing cabinet or electrical room cooling needs.

#### IEC

Type ACQ580 -01-	Heat dissipation				Air flow		Noise dB(A)	Frame size
	Main circuit at rated $I_N$ at $I_N$	Control circuit minimum	Control circuit maximum	Main and control boards maximum	m <sup>3</sup> /h	ft <sup>3</sup> /min		
	W	W	W	W				
<b>3-phase <math>U_N = 400</math> or <math>480</math> V (380...415 V, 440...480 V)</b>								
02A7-4	20	3.5	25	45	43	25	59	R1
03A4-4	30	3.5	25	55	43	25	59	R1
04A1-4	41	3.5	25	66	43	25	59	R1
05A7-4	59	3.5	25	84	43	25	59	R1
07A3-4	81	3.5	25	106	43	25	59	R1
09A5-4	108	3.5	25	133	43	25	59	R1
12A7-4	149	3.5	25	174	43	25	59	R1
018A-4	203	3.5	25	228	101	59	64	R2
026A-4	297	3.5	25	322	101	59	64	R2
033A-4	405	3.5	25	430	179	105	76	R3
039A-4	500	3.5	25	525	179	105	76	R3
046A-4	594	3.5	25	619	179	105	76	R3
062A-4	810	3.5	25	835	134	79	69	R4
073A-4	999	3.5	25	1024	134	79	69	R4
088A-4	1215	3.5	25	1240	139	82	63	R5
106A-4	1485	3.5	25	1510	139	82	63	R5
145A-4	1440	4.1	36	1476	435	256	67	R6
169A-4	1940	4.1	36	1976	450	265	67	R7
206A-4	2310	4.1	36	2346	450	265	67	R7
246A-4	3300	4.1	36	3336	550	324	65	R8
293A-4	3900	4.1	36	3936	550	324	65	R8
363A-4	4800	4.1	36	4836	1150	677	68	R9
430A-4	6000	4.1	36	6036	1150	677	68	R9

3AXD00000586715.xls K

## UL (NEC)

Type ACQ580 -01-	Heat dissipation				Air flow		Noise	Frame size
	Main circuit at rated $I_{1N}$ at $I_N$	Control circuit minimum	Control circuit maximum	Main and control boards maximum	$m^3/h$	$ft^3/min$		
	W	W	W	W			dB(A)	
<b>3-phase <math>U_N = 400</math> or <math>480</math> V (380...415 V, 440...480 V)</b>								
02A1-4	20	3.5	25	45	43	25	59	R1
03A0-4	30	3.5	25	55	43	25	59	R1
03A5-4	41	3.5	25	66	43	25	59	R1
04A8-4	59	3.5	25	84	43	25	59	R1
06A0-4	81	3.5	25	106	43	25	59	R1
07A6-4	108	3.5	25	133	43	25	59	R1
012A-4	149	3.5	25	174	43	25	59	R1
014A-4	203	3.5	25	228	101	59	64	R2
023A-4	297	3.5	25	322	101	59	64	R2
027A-4	405	3.5	25	430	179	105	76	R3
034A-4	500	3.5	25	525	179	105	76	R3
044A-4	594	3.5	25	619	179	105	76	R3
052A-4	810	3.5	25	835	134	79	69	R4
065A-4	999	3.5	25	1024	134	79	69	R4
077A-4	1215	3.5	25	1240	139	82	63	R4
078A-4	1215	3.5	25	1240	139	82	63	R5
096A-4	1485	3.5	25	1510	139	82	63	R5
124A-4	1440	4.1	36	1476	435	256	67	R6
156A-4	1440	4.1	36	1976	450	265	67	R7
180A-4	1940	4.1	36	2346	450	265	67	R7
240A-4	3300	4.1	36	3336	550	324	65	R8
260A-4	3900	4.1	36	3936	550	324	65	R8
302A-4	3900	4.1	36	3936	550	324	68	R9
361A-4	4800	4.1	36	4836	1150	677	68	R9
414A-4	6000	4.1	36	6036	1150	677	68	R9

3AXD00000586715.xls K

■ Cooling air flow and heat dissipation for flange mounting (option +C135)

IEC

Type ACQ580 -01-	Heat dissipation (option +135)		Air flow (option +135)				Frame size
	Heatsink	Front	Heatsink		Front		
	W	W	m <sup>3</sup> /h	ft <sup>3</sup> /min	m <sup>3</sup> /h	ft <sup>3</sup> /min	
<b>3-phase U<sub>N</sub> = 400 or 480 V (380...415 V, 440...480 V)</b>							
145A-4	1251	189	435	256	52	31	R6
169A-4	1701	239	450	265	75	44	R7
206A-4	2034	276	450	265	75	44	R7
246A-4	2925	375	550	324	120	71	R8
293A-4	3465	435	550	324	120	71	R8
363A-4	4275	525	1150	677	170	100	R9
430A-4	5355	645	1150	677	170	100	R9

3AXD00000586715.xls K

UL (NEC)

Type ACQ580 -01-	Heat dissipation (option +135)		Air flow (option +135)				Frame size
	Heatsink	Front	Heatsink		Front		
	W	W	m <sup>3</sup> /h	ft <sup>3</sup> /min	m <sup>3</sup> /h	ft <sup>3</sup> /min	
<b>3-phase U<sub>N</sub> = 460 V (440...480 V)</b>							
124A-4	1251	189	435	256	52	31	R6
156A-4	1701	239	450	265	75	44	R7
180A-4	2034	276	450	265	75	44	R7
240A-4	2925	375	550	324	120	71	R8
260A-4	3465	435	550	324	120	71	R8
302A-4	3072	391	1150	677	170	100	R9
361A-4	4275	525	1150	677	170	100	R9
414A-4	5355	645	1150	677	170	100	R9

3AXD00000586715.xls K

## Terminal and lead-through data for the power cables

### IEC

Input, motor and DC cable lead-throughs, maximum wire sizes (per phase) and terminal screw sizes and tightening torques ( $T$ ) are given below.

Frame size	Cable lead-throughs		L1, L2, L3, T1/U, T2/V, T3/W terminals			Grounding terminals	
	Per cable type	$\varnothing^1$	Min wire size (solid/stranded) <sup>3)</sup>	Max wire size (solid/stranded)	$T$	Max wire size	$T$
	pcs	mm	mm <sup>2</sup>	mm <sup>2</sup>	N·m	mm <sup>2</sup>	N·m
R1	1	30	0.20/0.25	6/4	1.0	16/16	1.5
R2	1	30	0.5/0.5	16/16	1.5	16/16	1.5
R3	1	30	0.5/0.5	35/25	3.5	35/35	1.5
R4	1	45	0.5/0.5	50	4.0	35/35	1.5
R5	1	45	6	70	5.6	- <sup>2)</sup>	1.5
R6	1	45	25	150	30	- <sup>2)</sup>	1.5
R7	1	54	95	240	40	- <sup>2)</sup>	1.5
R8	2	45	2×50	2×150	40	- <sup>2)</sup>	1.5
R9	2	54	2×95	2×240	70	- <sup>2)</sup>	1.5

3AXD00000586715.xls K

<sup>1)</sup> Maximum cable diameter accepted. For the lead-through plate hole diameters, see chapter *Dimension drawings* on page 227.

<sup>2)</sup> Either cable lug (R5, see page 124) or clamp (R6...R9, see page 128) is used for grounding.

<sup>3)</sup> **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

**Note:** For the tightening torques of the grounding terminals, see sections *Connection procedure, frames R1...R4* on page 113, *Connection procedure, frame R5* on page 120 and *Connection procedure, frames R6...R9* on page 126.

Frame size	Screwdrivers for the terminals of the main circuit
R1	Combo: Slot 4 mm and PH1
R2	Combo: Slot 4.5 mm and PH2
R3, R4	PH2

3AXD00000586715.xls K



■ UL (NEC)

Input, motor, resistor and DC cable lead-throughs, maximum wire sizes (per phase) and terminal screw sizes and tightening torques (*T*) are given below.

Frame size	Cable lead-throughs		L1, L2, L3, T1/U, T2/V, T3/W terminals			Grounding terminals	
	Per cable type	Ø <sup>1)</sup>	Min wire size (solid/stranded) <sup>3)</sup>	Max wire size (solid/stranded)	<i>T</i>	Max wire size	<i>T</i>
	pcs	in	AWG	AWG	lbf·ft	AWG	lbf·ft
R1	1	1.18	24	10	0.7	6/6	1.1
R2	1	1.18	20	6	1.1	6/6	1.1
R3	1	1.18	20	2	2.6	2/2	1.1
R4	1	1.77	20	1	3.0	2/2	1.1
R5	1	1.77	10	2/0	4.1	2/2 <sup>2)</sup>	2.1
R6	1	1.77	4	300 MCM	22.1	350 MCM <sup>2)</sup>	1.6
R7	1	2.13	3/0	500 MCM	29.5	350 MCM <sup>2)</sup>	7.2
R8	2	1.77	2×1/0	2×300 MCM	29.6	2×350 MCM <sup>2)</sup>	7.2
R9	2	2.13	2×3/0	2×500 MCM	51.6	2×350 MCM <sup>2)</sup>	7.2

3AXD00000586715.xls K

1) Maximum cable diameter accepted. For the lead-through plate hole diameters, see chapter *Dimension drawings* on page 227.

2) Either cable lug (R5, see page 124) or cable clamp (R6...R9, see page 128) is used for grounding.

3) **Note:** Minimum wire size does not necessarily have enough current capability for full load. Make sure the installation complies with local laws and regulations.

**Note:** For the tightening torques of the grounding terminals, see sections *Connection procedure, frames R1...R4* on page 113, *Connection procedure, frame R5* on page 120 and *Connection procedure, frames R6...R9* on page 126.

Frame size	Screwdrivers for the terminals of the main circuit
R1	Combo: Slot 4 mm and PH1
R2	Combo: Slot 4.5 mm and PH2
R3, R4	PH2

3AXD00000586715.xls K

## Terminal and lead-through data for the control cables

### IEC

Control cable lead-throughs, wire sizes and tightening torques ( $T$ ) are given below.

Frame size	Cable lead-throughs		Control cable entries and terminal sizes			
	Holes	Max cable size mm	+24V, DCOM, DGND, EXT. 24V terminals		DI, AI/O, AGND, RO, STO terminals	
	pcs		Wire size mm <sup>2</sup>	$T$ N·m	Wire size mm <sup>2</sup>	$T$ N·m
R1	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R2	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R3	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R4	4	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R5	3	17	0.2...2.5	0.5...0.6	0.14...1.5	0.5...0.6
R6	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6
R7	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6
R8	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6
R9	4	17	0.14...2.5	0.5...0.6	0.14...2.5	0.5...0.6

3AXD00000586715.xls K

### UL (NEC)

Control cable lead-throughs, wire sizes and tightening torques ( $T$ ) are given below.

Frame size	Cable lead-throughs		Control cable entries and terminal sizes			
	Holes	Max cable size in	+24V, DCOM, DGND, EXT. 24V terminals		DI, AI/O, AGND, RO, STO terminals	
	pcs		Wire size AWG	$T$ lbf·ft	Wire size AWG	$T$ lbf·ft
R1	3	0.67	24...14	0.4	26...16	0.4
R2	3	0.67	24...14	0.4	26...16	0.4
R3	3	0.67	24...14	0.4	26...16	0.4
R4	4	0.67	24...14	0.4	26...16	0.4
R5	3	0.67	24...14	0.4	26...16	0.4
R6	4	0.67	26...14	0.4	26...16	0.4
R7	4	0.67	26...14	0.4	26...16	0.4
R8	4	0.67	26...14	0.4	26...16	0.4
R9	4	0.67	26...14	0.4	26...16	0.4

3AXD00000586715.xls K

## Electrical power network specification

---

<b>Voltage (<math>U_1</math>)</b>	Input voltage range 3~ 380...480 V AC +10%... -15%. This is indicated in the type designation label as typical input voltage levels 3~ 400/480 V AC.
<b>Network type</b>	Public low voltage networks. TN (grounded), IT (ungrounded) and corner-grounded TN systems. See section <a href="#">Frames R1...R3</a> on page 101. <b>Note:</b> Frames R4 and R5 cannot be used in corner-grounded TN systems.
<b>Rated conditional short-circuit current (IEC 61800-5-1)</b>	65 kA when protected by fuses given in the tables in section <a href="#">Fuses (IEC)</a> on page 190.
<b>Short-circuit current protection (UL 508C, UL 61800-5-1)</b>	US and Canada: The drive is suitable for use on a circuit capable of delivering not more than 100 kA symmetrical amperes (rms) at 480 V maximum when protected by fuses given in the table in section <a href="#">Fuses (UL)</a> on page 195.
<b>Frequency (<math>f_1</math>)</b>	47 to 63 Hz. This is indicated in the type designation label as typical input frequency level f1 (50/60 Hz).
<b>Imbalance</b>	Max. $\pm$ 3% of nominal phase to phase input voltage
<b>Fundamental power factor (<math>\cos \phi_1</math>)</b>	0.98 (at nominal load)

## Motor connection data

---

<b>Motor types</b>	Asynchronous AC induction motors, permanent magnet motors and synchronous reluctance motors
<b>Short-circuit current protection (IEC/EN 61800-5-1, UL 508C)</b>	The drive provides solid state short circuit protection for the motor connection per IEC/EN 61800-5-1, UL61800-5-1 and UL508C.
<b>Frequency (<math>f_2</math>)</b>	0...500 Hz. This is indicated in the type designation label as output frequency level f1 (0...500 Hz).
<b>Frequency resolution</b>	0.01 Hz
<b>Current</b>	See section <a href="#">Ratings</a> on page 178.
<b>Switching frequency</b>	2 kHz, 4 kHz, 8 kHz, 12 kHz (depends on the frame and parameter settings)

---

**Maximum recommended motor cable length****Operational functionality and motor cable length**

The drive is designed to operate with optimum performance with the following maximum motor cable lengths.

**Note:** Conducted and radiated emissions of these motor cable lengths do not comply with EMC requirements.

Frame size	Maximum motor cable length, 4 kHz			
	Scalar control		Vector control	
	m	ft	m	ft
<b>Standard drive, without external options</b>				
R1	100	330	100	330
R2	200	660	200	660
R3	300	990	300	990
R4	300	990	300	990
R5	300	990	300	990
R6	300	990	300	990
R7	300	990	300	990
R8	300	990	300	990
R9	300	990	300	990

3AXD00000586715.xls K

**Note 1:** In multimotor systems, the calculated sum of all motor cable lengths must not exceed the maximum motor cable length given in the table.

**Note 2:** Longer motor cables cause a motor voltage decrease which limits the available motor power. The decrease depends on the motor cable length and characteristics. Contact ABB for more information.

**EMC compatibility and motor cable length**

To comply with the European EMC Directive (standard EN 61800-3), use the following maximum motor cable lengths at 4 kHz switching frequency. See the table below.

Frame size	Maximum motor cable length, 4 kHz	
	m	ft
<b>EMC limits for Category C2 <sup>1)</sup></b> Standard drive with an internal EMC filter. See notes 1 and 2.		
R1	100	330
R2	100	330
R3	100	330
R4	100	330
R5	100	330
R6	150	492
R7	150	492
R8	150	492
R9	150	492
<b>EMC limits for Category C3 <sup>1)</sup></b> Standard drive with an internal EMC filter. See notes 3.		
R1	150	492
R2	150	492
R3	150	492
R4	100	330
R5	100	330
R6	150	492
R7	150	492
R8	150	492
R9	150	492

3AXD0000586715.xls K

<sup>1)</sup> See the terms in section [Definitions](#) on page 219.

**Note 1:** Radiated and conducted emissions are according to category C2 with a internal EMC filter. The internal EMC filter must be connected.

**Note 2:** Categories C1 and C2 meet requirements for connecting equipment to the public low-voltage networks.

**Note 3:** Radiated and conducted emissions are according to category C3 with an internal EMC filter. The internal EMC filter must be connected.

## Control connection data

---

### External power supply

Maximum power:

Frames R1...R5 25 W, 1.04 A at 24 V AC/DC  $\pm 10\%$   
with an option module

Frames R6...R9: 36 W, 1.50 A at 24 V AC/DC  $\pm 10\%$  as  
standard

Supplied from an external power supply through option  
module CMOD-01 or CMOD-02 with frames R1...R5. With  
frames R6...R9 no options are needed.

Terminal size:

Frames R1...R5: 0.2...2.5 mm<sup>2</sup>

Frames R6...R9: 0.14...2.5 mm<sup>2</sup>

### +24 V DC output (Term. 10)

Total load capacity of this outputs is 6.0 W (250 mA / 24 V)  
minus the power taken by the option modules installed on  
the board.

Terminal size:

Frames R1...R5: 0.2...2.5 mm<sup>2</sup>

Frames R6...R9: 0.14...2.5 mm<sup>2</sup>

### Digital inputs DI1...DI6 (Term. 13...18)

Input type: NPN/PNP

Terminal size:

Frames R1...R5: 0.14...1.5 mm<sup>2</sup>

Frames R6...R9: 0.14...2.5 mm<sup>2</sup>

#### DI1...DI5 (Term. 13...17)

12/24 V DC logic levels: "0" < 4 V, "1" > 8 V

$R_{in}$ : 3 kohm

Hardware filtering: 0.04 ms, digital filtering: 2 ms sampling

#### DI5 (Term. 17)

Can be used as a digital or frequency input.

12/24 V DC logic levels: "0" < 3 V, "1" > 8 V

$R_{in}$ : 3 kohm

Max. frequency 16 kHz

Symmetrical signal (duty cycle D = 0.50)

#### DI6 (Term. 18)

Can be used as a digital or PTC input.

Digital input mode

12/24 V DC logic levels: "0" < 4 V, "1" > 8 V

$R_{in}$ : 3 kohm

Hardware filtering: 0.04 ms, digital filtering: 2 ms sampling

**Note:** DI6 is not supported in the NPN configuration.


PTC mode – PTC thermistor can be connected between  
DI6 and +24VDC: < 1.5 kohm = '1' (low temperature),  
> 4 kohm = '0' (high temperature), open circuit = '0' (high  
temperature).



DI6 is not a reinforced/double insulated input. Connecting  
the motor PTC sensor to this input requires usage of a  
reinforced/double insulated PTC sensor inside the motor.

---

<b>Relay outputs RO1...RO3</b> <b>(Term. 19...27)</b>	250 V AC / 30 V DC, 2 A Terminal size: Frames R1...R5: 0.14...1.5 mm <sup>2</sup> Frames R6...R9: 0.14...2.5 mm <sup>2</sup> See sections <a href="#">Isolation areas, R1...R5</a> on page 210 and <a href="#">Isolation areas, R6...R9</a> on page 211.
<b>Analog inputs AI1 and AI2</b> <b>(Term. 2 and 5)</b>	Current/voltage input mode selected with a parameter. Current input: 0(4)...20 mA, $R_{in}$ : 100 ohm Voltage input: 0(2)...10 V, $R_{in}$ : > 200 kohm Terminal size: Frames R1...R5: 0.14...1.5 mm <sup>2</sup> Frames R6...R9: 0.14...2.5 mm <sup>2</sup> Inaccuracy: typical $\pm 1\%$ , max. $\pm 1.5\%$ of full scale
<b>Analog outputs AO1 and AO2</b> <b>(Term. 7 and 8)</b>	Current/voltage input mode selected with a parameter. Current output: 0...20 mA, $R_{load}$ : < 500 ohm Voltage output: 0...10 V, $R_{load}$ : > 100 kohm (AO1 only) Terminal size: Frames R1...R5: 0.14...1.5 mm <sup>2</sup> Frames R6...R9: 0.14...2.5 mm <sup>2</sup> Inaccuracy: $\pm 1\%$ of full scale (in voltage and current modes)
<b>Reference voltage output for analog inputs +10V DC</b> <b>(Term. 4)</b>	Max. 20 mA output Inaccuracy: $\pm 1\%$
<b>Safe torque off (STO) inputs IN1 and IN2</b> <b>(Term. 37 and 38)</b>	24 V DC logic levels: "0" < 5 V, "1" > 13 V $R_{in}$ : 2.47 kohm Terminal size: Frames R1...R5: 0.14...1.5 mm <sup>2</sup> Frames R6...R9: 0.14...2.5 mm <sup>2</sup>
<b>STO cable</b>	Maximum cable length 300 m (984 ft) between activation switch (K) and drive control board, see sections <a href="#">Wiring examples</a> on page 251 and <a href="#">Safety data</a> on page 260.
<b>Control panel - drive and drive - drive connection (panel bus)</b>	EIA-485, male RJ-45 connector, unshielded or shielded twisted pair cable, type CAT 5e or better, max. total cable length of the panel bus 100 m (in single or multiple cables)
<b>Control panel - PC connection</b>	USB Type Mini-B, max. cable length 3 m

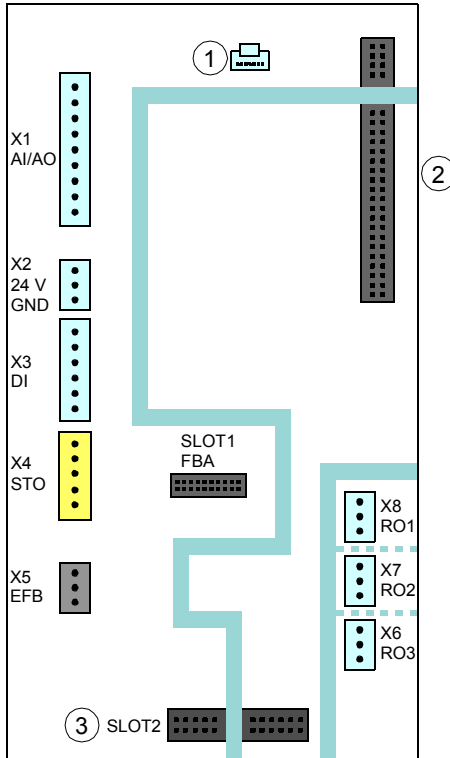Isolation areas, R1...R5




Symbol	Description
1	Panel port
2	Power unit connection
3	I/O extension
	Reinforced insulation (IEC/EN 61800-5-1:2007)
	Functional insulation (IEC/EN 61800-5-1:2007)

Below altitudes 4000 m (6562 ft): The terminals on the control board fulfill the Protective Extra Low Voltage (PELV) requirements (EN 50178): There is adequate insulation between the user terminals which only accept ELV voltages and terminals that accept higher voltages (relay outputs).



Isolation areas, R6...R9

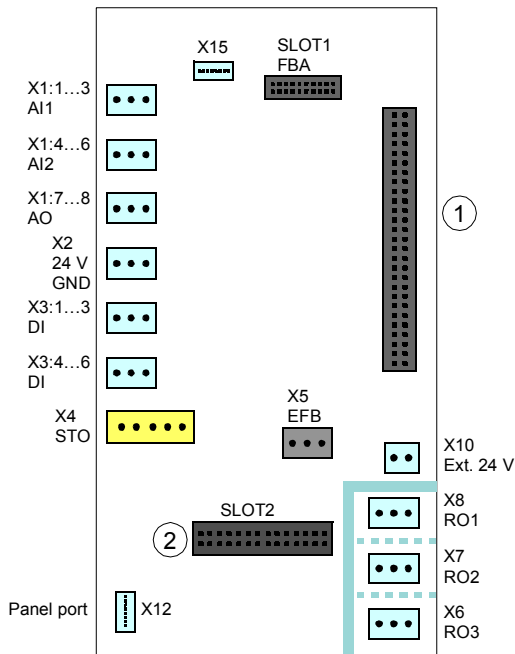


Symbol	Description
1	Power unit connection
2	I/O extension
	Reinforced insulation (IEC/EN 61800-5-1:2007)
	Functional insulation (IEC/EN 61800-5-1:2007)

The terminals on the control board fulfill the Protective Extra Low Voltage (PELV) requirements (EN 50178): There is reinforced insulation between the user terminals which only accept ELV voltages and terminals that accept higher voltages (relay outputs).


**Note:** There is functional insulation between the individual relay outputs.

**Note:** There is reinforced insulation on the power unit.

Grounding of frames R1...R5

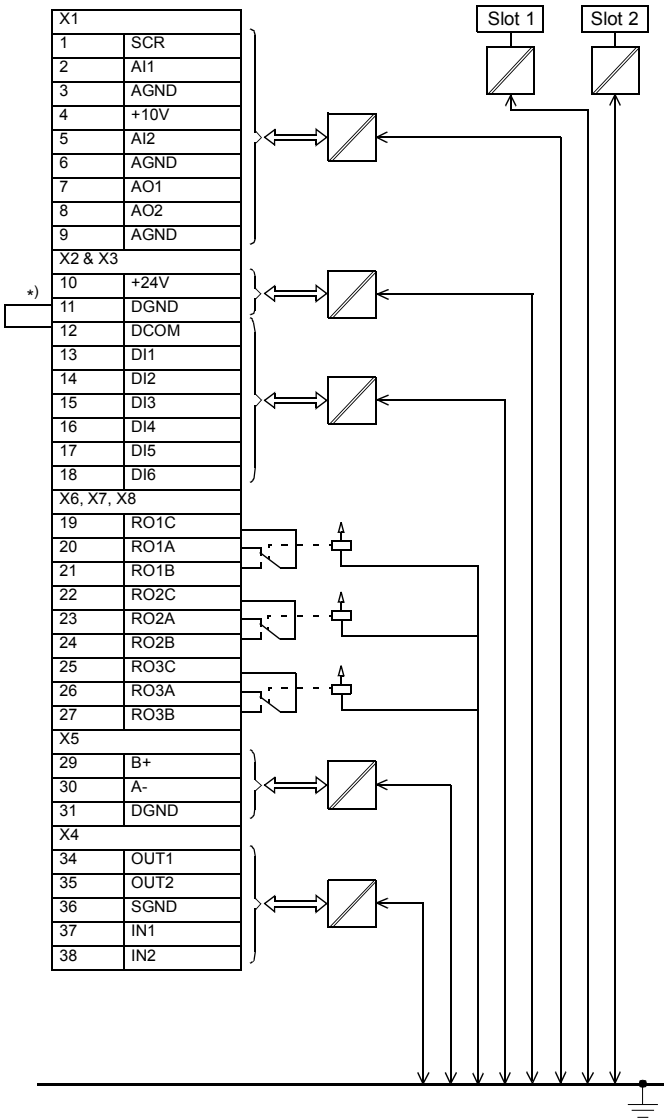

Grounding of frames R6...R9

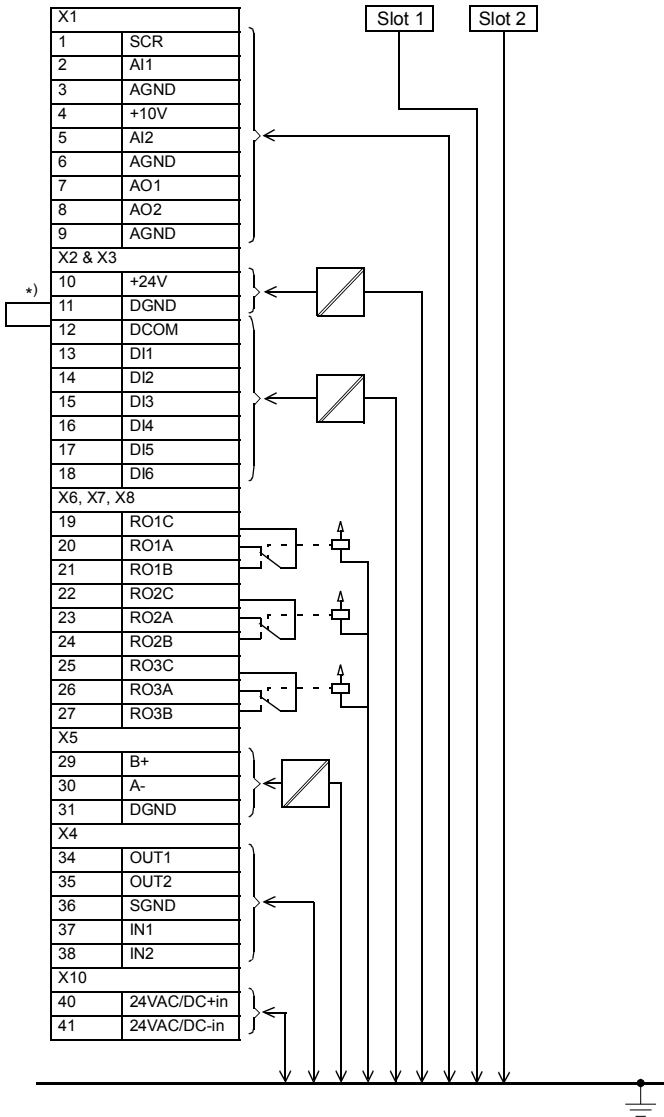

\* ) Jumper installed at the factory

## Auxiliary circuit power consumption

Maximum external power supply:

Frames R1...R5: 25 W, 1.04 A at 24 V AC/DC (with option modules CMOD-01, CMOD-02)

Frames R6...R9: 36 W, 1.50 A at 24 V AC/DC (as standard, terminals 40...41)

## Efficiency

Approximately 98% at nominal power level

## Degree of protection

<b>Degree of protection</b> (IEC/EN 60529)	IP21, IP55
<b>Enclosure types</b> (UL 508C/61800-5-1)	UL Type 1, UL Type 12
<b>Overvoltage category</b> (IEC 60664-1)	III
<b>Protective classes</b> (IEC/EN 61800-5-1)	I

## Ambient conditions

Environmental limits for the drive are given below. The drive is to be used in a heated, indoor, controlled environment. All printed circuit boards are conformal coated.

	<b>Operation</b> installed for stationary use	<b>Storage</b> in the protective package	<b>Transportation</b> in the protective package
<b>Installation site altitude</b>	<ul style="list-style-type: none"> <li>• 0 to 4000 m (13123 ft) above sea level <sup>1)</sup></li> <li>• 0 to 2000 m (6561 ft) above sea level <sup>2)</sup></li> </ul> Output derated above 1000 m (3281 ft), see page <a href="#">188</a> .	-	-

<b>Air temperature</b>	-15 to +50 °C (5 to 122 °F). 0 to -15 °C (32 to 5 °F): No frost allowed. Output derated above +40 °C (104 °F), see page <a href="#">182</a> .	-40 to +70 °C (-40 to +158 °F)	-40 to +70 °C (-40 to +158 °F)
<b>Relative humidity</b>	5 to 95%	Max. 95%	Max. 95%
	No condensation allowed. Maximum allowed relative humidity is 60% in the presence of corrosive gases.		
<b>Contamination levels</b> (IEC 60721-3-x)	IEC 60721-3-3: 2002: Classification of environmental conditions - Part 3-3: Classification of groups of environmental parameters and their severities - Stationary use of weather protected locations	IEC 60721-3-1: 1997	IEC 60721-3-2: 1997
Chemical gases	Class 3C2 Class 3C3 with +B056+C218	Class 1C2	Class 2C2
Solid particles	Class 3S2. No conductive dust allowed.	Class 1S3 (packing must support this, otherwise 1S2)	Class 2S2
<b>Pollution degree</b> (IEC/EN 61800-5-1)	Pollution degree 2	-	-
<b>Atmospheric pressure</b>	70 to 106 kPa 0.7 to 1.05 atmospheres	70 to 106 kPa 0.7 to 1.05 atmospheres	60 to 106 kPa 0.6 to 1.05 atmospheres
<b>Vibration</b> (IEC 60068-2)	Max. 1 mm (0.04 in) (5 to 13.2 Hz), max. 7 m/s <sup>2</sup> (23 ft/s <sup>2</sup> ) (13.2 to 100 Hz) sinusoidal	-	-

<b>Vibration (ISTA)</b>	-	<p><b>R1...R4 (ISTA 1A):</b> Displacement, 25 mm peak to peak, 14200 vibratory impacts</p> <p><b>R5...R9 (ISTA 3E):</b> Random, overall Grms level of 0.52</p>															
<b>Shock/Drop (ISTA)</b>	Not allowed	<p><b>R1...R4 (ISTA 1A):</b> Drop, 6 faces, 3 edges and 1 corner</p> <table border="1"> <thead> <tr> <th>Weight range</th> <th>mm</th> <th>in</th> </tr> </thead> <tbody> <tr> <td>0...10 kg (0...22 lb)</td> <td>760</td> <td>29.9</td> </tr> <tr> <td>10...19 kg (22...42 lb)</td> <td>610</td> <td>24.0</td> </tr> <tr> <td>19...28 kg (42...62 lb)</td> <td>460</td> <td>18.1</td> </tr> <tr> <td>28...41 kg (62...90 lb)</td> <td>340</td> <td>13.4</td> </tr> </tbody> </table> <p><b>R5...R9 (ISTA 3E):</b> Shock, incline impact: 1.1 m/s (3.61 ft/s)</p> <p>Shock, rotational edge drop: 200 mm (7.9 in)</p>	Weight range	mm	in	0...10 kg (0...22 lb)	760	29.9	10...19 kg (22...42 lb)	610	24.0	19...28 kg (42...62 lb)	460	18.1	28...41 kg (62...90 lb)	340	13.4
Weight range	mm	in															
0...10 kg (0...22 lb)	760	29.9															
10...19 kg (22...42 lb)	610	24.0															
19...28 kg (42...62 lb)	460	18.1															
28...41 kg (62...90 lb)	340	13.4															

<sup>1)</sup> For neutral-grounded TN and TT systems and non-corner grounded IT systems.

See also section [Limiting relay output maximum voltages at high installation altitudes](#) on page 92.

<sup>2)</sup> For corner-grounded TN, TT and IT systems.

## Materials

### Drive enclosure

- PC/ABS 3 mm, PC+GF10 3mm, color NCS 1502-Y (RAL 9002 / PMS 1C Cool Grey), RAL 9002 and PMS 653 C.
- hot-dip zinc coated steel sheet 1.5 to 2.5 mm, thickness of coating 100 micrometers, color NCS 1502-Y

### Package

Plywood, cardboard and molded pulp. Foam cushions PE, PP-E, bands PP.

### Disposal

The main parts of the drive can be recycled to preserve natural resources and energy. Product parts and materials should be dismantled and separated.

Generally all metals, such as steel, aluminum, copper and its alloys, and precious metals can be recycled as material. Plastics, rubber, cardboard and other packaging material can be used in energy recovery. Printed circuit boards and large electrolytic capacitors need selective treatment according to IEC 62635 guidelines. To aid recycling, plastic parts are marked with an appropriate identification code.

Contact your local ABB distributor for further information on environmental aspects and recycling instructions for professional recyclers. End of life treatment must follow international and local regulations.

## Applicable standards

---

The drive complies with the following standards. The compliance with the European Low Voltage Directive is verified according to standard EN 61800-5-1.

<b>EN 60204-1:2006 + AC:2010</b>	<i>Safety of machinery. Electrical equipment of machines. Part 1: General requirements. Provisions for compliance:</i> The final assembler of the machine is responsible for installing - emergency-stop device - supply disconnecting device.
<b>IEC/EN 60529:1992 + A2: 2013</b>	<i>Degrees of protection provided by enclosures (IP code)</i>
<b>EN 61000-3-12:2011</b>	<i>Electromagnetic compatibility (EMC) - Part 3-12: Limits - Limits for harmonic currents produced by equipment connected to public low-voltage systems with input current</i> The standard is met with a Rsce (transformer short circuit ratio) of 350 or higher.
<b>IEC/EN 61800-3:2004 + A1:2012</b>	<i>Adjustable speed electrical power drive systems. Part 3: EMC requirements and specific test methods</i>
<b>IEC/EN 61800-5-1:2007</b>	<i>Adjustable speed electrical power drive systems. Part 5-1: Safety requirements – electrical, thermal and energy</i>
<b>IEC 60664-1:2007</b>	<i>Insulation coordination for equipment within low-voltage systems. Part 1: Principles, requirements and tests.</i>
<b>UL 508C 3rd edition</b>	<i>UL Standard for Safety, Power Conversion Equipment, second edition</i>
<b>NEMA 250:2008</b>	<i>Enclosures for Electrical Equipment (1000 Volts Maximum)</i>

---

## CE marking

A CE mark is attached to the drive to verify that the drive follows the provisions of the European Low Voltage, EMC and RoHS Directives. The CE marking also verifies that the drive, in regard to its safety functions (such as Safe torque off), conforms with the Machinery Directive as a safety component.

### ■ **Compliance with the European Low Voltage Directive**

The compliance with the European Low Voltage Directive has been verified according to standard EN 61800-5-1:2007. The declaration of conformity (3AXD10000486283) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

### ■ **Compliance with the European EMC Directive**

The EMC Directive defines the requirements for immunity and emissions of electrical equipment used within the European Union. The EMC product standard (EN 61800-3:2004 + A1:2012) covers requirements stated for drives. See section [Compliance with the EN 61800-3:2004 + A1:2012](#) below. The declaration of conformity (3AXD10000486283) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

### ■ **Compliance with the European ROHS II Directive 2011/65/EU**

The RoHS II Directive defines the restriction of the use of certain hazardous substances in electrical and electronic equipment. The declaration of conformity (3AXD10000497771) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

### ■ **Compliance with the European Machinery Directive 2006/42/EC 2nd Edition – June 2010**

The drive is a machinery component that can be integrated into a wide range of machinery categories as specified in European Commission's *Guide to application of the Machinery Directive 2006/42/EC 2nd Edition – June 2010*. The declaration of conformity (3AXD10000486283) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

### **Validating the operation of the Safe torque off function**

See chapter [Safe torque off function](#) on page 247.

---



## Compliance with the EN 61800-3:2004 + A1:2012

### ■ Definitions

EMC stands for **E**lectromagnetic **C**ompatibility. It is the ability of electrical/electronic equipment to operate without problems within an electromagnetic environment. Likewise, the equipment must not disturb or interfere with any other product or system within its locality.

*First environment* includes establishments connected to a low-voltage network which supplies buildings used for domestic purposes.

*Second environment* includes establishments connected to a network not directly supplying domestic premises.

*Drive of category C1:* drive of rated voltage less than 1000 V and intended for use in the first environment.

*Drive of category C2:* drive of rated voltage less than 1000 V and intended to be installed and started up only by a professional when used in the first environment.

**Note:** A professional is a person or organization having necessary skills in installing and/or starting up power drive systems, including their EMC aspects.

*Drive of category C3:* drive of rated voltage less than 1000 V, intended for use in the second environment and not intended for use in the first environment.

### ■ Category C1

The conducted emission limits are complied with the following provisions:

1. The optional EMC C1 filter is selected according to the documentation and installed as specified in the EMC C1 filter manual. See *Main switch and EMC C1 filter options (+F278, +F316, +E223) installation supplement for ACS580-01, ACH580-01 and ACH580-01 frames R1 to R5 (3AXD50000155132 [Multilingual])*. Only available for frames R1...R5, up to 55 kW.
2. The motor and control cables are selected as specified in this manual.
3. The drive is installed according to the instructions given in this manual.
4. The maximum motor cable length with 2 kHz switching frequency is 10 m.

---

**WARNING!** In a domestic environment, this product may cause radio interference, in which case supplementary mitigation measures may be required.

---

## ■ Category C2

The emission limits are complied with the following provisions:

1. The motor and control cables are selected as specified in this manual.
2. The drive is installed according to the instructions given in this manual.
3. For the maximum motor cable length with 4 kHz switching frequency, see page [206](#).

---

**WARNING!** The drive may cause radio interference if used in residential or domestic environment. The user is required to take measures to prevent interference, in association to the requirements for the CE compliance listed above, if necessary.

---

**Note:** Do not install a drive with the internal EMC filter connected on IT (ungrounded). The supply network becomes connected to ground potential through the internal EMC filter capacitors which may cause danger or damage to the drive. For disconnecting the EMC filter see page [101](#).

**Note:** Do not install a drive with internal EMC filter connected on corner-grounded TN systems; otherwise the drive will be damaged. For disconnecting the internal EMC filter see page [101](#).

## ■ Category C3

The drive complies with the standard with the following provisions:

1. The motor and control cables are selected as specified in this manual.
2. The drive is installed according to the instructions given in this manual.
3. For the maximum motor cable length with 4 kHz switching frequency, see page [206](#)

---


**WARNING!** A drive of category C3 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.

---

**Category C4**

If the provisions under **Category C3** cannot be met, the requirements of the standard can be met as follows:

1. It is ensured that no excessive emission is propagated to neighboring low-voltage networks. In some cases, the inherent suppression in transformers and cables is sufficient. In doubt, the supply transformer with static screening between the primary and secondary windings can be used.

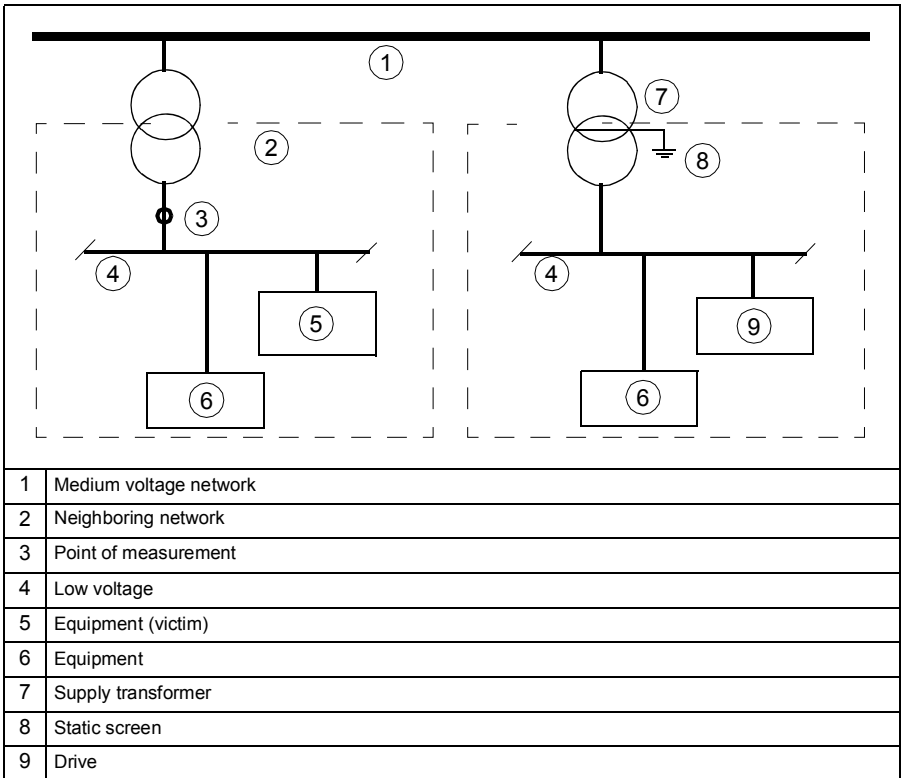

2. An EMC plan for preventing disturbances is drawn up for the installation. A template is available from the local ABB representative.
3. The motor and control cables are selected as specified in this manual.
4. The drive is installed according to the instructions given in this manual.

**WARNING!** A drive of category C4 is not intended to be used on a low-voltage public network which supplies domestic premises. Radio frequency interference is expected if the drive is used on such a network.



## UL marking

The drive is cULus Listed.

### ■ UL checklist



---

**WARNING!** Operation of this drive requires detailed installation and operation instructions provided in the hardware and firmware manuals. The manuals can be found on the Internet. Depending on the product series, the drive package may contain the manuals in electric format or as hard copies (as standard or ordered with option codes with the drive). Hard copies of the manuals can also be ordered through the manufacturer separately. Retain the hard copies of the manuals with the drive.

---

- Make sure that the drive type designation label includes the cULus Listed marking.
- **CAUTION - Risk of electric shock.** After disconnecting the input power, always wait for 5 minutes to let the intermediate circuit capacitors discharge before you start working on the drive, motor or motor cable.
- The drive is to be used in a heated, indoor controlled environment. The drive must be installed in clean air according to the enclosure classification. Cooling air must be clean, free from corrosive materials and electrically conductive dust.
- The maximum surrounding air temperature is 40 °C (104 °F) at rated current for all UL Type 1 and UL Type 12 frames. The current is derated for 40 to 50 °C (104 to 122 °F).
- The drive is suitable for use in a circuit capable of delivering not more than 100,000 rms symmetrical amperes, 480 V maximum when protected by the UL fuses given in the table on page 193. The ampere rating is based on tests done according to the appropriate UL standard.
- The cables located within the motor circuit must be rated for at least 75 °C (167 °F) in UL-compliant installations.
- The input cable must be protected with fuses. Suitable UL (class T) fuses are listed on page 193. These fuses provide branch circuit protection in accordance with the National Electrical Code (NEC) and Canadian Electrical Code. For installation in the United States, obey any other applicable local codes. For installation in Canada, obey any applicable provincial codes.

**Note:** Circuit breakers must not be used without fuses in the USA. See page 196 for suitable circuit breakers.



**WARNING!** The opening of the branch-circuit protective device may be an indication that a fault current has been interrupted. To reduce the risk of fire

---

or electric shock, current-carrying parts and other components of the controller should be examined and replaced if damaged.

- The drive provides motor overload protection. For the adjustments, see the firmware manual.
  - For drive overvoltage category, see page [214](#). For pollution degree, see page [215](#).
  - To maintain the environmental integrity of the enclosure, replace the cable grommets with field-installed industrial conduit hubs or closure plates required by the enclosure type (or better).
-



## China RoHS marking

The *People's Republic of China Electronic Industry Standard* (SJ/T 11364-2014) specifies the marking requirements for hazardous substances in electronic and electrical products. The green mark is attached to the drive to verify that it does not contain toxic and hazardous substances or elements above the maximum concentration values, and that it is an environmentally-friendly product which can be recycled and reused.



## RCM marking

See the type designation label for the valid markings of your drive. Regulatory Compliance (RCM) Mark is required in Australia and New Zealand. A RCM mark is attached to the drive to verify compliance with the relevant standard (IEC/EN 61800-3:2004 – *Adjustable speed electrical power drive systems – Part 3: EMC product standard including specific test methods*), mandated by the Trans-Tasman Electromagnetic Compatibility Scheme. For fulfilling the requirements of the standard, see section Compliance with IEC/EN 61800-3:2004 on page 382. The declaration of conformity (3AXD10000493120) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.



## WEEE marking

The drive is marked with the wheelee bin symbol. It indicates that at the end of life the drive should enter the recycling system at an appropriate collection point and not placed in the normal waste stream. See section [Disposal](#) on page 216.



## EAC marking

See the type designation label for the valid markings of your drive. EAC marking is required in Russia, Belarus and Kazakhstan. The EAC certificate of conformity (3AXD10000312900) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

## Disclaimer

The manufacturer shall have no obligation with respect to any product which (i) has been improperly repaired or altered; (ii) has been subjected to misuse, negligence or accident; (iii) has been used in a manner contrary to the manufacturer's instructions; or (iv) has failed as a result of ordinary wear and tear.

## Cyber security disclaimer


This product is designed to be connected to and to communicate information and data via a network interface. It is Customer's sole responsibility to provide and

continuously ensure a secure connection between the product and Customer network or any other network (as the case may be). Customer shall establish and maintain any appropriate measures (such as but not limited to the installation of firewalls, application of authentication measures, encryption of data, installation of anti-virus programs, etc) to protect the product, the network, its system and the interface against any kind of security breaches, unauthorized access, interference, intrusion, leakage and/or theft of data or information. ABB and its affiliates are not liable for damages and/or losses related to such security breaches, any unauthorized access, interference, intrusion, leakage and/or theft of data or information.

---





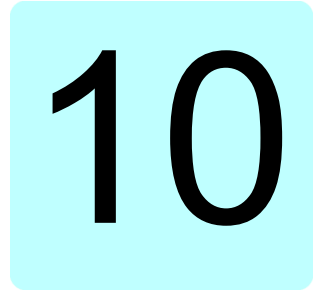

# Dimension drawings

---

## Contents of this chapter



This chapter shows the dimension drawings of the ACQ580-01.

**Note:** The dimensions are given in millimeters and [inches].

# Frame R1, IP21 (UL Type 1)

IP21

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

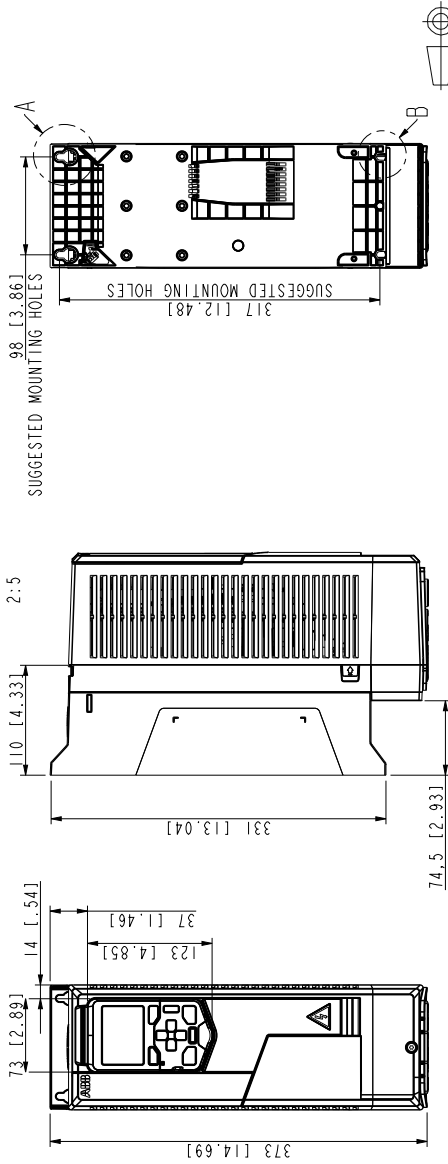
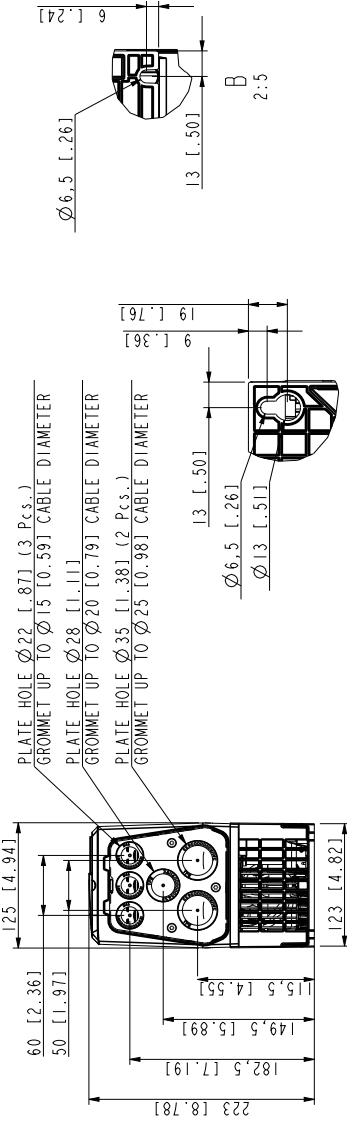


3AXD10000601652

# Frame R1, IP55 (UL Type 12)


First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

 IP55

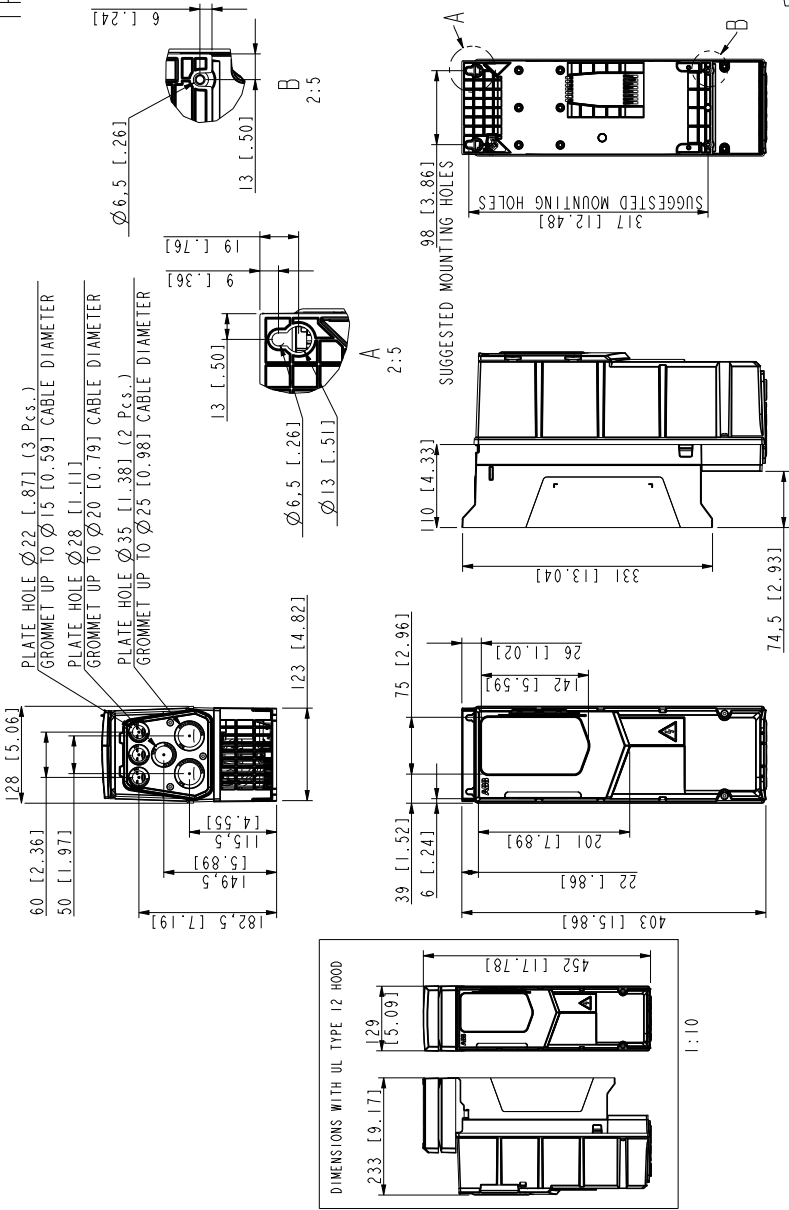


# Frame R2, IP21 (UL Type 1)

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

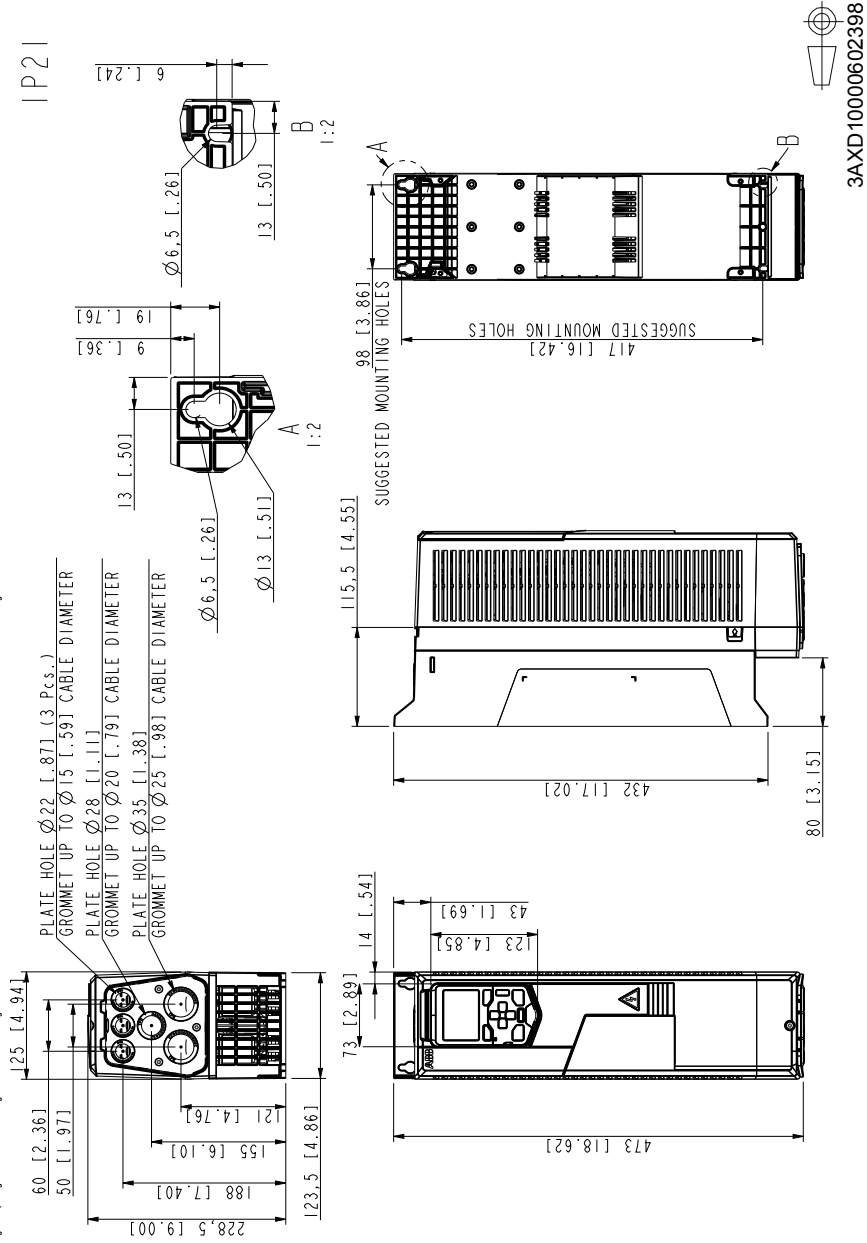

# Frame R2, IP55 (UL Type 12)

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

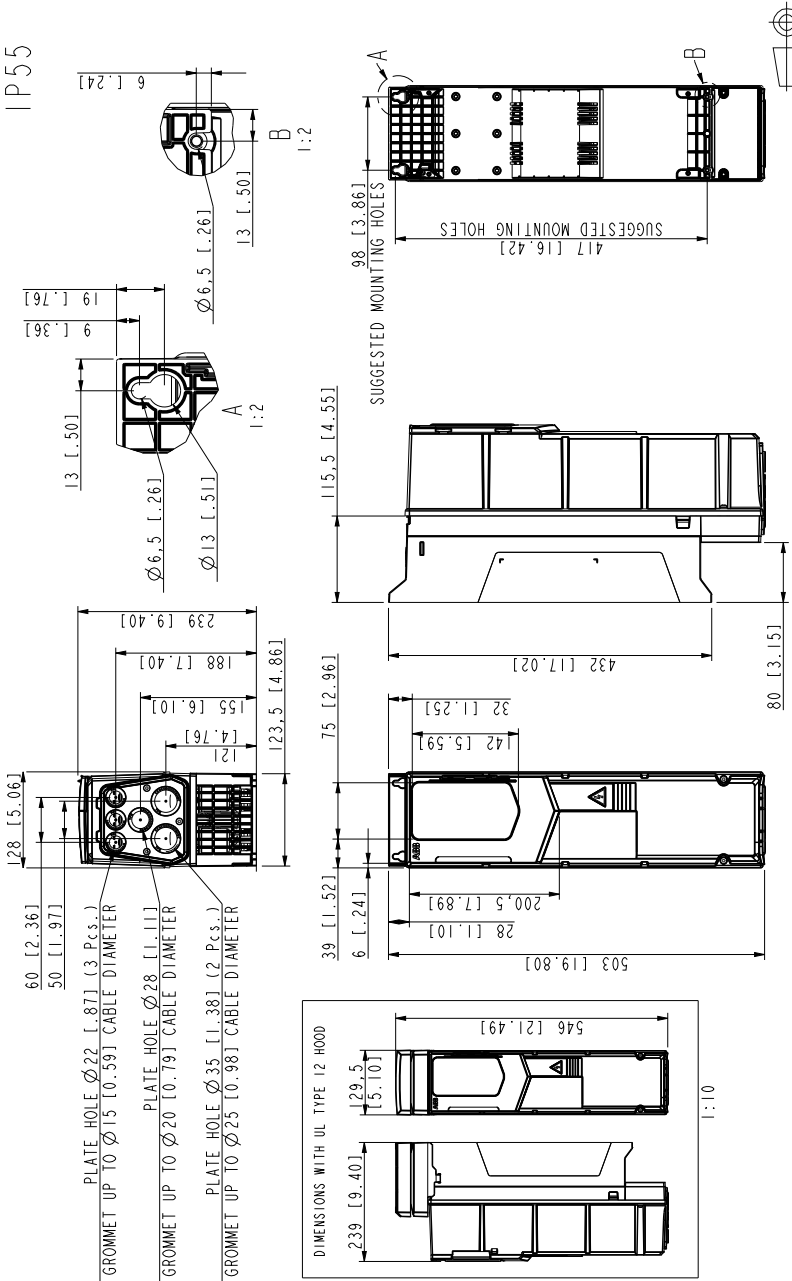


3AXD10000602401




# Frame R3, IP55 (UL Type 12)

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DMG/DMF conversion.

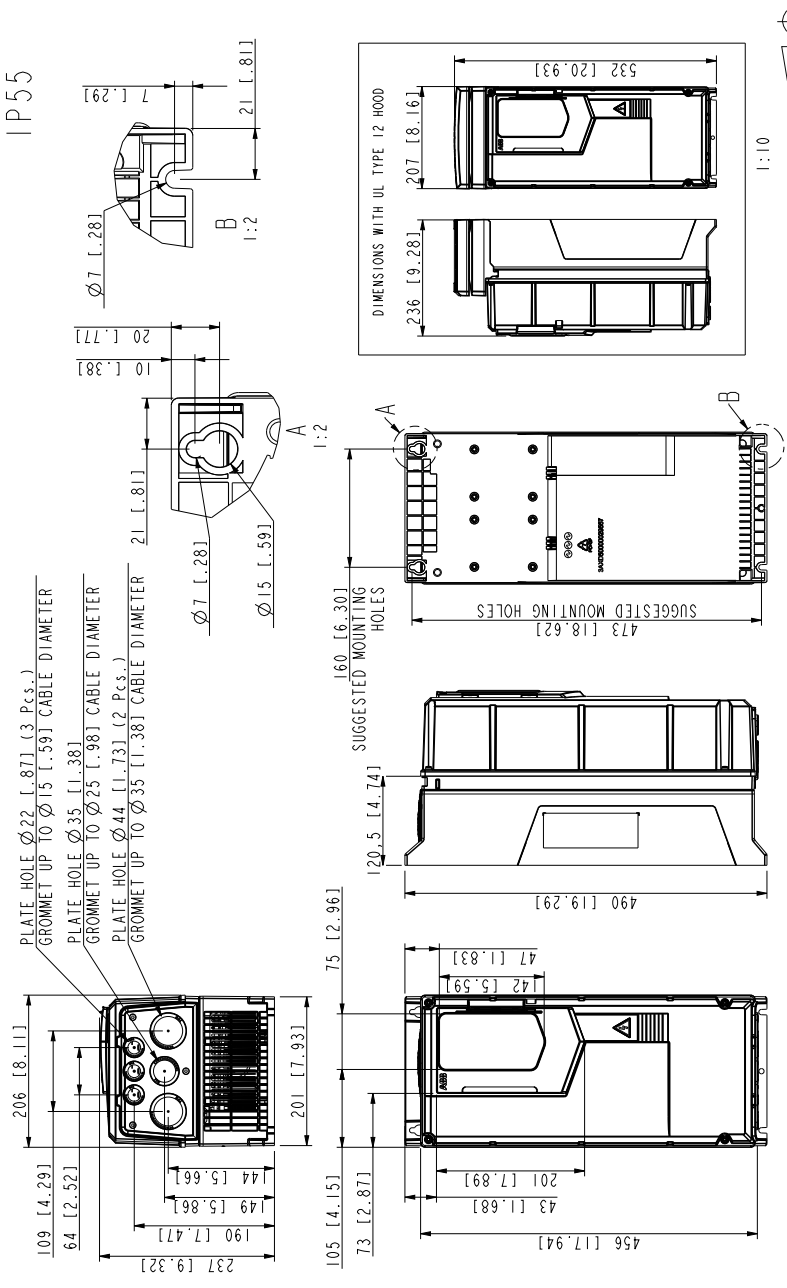

3AXD10000602519



# Frame R4, IP21 (UL Type 1)

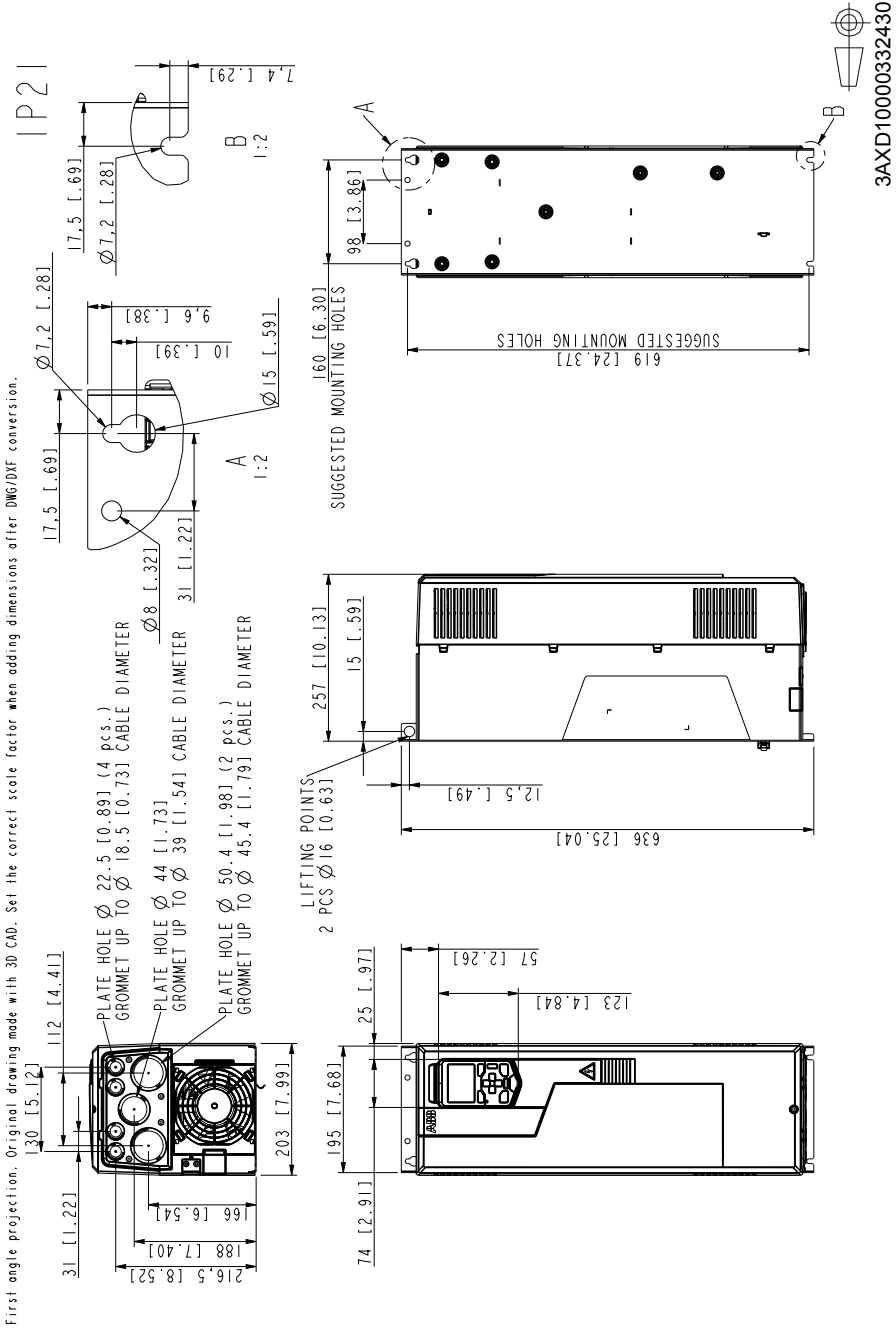




# Frame R4, IP55 (UL Type 12)

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DMG/DXF conversion.

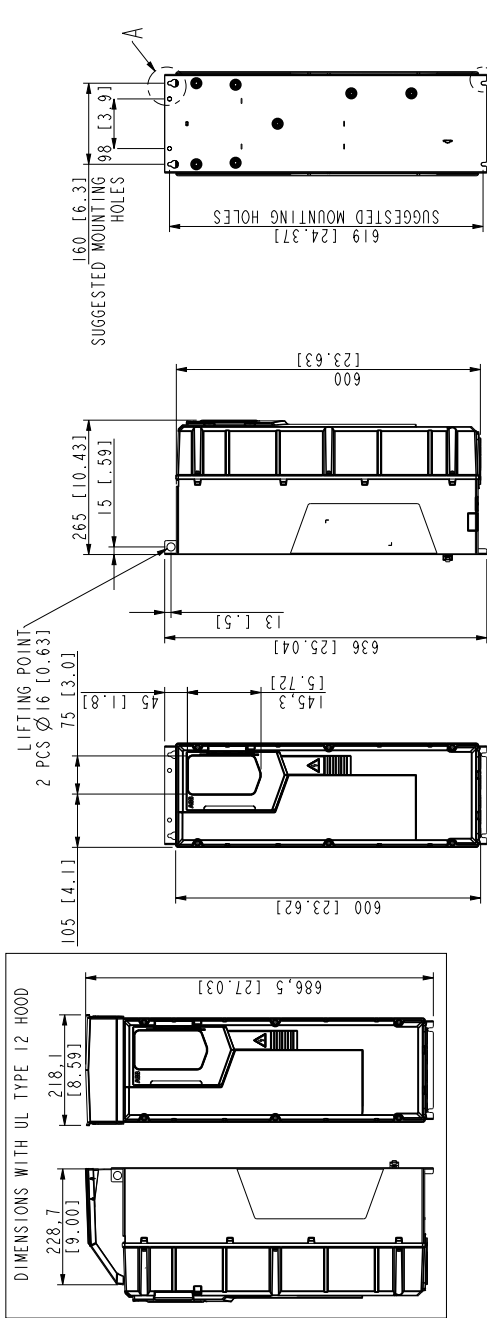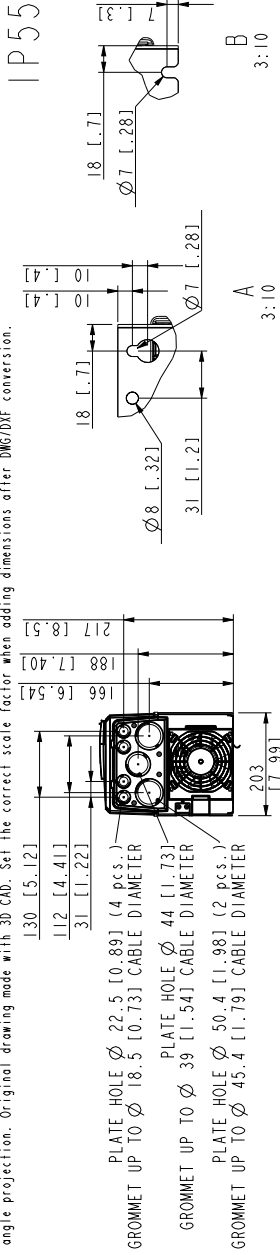

# Frame R5, IP21 (UL Type 1)




First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DAE conversion.

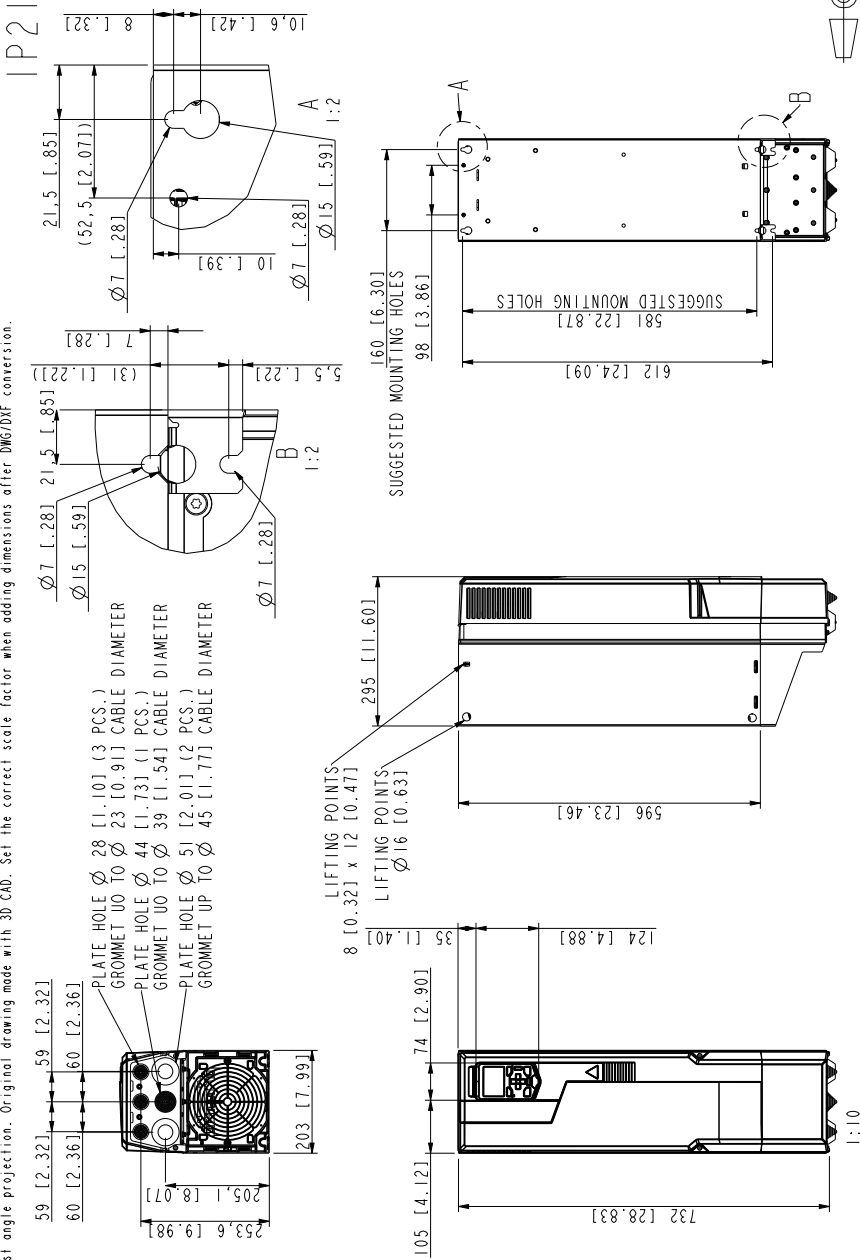

# Frame R5, IP55 (UL Type 12)

IP55


First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DMG/DMF conversion.

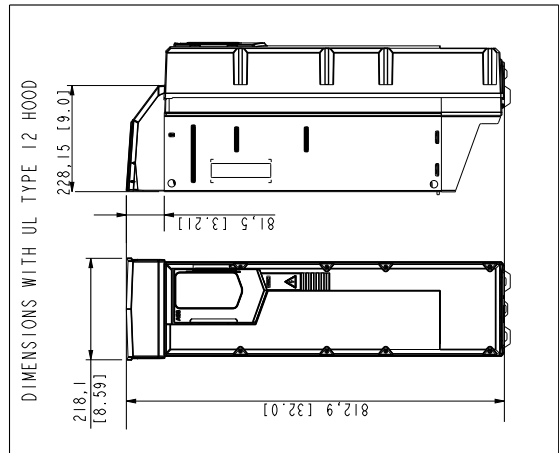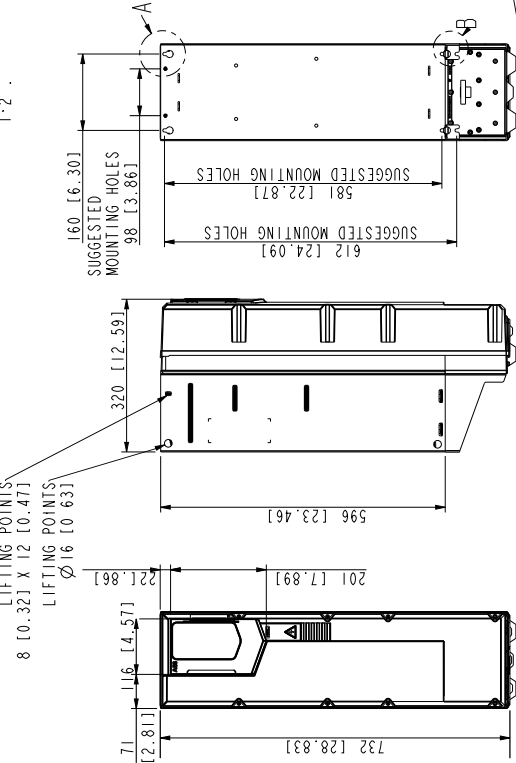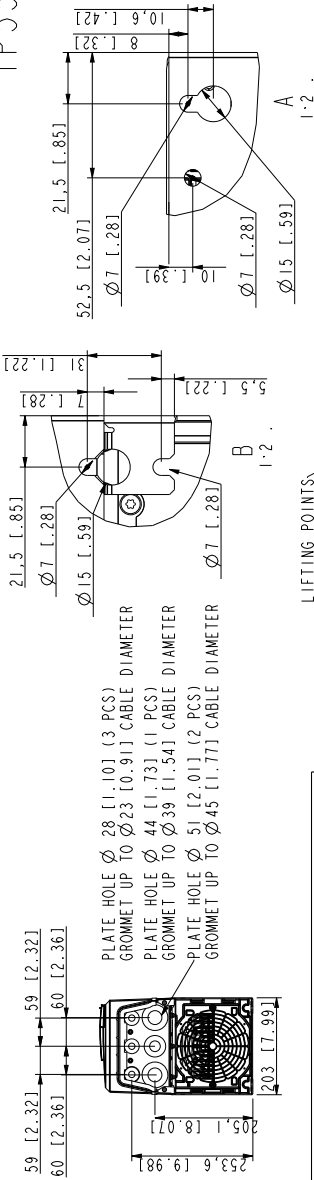

3AXD10000415964

# Frame R6, IP21 (UL Type 1)


First angle projection. Original drawing made with Pro/ENGINEER. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

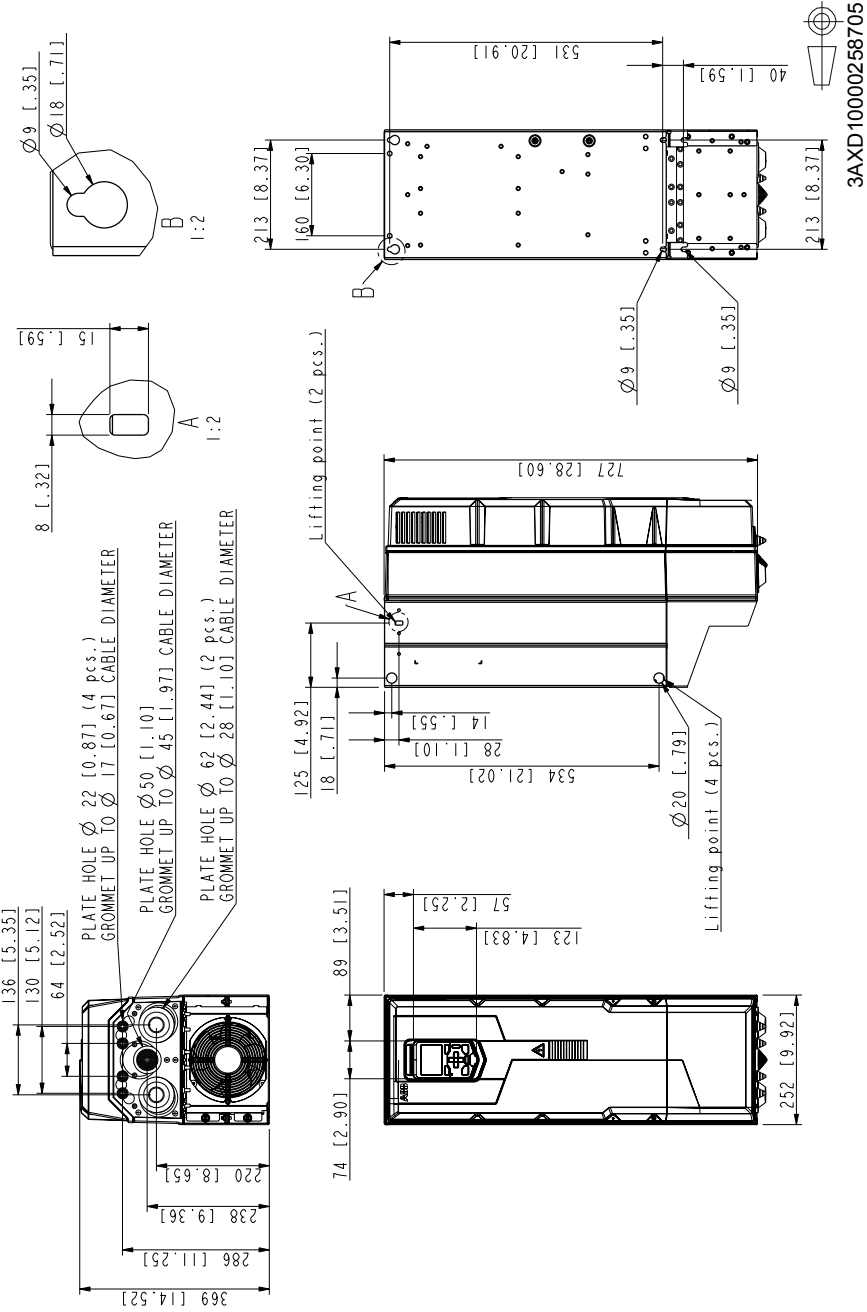

# Frame R6, IP55 (UL Type 12)

IP55


First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

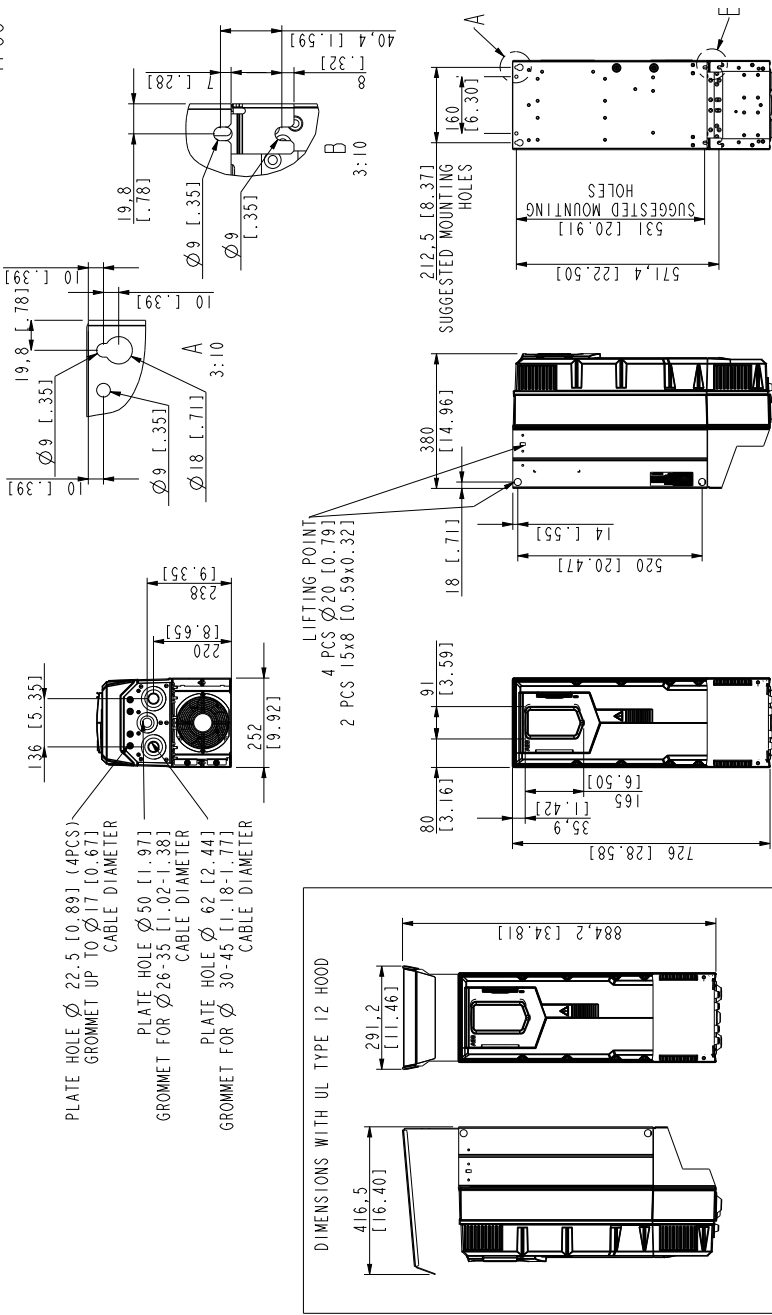

3AXD10000330667



# Frame R7, IP21 (UL Type 1)

First angle projection. Original drawing made with Pro/ENGINEER. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

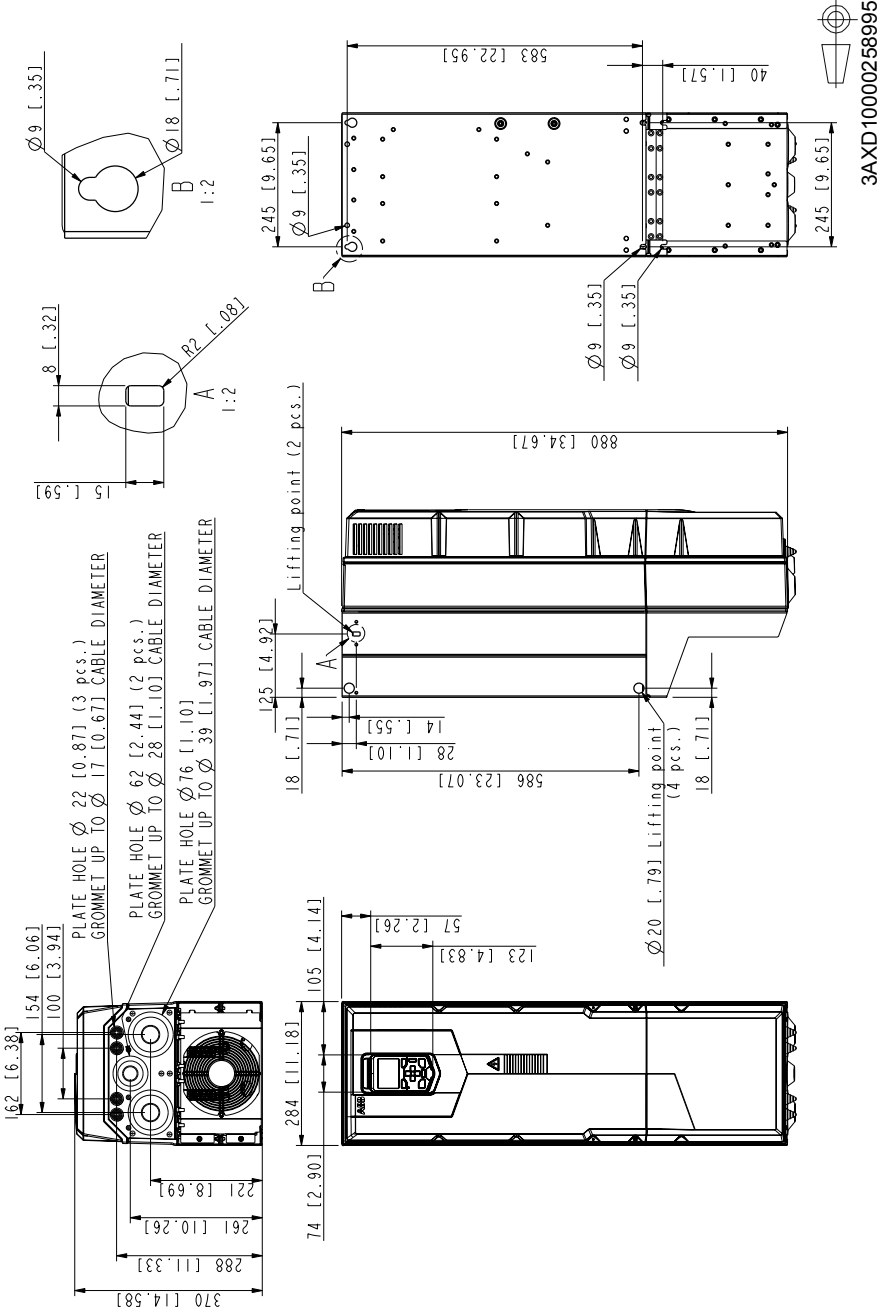


# Frame R7, IP55 (UL Type 12)


IP55

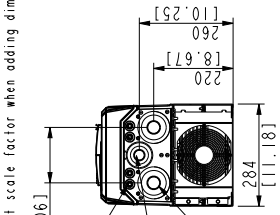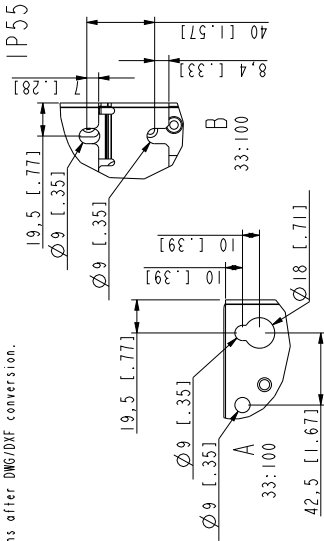

- PLATE HOLE  $\varnothing 22,5 [0.89]$  (4pcs.)  
GROMMET UP TO  $\varnothing 17 [0.67]$   
CABLE DIAMETER
- PLATE HOLE  $\varnothing 62 [2.44]$   
GROMMET UP TO  $\varnothing 30-45 [1.18-1.77]$   
CABLE DIAMETER
- PLATE HOLE  $\varnothing 76 [2.99]$  (2pcs.)  
GROMMET UP TO  $\varnothing 40-60 [1.57-2.36]$   
CABLE DIAMETER

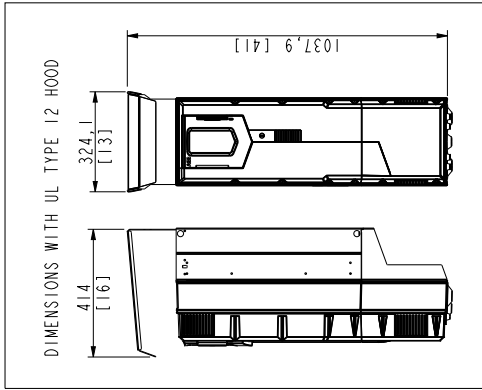

LIFTING POINT  
4 PCS  $\varnothing 20 [0.79]$   
2PCS  $15 \times 8 [0.59 \times 0.32]$

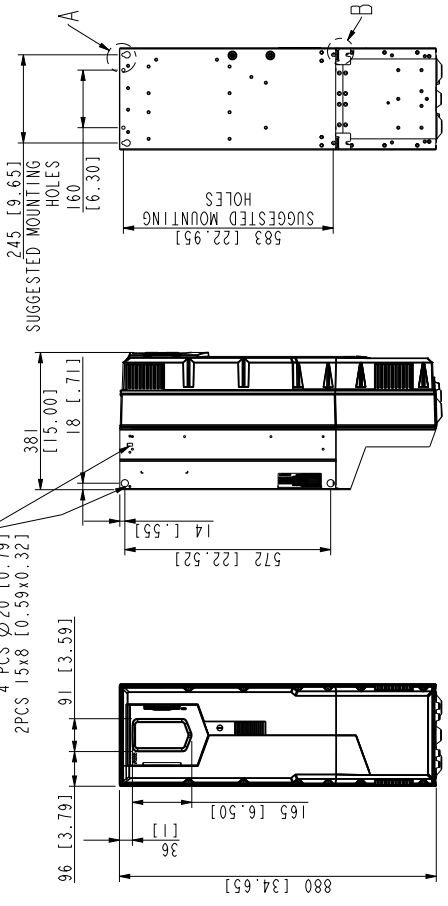


3AXD10000330932

3:50

# Frame R8, IP21 (UL Type 1)

First angle projection. Original drawing made with Pro/ENGINEER. Set the correct scale factor when adding dimensions after DWG/DXF conversion.

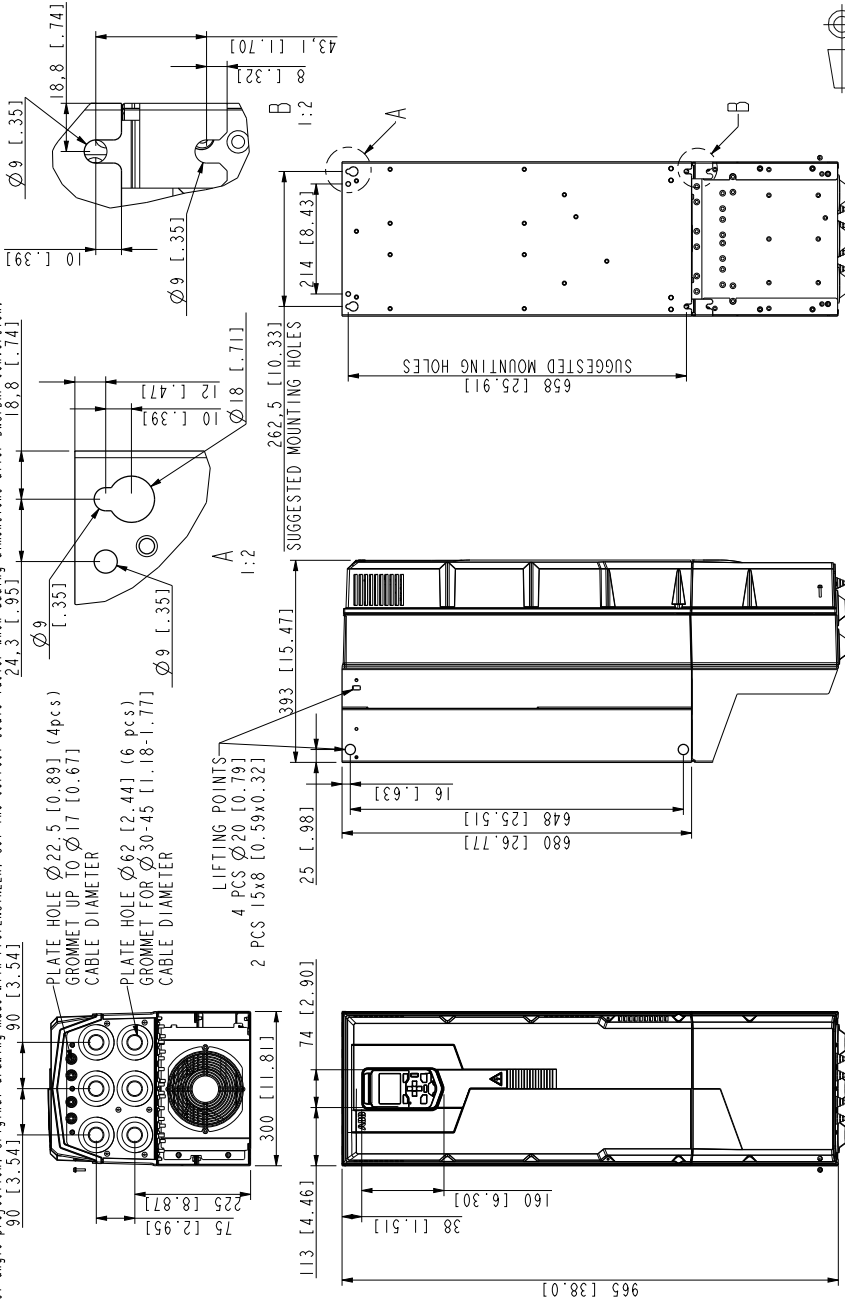




3AXD10000287670



# Frame R8, IP55 (UL Type 12)


First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DMG/DFX conversion.

IP55

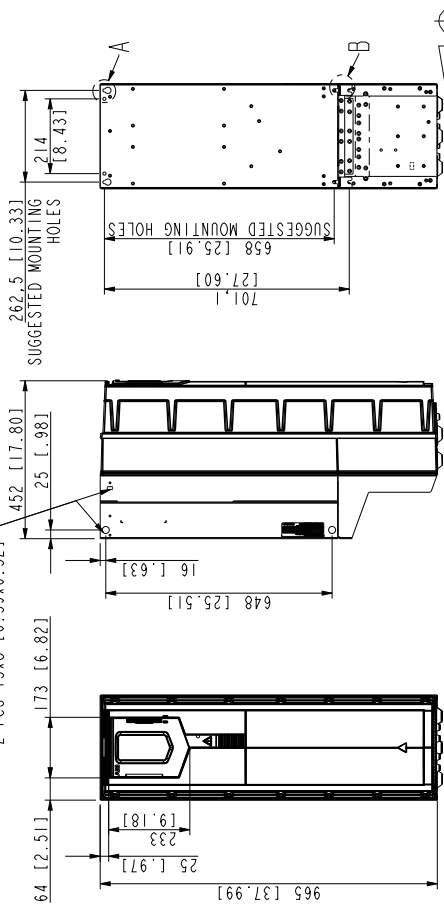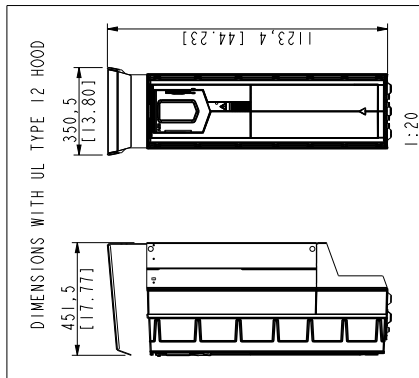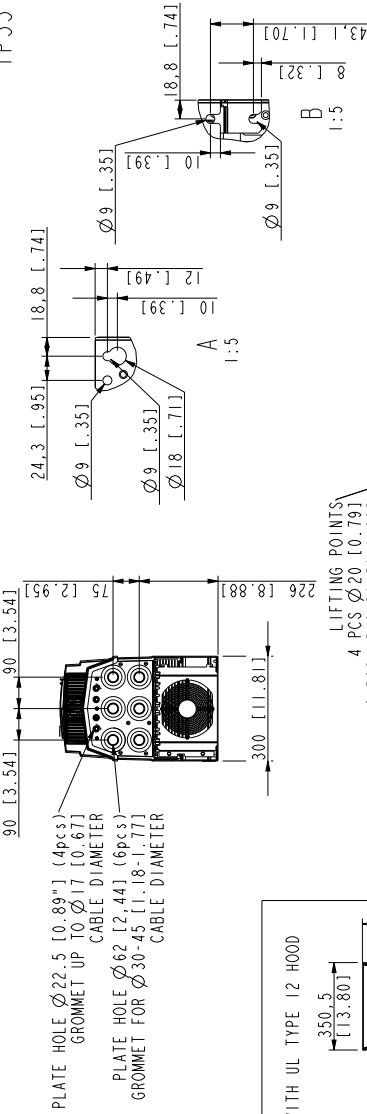

3AXD10000332446


# Frame R9, IP21 (UL Type 1)

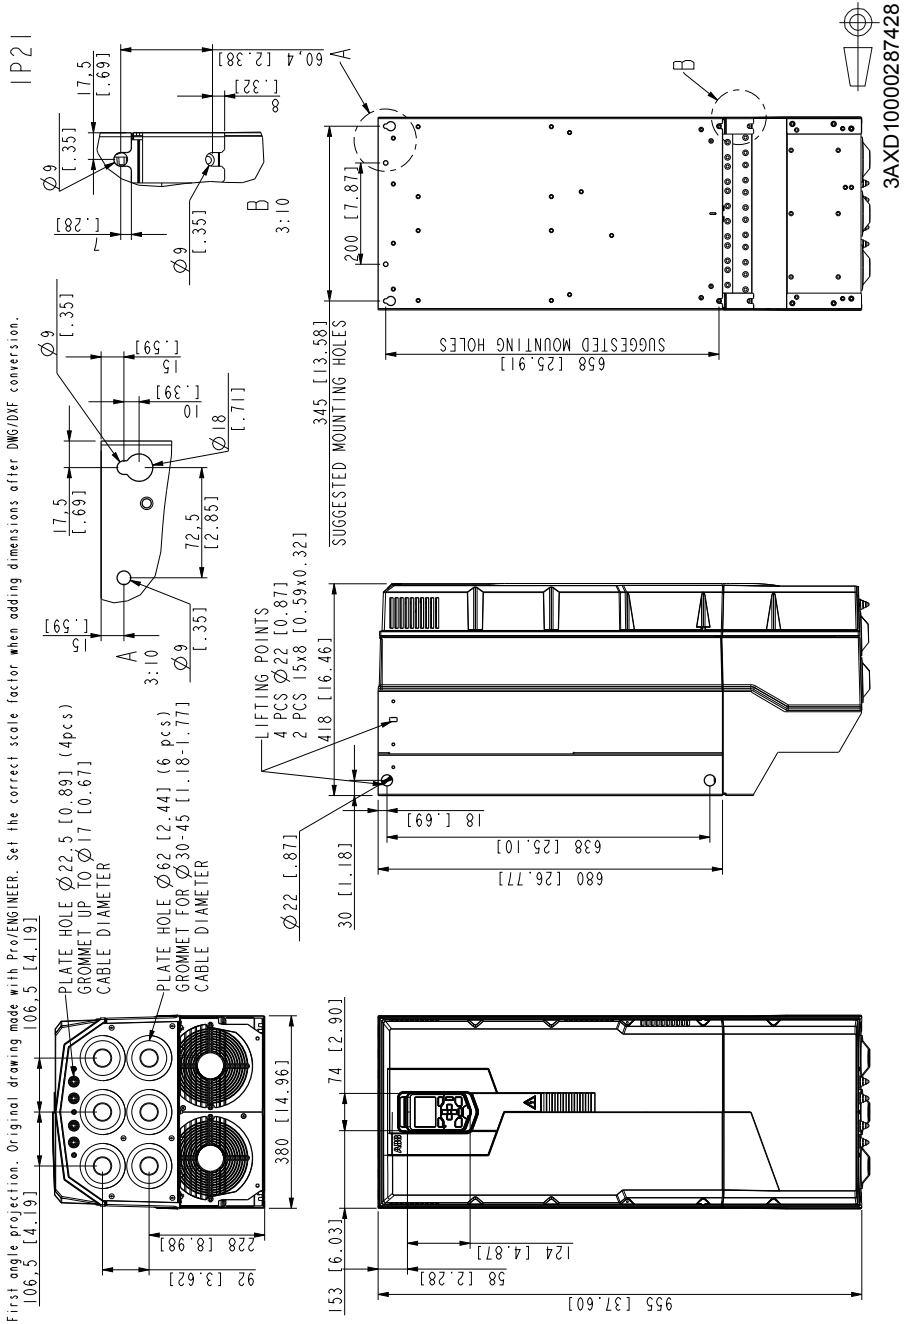

# Frame R9, IP55 (UL Type 12)

IP55

First angle projection. Original drawing made with 3D CAD. Set the correct scale factor when adding dimensions after DMG/DXF conversion.

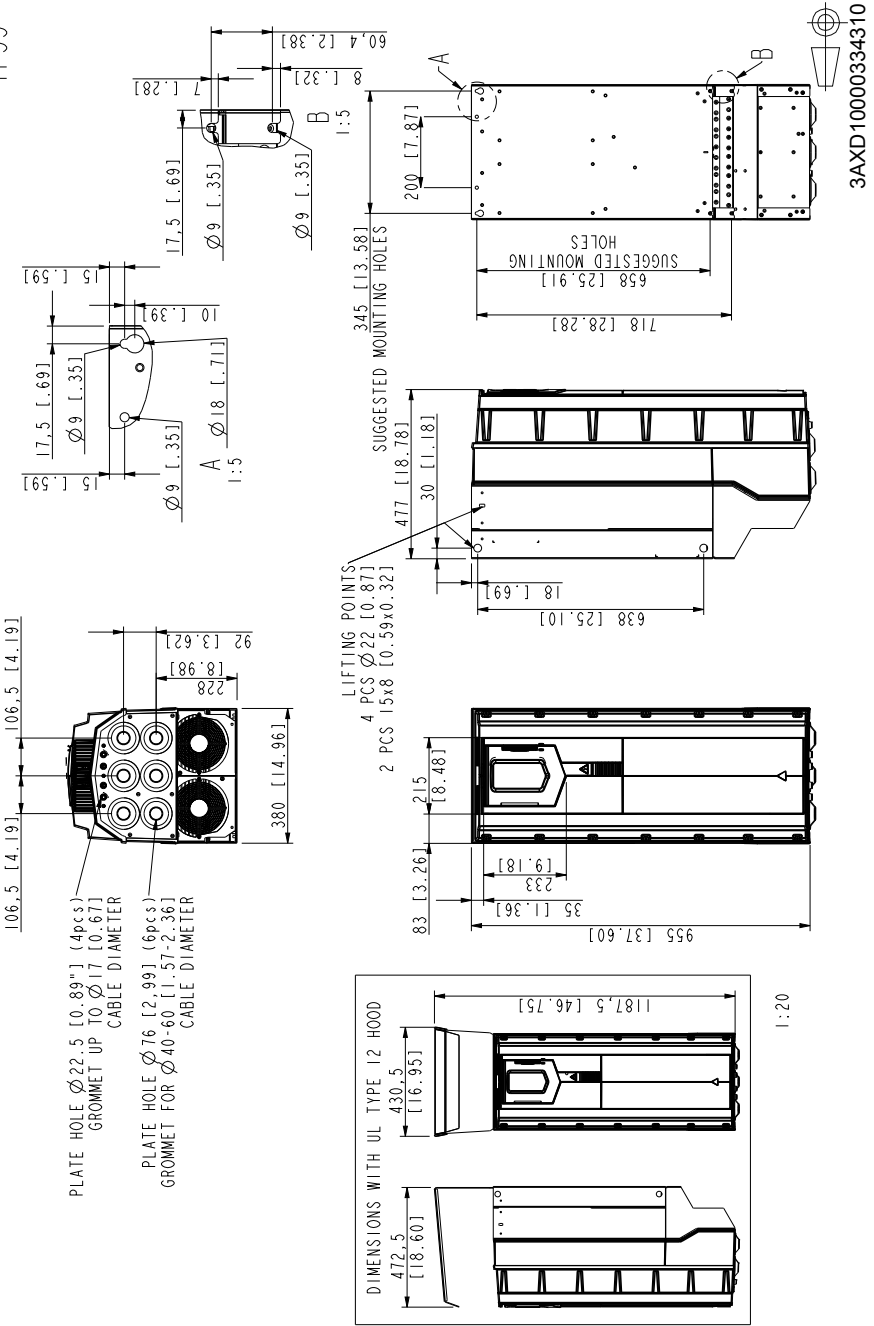





# Safe torque off function

---

## Contents of this chapter

This chapter describes the Safe torque off (STO) function of the drive and gives instructions for its use.

## Description

The Safe torque off function can be used, for example, as the final actuator device of safety circuits that stop the drive in case of danger (such as an emergency stop circuit). Another typical application is a prevention of unexpected start-up function that enables short-time maintenance operations like cleaning or work on non-electrical parts of the machinery without switching off the power supply to the drive.

**Note:** The Safe torque off function does not disconnect the voltage from the drive, see the warning on page [256](#).

When activated, the Safe torque off function disables the control voltage of the power semiconductors of the drive output stage (A, see diagram on page [249](#)), thus preventing the drive from generating the torque required to rotate the motor. If the motor is running when Safe torque off is activated, it coasts to a stop.

The Safe torque off function has a redundant architecture, that is, both channels must be used in the safety function implementation. The safety data given in this manual is calculated for redundant use, and does not apply if both channels are not used.

---

The Safe torque off function of the drive complies with these standards:

<b>Standard</b>	<b>Name</b>
IEC 60204-1:2016 EN 60204-1:2006 + A1:2009 + AC:2010	<i>Safety of machinery – Electrical equipment of machines – Part 1: General requirements</i>
IEC 61326-3-1:2008	<i>Electrical equipment for measurement, control and laboratory use – EMC requirements – Part 3-1: Immunity requirements for safety-related systems and for equipment intended to perform safety-related functions (functional safety) – General industrial applications</i>
IEC 61508-1:2010	<i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 1: General requirements</i>
IEC 61508-2:2010	<i>Functional safety of electrical/electronic/programmable electronic safety-related systems – Part 2: Requirements for electrical/electronic/programmable electronic safety-related systems</i>
IEC 61511-1:2016	<i>Functional safety – Safety instrumented systems for the process industry sector</i>
IEC 61800-5-2:2016 EN 61800-5-2:2007	<i>Adjustable speed electrical power drive systems – Part 5-2: Safety requirements – Functional</i>
IEC 62061:2005 + A1:2012 + A2:2015 EN 62061:2005 + AC:2010 + A1:2013 +A2:2015	<i>Safety of machinery – Functional safety of safety-related electrical, electronic and programmable electronic control systems</i>
EN ISO 13849-1:2015	<i>Safety of machinery – Safety-related parts of control systems – Part 1: General requirements</i>
EN ISO 13849-2:2012	<i>Safety of machinery – Safety-related parts of control systems – Part 2: Validation</i>


The function also corresponds to Prevention of unexpected start-up as specified by EN 1037:1995 + A1:2008 and Uncontrolled stop (stop category 0) as specified in EN/IEC 60204-1.

### ■ Compliance with the European Machinery Directive


See section [Compliance with the European Machinery Directive 2006/42/EC 2nd Edition – June 2010](#) on page 218.

## Connection principle

### ■ Connection with internal +24 V DC power supply

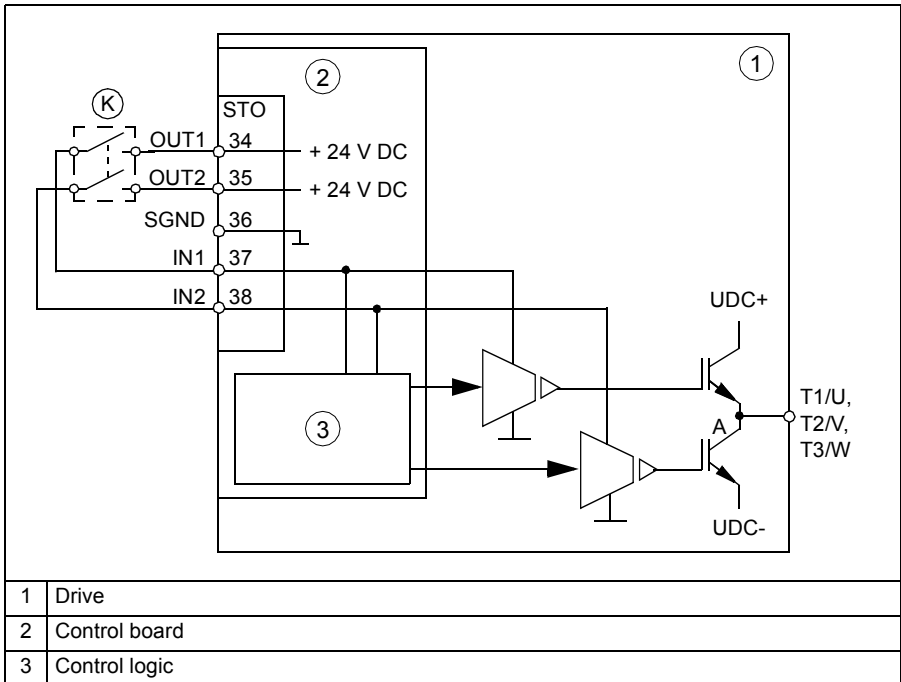

■ Connection with internal +24 V DC power supply, single line

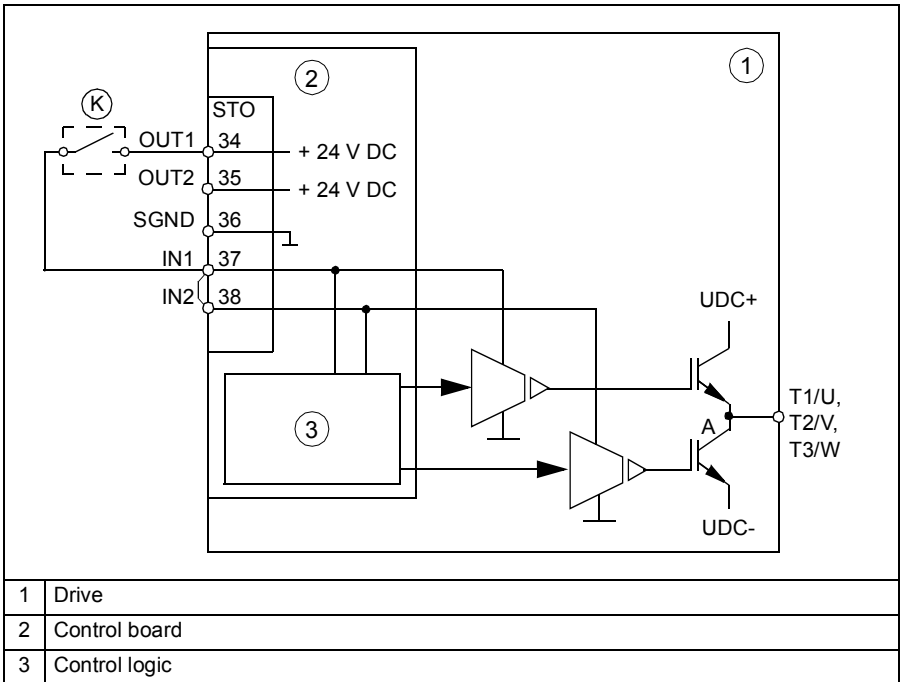


**Notes:**

- Both STO inputs (IN1, IN2) must be connected to the activation switch. Otherwise, no SIL/PL classification is given.
- Pay special attention to avoiding any potential failure modes for the wiring. For example, use shielded cable. For measures for fault exclusion of wiring, see eg. EN ISO 13849-2:2012, table D.4.




■ Connection with external +24 V DC power supply

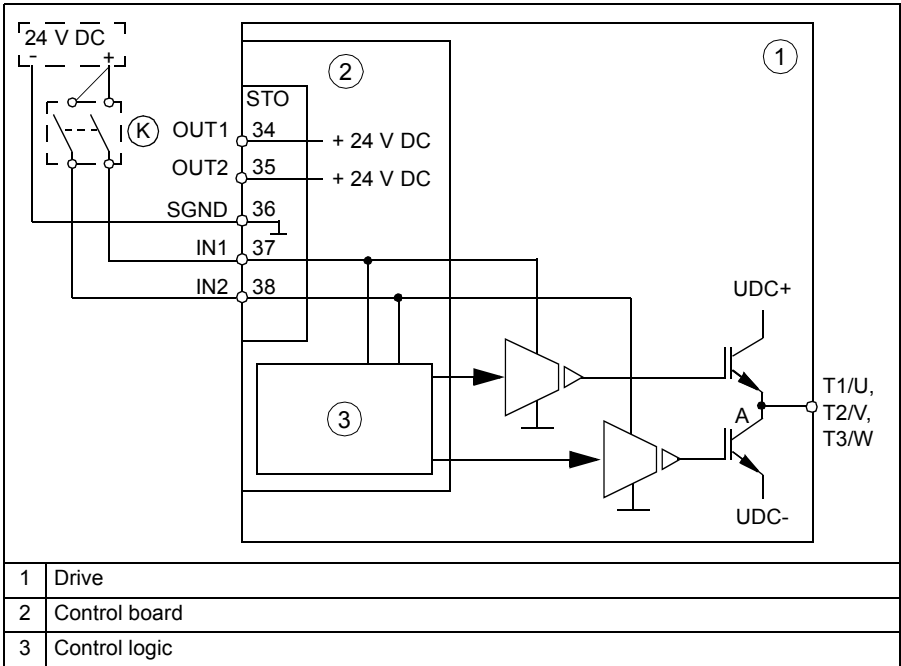


### Wiring examples

An example of a Safe torque off wiring with internal +24 V DC power supply is shown below.

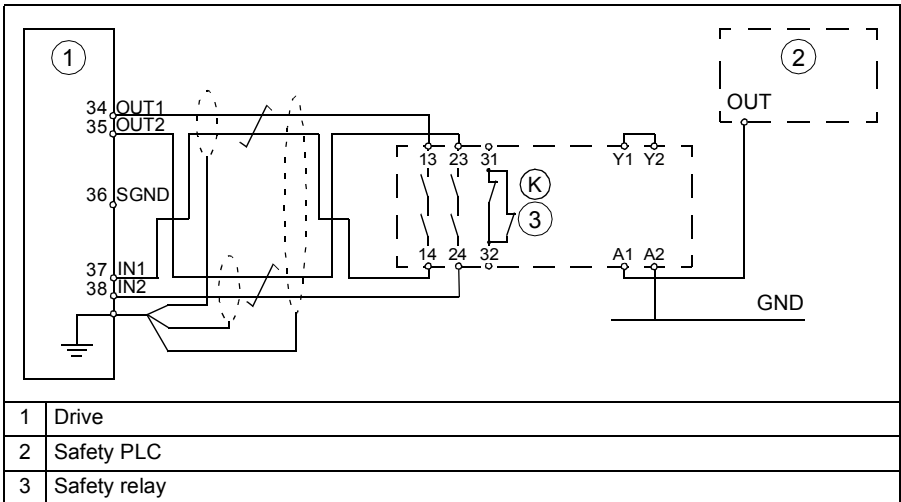

An example of a Safe torque off wiring with external +24 V DC power supply is shown below.

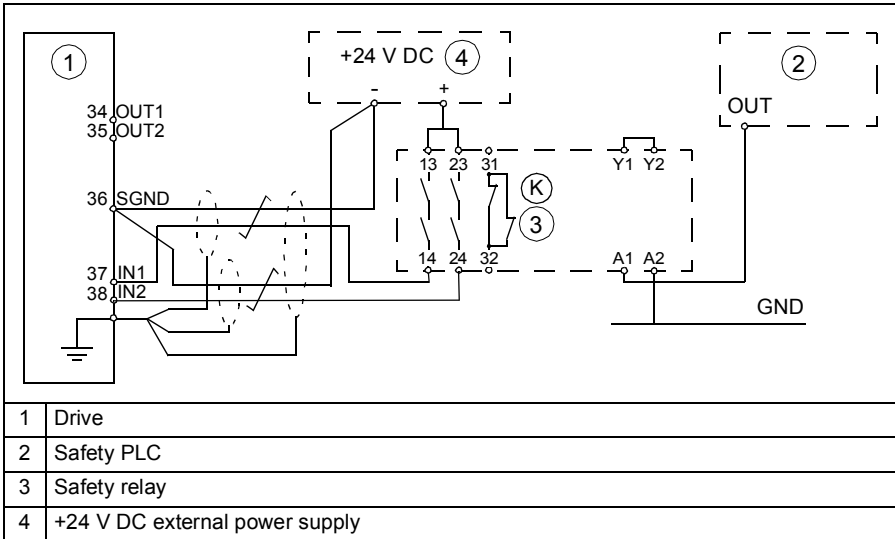

For information on the specifications of the STO input, see chapter [Control connection data](#) (page 208).

### ■ Activation switch

In the wiring diagram above (page 251), the activation switch has the designation (K). This represents a component such as a manually operated switch, an emergency stop push button switch, or the contacts of a safety relay or safety PLC.

- If a manually operated activation switch is used, the switch must be of a type that can be locked out to the open position.
- The contacts of the switch or relay must open/close within 200 ms of each other.
- A CPTC-02 thermistor protection module can also be used. For more information, see *CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual* (3AXD50000030058 [English])

### ■ Cable types and lengths

- Double-shielded twisted-pair cable is recommended.
- Maximum cable length 300 m (984 ft) between activation switch (K) and drive control board.

**Note:** A short-circuit in the wiring between the switch and an STO terminal causes a dangerous fault and therefore it is recommended to use a safety relay (including wiring diagnostics), or a wiring method (shield grounding, channel separation) which reduces or eliminates the risk caused by the short-circuit.

**Note:** The voltage at the INx terminals of each drive must be at least 13 V DC to be interpreted as “1”. Pulse tolerance of input channels is 1 ms.

### ■ Grounding of protective shields

- Ground the shield in the cabling between the activation switch and the control board at the control board.
- Ground the shield in the cabling between two control boards at one control board only.

## Operation principle

1. The Safe torque off activates (the activation switch is opened, or safety relay contacts open).
2. The STO inputs IN1 and IN2 on the drive control board de-energize.
3. The control board cuts off the control voltage from the drive IGBTs.
4. The control program generates an indication as defined by parameter 31.22 STO indication run/stop, see *ACQ580 pump control program firmware manual* (3AXD50000035867 [English]).

The parameter selects which indications are given when one or both Safe torque off (STO) signals are switched off or lost. The indications also depend on whether the drive is running or stopped when this occurs.

**Note:** This parameter does not affect the operation of the STO function itself. The STO function will operate regardless of the setting of this parameter: a running drive will stop upon removal of one or both STO signals, and will not start until both STO signals are restored and all faults reset.

**Note:** The loss of only one STO signal always generates a fault as it is interpreted as a malfunction of STO hardware or wiring.

5. The motor coasts to a stop (if running). The drive cannot restart while the activation switch or safety relay contacts are open. After the contacts close, a reset may be needed (depending on the setting of parameter 31.22). A new start command is required to start the drive.

## Start-up including acceptance test

To ensure the safe operation of a safety function, validation is required. The final assembler of the machine must validate the function by performing an acceptance test. The acceptance test must be performed

- at initial start-up of the safety function
  - after any changes related to the safety function (circuit boards, wiring, components, settings, etc.)
  - after any maintenance work related to the safety function.
-

## ■ **Competence**

The acceptance test of the safety function must be carried out by an competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6. The test procedures and report must be documented and signed by this person.

## ■ **Acceptance test reports**


Signed acceptance test reports must be stored in the logbook of the machine. The report shall include documentation of start-up activities and test results, references to failure reports and resolution of failures. Any new acceptance tests performed due to changes or maintenance shall be logged into the logbook.

---

## ■ Acceptance test procedure

After wiring the Safe torque off function, validate its operation as follows.

If a CPTC-02 module is installed, see *CPTC-02 ATEX-certified thermistor protection module, Ex II (2) GD (+L537+Q971) user's manual (3AXD50000030058 [English])*.

<b>Action</b>	<input checked="" type="checkbox"/>
 <b>WARNING!</b> Follow the <a href="#">Safety instructions</a> , page 13. If you ignore them, injury or death, or damage to the equipment can occur.	<input type="checkbox"/>
Ensure that the drive can be run and stopped freely during start-up.	<input type="checkbox"/>
Stop the drive (if running), switch the input power off and isolate the drive from the power line by a disconnecter.	<input type="checkbox"/>
Check the Safe torque off circuit connections against the wiring diagram.	<input type="checkbox"/>
Close the disconnecter and switch the power on.	<input type="checkbox"/>
<p>Test the operation of the STO function when the motor is stopped.</p> <ul style="list-style-type: none"> <li>• Give a stop command for the drive (if running) and wait until the motor shaft is at a standstill.</li> </ul> <p>Ensure that the drive operates as follows:</p> <ul style="list-style-type: none"> <li>• Open the STO circuit. The drive generates an indication if one is defined for the 'stopped' state in parameter 31.22 STO indication run/stop. For the description of the warning, see <i>ACQ580 pump control program firmware manual (3AXD50000035867 [English])</i>.</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The drive displays a warning. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul>	<input type="checkbox"/>
<p>Test the operation of the STO function when the motor is running.</p> <ul style="list-style-type: none"> <li>• Start the drive and ensure the motor is running.</li> <li>• Open the STO circuit. The motor should stop. The drive generates an indication if one is defined for the 'running' state in parameter 31.22 STO indication run/stop. For the description of the warning, see the drive firmware manual.</li> <li>• Reset any active faults and try to start the drive.</li> <li>• Ensure that the motor stays at a standstill and the drive operates as described above in testing the operation when the motor is stopped.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul>	<input type="checkbox"/>

Action	<input checked="" type="checkbox"/>
<p>Test the operation of the failure detection of the drive. The motor can be stopped or running.</p> <ul style="list-style-type: none"> <li>• Open the 1st channel of the STO circuit (wire coming to IN1). If the motor was running, it should coast to a stop. The drive generates a <i>FA81 Safe Torque Off 1 loss</i> fault indication (see the drive firmware manual).</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> <li>• Open the 2nd channel of the STO circuit (wire coming to IN2). If the motor was running, it should coast to a stop. The drive generates a <i>FA82 Safe Torque Off 2 loss</i> fault indication (see the drive firmware manual).</li> <li>• Give a start command to verify that the STO function blocks the drive's operation. The motor should not start.</li> <li>• Close the STO circuit.</li> <li>• Reset any active faults. Restart the drive and check that the motor runs normally.</li> </ul>	<input type="checkbox"/>
<p>Document and sign the acceptance test report which verifies that the safety function is safe and accepted for operation.</p>	<input type="checkbox"/>

## Use

1. Open the activation switch, or activate the safety functionality that is wired to the STO connection.
2. The STO inputs on the drive control board de-energize, and the drive control board cuts off the control voltage from the output IGBTs.
3. The control program generates an indication as defined by parameter 31.22 STO indication run/stop (see the drive firmware manual).
4. The motor coasts to a stop (if running). The drive will not restart while the activation switch or safety relay contacts are open.
5. Deactivate the STO by closing the activation switch, or resetting the safety functionality that is wired to the STO connection.
6. Reset any faults before restarting.



**WARNING!** The Safe torque off function does not disconnect the voltage of the main and auxiliary circuits from the drive. Therefore maintenance work on electrical parts of the drive or the motor can only be carried out after isolating the drive from the DC supply.



**WARNING!** With permanent magnet motors or synchronous reluctance [SynRM] motors only: In case of a multiple IGBT power semiconductor failure, the drive system can produce an alignment torque which maximally rotates the motor shaft by  $180/p$  degrees (with permanent magnet motors) or  $180/2p$  degrees (with synchronous reluctance [SynRM] motors) regardless of the activation of the Safe torque off function.  $p$  denotes the number of pole pairs.

---

**Notes:**

- If a running drive is stopped by using the Safe torque off function, the drive will cut off the motor supply voltage and the motor will coast to a stop. If this causes danger or is not otherwise acceptable, stop the drive and machinery using the appropriate stop mode before activating the Safe torque off function.
  - The Safe torque off function overrides all other functions of the drive unit.
  - The Safe torque off function is ineffective against deliberate sabotage or misuse.
  - The Safe torque off function has been designed to reduce the recognized hazardous conditions. In spite of this, it is not always possible to eliminate all potential hazards. The assembler of the machine must inform the final user about the residual risks.
  - Diagnostics of the Safe torque off function during a power outage are not available. Using the +24 V keep-alive option modules CMOD-XX with the drive does not power on the STO diagnostics.
-

## Maintenance

After the operation of the circuit is validated at start-up, the STO function shall be maintained by periodic proof testing. In high demand mode of operation, the maximum proof test interval is 20 years. In low demand mode of operation, the maximum proof test interval is 5 or 2 years; see section [Safety data](#) (page 260). It is assumed that all dangerous failures of the STO circuit are detected by the proof test. To perform the proof test, do the [Acceptance test procedure](#) (page 255).

**Note:** See also the Recommendation of Use CNB/M/11.050 (published by the European co-ordination of Notified Bodies) concerning dual-channel safety-related systems with electromechanical outputs:

- When the safety integrity requirement for the safety function is SIL 3 or PL e (cat. 3 or 4), the proof test for the function must be performed at least every month.
- When the safety integrity requirement for the safety function is SIL 2 (HFT = 1) or PL d (cat. 3), the proof test for the function must be performed at least every 12 months.

The STO function does not contain any electromechanical components.

In addition to proof testing, it is a good practice to check the operation of the function when other maintenance procedures are carried out on the machinery.

Include the Safe torque off operation test described above in the routine maintenance program of the machinery that the drive runs.

If any wiring or component change is needed after start up, or the parameters are restored, follow the test given in section [Acceptance test procedure](#) (page 255).

Use only spare parts approved by ABB.

Record all maintenance and proof test activities in the machine logbook.

### ■ Competence

The maintenance and proof test activities of the safety function must be carried out by a competent person with adequate expertise and knowledge of the safety function as well as functional safety, as required by IEC 61508-1 clause 6.

## Fault tracing

The indications given during the normal operation of the Safe torque off function are selected by drive parameter 31.22 STO indication run/stop (see the drive firmware manual).

The diagnostics of the Safe torque off function cross-compare the status of the two STO channels. In case the channels are not in the same state, a fault reaction function is performed and the drive trips on an “STO hardware failure” fault. An attempt to use the STO in a non-redundant manner, for example activating only one channel, will trigger the same reaction.

---



See the drive firmware manual for the indications generated by the drive, and for details on directing fault and warning indications to an output on the control board for external diagnostics.

Any failures of the Safe torque off function must be reported to ABB.

## Safety data

The safety data for the Safe torque off function is given below.

**Note:** The safety data is calculated for redundant use, and does not apply if both STO channels are not used.

Frame size	SIL/SILCL	PL	SFF (%)	PFH ( $T_1 = 20$ a) (1/h)	PFD <sub>avg</sub> ( $T_1 = 2$ a)	PFD <sub>avg</sub> ( $T_1 = 5$ a)	MTTF <sub>D</sub> (a)	DC (%)	Cat.	SC	HFT	CCF	Life-time (a)
R1	3	e	>99	2.54E-09	2.23E-05	5.54E-05	2938	≥90	3	3	1	80	20
R2	3	e	>99	2.54E-09	2.23E-05	5.54E-05	2938	≥90	3	3	1	80	20
R3	3	e	>99	2.54E-09	2.23E-05	5.54E-05	2935	≥90	3	3	1	80	20
R4	3	e	>99	2.54E-09	2.23E-05	5.55E-05	2932	≥90	3	3	1	80	20
R5	3	e	>99	2.54E-09	2.23E-05	5.54E-05	2934	≥90	3	3	1	80	20
R6	3	e	>99	1.01E-09	9.26E-06	2.25E-05	10876	≥90	3	3	1	80	20
R7	3	e	>99	1.01E-09	9.26E-06	2.25E-05	10876	≥90	3	3	1	80	20
R8	3	e	>99	1.18E-09	1.08E-05	2.40E-05	2489	≥90	3	3	1	80	20
R9	3	e	>99	1.18E-09	1.08E-05	2.40E-05	2489	≥90	3	3	1	80	20

3AXD10000015777 G

- The following temperature profile is used in safety value calculations:
  - 670 on/off cycles per year with  $\Delta T = 71.66$  °C
  - 1340 on/off cycles per year with  $\Delta T = 61.66$  °C
  - 30 on/off cycles per year with  $\Delta T = 10.0$  °C
  - 32 °C board temperature at 2.0% of time
  - 60 °C board temperature at 1.5% of time
  - 85 °C board temperature at 2.3% of time.
- The STO is a type A safety component as defined in IEC 61508-2.
- Relevant failure modes:
  - The STO trips spuriously (safe failure)
  - The STO does not activate when requested

A fault exclusion on the failure mode “short circuit on printed circuit board” has been made (EN 13849-2, table D.5). The analysis is based on an assumption that one failure occurs at one time. No accumulated failures have been analyzed.

- STO reaction time (shortest detectable break): 1 ms
- STO response time: 2 ms (typical), 5 ms (maximum)
- Fault detection time: Channels in different states for longer than 200 ms
- Fault reaction time: Fault detection time + 10 ms

- STO fault indication (parameter 31.22) delay: < 500 ms
  - STO warning indication (parameter 31.22) delay: < 1000 ms
  - Maximum cable length 300 m (984 ft) between activation switch (K) and drive control board.
  - The voltage at the INx terminals of each drive must be at least 13 V DC to be interpreted as “1”. Pulse tolerance of input channels is 1 ms.
-

## ■ Abbreviations

Abbr.	Reference	Description
Cat.	EN ISO 13849-1	Classification of the safety-related parts of a control system in respect of their resistance to faults and their subsequent behavior in the fault condition, and which is achieved by the structural arrangement of the parts, fault detection and/or by their reliability. The categories are: B, 1, 2, 3 and 4.
CCF	EN ISO 13849-1	Common cause failure (%)
DC	EN ISO 13849-1	Diagnostic coverage
HFT	IEC 61508	Hardware fault tolerance
MTTF <sub>D</sub>	EN ISO 13849-1	Mean time to dangerous failure: (Total number of life units) / (Number of dangerous, undetected failures) during a particular measurement interval under stated conditions
PFD <sub>avg</sub>	IEC 61508	Average probability of dangerous failure on demand, that is, mean unavailability of a safety-related system to perform the specified safety function when a demand occurs
PFH	IEC 61508	Average frequency of dangerous failures per hour, that is, average frequency of a dangerous failure of a safety related system to perform the specified safety function over a given period of time
PL	EN ISO 13849-1	Performance level. Levels a...e correspond to SIL.
SC	IEC 61508	Systematic capability
SFF	IEC 61508	Safe failure fraction (%)
SIL	IEC 61508	Safety integrity level (1...3)
SILCL	IEC/EN 62061	Maximum SIL (level 1...3) that can be claimed for a safety function or subsystem
STO	IEC/EN 61800-5-2	Safe torque off
T <sub>1</sub>	IEC 61508-6	Proof test interval. T <sub>1</sub> is a parameter used to define the probabilistic failure rate (PFH or PFD) for the safety function or subsystem. Performing a proof test at a maximum interval of T <sub>1</sub> is required to keep the SIL capability valid. The same interval must be followed to keep the PL capability (EN ISO 13849) valid. Note that any T <sub>1</sub> values given cannot be regarded as a guarantee or warranty. See also section <a href="#">Maintenance</a> on page 258.

## ■ Declaration of conformity

Declaration of conformity (3AXD10000486283) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

## ■ Certificate

TÜV certificate (3AXD10000512808) is available on the Internet. See section [Document library on the Internet](#) on the inside of the back cover.

# 12

## Optional I/O extension modules

---

### Contents of this chapter

This chapter describes how to install and start up the optional CHDI-01, CMOD-01, and CMOD-02 extension modules. The chapter also contains diagnostics and technical data.

### CHDI-01 115/230 V digital input extension module

#### ■ Safety instructions



**WARNING!** Obey the safety instructions for the drive. If you ignore the safety instructions, injury or death can occur.


---

#### ■ Hardware description

##### Product overview

The CHDI-01 115/230 V digital input extension module expands the inputs of the drive control board. It has six high voltage inputs and two relay outputs.

---

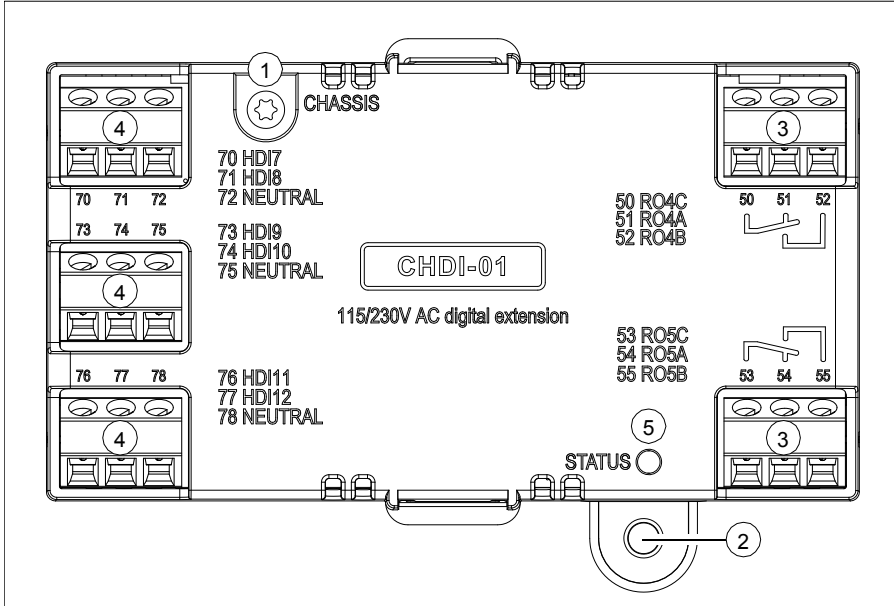**Layout**

Item	Description	Additional information
1	Grounding screw	-
2	Hole for mounting screw	-
3	3-pin terminal blocks for relay outputs	Page <a href="#">265</a>
4	3-pin terminal block for 115/230 V inputs	Page <a href="#">265</a>
5	Diagnostic LED	Page <a href="#">267</a>

## ■ Mechanical installation

### Necessary tools and instructions

- Screwdriver and a set of suitable bits.

### Unpacking and checking the delivery

1. Open the option package.
2. Make sure that the package contains:
  - CHDI-01 high voltage digital extension module
  - mounting screw.
3. Make sure that there are no signs of damage.

## Installing the module

See section [Installing option modules](#) on page 148.

### ■ Electrical installation

#### Warnings



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical work.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

#### Necessary tools and instructions

- Screwdriver and a set of suitable bits
- Cabling tools

#### Terminal designations

For more detailed information on the connectors, see section [Technical data](#) on page 276.

#### Relay outputs

Marking		Description
50	RO4C	Common, C
51	RO4A	Normally closed, NC
52	RO4B	Normally open, NO
53	RO5C	Common, C
54	RO5A	Normally closed, NC
55	RO5B	Normally open, NO

#### 115/230 V inputs

Marking		Description
70	HDI7	115/230 V input 1
71	HDI8	115/230 V input 2
72	NEUTRAL <sup>1)</sup>	Neutral point
73	HDI9	115/230 V input 3
74	HDI10	115/230 V input 4
75	NEUTRAL <sup>1)</sup>	Neutral point

Marking		Description
76	HDI11	115/230 V input 5
77	HDI12	115/230 V input 6
78	NEUTRAL <sup>1)</sup>	Neutral point

<sup>1)</sup> Neutral points 72, 75 and 78 are connected.


### General cabling instructions

Obey the instructions given in chapter [Planning the electrical installation](#) on page 73.


### Wiring

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.

#### Relay output connection example

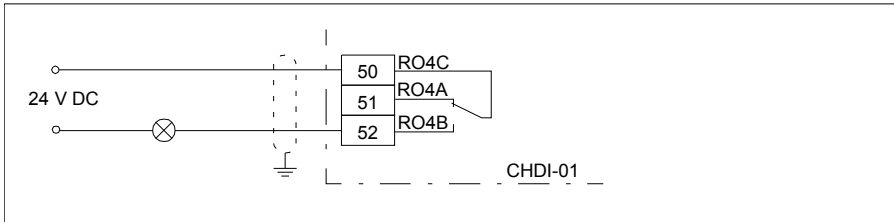

#### Digital input connection example

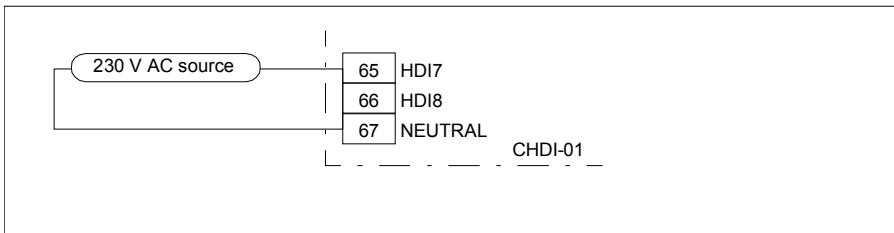



## ■ Start-up

### Setting the parameters

1. Power up the drive.
2. If no warning is shown,
  - make sure that the value of both parameter 15.02 Detected extension module and parameter 15.01 Extension module type is CHDI-01.
 If warning A7AB Extension I/O configuration failure is shown,
  - make sure that the value of parameter 15.02 Detected extension module is CHDI-01.
  - set parameter 15.01 Extension module type to CHDI-01.
 You can now see the parameters of the extension module in parameter group 15 I/O extension module.
3. Set the parameters of the extension module to applicable values.

#### Parameter setting example for relay output

This example shows how make relay output RO4 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.07 RO4 source	Reverse
15.08 RO4 ON delay	1 s
15.09 RO4 OFF delay	1 s

## ■ Diagnostics

### Faults and warning messages

Warning A7AB Extension I/O configuration failure.

### LEDs

The extension module has one diagnostic LED.


Color	Description
Green	The extension module is powered up.

---

■ **Technical data**

**Dimension drawing:**

The dimensions are in millimeters and [inches].

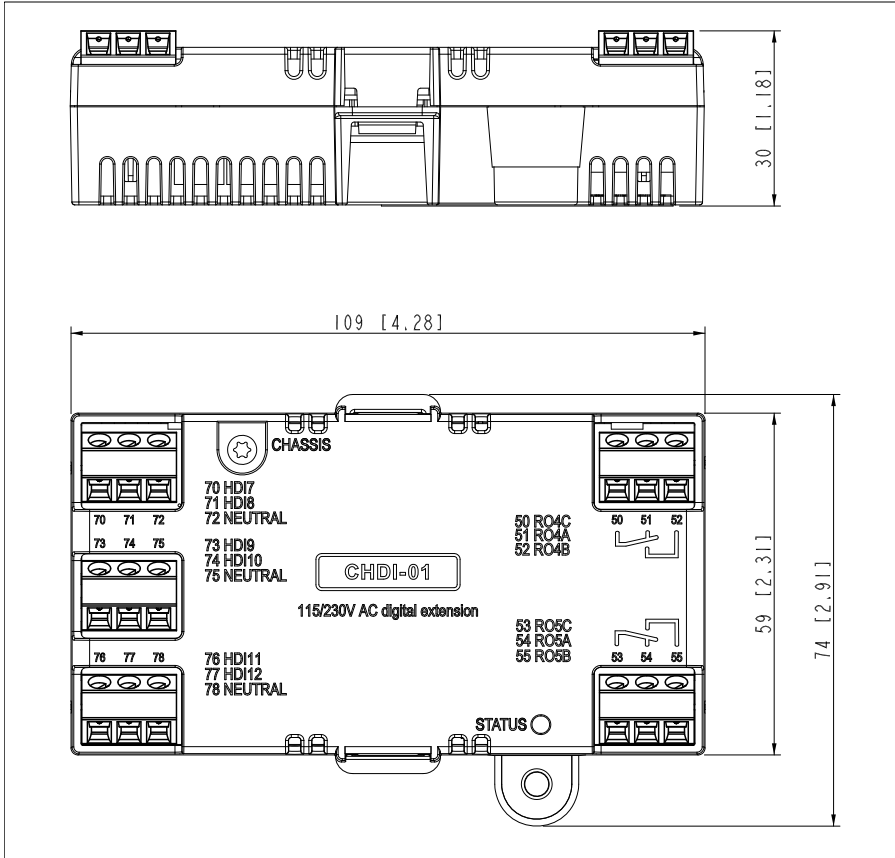


**Installation:** Into an option slot on the drive control board

**Degree of protection:** IP20

**Ambient conditions:** See the drive technical data.

**Package:** Cardboard

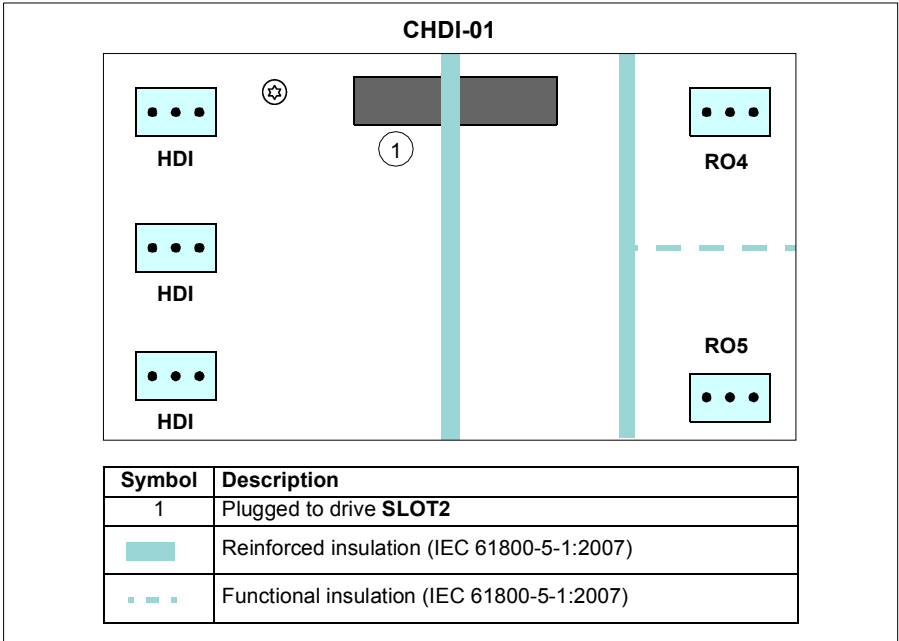**Isolation areas:****Relay outputs (50...52, 53...55):**

- Wire size max. 1.5 mm<sup>2</sup>
- Minimum contact rating: 12 V / 10 mA
- Maximum contact rating: 250 V AC / 30 V DC / 2 A
- Maximum breaking capacity: 1500 VA

**115/230 V inputs (70...78):**

- Wire size max. 1.5 mm<sup>2</sup>
- Input voltage: 115 to 230 V AC ±10%
- Maximum current leakage in digital off state: 2 mA

## **CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O)**

### ■ **Safety instructions**



**WARNING!** Obey the safety instructions for the drive. If you ignore the safety instructions, injury or death can occur.

---

### ■ **Hardware description**

#### **Product overview**

The CMOD-01 multifunction extension module (external 24 V AC/DC and digital I/O) expands the outputs of the drive control board. It has two relay outputs and one transistor output, which can function as a digital or frequency output.

In addition, the extension module has an external power supply interface, which can be used to power up the drive control board in case the drive power supply fails. If you do not need the back-up power supply, you do not have to connect it because the module is powered from the drive control board by default.


**Note:** In frames R6...R9, you do not need a CMOD-01 module to use external 24 V AC/DC supply. The external supply is connected directly to terminals 40 and 41 on the control board.



**WARNING!** Do not connect the +24 V AC cable to the control board ground when the control board is powered using an external 24 V AC supply.

---

## Layout

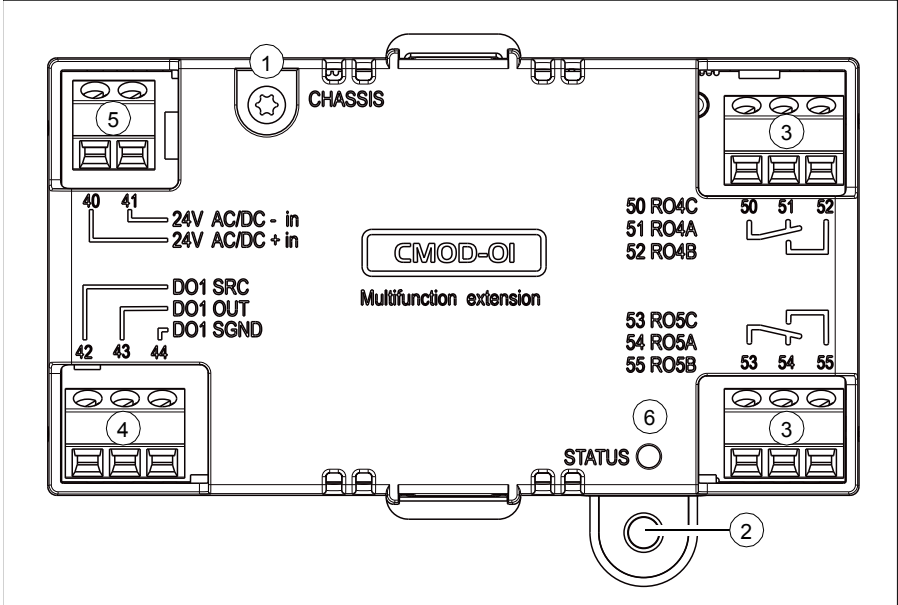

Item	Description	Additional information
1	Grounding screw	Page <a href="#">271</a>
2	Hole for mounting screw	Page <a href="#">271</a>
3	3-pin terminal blocks for relay outputs	Page <a href="#">272</a>
4	3-pin terminal block for transistor output	Page <a href="#">272</a>
5	2-pin terminal block for external power supply	Page <a href="#">272</a>
6	Diagnostic LED	Page <a href="#">275</a>

## ■ Mechanical installation

### Necessary tools and instructions

- Screwdriver and a set of suitable bits.

### Unpacking and checking the delivery

1. Open the option package.
2. Make sure that the package contains:
  - CMOD-01 multifunction extension module
  - mounting screw.
3. Make sure that there are no signs of damage.

## Installing the module

See section [Installing option modules](#) on page 148.

### ■ Electrical installation

#### Warnings



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical work.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

#### Necessary tools and instructions

- Screwdriver and a set of suitable bits
- Cabling tools

#### Terminal designations

For more detailed information on the connectors, see section [Technical data](#) on page 276.

#### Relay outputs

Marking		Description
50	RO4C	Common, C
51	RO4A	Normally closed, NC
52	RO4B	Normally open, NO
53	RO5C	Common, C
54	RO5A	Normally closed, NC
55	RO5B	Normally open, NO

#### Transistor output

Marking		Description
42	DO1 SRC	Source input
43	DO1 OUT	Digital or frequency output
44	DO1 SGND	Ground (earth) potential

### External power supply

The external power supply is needed only if you want to connect an external back-up power supply for the drive control board.

**Note:** Frames R1...R5 need CMOD-01 for connecting external power supply, frames R6...R9 have corresponding terminals 40 and 41 on the control board.

Marking		Description
40	24V AC/DC + in	External 24 V (AC/DC) input
41	24V AC/DC - in	External 24 V (AC/DC) input


### General cabling instructions

Obey the instructions given in chapter [Planning the electrical installation](#) on page 73.


### Wiring

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables.


### Relay output connection example

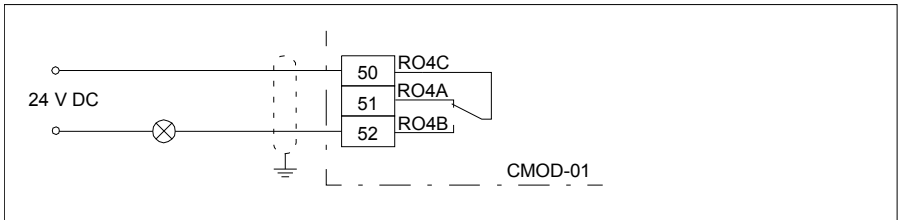


### Digital output connection example

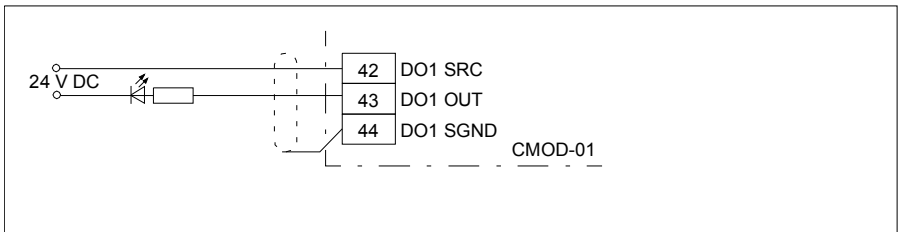

**Frequency output connection example**

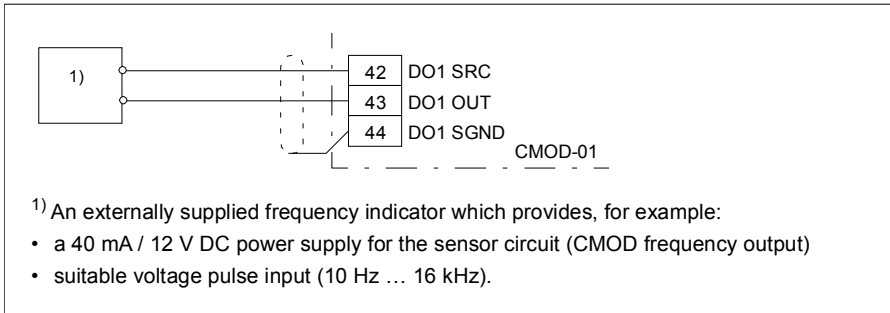

**External power supply connection example**

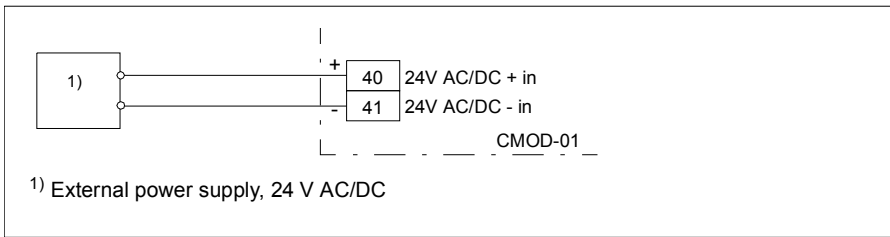


---

**⚠ WARNING!** Do not connect the +24 V AC cable to the control board ground when the control board is powered using an external 24 V AC supply.

---

■ **Start-up**

**Setting the parameters**

1. Power up the drive.
2. If no warning is shown,
  - make sure that the value of both parameter 15.02 Detected extension module and parameter 15.01 Extension module type is CMOD-01.
 If warning A7AB Extension I/O configuration failure is shown,
  - make sure that the value of parameter 15.02 Detected extension module is CMOD-01.
  - set parameter 15.01 Extension module type to CMOD-01.

You can now see the parameters of the extension module in parameter group 15 I/O extension module.

3. Set the parameters of the extension module to applicable values.
-



Examples are given below.

#### Parameter setting example for relay output

This example shows how make relay output RO4 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.07 RO4 source	Reverse
15.08 RO4 ON delay	1 s
15.09 RO4 OFF delay	1 s

#### Parameter setting example for digital output

This example shows how to make digital output DO1 of the extension module indicate the reverse direction of rotation of the motor with a one-second delay.

Parameter	Setting
15.22 DO1 configuration	Digital output
15.23 DO1 source	Reverse
15.24 DO1 ON delay	1 s
15.25 DO1 OFF delay	1 s

#### Parameter setting example for frequency output

This example shows how to make digital output DO1 of the extension module indicate the motor speed 0... 1500 rpm with a frequency range of 0...10000 Hz.

Parameter	Setting
15.22 DO1 configuration	Frequency output
15.33 Freq out 1 source	01.01
15.34 Freq out 1 src min	0
15.35 Freq out 1 src max	1500.00
15.36 Freq out 1 at src min	1000 Hz
15.37 Freq out 1 at src max	10000 Hz

## ■ Diagnostics

### Faults and warning messages

Warning A7AB Extension I/O configuration failure.

### LEDs

The extension module has one diagnostic LED.


Color	Description
Green	The extension module is powered up.

---

**■ Technical data**

**Dimension drawing:**

The dimensions are in millimeters and [inches].

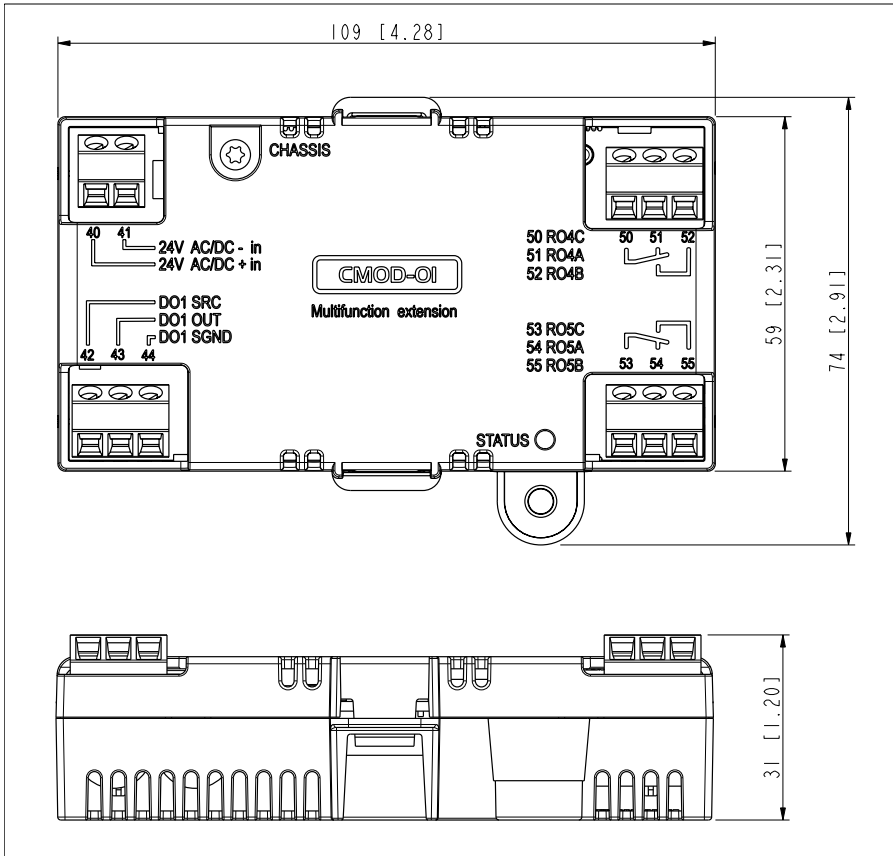


**Installation:** Into an option slot on the drive control board

**Degree of protection:** IP20

**Ambient conditions:** See the drive technical data.

**Package:** Cardboard

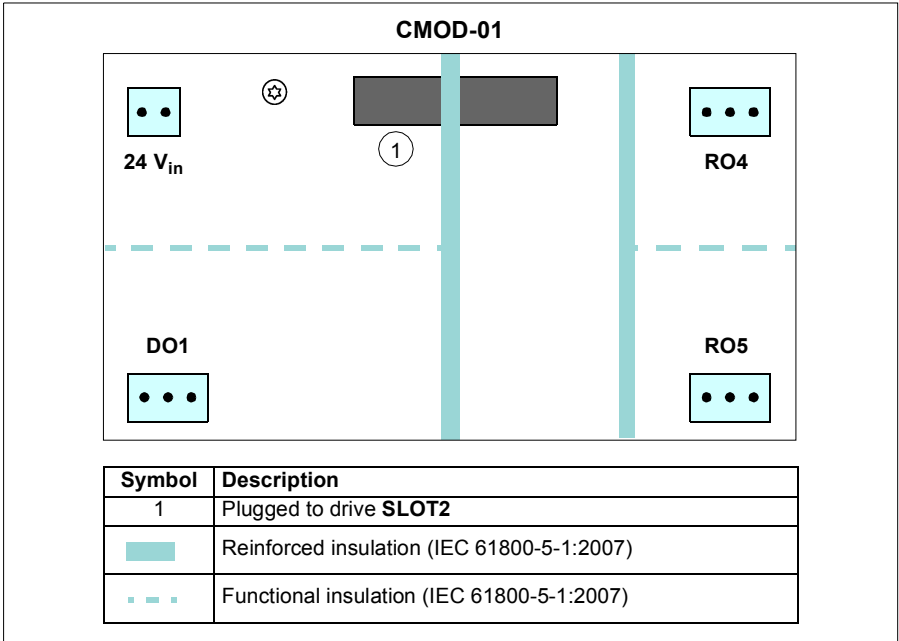**Isolation areas:****Relay outputs (50...52, 53...55):**

- Wire size max. 1.5 mm<sup>2</sup>
- Minimum contact rating: 12 V / 10 mA
- Maximum contact rating: 250 V AC / 30 V DC / 2 A
- Maximum breaking capacity: 1500 VA6

**Transistor output (42...44):**

- Wire size max. 1.5 mm<sup>2</sup>
- Type: Transistor output PNP
- Maximum load: 4 kohm
- Maximum switching voltage: 30 V DC
- Maximum switching current: 100 mA / 30 V DC, short-circuit protected
- Frequency: 10 Hz ... 16 kHz
- Resolution: 1 Hz
- Inaccuracy: 0.2%

**External power supply (40...41):**

- Wire size max. 1.5 mm<sup>2</sup>
  - 24 V AC / V DC ±10% (GND, user potential)
  - Maximum current consumption: 25 W, 1.04 A at 24 V DC
-

## CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface)

### ■ Safety instructions

---



**WARNING!** Obey the safety instructions for the drive. If you ignore the safety instructions, injury or death can occur.

---

### ■ Hardware description

#### Product overview

The CMOD-02 multifunction extension module (external 24 V AC/DC and isolated PTC interface) has a motor thermistor connection for supervising the motor temperature and one relay output, which indicates the thermistor status. To trip the drive, the user must connect this overtemperature indication back to the drive, for example, to its Safe torque off input.

In addition, the extension module has an external power supply interface, which can be used to power up the drive control board in case the drive power supply fails. If you do not need the back-up power supply, you do not have to connect it because the module is powered from the drive control board by default.

There is reinforced insulation between the motor thermistor connection, the relay output and the drive control board interface. Thus, you can connect a motor thermistor to the drive through the extension module.


**Note:** In frames R6...R9, you do not need a CMOD-02 module to use external 24 V AC/DC supply. The external supply is connected directly to terminals 40 and 41 on the control board.



**WARNING!** Do not connect the +24 V AC cable to the control board ground when the control board is powered using an external 24 V AC supply.

---

## Layout

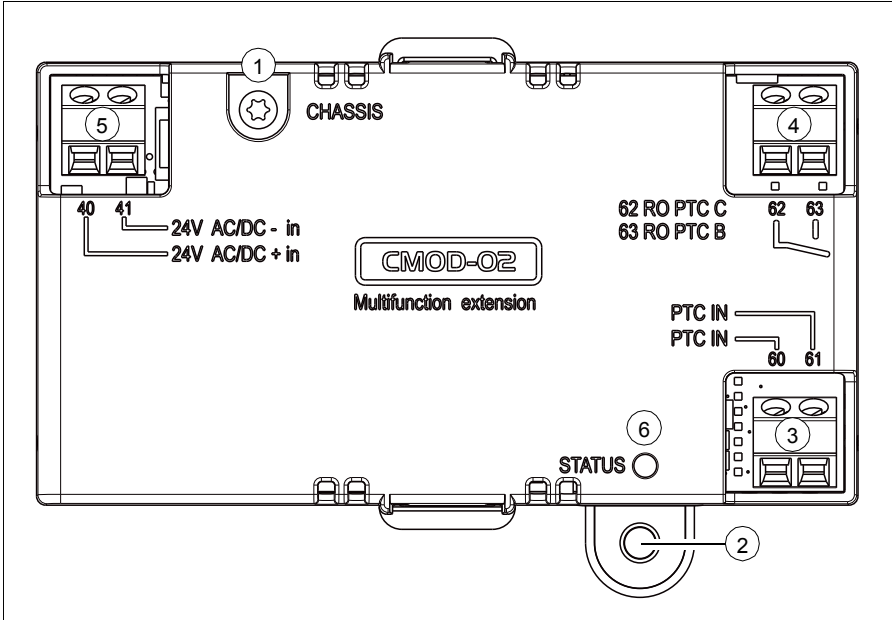

Item	Description	Additional information
1	Grounding screw	Page <a href="#">280</a>
2	Hole for mounting screw	Page <a href="#">280</a>
3	2-pin terminal block for motor thermistor connection	Page <a href="#">281</a>
4	2-pin terminal block for relay output	Page <a href="#">281</a>
5	2-pin terminal block for external power supply	Page <a href="#">281</a>
6	Diagnostic LED	Page <a href="#">284</a>

## ■ Mechanical installation

### Necessary tools and instructions

- Screwdriver and a set of suitable bits

## Unpacking and checking the delivery

1. Open the option package.
2. Make sure that the package contains:
  - CMOD-02 multifunction extension module
  - mounting screw
3. Make sure that there are no signs of damage.

## Installing the module

See section [Installing option modules](#) on page 148.

## ■ Electrical installation

### Warnings



**WARNING!** Obey the instructions in chapter [Safety instructions](#) on page 13. If you ignore them, injury or death, or damage to the equipment can occur. If you are not a qualified electrical professional, do not do electrical work.

**Make sure that the drive is disconnected from the input power during installation. If the drive is already connected to the input power, wait for 5 minutes after disconnecting the input power.**

### Necessary tools and instructions

- Screwdriver and a set of suitable bits
- Cabling tools

### Terminal designations

For more detailed information on the connectors, see section [Technical data](#) on page 285.

#### Motor thermistor connection

Marking		Description
60	PTC IN	PTC connection
61	PTC IN	Ground (earth) potential

#### Relay output

Marking		Description
62	RO PTC C	Common, C
63	RO PTC B	Normally open, NO

External power supply

The external power supply is needed only if you want to connect an external back-up power supply for the drive control board.

**Note:** Frames R1...R5 need CMOD-01 for connecting external power supply, frames R6...R9 have corresponding terminals 40 and 41 on the control board.

Marking		Description
40	24V AC/DC + in	External 24 V (AC/DC) input
41	24V AC/DC - in	External 24 V (AC/DC) input


**General cabling instructions**

Obey the instructions given in chapter *Planning the electrical installation* on page 73.

**Wiring**

Connect the external control cables to the applicable module terminals. Ground the outer shield of the cables 360 degrees under a grounding clamp on the grounding shelf of the control cables



Motor thermistor connection example

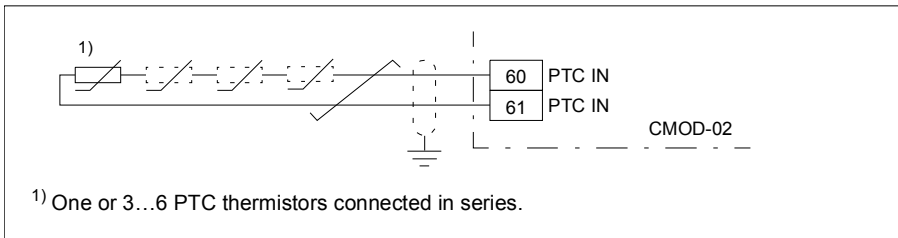

The PTC input is reinforced/double insulated. If the motor part of the PTC sensor and wiring are reinforced/double insulated, voltages on the PTC wiring are within SELV limits.

If the motor PTC circuit is not reinforced/double insulated (ie, it is basic insulated), it is mandatory to use reinforced/double insulated wiring between the motor PTC and CMOD-02 PTC terminal.

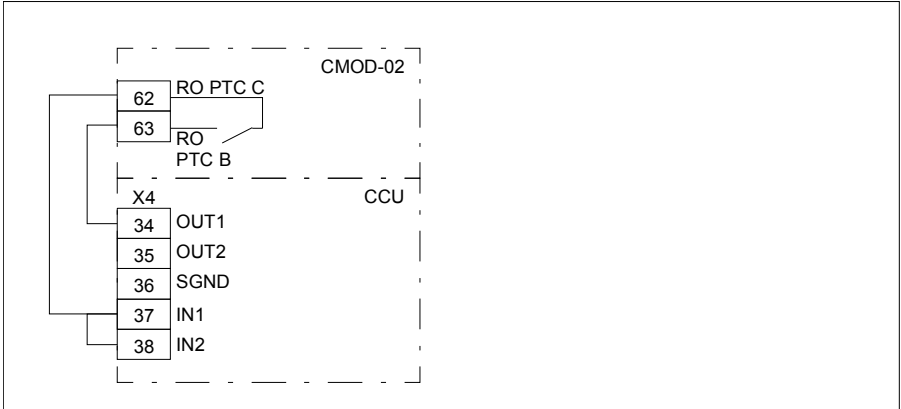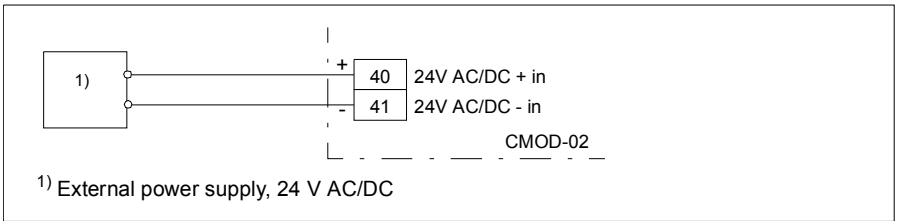

Relay output connection examplePower supply connection example

**WARNING!** Do not connect the +24 V AC cable to the control board ground when the control board is powered using an external 24 V AC supply.

## ■ Start-up

### Setting the parameters

1. Power up the drive.
  2. If no warning is shown,
    - make sure that the value of both parameter 15.02 Detected extension module and parameter 15.01 Extension module type is CMOD-02.
- If warning A7AB Extension I/O configuration failure is shown,
- make sure that the value of parameter 15.02 Detected extension module is CMOD-02.
  - set parameter 15.01 Extension module type to CMOD-02.

You can now see the parameters of the extension module in parameter group 15 I/O extension module.

■ **Diagnostics**

**Faults and warning messages**

Warning A7AB Extension I/O configuration failure.

**LEDs**


The extension module has one diagnostic LED.

<b>Color</b>	<b>Description</b>
Green	The extension module is powered up.

■ **Technical data**

**Dimension drawing:**

The dimensions are in millimeters and [inches].

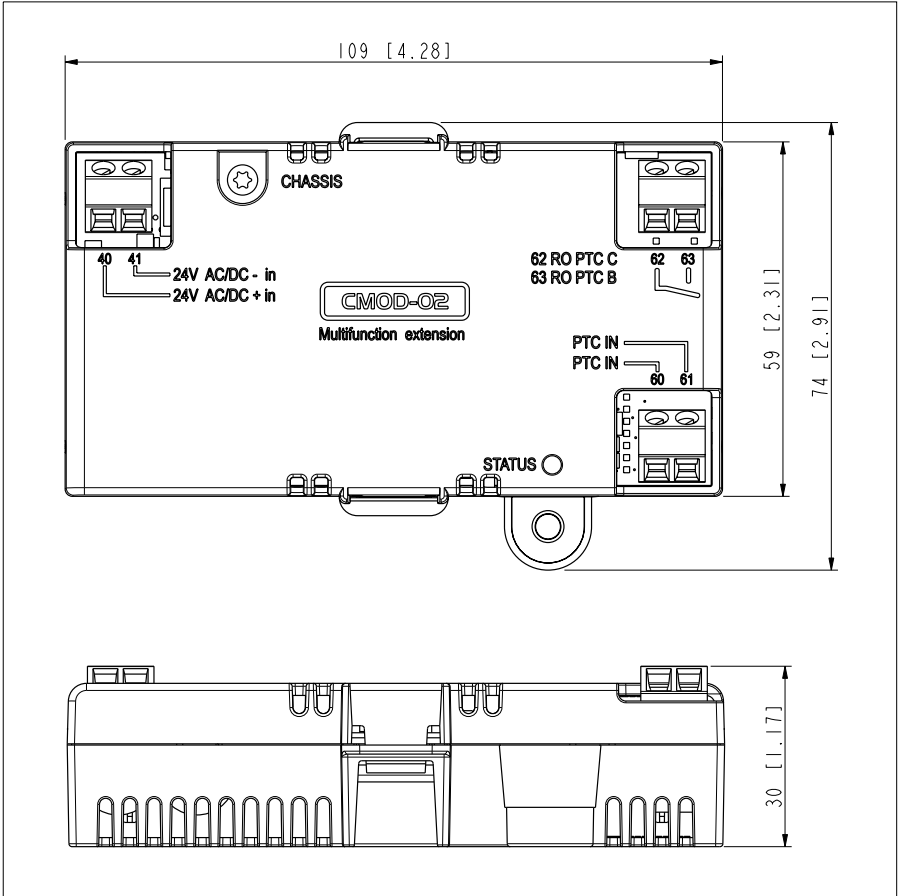


**Installation:** Into an option slot on the drive control board

**Degree of protection:** IP20

**Ambient conditions:** See the drive technical data.

**Package:** Cardboard

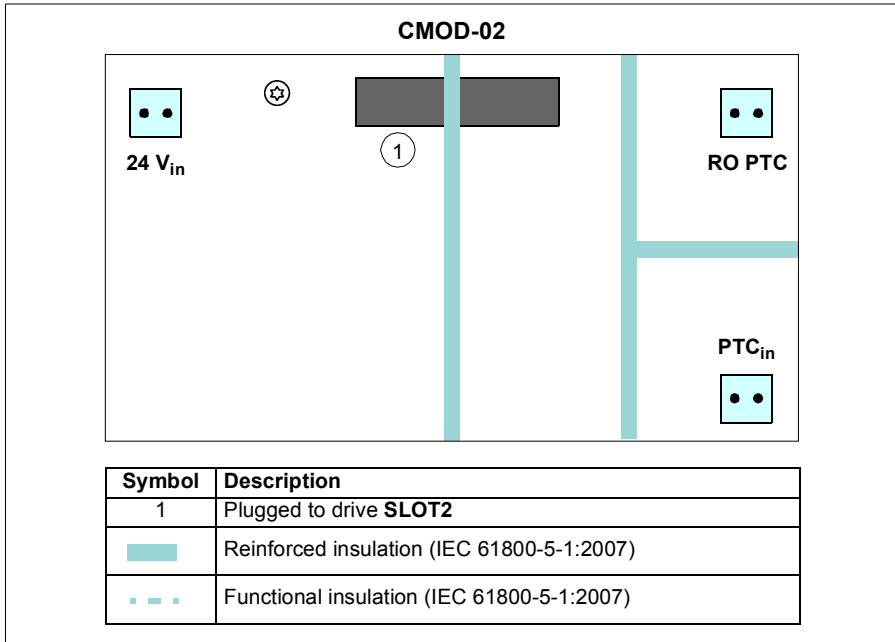**Isolation areas:****Motor thermistor connection (60...61):**

- Wire size max. 1.5 mm<sup>2</sup>
- Supported standards: DIN 44081 and DIN 44082
- Number of PTC thermistor relays: 1 or 3...6 in series
- Triggering threshold: 3.6 kohm ±10%
- Recovery threshold: 1.6 kohm ±10%
- PTC terminal voltage: ≤ 5.0 V
- PTC terminal current: < 1 mA
- Short-circuit detection: < 50 ohm ±10%

**Relay output (62...63):**

- Wire size max. 1.5 mm<sup>2</sup>
- Maximum contact rating: 250 V AC / 30 V DC / 5 A
- Maximum breaking capacity: 1000 VA

**External power supply (40...41):**

- Wire size max. 1.5 mm<sup>2</sup>
- 24 V AC / V DC ±10% (GND, user potential)
- Maximum current consumption: 25 W, 1.04 A at 24 V DC

# 13

## Common mode and du/dt filters

---

### Content of this chapter

This chapter describes how to select external filters for the drive.

### Common mode filters

#### ■ When is a common mode filter needed?

See section [Checking the compatibility of the motor and drive](#), page 60.

Common mode filter kits are available from ABB, see the table on page 288. A kit includes three wound cores. For installation instructions of the cores, see the instruction included in the core package.

### du/dt filters

#### ■ When is a du/dt filter needed?

See section [Checking the compatibility of the motor and drive](#), page 60.

See the table of du/dt filters on page 288.

---

## Common mode filter types

For du/dt filters for smaller types, contact your local representative.

These filters are for IEC applications only. In the US, contact factory for assistance.

Type ACQ580 -01-	Common mode filters
	ABB drives
<b>3-phase <math>U_N = 400\text{ V}</math> (380...415 V)</b>	
145A-4	3AXD50000017269
169A-4	3AXD50000017270
206A-4	3AXD50000017270
246A-4	3AXD50000018001
293A-4	3AXD50000018001
363A-4	3AXD50000017940
430A-4	3AXD50000017940

3AXD00000586715.xls J

## du/dt filter types

These filters are for IEC applications only. In the US, contact factory for assistance.

Type ACQ580 -01-	du/dt filters
	ABB drives
<b>3-phase <math>U_N = 400\text{ V}</math> (380...415 V)</b>	
02A7-4	NOCH0016-6x
03A4-4	NOCH0016-6x
04A1-4	NOCH0016-6x
05A7-4	NOCH0016-6x
07A3-4	NOCH0016-6x
09A5-4	NOCH0016-6x
12A7-4	NOCH0016-6x
018A-4	NOCH0016-6x or NOCH0030-6x
026A-4	NOCH0030-6x
033A-4	NOCH0070-6x
039A-4	NOCH0070-6x
046A-4	NOCH0070-6x
062A-4	NOCH0070-6x
073A-4	NOCH0070-6x or NOCH0120-6x
088A-4	NOCH0120-6x
106A-4	NOCH0120-6x
145A-4	FOCH0260-70
169A-4	FOCH0260-70
206A-4	FOCH0260-70
246A-4	FOCH0260-70
293A-4	FOCH0260-70
363A-4	FOCH0320-50
430A-4	FOCH0320-50

3AXD00000586715.xls J

■ **Description, installation and technical data of the FOCH filters**

See *FOCH du/dt filters hardware manual* (3AFE68577519 [English]).

■ **Description, installation and technical data of the NOCH filters**

See *AOCH and NOCH du/dt filters hardware manual* (3AFE58933368 [English]).





## Further information

### Product and service inquiries

Address any inquiries about the product to your local ABB representative, quoting the type designation and serial number of the unit in question. A listing of ABB sales, support and service contacts can be found by navigating to [abb.com/searchchannels](http://abb.com/searchchannels).

### Product training

For information on ABB product training, navigate to [new.abb.com/service/training](http://new.abb.com/service/training).

### Providing feedback on ABB Drives manuals

Your comments on our manuals are welcome. Navigate to [new.abb.com/drives/manuals-feedback-form](http://new.abb.com/drives/manuals-feedback-form).

### Document library on the Internet

You can find manuals and other product documents in PDF format on the Internet at [abb.com/drives/documents](http://abb.com/drives/documents).



[abb.com/drives](http://abb.com/drives)



3AXD50000044862A