



Installation guide UL Type 1 kit for ACS380 and ACS480 drives, frames R0 to R2


3AXD50000235254 Rev D EN 2018-12-19

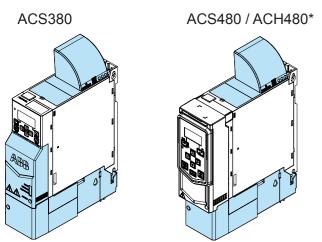


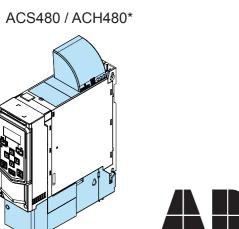


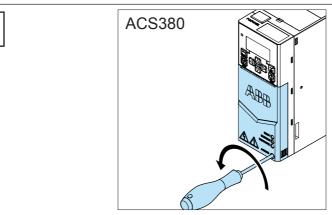


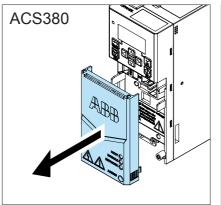


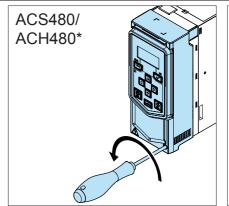


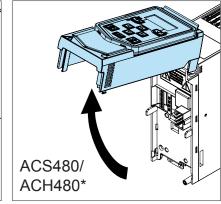


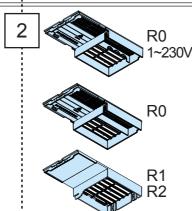

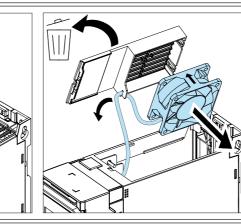

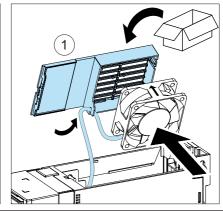


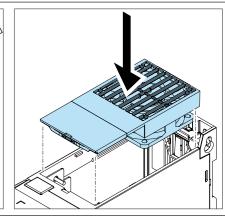


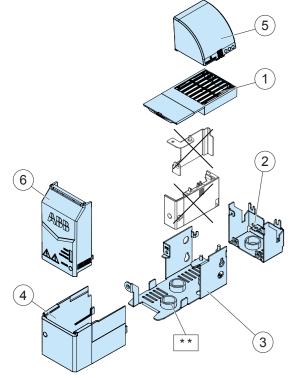








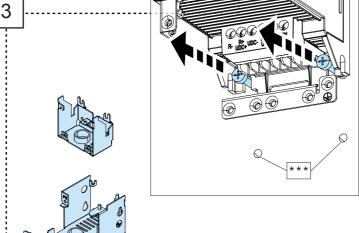


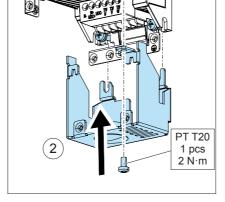


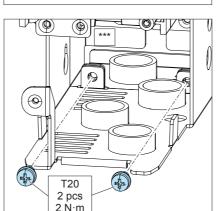


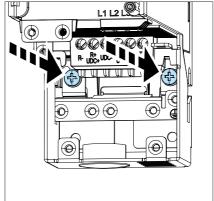


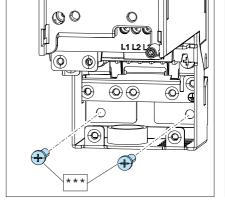


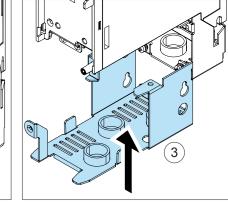

 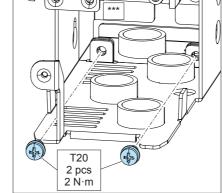


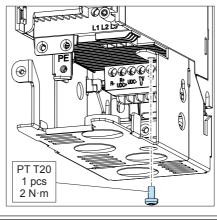


 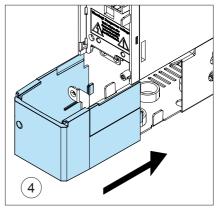


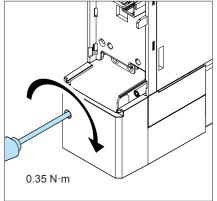



- * = Also for ACS530, ACS560, ACH480 or similar.




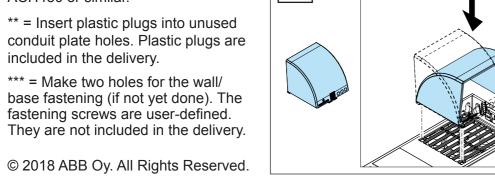




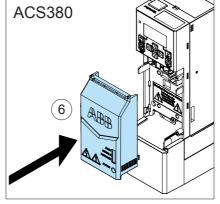

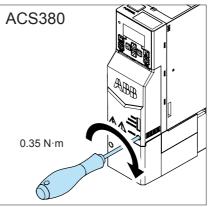

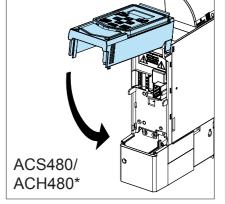

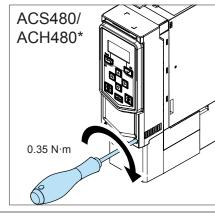

ACS380 ACS380 ACS480/ ACH480* ACS380 with ACS480 / ACH480* with BTAC (option +L535) or BTAC (option +L535) or BREL (option +L511) BREL (option +L511) ACS480/ ACH480* R0 1~230V R0 R2 00 \odot PT T20 1 pcs 2 N·m *** 0.35 N·m (©) T20 Torx, 2 pcs T20 2 pcs 2 N·m PT T20 1 pcs 2 N·m PT T20 Torx, 2 pcs 0.35 N·m ACS380 ACS380 ACS480/ 4 * = Also for ACS530, ACS560, ACH480* ACH480 or similar. ** = Insert plastic plugs into unused conduit plate holes. Plastic plugs are included in the delivery. *** = Make two holes for the wall/ base fastening (if not yet done). The fastening screws are user-defined. They are not included in the delivery.

© 2018 ABB Oy. All Rights Reserved.

ACS480/ ACH480*