

WAVECONTACTAccessories

Batteries



WC-1BAT-IS Battery

Use with the C1D1 Hazardous Area Multiple Input Module.

Use with WC30i.



WC-3BAT-IS Battery

Replacement Battery for WC20i Endpoints.

Use with WC20i.

Connection Cables



WC-USB-4PIN Cable

4-pin-to-USB Interface cable to connect from board-mounted 4-pin header to USB computer port for configuration.

Use with WC15i, WC20i, WC30i.



WC-USB-DB9 Cable

USB to Serial DB9 Interface cable for the best plug-and-play performance with FreeWave products.

Use with WC25i, WC40i, WC45i.



WC20i-S-CBL10 Cable

10 foot extension cable for solar module.

Use with WC20i-Solar.

www.freewave.com LDS0017AA (Rev Feb-2018)



Antennas



WC45-Whip Antenna

Use in fiberglass or plastic enclosure with direct mount to DIN mounted card.

Use with WC45i.



WC45-PM Antenna

Panel Mount antenna to mount outside of an enclosure.

Use with WC25i, WC45i.

Endpoint Checker



WC45i-WaveView Endpoint Checker

The WaveView System checks the network Endpoints.

Mounting Kits



WC20i-B-YOKO

Mounting kit for WC20i Solar Kit - Yokogawa EJA Series.

Use with WC20i.



WC20i-B-R5300

Mounting kit for WC20i Solar Kit - Rosemount 5300.

Use with WC20i.



WC20i-BKT-VEGA

Mounting kit for WC20i Solar Kit - Vega Single Chamber Radar.

Use with WC20i.

SOLUTIONS



DRONES & ROBOTICS



EARTH MONITORING



GOV & DEFENSE



IRRIGATION & PRECISION AGRICULTURE



ASSET TRACKING



OIL & GAS



WATER &



B C



UTILITIES

CONTACT US

5395 Pearl Parkway, Boulder, CO 80301 TF: 866-923-6168 T: (303) 381-9200 For more information, visit www.freewave.com