




**Dual RJ-45 Wiring Adapter
HEXD45**

Want More Information?
To download the XLE User Manual (MAN0805), refer to *Technical Support* in this document.

1 Specifications

| HEXD45 Specifications | |
|-------------------------------|---|
| Circuits per section | 8 |
| Sections per module | 2 |
| Input Voltage Range | 0 to 30VAC |
| Absolute Max. Voltage | 42 VDC |
| Maximum circuit current | 200mA |
| Communication Connector | RJ-45 8 wire |
| Field Terminal Type | Screw Type, 5 mm Removable |
| General Specifications | |
| Required Power (Steady State) | None |
| Relative Humidity | 5 to 95% Non-condensing |
| Operating Temperature | 0° to 60° Celsius |
| Weight | TBD |
| CE | See Compliance Table at |
| UL | http://www.heapg.com/Support/compliance.htm |

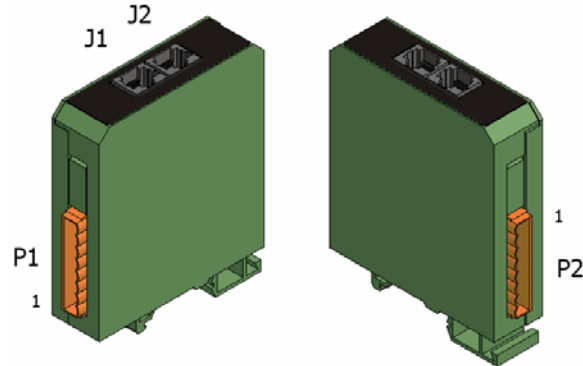

4 Safety

When found on the product, the following symbols specify:



Warning: Electrical Shock Hazard.



Warning: Consult user documentation.


WARNING: To avoid the risk of electric shock or burns, always connect the safety (or earth) ground before making any other connections.

WARNING: To reduce the risk of fire, electrical shock, or physical injury it is strongly recommended to fuse the voltage measurement inputs. Be sure to locate fuses as close to the source as possible.

WARNING: Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.

WARNING: In the event of repeated failure, do not replace the fuse again as a repeated failure indicates a defective condition that will not clear by replacing the fuse.

WARNING: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.

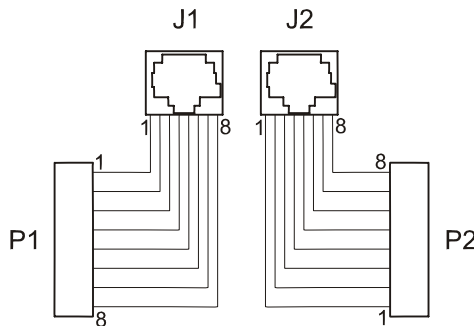

The HEXD45 allows the connection of standard RJ-45, 8 wire communications connectors to discreet field terminal type screw terminals.

5 Technical Support

For assistance and manual updates, contact Technical Support at the following locations:

North America:
(317) 916-4274
www.heapg.com
email: techsppt@heapg.com

Europe:
(+) 353-21-4321-266
www.horner-apg.com
email: techsupport@homerirl.ie