




Top View

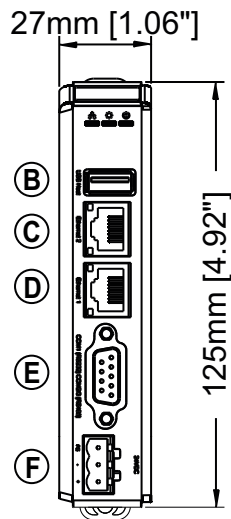


Front View

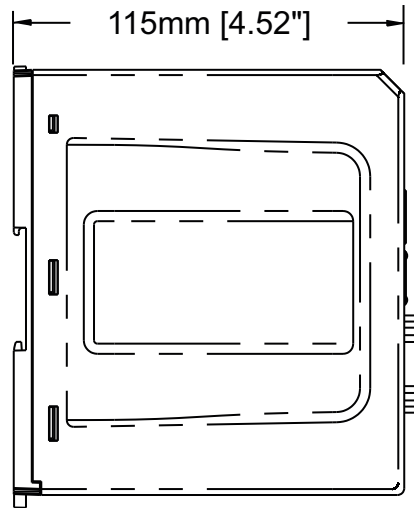

Side View

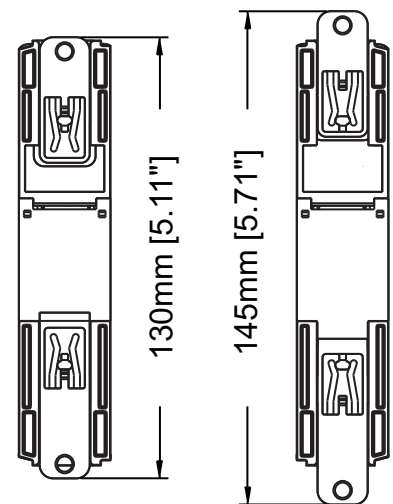

Rear View

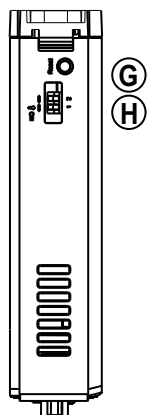

Bottom View

- | | |
|----------------------------|---------------------------------|
| A SD Card Slot | E DE9P Com Port 1, 2 & 3 |
| B USB 2.0 Host Port | F Power Plug |
| C Ethernet Port | G Reset Button |
| D Ethernet Port | H DIP Switches |