

## ***OEM670/OEM675 Servo Drive User Guide***

### **Revision E Change Summary**

The following is a summary of the primary technical changes to this user guide since the last version was released. This user guide, p/n 88-013599-01 **E** (released on May 1, 1998), supersedes 88-013599 **D**.

#### **OEM SERIES MOTORS ARE OBSOLETE**

OEM2300, OEM2303, OEM3400, and OEM3401 motors are no longer sold by Compumotor. Information about these motors appears has been removed from this user guide.

#### **SM SERIES AND NEOMETRIC SERIES MOTORS ADDED**

We have added Compumotor servo motors to this user guide. For information about SM Series and NeoMetric Series servo motors, see *Chapter ③ Specifications* (page 57).

#### **OEM675 DRIVE ADDED**

Information for Compumotor's new OEM675T Drive and new OEM675SD Drive has been added throughout this user guide.

#### **OEM670SD USER GUIDE OBSOLETE**

The OEM670SD Step & Direction Drive previously had its own user guide. Information for the OEM670SD and the new OEM675SD can now be found throughout this user guide.

#### **OEM670X/OEM675X USER GUIDE ADDED**

Information for the OEM670X previously appeared in this user guide. A separate user guide now contains information for the OEM670X and the new OEM675X.

#### **RESISTOR SELECTION SIMPLIFIED (PG. 18)**

A new table (page 18) simplifies selection of response and foldback resistors for Compumotor motors.

#### **CE AND LVD INFORMATION (PG. 163)**

CE and LVD installation information begins on page 163.