 


Safety relays

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



Introduction	5
Validity of documentation	5
Using the documentation	5
Definition of symbols	5
Safety	6
Intended use	6
Safety regulations	6
Safety assessment	6
Use of qualified personnel	7
Warranty and liability	7
Disposal	7
For your safety	7
Unit features	8
Safety features	8
Block diagram/terminal configuration	9
Unit types with UB 24 VDC	9
Unit types with UB 48 - 240 VAC/DC	9
Function description	10
Timing diagram	10
Installation	11
	11
Installation Wiring	11
Wiring	11
Wiring Preparing for operation	11
Wiring Preparing for operation Operation	11 12 13
Wiring Preparing for operation Operation Status indicators	11
Wiring Preparing for operation Operation	11 12 13
Wiring Preparing for operation Operation Status indicators Error indicators	11 12 13 13 13
Wiring Preparing for operation Operation Status indicators	11 12 13 13
Wiring Preparing for operation Operation Status indicators Error indicators	11 12 13 13 13
Wiring Preparing for operation Operation Status indicators Error indicators	11 12 13 13
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions	11 12 13 13 13
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions	11 12 13 13 13
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions Dimensions in mm	11 12 13 13 13 14
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions Dimensions in mm Technical details	11 12 13 13 13 14 15
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions Dimensions in mm Technical details Safety characteristic data Supplementary data	11 12 13 13 13 14 15 24
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions Dimensions in mm Technical details Safety characteristic data	11 12 13 13 13 14 15 15
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions Dimensions in mm Technical details Safety characteristic data Supplementary data Service life graph	11 12 13 13 13 14 15 24 25
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions Dimensions in mm Technical details Safety characteristic data Supplementary data	11 12 13 13 13 14 15 24
Wiring Preparing for operation Operation Status indicators Error indicators Faults - malfunctions Dimensions in mm Technical details Safety characteristic data Supplementary data Service life graph	11 12 13 13 13 14 15 24 25

Contents

EC declaration of conformity

28

Introduction

Validity of documentation

This documentation is valid for the product PNOZ s6. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special fea-

Safety

Intended use

The two-hand control relay meets the requirements of EN 574 Type IIIC. It forces the operator to keep his hands outside the danger zone area during the hazardous movement. The unit is suitable for use on controllers for metalworking presses as a component for simultaneous switching.

It can be used in applications with

- Mechanical presses (EN 692)
- Hydraulic presses (EN 693)
- Safety circuits in accordance with EN 60204-1

The following is deemed improper use in particular:

- Any component, technical or electrical modification to the product
- Use of the product outside the areas described in this manual
- Use of the product outside the technical details (see Technical details [44 15]).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Safety regulations

Safety assessment

Before using a unit it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who:

- Are familiar with the basic regulations concerning health and safety / accident prevention
- Have read and understood the information provided in this description under "Safety"
- And have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- > The product was used contrary to the purpose for which it is intended
- Damage can be attributed to not having followed the guidelines in the manual
- Operating personnel are not suitably qualified
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

Disposal

- In safety-related applications, please comply with the mission time T_{M} in the safety-related characteristic data.
- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

- The two-hand circuit and the connected parts of the press control must conform to the relevant safety standards EN 574, EN 692 and EN 693
- To avoid inductive and capacitance coupling, the cables between the two-hand relay and the pushbuttons must be run separately to any power cables.
- On account of the low currents you should use gold-plated pushbutton contacts.
- Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

Unit features

- Positive-guided relay outputs:
 - 3 safety contacts (N/O), instantaneous
 - 1 auxiliary contact (N/C), instantaneous
- 1 semiconductor output
- Connection options for:
 - 2 control elements (pushbuttons)
- A connector can be used to connect 1 PNOZsigma contact expansion module
- LED for:
 - Supply voltage
 - Input status, channel 1
 - Input status, channel 2
 - Switch status of the safety contacts
 - Feedback loop
 - Fault
- Plug-in connection terminals (either spring-loaded terminal or screw terminal)
- See order reference for unit types

Safety features

The two-hand control relay meets the following safety requirements:

- The circuit is redundant with built-in self-monitoring.
- The safety function remains effective in the case of a component failure.
- The circuit prevents a further press stroke in the case of:
 - Relay failure
 - Contact welding
 - Coil defect on a relay
 - Open circuit
 - Short circuit

Block diagram/terminal configuration

Unit types with UB 24 VDC

U_B: 24 VDC; Order no. 750106, 751106

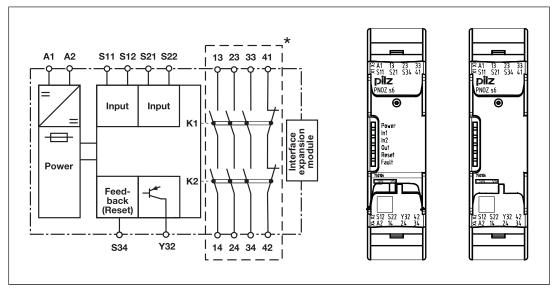


Fig.: Centre: Front view with cover, right: Front view without cover

*Insulation between the non-marked area and the relay contacts: Basic insulation (over-voltage category III), Protective separation (overvoltage category II)

Unit types with UB 48 - 240 VAC/DC

U_B: 48 - 240 VAC/DC; Order no. 750136, 751136

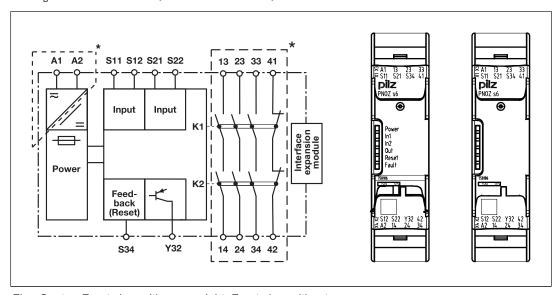



Fig.: Centre: Front view with cover, right: Front view without cover

^{*}Insulation between the non-marked area and the relay contacts: Basic insulation (over-voltage category III), Protective separation (overvoltage category II)

Function description

- The two-hand control relay must be activated by simultaneously pressing two buttons within0,5 s . If one or both of the buttons are released, the unit interrupts the control command for the hazardous movement.
- Reactivation: The output relays will not re-energise until both operator elements have been released and then re-operated simultaneously.

Timing diagram

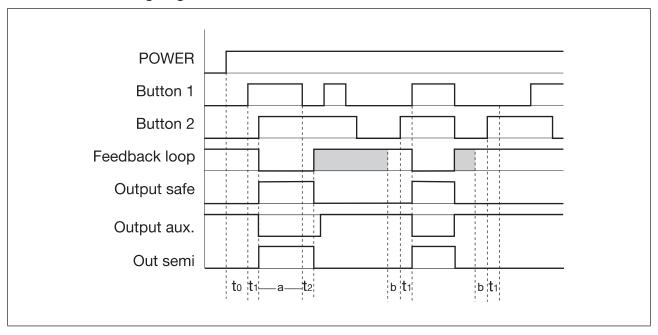

Legend

- POWER: Supply voltage
- Button 1/Button 2: Input circuits
- Feedback loop: Feedback loop
- Output safe: Safety outputs
- Output aux: Auxiliary contacts
- Out semi: Semiconductor output switch status
- ▶ t₀: Recovery time after power on
- t₁: Simultaneity, channel 1 and 2
- t₂: Delay-on de-energisation
- a: Operating cycle ended through button 1 or 2
- b: S34-S12 must be closed before before the button is operated

Shaded area: Status irrelevant

Installation

Install base unit without contact expansion module:

Ensure that the plug terminator is inserted at the side of the unit.

Connect base unit and PNOZsigma contact expansion module:

- Remove the plug terminator at the side of the base unit and at the contact expansion module.
- Connect the base unit and the contact expansion module to the supplied connector before mounting the units to the DIN rail.

Installation in control cabinet

- The safety relay should be installed in a control cabinet with a protection type of at least IP54.
- Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).
- When installed vertically: Secure the unit by using a fixing element (e.g. retaining bracket or end angle).
- Push the device upwards or downwards before lifting it from the DIN rail.

Wiring

Please note:

- Information given in the "Technical details [15]" must be followed.
- Outputs 13-14, 23-24, 33-34 are safety contacts; output 41-42 is an auxiliary contact (e.g. for display).
- Auxiliary contact 41-42 and semiconductor output Y32 should **not** be used for safety circuits!
- To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [44 15]).
- Calculation of the max. cable runs I_{max} in the input circuit:

$$I_{\text{max}} = \frac{R_{\text{lmax}}}{R_{\text{l}}/\text{km}}$$


 R_{imax} = max. overall cable resistance (see Technical details [15]) R_{i} / km = cable resistance/km

- Use copper wire that can withstand 60/75 °C.
- Sufficient fuse protection must be provided on all output contacts with capacitive and inductive loads.
- With U_B 48 240 VAC/DC: Connect S22 to functional earth.
- ▶ Ensure the EMC requirements of IEC 60204-1 are met.
- On 24 VDC devices:


The power supply must comply with the regulations for extra low voltages with protective electrical separation (SELV, PELV) in accordance with VDE 0100, Part 410.

Preparing for operation

Supply voltage	Unit types with U _B 48-240 VAC/DC	Unit types with U _B 240 VDC
	A1 0 L	A1 0 L+

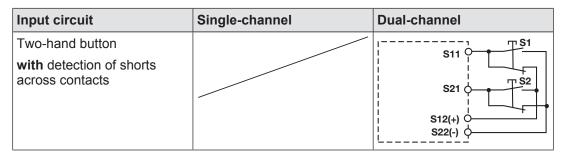

Feedback loop	with feedback loop monit- oring	without feedback loop monitoring
Link or contacts from external contactors	S12 O K5 K6 S34 O L1 13 (23,33) O L1 14 (24,34) O K5 N	S12 ¢

 

Legend

S1/S2: Two-hand pushbuttons

Operation



NOTICE

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

The unit is ready for operation when the Power LED is permanently lit.

LEDs indicate the status and errors during operation:



LED on



LED flashes



INFORMATION

Status indicators and error indicators may occur independently. In the case of an error display, the "Fault" LED will light or flash (exception: "Supply voltage too low"). An LED that is also flashing indicates the potential cause of the error. An LED that is lit and is static indicates a normal operating status. Several status indicators and error indicators may occur simultaneously.

Status indicators



POWER

Supply voltage is present.



IN1

Pushbutton at S11 is operated.



IN₂

Pushbutton at S21 is operated.



OUT

Safety contacts are closed and semiconductor output Y32 carries a high signal.



RESET

 
24 VDC is present at S34.

Error indicators

All LEDs off

Diagnostics: Short across contacts/earth fault; unit switched off

Remedy: Rectify short across contacts/earth fault, switch off supply voltage for 1 min.



Diagnostics: Plug terminator not connected

Remedy: Insert plug terminator, switch supply voltage off and then on again.

€ FAULT

Diagnostics: Internal error, unit defective

Remedy: Switch supply voltage off and then on again, change unit if necessary.

● POWER

Diagnostics: Supply voltage too low

Remedy: Check supply voltage and increase if necessary.

• IN1, IN2 alternately FAULT

Diagnostics: Connection error (possibly: cable resistance in the input circuit is too high) or short between S12 and S22 detected or internal error

Remedy: Rectify connection error or short across contacts, switch supply voltage off and then on again.

€ IN1 → FAULT

Diagnostics: Simultaneity exceeded: Channel 1 too late or power-up blocked due to short-term interruption at S11; input circuits not operated simultaneously

Remedy: Open both input circuits, S12 and S22, simultaneously and then close again.

€ IN2 FAULT

Diagnostics: Simultaneity exceeded: Channel 2 too late or power-up blocked due to short-term interruption at S21; input circuits not operated simultaneously


Remedy: Open both input circuits, S12 and S22, simultaneously and then close again.

Faults - malfunctions

Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.

Dimensions in mm

*with spring-loaded terminals

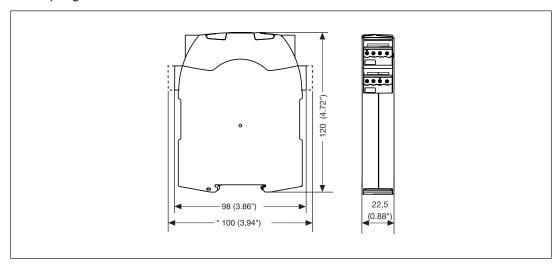

Technical details

Order no. 750106 - 750136

See below for more order numbers

General	750106	750136
Approvals	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	750106	750136
Supply voltage		
Voltage	24 V	48 - 240 V
Kind	DC	AC/DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply (AC)	_	7 VA
Output of external power supply (DC)	3,5 W	3,5 W
Frequency range AC	_	50 - 60 Hz
Residual ripple DC	20 %	20 %
Duty cycle	100 %	100 %
Current at		
Normally open contact	20 mA	20 mA
N/C	10 mA	10 mA
Max. overall cable resistance Rl-max per input circuit	30 Ohm	30 Ohm
External unit fuse protection F1 min.	1 A	1 A
External unit fuse protection F1 max.	Max. conductor cross section	Max. conductor cross section

Electrical data	750106	750136
Two-hand control relay type		
In accordance with the standard	EN 574	EN 574
Туре	III C	III C
Inputs	750106	750136
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Feedback loop DC	15 mA	15 mA
Semiconductor outputs	750106	750136
Number	1	1
Voltage	24 V	24 V
Current	20 mA	20 mA
Relay outputs	750106	750136
Number of output contacts		
Safety contacts (N/O), instant-		
aneous	3	3
Auxiliary contacts (N/C)	1	1
Max. short circuit current IK	1 kA	1 kA
Utilisation category		
In accordance with the standard	EN 60947-4-1	EN 60947-4-1
Utilisation category of safety con-		
tacts	040.14	040.14
AC1 at	240 V	240 V
Min. current	0,01 A	0,01 A
Max. current	6 A	6 A
Max. power	1500 VA	1500 VA
DC1 at	24 V	24 V
Min. current	0,01 A	0,01 A
Max. current	6 A	6 A
Max. power	150 W	150 W
Utilisation category of auxiliary contacts		
AC1 at	240 V	240 V
Min. current	0,01 A	0,01 A
Max. current	6 A	6 A
Max. power	1500 VA	1500 VA
DC1 at	24 V	24 V
Min. current	0,01 A	0,01 A
Max. current	6 A	6 A
Max. power	150 W	150 W
Utilisation category		_
In accordance with the standard	EN 60947-5-1	EN 60947-5-1

Relay outputs	750106	750136
Utilisation category of safety con-		
tacts		
AC15 at	230 V	230 V
Max. current	5 A	3 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	5 A	4 A
Utilisation category of auxiliary contacts		
AC15 at	230 V	230 V
Max. current	5 A	3 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	5 A	4 A
Utilisation category in accordance with UL		
Voltage	240 V AC G.U. (same polarity)	240 V AC G.U. (same polarity)
With current	6 A	6 A
Voltage	24 V DC G. U.	24 V DC G. U.
With current	6 A	6 A
External contact fuse protection, safety contacts		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Max. melting integral	260 A²s	66 A²s
Blow-out fuse, quick	10 A	6 A
Blow-out fuse, slow	6 A	4 A
Blow-out fuse, gG	10 A	6 A
Circuit breaker 24V AC/DC,		
characteristic B/C	6 A	4 A
External contact fuse protection, auxiliary contacts		
Max. melting integral	160 A²s	66 A²s
Blow-out fuse, quick	10 A	6 A
Blow-out fuse, slow	6 A	4 A
Blow-out fuse, gG	6 A	6 A
Circuit breaker 24 V AC/DC,		
characteristic B/C	6 A	4 A
Contact material	AgCuNi + 0,2 μm Au	AgCuNi + 0,2 μm Au
Conventional thermal current while loading several contacts	750106	750136
Ith per contact at UB AC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 contact	_	6 A
Conv. therm. current with 2 contacts	_	6 A
Conv. therm. current with 3 con-		
tacts	_	4,5 A
		·

Conventional thermal current while loading several contacts	750106	750136
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 con-		
tact	6 A	6 A
Conv. therm. current with 2 con-		
tacts	6 A	6 A
Conv. therm. current with 3 con-		4-4
tacts	6 A	4,5 A
Times	750106	750136
Delay-on de-energisation (response time in accordance with EN 574)		
Normally open contact	30 ms	30 ms
N/C	40 ms	40 ms
Recovery time	250 ms	250 ms
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	0,5 s	0,5 s
Environmental data	750106	750136
Climatic suitability	EN 60068-2-78	EN 60068-2-78
Ambient temperature		
Temperature range	-10 - 55 °C	-10 - 55 °C
Storage temperature		
Temperature range	-40 - 85 °C	-40 - 85 °C
Climatic suitability		
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
EMC	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1
Vibration		
In accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 55 Hz	10 - 55 Hz
Amplitude	0,35 mm	0,35 mm
Airgap creepage		
In accordance with the standard	EN 60947-1	EN 60947-1
Overvoltage category	III / II	III / II
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	4 kV	4 kV
Protection type		
Mounting area (e.g. control cabinet)	IP54	IP54
Housing	IP40	IP40
Terminals	IP20	IP20
Mechanical data	750106	750136
Mounting position	Any	Any

Mechanical data	750106	750136
Mechanical life	10,000,000 cycles	10,000,000 cycles
Material		
Bottom	PC	PC
Front	PC	PC
Тор	PC	PC
Connection type	Screw terminal	Screw terminal
Mounting type	plug-in	plug-in
Conductor cross section with screw terminals	1	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible with crimp connectors, no plastic sleeve	0,25 - 1 mm², 24 - 16 AWG	0,25 - 1 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp con-		0.0. 4.5 mm² 04. 40 AWO
nectors	0,2 - 1,5 mm², 24 - 16 AWG	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	5 0,5 Nm	0,5 Nm
Dimensions		
Height	98 mm	98 mm
Width	22,5 mm	22,5 mm
Depth	120 mm	120 mm
Weight	185 g	205 g

Where standards are undated, the 2014-07 latest editions shall apply.

Order no. 751106 - 751136

General	751106	751136
Approvals	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed	CCC, CE, EAC (Eurasian), KOSHA, TÜV, cULus Listed
Electrical data	751106	751136
Supply voltage		
Voltage	24 V	48 - 240 V
Kind	DC	AC/DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply (AC)	_	7 VA
Output of external power supply (DC)	3,5 W	3,5 W
Frequency range AC	_	50 - 60 Hz
Residual ripple DC	20 %	20 %
Duty cycle	100 %	100 %
Current at		
Normally open contact	20 mA	20 mA
N/C	10 mA	10 mA

Electrical data	751106	751136
Max. overall cable resistance RI-		
max per input circuit	30 Ohm	30 Ohm
External unit fuse protection F1	4.4	
min.	1 A	1 A
External unit fuse protection F1 max.	Max. conductor cross section	Max. conductor cross section
Two-hand control relay type		
In accordance with the standard	EN 574	EN 574
Туре	III C	III C
Inputs	751106	751136
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Feedback loop DC	15 mA	15 mA
Semiconductor outputs	751106	751136
Number	1	1
Voltage	24 V	24 V
Current	20 mA	20 mA
Relay outputs	751106	751136
Number of output contacts		
Safety contacts (N/O), instant-		
aneous	3	3
Auxiliary contacts (N/C)	1	1
Max. short circuit current IK	1 kA	1 kA
Utilisation category		
In accordance with the standard	EN 60947-4-1	EN 60947-4-1
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Min. current	0,01 A	0,01 A
Max. current	6 A	6 A
Max. power	1500 VA	1500 VA
DC1 at	24 V	24 V
Min. current	0,01 A	0,01 A
Max. current	6 A	6 A
Max. power	150 W	150 W

-	
240 V	240 V
0,01 A	0,01 A
6 A	6 A
1500 VA	1500 VA
24 V	24 V
0,01 A	0,01 A
6 A	6 A
150 W	150 W
EN 60947-5-1	EN 60947-5-1
230 V	230 V
5 A	3 A
24 V	24 V
5 A	4 A
-	
230 V	230 V
5 A	3 A
24 V	24 V
5 A	4 A
240 V AC G.U. (same polarity)	240 V AC G.U. (same polarity)
6 A	6 A
24 V DC G. U.	24 V DC G. U.
6 A	6 A
EN 60947-5-1	EN 60947-5-1
260 A ² s	66 A²s
10 A	6 A
6 A	4 A
10 A	6 A
6 A	4 A
160 A²s	66 A²s
10 A	6 A
6 A	4 A
6 A	6 A
	240 V 0,01 A 6 A 1500 VA 24 V 0,01 A 6 A 150 W EN 60947-5-1 230 V 5 A 24 V 5 A 24 V 5 A 240 V AC G.U. (same polarity) 6 A 24 V DC G. U. 6 A EN 60947-5-1 260 A²s 10 A 6 A 160 A²s 10 A 6 A

Relay outputs	751106	751136
Contact material	AgCuNi + 0,2 μm Au	AgCuNi + 0,2 μm Au
Conventional thermal current while loading several contacts	751106	751136
Ith per contact at UB AC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 contact	_	6 A
Conv. therm. current with 2 contacts	_	6 A
Conv. therm. current with 3 contacts	_	4,5 A
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 contact	6 A	6 A
Conv. therm. current with 2 contacts	6 A	6 A
Conv. therm. current with 3 contacts	6 A	4,5 A
Times	751106	751136
Delay-on de-energisation (response time in accordance with EN 574)		
Normally open contact	30 ms	30 ms
N/C	40 ms	40 ms
Recovery time	250 ms	250 ms
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	0,5 s	0,5 s
Environmental data	751106	751136
Climatic suitability	EN 60068-2-78	EN 60068-2-78
Ambient temperature		
Temperature range	-10 - 55 °C	-10 - 55 °C
Storage temperature		
Temperature range	-40 - 85 °C	-40 - 85 °C
Climatic suitability		
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
EMC	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1
Vibration		
In accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 55 Hz	10 - 55 Hz
Amplitude	0,35 mm	0,35 mm
Airgap creepage		
In accordance with the standard	EN 60947-1	EN 60947-1
Overvoltage category	III / II	III / II
Pollution degree	2	2
-		

Environmental data	751106	751136
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	4 kV	4 kV
Protection type		
Mounting area (e.g. control cab-		
inet)	IP54	IP54
Housing	IP40	IP40
Terminals	IP20	IP20
Mechanical data	751106	751136
Mounting position	Any	Any
Mechanical life	10,000,000 cycles	10,000,000 cycles
Material		
Bottom	PC	PC
Front	PC	PC
Тор	PC	PC
Connection type	Spring-loaded terminal	Spring-loaded terminal
Mounting type	plug-in	plug-in
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	0,2 - 2,5 mm², 24 - 12 AWG	0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2	2
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	100 mm	100 mm
Width	22,5 mm	22,5 mm
Depth	120 mm	120 mm
Weight	185 g	205 g

Where standards are undated, the 2014-07 latest editions shall apply.

Safety characteristic data



NOTICE

You must comply with the safety-related characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2008 PL	EN ISO 13849-1: 2008 Category	EN 62061 SIL CL	EN 62061 PFH _D [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2008 T _M [year]
Two-hand							

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

Supplementary data



CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switching frequency and the load on the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switching frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

Unit types with U_B 240 VDC

U_B: 24 VDC; Order no. 750106, 751106

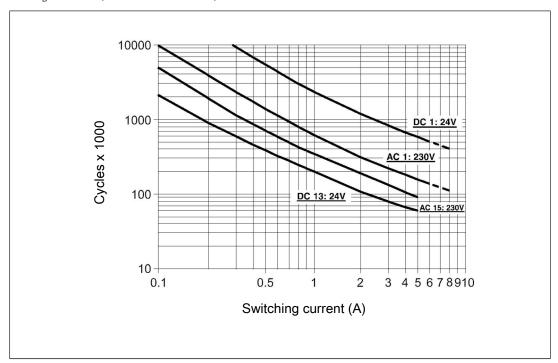


Fig.: Service life graphs at 24 VDC and 230 VAC

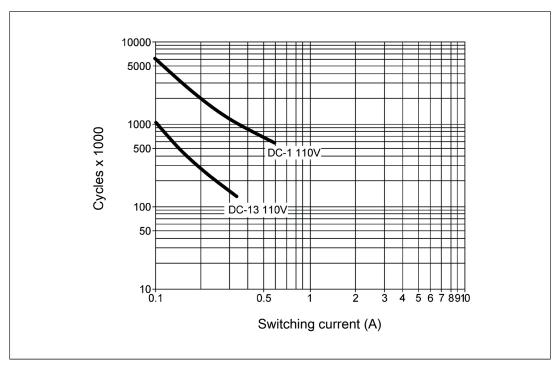


Fig.: Service life graphs at 110 VDC

Example

Inductive load: 0.2 A

Utilisation category: AC15

Contact service life: 2 000 000 cycles

Provided the application to be implemented requires fewer than 2 000 000 cycles, the PFH value (see Technical details [15]) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Unit types with U_B 48 - 240 VAC/DC

► U_B: 48 – 240 VAC/DC; Order no. 750136, 751136

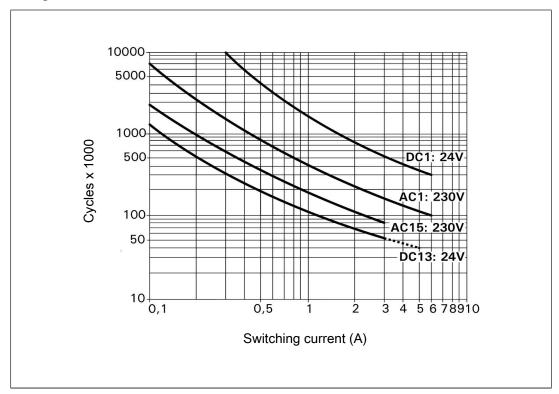


Fig.: Service life graphs at 24 VDC and 230 VAC

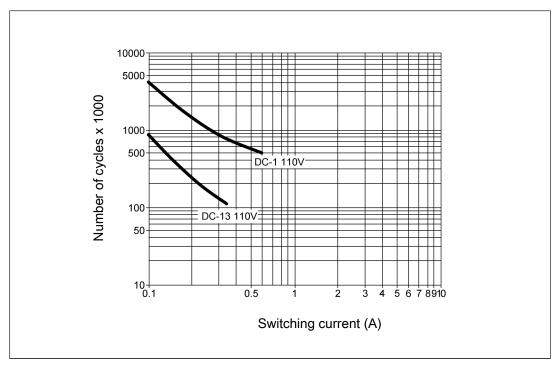


Fig.: Service life graphs at 110 VDC

Example

Inductive load: 0.2 A

Utilisation category: AC15

Contact service life: 1 000 000 cycles


Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see Technical details [15]) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Remove plug-in terminals

Procedure: Insert the screwdriver into the housing recess behind the terminal and lever the terminal out.

Do not remove the terminals by pulling the cables!

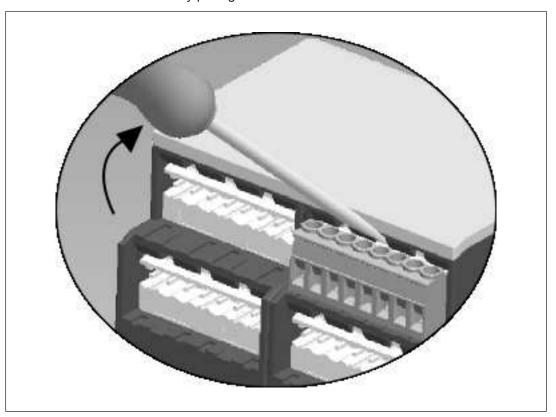

Order reference

Product type	Features	Connection type	Order No.
PNOZ s6	24 VDC	Screw terminals	750 106
PNOZ s6 C	24 VDC	Spring-loaded terminals	751 106
PNOZ s6	48 - 240 VAC/DC	Screw terminals	750 136
PNOZ s6 C	48 - 240 VAC/DC	Spring-loaded terminals	751 136

EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

SafetyEYE®, SafetyNET p® THE SPIRIT OF SAFETY® are registered and protected trademarks of PIIZ GmbH & Co. KG in some countries. We would point out that product features mit from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Support if you have any questions.

InduraNET p°, PAS4000°, PAScalle, PASconfige", PIlze", PII's, PUDe", PMCprince", PMCprotegoe", PMCtendoe", PMDe, PMIle", PNOZe", Prince", PSEN", PSSe, PVISe, SafetyBUS

Support

Technical support is available from Pilz round the clock.

Americas
Brazil
+55 11 97569-2804
Canada
+1 888-315-PILZ (315-7459)
Mexico
+52 55 5572 1300
USA (toll-free)
+1 877-PILZUSA (745-9872)

Asia
China
+86 21 60880878-216
Japan
+81 45 471-2281
South Korea
+82 31 450 0680


Australia +61 3 95446300 Europe Austria +43 1 7986263-0 Belgium, Luxembourg +32 9 3217575 France +33 3 88104000 Germany +49 711 3409-444 Ireland +353 21 4804983 Italy

+39 0362 1826711

Scandinavia +45 74436332 Spain +34 938497433 Switzerland +41 62 88979-30 The Netherlands +31 347 320477 Turkey +90 216 5775552 United Kingdom +44 1536 462203

You can reach our international hotline on: +49 711 3409-444 support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

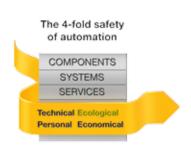









Pilz GmbH & Co. KG Felix-Wankel-Straße 2 73760 Ostfildern, Germany Tel.: +49 711 3409-0 Fax: +49 711 3409-133 info@pilz.com www.pilz.com

