

PNOZ s9




Safety relays

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.

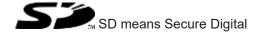

/alidity of documentation 5 /sing the documentation 5 /seficition of symbols 5 Safety 6 Antended use 6 Asafety regulations 7 Safety sasessment 7 /Se of qualified personnel 7 Varranty and liability 7 /Intended use 8 for your safety 8 /Init features 8 Solock diagram/terminal configuration 9 Imming diagrams 10 Polay-on de-energisation, not retriggerable 10 Polay-on de-energisation, retriggerable 11 Pulse on switching on 12 Polay-on energisation 13 Installation 13 Norting 14 Preparing for operation 14 Operating modes and delay time 14 Set delay time 15 Connection 15 Operation 19 Status indicators 20	ntroduction	5
Sing the documentation	Validity of documentation	5
Safety 6 Intended use 6 Safety regulations 7 Safety assessment 7 Sericity assessment 7 Varranty and liability 7 Disposal 8 Sorry your safety 8 Unit features 8 Solick diagram/terminal configuration 9 Function description 9 Iming diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Delay-on energisation 12 Delay-on energisation 12 Delay-on energisation 13 Installation 13 Operating modes and delay time 14 Operating modes and delay time 15 Set operating modes 15 Set delay time 15 Connection 15 Operation 19 Status indicators 20		
Intended use	Definition of symbols	5
Intended use		
Safety regulations 7 Safety assessment 7 Jose of qualified personnel 7 Varranty and liability 7 Disposal 8 For your safety 8 Init features 8 Safety features 8 Slock diagram/terminal configuration 9 Function description 9 Siming diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Pulse on switching on 12 Delay-on energisation 13 Installation 13 Installation 13 Operating modes and delay time 14 Deterating modes and delay time 14 Set delay time 15 Connection 15 Operation 15 Operation 15 Status indicators 20	Safety	6
Safety assessment 7 Jose of qualified personnel 7 Varranty and liability 7 Disposal 8 For your safety 8 Init features 8 Safety features 8 Block diagram/terminal configuration 9 Function description 9 Full person de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Delay-on energisation 12 Delay-on energisation 12 Delay-on energisation 13 Installation 13 Installation 13 Installation 14 Operating modes and delay time 14 Set delay time 15 Connection 15 Image: A set delay time 15 Connection 15 Operation 19	ntended use	6
See of qualified personnel	Safety regulations	7
Varranty and liability 7 Disposal 8 For your safety 8 Init features 8 Safety features 8 Block diagram/terminal configuration 9 Function description 9 Finding diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Dulse on switching on 12 Delay-on energisation 13 Wiring 14 Operating for operation 14 Departing modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	Safety assessment	7
Disposal 8 For your safety 8 Safety features 8 Safety features 8 Slock diagram/terminal configuration 9 Function description 9 Finding diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Pulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Dereparing for operation 14 Descripting modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	Use of qualified personnel	7
For your safety 8 Unit features 8 Safety features 8 Block diagram/terminal configuration 9 Function description 9 Finning diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Pulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Preparing for operation 14 Operating modes and delay time 14 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		
Stafety features	Disposal	8
Safety features 8 Block diagram/terminal configuration 9 Function description 9 Timing diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Duste on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Operating modes and delay time 14 Deterating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	For your safety	8
Safety features 8 Block diagram/terminal configuration 9 Function description 9 Timing diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Duste on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Operating modes and delay time 14 Deterating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		
Stock diagram/terminal configuration 9	Unit features	8
Stock diagram/terminal configuration 9		_
Function description 9 Finning diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Pulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Deparating for operation 14 Deparating modes and delay time 14 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	Safety features	8
Function description 9 Finning diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Pulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Deparating for operation 14 Deparating modes and delay time 14 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		•
Timing diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Dulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Departing for operation 14 Departing modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	Block diagram/terminal configuration	9
Timing diagrams 10 Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Dulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Departing for operation 14 Departing modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	Function description	9
Delay-on de-energisation, not retriggerable 10 Delay-on de-energisation, retriggerable 11 Pulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Departing for operation 14 Depending modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	·	
Delay-on de-energisation, retriggerable 11 Pulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Operating for operation 14 Descripting modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		
Pulse on switching on 12 Delay-on energisation 13 Installation 13 Viring 14 Operating for operation 14 Operating modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		
Delay-on energisation 13 Installation 14 Preparing for operation 14 Descripting modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20	, , , , , , , , , , , , , , , , , , , ,	
Installation 13 Viring 14 Preparing for operation 14 Operating modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		
Viring 14 Preparing for operation 14 Operating modes and delay time 14 Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		
Preparing for operation	nstallation	13
Preparing for operation		
Departing modes and delay time	Wiring	14
Departing modes and delay time		
Set operating modes 15 Set delay time 15 Connection 15 Application examples 17 Operation 19 Status indicators 20		
Set delay time		
Connection		
Application examples		
Dperation	Connection	15
Dperation		•=
Status indicators 20	Application examples	17
Status indicators 20	Ongration	40
	•	
Soult indicators	Fault indicators	20 20

Faults - malfunctions	21
Dimensions in mm	21
Technical details	22
Safety characteristic data	
Classification according to ZVEI, CB24I	27
Supplementary data	29
Service life graph	29
Permitted operating height	31
Remove plug-in terminals	32
Order reference	32
EC declaration of conformity	32

Introduction

Validity of documentation

This documentation is valid for the product PNOZ s9. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

Definition of symbols

Information that is particularly important is identified as follows:



DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



INFORMATION

This gives advice on applications and provides information on special fea-

Safety

Intended use

The unit meets the requirements of EN 60947-5-1 and EN 60204-1. In conjunction with a base unit the unit is used as a

- ▶ Contact expansion module to increase the number of contacts available on a base unit. Base units are all safety relays with feedback loop monitoring.
- ▶ Pulse relay
 - In accordance with EN ISO 12100 (inching circuit for limited movement of hazardous machine components during installation, set up and positioning)
 - In safety circuits in accordance with EN 60204-1 (e.g. on movable guards)
- ▶ Safe timer, delay-on energisation
 - In accordance with EN ISO 14119 (release with delay through timer)
 - In safety circuits in accordance with EN 60204-1 (e.g. on movable guards)
- ▶ Safe timer, delay-on de-energisation
 - In safety circuits in accordance with EN 60204-1 (e.g. on movable guards)

The max. achievable safety level depends on the base unit. The expansion module may not exceed this. The safety-related characteristic values stated under safety-related characteristic data [27] can only be achieved if the base unit also exhibits these safety characteristic values.

▶ The unit can also be used without a base unit as a pulse relay or safe timer.

The unit is designed for use with

- ▶ Safety relays in the series PNOZsigma, PNOZ X, PNOZelog, PNOZmulti
- Safety gate monitors from the PST series
- ▶ Two-hand control relays from the PNOZsigma, P2HZ series

The following is deemed improper use in particular

- ▶ Any component, technical or electrical modification to the product,
- Use of the product outside the areas described in this manual,
- ▶ Use of the product outside the technical details (see Technical details [22]).



NOTICE

EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

Safety regulations

Safety assessment

Before using a device, a safety assessment in accordance with the Machinery Directive is required.

The product as an individual component fulfils the functional safety requirements in accordance with EN ISO 13849 and EN 62061. However, this does not guarantee the functional safety of the overall plant/machine. To achieve the relevant safety level of the overall plant/machine's required safety functions, each safety function needs to be considered separately.

Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in the section entitled Safety
- ▶ Have a good knowledge of the generic and specialist standards applicable to the specific application.

Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended,
- Damage can be attributed to not having followed the guidelines in the manual,
- Derating personnel are not suitably qualified,
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

Disposal

- ▶ In safety-related applications, please comply with the mission time T_M in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

Unit features

- ▶ Positive-guided relay outputs, either instantaneous, delay-on de-energisation (also retriggerable), pulsing or delay-on energisation:
 - 3 safety contacts
 - 1 auxiliary contact
- ▶ Switch-on time, pulse time or delay-on de-energisation selectable with rotary switches
- ▶ LED indicator for:
 - Supply voltage
 - Input status, channel 1
 - Input status, channel 2
 - Switch status channel 1/2
 - Start circuit
 - Error
- ▶ Plug-in connection terminals (either spring-loaded terminal or screw terminal)
- ▶ See order reference for unit types

Safety features

The unit meets the following safety requirements:

- ▶ The unit monitors its own output contacts.
- ▶ The safety function remains effective in the case of a component failure.
- ▶ Earth fault in the feedback loop is detected.
- ▶ Earth fault in the input circuit:

The output relays de-energise and the safety contacts open.

Block diagram/terminal configuration

Fig.: Centre: Front view with cover, right: Front view without cover

*Safe separation from non-marked area in accordance with EN 60947-1, 6 kV, basic insulation between all safety contacts.

Function description

- Delay-on de-energisation, not retriggerable

 If the supply voltage at the input circuit is interrupted, the safety contacts will open once
 the set release time has elapsed, even if the safety function is cancelled during the delay
 time. The unit cannot be reactivated until the delay time has elapsed.
- Delay-on de-energisation, retriggerable
 (only possible as a standalone application or with the PNOZsigma base unit!)
 If the supply voltage at the input circuit is interrupted, the safety contacts will open once the set release time has elapsed.

If the safety function is cancelled during the delay time (e.g. safety gate closed), the unit will remain active.

▶ ^{Iস} Pulse on switching on

The safety contacts close when supply voltage is applied, the feedback loop is closed and finally the input circuit is closed. The safety contacts are reopened once the pulse time has elapsed.

If the input circuit is opened for more than 10 ms during the pulse time, the safety contacts will open immediately and the auxiliary contact will be closed.

▶ [≥] Delay-on energisation

The set delay time is started when supply voltage is applied, the feedback loop is closed and finally the input circuit is closed.

If the input circuit and feedback loop are closed once the delay time has elapsed, the safety contacts will close and the auxiliary contact will be opened.

If the input circuit is opened for more than 10 ms, the safety contacts will open immediately and the auxiliary contact will be closed.

with PNOZsigma base unit:


▶ Dual-channel operation via PNOZsigma connector

with other base units or without base unit:

▶ Single-channel operation: one input circuit affects the output relays

Timing diagrams

Delay-on de-energisation, not retriggerable

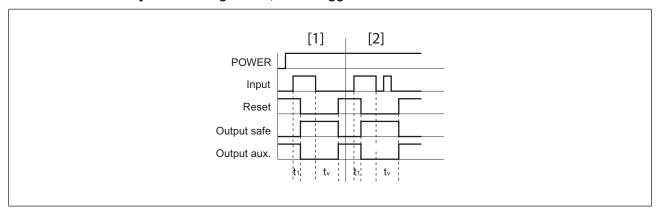

Legend

▶ POWER: Supply voltage

Input: Input circuit

Output safe: Safety contactsOutput aux: Auxiliary contactReset: Feedback loop input

▶ t₁: Switch-on delay

▶ t_v: Delay time

▶ [1]: Delay-on de-energisation with the time t_v


 \blacktriangleright [2]: No retriggering in the time $t_{\!\scriptscriptstyle v}$



NOTICE

At the latest the safety contacts open after the set delay time + 20 ms + 15% of the set value, even in the case of a component failure.

Delay-on de-energisation, retriggerable

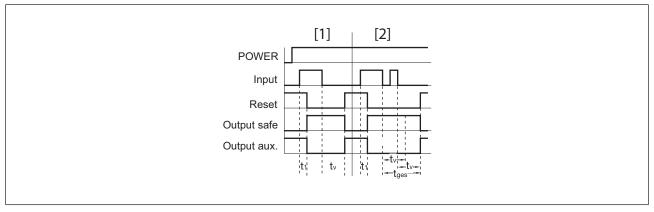

Legend

▶ POWER: Supply voltage

▶ Input: Input circuit

Output safe: Safety contactsOutput aux: Auxiliary contactReset: Feedback loop input

▶ t₁: Switch-on delay

▶ t_v: Delay time

▶ t_{aes}: Overall delay time

▶ [1]: Delay-on de-energisation with the time t_v


 \blacktriangleright [2]: Retriggering in the time t_v for overall delay-on de-energisation t_{ges}



NOTICE

At the latest the safety contacts open after the set delay time + 20 ms + 15% of the set value, even in the case of a component failure.

Pulse on switching on

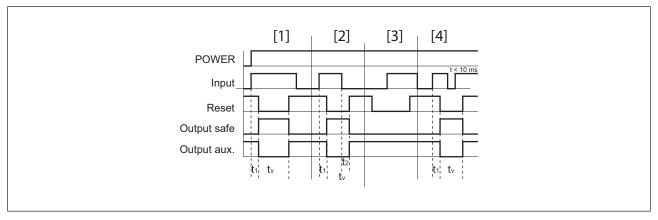

Legend

▶ POWER: Supply voltage

▶ Input: Input circuit

Output safe: Safety contactsOutput aux: Auxiliary contactReset: Feedback loop input

▶ t₁: Switch-on delay

▶ t₂: Delay-on de-energisation

▶ t_v: Delay time (pulse time)

▶ [1]: Normal operating cycle

▶ [2]: Fault: Input circuit opened too early

▶ [3]: Fault: Feedback loop closed too late


▶ [4]: Normal operating cycle with supply interruption < 10 ms



NOTICE

At the latest the safety contacts open after the set delay time + 20 ms + 15% of the set value, even in the case of a component failure.

Delay-on energisation

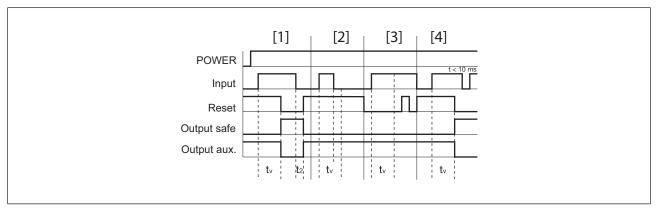

Legend

▶ POWER: Supply voltage

Input: Input circuit

Output safe: Safety contacts
 Output aux: Auxiliary contact
 Reset: Feedback loop input
 t₂: Delay-on de-energisation

▶ tv: Delay time

▶ [1]: Normal operating cycle

▶ [2]: Fault: Input circuit opened too early, before t_v expired

▶ [3]: Fault: Feedback loop closed too late after t_v elapsed

▶ [4]: Normal operating cycle with supply interruption < 10 ms



NOTICE

At the earliest the safety contacts close after the set delay time - 20 ms - 15% of the set value, even in the case of a component failure.

Installation

Install contact expansion module without base unit:

▶ Ensure that the plug terminator is inserted at the side of the unit.

Connect base unit and PNOZsigma contact expansion module:

- ▶ Remove the plug terminator at the side of the base unit and at the contact expander module
- ▶ Connect the base unit and the contact expansion module using the connector supplied, before mounting the units to the DIN rail.

Control cabinet installation

- ▶ The safety relay should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).

- ▶ When installed vertically: Secure the unit by using a fixing element (e.g. retaining bracket or end angle).
- ▶ Push the unit upwards or downwards before lifting it from the DIN rail.

Wiring

Please note:

- Information given in the "Technical details [22] must be followed.
- ▶ Outputs 17-18, 27-28, 37-38 are safety contacts; output 45-46 is an auxiliary contact (e.g. for display).
- Auxiliary contact 45-46 should **not** be used for safety circuits!
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [☐ 22]).
- ▶ Calculation of the max. cable length I_{max} in the input circuit:

$$I_{max} = \frac{R_{lmax}}{R_l / km}$$

 R_{lmax} = max. overall cable resistance (see Technical details [22]) R_{l} / km = cable resistance/km

- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ To prevent EMC interferences (particularly common-mode interferences) the measures described in EN 60204-1 must be executed. This includes the separate routing of cables of the control circuits (input, start and feedback loop) from other cables for energy transmission or the shielding of cables, for example.
- Adequate protection must be provided on all output contacts with capacitive and inductive loads.
- ▶ The power supply must comply with the regulations for extra low voltages with protective electrical separation (SELV, PELV) in accordance with VDE 0100, Part 410.

Preparing for operation

Operating modes and delay time

The operating mode and delay time are set via the rotary switches on the unit. You can do this by opening the cover on the front of the unit.



NOTICE

Do not adjust the rotary switch during operation, otherwise an error message will appear, the safety contacts will open and the unit will not be ready for operation until the supply voltage has been switched off and then on again.

Set operating modes

- ▶ Switch off supply voltage.
- ▶ Select operating mode via the operating mode selector switch "mode".
- If the operating mode selector switch "mode" is in its start position (vertical position), an error message will appear.

operating mode selector switch "mode"	delay-on de-en- ergisation, not retriggerable	delay-on de-en- ergisation, retriggerable	delay-on ener- gisation	pulse on switch- ing on
	[₹] .	»L	: الله	:Ö:

Set delay time

Time selector switch "t[s]"

Factor selector switch "n"

n x t[s] = Delay time

Example:

t = 4 s, n = 5

Delay time = $5 \times 4 = 20 \text{ s}$


Connection



INFORMATION

The supply voltage may only be connected as shown in the examples listed below!

▶ Supply voltage

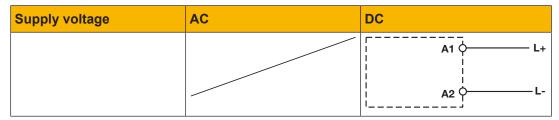

▶ 1-channel input circuit/feedback loop

Input circuit	Input circuit	Feedback loop
Without base unit (stand- alone)	S32 \$\frac{\sigma_{\text{33}}}{2} + 24 \text{ V DC}	PNOZs9 S32
Base unit: Safety relay PNOZ X	24 V DC A1 PNOZs9 OS32 PNOZ X OA2 OV	24 V DC PNOZ X feedback 045 000 0 V
Base unit: Safety relay PNOZelog; driven via semiconductor outputs (24 VDC)	24 V DC PNOZelog	24 V DC PNOZelog S34 PNOZs9* feedback loop A2 0 V



INFORMATION

Feedback loop

The inputs that evaluate the feedback loop will depend on the base unit and application.

* with PNOZelog as a base unit:

The delay-on de-energisation of PNOZ s9 that can be set may only be used with the safety relay PNOZ e1p. Other PNOZelog safety relays must be operated without delay-on de-energisation.

▶ 2-channel input circuit

	Base unit: Safety relays PNOZ s3, PNOZ s4, PNOZ s5	Base unit: Safety relays PNOZ s1, PNOZ s2
The input circuit is connected and evaluated via the connector.	S110 S34 PNOZ s9	PNOZ s1 PNOZ s9 PNOZ s9 PNOZ s1 PNOZ s2 PNOZ s2
	Base unit: Two-hand control relay PNOZ s6	Base unit: Two-hand control relay PNOZ s6.1
The input circuit is connected and evaluated via the connector.	S12 O S34 PNOZ s9	S24 O S34 PNOZ s9



INFORMATION

If a base unit and a contact expansion module from the PNOZsigma range are linked via the connector, no additional wiring is necessary.

Do not connect S32 on the contact expansion module!

Application

	Without feedback loop	With feedback loop
Without base unit	PNOZs9 S32 S3 S34 S34 S4 S4 DC A2 S4 V DC A2 S4 V DC	PNOZs9 S32 S3 S3 K6 K6 A1


Legend

▶ S3: Start button

Application examples


Single device

- ▶ Delay-on de-energisation, retriggerable
- ▶ with feedback loop monitoring
- ▶ 40s delay-on de-energisation

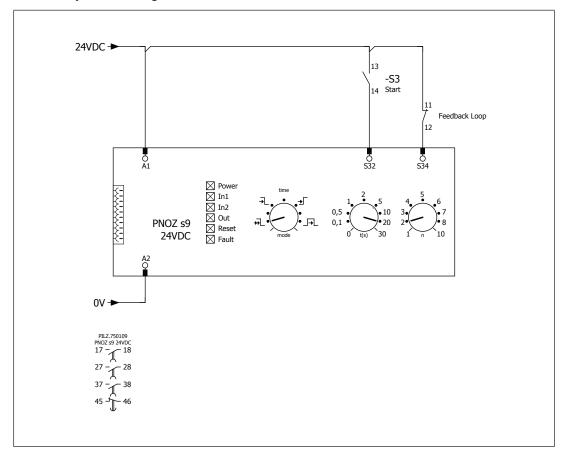


Combined with PNOZ s2

- ▶ Emergency stop
- ▶ Single-channel
- ▶ Monitored start
- ▶ falling edge with feedback loop monitoring
- ▶ Delay-on energisation
- ▶ 40s delay-on de-energisation

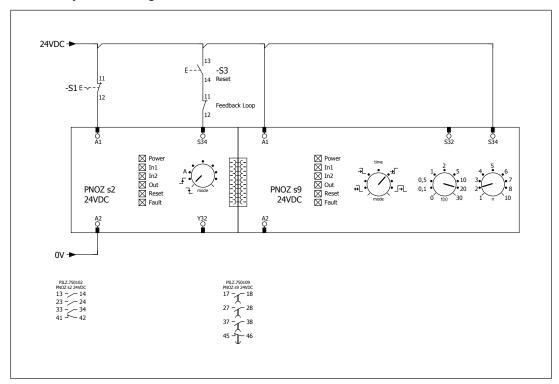

Combined with PNOZ s4

- ▶ Emergency stop
- Dual-channel
- with detection of shorts across contacts
- Monitored start
- ▶ falling edge with feedback loop monitoring
- ▶ Delay-on de-energisation, not retriggerable
- ▶ 40s delay-on de-energisation

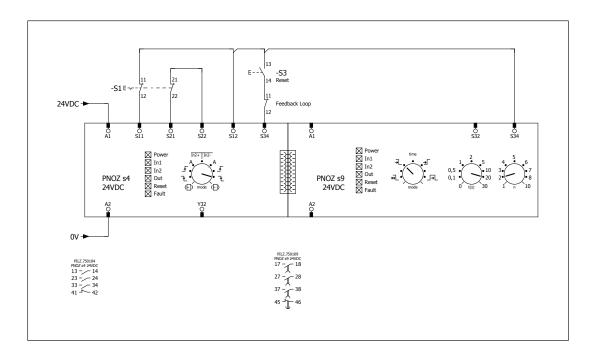

Operation

When the relay outputs are switched on, the mechanical contact on the relay cannot be tested automatically. Depending on the operational environment, measures to detect the non-opening of switching elements may be required under some circumstances.

When the product is used in accordance with the European Machinery Directive, a check must be carried out to ensure that the safety contacts on the relay outputs open correctly. Open the safety contacts (switch off output) and start the device again, so that the internal diagnostics can check that the safety contacts open correctly

- ▶ for SIL CL 3/PL e at least 1x per month
- ▶ for SIL CL 2/PL d at least 1x per year



NOTICE

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

The unit is ready for operation when the Power LED is permanently lit.

LEDs indicate the status and errors during operation:



LED on



LED flashes



INFORMATION

Status indicators and error indicators may occur independently. In the case of an error display, the "Fault" LED will light or flash (exception: "Supply voltage too low"). An LED that is also flashing indicates the potential cause of the error. An LED that is lit and is static indicates a normal operating status. Several status indicators and error indicators may occur simultaneously.

Status indicators



POWER

Supply voltage is present.



IN1

Input circuit at S32 is closed.



IN2

Input circuit at S32 is closed.



OUT

Safety contacts are closed.



RESET

24 VDC is present at S34.

O_

OUT

Set delay time is running.

Fault indicators



FAULT

Diagnostics: Plug terminator not connected

▶ Remedy: Insert plug terminator, switch supply voltage off and then on again.

With base unit PNOZsigma:

Diagnostics: Input circuit S32 is closed without authorisation

O(-

FAULT

Diagnostics: Internal error, unit defective

▶ Remedy: Switch supply voltage off and then on again, change unit if necessary.

O(-

POWER

Diagnostics: Supply voltage too low

▶ Remedy: Check supply voltage and increase if necessary.

€ RESET → FAULT

Diagnostics: Position of rotary switch is not permitted or rotary switch was adjusted during operation.

▶ Remedy: Switch supply voltage off and then on again.

POWER, IN1, IN2, OUT, RESET, FAULT

Diagnostics: The operating mode selector switch "mode" is in its start position (vertical position)


▶ Remedy: Switch off the supply voltage and set the required operating mode on operating mode selector switch "mode".

Faults - malfunctions

- ▶ Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.
- In the case of an error, the delay-on de-energisation contacts may open before the delay time has elapsed.

Dimensions in mm

*with spring-loaded terminals

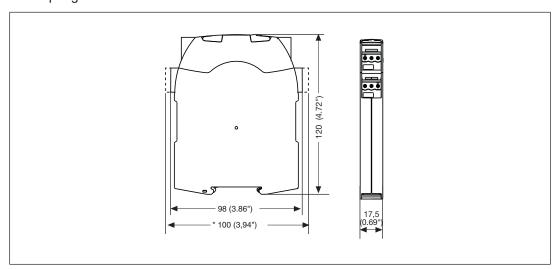

Technical details

General	750109	751109	751189
Certifications	CCC, CE, EAC (Euras- ian), KOSHA, TÜV, cU- Lus Listed	CCC, CE, EAC (Euras- ian), KOSHA, TÜV, cU- Lus Listed	CCC, CE, EAC (Euras- ian), KOSHA, TÜV, cU- Lus Listed
Electrical data	750109	751109	751189
Supply voltage			
Voltage	24 V	24 V	24 V
Kind	DC	DC	DC
Voltage tolerance	-20 %/+20 %	-20 %/+20 %	-20 %/+20 %
Output of external			
power supply (DC)	2 W	2 W	2 W
Residual ripple DC	20 %	20 %	20 %
Duty cycle	100 %	100 %	100 %
Max. inrush current im- pulse			
Current pulse, A1	0,7 A	0,7 A	0,7 A
Pulse duration, A1	10 ms	10 ms	10 ms
Max. overall cable resistance Rlmax			
Feedback loop	30 Ohm	30 Ohm	30 Ohm
A1/A2	20 Ohm	20 Ohm	20 Ohm
Inputs	750109	751109	751189
Voltage at			
Feedback loop DC	24 V	24 V	24 V
Current at			
Input circuit DC	15 mA	15 mA	15 mA
Feedback loop DC	15 mA	15 mA	15 mA
Max. inrush current impulse			
Current pulse, input cir- cuit	0,1 A	0,1 A	0,1 A
Pulse duration, input circuit	20 μs	20 μs	20 μs
Current pulse, feed- back loop	0,1 A	0,1 A	0,1 A
Pulse duration, feed- back loop	20 μs	20 μs	20 μs
Max. overall cable resistance Rlmax			
Single-channel at UB DC	30 Ohm	30 Ohm	30 Ohm

Relay outputs	750109	751109	751189
Number of output con-			
tacts			
Safety contacts (N/O),			
delayed	3	3	3
Auxiliary contacts (N/ C), delayed	1	1	1
Max. short circuit current		•	<u> </u>
IK	1 kA	1 kA	1 kA
Utilisation category			
In accordance with the			
standard	EN 60947-4-1	EN 60947-4-1	EN 60947-4-1
Utilisation category of safety contacts			
AC1 at	240 V	240 V	240 V
Min. current	0,003 A	0,003 A	0,003 A
Max. current	6 A	6 A	6 A
Min. output	0,04 VA	0,04 VA	0,04 VA
Max. power	1500 VA	1500 VA	1500 VA
DC1 at	24 V	24 V	24 V
Min. current	0,003 A	0,003 A	0,003 A
Max. current	6 A	6 A	6 A
Min. output	0,04 W	0,04 W	0,04 W
Max. power	150 W	150 W	150 W
Utilisation category of auxiliary contacts			
AC1 at	240 V	240 V	240 V
Min. current	0,003 A	0,003 A	0,003 A
Max. current	6 A	6 A	6 A
Min. output	0,04 VA	0,04 VA	0,04 VA
Max. power	1500 VA	1500 VA	1500 VA
DC1 at	24 V	24 V	24 V
Min. current	0,003 A	0,003 A	0,003 A
Max. current	6 A	6 A	6 A
Min. output	0,04 W	0,04 W	0,04 W
Max. power	150 W	150 W	150 W
Utilisation category			
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts			
AC15 at	230 V	230 V	230 V
Max. current	5 A	5 A	5 A
DC13 (6 cycles/min) at	24 V	24 V	24 V
Max. current	5 A	5 A	5 A

Polov outputo	750400	751100	754490
Relay outputs	750109	751109	751189
Utilisation category of auxiliary contacts			
AC15 at	230 V	230 V	230 V
Max. current	5 A	5 A	5 A
DC13 (6 cycles/min) at	24 V	24 V	24 V
Max. current	5 A	5 A	5 A
Utilisation category in accordance with UL			
Voltage	240 V AC G.U. (same polarity)	· 240 V AC G.U. (same polarity)	240 V AC G.U. (same polarity)
With current	6 A	6 A	6 A
Voltage	24 V DC G. U.	24 V DC G. U.	24 V DC G. U.
With current	6 A	6 A	6 A
External contact fuse protection, safety contacts			
In accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Max. melting integral	260 A ² s	260 A ² s	260 A ² s
Blow-out fuse, quick	10 A	10 A	10 A
Blow-out fuse, slow	6 A	6 A	6 A
Blow-out fuse, gG	10 A	10 A	10 A
Circuit breaker 24V AC/DC, characteristic	6 A	6 A	6 A
B/C	bА	6 A	6 A
External contact fuse protection, auxiliary contacts			
Max. melting integral	160 A ² s	160 A ² s	160 A ² s
Blow-out fuse, quick	10 A	10 A	10 A
Blow-out fuse, slow	6 A	6 A	6 A
Blow-out fuse, gG	6 A	6 A	6 A
Circuit breaker 24 V			
AC/DC, characteristic B/C	6 A	6 A	6 A
Conventional thermal cur-			
rent	6 A	6 A	6 A
Contact material	AgCuNi + 0,2 μm Au	AgCuNi + 0,2 μm Au	AgCuNi + 0,2 μm Au
Times	750109	751109	751189
Switch-on delay			
With manual start typ.	60 ms	60 ms	60 ms
With manual start max.	80 ms	80 ms	80 ms
Delay-on de-energisation			-
With E-STOP typ.	40 ms	40 ms	40 ms
With E-STOP max.	50 ms	50 ms	50 ms
Recovery time at max. switching frequency 1/s			
After power failure	800 ms	800 ms	800 ms
1,			

Times	750109	751109	751189
			,
Delay time tv	0,04 s, 0,1 s, 0,2 s, 0,3 s, 0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5 s, 3 s, 3,5 s, 4 s, 5 s, 6 s, 7 s, 8 s, 10 s, 12 s, 14 s, 15 s, 16 s, 20 s, 25 s, 30 s, 35 s, 40 s, 50 s, 60 s,	0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5	0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 2,5
	70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s	70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s	70 s, 80 s, 90 s, 100 s, 120 s, 140 s, 150 s, 160 s, 180 s, 200 s, 210 s, 240 s, 300 s
Time accuracy	+/-1 % + +/-20 ms	+/-1 % + +/-20 ms	+/-1 % + +/-20 ms
Repetition accuracy	+/-1 % + +/-20 ms	+/-1 % + +/-20 ms	+/-1 % + +/-20 ms
Repetition accuracy in the event of an error	+/-15 % + +/-20 ms	+/-15 % + +/-20 ms	+/-15 % + +/-20 ms
Min. delay time (operating mode delay-on energisation)	tv - 15 % - 20 ms	tv - 15 % - 20 ms	tv - 15 % - 20 ms
Max. delay time	tv + 15 % + 20 ms	tv + 15 % + 20 ms	tv + 15 % + 20 ms
Supply interruption before	10 70 7 20 1115	tv + 13 /0 + 20 IIIS	10 10 70 1 20 1115
de-energisation in the in- put circuit	10 ms	10 ms	10 ms
Supply interruption before de-energisation	10 ms	10 ms	10 ms
Environmental data	750109	751109	751189
Climatic suitability	EN 60068-2-78	EN 60068-2-78	EN 60068-2-78
Ambient temperature			
Temperature range	-15 - 55 °C	-15 - 55 °C	-15 - 55 °C
Storage temperature			
Temperature range	-40 - 85 °C	-40 - 85 °C	-40 - 85 °C
Climatic suitability			
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during op-	N	N. 4	
eration	Not permitted	Not permitted	Not permitted
EMC	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1
Vibration			
In accordance with the standard	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 55 Hz	10 - 55 Hz	10 - 55 Hz
Amplitude	0,35 mm	0,35 mm	0,35 mm
Airgap creepage			
In accordance with the standard	EN 60947-1	EN 60947-1	EN 60947-1
Overvoltage category	III	III	III
Pollution degree	2	2	2
Rated insulation voltage	250 V	250 V	250 V

Environmental data	750109	751109	751189
Rated impulse withstand			
voltage	6 kV	6 kV	6 kV
Protection type			
Housing	IP40	IP40	IP40
Terminals	IP20	IP20	IP20
Mounting area (e.g.	15.4		ID-4
control cabinet)	IP54	IP54	IP54
Mechanical data	750109	751109	751189
Mounting position	Any	Any	Any
Mechanical life	10,000,000 cycles	10,000,000 cycles	10,000,000 cycles
Material			
Bottom	PC	PC	PC
Front	PC	PC	PC
Тор	PC	PC	PC
Connection type	Screw terminal	Spring-loaded terminal	Spring-loaded terminal
Mounting type	plug-in	plug-in	plug-in
Conductor cross section			
with screw terminals	201 01 204 40		
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	_	_
2 core with the same			
cross section, flexible	0.25 4 mm² 24 46		
with crimp connectors, no plastic sleeve	0,25 - 1 mm-, 24 - 16 AWG	_	_
2 core with the same	7.110		
cross section, flexible			
without crimp connect-			
ors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG		
Torque setting with screw	AVVG		
terminals	0,5 Nm	_	_
Stripping length with			
screw terminals	8 mm	_	
Conductor cross section			
with spring-loaded terminals: Flexible with/without		0.0 0.5	0.0 0.5
crimp connector	_	0,2 - 2,5 mm², 24 - 12 AWG	0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals:		71110	
Terminal points per con-			
nection	_	2	2
Stripping length with spring-loaded terminals	_	9 mm	9 mm
Dimensions		- ······	
Height	98 mm	100 mm	100 mm
Width	17,5 mm	17,5 mm	17,5 mm
Depth	120 mm	120 mm	120 mm
Weight	175 g	175 g	175 g
	~ 8	• 9	• 9

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data



NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN 62061 SIL CL	EN 62061 PFH _D [1/h]	IEC 61511 SIL	PFD	EN ISO 13849-1: 2015 T _M [year]
Safety contacts, delayed	PL e	Cat. 4	SIL CL 3	2,34E-09	SIL 3	2,75E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ The SIL CL value in accordance with EN 62061 corresponds to the SIL value in accordance with EN 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN 61508-6 and IEC 61511 and as the proof test interval and mission time in accordance with EN 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.



INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

Classification according to ZVEI, CB24I

The following tables describe the classes and specific values of the product interface and the classes of interfaces compatible with it. The classification is described in the ZVEI position paper "Classification of Binary 24 V Interfaces - Functional Safety aspects covered by dynamic testing".

Input		
Interfaces		
Drain		
Interface	Module	
Class	C0	
Source		
Interface	Sensor	
Class	C1, C2, C3	

			d
ın	n	ш	t
ш	ν	u	L

Drain parameters

Max. test pulse duration2 msMin. input resistance1,5 kOhmMax. capacitive load10 nF

Relay outputs

Interfaces

Source

Interface Module
Class A

Drain

Interface Actuator

Class

Source parameters

Min. switching voltage12 VMax. switching voltage250 VMin. switching current0,003 AMax. switching current6 APotential isolationyes

Supplementary data



CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switch frequency and the load of the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

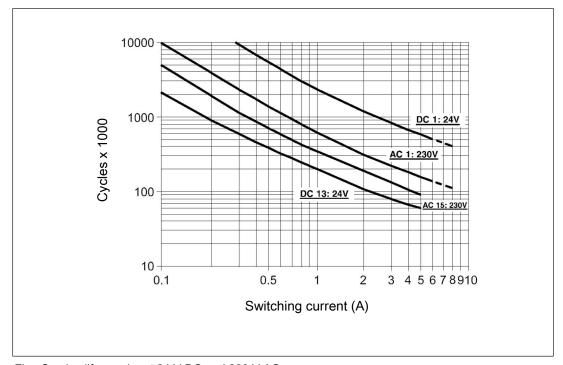


Fig.: Service life graphs at 24 V DC and 230 V AC

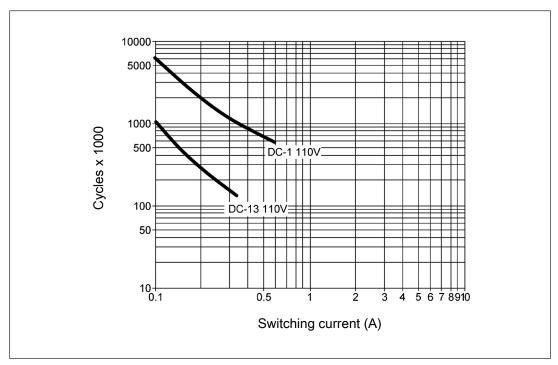


Fig.: Service life graphs at 110 V DC

Example

Inductive load: 0.2 A

▶ Utilisation category: AC15

▶ Contact service life: 2 000 000 cycles

Provided the application to be implemented requires fewer than 2 000 000 cycles, the PFH value (see Technical details [22]) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Permitted operating height

The values stated in the technical details apply to the use of the device in operating heights up to max. 2000 m above sea level. When used in greater heights, constraints have to be taken into account:

- ▶ Permitted maximum operating height 5000 m
- ▶ Reduction of rated insulation voltage and rated impulse withstand voltage for applications with safe separation:

Maximum operation height	Rated insulation voltage	Overvoltage category	Max. rated impulse withstand voltage
3000 m	150 V	II	2.5 kV
	100 V	III	2.5 kV
4000 m	150 V	II	2.5 kV
	100 V	III	2.5 kV
5000 m	150 V	II	2.5 kV
	100 V	III	2.5 kV

▶ Reduction of rated insulation voltage and rated impulse withstand voltage for applications with basic insulation:

Maximum operation height	Rated insulation voltage	Overvoltage category	Max. rated impulse withstand voltage
3000 m	250 V	II	2.5 kV
	150 V	III	2.5 kV
4000 m	250 V	II	2.5 kV
	150 V	III	2.5 kV
5000 m	250 V	II	2.5 kV
	150 V	III	2.5 kV


▶ From an operating height of 2000 m the max. permitted ambient temperature is reduced by 0.5 °C/100 m

Operating height	Permitted ambient temperature
3000 m	50 °C
4000 m	45 °C
5000 m	40 °C

Remove plug-in terminals

Procedure: Insert the screwdriver into the housing recess behind the terminal and lever the terminal out.

Do not remove the terminals by pulling the cables!

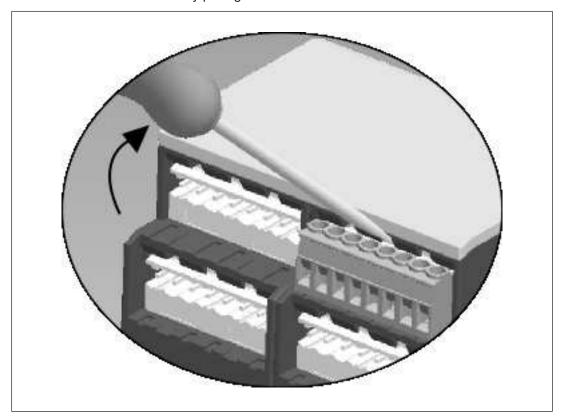

Order reference

Product type	Features	Connection type	Order no.
PNOZ s9	24 V DC	Screw terminals	750109
PNOZ s9 C	24 V DC	Spring-loaded terminals	751109
PNOZ s9 C (coated version)	24 V DC	Spring-loaded terminals	751189
PNOZ s9 C	24 VDC; 10 pieces	Spring-loaded terminals	751909

EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Authorised representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany



Technical support is available from Pilz round the clock.

Americas
Brazil
+55 11 97569-2804
Canada
+1 888 315 7459
Mexico
+52 55 5572 1300
USA (toll-free)
+1 877-PILZUSA (745-9872)

Asia
China
+86 21 60880878-216
Japan
+81 45 471-2281
South Korea
+82 31 778 3300

Australia +61 3 95600621 Europe Austria +43 1 7986263-0 Belgium, Luxembourg +32 9 3217570

+32 9 3217570

France
+33 3 88104003

Germany
+49 711 3409-444

Ireland
+353 21 4804983

Italy, Malta
+39 0362 1826711

Scandinavia +45 74436332 Spain +34 938497433 Switzerland +41 62 88979-32 The Netherlands +31 347 320477 Turkey +90 216 5775552 United Kingdom

+44 1536 462203

You can reach our international hotline on: +49 711 3409-444 support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies.

Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.











CECE®, CHRE®, CMSE®, InduraNET p®, Leansafe®, Master of Safety®, Master of Security®, PAS4000®, PAScal®, PASconifg®, PIL®, PILD®, PMCprino®, PMCprotego®, PMCtendo®, PMD®, PMOS®, PRBT®, PROM®, Primo®, PRTM®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyBYE®, SafetyNET p®, THE SPIRIT OF SAFETY® are registered and protected trademark of PIz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the time of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Sup it you have any questions.

