

## PSEN ix2 F8 code

- ▶ PSEN sensor technology

**PILZ**  
THE SPIRIT OF SAFETY

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

<b>Introduction</b>	<b>4</b>
Validity of documentation	4
Using the documentation	4
Definition of symbols	4
<b>Overview</b>	<b>5</b>
Unit features	5
Range	5
Front view	6
<b>Safety</b>	<b>7</b>
Intended use	7
Safety regulations	7
Additional documents that apply	7
Use of qualified personnel	8
Warranty and liability	8
Disposal	8
<b>Function description</b>	<b>8</b>
<b>Installation</b>	<b>10</b>
<b>Wiring</b>	<b>10</b>
General wiring guidelines	10
Pin assignment	10
<b>Connection to evaluation devices</b>	<b>14</b>
General	14
Independent circuit	14
Series connection of the interface	17
<b>Dimensions</b>	<b>19</b>
<b>Technical details</b>	<b>19</b>
<b>Order reference</b>	<b>20</b>
System	20
Accessories	20

## Introduction

### Validity of documentation

This documentation is valid for the product PSEN ix2 F8 code. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

### Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

### Definition of symbols

Information that is particularly important is identified as follows:



#### **DANGER!**

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



#### **WARNING!**

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



#### **CAUTION!**

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



#### **NOTICE**

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.

**INFORMATION**

This gives advice on applications and provides information on special features.

**Overview****Unit features**

The PSEN ix2 F8 code is an interface for connecting series-connectable PSENcode, PSENSlock, PSENini sensors to an evaluation device.

Decentralised passive junction for connecting sensors to a Pilz control system.

- ▶ Max. 8 sensors per PSEN ix2 F8 code can be connected
- ▶ Max. 3 PSEN ix2 F8 code with max. 16 subscribers can be connected in series
- ▶ Forwarding of diagnostic information from the connected sensors.

**Range**

- ▶ Interface PSEN ix2 F8 code with six bridges inserted



- [3] Terminal block X5, terminals Y2+Y3, Y4+Y5, Y6+Y7 are bridged when delivered
- Terminal block X6, terminals Y2+Y3, Y4+Y5, Y6+Y7 are bridged when delivered

## Safety


### Intended use

The PSEN ix2 F8 code is an interface for connecting series-connectable PSENcode, PSENslock, PSENini sensors to an evaluation device.

- ▶ Connection to Safety Device Diagnostics (SDD) and forwarding of diagnostic information from the connected sensors to a fieldbus module. Further information is provided in the document entitled "System Description Safety Device Diagnostics".
- ▶ Series connection of PSEN sensors and connection to an evaluation device

A max. of 8 PSEN sensors can be connected to a PSEN ix2 F8 code. All sensors must be 8-pin, with 2 safety inputs each.

The following is deemed improper use in particular:

- ▶ Any component, technical or electrical modification to the product
- ▶ Use of the product outside the areas described in this manual
- ▶ Use of the product outside the technical details (see [Technical details](#)  19).



### NOTICE

#### EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

## Safety regulations

### Additional documents that apply

Please read and take note of the following documents:

- ▶ Operating manual for the relevant Pilz safety device
- ▶ Operating manual for the fieldbus module, for example SDD ES ETH or SDD ES PROFIBUS
- ▶ System description "Safety Device Diagnostics"

You will need to be conversant with the information in these documents in order to fully understand this manual.

### Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who:

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention
- ▶ Have read and understood the information provided in this description under "Safety"
- ▶ And have a good knowledge of the generic and specialist standards applicable to the specific application.

### Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended
- ▶ Damage can be attributed to not having followed the guidelines in the manual
- ▶ Operating personnel are not suitably qualified
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

### Disposal

- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

### Function description


With the help of the PSEN ix2 F8 code, Pilz sensors can be connected in series and connected to a fieldbus module for evaluation of diagnostics data. PSEN ix2 F8 code can also be connected in series.

- ▶ Max. 8 Pilz sensors can be connected to a PSEN ix2 F8 code.
- ▶ Max. 3 PSEN ix2 F8 code (= max. 16 subscribers) can be connected to a fieldbus module.

The diagnostic data from the sensors connected to the PSEN ix2 F8 code can be read and entered at terminal blocks X5 and X6.



Internal wiring diagram

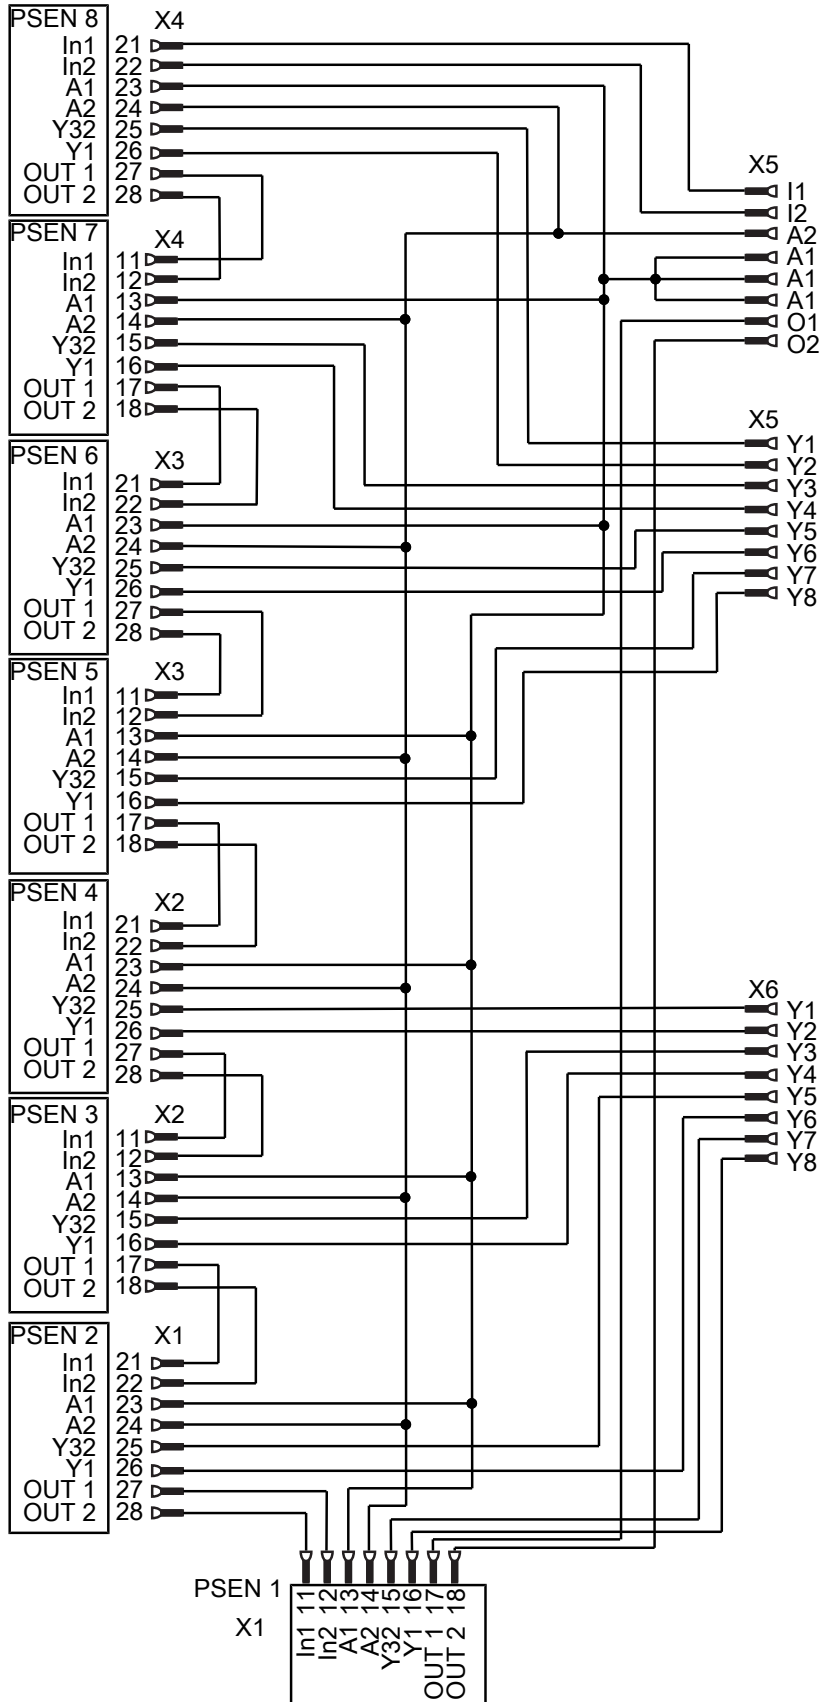


## Installation

- ▶ The unit should be installed in a lockable control cabinet with a protection type of at least IP54.
- ▶ Use the notch on the rear of the unit to attach it to a DIN rail.
- ▶ When installed on a vertical mounting rail (35 mm): Secure the unit by using a fixing element (e.g. retaining bracket or end angle).
- ▶ Circumvention of the safety switch in a reasonably foreseeable manner must be prevented.

## Wiring

### General wiring guidelines

Please note:

- ▶ Information given in the [Technical details](#)  19] must be followed.
- ▶ The device must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Where safety-related applications are concerned, it is essential that short circuits and open circuits are unable to cause a hazardous condition within a plant. The way in which this is done will depend on the degree of hazard from the plant section, the switching frequency of the sensors and the level of safety of the sensors and actuators.

### Pin assignment

#### Terminal block X1

Terminal	Device	Function	Cable colour
11	PSEN 1	Input channel 1 of sensor	Pink
12		Input channel 2 of sensor	White
13		24 VDC	Brown
14		0 VDC	Blue
15		Signal output/diagnostic output Y32 of sensor	Grey
16		Signal input/diagnostic input Y1 of sensor	Red
17		Output channel 1 of sensor	Green
18		Output channel 2 of sensor	Yellow

Terminal	Device	Function	Cable colour
21	PSEN 2	Input channel 1 of sensor	Pink
22		Input channel 2 of sensor	White
23		24 VDC	Brown
24		0 VDC	Blue
25		Signal output/diagnostic output Y32 of sensor	Grey
26		Signal input/diagnostic input Y1 of sensor	Red
27		Output channel 1 of sensor	Green
28		Output channel 2 of sensor	Yellow

**Terminal block X2**

Terminal	Device	Function	Cable colour
11	PSEN 3	Input channel 1 of sensor	Pink
12		Input channel 2 of sensor	White
13		24 VDC	Brown
14		0 VDC	Blue
15		Signal output/diagnostic output Y32 of sensor	Grey
16		Signal input/diagnostic input Y1 of sensor	Red
17		Output channel 1 of sensor	Green
18		Output channel 2 of sensor	Yellow
21	PSEN 4	Input channel 1 of sensor	Pink
22		Input channel 2 of sensor	White
23		24 VDC	Brown
24		0 VDC	Blue
25		Signal output/diagnostic output Y32 of sensor	Grey
26		Signal input/diagnostic input Y1 of sensor	Red
27		Output channel 1 of sensor	Green
28		Output channel 2 of sensor	Yellow

**Terminal block X3**

Terminal	Device	Function	Cable colour
11	PSEN 5	Input channel 1 of sensor	Pink
12		Input channel 2 of sensor	White
13		24 VDC	Brown
14		0 VDC	Blue
15		Signal output/diagnostic output Y32 of sensor	Grey
16		Signal input/diagnostic input Y1 of sensor	Red
17		Output channel 1 of sensor	Green
18		Output channel 2 of sensor	Yellow
21	PSEN 6	Input channel 1 of sensor	Pink
22		Input channel 2 of sensor	White
23		24 VDC	Brown
24		0 VDC	Blue
25		Signal output/diagnostic output Y32 of sensor	Grey
26		Signal input/diagnostic input Y1 of sensor	Red
27		Output channel 1 of sensor	Green
28		Output channel 2 of sensor	Yellow

**Terminal block X4**

Terminal	Device	Function	Cable colour
11	PSEN 7	Input channel 1 of sensor	Pink
12		Input channel 2 of sensor	White
13		24 VDC	Brown
14		0 VDC	Blue
15		Signal output/diagnostic output Y32 of sensor	Grey
16		Signal input/diagnostic input Y1 of sensor	Red
17		Output channel 1 of sensor	Green
18		Output channel 2 of sensor	Yellow

Terminal	Device	Function	Cable colour
21	PSEN 8	Input channel 1 of sensor	Pink
22		Input channel 2 of sensor	White
23		24 VDC	Brown
24		0 VDC	Blue
25		Signal output/diagnostic output Y32 of sensor	Grey
26		Signal input/diagnostic input Y1 of sensor	Red
27		Output channel 1 of sensor	Green
28		Output channel 2 of sensor	Yellow

**Terminal block X5**

Terminal	Device	Function	Cable colour
Y1	Fieldbus module	Status of signal output/diagnostic output of PSEN 8	Grey
Y2		Status of signal input/diagnostic input of PSEN 8	
Y3		Status of signal output/diagnostic output of PSEN 7	
Y4		Status of signal input/diagnostic input of PSEN 7	
Y5		Status of signal output/diagnostic output of PSEN 6	
Y6		Status of signal input/diagnostic input of PSEN 6	
Y7		Status of signal output/diagnostic output of PSEN 5	
Y8		Status of signal input/diagnostic input of PSEN 5	
A1	Power supply	Supply voltage + 24 V	Brown
A1			
A1			
A2	Power supply	0 VDC	Blue
I1	PSEN n	Input channel 1 for last sensor PSEN n	Pink
I2		Input channel 2 for last sensor PSEN n	White
O1	Evaluation device	Output channel 1 for evaluation device	Green
O2		Output channel 2 for evaluation device	Yellow

**Terminal block X6**

Terminal	Device	Function	Cable colour
Y1	Fieldbus module	Status of signal output/diagnostic output of PSEN 4	
Y2		Status of signal input/diagnostic input of PSEN 4	
Y3		Status of signal output/diagnostic output of PSEN 3	
Y4		Status of signal input/diagnostic input of PSEN 3	
Y5		Status of signal output/diagnostic output of PSEN 2	
Y6		Status of signal input/diagnostic input of PSEN 2	
Y7		Status of signal output/diagnostic output of PSEN 1	
Y8		Status of signal input/diagnostic input of PSEN 1	Red

**Connection to evaluation devices****General****NOTICE**

Each time the cabling is changed during commissioning, trigger the safety function of each sensor in the safety chain and check that the safety outputs on the evaluation device react correctly.

**Independent circuit**

Please note:

- ▶ When connected to the PSEN ix2 F8 code, the sequence of the sensors must be maintained.
  - PSEN 1: Terminal block X1, terminals 11-18
  - PSEN 2: Terminal block X1, terminals 21-28
  - PSEN 3: Terminal block X2, terminals 11-18
  - PSEN 4: Terminal block X2, terminals 21-28
  - PSEN 5: Terminal block X3, terminals 11-18
  - PSEN 6: Terminal block X3, terminals 21-28
  - PSEN 7: Terminal block X4, terminals 11-18
  - PSEN 8: Terminal block X4, terminals 21-28

### Connecting fewer than eight sensors

- ▶ If fewer than eight sensors are connected to a PSEN ix2 F8 code the free sensor terminals on terminal blocks X1 to X4 must be bridged.
    - Terminal blocks X1 to X4
      - Bridges between terminals 11 and 17, 12 and 18 and 15 and 16.
      - Bridges between terminals 21 and 27, 22 and 28 and 25 and 26.
- The terminals on terminal blocks X1 to X4 must be bridged for each unconnected sensor (see diagram).



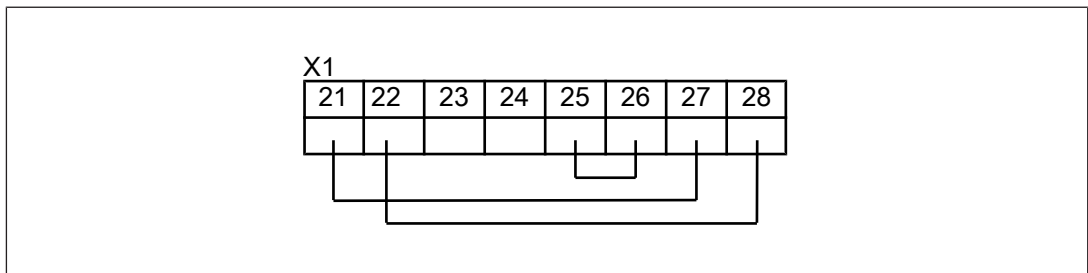


Fig.: Terminal block X1 with three bridges for an unconnected sensor

### Connection without fieldbus module

- ▶ If the PSEN ix2 F8 code will not be connected to a fieldbus module, the bridges that are inserted on terminals X5 Y2 - Y7 and X6 Y2 - Y7 when the PSEN ix2 F8 code is delivered must all be removed. The respective states of the sensors' signal input/diagnostic input Y1 and signal output/diagnostic output Y32 are output at these terminals. To evaluate the data, the relevant control system must be connected to the terminals (see diagram).
  - Terminal blocks X5 and X6, terminals Y1, Y3, Y5, Y7 for the sensors' signal output/diagnostic output Y32
  - Terminal blocks X5 and X6, terminals Y2, Y4, Y6, Y8 for the sensors' signal input/diagnostic input Y1

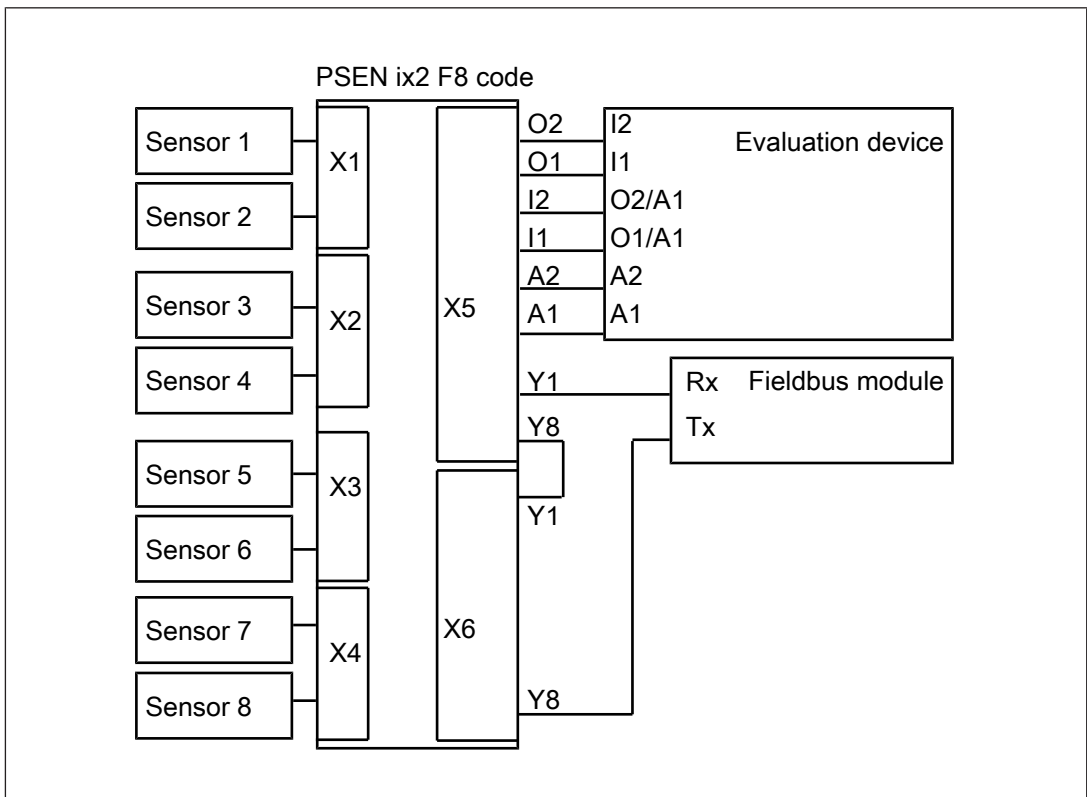

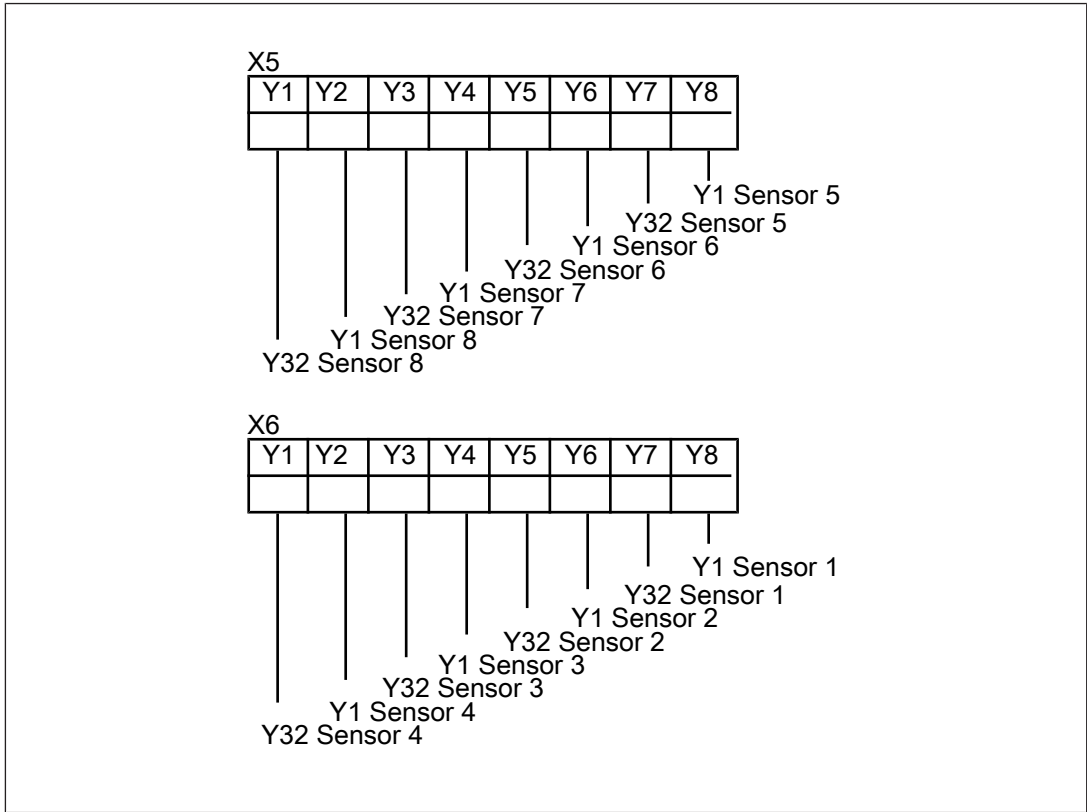

### Series connection of the interface

Please note:

- ▶ Max. 3 PSEN ix2 F8 code can be connected in series.
- ▶ Max. 16 sensors can be connected to a fieldbus module.
- ▶ Only seven sensors can be connected to the first PSEN ix2 F8 code. 2 sensors can be connected to the final PSEN ix2 F8 code. The displayed series connection shows a version with 3 PSEN ix2 F8 code, where the terminal blocks X2, X3 and X4 must be bridged.



#### NOTICE

Each time the cabling is changed during commissioning, trigger the safety function of each sensor in the safety chain and check that the safety outputs on the evaluation device react correctly.



#### CAUTION!

Extension of delay-on de-energisation


When several (n) devices are connected in series, the delay-on de-energisation time adds with the number of interconnected safety switches.

The may. delay-on de-energisation is composed of

max. delay-on de-energisation actuator

+ (n-1) x max. delay-on de-energisation of the inputs


+ delay-on de-energisation of the evaluation device

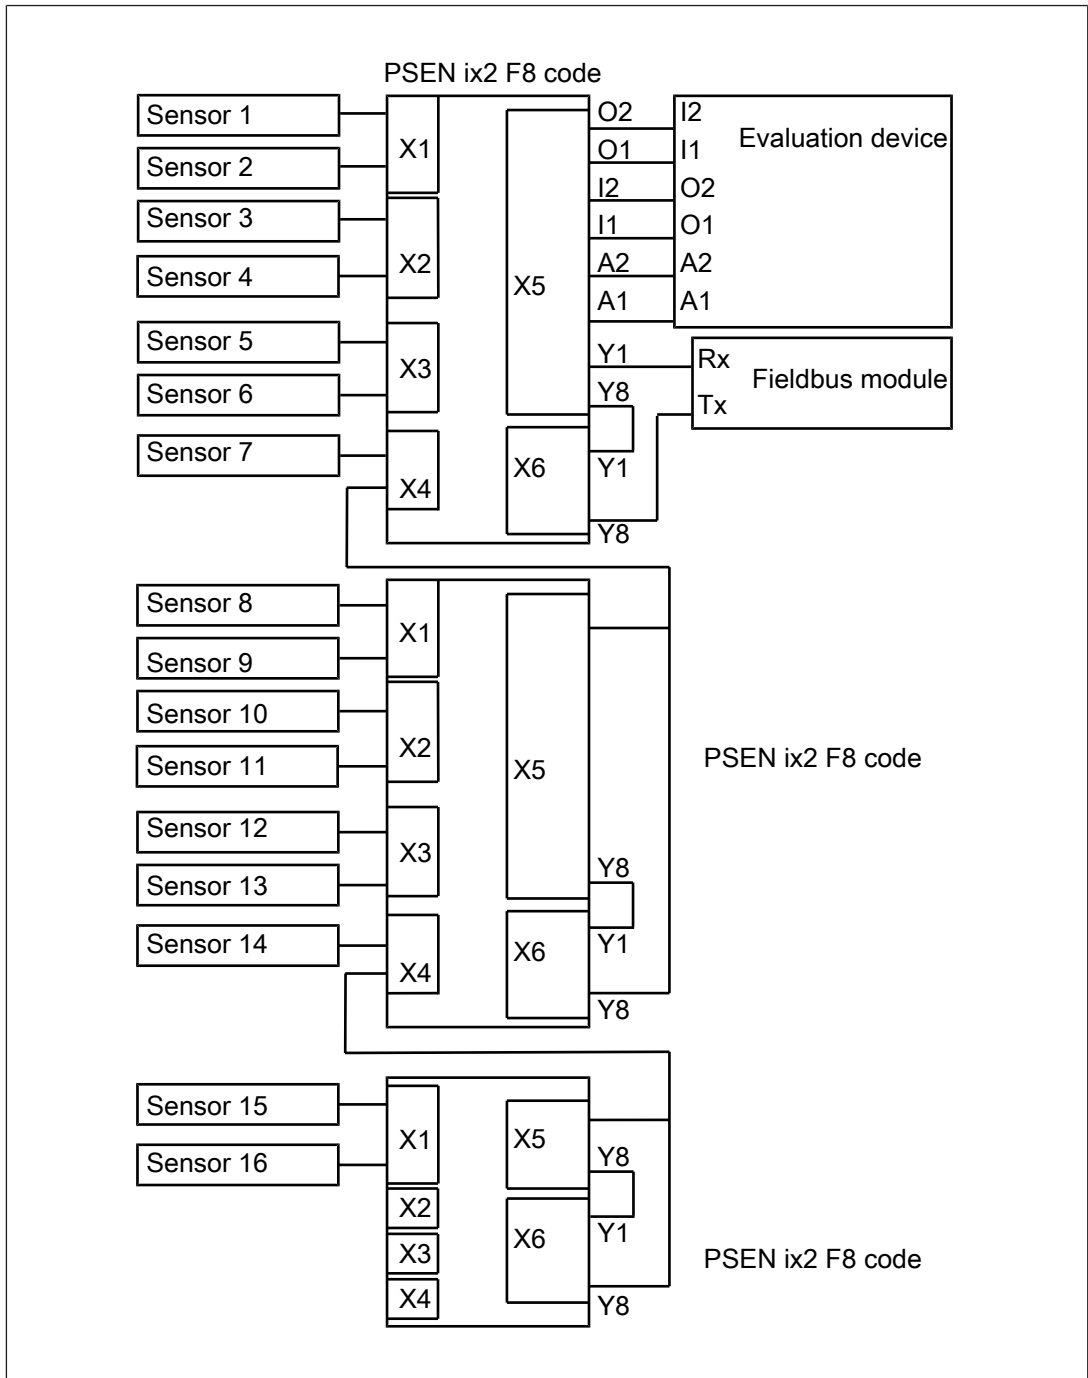

Please note:

The terminal blocks X2, X3 and X4 at the 3. PSEN ix2 F8 code are not necessary and therefore have to be bridged.

### Dimensions

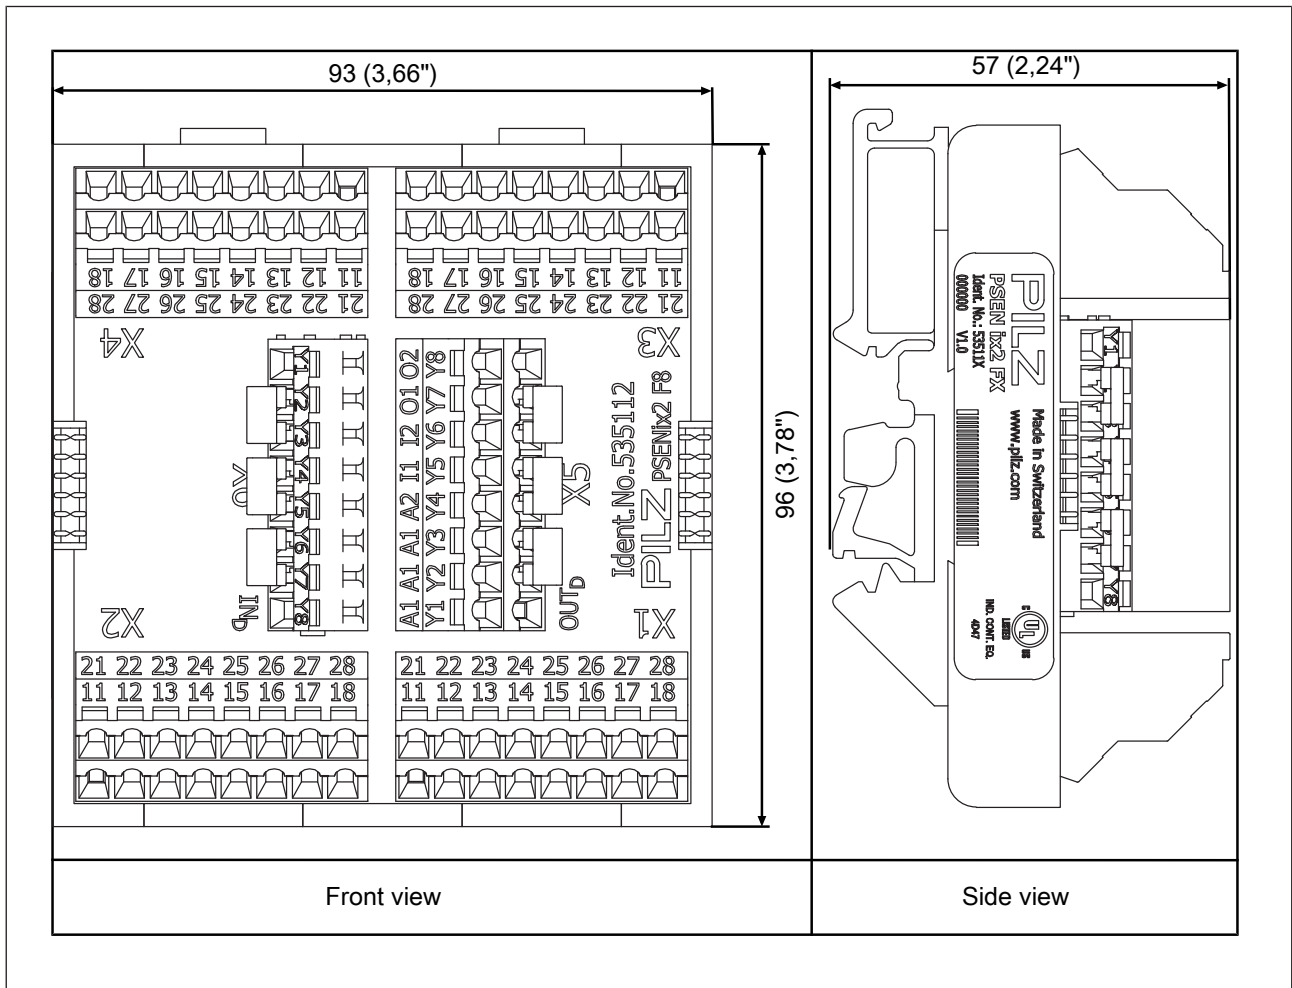

### Technical details

<b>General</b>	
Approvals	UL/cUL
<b>Electrical data</b>	
Internal resistance	0 Ohm
Rated voltage	
Voltage UB	30 V
Kind	DC
<b>Environmental data</b>	
Ambient temperature	
Temperature range	-10 - 55 °C
Storage temperature	
Temperature range	-25 - 70 °C
Protection type	
Mounting area (e.g. control cabinet)	IP54
Terminals	IP20

<b>Mechanical data</b>	
Connection type	<b>Spring-loaded terminal</b>
Dimensions	
Height	<b>57 mm</b>
Width	<b>96 mm</b>
Depth	<b>93 mm</b>
Weight	<b>210 g</b>

### Order reference

#### System

Product type	Features	Connection type	Order No.
PSEN ix2 F8 code	Interface for connecting max. 8 PSEN safety sensors	Spring-loaded terminal	535 112

#### Accessories

Product type	Connection 1	Connection 2	Length	Order No.
PSEN cable M8-8sf	Straight, M8, 8-pin, socket	Open cable	2 m	533 150
			5 m	533 151
			10 m	533 152
			20 m	533 153
			30 m	533 154
PSEN ma Cable M8-8af	Angled, M8, 8-pin, socket	Open cable	10 m	533 162
PSEN cable M12-8sf	Straight, M12, 8-pin, socket	Open cable	3 m	540 319
			5 m	540 320
			10 m	540 321
			20 m	540 333
			30 m	540 326
PSEN cable M12-8af	Angled, M12, 8-pin, socket	Open cable	3 m	540 322
			5 m	540 323
			10 m	540 324
			30 m	540 325

# ► Support

Technical support is available from Pilz round the clock.

## Americas

**Brazil**  
+55 11 97569-2804

**Canada**  
+1 888-315-PILZ (315-7459)

**Mexico**  
+52 55 5572 1300

**USA (toll-free)**  
+1 877-PILZUSA (745-9872)

## Asia

**China**  
+86 21 60880878-216

**Japan**  
+81 45 471-2281

**South Korea**  
+82 31 450 0680

## Australia

+61 3 95446300

## Europe

**Austria**  
+43 1 7986263-0

**Belgium, Luxembourg**  
+32 9 3217575

**France**  
+33 3 88104000

**Germany**  
+49 711 3409-444

**Ireland**  
+353 21 4804983

**Italy**  
+39 0362 1826711

## Scandinavia

+45 74436332

## Spain

+34 938497433

## Switzerland

+41 62 88979-30

## The Netherlands

+31 347 320477

## Turkey

+90 216 5775552

## United Kingdom

+44 1536 462203

## You can reach our international hotline on:

+49 711 3409-444  
support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



Pilz GmbH & Co. KG  
Felix-Wankel-Straße 2  
73760 Ostfildern, Germany  
Tel.: +49 711 3409-0  
Fax: +49 711 3409-133  
info@pilz.com  
www.pilz.com

