



**PSEN op4F/H-s-...../1**

**Safety light curtains with infrared beams**



**OPERATING MANUAL**

**1001422-EN-03**

This document is a translation of the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for internal purposes.

Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.

Pilz GmbH & Co. KG  
Felix-Wankel-Straße 2  
73760 Ostfildern, Germany  
Telephone: +49 711 3409-0  
Telefax: +49 711 3409-133  
E-Mail: [pilz.gmbh@pilz.de](mailto:pilz.gmbh@pilz.de)  
[www.pilz.com](http://www.pilz.com)

## INDEX

<b>1. GENERAL INFORMATION</b> .....	<b>1</b>
1.1. General Description of the safety light curtains.....	1
1.1.1. <i>Package contents</i> .....	3
1.2. New features compared PSEN op4F-s series (with EDM function).....	3
1.3. How to choose the device.....	4
1.3.1. <i>Resolution</i> .....	4
1.3.2. <i>Controlled height</i> .....	5
1.3.3. <i>Minimum installation distance</i> .....	6
1.4. Typical applications.....	8
1.5. Safety information.....	11
<b>2. INSTALLATION MODE</b> .....	<b>12</b>
2.1. Precautions to be observed for the choice and installation.....	12
2.2. General information on device positioning.....	13
2.2.1. <i>Minimum installation distance</i> .....	14
2.2.2. <i>Minimum distance from reflecting surfaces</i> .....	15
2.2.3. <i>Distance between homologous devices</i> .....	17
2.2.4. <i>Emitter and receiver orientation</i> .....	20
2.2.5. <i>Use of deviating mirrors</i> .....	20
2.2.6. <i>Controls after first installation</i> .....	21
<b>3. MECHANICAL MOUNTING</b> .....	<b>23</b>
<b>4. ELECTRICAL CONNECTIONS</b> .....	<b>26</b>
4.1. Notes on connections.....	28
4.2. Ground connection.....	31
<b>5. ALIGNMENT PROCEDURE</b> .....	<b>33</b>
5.1. Correct alignment procedure.....	34
<b>6. FUNCTIONING MODE</b> .....	<b>36</b>
6.1. Restart mode.....	36
6.2. Test function.....	37
6.3. Reset function.....	37
6.4. EDM function.....	38
6.5. Alignment aid function.....	39
<b>7. DIAGNOSTIC FUNCTIONS</b> .....	<b>40</b>
7.1. User interface.....	40
7.2. Diagnostic messages.....	41
<b>8. PERIODICAL CHECKS</b> .....	<b>44</b>
8.1. General information and useful data.....	45
<b>9. DEVICE MAINTENANCE</b> .....	<b>46</b>
9.1. Product disposal.....	46
<b>10. TECHNICAL DATA</b> .....	<b>47</b>
<b>11. LIST OF AVAILABLE MODELS</b> .....	<b>48</b>
<b>12. OVERALL DIMENSIONS</b> .....	<b>49</b>
<b>13. OUTFIT</b> .....	<b>50</b>
<b>14. ACCESSORIES</b> .....	<b>51</b>
14.1. Angled fixing bracket mounting.....	52
<b>15. GLOSSARY</b> .....	<b>57</b>



## 1. GENERAL INFORMATION

### 1.1. General Description of the safety light curtains

The safety light curtains of the PSEN op4F/H-s series are optoelectronic multibeam devices that are used to protect working areas that, in presence of machines, robots, and automatic systems in general, can become dangerous for operators that can get in touch, even accidentally, with moving parts.

The light curtains of the PSEN op4F/H-s series are Type 4 intrinsic safety systems used as accident-prevention protection devices and are manufactured in accordance with the international Standards in force for safety, in particular:

**CEI IEC 61496-1: 2004** Safety of machinery: electrosensitive protective equipment. Part 1: General prescriptions and tests.

**CEI IEC 61496-2: 2006** Safety of machinery: electrosensitive protective equipment - Particular requirements for equipment using active optoelectronic protective devices.

The device, consisting of one emitter and one receiver housed inside strong aluminium profiles, generates infrared beams that detect any opaque object positioned within the light curtain detection field.

The emitter and the receiver are equipped with the command and control functions. The connections are made through a M12 connector located in the lower side of the profile.

The synchronisation between the emitter and the receiver takes place optically, *i.e.* no electrical connection between the two units is required.

The microprocessor guarantees the check and the management of the beams that are sent and received through the units: The microprocessor LEDs inform the operator about the general conditions of the safety light curtain (see section 7 “*Diagnostic functions*”).

The device consists in 2 units that, according to the model, are composed by one or several emitting and receiving modules. The receiver checks the control operations and safety actions.

During installation, an user interface facilitates the alignment of both units (see section 5 "*Alignment procedure*").

As soon as an object, a limb or the operator's body accidentally interrupts one or some of the infrared beams sent by the emitter, the receiver immediately opens the OSSD outputs and blocks the MPCE machine (if correctly connected to the OSSD).

Some parts or sections of this manual containing important information for the user or installing operator are preceded by a note:



Notes and detailed descriptions about particular characteristics of the safety devices in order to better explain their functioning. Special instructions regarding the installation process.



The information provided in the paragraphs following this symbol is very important for safety and may prevent accidents. Always read this information accurately and carefully follow the advice to the letter.

This manual contains all the information necessary for the selection and operation of the safety devices.

However, specialised knowledge not included in this technical description is required for the planning and implementation of a safety light curtain on a power-driven machine. As the required knowledge may not be completely included in this manual, we suggest the customer to contact Pilz Technical Service for any necessary information relative to the functioning of the PSEN op4F/H-s light curtains and the safety rules that regulate the correct installation (see section 8 "*Periodical checks*").

### *1.1.1. Package contents*

- Package contains the following objects:
- Receiver (RX)
- Emitter (TX)
- Installation Quick Guide of PSEN op4F/H-s curtain
- Biannual checklist and periodical maintenance schedule
- CD with instruction manual and other documents
- 4 angled fixing brackets and specific fasteners
- 2 angled fixing brackets for models with heights included between 1200 and 1800 mm

### **1.2. New features compared PSEN op4F-s series (with EDM function)**

With respect to PSEN op4F-s (EDM) series, the PSEN op4F/H-s.../1 Series safety light curtain series presents new important features:

- Higher operating distance
- Shorter response time (see sect.10 “Technical Data”)
- Range enlargement with 150 to 1800 mm controlled heights
- New fastening system with rotating brackets
- TEST line with reversed activation logics (active high)
- Advanced alignment for receiver and transmitter units

Furthermore, PSEN op4F-s has 2 selectable functions, i.e.:

- EDM function
- Manual/automatic Restart

### 1.3. How to choose the device

There are at least three different main characteristics that should be considered when choosing a safety light curtain, after having evaluated the risk assessment:

#### 1.3.1. Resolution

The resolution of the device is the minimum dimension that an opaque object must have in order to obscure at least one of the beams that constitute the sensitive area.

The resolution strictly depends on the part of the body to be protected.

R = 14mm      Finger protection



R = 30 mm      Hand protection



English

As shown in Fig.1, the resolution only depends on the geometrical characteristics of the lenses, diameter and distance between centres, and is independent of any environmental and operating conditions of the safety light curtain.

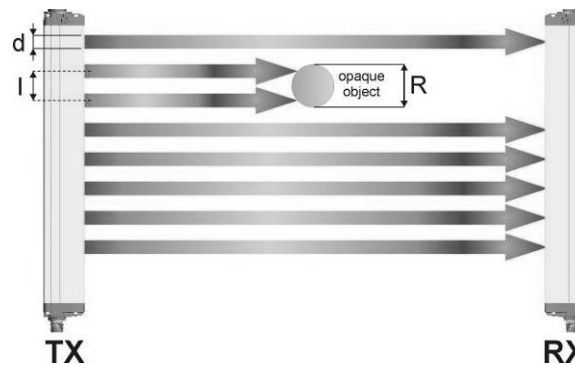


Fig. 1

The resolution value is obtained applying the following formula:

$$R = l + d$$

where:

$l$  = Distance between two adjacent optics

$d$  = Lens diameter



1.3.2. *Controlled height*

The controlled height is the height protected by the safety light curtain (Hp)

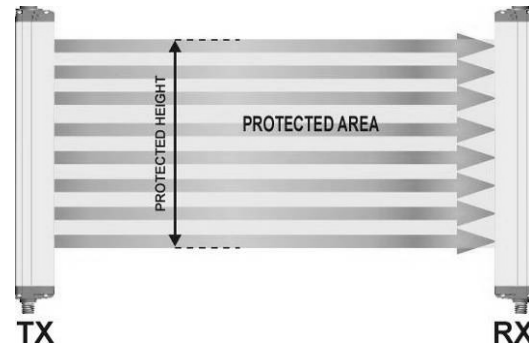


Fig. 2

The PSEN op4F/H-s controlled height is delimited by the yellow line pad-printed on the front glass and by the dimensions listed in the table:

Model	Controlled height Hp (mm)
PSEN op4F/H-s-XX-015/1	150
PSEN op4F/H-s-XX-030/1	300
PSEN op4F/H-s-XX-045/1	450
PSEN op4F/H-s-XX-060/1	600
PSEN op4F/H-s-XX-075/1	750
PSEN op4F/H-s-XX-090/1	900
PSEN op4F/H-s-XX-105/1	1050
PSEN op4F/H-s-XX-120/1	1200
PSEN op4F/H-s-XX-135/1	1350
PSEN op4F/H-s-XX-150/1	1500
PSEN op4F/H-s-XX-165/1	1650
PSEN op4F/H-s-XX-180/1	1800

xx = Resolution (14 mm – 30 mm)

### 1.3.3. Minimum installation distance

The safety device must be positioned at a specific safety distance (Fig. 3). This distance must ensure that the dangerous area cannot be reached before the dangerous motion of the machine has been stopped by the AOPD.

The safety distance depends on 4 factors, according to the **EN-999** Standard:

- Response time of the AOPD (the time between the effective beam interruption and the opening of the OSSD contacts).
- Machine stopping time (the time between the effective opening of the contacts of the AOPD and the real stop of the dangerous motion of the machine).
- AOPD resolution.
- Approaching speed of the object to be detected.

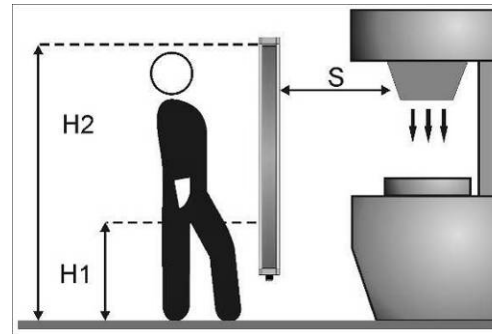


Fig. 3

The following formula is used for the calculation of the safety distance:

$$S = K (t_1 + t_2) + C$$

where:

S = Minimum safety distance in mm.

K = Speed of the object, limb or body approaching the dangerous area in mm/sec.

t<sub>1</sub> = Response time of the AOPD in seconds  
(see section 10 "Technical data")

t<sub>2</sub> = Machine stopping time in seconds.

d = Resolution of the system.

C = Additional distance based on the possibility to insert the body or one of body parts inside the dangerous area before the protective device trips.

C = 8 (d - 14) for devices with resolution ≤ 40 mm.

**NOTE: K value is:****2000 mm/s if the calculated value of S is  $\leq$  500 mm****1600 mm/s if the calculated value of S is  $>$  500 mm**

When devices with  $>$  40 mm resolution are used, the height of the top beam has to be  $\geq$  900 mm (H2) from machine supporting base while the height of the bottom beam has to be  $\leq$  300 mm (H1).

If the safety light curtain must be mounted in a horizontal position (Fig.4), the distance between the dangerous area and the most distant optical beam must be equal to the value calculated using the following formula:

$$S = 1600 \text{ mm/s } (t_1 + t_2) + 1200 - 0.4 H$$

where:

S = Minimum safety distance in mm.

t<sub>1</sub> = Response time of the AOPD in seconds  
(see section 10 "Technical data")

t<sub>2</sub> = Machine stopping time in seconds.

H = Beam height from ground. This height must always be less than 1,000 mm.

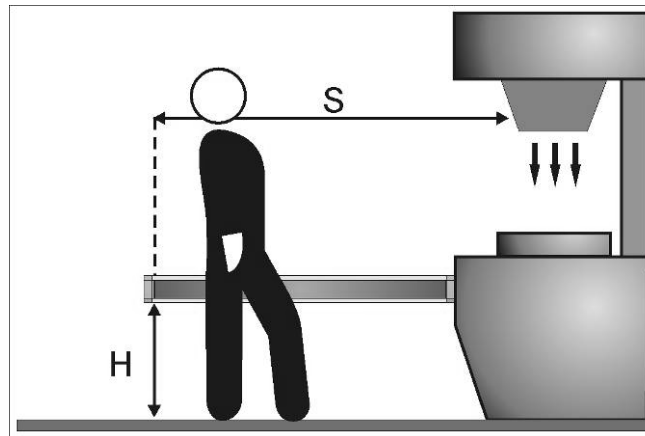


Fig. 4

**Practical examples**

Let's suppose to have a light curtain with height = 600 mm

To calculate the distance of the device from the AOPD, in a vertical position, the following formula is used:

$$S = K \cdot T + C$$

where:

$$T = t_1 + t_2$$

$t_1$  = AOPD response time + PNOZsigma relay release time (max 80 ms)

$t_2$  = Machine total stopping time.

C =  $8 \cdot (d - 14)$  for devices with resolution  $\leq 40$  mm

D = resolution

In all cases, if  $K = 2000$  mm/sec then  $S > 500$  mm. Distance will have then to be recalculated using  $K = 1600$  mm/sec.

	<b>PSEN op4F-s-14-060/1</b>	<b>PSEN op4H-s-30-060/1</b>
<b>T</b>	0.393 sec	0.394 sec
<b>C</b>	0 mm	128 mm
<b>S</b>	641.6 mm	758.4 mm



**WARNING:** The reference standard is EN 999 "Machine safety - the positioning of the protective device based on the approaching speed of the human body".

The following information is to be considered as indicative and concise. For correct safety distance please refer to complete standard EN-999.

**1.4. Typical applications**

The PSEN op4F/H-s FINGER safety light curtains provide solutions in all automation fields where the access to dangerous areas has to be controlled.

In particular, the safety curtains can be used in stopping moving parts in:

- *Automatic machines;*
- *Packaging and cutting machines;*
- *Textile, wood-working and ceramic machines;*
- *Automatic assembling lines;*
- *Milling, lathe and shearing machines;*
- *Bending and metal-working machines."*

**Example 1: Operating point protection on drilling machines**

The operator positions the part and takes it back after machining.

The operator must be protected against possible abrasions while working.

**Solution:** PSEN op4F/H-s 14 mm safety light curtain is especially suitable for this kind of application, which requires the installation of the device directly on the machine.

**Benefits:** The extremely reduced profile guarantees installation flexibility adapting itself to the machine dimensions.

The rotating fixing brackets, supplied as accessories, speed up and facilitate mounting.

**Example 2 : Paper cutting machines**


These machines typically cut paper to a specific size for newspapers or special applications. The operator must be protected against abrasion or cuts by cutter blades.


**Solution:** PSEN op4F/H-s 30 mm safety light curtain is especially suitable for this kind of application, which require the installation of the device directly on the machine.

**Benefits:** Highly reduced profile and the two side slots ensure installation flexibility for machine dimensions.

Advantages: The extremely reduced profile guarantees installation flexibility adapting itself to the machine dimensions.

The rotating fixing brackets, supplied as accessories, speed up and facilitate mounting.

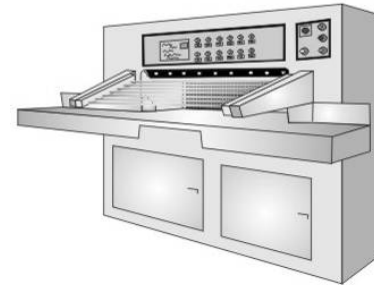

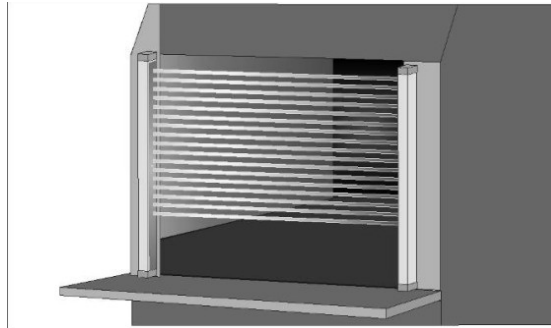**Example 3 : Milling machines**

A milling machine is a machine tool used for the shaping of metals and other solid materials. Operator hands and body must be protected from being dragged, entangled or cut by the tool / spindle.

**Solution:** PSEN op4F/H-s 30 mm series safety light curtain is the best solution considering the required safety levels and application type. When even just one of the light curtain beams is interrupted, the machine is immediately stopped.

**Benefits:** The extremely reduced profile guarantees installation flexibility adapting itself to the machine dimensions.

The rotating fixing brackets, supplied as accessories, speed up and facilitate mounting.

**English**

### 1.5. Safety information



For a correct and safe use of the safety light curtains of the PSEN op4F/H-s series, the following points must be observed:

- The stopping system of the machine must be electrically controlled.
- This control system must be able to stop the dangerous movement of the machine within the total machine stopping time T as per paragraph 1.3.3, and during all working cycle phases.
- Mounting and connection of the safety light curtain must be carried out by qualified personnel only, according to the indications included in the special sections (refer to sections 2; 3; 4; 5) and in the applicable standards.
- The safety light curtain must be securely placed in a particular position so that access to the dangerous zone is not possible without the interruption of the beams (refer section 2 “Installation mode”).
- The personnel operating in the dangerous area must be well trained and must have adequate knowledge of all the operating procedures of the safety light curtain.
- The TEST (optional for the safety light curtains Type 4) button must be located outside the protected area because the operator must check the protected area during all Test operation.
- The RESET/RESTART button must be located outside the protected area because the operator must check the protected area during all Reset/Restart operations.

Please carefully read the instructions for the correct functioning before powering the light curtain.

## 2. INSTALLATION MODE

### 2.1. Precautions to be observed for the choice and installation



Make sure that the protection level assured by the PSEN op4F/H-s device (Type 4) is compatible with the real danger level of the machine to be controlled, according to **EN 954-1** and **EN 13849-1**.

- The outputs (OSSD) of the AOPD must be used as machine stopping devices and not as command devices. The machine must have its own START command.
- The dimension of the smallest object to be detected must be larger than the resolution level of the device.
- The AOPD must be installed in a room complying with the technical characteristics indicated in section 10 “Technical Data”.
- Do not install device near strong and/or flashing light sources or close to similar devices.
- The presence of intense electromagnetic disturbances could jeopardise device functioning. This condition shall be carefully assessed by seeking the advice of Pitz Technical service.
- The operating distance of the device can be reduced in presence of smog, fog or airborne dust.
- A sudden change in environment temperature, with very low minimum peaks, can generate a small condensation layer on the lenses and so jeopardise functioning.

English



## 2.2. General information on device positioning

The safety light curtain should be carefully positioned, in order to reach a very high protection standard. Access to the dangerous area must only be possible by passing through the protecting safety light beams.



Fig.5a shows some examples of possible access to the machine from the top and the bottom sides. These situations may be very dangerous and so the installation of the safety light curtain at sufficient height in order to completely cover the access to the dangerous area (Fig.5b) becomes necessary.

**NO**

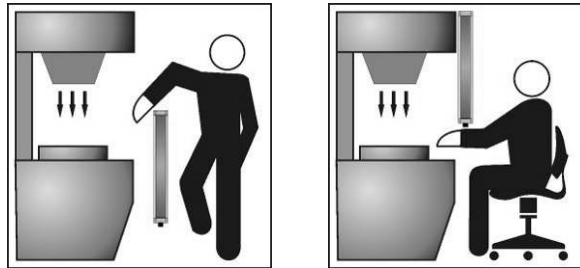


Fig. 5a



**YES**



Fig. 5b

Under standard operating conditions, machine starting must not be possible while operators are inside the dangerous area.

When the installation of the safety light curtain near to the dangerous area is not possible, a second light curtain must be mounted in a horizontal position in order to prevent any lateral access, as shown in Fig.6b.



If the operator is able to enter the dangerous area, an additional mechanical protection must be mounted to prevent the access.

**NO**

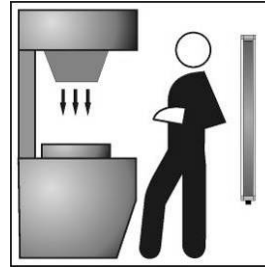


Fig. 6a



**YES**



Fig. 6b

English

### 2.2.1. Minimum installation distance

Refer to paragraph 1.3.3. "Minimum installation distance"

2.2.2. *Minimum distance from reflecting surfaces*

Reflecting surfaces placed near the light beams of the safety device (over, under or laterally) can cause passive reflections. These reflections can affect the recognition of an object inside the controlled area.

However, if the RX receiver detects a secondary beam (reflected by the side-reflecting surface) the object might not be detected, even if the object interrupts the main beam.

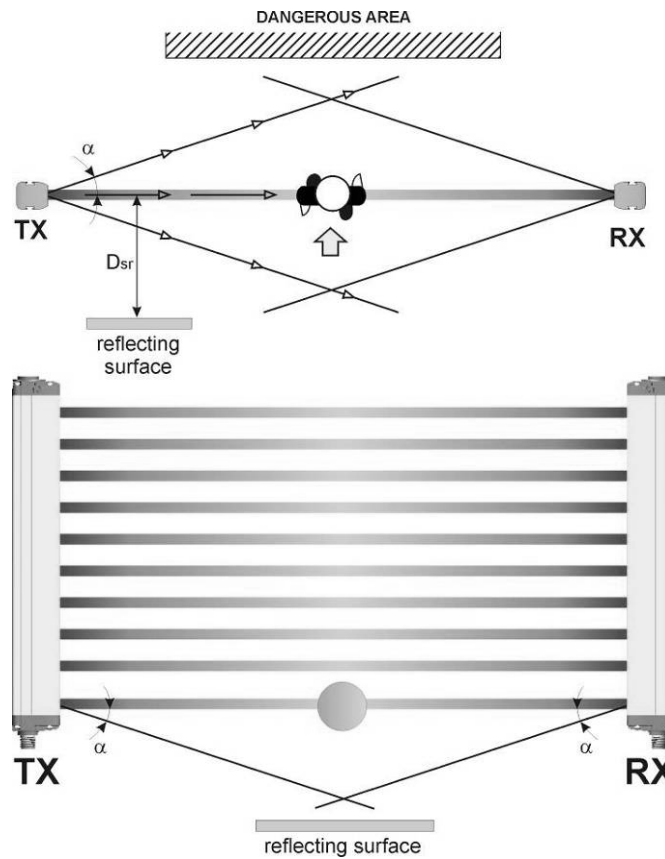


Fig. 7


It is thus important to position the safety light curtain according to the minimum distance from reflecting surfaces.

The minimum distance depends on:

- operating distance between emitter (TX) and receiver (RX);
- real aperture angle of AOPD (EAA); especially:

**for AOPD type 4 EAA = 5° ( $\alpha = \pm 2,5^\circ$ )**

Diagram of Fig. 8 shows the minimum distance from the reflecting surface ( $D_{sr}$ ), based on the operating distance:

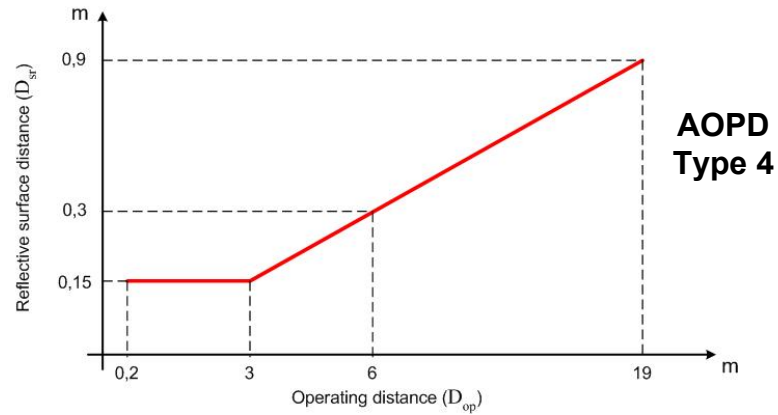

**Fig. 8**

The formula to get  $D_{sr}$  is the following:

$$D_{sr} \text{ (m)} = 0.15$$

for oper.distance < di 3 m


$$D_{sr} \text{ (m)} = 0.5 \times \text{operating distance (m)} \times \text{tg } 2\alpha$$

for oper.distance  $\geq$  di 3 m

2.2.3. Distance between homologous devices

If different safety devices have to be installed in adjacent areas, the emitter of one device must not interfere dangerously with the receiver of the other device.


The TX<sub>B</sub> interfering device must be positioned outside a minimum D<sub>do</sub> distance from the TX<sub>A</sub> – RX<sub>A</sub> emitter-receiver couple axis.

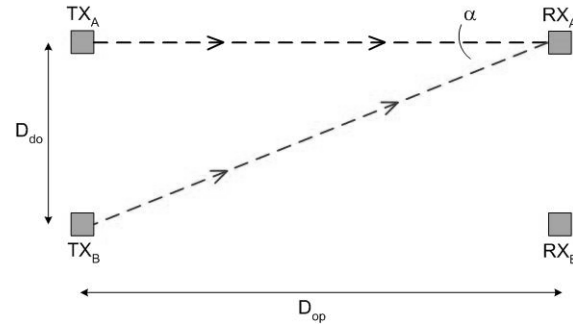

This minimum D<sub>do</sub> distance depends on:

- the operating distance between emitter (TX<sub>A</sub>) and receiver (RX<sub>A</sub>)
- the effective aperture angle of the AOPD (EAA)

The following graphic shows the distance from the interfering devices (D<sub>do</sub>) according to the operating distance (D<sub>op</sub>) of the couple ( TX<sub>A</sub> – RX<sub>A</sub> ).

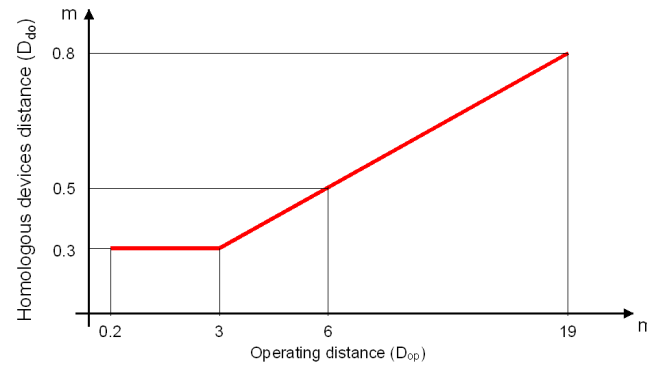

The following table shows, for convenience, the values of the minimum installation distances relative to some operating distances:

Operating distance (m)	Minimum installation distance (m)
3	0,30
6	0,50
10	0,65
19	0,80

**WARNING:** the interfering device ( $TX_B$ ) must be positioned at the same Ddo distance, calculated as shown above, even if closer to  $TX_A$  respect to  $RX_A$ .

English

Installation precautions have to be taken to avoid interference between homologous devices. A typical situation is represented by the installation areas of several adjacent safety devices aligned one next to the other, for example in plants with different machines.

Fig.9 provides two examples:

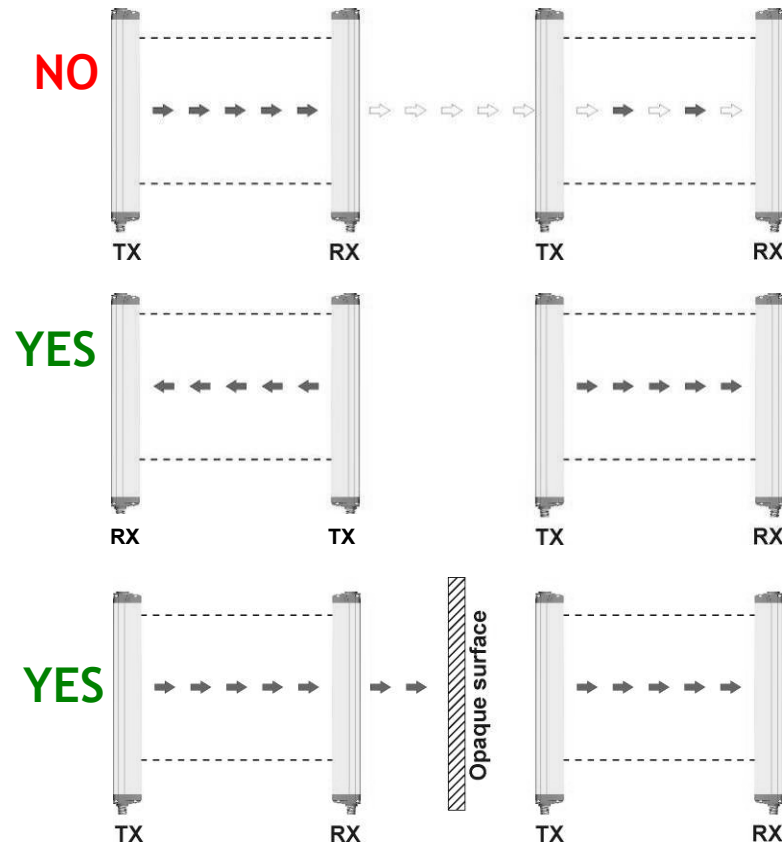


Fig. 9

#### 2.2.4. Emitter and receiver orientation

The two units shall be assembled parallel each other, with the beams arranged at right angles with the emission and receiving surface, and with the connectors orientated towards the same direction.

The configurations shown in Fig.10 must be avoided:

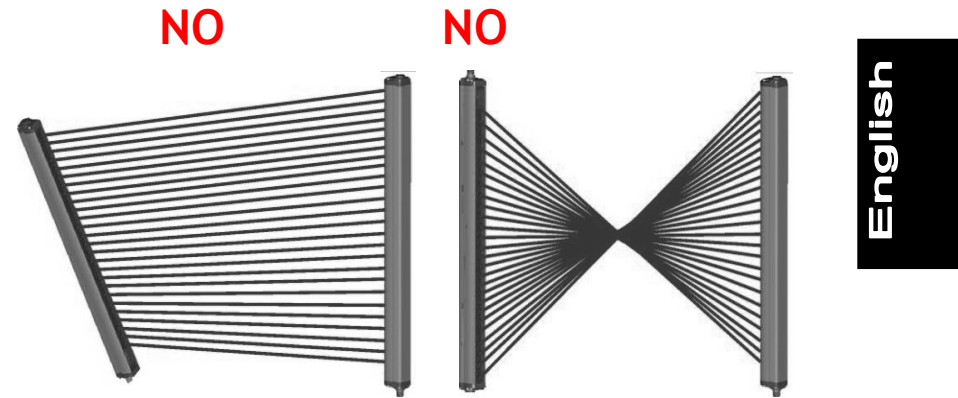


Fig. 10

#### 2.2.5. Use of deviating mirrors

The control of any dangerous area, with several but adjacent access sides, is possible using only one safety device and well-positioned deviating mirrors.

Fig.11 shows a possible solution to control three different access sides, using two mirrors placed at 45° respect to the beams.

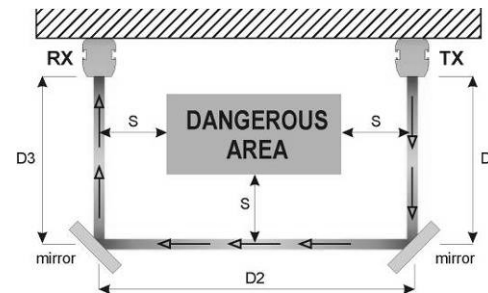


Fig. 11



The operator must respect the following precautions when using the deviating mirrors:

- The alignment of the emitter and the receiver can be a very critical operation when deviating mirrors are used. Even very small displacements of the mirror is enough to lose alignment. The use of Pilz laser pointer accessory is recommended under these conditions.
- The minimum safety distance (S) must be respected for each single section of the beams.
- Use of a deviating mirror reduces the effective operating range by about 15%. This percentage increases further when using two or three deviating mirrors.

In the table below the operating ranges are indicated, based on the number of the mirrors used.


Number of mirrors	Operating range	Operating range
Without mirror	6 m	19 m
1	5.1 m	16.5 m
2	4.3 m	13.7 m
3	3.7 m	11.6 m

- The presence of dust or dirt on the reflecting surface of the mirror causes a drastic reduction in the range.

#### 2.2.6. Controls after first installation

The control operations to carry-out after the first installation and before machine start-up are listed hereinafter. The controls must be carried-out by qualified personnel, either directly or under the strict supervision of the person in charge of machinery Safety.

Verify that:

AOPD remains blocked () intercepting the beams along the protected area using the specific test piece, following the Fig.12 scheme.

**TP14 for light curtains with 14 mm resolution: PSEN op4F-s-14**

**TP30 for light curtains with 30 mm resolution: PSEN op4H-s-30**

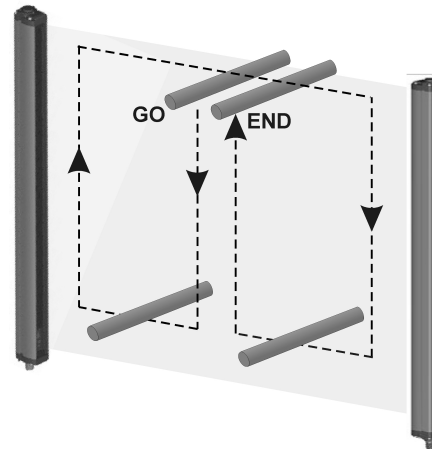


Fig. 12

English

- AOPD has to be correctly aligned, press slightly on the product side in both directions the red LED must not turn on ➡ I.
- The activation of the TEST function (optional for the safety light curtains Type 4) causes the opening of the OSSD outputs (red LED ➡ I on and controlled machine stop).
- The response time at machine STOP, including the AOPD and machine response times, must be included in the limits defined in the calculation of the safety distance (refer to section 2 “*Installation modes*”).
- The safety distance between the dangerous parts and AOPD must comply with the requirements indicated in section 2 “*Installation modes*”.
- A person must not access or remain between AOPD and the dangerous parts of the machine.
- Access to the dangerous areas of the machine must not be possible from any unprotected area.
- AOPD must not be disturbed by external light sources, ensuring that it remains in Normal operating function for at least 10-15 minutes and placing the specific test piece in the protected area in the SAFE condition for the same period.
- Verify the correspondence of all the accessory functions, activating them in the different operating conditions.

### 3. MECHANICAL MOUNTING

The emitting (TX) and receiving (RX) units must be installed with the relevant sensitive surfaces facing each other. The connectors must be positioned on the same side and the distance must be included within the operating range of the model used (see section 10 “Technical data”).

The two units must be positioned the most aligned and parallel possible.

The next step is the fine alignment, as shown in section 5 “Alignment Procedure”.

Two types of brackets can be used to fix the two units:

#### **Rotating brackets**

Rotating fixing brackets are supplied with all models (Fig.13).

They can be used separately from or together with the angled fixing brackets.

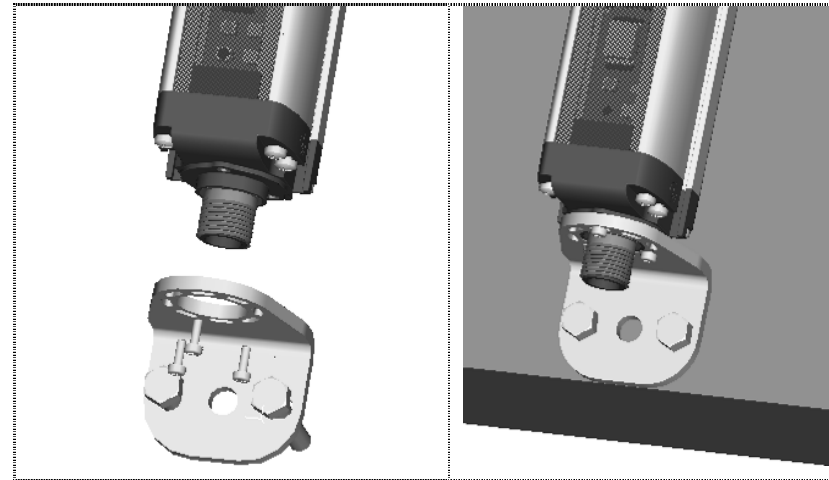
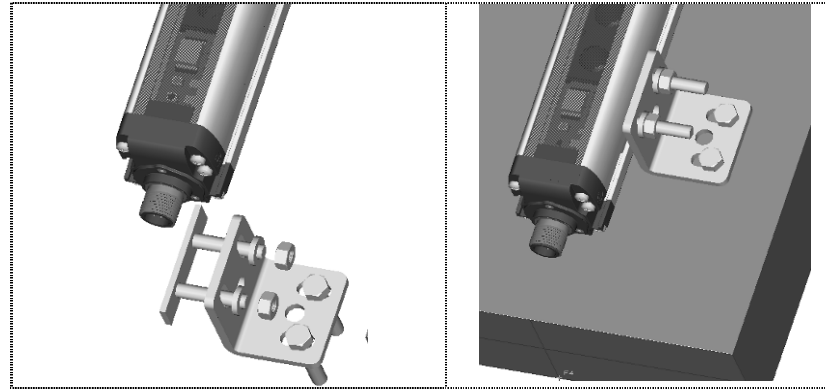


Fig. 13


**Angled fixing brackets**

Angled fixing brackets (Fig.14), available upon request, can be used as an alternative or together with rotating brackets.

The rotating supports for the correction of the unit inclination are available on request (see chapter 14 “Accessories”).


**Fig. 14**

In case of applications with particularly strong vibrations, vibration dampers together with mounting brackets are recommended to reduce the impact of the vibrations.

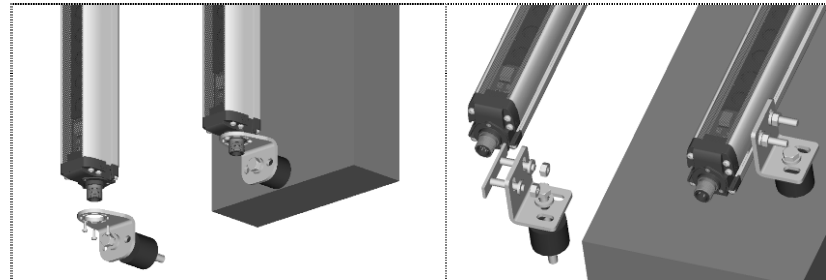**Fig. 15**

The recommended mounting positions according to the light curtain length are shown in Fig.15 and in the following table.

**English**

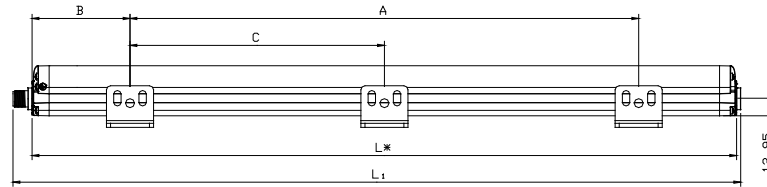


MODEL	L (mm)	A (mm)	B (mm)	C (mm)
PSEN op4F/H-s-XX-015/1	216.3	108	54	-
PSEN op4F/H-s-XX-030/1	366.2	216	75	-
PSEN op4F/H-s-XX-045/1	516.3	316	100	-
PSEN op4F/H-s-XX-060/1	666.2	366	150	-
PSEN op4F/H-s-XX-075/1	816.3	466	175	-
PSEN op4F/H-s-XX-090/1	966.2	566	200	-
PSEN op4F/H-s-XX-105/1	1116.2	666	225	-
PSEN op4F/H-s-XX-120/1	1266.3	966	150	483
PSEN op4F/H-s-XX-135/1	1416.2	1066	175	533
PSEN op4F/H-s-XX-150/1	1566.3	1166	200	583
PSEN op4F/H-s-XX-165/1	1716.3	1266	225	633
PSEN op4F/H-s-XX-180/1	1866.3	1366	250	683

xx = Resolution (14 mm – 30 mm)

### 4. ELECTRICAL CONNECTIONS

All electrical connections to the emitting and receiving units are made through a male M12 connector, located on the lower part of the two units. For receiver a M12 8-pole connector is used, while for emitter a M12 4-pole connector is used.

**RECEIVER (RX) \*):**

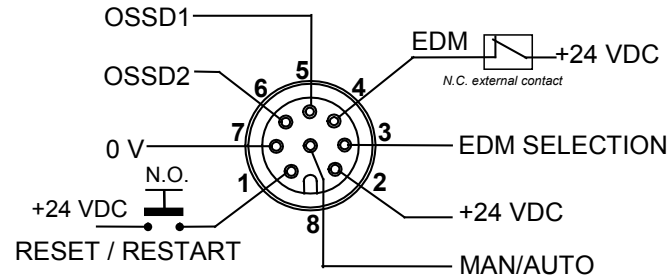


English

- 1 = white = RESET / RESTART(\*)
- 2 = brown = +24 VDC
- 3 = green = EDM SELECTION
- 4 = yellow = EDM
- 5 = grey = OSSD 1
- 6 = pink = OSSD 2
- 7 = blue = 0 V
- 8 = red = MANUAL / AUTOMATIC RESTART

(\*) automatic RESTART → RESET function  
 manual RESTART → RESET / RESTART function

**EMITTER (TX) \*):**

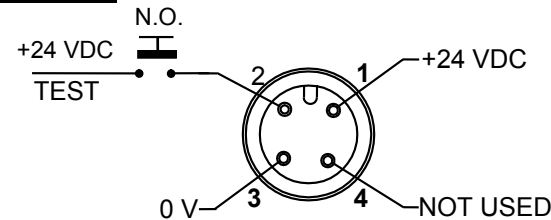

- 1 = brown = +24 VDC
- 2 = white = TEST
- 3 = blue = 0 V
- 4 = black = NOT USED

\*) plugs an pinning compatible to PSEN op4F/H series.

Function	Connection to	Status
TEST	+ 24 VDC	TEST ON
	Not connected or 0V	TEST OFF
RESET	+ 24 VDC	RESET ON
	Not connected or 0V	RESET OFF
EDM	Normally closed contact for a force- guided relay	EDM is active
	Not connected or 0V	EDM is not active
EDM SELECTION	+ 24 VDC	EDM OFF
	Not connected or 0V	EDM ON
MAN/AUTO RESTART	OSSD1	AUTOMATIC RESTART
	OSSD2	MANUAL RESTART

#### 4.1. Notes on connections

For the correct functioning of the PSEN op4F/H-s safety light curtains, the following precautions regarding the electrical connections have to be respected:

- Do not place connection cables in contact with or near high-voltage cables and/or cable undergoing high current variations (e.g. motor power supplies, inverters, etc.);



- Do not connect in the same multi-pole cable the OSSD wires of different light curtains;

- The TEST wire must be connected through a N.O. button to the supply voltage of the AOPD. The TEST function is optional for the safety light curtains Type 4.

- The RESET/RESTART wire must be connected through a N.O. button to the supply voltage of the AOPD.



The TEST button must be located in such a way that the operator can check the protected area during any test (see section 6 "*Functioning mode*").



The RESET/RESTART button must be located in such a way that the operator can check the protected area during any reset operation (see section 6 "*Functioning mode*").

- The device is already equipped with internal overvoltage and overcurrent suppression devices. The use of other external components is not recommended.




You may use for example a safety relay of the PNOZsigma (PNOZ s4, PNOZ s5) range as an evaluation device.

The wiring is described in the operating manual of the PNOZsigma unit.

- Do not use varistors, RC circuits or LEDs in parallel at relay inputs or in series at OSSD outputs.
- The OSSD1 and OSSD2 safety contacts cannot be connected in series or in parallel, but can be used separately (Fig.17), conforming to the plant's safety requirements.


If one of these configurations is erroneously used, the device enters into the output failure condition (see section 7 "Diagnostic functions").

- Connect both OSSDs to the activating device. Failure to connect an OSSD to the activating device jeopardises the system safety degree that the light curtain has to control.

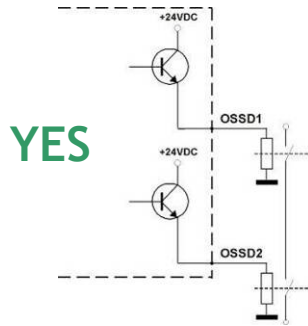


YES

Fig. 17

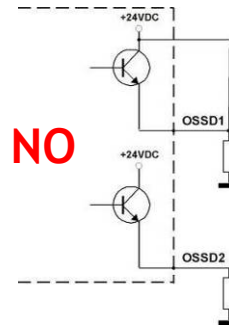


NO

Fig. 18

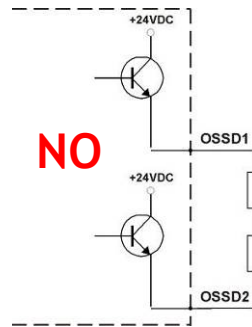


NO

Fig. 19

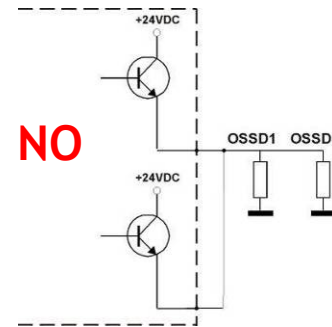

NO

Fig. 20

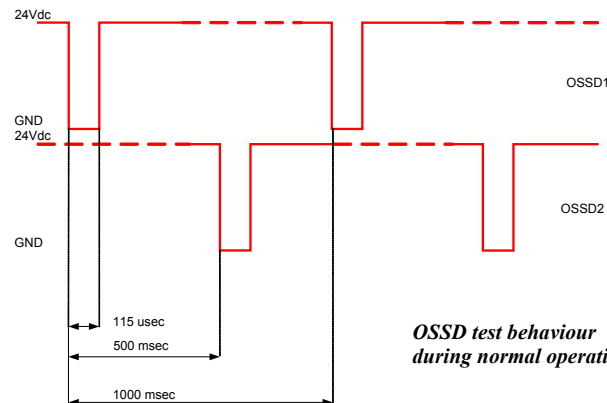

*OSSD test behaviour during normal operation*

English

#### 4.2. Ground connection

PSEN op4F/H-s safety light curtain units are preset for easy ground connection. A special compartment, positioned onto caps and marked with the special symbol shown in Figure 21, allows connection with ground cable by means of an additional screw coming with the equipment.

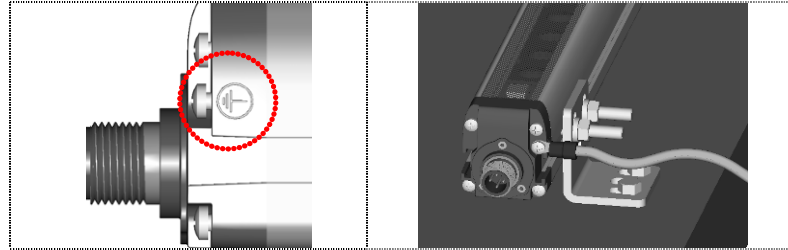


Fig. 21

Ground connection configuration is the most common and guarantees the best immunity against electromagnetic disturbances. PSEN op4F/H-s can function even without ground connection. This condition has to be carefully evaluated according to the EMC disturbance immunity and necessary insulation class considering the plant or entire system where the light curtain is installed.

- The ground connection of the two units is not necessary for Class III, while the use of a duly-insulated low-voltage feeder type SELV or PELV is compulsory. In this case, we recommend covering the earth symbol present on the caps of the two units with a blank sticker.
- The ground connection of the two units is compulsory for Class I, while the use of a duly-insulated feeder type SELV or PELV is not compulsory but anyway recommended.

The following table is a summary of PSEN op4F/H-s electrical protections.

Electrical protections	Class I	Class III
Ground Connection	Compulsory	Forbidden
Ground connection symbol	Compulsory	Forbidden
Power supply by generators SELV / PELV	Recommended	Compulsory

### 5. ALIGNMENT PROCEDURE

The alignment between the emitting and the receiving units is necessary to obtain the correct functioning of the light curtain. A good alignment prevents outputs instability caused by dust or vibrations.

The alignment is perfect if the optical axes of the first and the last emitting unit's beams coincide with the optical axes of the corresponding elements of the receiving unit.

The beam used to synchronise the two units is the closest one to the connector. SYNC is the optics connected with this beam and LAST is the optics connected to the last beam after the SYNC unit.

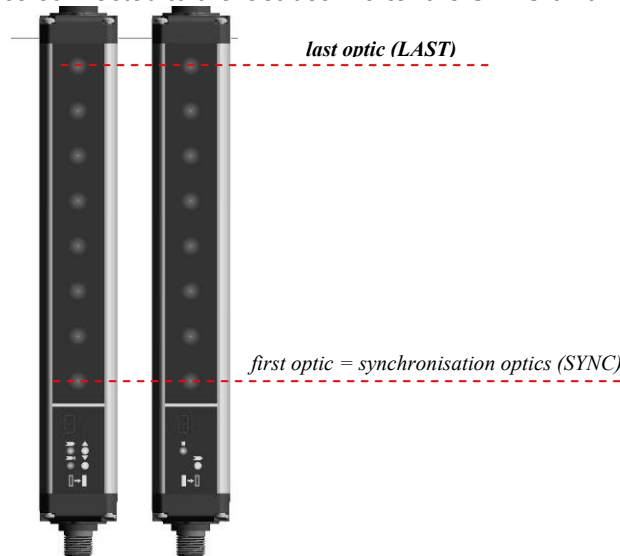


Fig. 22

Signals are clearly identified through symbols allowing their immediate reading, independent of bars directions; a short description of LEDs signals proves nevertheless necessary so as to avoid misunderstandings.

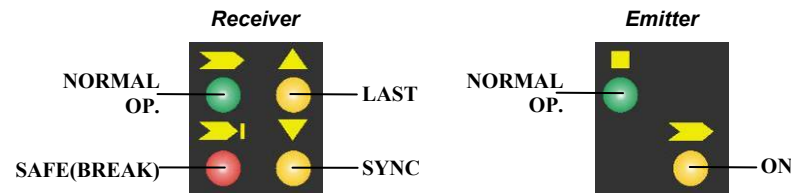


Fig. 22

The standard installation described hereinafter is the one shown in Fig. 22, i.e. with the bar assembled with the connectors pointing down.

**5.1. Correct alignment procedure**

The light curtain alignment can be effected only after having completed the mechanical installation and the electrical connections as described above. Compare alignment results with those given in the following table.

**NOTE:** To enter alignment mode connect the device as described in section 6.5 “Alignment aid function”.

Display	LED NORMAL OP.	LED SAFE (BREAK)	LED yellow ▼ SYNC	LED yellow ▲ LAST	Condition	Alignment status
	OFF	ON	ON	ON	Sync NOK Last NOK	Not aligned
			OFF		Sync OK Last NOK	
			OFF	OFF	Sync OK Last NOK Middle optics NOK	
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 0 and 25%	MINIMUM align.
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 25 and 50%	
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 50 and 75%	
	ON	OFF	OFF	OFF	Each beam is over the min. operating threshold and the number of beam over the threshold is included between 75 and 100%	MAXIMUM align.

English

- A Keep the receiver in a steady position and set the emitter until the yellow LED (▼ SYNC) is OFF. This condition shows the alignment of the first synchronisation beam.
- B Rotate the emitter, pivoting on the lower optics axis, until the yellow LED (▲ LAST) is OFF.

**NOTE:** Ensure that the green LED (➤ NORMAL OP) is steady ON.

- C Delimit the area in which the green LED (➤) is steady through some micro adjustments - for the first and then for the second unit - so to have the maximum alignment (4) and then place both units in the centre of this area.
- D Fix the two units firmly using brackets.
  - Verify that the green LED (➤) on the RX unit is ON and beams are not interrupted, then verify that the red LED SAFE (BREAK) (➤) turns ON if even one single beam is interrupted (condition where an object has been detected).
  - This verification shall be made with the special cylindrical "Test Piece" having a size suitable to the resolution of the device used (refer paragraph 2.2.6 "Controls after first installation").
- E Switch OFF and ON the device in normal operating mode.

The alignment level is monitored also during device standard operating mode via display (see paragraph 7.2).

Once the curtain has been aligned and correctly fastened, the display signal is useful both to check the alignment and show a change in the environmental conditions (occurrence of dust, light disturbance and so on) via signal level monitoring.

## 6. FUNCTIONING MODE

### 6.1. Restart mode

The interruption of a beam due to an opaque object causes the opening of OSSD outputs and the stop of the safety light curtain, SAFE (BREAK) condition ➡ I.


AOPD standard operation can be reset (OSSD safety contact closing = NORMAL OP. condition, ➡) in two different ways:

- Automatic Restart. After activation, AOPD resets to standard operating condition once the object has been removed from the controlled area.
- Manual Restart. After activation, AOPD resets to standard operating condition only once the reset function has been enabled and provided that the object has been removed from the controlled area. This condition, called interlock, is signalled on the display (see paragraph 7.2)



**WARNING:** Carefully assess risk conditions and restart modes. In applications protecting access to dangerous areas, the automatic restart mode is potentially unsafe if it allows the operator to pass completely beyond the sensitive area. In this case, the manual restart or, for example, the manual restart of the Pilz safety relay (paragraph 4.1 "Notes on connections") is necessary.

#### Time chart (Manual Restart)

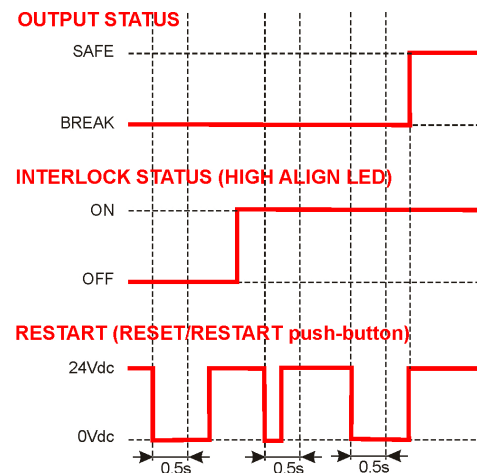




Select either automatic or manual restart by connecting pin of RX connector (see section 4 "Electrical connections")

**6.2. Test function**

The TEST function is optional for the safety light curtains Type 4 and not necessary. The TEST function can be activated by keeping a normally open external contact (TEST push-button), closed for at least 0.5 seconds.


The TEST signal is active high.

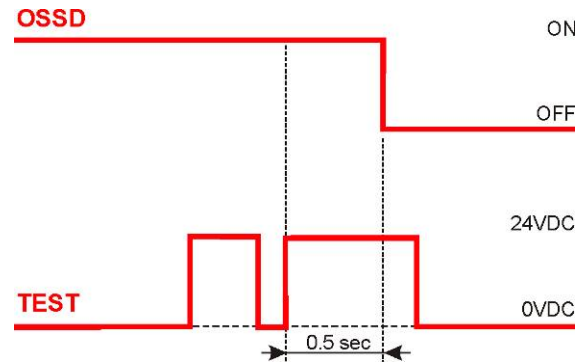

**6.3. Reset function**

The RX light curtain has a RESET function which is activated after an internal error. It can be reset only in case of optical error, OSSD or EDM error or selection of manual/automatic reset (see section 7 "Diagnostic functions").

The RESET function can be activated by keeping a normally open external contact (RESET/RESTART push-button), closed for at least 5 seconds. The RESET signal is active high.

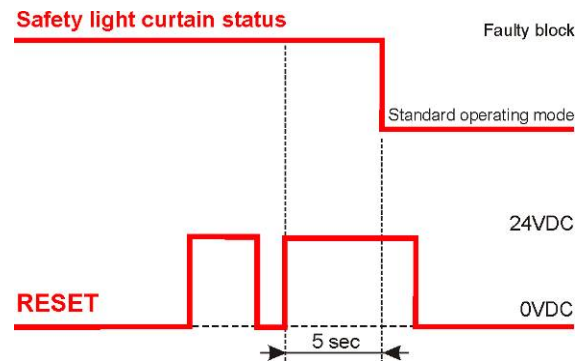


#### 6.4. EDM function

The light curtain has a function for monitoring actuation external devices (EDM). This function can be enabled or deactivated.

##### EDM enabled:

- Disconnect or connect to the ground pin 3 of receiver M12 8-pole connector (EDM enabling = ON).
- Connect EDM input (pin 4 of M12 8-pole – RX) to a 24 VDC normally closed contacts of the device to be monitored.

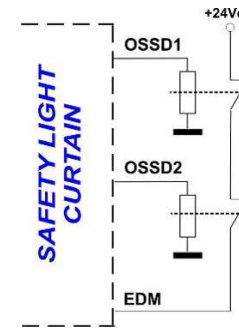


**NOTE:** The decimal dot on the display shows that the function is enabled.

##### EDM deactivated:

- Connect to 24 VDC pin 3 of receiver M12 8-pole connector (EDM enabling = OFF).
- Disconnect or connect to the ground EDM input (pin 4 of M12 8-pole - RX).

This function checks normally closed contact switch on OSSD status change.

#### OSSD STATUS

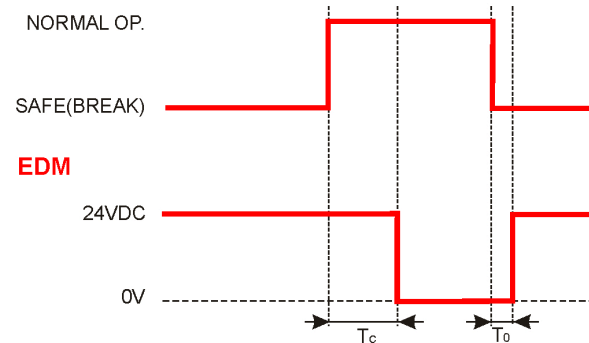


$T_c \geq 350$  msec: 350 msec: time after OSSD OFF-ON switch when EDM test is performed.

$T_0 \geq 100$  msec: time after OSSD ON-OFF switch when EDM test is performed.

### 6.5. Alignment aid function

PSEN op4F/H-s light curtain is fitted with a system which informs the user about reached alignment degree. The alignment function can be selected on device starting by keeping closed RESET/RESTART N.O. contact for at least 0.5 seconds (Fig.24).

#### **Alignment mode timing**

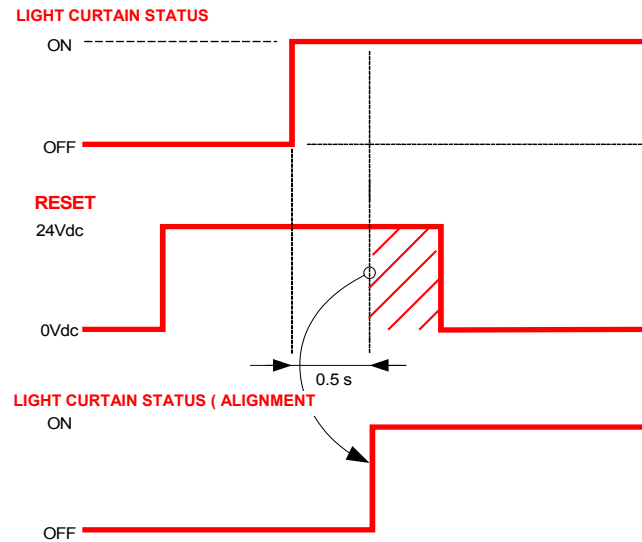

**Fig. 24**

Once optimal alignment has been reached, the device can return to normal functioning by powering off and then powering on the RX unit.

The alignment level is monitored also during device normal operating mode via display (see paragraph 7.2). Once the curtain has been aligned and correctly fastened, the display signal is useful to check the alignment and view any change in the environmental conditions (presence of dust, light disturbance and so on).



**NOTE:** OSSDs are not enabled on alignment mode.

## 7. DIAGNOSTIC FUNCTIONS

### 7.1. User interface

Curtain operating status is visualised through an one-digit display present on both the receiver and emitter units.

PSEN op4F/H-s also has four LEDs on the receiver and two LEDs on the emitter.

Fig.25 shows all LEDs signalling modes: OFF, ON and BLINKING.

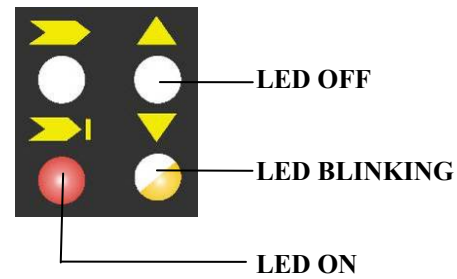


Fig. 25

English

7.2. Dagnostic messages

The operator can evaluate the main causes of the system stop or failure through the display and signalling LEDs.











For Receiver:

Function	Status	Meaning	LED	DIGIT
Normal operation	Alignment	See section 5		
	TEST (red ON)	Light curtain being tested. OSSD status shall be OFF		
	Emission (OSSD ON) (green ON)	Light curtain working in normal operating conditions		
	Interruption (OSSD OFF) (red ON)	Light curtain working in safety block conditions.		
	Interlock Beams free (red ON yellow ON)	Light curtain in interlock, waiting for restart. OSSD status must be OFF		
	Interlock Beams interrupted (red ON yellow ON)	Light curtain in interlock. OSSD status must be OFF		
	Signal level	Minimum (1 bar) Medium (2 bar) Maximum (3 bar)		
	EDM enabled	EDM function is selected		

Function	Type	Check and repair	LED	DIGIT
Error status	OSSD error (red ON)	Check OSSD connections. Make sure that they are not in contact with one another or with the supply cables, then Reset. If the failure continues contact Pilz		
	Internal error (red ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Pilz		
	Optical error (red ON)	Reset. If the failure continues contact Pilz		
	EDM error (red ON)	Check EDM connections and lines. If the failure continues contact Pilz		
	Restart selection error (red ON)	Check the man/auto restart connection. If the failure continues contact Pilz		
	No power supply (LEDs OFF)	Check connections and input voltage value. If the failure continues contact Pilz		

 English

  For Emitter:

Function	Status	Meaning	LED	DIGIT
Normal operation	TEST (green ON)	Light curtain being tested. OSSD status on the receiver must be OFF		
	Emission (green ON yellow ON)	Light curtain in normal operating condition		
Function	Type	Check and repair	LED	DIGIT
Error status	Internal error (green ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Pilz		
	Optical error (green ON)	Switch OFF and switch ON the power supply circuit. If the failure continues contact Pilz		
	No power supply (LEDs OFF)	Check connections and input voltage correct value. If the failure continues contact Pilz		

## 8. PERIODICAL CHECKS

The following is a list of recommended check and maintenance operations that should be periodically carried-out by qualified personnel (Paragraph 2.2.6 “Controls after first installation”)

Check that:

- The AOPD stays locked (➤I) during beam interruption along the entire protected area, using the suitable “Test Piece” (\*)
- The AOPD is correctly aligned. Press slightly product side, in both directions and the red LED (➤I) must not turn ON.
- Enabling the TEST function, the OSSD outputs should open (the red LED ➤I is ON and the controlled machine stops). The TEST function is optional for the safety light curtains Type 4.
- The response time upon machine STOP (including response time of the AOPD and of the machine) is within the limits defined for the calculation of the safety distance (see section 2 “Installation mode”).
- The safety distance between the dangerous areas and the AOPD are in accordance with the instructions included in section 2 “Installation mode”.
- Access of a person between AOPD and machine dangerous parts is not possible nor is it possible for him/her to stay there.
- Access to the dangerous area of the machine from any unprotected area is not possible.
- The AOPD and the external electrical connections are not damaged.

The frequency of checks depends on the particular application and on the operating conditions of the safety light curtain.

(\*) according to the Fig.12 scheme

Verify that:

AOPD remains blocked (➤I) intercepting the beams along the protected area using the specific test piece, following the Fig.12 scheme.

**TP14 for light curtains with 14 mm resolution: PSEN op4F-s-14**

**TP30 for light curtains with 30 mm resolution: PSEN op4H-s-30**



### 8.1. General information and useful data



Safety MUST be a part of our conscience.

The safety devices fulfil their safety function only if they are correctly installed, in accordance with the Standards in force.

If you are not certain to have the expertise necessary to install the device in the correct way, Pilz Technical Support is at your disposal to carry out the installation.

The device uses fuses that are not self-resetting. Consequently, in presence of short-circuits causing the cut-off of these fuses, both units shall be sent to Pilz Technical Support department.

A power failure caused by interferences may cause the temporary opening of the outputs, but the safe functioning of the light curtain will not be compromised.

## 9. DEVICE MAINTENANCE

PSEN op4F/H-s safety light curtains do not require special maintenance operations.

To avoid the reduction of the operating distance, optic protective front surfaces must be cleaned at regular intervals.

Use soft cotton cloths dampened in water.

Do not apply too much pressure on the surface in order to avoid making it opaque.

Please do not use on plastic surfaces or on light curtain painted surfaces:

- alcohol or solvents
- wool or synthetic cloths
- paper or other abrasive materials

### 9.1. Product disposal

Under current Italian and European laws, Pilz is not obliged to take care of product disposal at the end of its life.

Pilz recommends to dispose of the product in compliance with local laws or contact authorised waste collection centres.

## 10. TECHNICAL DATA


ELECTRICAL DATA	
Power supply (Vdd):	24 Vdc $\pm$ $\pm$ 20%
Consumption (TX):	2.5 W max
Consumption (RX):	3.5 W max (without load)
Outputs:	2 PNP
Short-circuit protection:	1.4 A max
Output current:	0.5 A max / each output
Output voltage – status ON:	Vdd –1 V min
Output voltage – status OFF:	0.2 V max
Capacitive load	2.2 $\mu$ F @ 24Vdc max
Response times:	See table below
Controlled height:	150..1800 mm
Safety category:	Type 4
Auxiliary functions:	Test; manual/automatic restart; EDM; RESET
Electrical protection:	Class I / Class III (see paragraph 4.2)
Connections:	M12 4-pole for emitter M12 8-pole for receiver
Cable length (for power supply):	50 m. max
OPTICAL DATA	
Light emission ( $\lambda$ ):	Infrared, LED (950 nm)
Resolution:	14 - 30 mm
Operating distance:	0.2...19 m for 30 mm 0.2...6 m for 14 mm
Ambient light rejection:	IEC-61496-2
MECHANICAL AND ENVIRONMENTAL DATA	
Operating temperature:	0...+ 55 °C
Storage temperature:	- 25...+ 70 °C
Temperature class:	T6
Humidity:	15...95 % (no condensation)
Mechanical protection:	IP 65 (EN 60529)
Vibrations:	Width 0.35 mm, Frequency 10 ... 55 Hz 20 sweep per axis, 1 octave/min (EN 60068-2-6)
Shock resistance:	16 ms (10 G) 1,000 shocks per axis (EN 60068-2-29)
Housing material:	Painted aluminium (yellow RAL 1003)
Front glass material:	PMMA
Cap material:	PC MAKROLON
Weight:	1.3 kg / meter for each single unit

## 11. LIST OF AVAILABLE MODELS

Model	Controlled height (mm)	No. Beams	Response time (msec)	Resolution (mm)
PSEN op4F-s-14-015/1	150	16	11	14
PSEN op4F-s-14-030/1	300	32	15	14
PSEN op4F-s-14-045/1	450	48	18	14
PSEN op4F-s-14-060/1	600	64	22	14
PSEN op4F-s-14-075/1	750	80	25	14
PSEN op4F-s-14-090/1	900	96	29	14
PSEN op4F-s-14-105/1	1050	112	33	14
PSEN op4F-s-14-120/1	1200	128	36	14
PSEN op4F-s-14-135/1	1350	144	40	14
PSEN op4F-s-14-150/1	1500	160	43	14
PSEN op4F-s-14-165/1	1650	176	47	14
PSEN op4F-s-14-180/1	1800	192	50	14
PSEN op4H-s-30-015/1	150	8	9	30
PSEN op4H-s-30-030/1	300	16	11	30
PSEN op4H-s-30-045/1	450	24	13	30
PSEN op4H-s-30-060/1	600	32	14	30
PSEN op4H-s-30-075/1	750	40	16	30
PSEN op4H-s-30-090/1	900	48	18	30
PSEN op4H-s-30-105/1	1050	56	19	30
PSEN op4H-s-30-120/1	1200	64	21	30
PSEN op4H-s-30-135/1	1350	72	23	30
PSEN op4H-s-30-150/1	1500	80	25	30
PSEN op4H-s-30-165/1	1650	88	26	30
PSEN op4H-s-30-180/1	1800	96	28	30

English

## 12. OVERALL DIMENSIONS

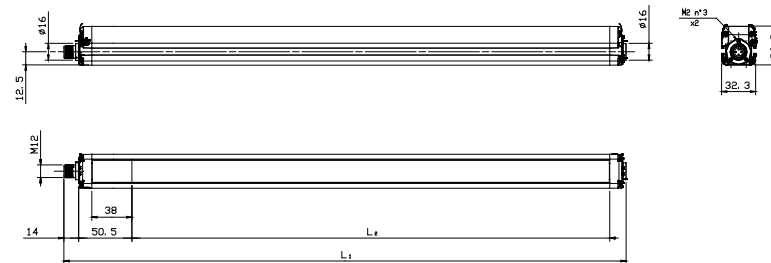


MODEL	L <sub>1</sub>	L <sub>2</sub>
PSEN op4F/H-s-XX-015/1	233.3	153.3
PSEN op4F/H-s-XX-030/1	383.2	303.2
PSEN op4F/H-s-XX-045/1	533.2	453.3
PSEN op4F/H-s-XX-060/1	683.2	603.2
PSEN op4F/H-s-XX-075/1	833.2	753.3
PSEN op4F/H-s-XX-090/1	983.2	903.2
PSEN op4F/H-s-XX-105/1	1133.2	1053.2
PSEN op4F/H-s-XX-120/1	1283.3	1203.3
PSEN op4F/H-s-XX-135/1	1433.2	1353.2
PSEN op4F/H-s-XX-150/1	1583.3	1503.3
PSEN op4F/H-s-XX-165/1	1733.3	1653.3
PSEN op4F/H-s-XX-180/1	1883.3	1803.3

xx = Resolution (14 mm – 30 mm)

### 13. OUTFIT

#### Rotating fixing bracket

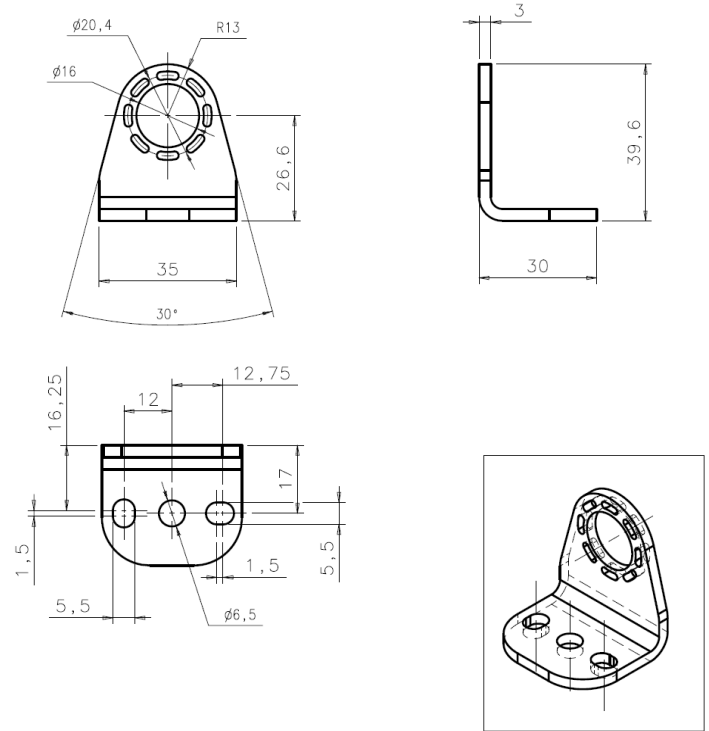


English


MODEL	DESCRIPTION
PSEN op bracket turnable (kit) (630772)	Rotating fixing bracket (kit 4pz.)

## 14. ACCESSORIES

### Angled fixing bracket

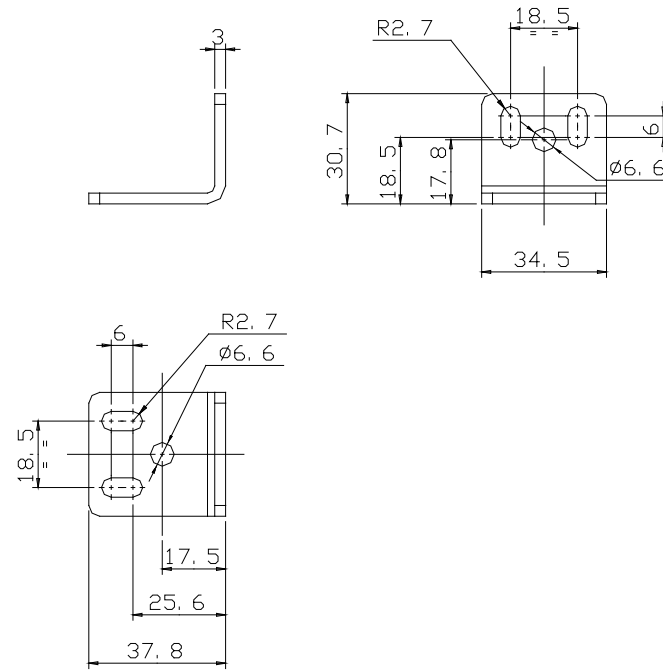

14.1 Angled fixing bracket mounting

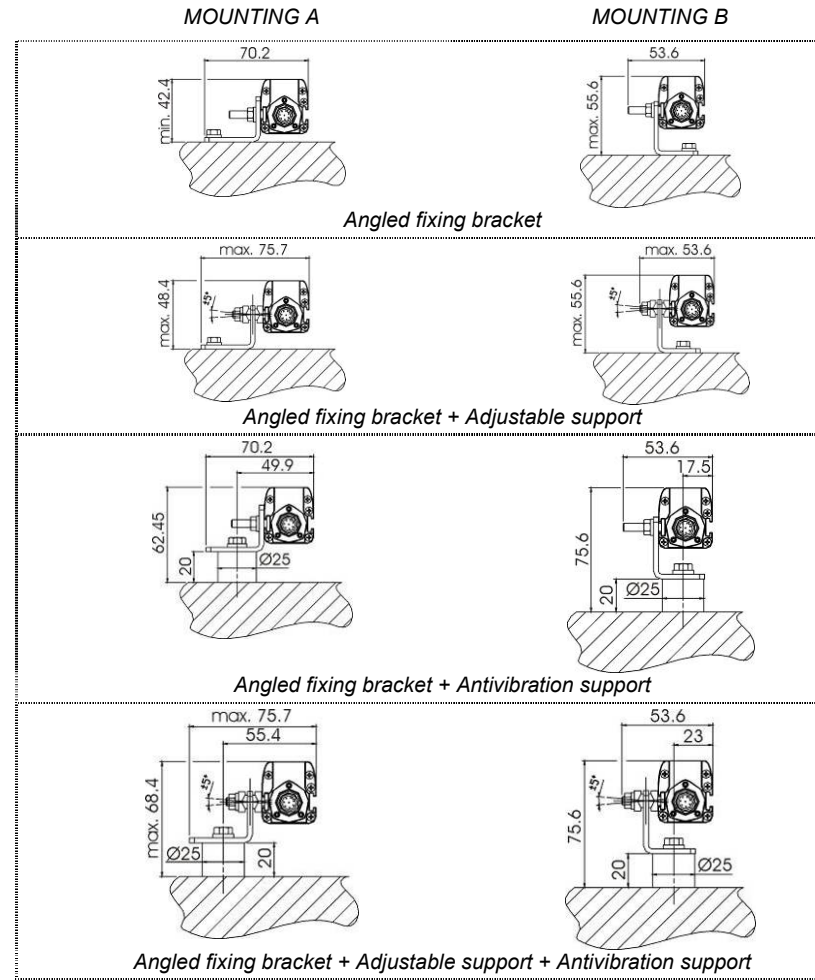


English

MODEL	DESCRIPTION
PSEN op bracket kit (630325)	Fixing brackets for angle mounting (4 pcs kit)
PSEN op bracket kit anti vibration (630327)	Antivibration support (4 pcs kit)
PSEN op bracket kit adjustable (630326)	Adjustable support (4 pcs Kit)




Deviating mirrors

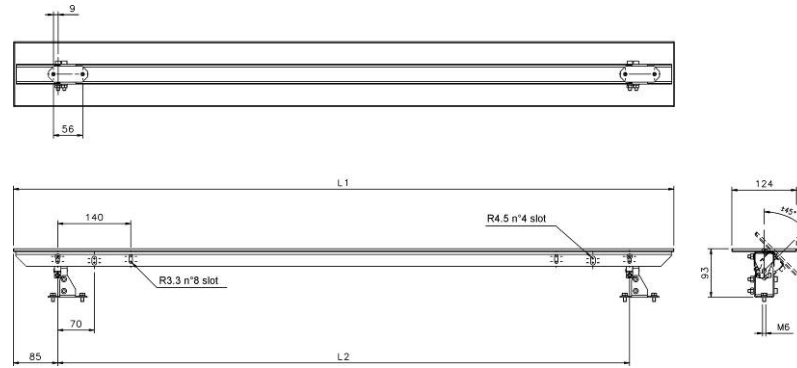

MODEL	L <sub>1</sub> (mm)	L <sub>2</sub> (mm)	L <sub>3</sub> (mm)
PSEN op Mirror-060/1	545	376	580
PSEN op Mirror-090/1	845	676	880
PSEN op Mirror-120/1	1145	976	1180
PSEN op Mirror-165/1	1595	1426	1630
PSEN op Mirror-190/1	1845	1676	1880

Column and floor stands

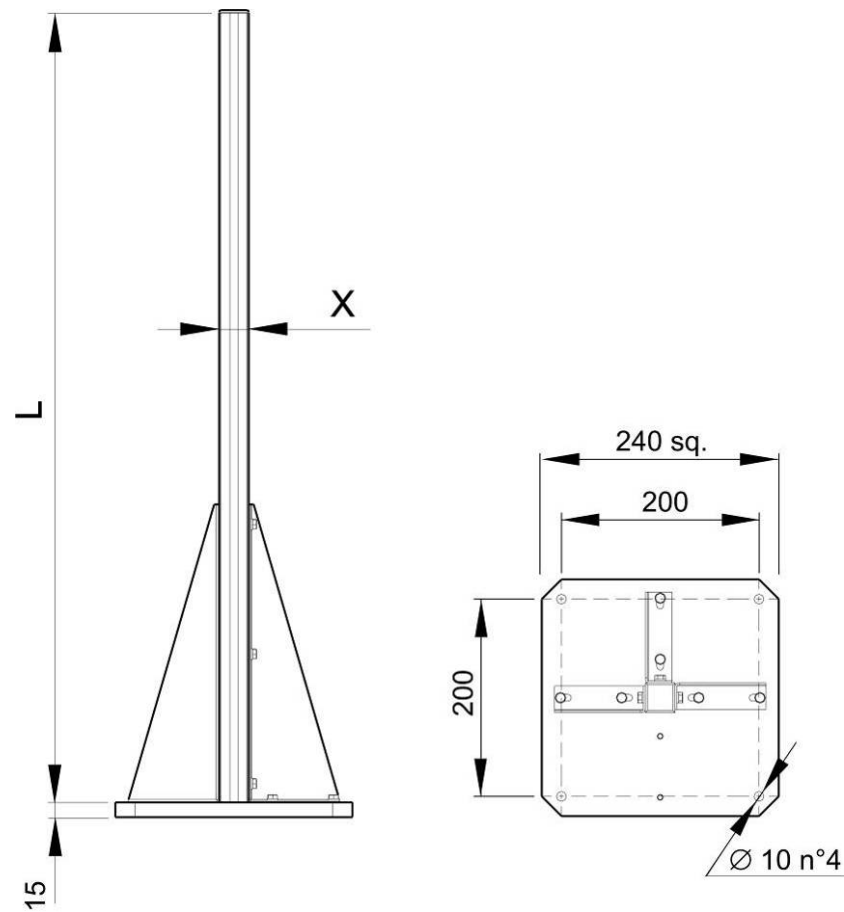

English

MODEL	DESCRIPTION	L (mm)	Order no.
PSEN op Protective Column-060/1	Protective Stand H=600 mm	600	630950
PSEN op Protective Column-090/1	Protective Stand H=900 mm	900	63951
PSEN op Protective Column-120/1	Protective Stand H=1200 mm	1200	630952
PSEN op Protective Column-165/1	Protective Stand H=1650 mm	1650	630953
PSEN op Protective Column-190/1	Protective Stand H=1900 mm	1900	630954

**Test Piece**

MODEL	DESCRIPTION
Testpiece F 14mm (630345)	test rod Ø 14 mm
Testpiece H 30mm (630346)	test rod Ø 30 mm

**Connection cables**

MODELL	Description	Cable lengthe
PSEN op cable axial M12 4-p. shield.	Cabel shielded, M12, 4 pole, axial	3 m (630303)
		5 m 630304)
		10 m (630305)
		30 m (630309)
PSEN op cable angle M12 4-p. shield	Cabel shielded, M12, 4 pole, angle	3 m (630306)
		5 m 630307)
		10 m (630308)
		30 m (6303219)
PSEN op cable axial M12 8-p. shield.	Cabel shielded, M12, 8 pole, axial	3 m (630313)
		5 m 630314)
		10 m (630315)
		30 m (630328)
PSEN op cable angle M12 8-p. shield.	Cabel shielded, M12, 8 pole, angle	3 m (630316)
		5 m 630317)
		10 m (630318)
		30 m (630329)

**DESCRIPTION**

## 15. GLOSSARY

**ACTIVE OPTOELECTRONIC PROTECTIVE DEVICE (AOPD):** its detection function is achieved thanks to the use of optoelectronic receivers and emitters detecting the optical beams interruptions inside the device caused by an opaque object present inside the specified detecting area.

An active optoelectronic protective device (AOPD) can operate both in emitter-receiver mode and in retro-reflective light curtains.

**BLOCK CONDITION (=BREAK):** status of the light curtain taking place when a suitably-sized opaque object (see DETECTING CAPACITY) interrupts one or several light curtain beams.

Under these conditions, OSSD1 and OSS2 light curtain outputs are simultaneously switched OFF within the device response time.

**CONTROLLED MACHINE:** machine having the potentially-dangerous points protected by the light curtain or by another safety system.

**CROSSING HAZARD:** situation under which an operator crossing the area controlled by the safety device and this latter stops and keeps the machine stopped until the hazard is eliminated, and then enters the dangerous area. Now the safety device could not be able to prevent or avoid an unexpected restart of the machine with the operator still present inside the dangerous area.

**DANGEROUS AREA:** area representing an immediate or imminent physical hazard for the operator working inside it or who could get in contact with it.

**DETECTING CAPACITY (= RESOLUTION):** sensor function parameter limit as specified by the manufacturer, which activates the electrosensitive protection equipment (ESPE). In case of an active optoelectronic protective device (AOPD), with resolution we mean the minimum dimension, which an opaque object must have in order to interrupt at least one of the beams that constitute the sensitive area.

**EDM:** see "External device monitoring) in the glossary.

**ELECTROSENSITIVE PROTECTIVE EQUIPMENT (ESPE):** assembly of devices and/or components working together to activate the protective disabling function or to detect the presence of something and including at least: a sensor, command/control devices and output signal switching devices.

**EMITTER:** unit emitting infrared beams, consisting of a set of optically-synchronised LEDs. The emitting unit, combined with the receiving unit (installed in the opposite position), generates an optical “curtain”, *i.e.* the detecting area.

**EXTERNAL DEVICE MONITORING (EDM):** device used by the AOPD to monitor the status of the external command devices.

**FINAL SWITCHING DEVICE (FSD):** part of the control system involving machine safety conditions. It breaks the circuit to the machine primary control element (MPCE) when the output signal switching device (OSSD) becomes inactive.

**FORCE-GUIDED CONTACTS:** Contacts can be guided forcibly when they are connected mechanically so that they can switch simultaneously, when the input stage is active. If one contact of the series remains “hanged”, no other relay contact is able to move.

This function allows the control of the EDM status.

**MACHINE OPERATOR:** qualified person allowed to use the machine.

**MACHINE PRIMARY CONTROL ELEMENT (MPCE):** electrically-powered element having the direct control of machine regular operation so as to be the last element, in order of time, to operate when the machine has to be enabled or blocked.

**MIN. INSTALLATION DISTANCE:** min. distance necessary to allow machine dangerous moving parts to completely stop before the operator can reach the nearest dangerous point. This distance shall be measured from the middle point of the detecting area to the nearest dangerous point. Factors affecting min. installation distance value are machine stop time, total safety system response time and light curtain resolution.

**N.O.:** normally opened

**N.C.:** normally closed

**OFF STATUS:** status when the output circuit is interrupted and does not allow current stream.

**ON STATUS:** status when the output circuit is operational and allows current stream.

**OUTPUT SIGNAL SWITCHING DEVICE (OSSD):** part of the ESPE connected to machine control system. When the sensor is enabled during standard operating conditions, it switches to disabled status.

**PROTECTED AREA:** area where a specified test object is detected by the ESPE.

**PROTECTIVE DEVICE:** device having the function to protect the operator against possible risks of injury due to the contact with machine potentially-dangerous parts.

**QUALIFIED OPERATOR:** a person who holds a professional training certificate or having a wide knowledge and experience and who is acknowledged as qualified to install and/or use the product and to carry out periodical test procedures.

**RECEIVER:** unit receiving infrared beams, consisting of a set of optically-synchronised phototransistors. The receiving unit, combined with the emitting unit (installed in the opposite position), generates an optical “curtain”, i.e. the detecting area.

**RESPONSE TIME:** max. time elapsing between the occurrence of the event leading to sensor activation and the reaching of the inactive state by the output signal switching device (OSSD).

**RESTART INTERLOCKING DEVICE (=RESTART):** device preventing machine automatic restart after sensor activation during a dangerous phase of machine operating cycle, after a change of machine operating mode, and after a variation in machine start control devices.

**RISK:** probability of occurrence of an injury and severity of the injury itself.

**SAFETY LIGHT CURTAIN:** it is an active optoelectronic protective device (AOPD) including an integrated system consisting of one or several emitting elements and one or several receiving elements forming a detection area with a detecting capacity specified by the supplier.

**START INTERLOCKING DEVICE (= START):** device preventing machine automatic start if the ESPE is live or the voltage is disabled and enabled once again.

**TEST PIECE:** opaque object having a suitable size and used to test safety light curtain correct operation.

**TYPE (OF ESPE):** the Electrosensitive Protective Equipment (ESPE) have different reactions in case of faults or under different environmental conditions. The classification and definition of the "type" (ex. type 2, type 4, according to IEC 61496-1) defines the minimum requirements needed for ESPE design, manufacturing and testing.

**WORKING POINT:** machine position where the material or semifinished product is worked.