


RAM® 6021M12 Router

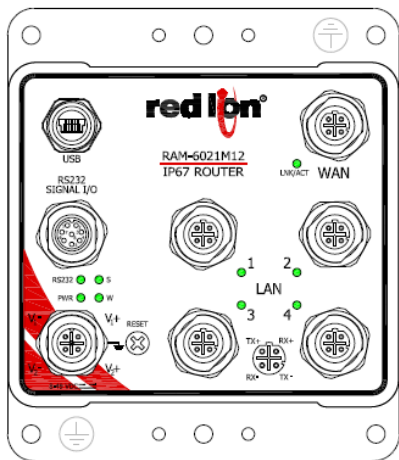

Unpacking Instructions

1. Unpack the Red Lion unit and verify the following components are enclosed in the package:
 - Quick Start Guide
 - RAM-6021M12 Router
2. The RAM-6021M12 is powered by two redundant power inputs located on a single 5-pin M12 A-coded connector.
 - The router requires a power source rated between 8 and 49 VDC



Item	Description
Input Voltage	Power 8 to 49 VDC
Steady Input Current	0.15A @ 24VDC
BTU/hr	12.25
Inrush Current	33.9A/0.0287ms @ 24VDC

3. Connect to the WAN or LAN port for network connectivity.

Accessing the Web User Interface using AutoNet

1. Connect the RAM-6021M12 router to an existing network.
 - a. Connect an Ethernet cable between the router and your local corporate LAN or directly to your PC/Laptop.
 - b. Verify the green LED on the Ethernet port is lit.
2. RAM-6021M12 will obtain its IP address via DHCP if a DHCP server is present, if not the Ethernet interface will set a static IP and enable a DHCP server on the interface. If your PC is connected directly to the Red Lion router it will obtain a local IP address from the router.
3. Access Web User Interface

Open a web browser and navigate to <http://ram-<Last 6 of Ethernet MAC Address>>:

Example: <http://ram-6d3f11.local/>

Accessing the Web User Interface (Traditional Method)

1. Connect the PC to the RAM-6021M12 router.
 - a. Connect an Ethernet cable between the local PC and any available Ethernet port.
2. Setup PC IP Address.

PC to Ethernet Interfaces

Select "Use the following IP address" and fill in the blank fields with the information below:

Item	WAN/ETH0	LAN/ETH1
IP Address	192.168.0.2	192.168.1.2
Subnet Mask	255.255.255.0	255.255.255.0
Default Gateway	192.168.0.1	192.168.1.1
Preferred DNS	192.168.0.1	192.168.1.1

3. Access Web User Interface

Open a web browser and enter the following in the address bar:

- **WAN/ETH0:** <http://192.168.0.1:10000/>
- **LAN/ETH1:** <http://192.168.1.1:10000/>

Login Instructions

- **User Name:** admin (lowercase letters)
- **Password:** last six digits of the unit's serial number


Upon successfully logging in, the web UI will launch.

Note: For security purposes, it is recommended that the admin password be changed according to your internal policies.

To change password, go to: **Admin** → **Access Settings**.
 If you have any problems getting connected, please refer to the Red Lion Software Manual located at:

<http://www.redlion.net>

Web UI:

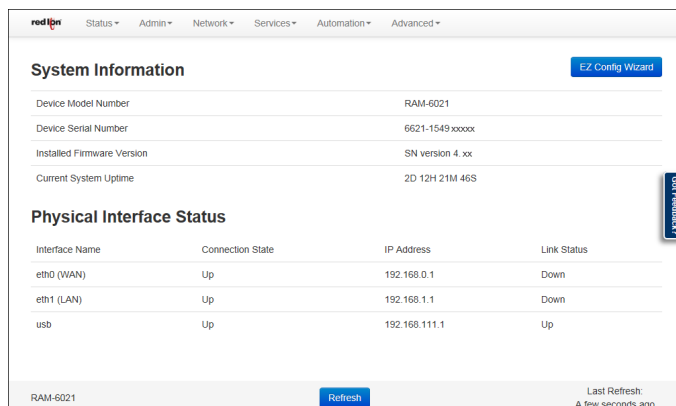

You are now connected to the web interface. If you should see anything other than the screen shown above, please refer to the RAM-6021M12 User Manual, located on our website: www.redlion.net.

For more information to set up Modbus features, please refer to the RAM-6021M12 User Manual.

Hardware Status LEDs

LED	State	Description
Power	ON	Power is applied to the router
W		Refer to Hardware Guide for details
RS232	ON	Link established with serial device but no data activity
	FLASH	Data transmitted/received with attached serial device
Ethernet	ON	Link established with Ethernet device

Red Lion Controls Technical Support

If you have followed all of the instructions up to this point, are satisfied that you are not having an authentication problem and your unit is still not communicating, then it is time to contact Red Lion Technical Support at:

support@redlion.net or call
Inside US: +1 (877) 432-9908
Outside US: +1 (717) 767-6511

Installation and Hazardous Area Warnings

All power, input and output I/O wiring must be in accordance with Class I, Division 2 wiring methods are in accordance with the authority having jurisdiction. This equipment is suitable for Use in Class 1, Division 2, Groups A, B, C and D or Non-Hazardous Locations Only.

WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR THE AREA IS KNOWN TO BE NON-HAZARDOUS.

WARNING - DO NOT REMOVE OR REPLACE PORT CONNECTIONS WHILE CIRCUIT IS LIVE UNLESS THE AREA IS KNOWN TO BE FREE OF IGNITIBLE CONCENTRATIONS OF FLAMMABLE SUBSTANCES. For the required marking for the port connections, instruction shall be included indicating that the marking shall be displayed on a prominent place on the end-enclosure.

These devices are open-type devices that are to be installed in a tool only accessible enclosure suitable for the environment.

T-Code of T4A was established.

Avertissements Pour Installation et Endroits Dangereux

Tout pouvoir, le câblage d'entrée et de sortie (I/O) doivent être conformes aux méthodes de câblage de Classe I, Division 2 et conformément à l'autorité compétente. Cet équipement est adapté pour une utilisation en Classe1, Division 2, Groupes A, B, C et D ou endroits non-dangereux seulement

AVERTISSEMENT - RISQUE D'AVERTISSEMENT - NE DÉBRANCHEZ PAS L'ÉQUIPEMENT PENDANT QUE LE CIRCUIT EST DIRECT OU À MOINS QUE L'ENVIRONNEMENT SOIT CONNU POUR ÊTRE NON-DANGEREUX.

AVERTISSEMENT - NE PAS RETIRER OU REMPLACER LES CONNEXIONS DE PORT ALORS QUE LE CIRCUIT EST VIVRE À MOINS QUE LA RÉGION EST CONNUE POUR ÊTRE LIBRE D'IGNITIBLE LES CONCENTRATIONS DE SUBSTANCES INFLAMMABLES. Pour le marquage obligatoire pour les connexions de port, l'enseignement doit être inclus en indiquant que le marquage doit être affichée sur une place de premier plan dans l'enceinte.

Ces appareils sont de type ouvert matériels qui doivent être installés dans un boîtier de l'outil accessible uniquement adapté à l'environnement.

T-Code de T4A a été établie.