Mini OCS/RCS



# 24VDC Bipolar Digital In 10-28VDC, 0.5A Sourcing Digital Out <u>4-20mA Analog In/Out</u> HE5000CS053 / HE5000CS083 HE500RCS083

## 1 SPECIFICATIONS


ANALOG INPUT			
Number of Channels	4	Analog Inputs Input Points Required	4
Input Ranges (including over-range)	Nominal: 0-20.47mA	Conversion Time (PLC Update Rate)	Set by PLC Scan Time
Resolution	12-Bit	Converter Type	Successive Approximation
Input Impedance	200 Ohms < 12VDC, Clamped @ 12VDC, 35mA Max. Continuous	Additional error for temperatures other than 25°C	0.01% / °C
Maximum Error at 25°C	0.1%	Maximum Over-Current	35mA
DIGITAL INPUT			
Inputs per Module	8	Input Characteristics	Bidirectional
Commons per Module	1	Input Impedance	10K Ohms
Input Voltage Range	12-24VDC	Minimum ON Current	1mA
Peak Voltage	35VDC Max.	Maximum OFF Current	200μΑ
Isolation (Channel to Channel and Channel to Common)	500VDC	OFF to ON Response	1ms.
ON Voltage Level	9VDC	ON to OFF Response	1ms.
OFF Voltage Level	3VDC	· ·	
ANALOG OUTPUT			
Number of Channels	2	Analog Outputs; Output Points Required	2
Output Ranges (including over- range)	20.47mA; Clamped @-0.5 - +33VDC Nominal	Additional error for temperatures other than 25°C	0.01% / °C
Resolution	12 Bits		0.1%
Output Voltage	4 - 30VDC	Maximum Error at 25°C	(Note: Used 2% error under EMC testing.)
DIGITAL OUTPUT			
Outputs per Module	8	Maximum Inrush Current	650mA
Commons per Module	1	Minimum Load	None
Operating Voltage	10 - 28VDC	OFF to ON Response	1ms.
Output Type	Sourcing / 10K Pull-Down	ON to OFF Response	1ms.
Peak Voltage	28VDC Max.	Output Characteristics	Current Sourcing
Maximum Load Current per Output	0.5A Max.	Output Protection	Short Circuit

#### MAN0304-03


General Specifications				
Required Power	4.8W (200mA @ 24VDC)	Operating	0° to 50° Celsius	
(Steady State)	4.000 (200MA @ 24000)	Temperature		
Required Power (Inrush)	900mA max. @ 24VDC for	Terminal Type	Spring Clamp, Removable	
	1ms.			
Relative Humidity	5 to 95% Non-condensing	Weight	9.5 oz. (270 g)	
CE	See Compliance Table at http://www.heapg.com/Support/compliance.htm			
UL		at http://www.neupg.com	n oupport compliance.num	


### 2 WIRING

### 2.1 Digital Input / Output (P1)

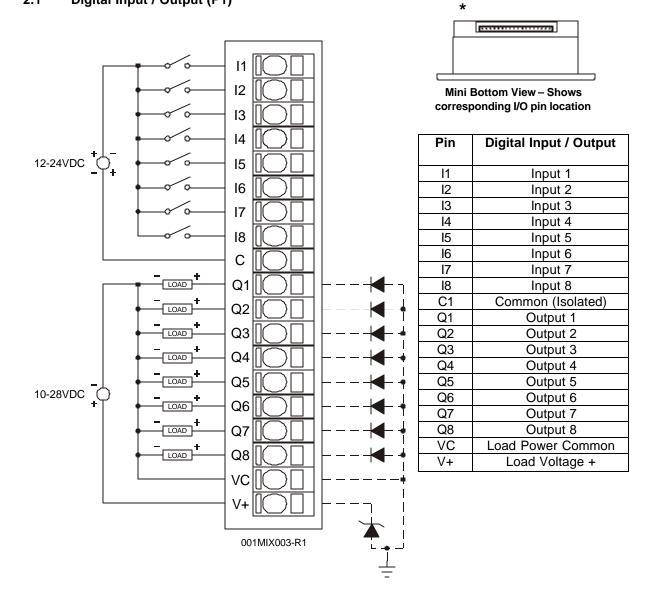

### 2.2 Analog Input / Output (P2)

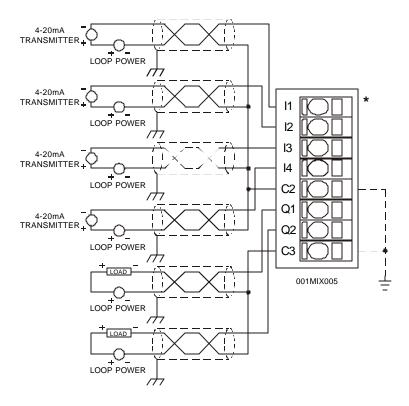





Mini Top View – Shows corresponding I/O pin location

Pin	Analog In and Out
l1	Input 1
l2	Input 2
13	Input 3
<b>I</b> 4	Input 4
C2	Input
	Common
Q1	Output 1
Q2	Output 2
C3	Output
	Common

## **3 INTERNAL CIRCUIT SCHEMATIC**

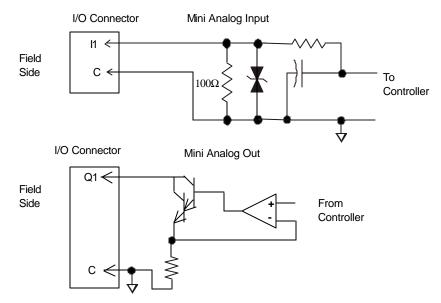

Specification for transient voltage suppressors (transorbs) used on output circuitry is 30V, 300W.

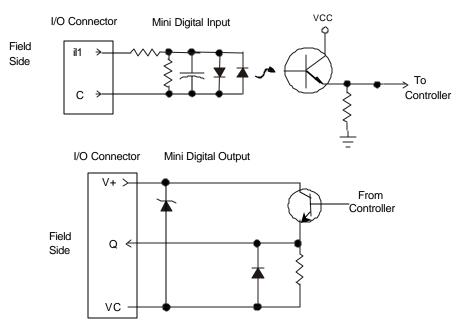

Specification for transient voltage suppressors (transorbs) used on output circuitry is 33V, 300W.

### 4 CONFIGURATION

Note: The status of the I/O can be monitored in Cscape Software.

#### Module Setup Tab

The **Module Setup** is used in applications where it is necessary to change the default states or values of the outputs when the controller (e.g., OCS100) enters idle/stop mode.

**1. For Digital Outputs:** The default turns the outputs OFF when the controller enters idle/stop mode. By selecting the Module Setup tab, each output can be set to either turn ON, turn OFF or to hold the last state. Generally, most applications use the default settings.

**Warning:** The default turns the digital outputs OFF when the controller enters idle/stop mode. To avoid injury of personnel or damages to equipment, exercise extreme caution when changing the default settings.

2. For Analog Outputs: The default sets the output values to zero when the controller enters idle/stop mode. By selecting the Module Setup tab, each output can be set to a specific value or hold the last value. Generally, most applications use the default settings.


**Warning:** The default sets the output values to zero when the controller enters idle/stop mode. To avoid injury of personnel or damages to equipment, exercise extreme caution when changing the default setting using the **Module Setup** tab.

#### 3. For Analog Inputs:

Filter Constant sets the level of digital filtering according to the following chart.

#### I/O Map Tab

The I/O Map describes which I/O registers are assigned. The I/O Map is <u>not</u> edited by the user.

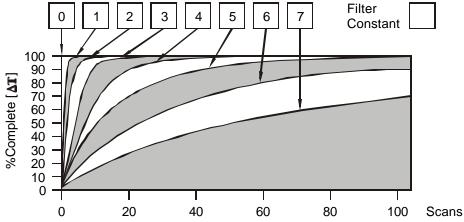

*Digital Filtering*. The illustration above demonstrates the effect of digital filtering (set with Filter Constant) on module response to a temperature change.

## 5 ANALOG INPUT CONVERSION FACTOR

The following table describes how real-world inputs are scaled into the controller. Given a known input current, the data value is configured by using the conversion factor from the table. The following formula is used: **Data = Input Current (mA)** / **Conversion Factor** 

**Example:** The user selects a current range of 0 to +20mA:

- 1. The known input current is 14mA.
- 2. Using the table, the conversion factor for the current range of 0 +20mA is 0.000625.
- 3. To determine the data value, the formula is used:

Data = Input Current (mA) / Conversion Factor 22400 = 14mA / 0.000625

Conversion of Real-World Inputs into Controller				
Selected Current Range	Input Current (mA)	Data	Conversion Factor	
	+20.47	32752		
0 to +20mA	+20.00	32000	0.000625	
	0	0		

## 6 ANALOG CONVERSION OUTPUT FACTOR

The following table describes how program data values are scaled to real-world analog voltage outputs by the module. Given a desired output current, the data value is converted by using the conversion factor from the table. The following formula is used: **Data = Output Current (mA)** / **Conversion Factor** 

**Example:** The user selects a current range of +20mA:


- 1. The desired output current is 12mA.
- 2. Using the table, the conversion factor for the current range of +20 mA is 0.000625.
- To determine the data value, the formula is used: Data = Output Current (mA) / Conversion Factor 19200 = 12mA / 0.000625

Conversion of Real-World Outputs into Controller				
Selected Current Range	Output Current (mA)	Data	Conversion Factor	
	+20.47	32752		
0 to +20mA	+20.00	32000	0.000625	
	0	0		


## 7 DIGITAL INPUT / OUTPUT CHARACTERISTICS

### 7.1 Digital Input


### **Digital Input Chart**



### 7.2 Digital Output

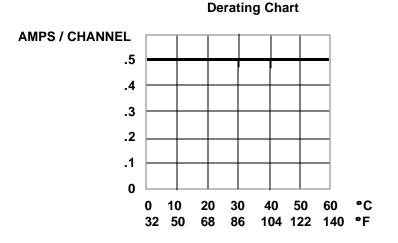



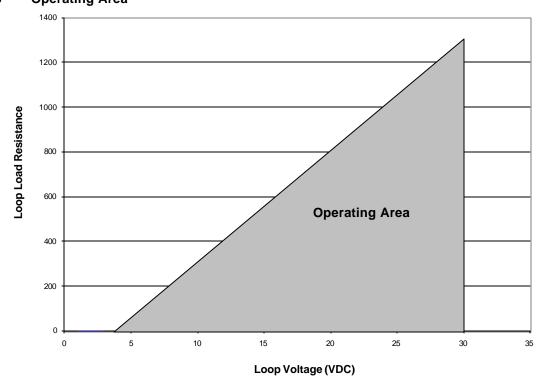

## 7 INSTALLATION / SAFETY

- a. All applicable codes and standards should be followed in the installation of this product.
- b. Shielded, twisted-pair wiring should be used for best performance (Analog I/O).
- c. Shields may be terminated at the module terminal strip.
- d. In severe applications, shields should be tied directly to the ground block within the panel.
- e. Use the following wire type or equivalent: Belden 8917, 16 AWG or larger for digital I/O and Belden 8441 for Analog I/O.

For detailed installation information, refer to Mini Hardware Manual. A <u>handy checklist</u> is provided that covers panel box layout requirements and minimum clearances.

## 8 TECHNICAL ASSISTANCE

For assistance, contact Technical Support at the following locations:

### North America:

(317) 916-4274 www.heapg.com

Europe: (+) 353-21-4321-266 www.horner-apg.com NOTES