XL4 OCS

Datasheet for

HE-XC1E0, HE-XC1E2, HE-XC1E3, HE-XC1E4, HE-XC1E5
HEXT251C100, HEXT251C112, HEXT251C113, HEXT251C114, HEXT251C115

1 Specifications

General Specifications		Control & Logic Specifications		
Required Power (Steady state)	95 mA @ 24 VDC 190 mA @ 12 VDC	Control Language Support	Advanced Ladder Logic Full IEC 1131-3 Languages	
Required Power (Inrush)	2A for <1 ms @ 24 VDC DC Switched	Logic Program Size & Logic Scan Rate	1MB, maximum 0.013mS/K	
Primary Power Range	10 – 30 VDC	Online Programming Changes	Supported in Advanced Ladder	
Relative Humidity	5 to 95% Non-condensing	I/O Support	Digital Inputs	2048
Clock Accuracy	+/- 20 ppm maximum at 25° C (+/- 1 Minutes per Month)		Digital Outputs	2048
			Analog Inputs	512
Operating Temp	-10°C to +60°C		Analog Outputs	512
Storage Temp	-30°C to +70°C	General Purpose Registers	50,000 (words) Retentive	
Weight	12 oz. (340 g)		16,384 (bits) Retentive	
UL / CE	USA: http://www.heapg.com/Pages/TechSupport/ProductCert.html		16,384 (bits) Non-retentive	
	Europe: http://www.horner-apg.com/en/support/certification.aspx			

Display Specifications		Connectivity	
Display Type	3.5” TFT Transmissive Color	Serial Ports	1 RS-232 & 1 RS-485 on single Modular Jack
Resolution	QVGA (320x240)	USB mini-B	USB 2.0 (480MHz) Programming & Data Access
Color	16-bit (65,535)	USB A	USB 2.0 (480MHz) for USB FLASH Drives (2TB)
Screen Memory	64MB	CAN	Remote I/O, Peer-to-Peer Comms, Cscape
User-Programmable Screens	1023	Ethernet	10/100 Mb (Auto-MDX) Modbus TCP C/S, HTTP, FTP, SMTP, Cscape
Backlight	LED – 50,000 hour life	Remote I/O	SmartRail, SmartStix, SmartBlock, SmartMod
Screen Update Rate	User Configurable within the scan time. (perceived as instantaneous in many cases)	Removable Memory	MicroSD, support for >32GB max. Application Updates, Datalogging, more

Input / Output Specifications

Model	DC In	DC Out	Relays	HS In	HS Out	mA/V In	mA/V RTD/Tc	mA/V Out
Model 2	12		6	4		4		
Model 3	12	12		4	2	2		
Model 4	24	16		4	2	2		
Model 5	12	12		4	2		2	2

There are 4 high-speed inputs of the total DC Inputs. There are 2 high-speed outputs of the total DC outputs. Model 2, 3 & 4 feature 12-bit Analog I/O. Model 5 features 14/16-bit Analog I/O. High-speed Outputs can be used for PWM and Pulse Train Outputs, currently limited to <65kHz.

High-Speed Counters	
Number of Counters	2
Maximum Frequency	>500kHz each
Accumulator Size	32-bits each
Modes Supported	
Totalizer	Quadrature
Pulse Meas.	Frequency Meas.
2 Position Controlled Outputs 1 ON/OFF Setpoint per Output	

2 Dimensions & Panel Cutout

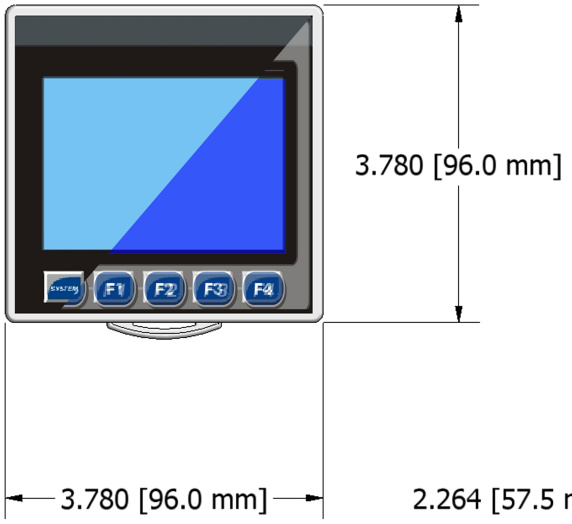

Panel Cutout

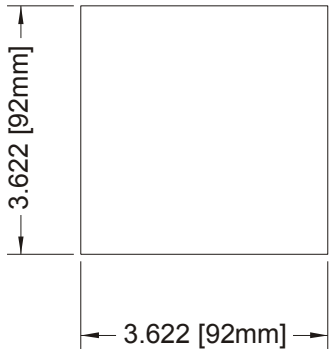

Cutout tolerance to meet NEMA standards is ±0.005” (0.1mm). Max. Panel Thickness is 5mm.

3 Installation Procedures

1. Carefully locate an appropriate place to mount the XL4. Be sure to leave enough room at the top of the unit for insertion and removal of the microSD card. Also leave enough room at the bottom for the insertion and removal of USB FLASH drives

2. Carefully cut the host panel per the diagram on Page 1, creating a 92mm x 92mm ±0.1mm opening into which the XL4 may be installed. If the opening is too large, water may leak into the enclosure, potentially damaging the XL4. If the opening is too small, the OCS may not fit through the hole without damage.

3. Remove all Removable Terminals from the XL4. Insert the XL4 through the panel cutout (from the front). The gasket needs to be between the host panel and the XL4.

4. Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal (max torque 1.5Nm / 13.2Lb-in).

5. Reinstall the XL4 I/O Removable Terminal Blocks. Connect communications cables to the serial port, USB ports, Ethernet port, and CAN port as required.

4 Ports and Connectors

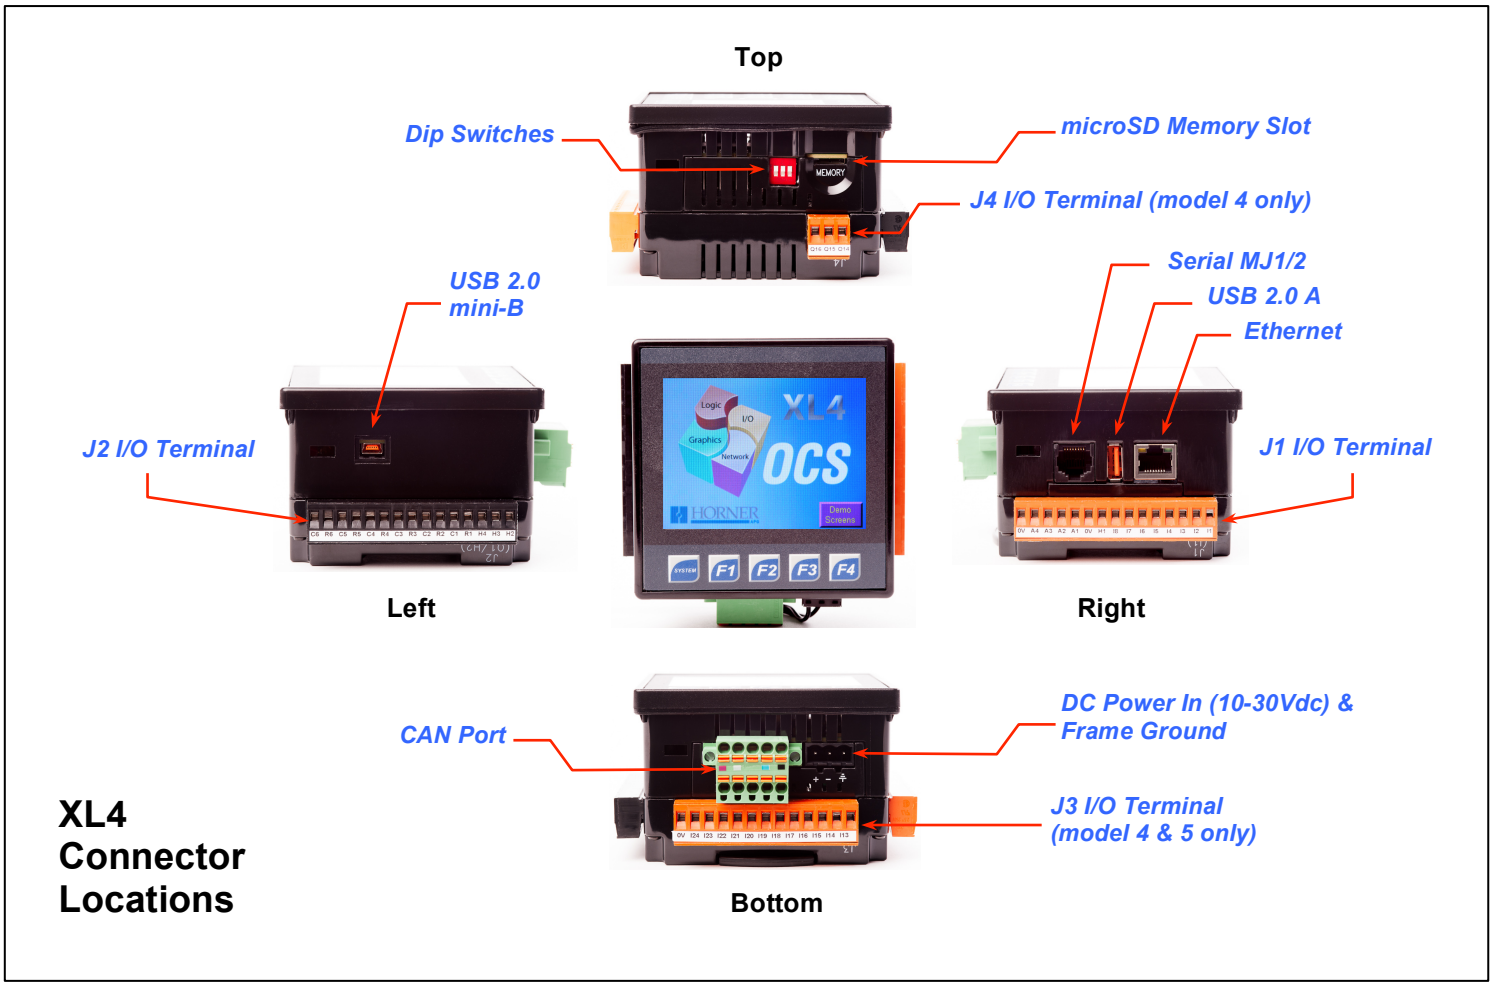

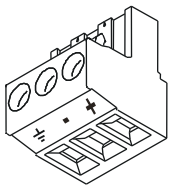

DC Input / Frame

Torque rating
4.5 – 7 Lb-In
(0.50 – 0.78 N-m)

DC- is internally connected to I/O V-, but is isolated from CAN V-

Primary Power Port Pins		
Pin	**Signal**	**Description**
1	Ground	Frame Ground
2	DC-	Input Power Supply Ground
3	DC+	Input Power Supply Voltage

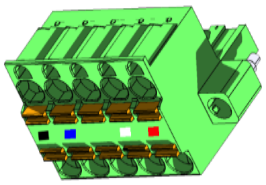

CAN

Locking Spring-Clamp,
Two-terminators
Per Conductor

SHLD and V+ pins are **not** internally connected to XL4

CAN1 Port Pin Assignments			
Pin	**Signal**	**Signal Description**	**Direction**
1	V-	CAN Ground - Black	–
2	CN_L	CAN Data Low - Blue	In/Out
3	SHLD	Shield Ground - None	–
4	CN_H	CAN Data High - White	In/Out
5	V+ (NC)	No Connect - Red	–

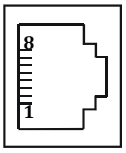

MJ1/2 Serial Ports

MJ1: RS-232 w/Full Handshaking

MJ2: RS-485 Half-Duplex

Two Serial Ports on One Modular Jack (8posn)

Pin	MJ1 Pins		MJ2 Pins	
	Signal	**Direction**	**Signal**	**Direction**
8	TXD	OUT	-	-
7	RXD	IN	-	-
6	0 V	Ground	0 V	Ground
5	+5V@60mA	OUT	+5V@60mA	OUT
4	RTS	OUT	-	-
3	CTS	IN	-	-
2	-	-	RX- / TX-	IN / OUT
1	-	-	RX+ / TX+	IN / OUT

DIP Switches

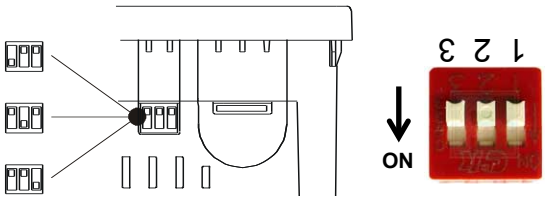

Pin	Name	Function	Default
1	RS-485 Termination	ON = Terminated	OFF
2	Spare	Always Off	OFF
3	Factory Use	Always Off	OFF

5 Safety

WARNING: Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.

WARNING: To avoid the risk of electric shock or burns, always connect the earth ground before making any other connections.

WARNING: To reduce the risk of fire, electrical shock, or physical injury it is strongly recommended to fuse all Power Sources connected to the OCS. Be sure to locate fuses as close to the source as possible.

WARNING: Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.

WARNING: In the event of repeated failure, do not replace the fuse again as a repeated failure indicates a defective condition that will not clear by replacing the fuse.

WARNING: Battery may explode if Mistreated. Do Not Recharge, Disassemble or Dispose Of in Fire injury or loss of life.

WARNING: EXPLOSION HAZARD – BATTERIES MUST ONLY BE CHANGED IN AN AREA KNOWN TO BE NON-HAZARDOUS

6 Built-in I/O (Model 2, 3, 4 & 5)

All XL4 models (except the HE-XCE0) feature built-in I/O. The I/O is mapped into OCS Register space, in three separate areas – Digital/Analog I/O, High-Speed Counter I/O, and High-speed Output I/O. Digital/Analog I/O location is fixed starting at 1, but the High-speed Counter and High-speed Output references may be mapped to any open register location. For more details on using the High-Speed Counter and High-Speed Outputs, see the ***XL4 High-Speed I/O Supplement***.

Fixed Address	Digital/Analog I/O Function	XL4 Model			
		2	3	4	5
%I1	Digital Inputs	1-12	1-12	1-24	1-12
	Reserved	13-32	13-31	25-31	13-31
	ESCP Alarm	n/a	32	32	32
%Q1	Digital Outputs	1-6	1-12	1-16	1-12
	Reserved	7-24	13-24	17-24	13-24
%AI1	Analog Inputs	1-4	1-2	1-2	1-2
	Reserved	5-12	3-12	3-12	3-12
%AQ1	Reserved	n/a	1-8	1-8	1-8
	Analog Outputs	n/a	n/a	n/a	9-10
Reserved areas maintain backward compatibility with other XL Series OCS models					

Default Address*	High-Speed Counter Function	XL4 Models 2-5
%I1601	Status Bits	1-8
%Q1601	Command Bits	1-32
%AI0401	Accumulator 1 & 2	1-8
%AQ0401	Preload & Match Values	1-12
*Starting Address locations for %I, %Q, %AI & %AQ may be re-mapped by user		

Default Address*	High-Speed Output Function	XL4 Models 2-5
%I1617	Status Bits	1-8
%Q1**	Command Bits	1-2
n/a	n/a	n/a
%AQ421	PWM or Pulse-Train Parameters	1-20
*Starting Address locations for %I & %AQ may be remapped by user		
**Q1-Q2 are part of the Fixed I/O Map. In High-Speed Output mode they can be used to initiate a Stepper/PTO Move		

Model 2 I/O

The XL4 model 2 (HE-XC1E2) features 12 DC Inputs, 6 Relay outputs, and 4 Analog Inputs. The DC Inputs are 12/24Vdc compatible, and can be jumpered for Positive Logic (sinking), or Negative Logic (sourcing). Four of the inputs (H1-H4) can be used for high-speed functions up to 500kHz. The 12-bit Analog Inputs can be jumpered for voltage (0-10V) or current (4-20mA) on a channel by channel basis. The Relay outputs are isolated, supporting AC and DC voltages, with output currents of up to 3A/relay, 5A total.

J1 (Orange)	Name
I1	IN1
I2	IN2
I3	IN3
I4	IN4
I5	IN5
I6	IN6
I7	IN7
I8	IN8
H1	HSC1 / N9
0V	Common
A1	Analog IN1
A2	Analog IN2
A3	Analog IN3
A4	Analog IN4
0V	Common

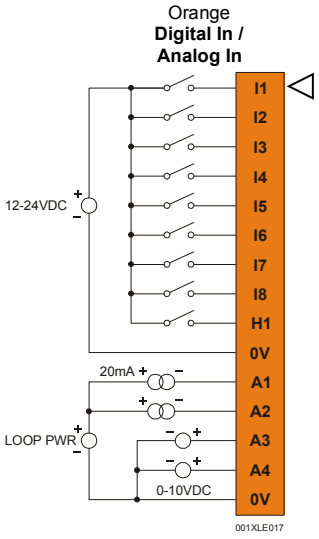

J2 (Black)	Name
C6	Relay 6 COM
R6	Relay 6 NO
C5	Relay 5 COM
R5	Relay 5 NO
C4	Relay 4 COM
R4	Relay 4 NO
C3	Relay 3 COM
R3	Relay 3 NO
C2	Relay 2 COM
R2	Relay 2 NO
C1	Relay 1 COM
R1	Relay 1 NO
H4	HSC4 / IN12
H3	HSC3 / IN11
H2	HSC2 / IN10

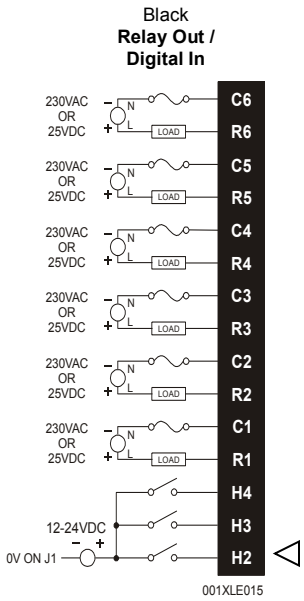

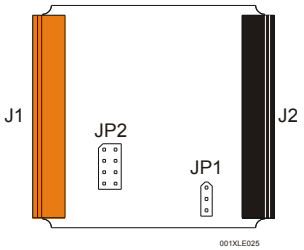

Location of I/O jumpers (**JP1 & JP2**) and wiring connectors **(J1 and J2)** with back cover removed.

Model 2 Jumper Setting Details

JP1 Digital DC In / HSC

Positive Logic | Negative Logic



Default 001XLE026

JP2 Analog In (A1 – A4)

Current (20 mA) | Voltage (10 V)



Default 001XLE027

Note: The Cscape Module Setup configuration must match the selected I/O (JP) jumper settings.

Note: When using JP2 (A1-A4), each channel can be independently configured.

Relay Life Expectancy

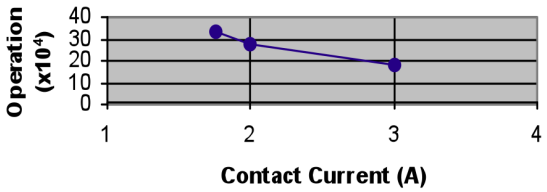

"**WARNING**: EXPOSURE TO SOME CHEMICALS MAY DEGRADE THE SEALING PROPERTIES OF MATERIALS USED IN THE Tyco relay PCJ

Cover / case & base: Mitsubishi engineering Plastics Corp.
5010GN6-30 or 5010GN6-30 M8 (PBT)
Sealing Material: Kishimoto 4616-50K (I part epoxy resin)

It is recommended to periodically inspect the relay for any degradation of properties and replace if degradation is found

Model 3 & Model 4 I/O

The XL4 model 3 (HE-XC1E3) features 12 DC Inputs, 12 DC outputs, and 2 Analog Inputs. The XL4 model 4 (HE-XC1E4) increases the I/O count up to 24 DC Inputs, and 16 DC Outputs and 2 Analog Inputs. The DC Inputs are 12/24Vdc compatible, and can be jumpered for Positive Logic (sinking), or Negative Logic (sourcing). Four of the inputs (H1-H4) can be used for high-speed functions up to 500kHz. The 12-bit Analog Inputs can be jumpered for voltage (0-10V) or current (4-20mA) on a channel by channel basis. The 12/24VDC Outputs feature Electronic Short Circuit protection, and support currents up to 0.5A per point, and 4A total. Two of the DC Outputs can be used for high speed functions (PWM or PTO). The output frequency is limited by the switching capability of the output drivers (about 10kHz), although an optional accessory (HE-XHSQ) can be added to provide parallel output drivers supporting frequencies up to 200kHz.

J1 (Orange)	Model 3 & 4 Signal Name
I1	IN1
I2	IN2
I3	IN3
I4	IN4
I5	IN5
I6	IN6
I7	IN7
I8	IN8
H1	HSC1 / IN9
H2	HSC2 / IN10
H3	HSC3 / IN11
H4	HSC4 / IN12
A1	Analog IN1
A2	Analog IN2
0V	Common

J1 Orange
Positive Logic
Digital & Analog In

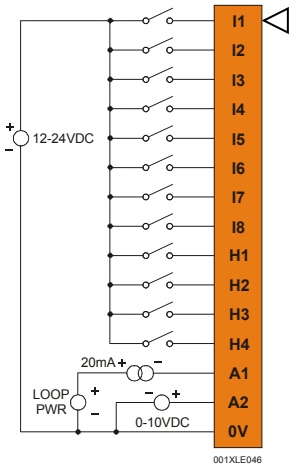

J3 (Orange)	Model 4 only Signal Name
I13	IN13
I14	IN14
I15	IN15
I16	IN16
I17	IN17
I18	IN18
I19	IN19
I20	IN20
I21	IN21
I22	IN22
I23	IN23
I24	IN24
0V	Common

J3 Orange
Positive Logic
Digital In

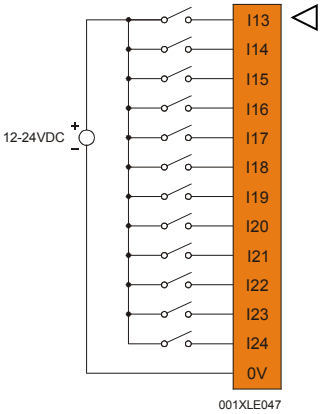

J2 (Black)	Model 3 Name	Model 4 Name
0V	Common	
V+	V+ *	
NC	No Connect	OUT13
Q12	OUT12	
Q11	OUT11	
Q10	OUT10	
Q9	OUT9	
Q8	OUT8	
Q7	OUT7	
Q6	OUT6	
Q5	OUT5	
Q4	OUT4	
Q3	OUT3	
Q2	OUT2 / PWM2	
Q1	OUT1 / PWM1	
*V+ Supply for Sourcing Outputs		

J2 Black
Positive Logic
Digital Out

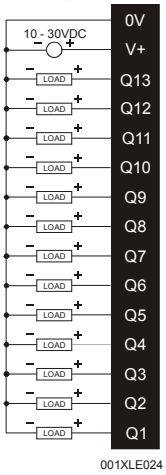

Jumper Setting Details

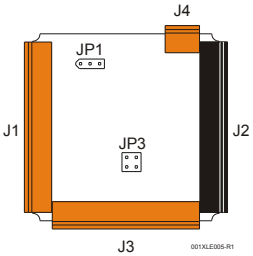

Location of I/O jumpers (**JP1 & JP3**) and wiring connectors **(J1, J2, J3 & J4)** with back cover removed.

JP1 Digital DC Inputs



JP3 Analog Inputs

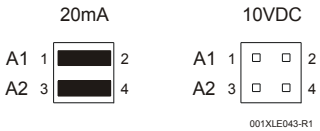

Note: The Cscape Module Setup configuration must match the selected I/O (JP) jumper settings.

Note: When using JP3 (A1-A2), each channel can be independently configured.

J4 (Orange)	Model 4 Name
Q16	OUT16
Q15	OUT15
Q14	OUT14

J4 Orange
Positive Logic
Digital Out

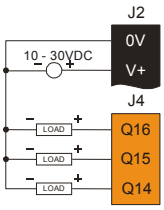

Note:
Model 3 uses J1 & and J2 only.

Model 4 uses J1, J2, J3 & J4.

Model 5 I/O

The XL4 model 5 (HE-XC1E5) features 12 DC Inputs, 12 DC outputs, with high performance, highly configurable Analog Inputs (2) and Analog Outputs (2). , The DC Inputs are 12/24Vdc compatible, and can be jumpered for Positive Logic (sinking), or Negative Logic (sourcing). Four of the inputs (H1-H4) can be used for high-speed functions up to 500kHz. The 12/24VDC Outputs feature Electronic Short Circuit protection, and support currents up to 0.5A per point, and 4A total. Two of the DC Outputs can be used for high speed functions (PWM or PTO). The output frequency is limited by the switching capability of the output drivers (about 10kHz), although an optional accessory (HE-XHSQ) can be added to provide parallel output drivers supporting frequencies up to 200kHz.

The two high resolution Analog Inputs can be configured for 4-20mA, 0-10V, or 0-100mV at 14-bit resolution. They also can be configured for 16-bit temperature measurement – supporting Thermocouples or RTDs with 0.05°C resolution. The Analog Outputs are sourcing, and can be configured for 4-20mA or 0-10V at 14-bit resolution. Each Analog Input or Output channel can be configured independently for maximum flexibility.

J1 (Orange)	Name
I1	IN1
I2	IN2
I3	IN3
I4	IN4
I5	IN5
I6	IN6
I7	IN7
I8	IN8
H1	HSC1 / IN9
H2	HSC2 / IN10
H3	HSC3 / IN11
H4	HSC4 / IN12
NC	No Connect
NC	No Connect
0V	Common

J1 Orange
Positive Logic
Digital Inputs

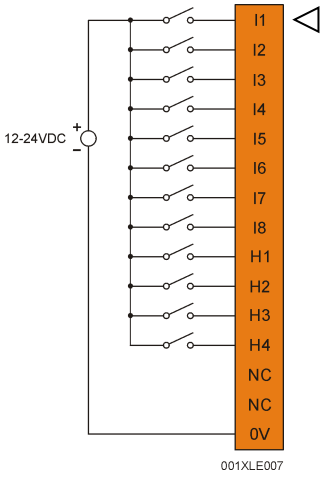

J2 (Black)	Name
0V	Common
V+*	Output Power
NC	No Connect
Q12	OUT12
Q11	OUT11
Q10	OUT10
Q9	OUT9
Q8	OUT8
Q7	OUT7
Q6	OUT6
Q5	OUT5
Q4	OUT4
Q3	OUT3
Q2	OUT2 / PWM2
Q1	OUT1 / PWM1

J2 Black
Positive Logic
Digital Outputs

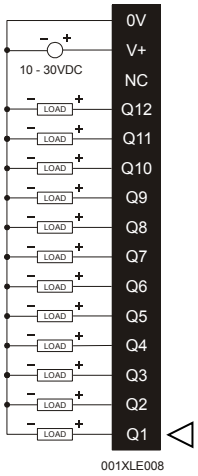

J3 (Orange)	Name
T1+	Tc (1 +) or RTD (1+) or 100mV (1+)
T1-	Tc (1-) or RTD (1-) or 100mV (1-)
T2+	Tc (2+) or RTD (2+) or 100mV (2+)
T2-	Tc (2-) or RTD (2-) or 100mV (2-)
AQ1	10V or 20mA Out (1)
AQ2	10V or 20mA Out (2)
0V	Common
MA1	0-20mA In (1)
V1	0-10V In (1)
0V	Common
MA2	0-20mA In (2)
V2	0-10V In (2)
0V	Common

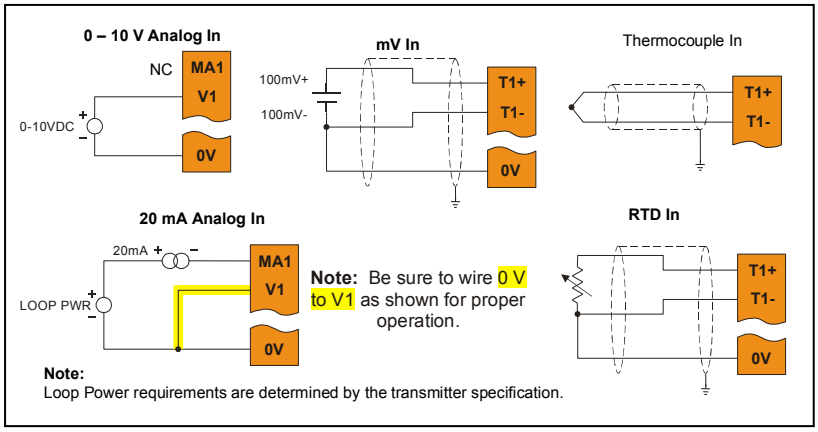

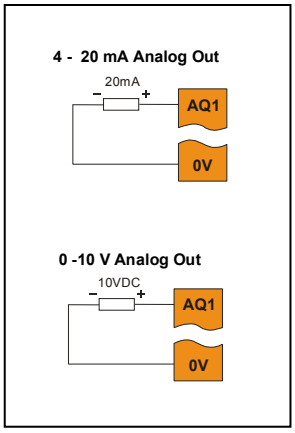

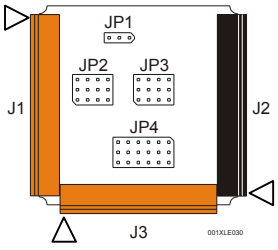

Location of I/O jumpers (**JP1-JP4**) and wiring connectors **(J1-J4)** with back cover removed.

Jumper Setting Details