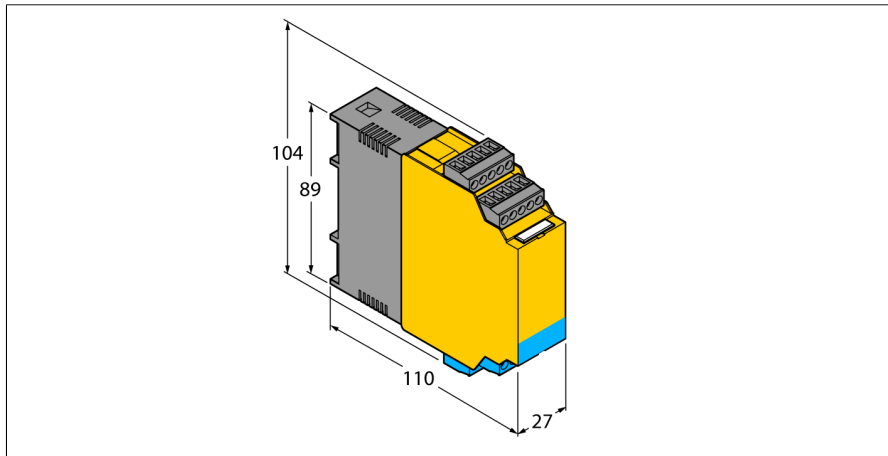


## Flow monitoring

### For the connection of intrinsically safe flow sensors

### HART device with current and transistor outputs

### FMX-IM-2UPLI63X



- Associated equipment [Ex ia Ga / Da]
- Connection of flow probes Zone 0 / 20
- For Ex ia resp. Ex ib sensors
- Analog output for flow
- Transistor outputs for temperature and faults
- Teaching upper and lower flow limit
- LED band for indication of flow speed and media temperature
- Monitoring of operating and display range
- Detection of wire-break and short-circuit on the sensor side
- Parametrized via pushbutton and FDT/DTM

<b>Type designation</b>	FMX-IM-2UPLI63X
Ident-No.	7525105
<b>Operating voltage</b>	20...30 VDC
Short-circuit protection	yes
<b>Input function</b>	Connection of flow sensors
<b>Design</b>	Terminal chamber
Dimensions	110 x 27 x 89 mm
Housing material	Polycarbonate/ABS
Electrical connection	Terminal block
	terminals / housing (IEC 60529 / EN 60529)
Packaging unit	1

#### Functional principle

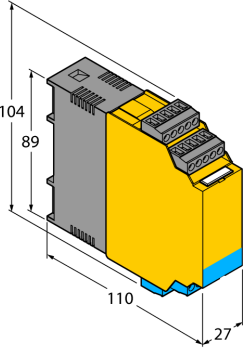
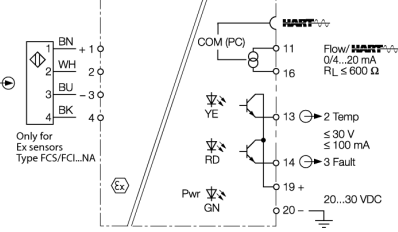
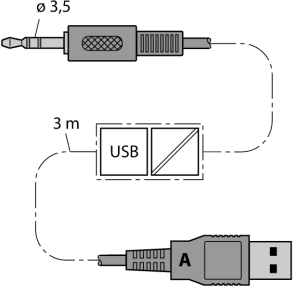

All Ex FCS flow (immersion) and FCI (inline) sensors can be operated with the external processing unit FMX-IM.

The flow module features four status LEDs as well as a 10-segment LED band for local monitoring. Software-based diagnostic options are also available to the user, such as wire-break and short-circuit on the sensor side. Furthermore, monitoring of flow rates and media temperatures within a predefined operating and display range.

The upper and lower limit are determined in relation to the analog output signal and implemented in the Teach mode. Working on the calorimetric principle, the connectible sensors not only detect the flow rate but also the media temperature.

Parametrization is implemented either via pushbutton or software-supported via HART interface and then via the device specific IODD within the FDT frame PACTware or via SPDU.

**Flow monitoring**  
**For the connection of intrinsically safe flow sensors**  
**HART device with current and transistor outputs**  
**FMX-IM-2UPLI63X**

	<p><b>Accessories</b> flow module FMX-IM-2UPLI63X Ident no. 7525105</p>	<p><b>Wiring Diagram</b></p> 
	<p><b>Accessories</b> Optionally available: HART® communication adapter IM-PROG III Connection between FMX-IM-2UPLI63X (PC Port) and HART Ident-no. 7525111</p>	<p><b>Wiring Diagram</b></p> 

**Flow monitoring**  
**For the connection of intrinsically safe flow sensors**  
**HART device with current and transistor outputs**  
**FMX-IM-2UPLI63X**

**LED display**

LED	Color	Status	Description
Pwr	green	on	Operating voltage applied Device ready for operation
		flashing	Operating voltage applied HART communication active
Flow	yellow	on	Active current output
		flashing	Teach mode / display of diagnostic data for specification see manual
Temp	yellow	off	Switching output media temperature [low]
		on	Switching output media temperature [high]
		flashing	Teach mode / display of diagnostic data for specification see manual
Fault	red	off	Switching output fault [high]
		on	Switching output flow [low] (for error pattern in combination with LEDs see manual)

For detailed description of the display patterns and flashing codes see instruction manual FM-IM / FMX-IM (D101880)

## Flow monitoring

### For the connection of intrinsically safe flow sensors

### HART device with current and transistor outputs

### FMX-IM-2UPLI63X

#### Operating manual

#### Intended use

This device fulfills the directive 2014/34/EC and can be applied in explosion hazardous areas according to EN60079-0, EN60079-11 and EN61241-11 as associated equipment for connection to intrinsically safe flow sensors.

In order to ensure correct operation to the intended purpose it is required to observe the national regulations and directives.

#### For use in explosion hazardous areas conform to classification

II (1) G and II (1) D (Group II, Category (1) G, electrical equipment for gas-atmospheres and category (1) D, electrical equipment for dust atmospheres)

#### Marking (see device or technical data sheet)

⊕ II (1) G [Ex ia Ga] IIC T4 acc. to EN60079-11 and EN60079-0/61241-11 and ⊕ II (1) D [Ex ia Da] IIIC

#### Local admissible ambient temperature

-25...+70 °C

#### Installation/Commissioning

These devices may only be installed, connected and operated by trained and qualified staff. Qualified staff must have knowledge of protection classes, directives and regulations concerning electrical equipment designed for use in explosion hazardous areas.

Please verify that the classification and the marking on the device comply with the actual application conditions.

This device is accessory equipment which features intrinsically safe circuits as well as non-intrinsically safe circuits. It may only be installed outside the explosion hazardous area in dry, clean and well monitored areas. If a declaration of conformity or declaration of the manufacturer as a category 3 device exists, the device may be installed in zone 2. Special conditions for safe operation must be observed. Intrinsically-safe electrical equipment can be connected to the intrinsically-safe connections. All equipment must comply with the demands for operation in the existing zone of the explosion hazardous area. If the intrinsically safe circuits lead to the dust explosion hazardous zones 20 or 21, it is important to ensure that the devices connected to this circuit fulfil the demands for category 1D or 2D and are certified accordingly. If the equipment is interconnected, it is necessary to perform the "Proof of intrinsic safety" (EN 60079-14). Equipment which has been used once to connect intrinsically safe circuits to non-intrinsically safe circuits is no longer suitable for subsequent use with intrinsically safe circuits. Relevant regulations exist for the establishment of intrinsically-safe circuits, mounting of external connection parts as well as the characteristics and laying of cables. Cables and terminals with intrinsically-safe circuits must be marked. They should be separated from non-intrinsically safe circuits or must feature appropriate insulation (EN 60079-14). Observe the prescribed clearances to earthed components and connections of other devices to the intrinsically-safe connections of this device. Unless expressed specifically in the device-specific operating instructions, the approval becomes void if the device is opened, repaired or actions are performed on the device by someone other than approved experts or the manufacturer. Visible changes to the device housing, such as brown-black discolourations caused by heat, as well as holes or bulges also indicate a serious danger. Switch off the device immediately. With the associated electrical equipment the interconnected intrinsically-safe equipment must also be checked. Inspection of a device with regard to the explosion protection can only be performed by an expert or the manufacturer. The operation of the devices is only permitted in conjunction with the permitted data printed on the side of the housing. Before any commissioning or modification of the device interconnections, ensure that the respective regulations, directives and conditions have been complied with and also ensure that use is only for the intended purpose and the safety requirements have been fulfilled.

After connection to other circuits the sensor may no longer be used in Exi installations. When interconnected to (associated) electrical equipment, it is required to perform the "Proof of intrinsic safety" (EN60079-14).

#### Installation and mounting instructions

Avoid static charging of cables and plastic devices. Please only clean the device with a damp cloth. Do not install the device in a dust flow and avoid build-up of dust deposits on the device.

If the devices and the cable could be subject to mechanical damage, they must be protected accordingly. They must also be shielded against strong electro-magnetic fields.

The pin configuration and the electrical specifications can be taken from the device marking or the technical data sheet.

In order to avoid contamination of the device, please remove possible blanking plugs of the cable glands or connectors only shortly before inserting the cable or opening the cable socket.

#### Special conditions for safe operation

The device must be protected against any kind of mechanical damage.

#### Service/Maintenance

Repairs are not possible. The approval expires if the device is repaired or modified by a person other than the manufacturer. The most important data from the approval are listed.