



XLE MODEL



XLT MODEL

# XLE & XLT OCS DATASHEET

## MODEL O:

Rev T or Later [Europe: XLE - Rev R or later, XLT - Rev K or Later]  
No Built-In I/O

### 1 TECHNICAL SPECIFICATIONS

**XLEe and XLTe = Ethernet Versions**

#### 1.1 General

Primary Power Range	10-30VDC
Required Power (Steady State)	130mA @ 24VDC
Inrush Current	30A for < 1ms
Typical power backlight 100%	136mA @ 10V (1.36 W) 64mA @ 24V (1.53 W)
Power Backlight Off	15mA @ 24V (0.36 W)
Power Ethernet Models	35mA @ 10V (0.35 W) 20mA @ 24V (0.48 W)
Heater Option	250mA @ 24VDC with heater operating *Heater Option - Model# plus "-22
Real Time Clock	Battery backed; lithium coin cell CR2450
Clock Accuracy	+/- 90 Secs/Month
Relative Humidity	5 to 95% Non-condensing
Operating Temp.	-10°C to +60°C
Storage Temp.	-20°C to +70°C
Weight	0.75 lbs/ 340 g (without I/O)
Altitude	Up to 2000m
Rated Pollution Degree	Evaluated for Pollution Degree 2 Rating
Certifications (UL/CE)	<a href="#">North America</a> <a href="#">Europe</a>

#### 1.2 Control & Logic

Control Lang. Support	Advanced Ladder Logic Full IEC 61131-3 Languages
Logic Program Size	256kB
Scan Rate	0.7ms/kB logic (XLE) 0.8ms/kB logic (XLT)
Digital Inputs	2048
Digital Outputs	2048
Analog Inputs	512
Analog Outputs	512
Gen. Purpose Registers	9,999 (words) Retentive 2,048 (bits) Retentive 2,048 (bits) Non-retentive

#### 1.3 User Interface

Display Type	Transflective LCD Sun-light Readable
Resolution	128 x 64 pixels (XLEe) 160 x 128 pixels (XLTe)
Color	Monochrome
Built-In Storage	16 MB
User-Program. Screens	1023 max pages; 50 objects per page
Backlight	LED
Backlight Lifetime	30,000+ hrs
Brightness Control	0-100% (XLT) On/Off (XLE) via System Register %SR57
Number of Keys	20 (XLE) 5 (XLT)
Touchscreen (XLTe)	Resistive 1,000,000+ touch life

#### 1.4 Connectivity

Serial Ports	RS-232 full handshaking or RS-485 half duplex on first Modular Jack (MJ1) RS-232 or RS-485 on second Modular Jack (MJ2)
USB Mini-B	Programming only
CAN	1x CAN Port, Isolated 1kV
CAN Protocols	CsCAN, CANopen, DeviceNet, J1939
Ethernet	Ethernet versions only
Ethernet Protocols	TCP/IP, Modbus TCP, FTP, SRTP, EGD, ICMP, ASCII
Remote I/O	SmartRail, SmartStix, SmartBlock, SmartMod
Removable Memory	MicroSD, SDHC, SDXC IN FAT32 format, support for 32 GB max. Application Updates, Datalogging, more
Audio (XLTe only)	Beeper, System or Software Controlled

**XLE/XLT User Manual  
[MAN0878]**

The User Manual includes extensive information on:

- Common %S & %SR Registers
- Installation Information
- Resource Limits

## 2 CONTROLLER OVERVIEW





## overview continued...

### 2.1 - Overview of XLE and XLT




1. Function Keys
2. Touchscreen
3. Navigation Keys
4. USB Mini-B Port
5. High Capacity microSD Slot
6. RS232/RS485 Serial Ports (2)
7. Wide-Range DC Power
8. CAN Port
9. Ethernet LAN Port (optional)
10. Optional Built-In I/O
11. Configuration Switches
12. Mounting Clip Locations
13. DIN Rail Clip
14. Softkeys

NOTE: See Precaution #12 on page 4 about USB and grounding.

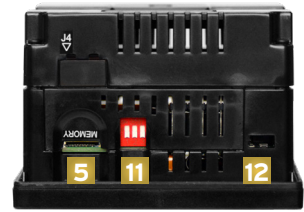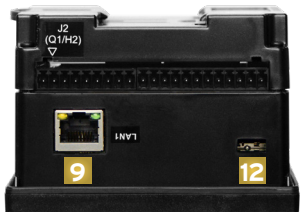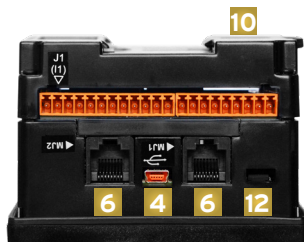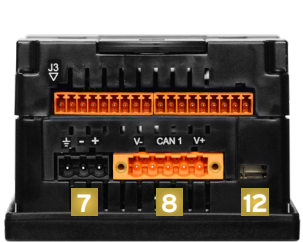

### 2.2 - Power Wiring

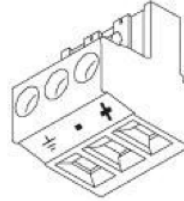

Primary Power Port Pins		
PIN	SIGNAL	DESCRIPTION
1	Ground	Frame Ground
2	DC-	Input Power Supply Ground
3	DC+	Input Power Supply Voltage

#### DC Input / Frame

Solid/Stranded Wire: 12-24 awg (2.5-0.2mm).

Strip length: 0.28" (7mm).

Torque, Terminal Hold-Down Screws: 4.5 - 7 in-lbs (0.50 - 0.78 N-m).

DC- is internally connected to I/O V-, but is isolated from CAN V-.  
A Class 2 power supply must be used.


#### POWER UP

1. OPTION: Attach ferrite core with a minimum of two turns of the DC+ and DC- signals from the DC supply that is powering the controllers.
2. Connect to earth ground.
3. Apply recommended power.



## 3 COMMUNICATIONS


### 3.1 - Serial Communications

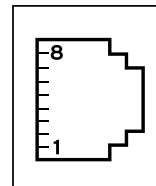

**MJ1:** RS-232 w/full handshaking or RS-485 half-duplex

RS-485 termination via switches; biasing via software

MJ1 PINS		
PIN	SIGNAL	DIRECTION
8	TXD	OUT
7	RXD	IN
6	0V	GROUND
5	+5V @ 60mA	OUT
4	RTS	OUT
3	CTS	IN
2	RX-/TX-	IN/OUT
1	RX+/TX+	IN/OUT

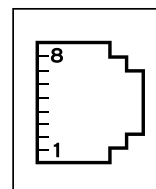

#### MJ2 SERIAL PORT

**MJ2:** RS-232 or RS-485 half or full-duplex, software selectable

RS-485 termination via switches; biasing via software

MJ2 PINS		
PIN	SIGNAL	DIRECTION
8	232 TXD	OUT
7	232 RXD	IN
6	0V	Ground
5	+5V @ 60mA	OUT
4	485 TX-	OUT
3	485 TX+	OUT
2	485 RX- or RX/TX-	IN or IN/OUT
1	485 RX+ or RX/TX+	IN or IN/OUT


Attach optional ferrite core with a minimum of two turns of serial cable. See website for more details. [Part #: HE-FBD001]

communications continued on next page...

communications continued...

4 INSTALLATION DIMENSIONS

3.2 - CAN Communications

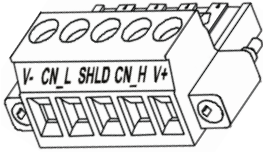


CAN Pin Assignments		
PIN	SIGNAL	DESCRIPTION
1	V-	CAN Ground - Black
2	CN L	CAN Data Low - Blue
3	SHLD	Shield Ground - None
4	CN H	CAN Data High - White
5	V+ (NC)	No Connect - Red

CAN  
 Solid/Stranded wire: 12-24 awg (2.5-0.2mm).  
 Strip Length: 0.28" (7mm).  
 Locking spring-clamp, two-terminators per conductor.  
 Torque, Terminal Hold-Down Screws: 4.5 - 7 in-lbs (0.50 - 0.78 N-m)

V+ pin is not internally connected, the SHLD pin is connected to Earth ground via a 1MΩ resistor and 10 nF capacitor.


3.3 - Dip Switches

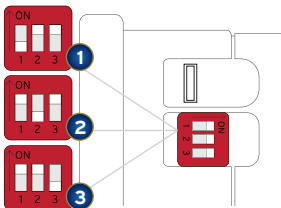

DIP SWITCHES			
PIN	NAME	FUNCTION	DEFAULT
1	MJ1 RS-485 Termination	ON = Terminated	OFF
2	MJ2 RS-485 Termination	ON = Terminated	OFF
3	Bootload	Always Off	OFF

The DIP switches are used to provide a built-in termination to both the MJ1 port and MJ2 port if needed. The termination for these ports should only be used if this device is located at either end of the multidrop/daisy-chained RS-485 network.


3.4 - Ethernet Communications

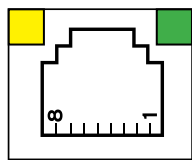

Green LED indicates link - when illuminated, data communication is available.  
 Yellow LED indicates activity - when flashing, data is in transmission.

**Wiring Details:**  
 Solid/Stranded Wire: 12-24 awg (2.5-0.2mm<sup>2</sup>).  
 Strip Length: 0.28" (7mm).  
 Torque, Terminal Hold-Down Screws: 4.5 - 7 in-lbs (0.50 - 0.78 N-m).

4.1 - OCS Dimensions

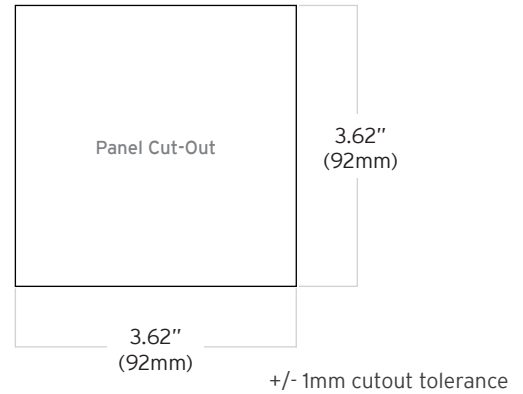

4.2 - Installation Procedure

- The XLE/XLT utilizes a clip installation method to ensure a robust and watertight seal to the enclosure. Please follow the steps below for the proper installation and operation of the unit.
  - This equipment is suitable for Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.
  - Digital outputs shall be supplied from the same source as the operator control station.
  - Jumpers on connector JP1 shall not be removed or replaced while the circuit is live unless the area is known to be free of ignitable concentrations of flammable gases or vapors.
1. Carefully locate an appropriate place to mount the XLE/XLT. Be sure to leave enough room at the top of the unit for insertion and removal of the microSD™ card.
  2. Carefully cut the host panel per the diagram, creating a 92mm x 92mm +/-0.1 mm opening into which the XLE/XLT may be installed. If the opening is too large, water may leak into the enclosure, potentially damaging the unit. If the opening is too small, the OCS may not fit through the hole without damage.
  3. Remove any burrs and or sharp edges and ensure the panel is not warped in the cutting process.
  4. Remove all Removable Terminals from the XLE/XLT. Insert the XLE/XLT through the panel cutout (from the front). The gasket must be between the host panel and the XLE/XLT.
  5. Install and tighten the four mounting clips (provided in the box) until the gasket forms a tight seal (NOTE: Max torque 0.8 to 1.13 Nm, or 7-10 in-lbs).
  6. Reinstall the XLE/XLT I/O Removable Terminal Blocks. Connect communications cables to the serial port, USB ports, Ethernet port, and CAN port as required.

## 5 BATTERY MAINTENANCE

The XLE/XLT uses a replaceable non-rechargeable 3V Lithium coin-cell battery (CR2450) to run the Real-Time Clock and to keep the retained register values. This battery is designed to maintain the clock and memory for 7 to 10 years. Please reference MAN0878 providing instructions on how to replace the battery.

## 6 SAFETY

### 6.1 - WARNINGS

- To avoid the risk of electric shock or burns, always connect the safety (or earth) ground before making any other connections.
- To reduce the risk of fire, electrical shock, or physical injury, it is strongly recommended to fuse the voltage measurement inputs. Be sure to locate fuses as close to the source as possible.
- Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.
- In the event of repeated failure, do NOT replace the fuse again as repeated failure indicates a defective condition that will NOT clear by replacing the fuse.
- Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.
- WARNING** - Battery may explode if mistreated. Do not recharge, disassemble, or dispose of in fire.
- WARNING - EXPLOSION HAZARD** - Batteries must only be changed in an area known to be non-hazardous.

### 6.2 - FCC COMPLIANCE

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference
- This device must accept any interference received, including interference that may cause undesired operation

### 6.3 - PRECAUTIONS

All applicable codes and standards need to be followed in the installation of this product. Adhere to the following safety precautions whenever any type of connection is made to the module:

- Connect the safety (earth) ground on the power connector first before making any other connections.
- When connecting to the electric circuits or pulse-initiating equipment, open their related breakers.
- Do NOT make connection to live power lines.
- Make connections to the module first; then connect to the circuit to be monitored.
- Route power wires in a safe manner in accordance with good practice and local codes.
- Wear proper personal protective equipment including safety glasses and insulated gloves when making connections to power circuits.
- Ensure hands, shoes, and floor are dry before making any connection to a power line.
- Make sure the unit is turned OFF before making connection to terminals.
- Make sure all circuits are de-energized before making connections.
- Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.
- Use copper conductors in Field Wiring only, 60/75°C.
- Use caution when connecting controllers to PCs via serial or USB. PCs, especially laptops, may use "floating power supplies" that are ungrounded. This could cause a damaging voltage potential between the laptop and controller. Ensure the controller and laptop are grounded for maximum protection. Consider using a USB isolator due to voltage potential differences as a preventative measure.

## 7 ACCESSORIES

### 7.1 Backup Battery: HE-BAT009

The XLE and XLT use a lithium battery [CR2450] to run the Real-Time Clock and to maintain the retained register values. This battery is designed to maintain the clock and memory for 7-10 years.

### 7.2 Programming Cables Kit: HE-XCK

This programming cable kit includes the following adapter cables:

- USB to MiniUSB
- USB to RS-232 Serial
- RS-232 Serial to RJ45 Ethernet

Visit the Horner Website to purchase accessories.

## 8 PART NUMBER BUILDER

### GLOBAL MODEL NUMBERS

	screen	Ethernet	I/O
HE-XL	<input type="text"/>	1 <input type="text"/>	<input type="text"/>
	E (no touchscreen) T (touchscreen)	0 (no Ethernet) E (Ethernet)	0 (model 0) 2 (model 2) 3 (model 3) 4 (model 4) 5 (model 5) 6 (model 6)

### EUROPEAN MODEL NUMBERS

	screen	Ethernet	CAN option	I/O	overlay type
HEX	<input type="text"/>	<input type="text"/>	C <input type="text"/>	<input type="text"/>	- <input type="text"/>
	E22 (no touchscreen) T24 (touchscreen)	0 (no Ethernet) 1 (Ethernet)	0 (no CAN*) 1 (CsCAN) 2 (CANopen) 4 (DeviceNet) 5 (J1939)	00 (model 0) 12 (model 2) 13 (model 3) 14 (model 4) 15 (model 5) 16 (model 6)	00 (dark colour) 01 (light colour) 02 (blank) 03-99 (custom)

\*No CAN is only available on XLE

## 9 TECHNICAL SUPPORT

For assistance and manual updates, contact Technical Support at the following locations:

#### North America

+1 (317) 916-4274  
(877) 665-5666  
[www.hornerautomation.com](http://www.hornerautomation.com)  
techsppt@heapg.com

#### Europe

+353 (21) 4321-266  
[www.hornerautomation.eu](http://www.hornerautomation.eu)  
technical.support@horner-apg.com