




**OCS  
HEXDQA  
4 Channel AC Output Adapter for  
Positive Logic PLC DC Outputs**

**Want More Information?**  
To download the XLE User Manual (MAN0805), refer to *Technical Support* in this document.

**SPECIFICATIONS**

HEXDQA Specifications	
Channels per Module	4
Isolated Commons	1
Nominal Load Voltage	120 / 240 VAC
Maximum Load Voltage	275 VAC
Nominal DC Input Impedance	1K OHMS
Nominal AC Frequency	60 Hz
ON Input Level	18VDC Min.
OFF Input Level	6VDC Max.
Maximum DC input Range	-0.3 to +30 VDC
AC Isolation to PLC Common	1500 VDC
Maximum ON Load Current	2A AC
See derating chart.	
Maximum OFF Leakage Current at 120 VAC	1.0 mA AC
ON Response Time Excluding PLC Scan Time	9 ms Max
OFF Response Time Excluding PLC Scan Time	9 ms Max
Status Indication	4 LEDs
DC Input Type	Positive Logic, Sinking
General Specifications	
Steady State Power, Inputs ON	100 mA @ 24 VDC
Peak Supply Current	N/A
Operating Power Range	N/A
Safe Applied Power Range	N/A
Relative Humidity	5 to 95% Non-condensing
Operating Temperature	0° to 50° Celsius
Terminal Type	Screw Type, 5 mm Removable
Weight	TBD
CE	See Compliance Table at <a href="http://www.heapg.com/Support/compliance.htm">http://www.heapg.com/Support/compliance.htm</a>
UL	

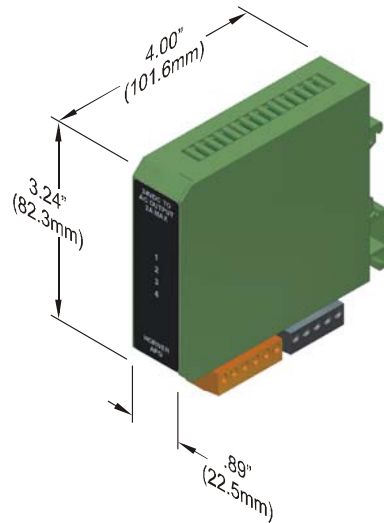

**6 Safety**

When found on the product, the following symbols specify:



**Warning:** Electrical Shock Hazard.



**Warning:** Consult user documentation.

**WARNING:** To avoid the risk of electric shock or burns, always connect the safety (or earth) ground before making any other connections.

**WARNING:** To reduce the risk of fire, electrical shock, or physical injury it is strongly recommended to fuse the voltage measurement inputs. Be sure to locate fuses as close to the source as possible.

**WARNING:** Replace fuse with the same type and rating to provide protection against risk of fire and shock hazards.

**WARNING:** In the event of repeated failure, do not replace the fuse again as a repeated failure indicates a defective condition that will not clear by replacing the fuse.

**WARNING:** Only qualified electrical personnel familiar with the construction and operation of this equipment and the hazards involved should install, adjust, operate, or service this equipment. Read and understand this manual and other applicable manuals in their entirety before proceeding. Failure to observe this precaution could result in severe bodily injury or loss of life.

**7 Technical Support**

For assistance and manual updates, contact Technical Support at the following locations:

**North America:**  
(317) 916-4274  
[www.heapg.com](http://www.heapg.com)  
email: [techsppt@heapg.com](mailto:techsppt@heapg.com)

**Europe:**  
(+) 353-21-4321-266  
[www.horner-apg.com](http://www.horner-apg.com)  
email: [techsupport@homerirl.ie](mailto:techsupport@homerirl.ie)

- All applicable codes and standards need to be followed in the installation of this product.
- Adhere to the following safety precautions whenever any type of connection is made to the module:
  - Connect the safety (earth) ground on the power connector first before making any other connections.
  - When connecting to electric circuits or pulse-initiating equipment, open their related breakers.
  - Do not make connections to live power lines.
  - Make connections to the module first; then connect to the circuit to be monitored.
  - Route power wires in a safe manner in accordance with good practice and local codes.
  - Wear proper personal protective equipment including safety glasses and insulated gloves when making connections to power circuits.
  - Ensure hands, shoes, and floor are dry before making any connection to a power line.
  - Make sure the unit is turned OFF before making connection to terminals.
  - Make sure all circuits are de-energized before making connections.
- Before each use, inspect all cables for breaks or cracks in the insulation. Replace immediately if defective.

CONNECTOR WIRING	
ORANGE CONNECTOR P1	
PIN	DESCRIPTION
In1	DC Input 1
In2	DC Input 2
In3	DC Input 3
In4	DC Input 4
COM	PLC COMMON
COM	PLC COMMON
BLACK CONNECTOR P2	
PIN	DESCRIPTION
Q1	AC OUTPUT 1
Q2	AC OUTPUT 2
Q3	AC OUTPUT 3
Q4	AC OUTPUT 4
L1	ISOLATED AC COMMON

**Thermal Derating**

