

OCS-I/O - CSCAN COMMUNICATION BASE

HE959CNX116 - DATASHEET

2 Flexible Inputs (Digital/Analog), 2 Digital Outputs, 1 Universal Analog Input, 1 Analog Output

1 TECHNICAL SPECIFICATIONS

1.1 General Specifications

| | |
|---|---|
| Required Power (Steady State) | 630mA @24VDC (<15W @ 24V) |
| Required Power (Inrush) | 24A @ 30 μS |
| Primary Power Range | 10-30VDC |
| Flex Inputs (Digital or Analog) | 2 |
| Digital Outputs per Module | 2 |
| Analog Inputs | 1 |
| Analog Outputs | 1 |
| Relative Humidity | 5-95% non-condensing |
| Port Wiring (Analog Inputs and Digital I/O) | 16-24 AWG / 0.2-1.4mm ² |
| Operating Air Temp | -40°C (-40°F) to 60°C (140°F) |
| Storage Temp | -40°C (-40°F) to 85°C (185°F) |
| Weight | 87g (3.05 oz) |
| Dimensions | 76.5mm x 124.5mm x 19mm 3" x 4.9" x 0.75" |
| Certifications (UL/CE) | North America: https://hornerautomation.com/certifications/ Europe: https://www.hornerautomation.eu/support/certifications-2/ |

1.2 Connectivity

| | |
|---------------|--------------------|
| CAN Protocols | CsCAN - IN and OUT |
|---------------|--------------------|

1.3 Universal Analog Inputs

| | |
|---|----------------------------------|
| Number of Channels | 1 |
| Input Ranges | 0-10V / 0-20mA / 4-20mA / 0-60mV |
| 0-10V / 0-20mA / 4-20mA / 0-60mV | 16 Bit |
| Max Error Excluding Zero (% Full scale) | 0.20% (0.5% for RTD only) |
| Thermocouple | J / K / T / N / E / R / S / B |
| Converter Type | 16-Bit ADC |
| RTD & Thermocouples | PT100 / PT1000 |



Max of 7 Modules per base

1.4 Digital Outputs

| | |
|-----------------------------------|------------------------------|
| Inputs per Module | 2 |
| Commons per Module | 1 |
| Output Type | Sourcing with 10kΩ pull down |
| Absolute Max Voltage | 28VDC |
| Output Protection | Short Circuit |
| Max Output per Point | 2A |
| Max. Total Out Current | 4A |
| Max. Output Supply Voltage | 30VDC |
| Min. Output Supply Voltage | 10VDC |
| Max Voltage Drop at rated Current | 550mV |
| Min Load | 1mA |
| OFF to ON Response | 1ms |
| ON to OFF Response | 1ms |
| I/O Indication | Status LED per Output |

technical specifications continued....

1.5 Flexible Inputs - Digital / Analog

| | |
|---|--|
| Number of Channels | 2 (Digital or Analog) |
| Configured as Analog I/O | |
| Analog Input Ranges | 4-20mA / 0-10V |
| Analog Input Data Ranges | 0~4000 / -2000~2000 / 0~1000 / 0~32000 |
| Alarm | Value / Register |
| Configured to Digital Inputs | |
| Digital Input Ranges | 24V / 12V / 5V / Custom |
| Input Voltage Range | 0 - 24VDC |
| Absolute Max Voltage | +/- 30VDC |
| Input Impedance | 10kΩ |
| Custom Digital Input Ranges | Threshold ON |
| | Threshold OFF |
| OFF to ON Response | 1ms |
| ON to OFF Response | 1ms |
| Digital Input Active Mode | Positive / Negative Logic |
| Connector Type | Phoenix Contact 2202234 |
| Max Error Excluding Zero (% Full Scale) | 0.20% |

1.6 Analog Outputs

| | |
|---|--|
| Number of Channels | 1 |
| Analog Outputs | 0-20mA / 4-20mA / 0-10V |
| Analog Output Data Ranges | 0~4000 / -2000~2000 / 0~1000 / 0~2000/ 0~32000 |
| Nominal Resolution | 12 Bit |
| Minimum 10V Load | 500Ω |
| Maximum Current Load | 500Ω |
| Analog Output Halt State | Current / Minimum / Maximum / Median |
| Max Error Excluding Zero (% Full Scale) | 0.20% |

2 CAN TABLE

| CAN Pin Assignments | | |
|---------------------|-----------------|----------------|
| PIN | SIGNAL | DESCRIPTION |
| 1 | CAN_H | CAN Data High |
| 2 | CAN_L | CAN Data Low |
| 3 | GND | Ground |
| 4 | Reserved | Do Not Connect |
| 5 | Reserved | Do Not Connect |
| 6 | CAN_SHLD | Shield |
| 7 | GND | Ground |
| 8 | VIN Passthrough | Do Not Connect |

3 WIRING

The OCS-I/O HE959CNX16 Base should be powered independently from the power supplied to the OCS-I/O modules themselves. This offers optimum noise immunity and helps maintain galvanic isolation between the CsCAN Network and I/O Power. The recommended approach is to power the CsCAN network from one power supply, and I/O devices from at least one separate power supply. The OCSIO bases are powered from the CsCAN Network. Horner OCS controllers do not supply 24VDC to the V+ connection of the CsCAN network.

To power the HE959CNX16, use bottom six pin connector.

For network wiring, the recommended approach is to daisy-chain each node, with a continuous connection for shield. The center pin of the CAN port does not provide a connection to earth ground. The cable shield should be connected to earth ground at one location only - usually at the DC supply powering the network. The network DC supply should have its V- terminal connected directly to earth ground.

If multiple DC supplies are used to power the network, the V+ from any one supply should be connected only to nodes it is powering - disconnected from other sections powered by other supplies. The V- connection should be continuous across the entire network, although V- should connect to earth at exactly one point only.

At each end of the network, a 121Ω, 1/4W, 1% resistor should be used for termination - installed between the CAN_H and CAN_L terminals. Only appropriate Thin (for <100m) or Thick (<500m) cabling should be used (assuming 125 Kbaud) available from a variety of sources.

 Digital Inputs and Outputs must be connected to the same voltage level (e.g. 24VDC)

Use 75°C copper conductors only.


Onboard Wiring



LED Indicators
See page 6

CAN Port - IN
CAN Port - OUT

Onboard I/O



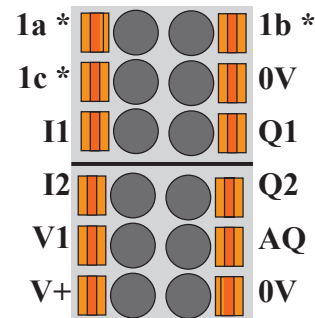


***WARNING:** Do not put voltage on 1a and no more than 12V on 1b or 1c ports. Doing so will damage the board.




| SIGNAL | LABEL | DESCRIPTION | SIGNAL | LABEL | DESCRIPTION |
|--------|-------|-----------------------------|--------|-------|----------------------------|
| AI1a | 1a | Universal Analog Input "a" | AI1b | 1b | Universal Analog Input "b" |
| AI1c | 1c | Universal Analog Input "c" | GND | 0V | Digital and Analog Ground |
| I1 | I1 | Digital / Analog Input 1 | Q1 | Q1 | Digital Output 1 |
| I2 | I2 | Digital / Analog Input 2 | Q2 | Q2 | Digital Output 2 |
| VEXT | V1 | V+ Input for Digital Output | AQ1 | AQ | Analog Output |
| 24V | V+ | V+ Input for Power | GND | 0V | Digital and Analog Ground |

wiring continued...

Universal Analog Input

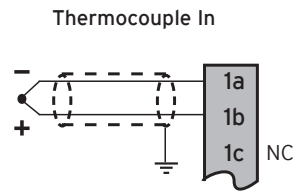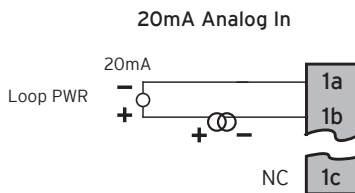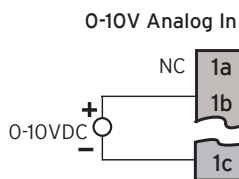


WARNING: Do not put any voltage on the A1A port. Doing so will damage the board.

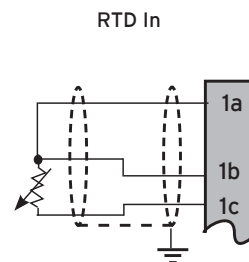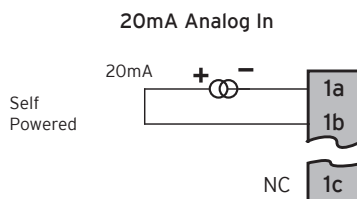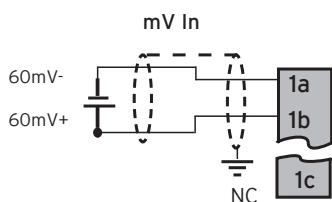


Analog Output

0 - 10V Analog Out

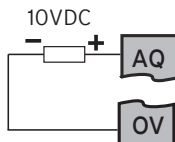






4 - 20 mA Analog Out

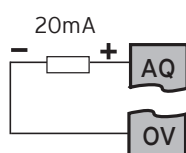


Digital / Analog In

Positive Logic vs. Negative Logic Wiring

The OCS can be wired for positive or negative logic inputs.

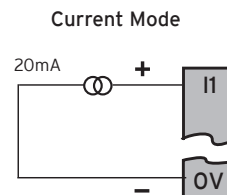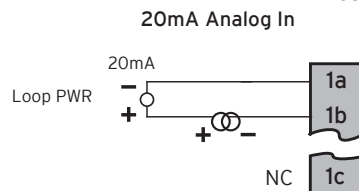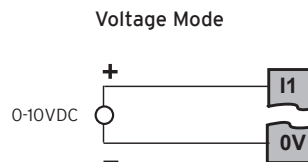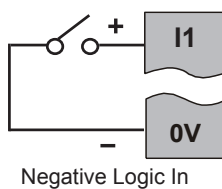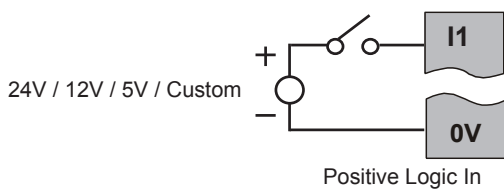

Digital Out

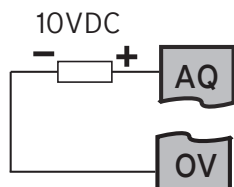


4 CSPACE CONFIGURATION

The HE959CNX116 Base is configured from Cspace, under "Hardware Configuration". Cspace 9.9 (SP8 or later) is required. OCS firmware must be updated to support OCS-I/O. Please check the release notes on your OCS model to ensure OCS-I/O support is included.

General configuration procedure:


1. In Cspace, select Controller > Hardware Configuration.
2. Make sure the OCS controller to be used in the application has been properly selected.
3. Select the "CsCAN I/O" Tab.
4. Click the "Add" Button
5. Select "HE959CNX116" in the OCS-I/O tab
6. Click the "OK" button. This opens the following dialog:

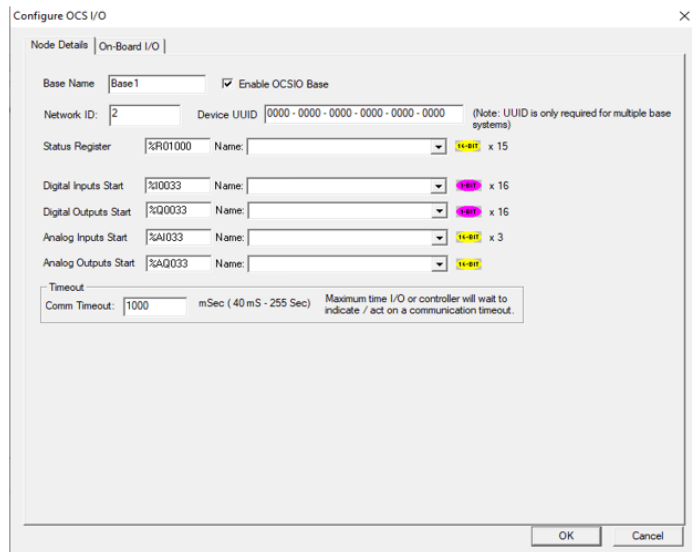

data from the host controller will get transmitted to OCSIO. If the option is unchecked Input /Output data will NOT get transmitted to OCSIO but communication between the Host controller and OCSIO will be healthy

- **Network ID** - unique CsCAN ID (1-79 decimal)
- **Device UUID** - Each OCSIO base requires a Unique ID to establish communication with the host controller. In case of Single Base OCSIO entering UUID is not required, host controller can automatically assign that. In case of Multiple base configurations, it is Mandatory to enter UUID of each base.
- **Status Register** - Location where fifteen consecutive words are reported
- **Digital Inputs / Digital Outputs / Analog Inputs / Analog Outputs Start** - starting locations for each type of I/O for this base. Be careful to choose starting addresses that do not conflict with OCS built-in I/O mapping.
- **Comm Timeout** - Maximum amount of time the HE959CNX116 will wait to act on a communications timeout (40 to 255000ms)

7. After entering all the required information (above), click "OK". At this point, the following Hardware Configuration dialog will appear:

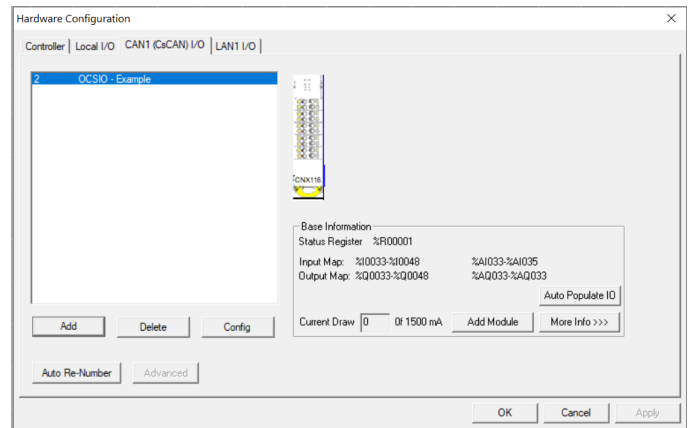

8. Now modules can be added via the "Add Module" button. As I/O modules are added the Input Map, Output Map, and Current Draw are updated, showing the accumulated I/O Module Information. More details regarding each module can be viewed via the "More Info" button.

9. If the OCS-I/O base and I/O modules are properly connected and powered up, and if Cspace currently has communications to the OCS, the "Auto Populate IO" button may be used to recognize all modules installed on this OCS-I/O base.

10. Right clicking on an I/O module will allow detailed configuration to be performed, as follows:
 - a. Digital Input modules can be configured to update on a change of state (typical) or periodically (rare). Input filtering can also be adjusted from the default of 1mS.
 - b. Digital Output modules can optionally be configured to hold last state in Stop/Idle mode.
 - c. Analog Input modules can be configured with an update rate of 10mS to 255 seconds. Analog Inputs also have configurable data type and range which varies by module type.
 - d. Analog Output modules have configurable type and range, and also can have Stop/Idle behavior adjusted to Hold Last State, or go to Minimum (default), Medium or Maximum value.
11. Press "OK" to complete the process.

5 STATUS REGISTERS

| Register | 16 | 15 | 14 | 13 | 12 | 11 | 10 | 9 | 8 | 7 | 6 | 5 | 4 | 3 | 2 | 1 |
|----------|-----------------------------|----|----|----|----|----|----|--------|-------------|------|--------|--------|--------|--------|---------|-----|
| 1 | IOE | | | | | | | | CME | | | | | | | |
| 2 | IOCS | | | | | | | | WDG TRIP | | | | | | | |
| 3 | Reserved | | | | | | | NO_CFG | LIFE ERROR* | ALME | ALM1** | ALMO** | DI2 US | DI1 US | OFFLINE | PUP |
| 4 | IO Base Net ID | | | | | | | | | | | | | | | |
| 5 | IO Base Type | | | | | | | | | | | | | | | |
| 6 | IO Base Scan Rate | | | | | | | | | | | | | | | |
| 7 | IO Base Watchdog Trip Count | | | | | | | | | | | | | | | |
| 8 to 15 | Firmware Version | | | | | | | | | | | | | | | |

CME- Each bit (bit1-bit8) represents configuration mismatch error of each IO Modules (Module 1 to Module 8)

IOE - Each bit (bit9 - bit 16) represents IO modules error (Module 1 to Module 8)

WDG TRIP - IO base watchdog trip count

IOCS- Each bit (bit9 - bit 16) represents IO modules calibration status (Module 1 to Module 8)

PUP - Power up error (sticky bit)

OFFLINE - OCSIO is offline

DI1 US - High when Digital input 1 is in undefined state

DI2 US - High when Digital input 2 is in undefined state

e.g: If 24V input range is selected then DI1 US bit set if voltage is between 8V to 16V.

ALME- Alarm Error

ALM1 - Alarm bit** See table below

ALMO - Alarm Bit** See table below

LIFE ERROR* - Sticky bits must be reset by the user or program to re-arm those notifications.

NO_CFG - OCSIO configuration status

| ALE | ALM1 | ALMO | Alarm |
|-----|------|------|----------------|
| 1 | 0 | 0 | Low-Low (LL) |
| 0 | 0 | 1 | Low (L) |
| 0 | 0 | 0 | Normal |
| 0 | 1 | 0 | High (H) |
| 1 | 1 | 1 | High-High (HH) |

6 DIAGNOSTIC LED INDICATORS

| LED Indicators | | | | |
|-------------------------------------|-------|-------------|-------------|-------------|
| Status | Power | OK (✓) | MS | NS |
| V+ Power Applied | ON | ANY | ANY | ANY |
| Self-Test FAIL | ON | ANY | OFF | ANY |
| Self-Test PASS | ON | ON | ANY | ANY |
| Network Normal | ON | ON | ON | ON |
| Duplicate Net ID | ON | ON | ON | OFF |
| Configuration Mismatch | ON | Flash (1Hz) | ON | Flash (1Hz) |
| OCS Stop Mode/Communication Timeout | ON | ON | ON | Flash (1Hz) |
| OCS Run Mode | ON | ANY | ANY | ANY |
| Onboard I/O Fault | ON | OFF | ON | ON |
| Invalid Dynamic Configuration | ON | Flash (1Hz) | ON | ON |
| Power Up/ Waiting to be Configured | ON | ON | Flash (1Hz) | Flash (1Hz) |

LED Indicators for Individual I/O Channels

| | |
|-----|-------------------------|
| I1 | Digital Input-1 active |
| I2 | Digital Input-2 active |
| Q1 | Digital Output-1 active |
| Q2 | Digital Output-2 active |
| AI1 | Analog Input Active * |
| AQ1 | Analog output Active |

NOTE: Channel LED will be in OFF state if it is disabled from Cscope configuration

***NOTE:**

- LED will be ON during Normal operations.
- Analog Input channel configured as mA, Volts or mV LED will be OFF till the input signal is 0+0.2%
- Analog Input channel configured as PT100, PT1000 LED will be OFF if open circuit is detected, LED will be ON during Normal operation
- Analog Input channel configured as Thermocouple Input LED will be ON if the channel is Enabled.

7 INSTALLATION

The HE959CNX116 is compact and mounts on DIN-rail. Each I/O module installed adds width in increments of 19mm. **NOTE:** The distance between wiring duct and surrounding modules should be at least 50mm apart.

Modules can be added after the HE959CNX116 base has been installed on the DIN-rail and can be hot swapped with power applied. I/O scanning will stop until the correct modules for the system are detected in all slots.

I/O modules are physically added with the following procedure:



1. Connect the bus connectors together to form a backplane that can accept up to 8 modules including the CNX116 or another base.
2. Snap the bus connectors into the DIN rail. The DIN rail should be 35 mm \pm 7.5 mm and made to EN 60715 standards.
3. Place the CNX116 or other bus head to the leftmost connector.
4. Inset modules by latching at the top of the DIN rail first and rocking down until the latch at the bottom of the DIN rail engages.
5. To remove a module, insert a flat blade screwdriver into the metal DIN rail latch at the bottom of the module. Pry down to release the latch, then rock the module up and off the DIN Rail. Modules may be removed while powered however I/O scanning on the remaining modules will stop and I/O will go to the default state until a new module is inserted and all modules in the configuration are present.

8 SAFETY

8.1 - WARNINGS



WARNING - If the equipment is used in a manner not specified by Horner APG, the protection provided by the equipment may be impaired.

WARNING - EXPLOSION HAZARD - Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous

AVERTISSEMENT - RISQUE D'EXPLOSION -Ne débranchez pas l'équipement tant que l'alimentation n'a pas été coupée ou que la zone n'est pas dangereuse.

WARNING - EXPLOSION HAZARD - Substitution of any component may impair suitability for Class I, Division 2
AVERTISSEMENT - RISQUE D'EXPLOSION -Le remplacement de tout composant peut nuire à la compatibilité avec la classe I, division 2

WARNING - POSSIBLE EQUIPMENT DAMAGE - Remove power from the I/O Base and any peripheral equipment connected to this local system before adding or replacing this or any module.

AVERTISSEMENT - DOMMAGES POSSIBLES À L'ÉQUIPEMENT - Coupez l'alimentation de la base d'E / S et de tout équipement périphérique connecté à ce système local avant d'ajouter ou de remplacer ce module ou tout autre module.



WARNING - Outputs should be connected to the same voltage levels (all connect to 24V supply sources)

WARNING - Digital Outputs are non-isolated and considered hazardous live.

WARNING - Loads for outputs require a Class 2 or Limited Power Source from a UL Listed power supply.

8.2 - SAFETY

- a. All applicable codes and standards should be followed in the installation of this product.
- b. Shielded, twisted-pair wiring should be used for best performance.
- c. Shields should be grounded at one end only, preferably at the end providing the best noise shunting.

9 PART NUMBER

HE959CNX116

10 TECHNICAL SUPPORT

For assistance and manual updates, contact Technical Support at the following locations:

North America

(317) 916-4274
www.hornerautomation.com
techsppt@heapg.com

Europe

(+) 353-21-4321-266
www.hornerautomation.eu
technical.support@horner-apg.com