



OnCell 5004/5104 Series Quick Installation Guide

Third Edition, February 2012

Overview

The OnCell 5004/5104 series are high-performance industrial grade cellular routers that allow up to 4 Ethernet-based devices to simultaneously use a single cellular data account for primary or backup network connectivity to remote sites and devices. Both products provide the functionality of a cellular router, firewall, and switch in one single device. The difference between the OnCell 5004 and the 5104 series is that the OnCell 5104 comes with a built-in relay output that can be configured to indicate the priority of events to notify and warn engineers in the field, and the two digital inputs allow you to connect basic I/O devices, such as sensors, to the cellular router. In addition, the OnCell 5104 has an IA design and can be attached to a DIN-rail, whereas the OnCell 5004 can be placed on a desktop or be wall-mounted. Both products use 12 to 48 VDC power inputs with a screw-on connector for greater reliability, and the Ethernet port comes with 1.5 KV magnetic isolation protection to keep your system safe from unexpected electrical discharges.

Package Checklist


Before Installing the OnCell 5004/5104 series Cellular Router, verify that the package contains the following items:

Standard Accessories


- Rubber SMA antenna
- Rubber stand (OnCell 5004 series only)
- Wallmount Kit (OnCell 5004 series only)
- Din-Rail Kit (OnCell 5104 series only)
- Terminal block (screw type)
- Document and Software CD
- Product warranty statement
- Quick Installation Guide

Note: Please notify your sales representative if any of the above items are missing or damaged.

Hardware Introduction OnCell 5004 series

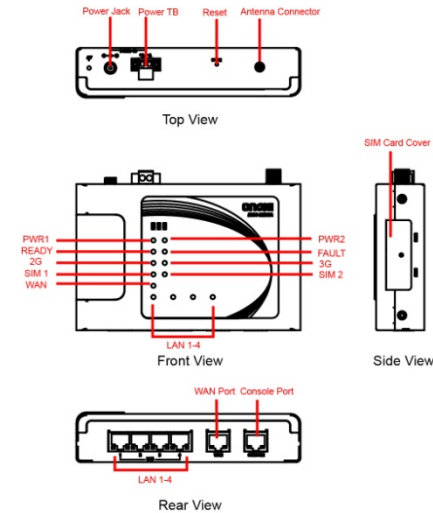

OnCell 5104 series

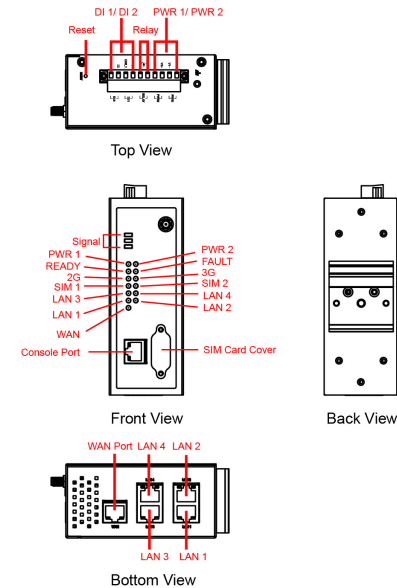

Reset Button

Press the Reset Button continuously for 5 sec to load factory default settings. Use a pointed object, such as a straightened paper clip or toothpick, to press the reset button. This will cause the Ready LED to blink on and off. The factory default settings will be loaded once the Ready LED stops blinking (default LAN IP: 192.168.127.254).

LED Indicators

The following table explains the LED indicators on the front panel of the OnCell 5004/5104 series:

Type	Color	Meaning
PWR 1	Green	Activation of DC Power
	Off	Power is off, or power error condition exists.
PWR 2	Green	Activation of DC Power
	Off	Power is off, or power error condition exists.
2G	Amber	GPRS/EDGE is connected
	Off	GPRS/EDGE is disconnected
3G	Amber	UMTS/HSDPA/HSPA is connected
	Off	UMTS/HSDPA/HSPA is disconnected
SIM 1	Amber	Steady on: SIM 1 is activated Blinking: SIM 1 not inserted
	Off	SIM 1 is inactivated
SIM 2	Amber	Steady on: SIM 2 is activated Blinking: SIM 2 not inserted
	Off	SIM 2 is inactivated
WAN	Amber	WAN port is connected
	off	WAN port is not connected
Ready	Green	Steady on: Software Ready. Blinking slowly (1 sec): The OnCell has been located by the OnCell Search Utility.
	off	Power is off, or is booting up.
	Red	Steady on: Booting up, or IP fault. Blinking slowly (1 sec): Cannot get an IP address from the DHCP server
LAN 1-4	Green	Steady on: Software Ready. Blinking slowly (1 sec): Data transmission
	off	Power is off, or is booting up.
Signal (3 LEDs)	Green	Signal Level (at least 2 LEDs must illuminate for data Transmission)

Connecting the I/O Port

The OnCell 5104/5104 series has six terminals on the terminal block for the I/O ports, with 4 terminals used for input, and 2 terminals used for output.

Digital Input—The power input level determines the digital input's ON/OFF state:

- On: +13 to +30 V for state "1"
- Off: -30 to +3 V for state "0"

Digital Output—1 relay output with current carrying capacity of 1 A @ 24 VDC.

Hardware Installation Procedure

STEP 1: Open the SIM cover, and insert the SIM card into the SIM card slot.

STEP 2: Connect the 12-48 VDC power adaptor to the OnCell 5004/5104 series and then plug the power adaptor into a DC outlet.

STEP 3: To configure the OnCell, use an Ethernet cable to connect the OnCell's LAN port directly to your computer's Ethernet interface.


STEP 4: Connect the OnCell 5004/5104 series' Ethernet port to an Ethernet enabled device.

Software Installation Information

The Document & Software CD contains the User's Manual, and the OnCell Search Utility. Insert the CD and follow the on-screen instructions. Please refer to the User's Manual for additional details on using the OnCell Search Utility.

Pin Assignments and Cable Wiring

Ethernet Port Pin Assignment

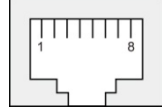


Pin	RS-232
1	TxD+
2	TxD-
3	RxD+
4	-
5	-
6	RxD-
7	-
8	-

Note: Please read **Chapter 2: Getting Started** in the OnCell 5004/5104 User's Manual for more details about installation and configuration.

Power Input and Relay Output Pinouts

PIN	Name	Function
1	V1+	DC Power input 1
2	V1-	DC Power input 1
3	V2+	DC Power input 2
4	V2-	DC Power input 2
5		Relay Out
6		Relay Out
7	I1	Digital Input
8	COM_1	Digital Input GND
9	I2	Digital Input
10	COM_2	Digital Input GND



Specifications

Cellular Interface (for OnCell 5004 & OnCell 5104)	
Standards	GSM/GPRS
Band Options	Quad-band 850/900 and 1800/1900 MHz
GPRS Multi-slot Class	Class 10
GPRS Terminal Device Class	Class B
GPRS Coding Schemes	CS1 to CS4
Tx Power	1 watt GSM 1800/1900, 2 watts EGSM 850/900
Cellular Interface (for OnCell 5004-HSDPA & 5104-HSDPA)	
Standard	GSM/GPRS/EDGE/UMTS/HSDPA
Data Rate	UMTS (DL: 384Kbps, UL: 384Kbps) HSDPA (DL: 3.6Mbps, UL: 386kbps)
Band Selection	Tri-band 850/1900/2100 MHz Quad-band 850/900/1800/1900 MHz
Cellular Interface (for OnCell 5004-HSPA & 5104-HSPA)	
Standard	GSM/GPRS/EDGE/UMTS/HSDPA/HSPA
Data Rate	UMTS (DL: 384Kbps, UL: 384Kbps) HSDPA (DL: 3.6Mbps, UL: 386kbps) HSPA (DL: 14.4Mbps, UL: 5.76Mbps)
Band Selection	Five band 800/850/AWS/1900/2100 MHz Quad-band 850/900/1800/1900 MHz
Tx Power:	1 watt GSM1800 2 watt GSM900 0.25 watt UMTS/HSDPA/HSPA 0.5 watt EDGE900, 0.4 watt EDGE1800
GPRS Multi-slot Class:	Class 12
GPRS Terminal Device Class:	Class B
GPRS Coding Schemes:	CS1 to CS4
SIM Control:	3V
WAN Interface	
Number of Ports	1
Ethernet	10/100 Mbps, RJ45 connector, Auto MDI/M DIX
Magnetic Isolation Protection	1.5 KV built-in
LAN Interface	
Number of Ports	4
Ethernet Protection	10/100 Mbps, RJ45 connector, auto MDI/MDIX Built-in 1.5 KV magnetic isolation

SIM Interface	
Number of SIMs	2
SIM Control	3V
I/O Interface (OnCell 5104 series only)	
Alarm Contact	1 relay output with current carrying capacity of 1A @ 24 VDC
Digital Inputs	The power input level determines the digital input's ON/OFF state: On: +13 to +30 V for state "1" Off: -30 to +3 V for state "0"
Software	
Network Protocols	UDP, TCP, SNTP, ICMP, DDNS, DHCP/BOOTP, PPPoE, PPP, DNS Relay, HTTPS, Telnet, RSTP, IPSec
Router/Firewall	NAT, port forwarding, static routing
Authentication	Local user-name and password
Security	IP filtering
Physical Characteristics	
Housing	Aluminum, providing IP30 protection
Weight	OnCell 5004/5004 series: 505±5 g OnCell 5104/5104 series: 645±5 g
Dimensions	OnCell 5004/5004 series: 158 x 103 x 34 mm OnCell 5104/5104 series: 160 x 103 x 50 mm
Power Requirements	
Number of Power Inputs	1 terminal block, 1 power jack
Input Voltage	12 to 48 VDC
Data Link	OnCell 5004 series: 400 mA (idle) to 900 mA (peak) @ 12 V OnCell 5104 series: 450 mA (idle) to 950 mA (peak) @ 12 V
Environmental Limits	
Operating temperature	-30 to 55°C (-22 to 131°F) , 5 to 95% RH
Storage temperature	-40 to 75°C (-40 to 167°F)
Regulatory Approvals	
EMC	CE Class A , FCC Class A, UL
Warranty	
Warranty Period	5 years

MOXA® www.moxa.com/support

The Americas: +1-714-528-6777 (toll-free: 1-888-669-2872)
Europe: +49-89-3 70 03 99-0
Asia-Pacific: +886-2-8919-1230
China: +86-21-5258-9955 (toll-free: 800-820-5036)

© 2012 Moxa Inc. All rights reserved.