



NPort 5600-8-DT Series Quick Installation Guide

First Edition, May 2007

1. Overview

The following models comprise the NPort 5600-8-DT Series:

- NPort 5610-8-DT:** 8 ports, RS-232, DB9
- NPort 5610-8-DT-J:** 8 ports, RS-232, RJ45
- NPort 5650-8-DT:** 8 ports, RS-232/422/485, DB9
- NPort 5650-8-DT-J:** 8 ports, RS-232/422/485, RJ45
- NPort 5650I-8-DT:** 8 ports, RS-232/422/485, DB9, optical isolation.

2. Package Checklist

The NPort 5600-8-DT package should contain the following items:

- NPort 5600-8-DT 8-port serial device server
- NPort Document & Software CD
- NPort 5600-8-DT Quick Installation Guide
- Power cord and adaptor
- DIN-rail kit


Optional Accessories:

- DK-35A: DIN-rail mounting kit (35 mm)
- CBL-RJ45M9-150: 8-pin RJ45 to male DB9 cable, 150 cm
- CBL-RJ45F9-150: 8-pin RJ45 to female DB9 cable, 150 cm
- CBL-RJ45M25-150: 8-pin RJ45 to male DB25 cable, 150 cm
- CBL-RJ45F25-150: 8-pin RJ45 to female DB25 cable, 150 cm
- NP21101: DB25-M to DB9-F RS-232 cable, 30 cm

Please notify your sales representative if any of the above items are missing or damaged.


3. Hardware Introduction

Top and Rear View

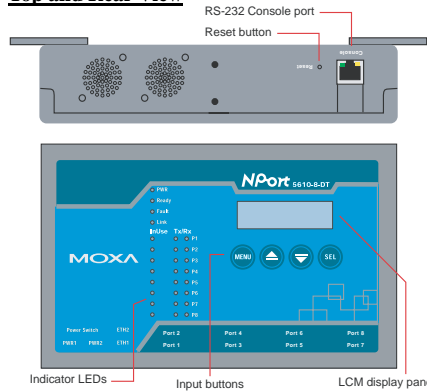


P/N: 1802056001000

Front View (NPort 5610-8-DT, 5650-8-DT, 5650I-8-DT)

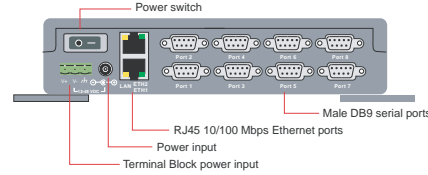

Front View (NPort 5610-8-DT-J, 5650-8-DT-J)

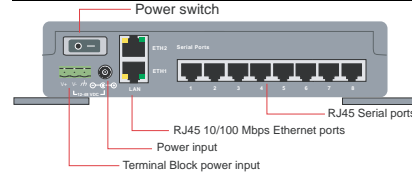

Reset Button

The reset button is used to load the factory defaults. Use a pointed object to hold the reset button down for five seconds. You may release the reset button when the Ready LED stops blinking.

LED Indicators

The LED indicators on the top panel are used to display status as follows:

Name	Color	Function
PWR	red	Power is on.
	off	Power is off.
Ready	green	Steady: NPort is operational Blinking: NPort is responding to NPort Administrator "Locate" function
	off	Power is off or fault condition exists.
Fault	red	IP conflict or DHCP or BOOTP server did not respond properly.
	off	No fault condition detected.
Link	green	Steady: Network is connected, no data is being transmitted. Blinking: Network is connected, data is being transmitted.
	off	Ethernet cable is disconnected or has a short.
	green	Serial port has been opened by server side software.
InUse (P1 to P8)	off	Serial port is not currently opened by server side software.
	green (Tx)	Serial device is transmitting data.
Tx/Rx (P1 to P8)	orange (Rx)	Serial device is receiving data.
	off	No data is flowing to or from the serial port.

4. Hardware Installation


STEP 1: After removing the NPort 5600-8-DT from the box, place it on a desktop or other horizontal surface. Connect the 12-48 VDC power adaptor to the NPort 5600-8-DT's power input when using an AC power source, or connect the NPort 5600-8-DT's terminal block directly to a DC power source.

STEP 2: Use an Ethernet cable to connect the NPort 5600-8-DT to a network hub or switch. You can also connect directly to your computer's Ethernet port, which is convenient for initial configuration or testing.

STEP 3: Connect the NPort 5600-8-DT's serial port to a serial device.

Wall or Cabinet Mounting


The NPort 5600-8-DT comes with two metal attachment plates to allow installation on a wall or the inside of a cabinet. First, attach the brackets to the back of the NPort with screws. Next, mount the unit on a wall or cabinet with screws. Screws should be less than 6.0 mm in head diameter, and less than 3.5 mm in shaft diameter.

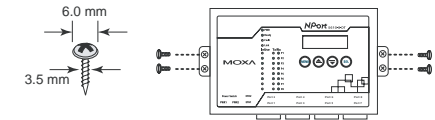


DIN-Rail Mounting

DIN-rail attachments can be purchased separately to attach the product to a DIN-rail. The DIN-rail attachments should be oriented with the metal springs on top.

Standard Attachment

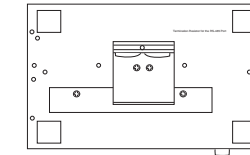

DK-35A Attachment

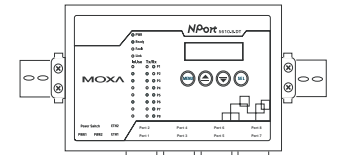

5. Pull High/Low Resistors for RS-485

Use the set of DIP switches on the bottom panel to set the pull high/low resistor values for each serial port. To access the switches, remove the screws holding the DIP switch cover in place and flip open the cover. There are three DIP switches for each port's pull high/low resistors:

SW	1	2	3
	Pull High	Pull Low	Terminator
Default →	OFF	OFF	---
	1KΩ	1KΩ	120Ω
	150KΩ	150KΩ	---


6. Software Installation Information

To install **NPort Administration Suite**, insert the **NPort Document & Software CD** into your PC's CD-ROM drive. Locate and run the setup program and follow the on-screen instructions. The setup program will be named **Npadm_Setup_[Version]_Build_[Date]_Time.exe** (e.g., "Npadm_Setup_Ver1.8_Build_07041316.exe"). For more information about NPort Administration Suite, please refer to the NPort 5600-8-DT User's Manual.

7. Pin Assignments and Cable Wiring

RJ45 Ports (NPort 5610-8-DT-J, 5650-8-DT-J)


Pin	RS-232	RS-422 4-wire RS-485	2-wire RS-485
1	DSR	---	---
2	RTS	TxD+	---
3	GND	GND	GND
4	TxD	TxD-	---
5	RxD	RxD+	Data+
6	DCD	RxD-	Data-
7	CTS	---	---
8	DTR	---	---



Note: The NPort 5610-8-DT-J supports RS-232 only.


DB9 Male Ports (NPort 5610-8-DT, 5650-8-DT, 5650I-8-DT)

Pin	RS-232	RS-422 4-wire RS-485	2-wire RS-485
1	DCD	TxD-(A)	---
2	RxD	TxD+(B)	---
3	TxD	RxD+(B)	Data+(B)
4	DTR	RxD-(A)	Data-(A)
5	GND	GND	GND
6	DSR	---	---
7	RTS	---	---
8	CTS	---	---
9	---	---	---

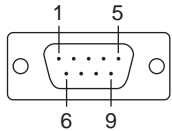


Note: The NPort 5610-8-DT supports RS-232 only.


RS-232 Cables (NPort 5610-8-DT, 5650-8-DT)

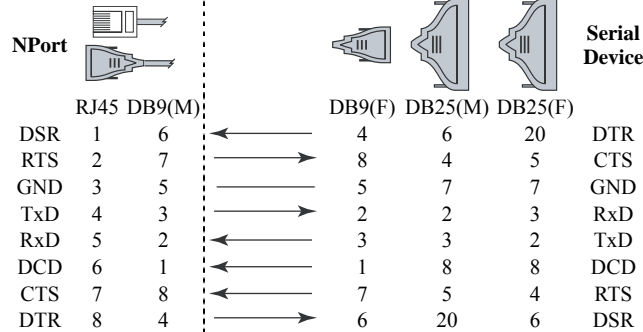

RS-422, 4-wire RS-485 Cables (NPort 5650-8-DT)

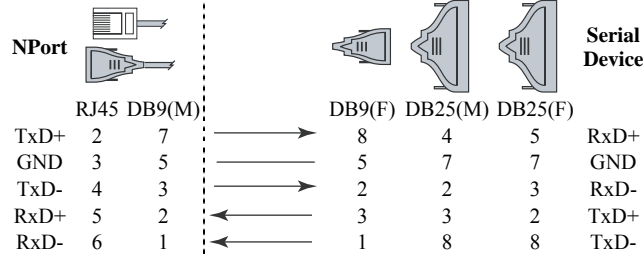

2-wire RS-485 Cables (NPort 5650-8-DT)

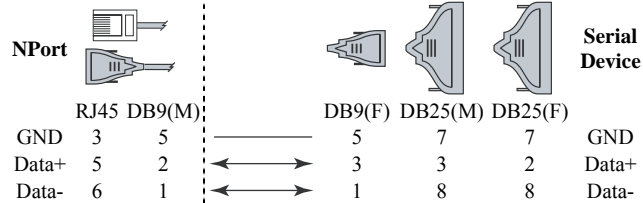

8. Specifications

LAN

Ethernet Ports 2 × 10/100 Mbps (RJ45)
Protection Built-in 1.5 KV magnetic isolation

Serial Interface

RS-232 NPort 5610-8-DT, 5610-8-DT-J
RS-232/422/485 NPort 5650-8-DT, 5650-8-DT-J, 5650I-8-DT
Serial Ports 8 (DB9-M or RJ45 connectors)
Isolation 2K VDC isolation (NPort 5650I-8-DT)
Signals
RS-232 TxD, RxD, RTS, CTS, DTR, DSR, DCD, GND

RS-422 Tx+, Tx-, Rx+, Rx-, GND
RS-485 (2-wire) Data+, Data-, GND
RS-485 (4-wire) Tx+, Tx-, Rx+, Rx-, GND
Serial Line Protection 15KV ESD for all signals
RS-485 Data Direction ADDC™ (Automatic Data Direction Control)

Serial Communication Parameters

Parity None, Even, Odd, Space, Mark
Data Bits 5, 6, 7, 8
Stop Bit(s) 1, 1.5, 2
Flow Control RTS/CTS, DSR/DTR (for RS-232 only), XON/XOFF

Transmission Speed 50 bps to 921.6 Kbps

Power Requirements

Power Input 12 to 48 VDC

Mechanical

Operating Temperature 0 to 55°C (32 to 131°F), 5 to 95% RH
Storage Temperature -20 to 70°C (-4 to 185°F), 5 to 95% RH
Material SECC sheet metal (0.8 mm)
Dimensions (W × D × H) 197 × 44 × 125 mm
229 × 46 × 125 mm (with wall-mount)
197 × 52.8 × 135.43 mm (with DIN-rail kit)
Power Line Protection 4 KV Burst (EFT), EN61000-4-4
2 KV Surge, EN61000-4-5

Certifications

Regulatory Approvals FCC Class A, CE Class A, UL, CUL, TÜV
Warranty 5 years

Copyright © 2007
Moxa Technologies Co., Ltd.

All rights reserved.
Reproduction without permission is prohibited.

MOXA®

Tel: +886-2-8919-1230
Fax: +886-2-8919-1231

www.moxa.com
support@moxa.com