

# **PNOZ X6**




Safety relays

This document is the original document.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Source code from third-party manufacturers or open source software has been used for some components. The relevant licence information is available on the Internet on the Pilz homepage.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.

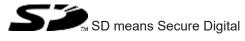

Introduction	. 5
Validity of documentation	. 5
Using the documentation	. 5
Definition of symbols.	. 5
Safety	. 6
Intended use	. 6
Safety regulations	. 6
Safety assessment	. 6
Use of qualified personnel	
Warranty and liability	
Disposal	
For your safety	.7
Unit features	. 8
Safety features	. 8
Block diagram/terminal configuration	
Types: AC	
Type: AC/DC	. 10
Function Description	. 10
Operating modes	. 11
Timing diagram	. 11
Installation	. 12
Wiring	. 12
Preparing for operation	. 13
Operation	15
Status indicators	
Faults – Interference	. 16
Dimensions in mm	. 16
Technical details Order no. 774721, 774725	. 17
Technical details Order no. 774726, 774729	. 20
Safety characteristic data	. 25
Supplementary data	

Order reference	. 26
EC declaration of conformity	. 27

# Introduction

### Validity of documentation

This documentation is valid for the product PNOZ X6. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

### Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

### **Definition of symbols**

Information that is particularly important is identified as follows:



### DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



### WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



### CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



### NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



### INFORMATION

This gives advice on applications and provides information on special features.

# Safety

### Intended use

The safety relay PNOZ X6 provides a safety-related interruption of a safety circuit.

The safety relay meets the requirements of EN 60947-5-1 and EN 60204-1 and may be used in applications with:

- E-STOP pushbuttons
- Safety gates

The following is deemed improper use in particular

- Any component, technical or electrical modification to the product,
- > Use of the product outside the areas described in this manual,
- ▶ Use of the product outside the technical details (see Technical details [<sup>[]</sup> 17]).



### NOTICE

### **EMC**-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

### Safety regulations

### Safety assessment

Before using a device, a safety assessment in accordance with the Machinery Directive is required.

The product as an individual component fulfils the functional safety requirements in accordance with EN ISO 13849 and EN 62061. However, this does not guarantee the functional safety of the overall plant/machine. To achieve the relevant safety level of the overall plant/ machine's required safety functions, each safety function needs to be considered separately.

### Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- Are familiar with the basic regulations concerning health and safety / accident prevention,
- Have read and understood the information provided in the section entitled Safety
- Have a good knowledge of the generic and specialist standards applicable to the specific application.

### Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended,
- Damage can be attributed to not having followed the guidelines in the manual,
- Operating personnel are not suitably qualified,
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

### Disposal

- ▶ In safety-related applications, please comply with the mission time T<sub>M</sub> in the safety-related characteristic data.
- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

### For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

# **Unit features**

- Positive-guided relay outputs:
  - 3 safety contacts (N/O), instantaneous
- Connection options for:
  - E-STOP pushbutton
  - Safety gate limit switch
  - Start button
- Operation with and without simultaneity monitoring
- LED display for:
  - Supply voltage
  - Switch status of the safety contacts
- See order reference for unit types

# **Safety features**

The safety relay meets the following safety requirements:


- The circuit is redundant with built-in self-monitoring.
- > The safety function remains effective in the case of a component failure.
- The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.

# Block diagram/terminal configuration

### Types: AC


▶ U<sub>B</sub>: 42 VAC; Order no. 774721

- ▶ U<sub>B</sub>: 110 120 VAC; Order no. 774725
- ▶ U<sub>B</sub>: 230 240 VAC; Order no. 774726

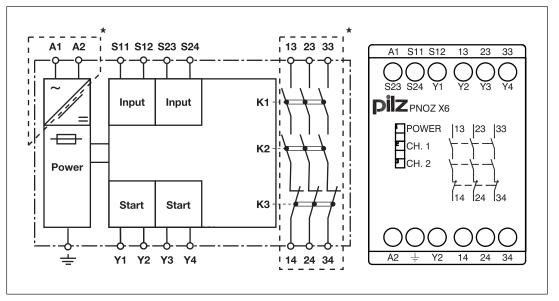

\*Insulation between the non-marked area and the relay contacts: Basic insulation (overvoltage category III), Protective separation (overvoltage category II)

**Type: AC/DC** ▶ U<sub>B</sub>: 24 VAC/DC; Order no. 774729

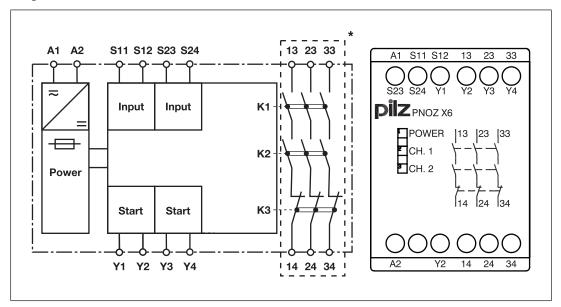

\*Insulation between the non-marked area and the relay contacts: Basic insulation (overvoltage category III), Protective separation (overvoltage category II)

# **Function Description**

The safety relay PNOZ X6 provides a safety-oriented interruption of a safety circuit. When supply voltage is supplied the "POWER" LED is lit. The unit is ready for operation when the start circuit and feedback loop Y1-Y2 is closed.

Input circuit is closed (e.g. safety gate closed):


- The LEDs "CH.1" and "CH.2" are lit.
- The safety contacts 13-14, 23-24 and 33-34 are closed. The unit is active.

Input circuit is opened (e.g. safety gate opened):

- The LEDs "CH.1" and "CH.2" go out.
- Safety contacts 13-14, 23-24 and 33-34 are opened redundantly.

### **Operating modes**

- Single-channel operation: No redundancy in the input circuit, earth faults in the start and input circuit are detected.
- Dual-channel operation without detection of shorts across contacts: Redundant input circuit, detects PNOZ X6
  - earth faults in the start and input circuit,
  - short circuits in the input circuit.
- Automatic start: Unit is active once the input circuit has been closed.
- Manual start: Unit is active once the input circuit and the start circuit are closed.
- Monitored start: Unit is active once
  - the input circuit is closed and then the start circuit is closed and opened again.
  - the start circuit is closed and then opened again once the input circuit is closed.
- Increase in the number of available contacts by connecting contact expandsion modules or external contactors/relays.

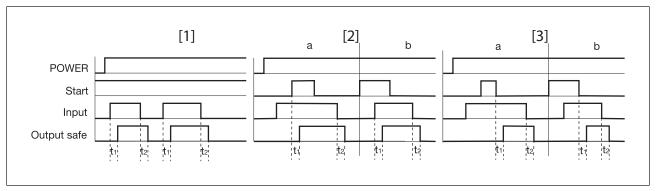

### **Timing diagram**

### Legend

- Power: Supply voltage
- Start: Start circuit
- Input: Input circuit
- Output safe: Safety contacts
- ▶ [1]: Automatic start
- ▶ [2]: Manual start
- [3]: Monitored start
- a: Input circuit closes before start circuit
- b: Start circuit closes before input circuit
- ▶ t₁: Switch-on delay
- ▶ t<sub>2</sub>: Delay-on de-energisation

### Installation

- > The unit should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).
- When installed vertically: Secure the unit by using a fixing element (e.g. retaining bracket or end angle).

### Wiring

Please note:

- ▶ Information given in the "Technical details [ 17]" must be followed.
- ▶ The output contacts 13-14, 23-24, 33-34 are safety contacts.
- Do not connect undesignated terminals.
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [□ 17]).
- Calculation of the max. cable length I<sub>max</sub> in the input circuit:

$$I_{max} = \frac{R_{lmax}}{R_l / km}$$

 $R_{imax}$  = max. overall cable resistance (see Technical details [4] 17])  $R_i / km$  = cable resistance/km

- ▶ Use copper wiring with a temperature stability of 60/75 °C.
- To prevent EMC interferences (particularly common-mode interferences) the measures described in EN 60204-1 must be executed. This includes the separate routing of cables of the control circuits (input, start and feedback loop) from other cables for energy transmission or the shielding of cables, for example.
- Adequate protection must be provided on all output contacts with capacitive and inductive loads.
- Do not switch low currents using contacts that have been used previously with high currents.
- With 24 V AC/DC units:

The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).


# Preparing for operation

Supply voltage	AC	24 VAC/DC
	A1 ∲ L1   A2 ∲ N   FE	A1 \$\circleleft L1/L+
Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts	S11 0 S11 0 S12 0 S24 0	$ \begin{array}{c}  S11 \\ S11 \\ S23 \\ S24 \\ S12 \\ S12 \\ \end{array} $
Safety gate without detection of shorts across contacts	$ \begin{array}{c}                                     $	$ \begin{array}{c}                                     $



# NOTICE

With single-channel wiring the safety level of your machine/plant may be lower than the safety level of the unit (see Safety characteristic data [25]).

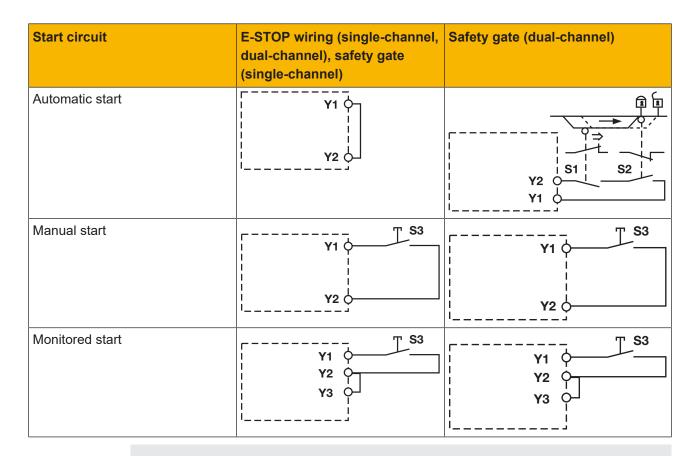



# NOTICE

# In the event of an automatic start or manual start with bridged start contact (fault):

The unit starts up automatically when the safeguard is reset, e.g. when the E-STOP pushbutton is released. Use external circuit measures to prevent an unexpected restart.

Simultaneity S1 and S2	Simultaneity max. 200 ms	Simultaneity ∞
	¥3 ¢ ¥4 ¢	Y3 ¢

Feedback loop	Automatic start	Manual start
Contacts from external contactors	$\begin{array}{c ccccccccccccccccccccccccccccccccccc$	$\begin{array}{c c} & & & & & \\ & & & Y1 & & \\ & & & Y2 & & \\ & & & Y2 & & \\ & & & & 13 & (23, 33) & & \\ & & & & & 14 & (24, 34) & & \\ & & & & & & & \\ & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & & & & & & & \\ & $

### Legend

- S1/S2: E-STOP/safety gate switch
- S3: Reset button
- ▶ 1 : Switch operated
- ► E: Gate open
- I: Gate closed

# Operation

When the relay outputs are switched on, the mechanical contact on the relay cannot be tested automatically. Depending on the operational environment, measures to detect the non-opening of switching elements may be required under some circumstances.

When the product is used in accordance with the European Machinery Directive, a check must be carried out to ensure that the safety contacts on the relay outputs open correctly. Open the safety contacts (switch off output) and start the device again, so that the internal diagnostics can check that the safety contacts open correctly

▶ for SIL CL 3/PL e at least 1x per month

▶ for SIL CL 2/PL d at least 1x per year



### NOTICE

The safety function should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

### **Status indicators**

LEDs indicate the status and errors during operation:



# -o- POWER


Supply voltage is present.

->>>	<b>CH.1</b> Safety contacts of channel 1 are closed.
->>>>>>	<b>CH.2</b> Safety contacts of channel 2 are closed.

# Faults – Interference

- Earth fault: The supply voltage fails and the safety contacts open. Once the cause of the respective fault has been rectified and the supply voltage is switched off for approx.
   1 minute, the unit is ready for operation again.
- Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.
- LED "POWER" does not light: Short circuit or no supply voltage.

### **Dimensions in mm**

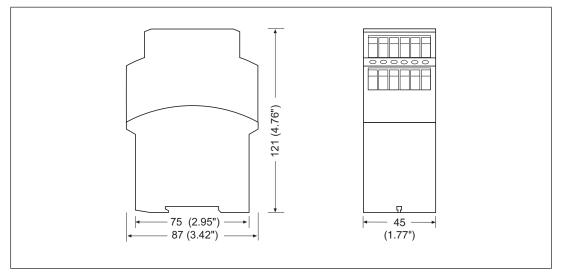

# Technical details Order no. 774721, 774725

General	774721	774725
Certifications	CCC, CE, EAC (Eurasian), TÜV, cULus Listed	CCC, CE, EAC (Eurasian), TÜV, cULus Listed
Electrical data	774721	774725
Supply voltage		
Voltage	42 V	110 - 120 V
Kind	AC	AC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply		
(AC)	6,5 VA	6,5 VA
Frequency range AC	50 - 60 Hz	50 - 60 Hz
Duty cycle	100 %	100 %
Inputs	774721	774725
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Start circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Input circuit DC	50 mA	50 mA
Start circuit DC	100 mA	100 mA
Feedback loop DC	100 mA	100 mA
Max. overall cable resistance RI- max		
Single-channel at UB AC Dual-channel without detection of shorts across contacts at UB	100 Ohm	100 Ohm
AC	200 Ohm	200 Ohm
Relay outputs	774721	774725
Number of output contacts		
Safety contacts (N/O), instant- aneous	3	3
Max. short circuit current IK	1 kA	 1 kA
		=
Utilisation category		

Relay outputs	774721	774725
	114121	114120
Utilisation category of safety con- tacts		
AC1 at	400 V	400 V
Min. current	0,01 A	0,01 A
Max. current	5 A	5 A
Max. power	2000 VA	2000 VA
AC1 at	240 V	240 V
Min. current	0,01 A	0,01 A
Max. current	8 A	8 A
Max. power	2000 VA	2000 VA
DC1 at	24 V	24 V
Min. current	0,01 A	0,01 A
Max. current	8 A	8 A
Max. power	200 W	200 W
Utilisation category		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety con-		
tacts		
AC15 at	230 V	230 V
Max. current	5 A	5 A
DC13 (6 cycles/min) at	24 V	24 V
Max. current	7 A	7 A
Utilisation category in accordance		
with UL		
Voltage	240 V AC G. P.	240 V AC G. P.
With current	8 A	8 A
Voltage	24 V DC Resistive	24 V DC Resistive
With current	5 A	5 A
Pilot Duty	B300, R300	B300, R300
External contact fuse protection, safety contacts		
In accordance with the standard	EN 60947-5-1	EN 60947-5-1
Max. melting integral	240 A²s	240 A²s
Blow-out fuse, quick	10 A	10 A
Blow-out fuse, slow	6 A	6 A
Blow-out fuse, gG	10 A	10 A
Circuit breaker 24V AC/DC,		
characteristic B/C	6 A	6 A
Contact material	AgSnO2 + 0,2 μm Au	AgSnO2 + 0,2 μm Au

Conventional thermal current	774721	774725
while loading several contacts		
Ith per contact at UB AC; AC1: 240 V, DC1: 24 V		
Conv. therm. current with 1 con- tact	8 A	8 A
Conv. therm. current with 2 con- tacts	7,3 A	7,3 A
Conv. therm. current with 3 con- tacts	6 A	6 A
Times	774721	774725
Switch-on delay		
With automatic start typ.	270 ms	270 ms
With automatic start max.	370 ms	370 ms
With automatic start after power		
on typ.	260 ms	260 ms
With automatic start after power	0.50	050
on max.	350 ms	350 ms
Delay-on de-energisation	45	4.5
With E-STOP typ.	15 ms	15 ms
With E-STOP max.	30 ms	30 ms
With power failure typ.	150 ms	150 ms
With power failure max.	200 ms	200 ms
Recovery time at max. switching frequency 1/s		
After E-STOP	50 ms	50 ms
After power failure	250 ms	250 ms
Supply interruption before de-ener- gisation	20 ms	20 ms
Environmental data	774721	774725
Climatic suitability	EN 60068-2-78	EN 60068-2-78
Ambient temperature		
Temperature range	-10 - 55 °C	-10 - 55 °C
Storage temperature		
Temperature range	-40 - 85 °C	-40 - 85 °C
Climatic suitability		
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
EMC	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1
Vibration		
In accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 55 Hz	10 - 55 Hz
Amplitude	0,35 mm	0,35 mm
I	•	•

Environmental data	774721	774725
Airgap creepage	117121	114125
In accordance with the standard	EN 60947-1	EN 60947-1
Overvoltage category		
Pollution degree	2	2
Rated insulation voltage	250 V	 250 V
Rated impulse withstand voltage	4 kV	4 kV
Protection type	-	
Housing	IP40	IP40
Terminals	IP40 IP20	IP 40 IP 20
Mounting area (e.g. control cab-		IF 20
inet)	IP54	IP54
Mechanical data	774721	774725
Mounting position	Any	Any
Mechanical life	10,000,000 cycles	10,000,000 cycles
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Тор	PPO UL 94 V0	PPO UL 94 V0
Connection type	Screw terminal	Screw terminal
Mounting type	Fixed	Fixed
Conductor cross section with screw terminals	1	
1 core flexible	0,2 - 4 mm², 24 - 10 AWG	0,2 - 4 mm², 24 - 10 AWG
<ul> <li>2 core with the same cross section, flexible with crimp connectors, no plastic sleeve</li> <li>2 core with the same cross section, flexible without crimp connectors or with TWIN crimp con-</li> </ul>	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG
nectors	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG
Torque setting with screw terminals	5 0,6 Nm	0,6 Nm
Stripping length with screw terminals	8 mm	8 mm
	8 mm	8 mm
als	8 mm 87 mm	8 mm 87 mm
als Dimensions		
als Dimensions Height	87 mm	87 mm

Where standards are undated, the 2020-07 latest editions shall apply.

# Technical details Order no. 774726, 774729

General	774726	774729
Certifications	CCC, CE, EAC (Eurasian), TÜV, cULus Listed	CCC, CE, EAC (Eurasian), TÜV, cULus Listed

Electrical data	774726	774729
Supply voltage		
Voltage	230 - 240 V	24 V
Kind	AC	AC/DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %
Output of external power supply		
(AC)	6,5 VA	3 VA
Output of external power supply (DC)	-	2 W
Frequency range AC	50 - 60 Hz	50 - 60 Hz
Residual ripple DC	_	160 %
Duty cycle	100 %	100 %
Inputs	774726	774729
Number	2	2
Voltage at		
Input circuit DC	24 V	24 V
Start circuit DC	24 V	24 V
Feedback loop DC	24 V	24 V
Current at		
Input circuit DC	50 mA	50 mA
Start circuit DC	100 mA	55 mA
Feedback loop DC	100 mA	55 mA
Max. overall cable resistance RI- max		
Single-channel at UB DC	_	100 Ohm
Single-channel at UB AC	100 Ohm	100 Ohm
Dual-channel without detection		
of shorts across contacts at UB DC		200 Ohm
	_	200 Ohm
Dual-channel without detection of shorts across contacts at UB		
AC	200 Ohm	200 Ohm
Relay outputs	774726	774729
Number of output contacts		
Safety contacts (N/O), instant- aneous	3	3
Max. short circuit current IK	1 kA	1 kA
Utilisation category		
In accordance with the standard	EN 60947-4-1	EN 60947-4-1

Polov outputs	774726	774720			
Relay outputs	114120	774729			
Utilisation category of safety con- tacts					
AC1 at	400 V	400 V			
Min. current	0,01 A	0,01 A			
Max. current	5 A	5 A			
Max. power	2000 VA	2000 VA			
AC1 at	240 V	240 V			
Min. current	0,01 A	0,01 A			
Max. current	8 A	8 A			
Max. power	2000 VA	2000 VA			
DC1 at	2000 VA 24 V	2000 VA 24 V			
Min. current	0,01 A	0,01 A			
Max. current	8 A	8 A			
	200 W	200 W			
Max. power	200 44	200 ₩			
Utilisation category In accordance with the standard EN 60947-5-1 EN 60947-5-1					
	EIN 0034/-0-1	EN 60947-5-1			
Utilisation category of safety con- tacts					
AC15 at	230 V	230 V			
Max. current	5 A	5 A			
DC13 (6 cycles/min) at	24 V	24 V			
Max. current	7 A	7 A			
Utilisation category in accordance					
with UL					
Voltage	240 V AC G. P.	240 V AC G. P.			
With current	8 A	8 A			
Voltage	24 V DC Resistive	24 V DC Resistive			
With current	5 A	5 A			
Pilot Duty	B300, R300	B300, R300			
External contact fuse protection, safety contacts					
In accordance with the standard	EN 60947-5-1	EN 60947-5-1			
Max. melting integral	240 A <sup>2</sup> s	240 A <sup>2</sup> s			
Blow-out fuse, quick	240 A-S 240 A-S 10 A 10 A				
Blow-out fuse, slow	6 A 6 A				
Blow-out fuse, gG	10 A	10 A			
Circuit breaker 24V AC/DC,					
characteristic B/C	6 A	6 A			
Contact material	AgSnO2 + 0,2 μm Au	AgSnO2 + 0,2 μm Au			
	- · ·	- · ·			

O service of the service for service of the service	774700	774700	
Conventional thermal current	774726	774729	
while loading several contacts			
Ith per contact at UB AC; AC1: 240 V, DC1: 24 V			
Conv. therm. current with 1 con- tact	8 A	8 A	
Conv. therm. current with 2 con- tacts	7,3 A	7,3 A	
Conv. therm. current with 3 con- tacts	6 A	6 A	
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V			
Conv. therm. current with 1 con- tact	_	8 A	
Conv. therm. current with 2 con- tacts	_	8 A	
Conv. therm. current with 3 con- tacts	_	8 A	
Times	774726	774729	
Switch-on delay			
With automatic start typ.	270 ms	250 ms	
With automatic start max.	370 ms	350 ms	
With automatic start after power			
on typ.	260 ms	260 ms	
With automatic start after power			
on max.	350 ms	350 ms	
Delay-on de-energisation			
With E-STOP typ.	15 ms	15 ms	
With E-STOP max.	30 ms	30 ms	
With power failure typ.	150 ms	110 ms	
With power failure max.	200 ms	160 ms	
Recovery time at max. switching frequency 1/s			
After E-STOP	50 ms	50 ms	
After power failure	250 ms	200 ms	
Supply interruption before de-ener-		200 1113	
gisation	20 ms	20 ms	
Environmental data	774726	774729	
Climatic suitability	EN 60068-2-78	EN 60068-2-78	
Ambient temperature			
Temperature range	-10 - 55 °C	-10 - 55 °C	
Storage temperature			
Temperature range	-40 - 85 °C	-40 - 85 °C	
Climatic suitability			
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	
Condensation during operation	Not permitted	Not permitted	
EMC	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61326-3-1	

Environmental data	774726	774729		
Vibration				
In accordance with the standard	EN 60068-2-6	EN 60068-2-6		
Frequency	10 - 55 Hz	10 - 55 Hz		
Amplitude	0,35 mm	0,35 mm		
Airgap creepage				
In accordance with the standard	EN 60947-1	EN 60947-1		
Overvoltage category	111 / 11	111 / 11		
Pollution degree	2	2		
Rated insulation voltage	250 V	250 V		
Rated impulse withstand voltage	4 kV	4 kV		
Protection type				
Housing	IP40	IP40		
Terminals	IP20	IP20		
Mounting area (e.g. control cab-				
inet)	IP54	IP54		
Mechanical data	774726	774729		
Mounting position	Any	Any		
Mechanical life	10,000,000 cycles	10,000,000 cycles		
Material				
Bottom	PPO UL 94 V0	PPO UL 94 V0		
Front	ABS UL 94 V0	ABS UL 94 V0		
Тор	PPO UL 94 V0	PPO UL 94 V0		
Connection type	Screw terminal	Screw terminal		
Mounting type	Fixed	Fixed		
Conductor cross section with screw terminals				
1 core flexible	0,2 - 4 mm², 24 - 10 AWG	0,2 - 4 mm², 24 - 10 AWG		
2 core with the same cross sec- tion, flexible with crimp connect-	0.0.05			
ors, no plastic sleeve	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG		
2 core with the same cross sec- tion, flexible without crimp con-				
nectors or with TWIN crimp con-				
nectors	0,2 - 2,5 mm², 24 - 14 AWG	0,2 - 2,5 mm², 24 - 14 AWG		
Torque setting with screw terminals	0,6 Nm	0,6 Nm		
Stripping length with screw termin-				
als	8 mm	8 mm		
Dimensions				
Height	87 mm 87 mm			
•	45 mm 45 mm			
Width				
•	45 mm 121 mm	45 mm 121 mm		

Where standards are undated, the 2020-07 latest editions shall apply.

# Safety characteristic data



### NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN 62061 SIL CL	EN 62061 PFH <sub>D</sub> [1/h]	IEC 61511 SIL	IEC 61511 PFD	EN ISO 13849-1: 2015
	PL	Category					T <sub>м</sub> [year]
_	PL e	Cat. 4	SIL CL 3	2,31E-09	SIL 3	2,03E-06	20

Explanatory notes for the safety-related characteristic data:

- The SIL CL value in accordance with EN 62061 corresponds to the SIL value in accordance with EN 61508.
- ▶ T<sub>M</sub> is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN 61508-6 and IEC 61511 and as the proof test interval and mission time in accordance with EN 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.



### INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

# Supplementary data




### **CAUTION!**

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switch frequency and the load of the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

### Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

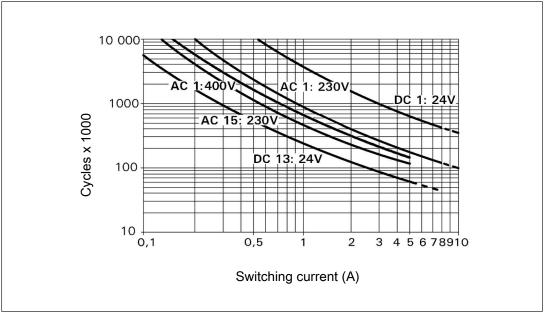

### Example

- Inductive load: 0.2 A
- Utilisation category: AC15
- Contact service life: 4 000 000 cycles

Provided the application to be implemented requires fewer than 4 000 000 cycles, the PFH value (see Technical details) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

# **Order reference**

Product type	Features	Connection type	Order no.
PNOZ X6	42 VAC	Screw terminals	774721
PNOZ X6	110 - 120 VAC	Screw terminals	774725
PNOZ X6	230 - 240 VAC	Screw terminals	774726
PNOZ X6	24 VAC/DC	Screw terminals	774729

# EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/support/downloads. Representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany



Technical support is available from Pilz round the clock.

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed,

environmentally-aware and energy-saving. So Pilz offers

sustainability, plus the security of using energy-efficient

products and environmentally-friendly solutions.

#### Americas

Brazil +55 11 97569-2804 Canada +1 888 315 7459 Mexico +52 55 5572 1300 USA (toll-free) +1 877-PILZUSA (745-9872)

### Asia

China +86 21 60880878-216 Japan +81 45 471-2281 South Korea +82 31 778 3300 Australia

+61 3 95600621

#### Europe

Austria +43 1 7986263-0 Belgium, Luxembourg +32 9 3217570 France +33 3 88104003 Germany +49 711 3409-444 Ireland +353 21 4804983 Italy, Malta +39 0362 1826711 Scandinavia +45 74436332 Spain +34 938497433 Switzerland +41 62 88979-32 The Netherlands +31 347 320477 Turkey +90 216 5775552 United Kingdom +44 1536 462203

You can reach our international hotline on: +49 711 3409-444 support@pilz.com



BLUECOMPETENCE Alliance Member Partner of the Engineering Industry Sustainability Initiative

Partner of: The Best of German Engineering NCO.NO.242 NCO.NO.242

rwur, rwur, rwurk, rHBI, rHCMW, Primow, PRTMP, PSENP, PSSP, PVISP, SafetyBUS PP, SafetyEYE', SafetyNET PP, THE SPIRT OF SAFETY® are registered and protected trademark of PIz GmbH & Co. KG in some countries. We would point out that product features may vary from the details stated in this document, depending on the status at the fine of publication and the scope of the equipment. We accept no responsibility for the validity, accuracy and entirety of the text and graphics presented in this information. Please contact our Technical Sup if you have any questions. , CHRE®, CMSE®, InduraNET p°, Leansafe®, Master of Safety®, Master of Security®, PASc000°, PAScafe, PASconfig®, Pilz®, PILB°, PMCprimo®, PMCpriotego®, PMCtendo®, PMN PNOZ®, PART®, PRNT OF SAFETY® are registered and protected tradema CECE®.

We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: info@pilz.com, Internet: www.pilz.com

