



Operating Manual-20690-EN-10 - Safety relays





This document is the original document.

Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrimination and on an equal basis.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



Introduction	4
Validity of documentation	4
Using the documentation	4
Definition of symbols	4
Safety	5
Intended use	5
Safety regulations	5
Safety assessment	5
Use of qualified personnel	6
Warranty and liability	
Disposal	
For your safety	6
Unit features	7
Safety features	7
Block diagram/terminal configuration	7
Function Description	8
Operating modes.	8
Timing diagram	9
Installation	0
Installation	9
Wiring	10
Preparing for operation	11
Operation	
Status indicators	13
Faults – Interference	14
Dimensions in mm	14
Technical details	15
Safety characteristic data	
Supplementary data	21
Service life graph	21
Order reference	ງງ
	<i>L</i> L
EC declaration of conformity	22
LIKCA Declaration of Conformity	22
UKCA-Declaration of Conformity	

## Introduction

## Validity of documentation

This documentation is valid for the product PNOZ XV2.1. It is valid until new documentation is published.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

## Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

## **Definition of symbols**

Information that is particularly important is identified as follows:



## DANGER!

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



## WARNING!

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



## CAUTION!

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



## NOTICE

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



#### INFORMATION

This gives advice on applications and provides information on special features.

## Safety

## Intended use

The safety relay PNOZ XV2.1 provides a safety-related interruption of a safety circuit.

The safety relay meets the requirements of EN 60947-5-1 and EN 60204-1 and may be used in applications with:

- E-STOP pushbuttons
- Safety gates

#### Improper use

The following is deemed improper use in particular:

- Any component, technical or electrical modification to the product,
- > Use of the product outside the areas described in this operating manual,
- Use of the product outside the technical details (see chapter entitled Technical Details [22 15]).



## NOTICE

#### **EMC**-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

## Safety regulations

#### Safety assessment

Before using a device, a safety assessment in accordance with the Machinery Directive is required.

The product as an individual component fulfils the functional safety requirements in accordance with EN ISO 13849 and EN IEC 62061. However, this does not guarantee the functional safety of the overall plant/machine. To achieve the relevant safety level of the overall plant/machine's required safety functions, each safety function needs to be considered separately.

#### Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by persons who are competent to do so.

A competent person is a qualified and knowledgeable person who, because of their training, experience and current professional activity, has the specialist knowledge required. To be able to inspect, assess and operate devices, systems and machines, the person has to be informed of the state of the art and the applicable national, European and international laws, directives and standards.

It is the company's responsibility only to employ personnel who

- > Are familiar with the basic regulations concerning health and safety / accident prevention,
- Have read and understood the information provided in the section entitled Safety
- Have a good knowledge of the generic and specialist standards applicable to the specific application.

#### Warranty and liability

All claims to warranty and liability will be rendered invalid if

- The product was used contrary to the purpose for which it is intended,
- Damage can be attributed to not having followed the guidelines in the manual,
- Operating personnel are not suitably qualified,
- Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

#### Disposal

- ▶ In safety-related applications, please comply with the mission time T<sub>M</sub> in the safety-related characteristic data.
- When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

#### For your safety

The unit meets all the necessary conditions for safe operation. However, please note the following:

Note for overvoltage category III: If voltages higher than low voltage (>50 VAC or >120 VDC) are present on the unit, connected control elements and sensors must have a rated insulation voltage of at least 250 V.

## **Unit features**


- Positive-guided relay outputs:
  - 2 safety contacts (N/O), instantaneous
  - 2 safety contacts (N/O), delay-on de-energisation
- Connection options for:
  - E-STOP pushbutton
  - Safety gate limit switch
  - Start button
- LED display for:
  - Supply voltage
  - Switch state of the safety contacts
  - Start circuit
- Delay time fixed or selectable
- Possible to cancel delay time
- See order reference for unit types

## **Safety features**

The safety relay meets the following safety requirements:

- > The circuit is redundant with built-in self-monitoring.
- > The safety function remains effective in the case of a component failure.
- The correct opening and closing of the safety function relays is tested automatically in each on-off cycle.

# Block diagram/terminal configuration

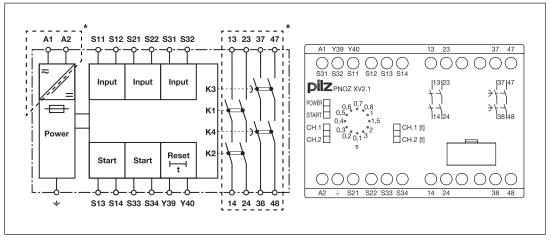

\*Insulation between the non-marked area and the relay contacts: Basic insulation (overvoltage category III), Protective separation (overvoltage category II)

## **Function Description**

The safety relay PNOZ XV2.1 provides a safety-oriented interruption of a safety circuit. When supply voltage is supplied the "POWER" LED is lit. The unit is ready for operation when the reset circuit Y39-Y40 and the start circuit S13-S14 are closed.

Input circuit is closed (e.g. E-STOP pushbutton not operated):

- The "START" LED is lit.
- The LEDs "CH.1", "CH.1 [t]" and "CH.2", "CH.2 [t]" are lit.
- The safety contacts 13-14, 23-24, 37-38 and 47-48 are closed. The unit is active.
- The "START" LED goes out.

▶ Input circuit is opened (e.g. E-STOP pushbutton operated):

- The LEDs "CH.1" and "CH.2" go out.
- Safety contacts 13-14 and 23-24 are redundantly opened.
- Safety contacts 37-38 and 47-48 open after the delay time has elapsed.
- The LEDs "CH.1 [t]" and "CH.2 [t]" go out.

Before the unit can be restarted, the delay time must have elapsed and the unit must again be ready for operation.

#### Set delay time:

On units with selectable delay time, the delay time of the safety contacts 37-38 and 47-48 can be set on the front of the unit using a screwdriver.


#### **Reset function:**

The delay time cycle can be ended prematurely by opening the reset circuit Y39-Y40. For this purpose, one N/C contact is connected between Y39-Y40 instead of a link.

#### **Operating modes**

- Single-channel operation: No redundancy in the input circuit, earth faults in the start and input circuit are detected.
- Dual-channel operation with detection of shorts across contacts: Redundant input circuit, detects PNOZ XV2.1
  - earth faults in the start and input circuit,
  - short circuits in the input circuit,
  - Shorts across contacts in the input circuit.
- Automatic start: Unit is active once the input circuit has been closed.
- Monitored start: Unit is active once the input circuit is closed and once the start circuit is closed after the waiting period has elapsed (see Technical details [1] 15]).
- Increase in the number of available contacts by connecting contact expandsion modules or external contactors/relays.

## **Timing diagram**

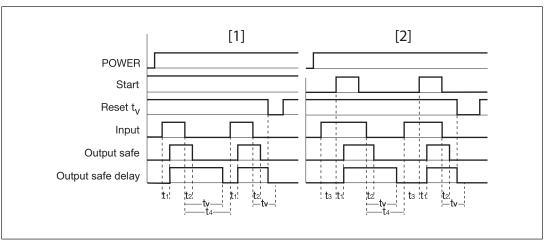

## Legend

- Power: Supply voltage
- Start: Start circuit
- Reset t<sub>v</sub>: Reset circuit
- Input: Input circuit
- Output safe: Safety contacts, instantaneous
- > Output safe delay: Safety contacts, delayed
- ▶ [1]: Automatic start
- [2]: Monitored start
- ▶ t₁: Switch-on delay
- ▶ t<sub>2</sub>: Delay-on de-energisation
- ▶ t<sub>3</sub>: Waiting period with a monitored start
- ▶ t<sub>4</sub>: Recovery time
- ▶ t<sub>v</sub>: Delay time



## NOTICE

At the latest, the delay-on de-energisation safety contacts open after the set delay time + 50 ms + 15% of the set value, even in the case of a component failure.

# Installation

- > The unit should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Use the notch on the rear of the unit to attach it to a DIN rail (35 mm).
- When installed vertically: Secure the unit by using a fixing element (e.g. retaining bracket or end angle).

## Wiring

Please note:

- ▶ Information given in the "Technical details [↓↓ 15]" must be followed.
- Delivery status of units with screw terminals: Link between S11-S12 (dual-channel input circuit) and link between Y39-Y40 (reset circuit)
- Outputs 13-14, 23-24 are instantaneous safety contacts, outputs 37-38, 47-48 are delayon de-energisation safety contacts.
- Do not connect undesignated terminals.
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see Technical details [□ 15]).
- Calculation of the max. cable length I<sub>max</sub> in the input circuit:

$$I_{max} = \frac{R_{Imax}}{R_I / km}$$

 $R_{imax}$  = max. overall cable resistance (see Technical details [4] 15])  $R_i / km$  = cable resistance/km

- ▶ Use copper wiring with a temperature stability of 60/75 °C.
- To prevent EMC interferences (particularly common-mode interferences) the measures described in EN 60204-1 must be executed. This includes the separate routing of cables of the control circuits (input, start and feedback loop) from other cables for energy transmission or the shielding of cables, for example.
- Adequate protection must be provided on all output contacts with capacitive and inductive loads.
- Do not switch low currents using contacts that have been used previously with high currents.
- Connect operational earth terminal to functional earth.

#### Important for detection of shorts across contacts:

As this function for detecting shorts across contacts is not failsafe, it is tested by Pilz during the final control check. If there is a danger of exceeding the cable length, we recommend the following test once the unit is installed:

- 1. Unit ready for operation (output contacts closed)
- 2. Short circuit the test terminals S22, S32 for detecting shorts across the inputs.
- 3. The unit's fuse must be triggered and the output contacts must open. Cable lengths in the scale of the maximum length can delay the fuse triggering for up to 2 minutes.
- 4. Reset the fuse: Remove the short circuit and switch off the supply voltage for approx. 1 minute.

# Preparing for operation

Supply voltage	AC	DC
	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$	$ \begin{array}{cccccccccccccccccccccccccccccccccccc$
Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts	$\begin{array}{c c} & & & \\ & & & \\ & & & \\ & & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & & \\ & \\ & & \\$	
E-STOP with detection of shorts across contacts		$\begin{array}{c c} & & \text{S1} & & \text{S1} \\ & & & \text{S22} \\ & & & \text{S11} & & \text{S32} \\ & & & & \text{S12} & & \text{S31} \\ & & & & \text{S21} \\ & & & & \text{S21} \\ & & & & & \text{S21} \end{array}$
Safety gate without detection of shorts across contacts	$\begin{array}{c c} & & & & \\ & & & & \\ & & & & \\ & & & & \\ & & & \\ & & &$	
Safety gate with detection of shorts across contacts		$\begin{array}{c c} & & & & \\ \hline 1 & & & \\ \hline \\ & & & \\ \\ & & \\ \\ & \\ \\ \\ \\$



## NOTICE

With single-channel wiring the safety level of your machine/plant may be lower than the safety level of the unit (see Safety characteristic data).

Start circuit	E-STOP wiring Safety gate without start-up test	Safety gate with start-up test
Automatic start	S33 ¢ S34 ¢ S13 O S14 ¢	$\begin{array}{c} \hline a & \hline a \\ \hline a & \hline a \\ \hline a \\$
Monitored start	S33 0 S33 0 S34 0 S13 0 S14 0	



# NOTICE

## With automatic start

The unit starts up automatically when the safeguard is reset, e.g. when the E-STOP pushbutton is released. Use external circuit measures to prevent an unexpected restart.

Reset delay time	Without reset	With reset
Link or N/C contact	Y39 ¢	Y39 ¢

Feedback loop	Automatic start	Monitored start
Contacts from external contactors	$ \begin{array}{c}  & S13 \\  & S14 \\  & S14 \\  & 13 (23) \\  & 14 (24) \\  & K5 \\  & K6 \\  & K6 \\  & K6 \\ \end{array} $	$ \begin{array}{c ccccccccccccccccccccccccccccccccccc$

## Legend

- S1/S2: E-STOP/safety gate switch
- S3: Reset button
- ♦ ①: Switch operated
- ► E: Gate open

# ▶ 主: Gate closed



#### INFORMATION

With automatic start, S33 and S34 must not be linked; with monitored start, S13 and S14 must not be linked.

## Operation

When the relay outputs are switched on, the mechanical contact on the relay cannot be tested automatically. Depending on the operational environment, measures to detect the non-opening of switching elements may be required under some circumstances.

When the product is used in accordance with the European Machinery Directive, a check must be carried out to ensure that the safety contacts on the relay outputs open correctly. Open the safety contacts (switch off output) and start the device again, so that the internal diagnostics can check that the safety contacts open correctly

- ▶ for SIL 3/PL e at least 1x per month
- ▶ for SIL 3/PL d at least 1x per year




## NOTICE

The safety functions should be checked after initial commissioning and each time the plant/machine is changed. The safety functions may only be checked by qualified personnel.

## **Status indicators**

LEDs indicate the status and errors during operation:

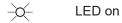

-Ò(-

-)0(-

-ò-

## POWER


Supply voltage is present.

- START Start circuit is closed.
  - **CH.1** Safety contacts of channel 1 are closed.
  - **CH.2** Safety contacts of channel 2 are closed.
  - **CH.1 [t]** Channel 3 safety contacts are closed.
- -x- CH.2 [t]

Channel 4 safety contacts are closed.

## Faults – Interference

- Earth fault: The supply voltage fails and the safety contacts open. Once the cause of the respective fault has been rectified and the supply voltage is switched off for approx.
   1 minute, the unit is ready for operation again.
- Contact malfunctions: If the contacts have welded, reactivation will not be possible after the input circuit has opened.
- LED "POWER" does not light: Short circuit or no supply voltage.
- In the case of an error, the delay-on de-energisation contacts may open before the delay time has elapsed.

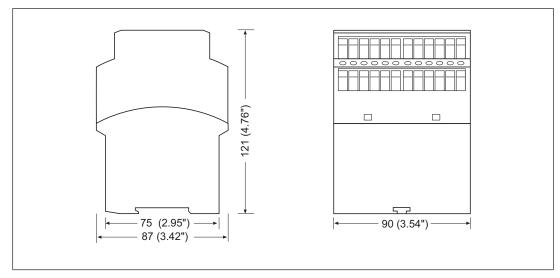

## **Dimensions in mm**

# **Technical details**

General	774550	774552	774558
Certifications	CCC, CE, EAC, TÜV, UKCA, cULus Listed	CCC, CE, EAC, TÜV, UKCA, cULus Listed	CCC, CE, EAC, TÜV, UKCA, cULus Listed
Electrical data	774550	774552	774558
Supply voltage			
Voltage	24 - 240 V	24 - 240 V	24 - 240 V
Kind	AC/DC	AC/DC	AC/DC
Voltage tolerance	-15 %/+10 %	-15 %/+10 %	-15 %/+10 %
Output of external power supply (AC)	8,5 VA	8,5 VA	8,5 VA
Output of external			
power supply (DC)	5 W	5 W	5 W
Frequency range AC	50 - 60 Hz	50 - 60 Hz	50 - 60 Hz
Residual ripple DC	160 %	160 %	160 %
Duty cycle	100 %	100 %	100 %
Inputs	774550	774552	774558
Quantity	2	2	2
Voltage at			
Input circuit DC	24 V	24 V	24 V
Start circuit DC	24 V	24 V	24 V
Feedback loop DC	24 V	24 V	24 V
Current at			
Input circuit DC	35 mA	35 mA	35 mA
Start circuit DC	30 mA	30 mA	30 mA
Feedback loop DC	3 mA	3 mA	3 mA
Max. overall cable resist- ance Rlmax			
Single-channel at UB DC	200 Ohm	200 Ohm	200 Ohm
Single-channel at UB AC	200 Ohm	200 Ohm	200 Ohm
Dual-channel with de- tection of shorts across contacts at UB DC	20 Ohm	20 Ohm	20 Ohm
Dual-channel with de- tection of shorts across contacts at UB AC	20 Ohm	20 Ohm	20 Ohm
Relay outputs	774550	774552	774558
Number of output con- tacts			
Safety contacts (N/O), instantaneous	2	2	2
Safety contacts (N/O), delayed	2	2	2
Max. short circuit current		 1 kA	 1 kA

Relay outputs	774550	774552	774558
Utilisation category			
in accordance with the			
standard	EN 60947-4-1	EN 60947-4-1	EN 60947-4-1
Utilisation category of			
safety contacts			
AC1 at	240 V	240 V	240 V
Min. current	0,01 A	0,01 A	0,01 A
Max. current	8 A	8 A	8 A
Max. power	2000 VA	2000 VA	2000 VA
DC1 at	24 V	24 V	24 V
Min. current	0,01 A	0,01 A	0,01 A
Max. current	8 A	8 A	8 A
Max. power	200 W	200 W	200 W
Utilisation category of safety contacts delayed			
AC1 at	240 V	240 V	240 V
Min. current	0,01 A	0,01 A	0,01 A
Max. current	8 A	8 A	8 A
Max. power	2000 VA	2000 VA	2000 VA
DC1 at	24 V	24 V	24 V
Min. current	0,01 A	0,01 A	0,01 A
Max. current	8 A	8 A	8 A
Max. power	200 W	200 W	200 W
Utilisation category			
in accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts			
AC15 at	230 V	230 V	230 V
Max. current	5 A	5 A	5 A
DC13 (6 cycles/min) at	24 V	24 V	24 V
Max. current	7 A	7 A	7 A
Utilisation category of safety contacts delayed			
AC15 at	230 V	230 V	230 V
Max. current	5 A	5 A	5 A
DC13 (6 cycles/min) at		24 V	24 V
Max. current	7 A	7 A	7 A
Utilisation category in ac- cordance with UL			
Voltage	240 V AC G. P.	240 V AC G. P.	240 V AC G. P.
with current	8 A	8 A	8 A
Pilot Duty	C300, R300	C300, R300	C300, R300

Relay outputs	774550	774552	774558
External contact fuse pro- tection, safety contacts			
in accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Max. melting integral	240 A²s	240 A²s	240 A²s
Blow-out fuse, quick	10 A	10 A	10 A
Blow-out fuse, slow	6 A	6 A	6 A
Blow-out fuse, gG	10 A	10 A	10 A
Circuit breaker 24V AC/DC, characteristic	<b>C</b> A	<b>C A</b>	C A
B/C External contact fues pro	6 A	6 A	6 A
External contact fuse pro- tection, delayed safety contacts			
Max. melting integral	240 A²s	240 A²s	240 A²s
Blow-out fuse, quick	10 A	10 A	10 A
Blow-out fuse, slow	6 A	6 A	6 A
Blow-out fuse, gG	10 A	10 A	10 A
Circuit breaker, 24			
V AC/DC, character- istic B/C	6 A	6 A	6 A
Contact material	AgSnO2 + 0,2 µm Au	AgSnO2 + 0,2 µm Au	AgSnO2 + 0,2 μm Au
Conventional thermal	774550	774552	774558
current while loading			
several contacts			
Ith per contact at UB AC; AC1: 240 V, DC1: 24 V			
Conv. therm. current			
with 1 contact	8 A	8 A	8 A
Conv. therm. current with 2 contacts	7 A	7 A	7 A
Conv. therm. current			
with 3 contacts	5,7 A	5,7 A	5,7 A
Conv. therm. current			
with 4 contacts	5 A	5 A	5 A
Ith per contact at UB DC; AC1: 240 V, DC1: 24 V			
Conv. therm. current with 1 contact	8 A	8 A	8 A
Conv. therm. current with 2 contacts	7 A	7 A	7 A
Conv. therm. current with 3 contacts	5,7 A	5,7 A	5,7 A
Conv. therm. current			

Times	774550	774552	774558
Switch-on delay			
with automatic start			
typ.	400 ms	400 ms	400 ms
with automatic start max.	550 ms	550 ms	550 ms
with automatic start after power on typ.	820 ms	820 ms	820 ms
with automatic start after power on max.	1.100 ms	1.100 ms	1.100 ms
with monitored start typ.	35 ms	35 ms	35 ms
with monitored start	<b>60</b>	<b>CO</b>	<b>60</b> m a
max.	60 ms	60 ms	60 ms
Delay-on de-energisation	15 ms	15 ms	15 ms
with E-STOP typ. with E-STOP max.			
with E-STOP max. with power failure typ.	30 ms	30 ms	30 ms
UB 240 V	1 s	1 s	1 s
with power failure max. UB 240 V	1450 ms	1450 ms	1450 ms
with power failure typ. UB 24 V	130 ms	130 ms	130 ms
with power failure max. UB 24 V	170 ms	170 ms	170 ms
Recovery time at max. switching frequency 1/s			
after E-STOP	50 ms +tv	50 ms +tv	50 ms +tv
after power failure on wide-range power sup-			
ply	1500 ms	1500 ms	1500 ms
Delay time tv	0,1 s, 0,5 s, 1 s, 2 s, 4 s, 6 s, 8 s, 10 s, 15 s, 20 s, 25 s, 30 s	0,1 s, 0,2 s, 0,3 s, 0,4 s, 0,5 s, 0,6 s, 0,7 s, 0,8 s, 1 s, 1,5 s, 2 s, 3 s	0,3 s, 5 s, 10 s, 20 s, 40 s, 60 s, 80 s, 100 s, 150 s, 200 s, 250 s, 300 s
Time accuracy	-15 %/+15 % +50 ms	-15 %/+15 % +50 ms	-15 %/+15 % +50 ms
Repetition accuracy	2 %	2 %	2 %
Waiting period with a monitored start	300 ms	300 ms	300 ms
Min. start pulse duration with a monitored start	30 ms	30 ms	30 ms
Supply interruption before de-energisation	20 ms	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	∞	∞	∞
Environmental data	774550	774552	774558
Climatic suitability	EN 60068-2-78	EN 60068-2-78	EN 60068-2-78
Ambient temperature			
Temperature range	-10 - 55 °C	-10 - 55 °C	-10 - 55 °C
Storage temperature			
Temperature range	-40 - 85 °C	-40 - 85 °C	-40 - 85 °C

Environmental data	774550	774552	774558
Climatic suitability			
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during op-			
eration	Not permitted	Not permitted	Not permitted
EMC	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1	EN 60947-5-1, EN 61000-6-2, EN 61000-6-4, EN 61326-3-1
Vibration			
in accordance with the standard	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 55 Hz	10 - 55 Hz	10 - 55 Hz
Amplitude	0,35 mm	0,35 mm	0,35 mm
Airgap creepage			
in accordance with the standard	EN 60947-1	EN 60947-1	EN 60947-1
Overvoltage category	111 / 11	111 / 11	111 / 11
Pollution degree	2	2	2
Rated insulation voltage	250 V	250 V	250 V
Rated impulse withstand			
voltage	4 kV	4 kV	4 kV
Protection type			
Housing	IP40	IP40	IP40
Terminals	IP20	IP20	IP20
Mounting area (e.g.			
control cabinet)	IP54	IP54	IP54
Mechanical data	774550	774552	774558
Mounting position	Any	Any	Any
Mechanical life	10,000,000 cycles	10,000,000 cycles	10,000,000 cycles
Material			
Bottom	PPO UL 94 V1	PPO UL 94 V1	PPO UL 94 V1
Front			
	ABS UL 94 V0	ABS UL 94 V0	ABS UL 94 V0
Тор	PPO UL 94 V1	PPO UL 94 V1	PPO UL 94 V1
Top Connection type	PPO UL 94 V1 Screw terminal	PPO UL 94 V1 Screw terminal	PPO UL 94 V1 Screw terminal
Top Connection type Mounting type	PPO UL 94 V1	PPO UL 94 V1	PPO UL 94 V1
Top Connection type	PPO UL 94 V1 Screw terminal Fixed	PPO UL 94 V1 Screw terminal Fixed	PPO UL 94 V1 Screw terminal Fixed
Top Connection type Mounting type Conductor cross section	PPO UL 94 V1 Screw terminal Fixed	PPO UL 94 V1 Screw terminal	PPO UL 94 V1 Screw terminal Fixed
TopConnection typeMounting typeConductor cross section with screw terminals	PPO UL 94 V1 Screw terminal Fixed	PPO UL 94 V1 Screw terminal Fixed	PPO UL 94 V1 Screw terminal Fixed
TopConnection typeMounting typeConductor cross section with screw terminals1 core flexible2 core with the same cross section, flexible with crimp connectors,	PPO UL 94 V1 Screw terminal Fixed 0,2 - 4 mm <sup>2</sup> , 24 - 10 AWG 0,2 - 2,5 mm <sup>2</sup> , 24 - 14 AWG	PPO UL 94 V1 Screw terminal Fixed 0,2 - 4 mm <sup>2</sup> , 24 - 10 AWG 0,2 - 2,5 mm <sup>2</sup> , 24 - 14	PPO UL 94 V1 Screw terminal Fixed 0,2 - 4 mm <sup>2</sup> , 24 - 10 AWG 0,2 - 2,5 mm <sup>2</sup> , 24 - 14

Mechanical data	774550	774552	774558	
	114550	114552	114556	
Stripping length with screw terminals	6 mm	6 mm	6 mm	
Dimensions				
Height	87 mm	87 mm	87 mm	
Width	90 mm	90 mm	90 mm	
Depth	121 mm	121 mm	121 mm	
Weight	510 g	510 g	510 g	

Where standards are undated, the 2022-09 latest editions shall apply.

## Safety characteristic data



#### NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN ISO 13849-1: 2015
	PL	Category	SIL CL/max- imum SIL	PFH <sub>D</sub> [1/h]	T <sub>м</sub> [year]
Safety contacts, instantaneous	PL e	Cat. 4	SIL 3	2,31E-09	20
Safety contacts, delayed <30 s	PL d	Cat. 3	SIL 3	2,64E-09	20
Safety contacts, delayed ≥30 s	PL c	Cat. 1	SIL 1	2,87E-09	20

Explanatory notes for the safety-related characteristic data:

- Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T<sub>M</sub> is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.



## INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

# Supplementary data




## CAUTION!

It is essential to consider the relay's service life graphs. The relay outputs' safety-related characteristic data is only valid if the values in the service life graphs are met.

The PFH value depends on the switch frequency and the load of the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

## Service life graph

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

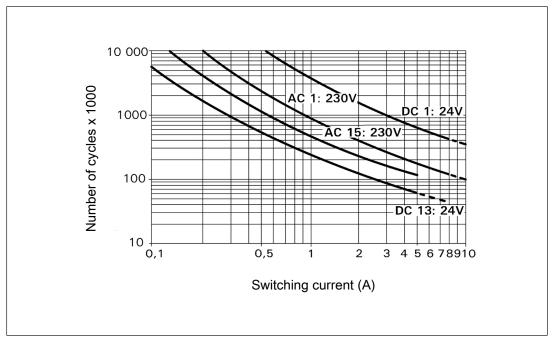

## Example

- Inductive load: 0.2 A
- Utilisation category: AC15
- Contact service life: 4 000 000 cycles

Provided the application to be implemented requires fewer than 4 000 000 cycles, the PFH value (see Technical details) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all output contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

Product type	Features	Connection type	Order no.
PNOZ XV2.1	24-240 V AC/DC; Delay: up to 3 s selectable	Screw terminals	774552
PNOZ XV2.1	24-240 V AC/DC; Delay: up to 30 s selectable	Screw terminals	774550
PNOZ XV2.1	24-240 V AC/DC; Delay: up to 300 s selectable	Screw terminals	774558

## **Order reference**

# EC declaration of conformity

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at www.pilz.com/downloads.

Authorised representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

# **UKCA-Declaration of Conformity**

This product(s) complies with following UK legislation: Supply of Machinery (Safety) Regulation 2008.

The complete UKCA Declaration of Conformity is available on the Internet at www.pilz.com/ downloads.

Representative: Pilz Automation Technology, Pilz House, Little Colliers Field, Corby, Northamptonshire, NN18 8TJ United Kingdom, eMail: mail@pilz.co.uk

# Support

Technical support is available from Pilz round the clock.

#### Americas

Brazil +55 11 97569-2804 Canada +1 888 315 7459 Mexico +52 55 5572 1300 USA (toll-free) +1 877-PILZUSA (745-9872)

#### Asia

China +86 21 60880878-216 Japan +81 45 471-2281 South Korea +82 31 778 3300

#### Australia and Oceania

Australia +61 3 95600621 New Zealand +64 9 6345350

#### Europe

Austria +43 1 7986263-0 Belgium, Luxembourg +32 9 3217570 France +33 3 88104003 Germany +49 711 3409-444 Ireland +353 21 4804983 Italy, Malta +39 0362 1826711

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.









Scandinavia +45 74436332 Spain +34 938497433 Switzerland +41 62 88979-32 The Netherlands +31 347 320477 Turkey +90 216 5775552 United Kingdom +44 1536 462203

You can reach our international hotline on: +49 711 3409-222 support@pilz.com CECE®, CHRE®, CMSE®, InduraNET p<sup>®</sup>, Leansate®, Master of Safety®, Master of Security®, PAScoal®, PASconfig®, Pitz®, PTB, PLID®, PMCprimo®, PMCprotego®, PMCtendo®, PMCP, PMMS, PRIM®, PSRIM®, PRIM®, PSRIM®, PSRIM PSRIM®, PSRI%, PSRIM®, PSRIM®, PSRIM®, PSRI%, PSRI and the scope of the equipment. f you have any questions.

We are represented internationally. Please refer to our homepage www.pilz.com for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: info@pilz.com, Internet: www.pilz.com

