



## PNOZ m EF 8DI2DOT

**PILZ**  
THE SPIRIT OF SAFETY

- ▶ Configurable, safe small controllers PNOZmulti 2

This document is the original document.

Where unavoidable, for reasons of readability, the masculine form has been selected when formulating this document. We do assure you that all persons are regarded without discrimination and on an equal basis.

All rights to this documentation are reserved by Pilz GmbH & Co. KG. Copies may be made for the user's internal purposes. Suggestions and comments for improving this documentation will be gratefully received.

Pilz®, PIT®, PMI®, PNOZ®, Primo®, PSEN®, PSS®, PVIS®, SafetyBUS p®, SafetyEYE®, SafetyNET p®, the spirit of safety® are registered and protected trademarks of Pilz GmbH & Co. KG in some countries.



SD means Secure Digital

<b>1</b>	<b>Introduction</b>	<b>5</b>
1.1	Validity of documentation	5
1.2	Using the documentation	5
1.3	Definition of symbols	5
1.4	Third-party manufacturer licence information	6
<b>2</b>	<b>Overview</b>	<b>7</b>
2.1	Scope of supply	7
2.2	Unit features	7
2.3	Front view	8
<b>3</b>	<b>Safety</b>	<b>9</b>
3.1	Intended use	9
3.2	System requirements	10
3.3	Safety regulations	10
3.3.1	Safety assessment	10
3.3.2	Use of qualified personnel	10
3.3.3	Warranty and liability	10
3.3.4	Disposal	10
3.3.5	For your safety	11
<b>4</b>	<b>Function description</b>	<b>12</b>
4.1	Integrated protection mechanisms	12
4.2	Functions	12
4.2.1	Inputs	12
4.2.2	2-pole outputs	13
4.3	System reaction time	14
4.4	Block diagram	14
<b>5</b>	<b>Installation</b>	<b>15</b>
5.1	General installation guidelines	15
5.2	Dimensions in mm	15
5.3	Connecting the base unit and expansion modules	16
<b>6</b>	<b>Commissioning</b>	<b>17</b>
6.1	General wiring guidelines	17
6.2	Connection	18
6.3	Download modified project to the PNOZmulti system	19
<b>7</b>	<b>Operation</b>	<b>20</b>
7.1	LED indicators	20
<b>8</b>	<b>Technical details</b>	<b>22</b>
8.1	Safety characteristic data	25
<b>9</b>	<b>Supplementary data</b>	<b>26</b>
9.1	Maximum capacitive load C ( $\mu\text{F}$ ) with load current I (A) at the semiconductor outputs	26

<b>10</b>	<b>Order reference .....</b>	<b>27</b>
10.1	Product.....	27
10.2	Accessories.....	27
10.2.1	Replacement terminals .....	27
10.2.2	Connector plug.....	27
<b>11</b>	<b>EC declaration of conformity .....</b>	<b>28</b>
<b>12</b>	<b>UKCA-Declaration of Conformity .....</b>	<b>29</b>

# 1 Introduction

## 1.1 Validity of documentation

This documentation is valid for the product PNOZ m EF 8DI2DOT from Version HW:01, FW:01.00.

This operating manual explains the function and operation, describes the installation and provides guidelines on how to connect the product.

## 1.2 Using the documentation

This document is intended for instruction. Only install and commission the product if you have read and understood this document. The document should be retained for future reference.

## 1.3 Definition of symbols

Information that is particularly important is identified as follows:



### **DANGER!**

This warning must be heeded! It warns of a hazardous situation that poses an immediate threat of serious injury and death and indicates preventive measures that can be taken.



### **WARNING!**

This warning must be heeded! It warns of a hazardous situation that could lead to serious injury and death and indicates preventive measures that can be taken.



### **CAUTION!**

This refers to a hazard that can lead to a less serious or minor injury plus material damage, and also provides information on preventive measures that can be taken.



### **NOTICE**

This describes a situation in which the product or devices could be damaged and also provides information on preventive measures that can be taken. It also highlights areas within the text that are of particular importance.



**INFORMATION**

This gives advice on applications and provides information on special features.

## 1.4 **Third-party manufacturer licence information**

This product includes Open Source software with various licenses.

Further information is available in the document "Third-party manufacturer licence information PNOZ m EF 8DI2DOT" (document number 1006354) at [www.pilz.com](http://www.pilz.com).

## 2 Overview

### 2.1 Scope of supply

- ▶ Expansion module PNOZ m EF 8DI2DOT
- ▶ Jumper

### 2.2 Unit features


Application of the product PNOZ m EF 8DI2DOT:

Expansion module for connection to a base unit from the PNOZmulti 2 system.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
  - 2 dual-pole safety outputs  
depending on the application, up to PL e of EN ISO 13849-1 and up to SIL 3 of EN IEC 62061.  
The outputs are suitable for controlling a press safety valve in accordance with EN 692.
  - Open circuit detection configurable
- ▶ 8 inputs
  - The inputs can be used to evaluate run monitoring for press applications.
  - Configurable pulse suppression at the inputs
- ▶ LED display for:
  - Error messages
  - Diagnostics
  - Switch state of the outputs
  - Switch state of the inputs
- ▶ Monitoring of shorts across contacts at the inputs by test pulses
  - from the base unit
  - from the expansion module
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:  
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti 2 that can be connected.

## 2.3 Front view

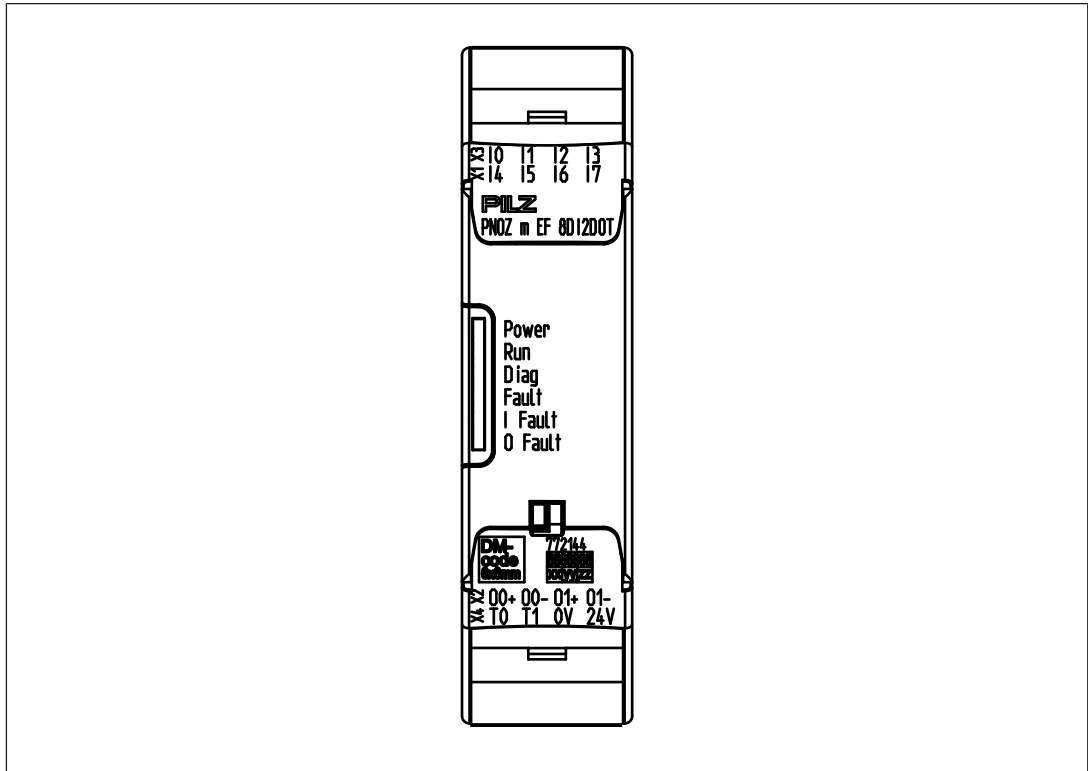

### Legend

- X1, X3: Inputs I0 – I7
- X2: Dual-pole outputs O0+, O0- and O1+, O1-
- X4: Supply connections 0 V, 24 V
- Test pulse outputs T0, T1
- LEDs POWER, Run, Diag, Fault, I Fault, O Fault
- Terminal LEDs: Each terminal is assigned an LED.



## 3 Safety

### 3.1 Intended use

The expansion module may only be connected to a base unit from the configurable system PNOZmulti 2 (please refer to the document "PNOZmulti System Expansion" for details of the base units that can be connected).

The configurable system PNOZmulti 2 is used for the safety-related interruption of safety circuits and is designed for use in:

- ▶ Emergency stop equipment
- ▶ Safety circuits in accordance with VDE 0113 Part 1 and EN 60204-1
- ▶ The inputs of the module PNOZ m EF 8DI2DOT can be used to evaluate run monitoring for press applications.
- ▶ The outputs are suitable for the control of a press safety valve in accordance with EN 692.

#### Lifts Directive

The product PNOZ m EF 8DI2DOT can be used as a PESSRAL (programmable electronic system in safety-related applications for lifts) in accordance with the Lifts Directive 2014/33/EU. It meets the requirements for passenger and goods lifts in accordance with EN 81-1/2, EN 81-20, EN 81-22 and EN 81-50, as well as the requirements for escalators and moving walks in accordance with EN 115-1.

The safety controller should be installed in a protected environment that meets at least the requirements of pollution degree 2.


Example: Protected inside space or control cabinet with protection type IP54 and appropriate air conditioning.

#### Use in furnaces

The product PNOZ m EF 8DI2DOT can be used in furnaces in accordance with EN 298.

#### Improper use

The following is deemed improper use in particular

- ▶ Any component, technical or electrical modification to the product,
- ▶ Use of the product outside the areas described in this operating manual,
- ▶ Use of the product outside the technical details (see [Technical details](#)  22]).



#### NOTICE

##### EMC-compliant electrical installation

The product is designed for use in an industrial environment. The product may cause interference if installed in other environments. If installed in other environments, measures should be taken to comply with the applicable standards and directives for the respective installation site with regard to interference.

## 3.2 System requirements

Please refer to the "Product Modifications PNOZmulti" document in the "Version overview" section for details of which versions of the base unit and PNOZmulti Configurator can be used for this product.

## 3.3 Safety regulations

### 3.3.1 Safety assessment

Before using a device it is necessary to perform a safety assessment in accordance with the Machinery Directive.

Functional safety is guaranteed for the product as a single component. However, this does not guarantee the functional safety of the overall plant/machine. In order to achieve the required safety level for the overall plant/machine, define the safety requirements for the plant/machine and then define how these must be implemented from a technical and organisational standpoint.

### 3.3.2 Use of qualified personnel

The products may only be assembled, installed, programmed, commissioned, operated, maintained and decommissioned by competent persons.

A competent person is someone who, because of their training, experience and current professional activity, has the specialist knowledge required to test, assess and operate the work equipment, devices, systems, plant and machinery in accordance with the general standards and guidelines for safety technology.

It is the company's responsibility only to employ personnel who

- ▶ Are familiar with the basic regulations concerning health and safety / accident prevention,
- ▶ Have read and understood the information provided in this description under "Safety",
- ▶ And have a good knowledge of the generic and specialist standards applicable to the specific application.

### 3.3.3 Warranty and liability

All claims to warranty and liability will be rendered invalid if

- ▶ The product was used contrary to the purpose for which it is intended,
- ▶ Damage can be attributed to not having followed the guidelines in the manual,
- ▶ Operating personnel are not suitably qualified,
- ▶ Any type of modification has been made (e.g. exchanging components on the PCB boards, soldering work etc.).

### 3.3.4 Disposal

- ▶ In safety-related applications, please comply with the mission time  $T_M$  in the safety-related characteristic data.
- ▶ When decommissioning, please comply with local regulations regarding the disposal of electronic devices (e.g. Electrical and Electronic Equipment Act).

### 3.3.5 For your safety

The unit meets all the necessary conditions for safe operation. However, you should always ensure that the following safety requirements are met:

- ▶ This operating manual only describes the basic functions of the unit. The expanded functions are described in the PNOZmulti Configurator's online help. Only use these functions once you have read and understood the documentations.
- ▶ Do not open the housing or make any unauthorised modifications.
- ▶ Please make sure you shut down the supply voltage when performing maintenance work (e.g. exchanging contactors).

## 4 Function description

### 4.1 Integrated protection mechanisms

The relay meets the following safety requirements:

- ▶ The circuit is redundant with built-in self-monitoring.
- ▶ The safety device remains effective in the case of a component failure.
- ▶ The safety outputs are tested periodically using a disconnection test.

### 4.2 Functions

The expansion module provides additional inputs and dual-pole semiconductor outputs.

The function of the inputs and outputs on the control system depends on the user program created using the PNOZmulti Configurator. The user program is downloaded from the PNOZmulti Configurator to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti control system, plus connection examples.

#### 4.2.1 Inputs

The expansion module provides 8 inputs.

Features

- ▶ Each input can be used to evaluate run monitoring for press applications.
- ▶ Each input can be configured for pulse detection for run monitoring.
  - The pulse width has to be at least 1 ms for reliable pulse detection.
  - When pulse detection is active, the functions pulse suppression and detection of shorts across contacts are deactivated via the test pulses.
- ▶ In PNOZmulti Configurator the pulse suppression time can be changed for the inputs. A change of the preset pulse suppression time (see [Technical details \[22\]](#)) can be used to suppress the self-monitored outputs and for interference suppression.
- ▶ For detection of shorts across contacts of the inputs:
  - In the main program the inputs can be connected with the test pulses of the base unit.
  - In the module program the inputs can be connected to the test pulses of the expansion module.

## 4.2.2 2-pole outputs

The expansion module provides two dual-pole outputs.

### Features:


- ▶ Signals at the output
  - "0" signal (0 V) at the output (O+/O-):
    - Output is high impedance
    - No current to the load
  - "1" signal (+24 V) at the output (O+/O-):
    - Output is low impedance
    - Current is supplied to the load
- ▶ The max. capacity at an output depends on the load (see drawing on the max. capacitive load). Connecting a higher capacity may lead to an error.
- ▶ Operation with electronic contactors has not been tested and may lead to errors. Please contact our Customer Support team if you are using electronic contactors.
- ▶ Open circuit detection
- ▶ Cannot be used as a single-pole output

### Output tests

The following output tests are carried out:

- ▶ Asymmetric test in error-free operation
  - In this test, one output transistor is switched on and the other switched off for the test duration  $t_1$  as a maximum. The load is not switched on because of the test. If errors are detected during this test, then an advanced on test is run.
  - The test duration  $t_1$  is max. 5 ms.
  - The repetition time between the asymmetrical tests  $t_2$  is at least 30 s.
  - The time  $t_3$  between two asymmetrical tests O+ and O- is at least 1 s.
- ▶ Advanced on test in the event of an error
  - The advanced on test is always run directly after an asymmetric test, in which an error has occurred. It is used to determine the cause of the error.
  - The test is run for the test duration  $t_1$  as a maximum
  - The test duration  $t_1$  is max. 5 ms.
  - The test enables precise error diagnostics
  - The load must not switch on because of the test.
  - The following errors are detected:
    - Shorts across contacts (external error),
    - Short circuits and interruptions on the transistors,
    - Short circuits and open circuit on the connected load

Function diagram of the asymmetric test

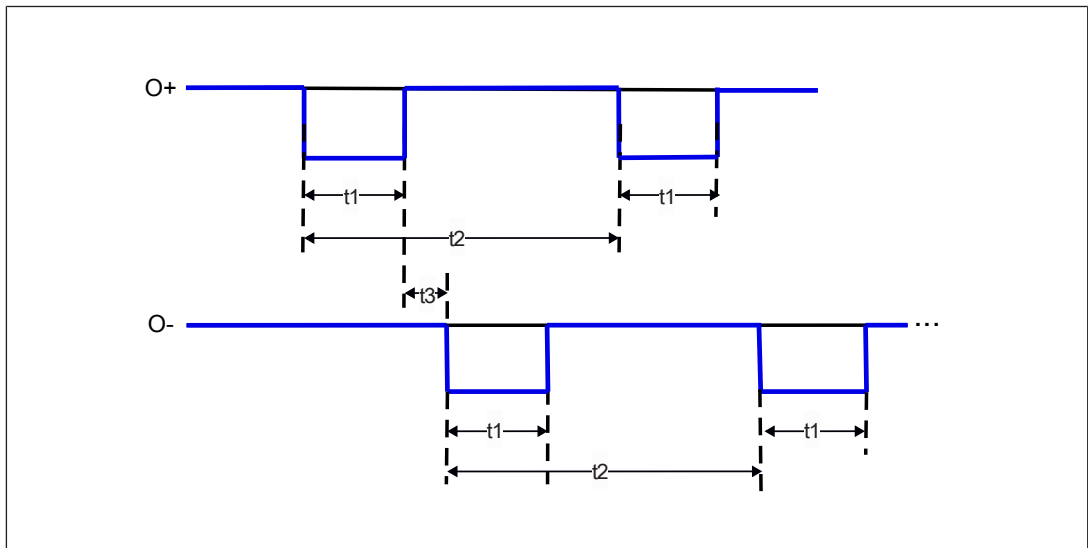

**WARNING!**


The expanded switch-on tests can cause a capacitive load to switch on unintentionally.

Please note the test duration  $t_1$  of the expanded switch-on test in case of a fault.

### 4.3 System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

### 4.4 Block diagram

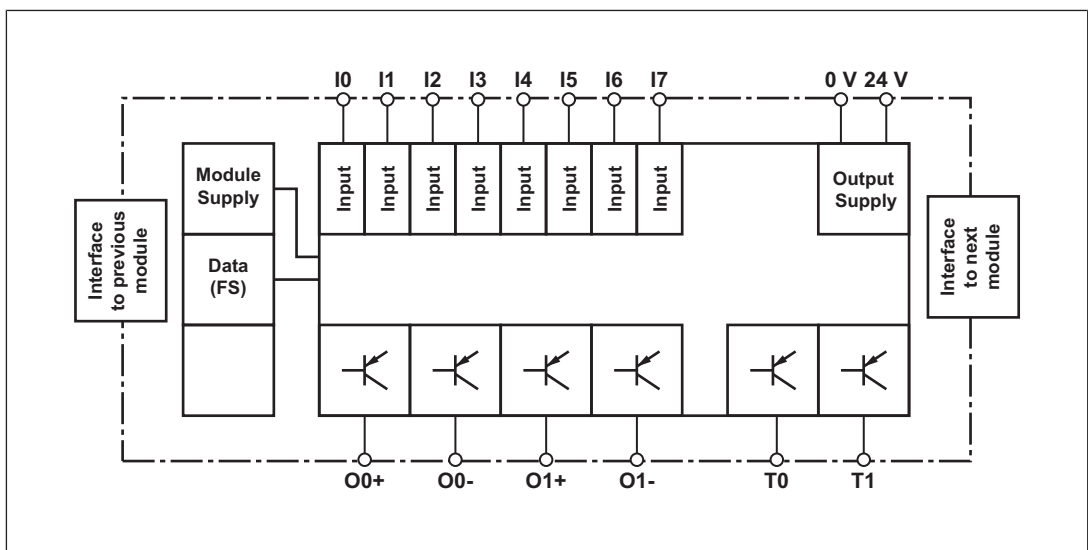

## 5 Installation

### 5.1 General installation guidelines

- ▶ The unit should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Fit the safety system to a horizontal mounting rail. The venting slots must face upward and downward. Other mounting positions could damage the safety system.
- ▶ Use the locking elements on the rear of the unit to attach it to a mounting rail.
- ▶ In environments exposed to heavy vibration, the unit should be secured using a fixing element (e.g. retaining bracket or end angle).
- ▶ Open the locking slide before lifting the unit from the mounting rail.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.
- ▶ The ambient temperature of the PNOZmulti units in the control cabinet must not exceed the figure stated in the technical details. Air conditioning may otherwise be required.




#### NOTICE

Damage due to electrostatic discharge!

Electrostatic discharge can damage components. Ensure against discharge before touching the product, e.g. by touching an earthed, conductive surface or by wearing an earthed armband.

### 5.2 Dimensions in mm

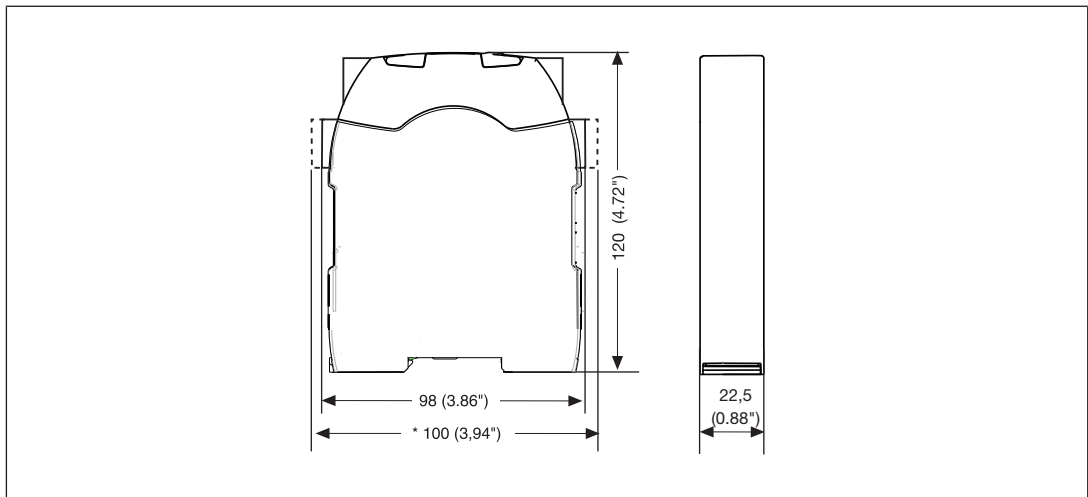

### 5.3 Connecting the base unit and expansion modules

Connect the base unit and the expansion modules as described in the operating manuals for the base modules.

- ▶ The terminator must be fitted to the last expansion module
- ▶ Install the expansion module in the position configured in the PNOZmulti Configurator.

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the document "PNOZmulti System Expansion" for details of the number of modules that can be connected to the base unit and the module types.



## 6 Commissioning

### 6.1 General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[22\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.

The power supply must meet the regulations for extra low voltages with protective separation (SELV/PELV).

- ▶ Protect the supply voltage as follows:
  - Circuit breaker, characteristic C - 6 A
  - or
  - Blow-out fuse, slow, 6 A
- ▶ The unit has two dual-pole semiconductor outputs. These may be configured as single-pole or redundant outputs. The output assignment is defined in the PNOZmulti Configurator. Wire the outputs as described in the table.



#### NOTICE

**Please note:**

Loads over 10 kOhm may mistakenly be detected as an open circuit. Open circuit detection can be configured and also deactivated in PNOZmulti Configurator.

## 6.2 Connection

### Supply voltage

Supply voltage	DC


### Connection examples for the input circuit

Input circuit	Single-channel	Dual-channel
Example: E-STOP without detection of shorts across contacts		
Example: E-STOP with detection of shorts across contacts		

### Connection examples for the output circuit

Redundant output		
Single output		

**Feedback loop**

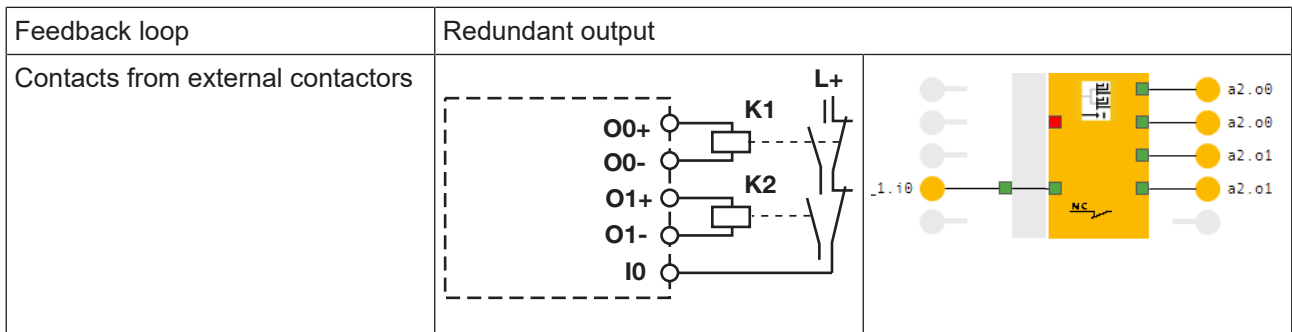

### 6.3 Download modified project to the PNOZmulti system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.



**NOTICE**




For the commissioning and after every user program change, you must check whether the safety devices are functioning correctly.


















## 7 Operation



The PNOZmulti system is ready for operation when the "POWER" and "RUN" LEDs on the base unit are lit continuously.



### 7.1 LED indicators

#### Legend

-  LED on
-  LED flashes
-  LED off

LED						Error
POWER	Run	Diag	Fault	IFault	OFault	
●						No supply voltage
						Expansion module PNOZ m EF 8DI2DOT running without error.
						Expansion module PNOZ m EF 8DI2DOT is in a STOP condition.
						Internal error on the expansion module PNOZ m EF 8DI2DOT or on the overall system. Expansion module is in a safe condition.
						External error on the expansion module PNOZ m EF 8DI2DOT or on the overall system. Expansion module is in a safe condition.
						Faulty input signal at the expansion module PNOZ m EF 8DI2DOT in run mode, e.g. pulse error.
						Error at the outputs of the expansion module PNOZ m EF 8DI2DOT. Expansion module is in safe condition, e.g. Short across contacts or stuck-at at output
						Error at the inputs of the expansion module PNOZ m EF 8DI2DOT. Expansion module is in a safe condition.
						Error at the output of the expansion module PNOZ m EF 8DI2DOT in run mode, e.g. feedback loop defective.

Terminal LEDs			Meaning
I0 ...I7		Green	1 signal
	●		0 signal
O0+, O0- O1+ O1--		Green	1 signal
O0+, O0- O1+ O1--	●		0 signal

Terminal LEDs			Meaning
T0, T1		Green	Pulse output is used
			Pulse output is not used

## 8 Technical details

<b>General</b>	
Certifications	<b>CE, EAC, KOSHA, TÜV, UKCA, cULus Listed</b>
Application range	<b>Failsafe</b>
Module's device code	<b>00E5h</b>
<b>Electrical data</b>	
Supply voltage	
for	<b>Supply to the SC outputs</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Voltage tolerance	<b>-20 %/+25 %</b>
Max. continuous current that the external power supply must provide	<b>4 A</b>
Potential isolation	<b>yes</b>
Supply voltage	
for	<b>Module supply</b>
internal	<b>Via base unit</b>
Voltage	<b>24 V</b>
Kind	<b>DC</b>
Current consumption	<b>35 mA</b>
Power consumption	<b>0,8 W</b>
Max. power dissipation of module	<b>8 W</b>
Status indicator	<b>LED</b>
<b>Inputs</b>	
Number	<b>8</b>
Input voltage in accordance with EN 61131-2 Type 1	<b>24 V DC</b>
Input current at rated voltage	<b>5 mA</b>
Input current range	<b>2,5 - 5,3 mA</b>
Pulse suppression	<b>0,4 - 5 ms</b>
Input delay	<b>8 ms + pulse suppression</b>
Potential isolation	<b>No</b>
<b>Semiconductor outputs, 2-pole</b>	
Number of dual-pole semiconductor outputs	<b>2</b>
Permitted current range	<b>0,00 - 2,40 A</b>
Switching capability	
Voltage	<b>24 V DC</b>
Typ. output current at "1" signal and rated voltage of semiconductor output	<b>2 A</b>
Residual current at "0" signal	<b>0,5 mA</b>
Max. pulsed current for $t < 100$ ms	<b>12 A</b>
Switch-off delay	<b>6 ms</b>
Short circuit-proof	<b>yes</b>
Max. duration of off time during self test	<b>5 ms</b>

<b>Test pulse outputs</b>	
Number of test pulse outputs	<b>2</b>
Voltage	<b>24 V</b>
Current	<b>0,05 A</b>
Max. duration of off time during self test	<b>1,4 ms</b>
Short circuit-proof	<b>yes</b>
Potential isolation	<b>No</b>
<b>Environmental data</b>	
Ambient temperature	
In accordance with the standard	<b>EN 60068-2-14</b>
Temperature range	<b>0 - 60 °C</b>
Forced convection in control cabinet off	<b>55 °C</b>
Storage temperature	
In accordance with the standard	<b>EN 60068-2-1/-2</b>
Temperature range	<b>-25 - 70 °C</b>
Climatic suitability	
In accordance with the standard	<b>EN 60068-2-30, EN 60068-2-78</b>
Condensation during operation	<b>Not permitted</b>
Max. operating height above sea level	<b>2000 m</b>
EMC	<b>EN 61131-2</b>
Vibration	
In accordance with the standard	<b>EN 60068-2-6</b>
Frequency	<b>10 - 55 Hz</b>
Acceleration	<b>1g</b>
Shock stress	
In accordance with the standard	<b>EN 60068-2-27</b>
Acceleration	<b>15g</b>
Duration	<b>11 ms</b>
Airgap creepage	
In accordance with the standard	<b>EN 61131-2</b>
Overvoltage category	<b>II</b>
Pollution degree	<b>2</b>
Protection type	
In accordance with the standard	<b>EN 60529</b>
Housing	<b>IP20</b>
Terminals	<b>IP20</b>
Mounting area (e.g. control cabinet)	<b>IP54</b>
<b>Potential isolation</b>	
Potential isolation between	<b>2-pole semiconductor outputs and system voltage</b>
Type of potential isolation	<b>Basic insulation</b>
Rated surge voltage	<b>2500 V</b>
<b>Mechanical data</b>	
Mounting position	<b>horizontally on mounting rail</b>

<b>Mechanical data</b>	
DIN rail	
Top hat rail	<b>35 x 7,5 EN 50022</b>
Recess width	<b>27 mm</b>
Cable length	
Max. cable length per input	<b>1 km</b>
Sum of individual cable lengths at the test pulse output	<b>1 km</b>
Material	
Bottom	<b>PC</b>
Front	<b>PC</b>
Top	<b>PC</b>
Connection type	<b>Spring-loaded terminal, screw terminal</b>
Mounting type	<b>plug-in</b>
Conductor cross section with screw terminals	
1 core flexible	<b>0,25 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	<b>0,2 - 2,5 mm<sup>2</sup>, 24 - 16 AWG</b>
Torque setting with screw terminals	<b>0,5 Nm</b>
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	<b>0,2 - 2,5 mm<sup>2</sup>, 24 - 12 AWG</b>
Spring-loaded terminals: Terminal points per connection	<b>2</b>
Stripping length with spring-loaded terminals	<b>9 mm</b>
Dimensions	
Height	<b>101,4 mm</b>
Width	<b>22,5 mm</b>
Depth	<b>120 mm</b>
Weight	<b>105 g</b>

Where standards are undated, the 2017-09 latest editions shall apply.



## 8.1 Safety characteristic data



### NOTICE

You must comply with the safety characteristic data in order to achieve the required safety level for your plant/machine.

Unit	Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH <sub>D</sub> [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T <sub>M</sub> [year]
------	----------------	----------------------------	----------------------------------	-------------------------------------------	----------------------------------------	---------------------	---------------------	-----------------------------------------------

### Logic

CPU	2-channel	PL e	Cat. 4	SIL 3	2,84E-10	SIL 3	2,44E-05	20
-----	-----------	------	--------	-------	----------	-------	----------	----

### Input

Inputs	1-channel	PL d	Cat. 2	SIL 2	2,10E-09	SIL 2	1,84E-04	20
--------	-----------	------	--------	-------	----------	-------	----------	----

Inputs	2-channel	PL e	Cat. 4	SIL 3	4,27E-11	SIL 3	3,73E-06	20
--------	-----------	------	--------	-------	----------	-------	----------	----

Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL 2	1,80E-10	SIL 2	1,54E-05	20
--------	-----------------------------------	------	--------	-------	----------	-------	----------	----

Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL 3	2,10E-10	SIL 3	1,86E-05	20
--------	-----------------------------	------	--------	-------	----------	-------	----------	----

### Output

SC outputs (2-pole)	2-channel	PL e	Cat. 4	SIL 3	2,82E-10	SIL 3	2,42E-05	20
---------------------	-----------	------	--------	-------	----------	-------	----------	----

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T<sub>M</sub> is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.




### INFORMATION

A safety function's SIL/PL values are **not** identical to the SIL/PL values of the units that are used and may be different. We recommend that you use the PAScal software tool to calculate the safety function's SIL/PL values.

## 9 Supplementary data

### 9.1 Maximum capacitive load C ( $\mu\text{F}$ ) with load current I (A) at the semiconductor outputs

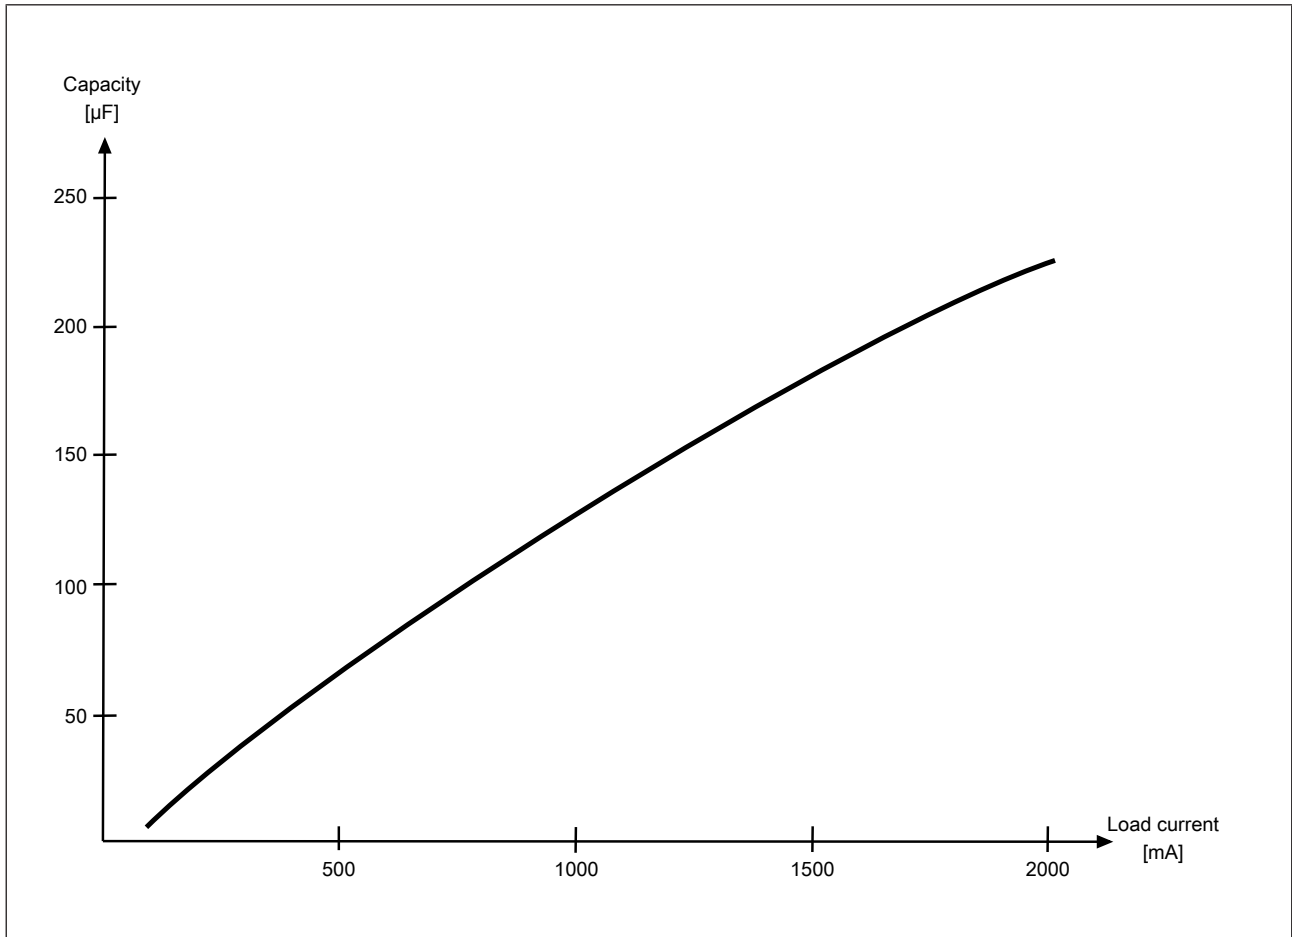

## 10 Order reference

### 10.1 Product

Product type	Features	Order no.
PNOZ m EF 8DI4-DOT	Configurable safe small controllers PNOZmulti 2, expansion module, 8 safe inputs, 2 safe dual-pole semiconductor outputs.	772144

### 10.2 Accessories

#### 10.2.1 Replacement terminals

Product type	Features	Order no.
PNOZ s Setscrew terminals 22.5mm	Set of plug-in replacement terminals 4-pin of screw type, PU = 1 piece each X1, X2, X3, X4.	750004
PNOZ s Setspring-loaded terminals 22.5mm	Set of plug-in replacement terminals 4-pin of spring-loaded type, PU = 1 piece each X1, X2, X3, X4.	751004

#### 10.2.2 Connector plug

Product type	Features	Order no.
PNOZ mm0.xp connector left (10 pcs)	Connector plug to connect the modules to the left-hand side of the PNOZmulti base unit, yellow/black (10 pieces).	779260

## 11 **EC declaration of conformity**

This product/these products meet the requirements of the directive 2006/42/EC for machinery of the European Parliament and of the Council. The complete EC Declaration of Conformity is available on the Internet at [www.pilz.com/downloads](http://www.pilz.com/downloads).

Authorised representative: Norbert Fröhlich, Pilz GmbH & Co. KG, Felix-Wankel-Str. 2, 73760 Ostfildern, Germany

## 12 UKCA-Declaration of Conformity

This product(s) complies with following UK legislation: Supply of Machinery (Safety) Regulation 2008.

The complete UKCA Declaration of Conformity is available on the Internet at [www.pilz.com/downloads](http://www.pilz.com/downloads).

Representative: Pilz Automation Technology, Pilz House, Little Colliers Field, Corby, Northamptonshire, NN18 8TJ United Kingdom, eMail: [mail@pilz.co.uk](mailto:mail@pilz.co.uk)

# ► Support

Technical support is available from Pilz round the clock.

## Americas

### Brazil

+55 11 97569-2804

### Canada

+1 888 315 7459

### Mexico

+52 55 5572 1300

### USA (toll-free)

+1 877-PILZUSA (745-9872)

## Asia

### China

+86 21 60880878-216

### Japan

+81 45 471-2281

### South Korea

+82 31 778 3300

## Australia and Oceania

### Australia

+61 3 95600621

### New Zealand

+64 9 6345350

## Europe

### Austria

+43 1 7986263-0

### Belgium, Luxembourg

+32 9 3217570

### France

+33 3 88104003

### Germany

+49 711 3409-444

### Ireland

+353 21 4804983

### Italy, Malta

+39 0362 1826711

## Scandinavia

+45 74436332

## Spain

+34 938497433

## Switzerland

+41 62 88979-32

## The Netherlands

+31 347 320477

## Turkey

+90 216 5775552

## United Kingdom

+44 1536 462203

## You can reach our international hotline on:

+49 711 3409-222

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.



We are represented internationally. Please refer to our homepage [www.pilz.com](http://www.pilz.com) for further details or contact our headquarters.

Headquarters: Pilz GmbH & Co. KG, Felix-Wankel-Straße 2, 73760 Ostfildern, Germany  
Telephone: +49 711 3409-0, Telefax: +49 711 3409-133, E-Mail: [info@pilz.com](mailto:info@pilz.com), Internet: [www.pilz.com](http://www.pilz.com)

**PILZ**  
THE SPIRIT OF SAFETY