


▶ PNOZmulti Classic, PNOZmulti Mini Technical catalogue

PILZ
THE SPIRIT OF SAFETY

Display 2023-02

- Configurable, safe small controllers PNOZmulti Classic
- Configurable, safe compact controllers PNOZmulti Mini

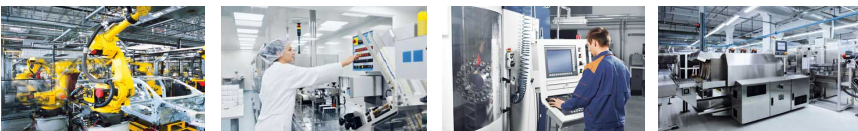

Introduction	
Basics	
System description	4
Installation	16
System expansion	24
Selection guide	
PNOZmulti Classic systems	43
PNOZmulti Mini systems	48
PNOZmulti Classic products	
Base units	53
Input modules	139
Analogue input module	156
Output modules	166
Link modules	233
Speed monitors	259
Fieldbus modules	372
PNOZmulti Mini products	
Base units	488
Link modules	558
Communication modules	582
Fieldbus modules	598
Software tool	
PNOZmulti Configurator	656
Accessories	
Chip card, USB memory	665
Cable, adapter	666
Connectors, terminals	670

Many functions, one solution – the safe small controller PNOZmulti Classic and the configurable safe small controller PNOZmulti Mini bridge the gap between classic safety relays and programmable control systems. The systems PNOZmulti Classic and PNOZmulti Mini are convincing, with numerous benefits. The software tool PNOZmulti Configurator, for example, impresses with its simple handling: install, open, work intuitively. You also have the widest range of diagnostic options – for high plant availability and low downtimes. The variety of fieldbus and communication options is a huge benefit with PNOZmulti Classic and PNOZmulti Mini systems. It means the systems can be used independently from the higher level operational control system. Various expansion modules offer maximum flexibility of application.

This technical catalogue describes the structure of the two systems:

- ▶ **Configurable safe small controller PNOZmulti Classic**
- ▶ **Configurable safe compact controller PNOZmulti Mini**

The units in the PNOZmulti Classic and PNOZmulti Mini systems are described in a detailed data sheet, which will help you with module selection and enable project configuration.

Please refer to the units' operating manual for information on installation and operation.

Further information on the systems can be found in the following documents:

- ▶ PNOZmulti Installation Manual
- ▶ Safety manual PNOZmulti
- ▶ PNOZmulti communication interfaces
- ▶ Special applications PNOZmulti

System description

System description

Contents	Page
Overview	6
Hardware	9
Software	12
Diagnostics	13

System description

Overview

General

The configurable small controller PNOZmulti Classic and the configurable safe compact controller PNOZmulti Mini are suitable for implementing multiple safety functions on a plant or machine. Thanks to its modular structure, the PNOZmulti Classic and PNOZmulti Mini systems can be adapted to the size of the plant and machinery. With a large number of the most diverse modules and a variety of base units, you can design your application with the utmost flexibility.


▶ **Configurable safe small controller PNOZmulti Classic**

The PNOZmulti Classic systems are the classic units among the configurable systems. They are suitable for use from four safety functions upwards. The systems are characterised by a comprehensive range of module and communication options.

▶ **Configurable safe compact controller PNOZmulti Mini**

The PNOZmulti Mini systems are mainly used from three safety functions upwards. The small controllers have a lower number of expansion modules than the PNOZmulti Classic systems.

Modular structure

- ▶ The PNOZmulti Classic and PNOZmulti Mini systems consist of a base unit and various expansion modules. The type of base unit determines which expansion modules may be connected (see chapter [System expansion](#)  [24]).
The units of PNOZmulti Classic and PNOZmulti Mini systems are not interchangeable.
- ▶ The base units have various inputs and outputs and are also fully functional without expansion modules.
- ▶ The expansion modules supplement the base unit with additional inputs or outputs.

Configuration in PNOZmulti Configurator

- ▶ The system's function is defined via the PNOZmulti Configurator.
- ▶ The PNOZmulti Configurator is a graphic tool which is used to define the functions of the units. Various safety functions are available, such as emergency stop, two-hand monitoring, safety gate monitoring and drive monitoring. With the correct circuitry it is possible to achieve categories up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061.
- ▶ Using predefined symbols, a simple circuit diagram shows how the units' inputs and outputs should be connected. This circuit diagram is then downloaded to the base unit.
- ▶ The system can be expanded or the functions modified at any time.
- ▶ Frequently used parts of the circuit diagram can be combined into macro elements, stored in the macro library and reused.

Inputs

- ▶ The PNOZmulti Classic und PNOZmulti Mini systems have semiconductor inputs for safety-related and standard applications.

System description


Overview

- ▶ The inputs for standard applications can also be set via the integrated interface or via fieldbus modules (e.g. PROFIBUS-DP, CANopen, ...).
- ▶ Decentralised input modules provide safe inputs for use up to IP67 (e.g. PDP67 F DI ION).
- ▶ Analogue input modules can be connected to the base units of the PNOZmulti Classic systems, thereby providing safe analogue inputs. The input signals are converted into digital signals.
For standard applications, the exact analogue values are made available to the base unit to forward to a fieldbus.

Outputs

- ▶ The PNOZmulti Classic and PNOZmulti Mini systems have various outputs.
 - Relay safety outputs
 - Semiconductor safety outputs
 - Semiconductor outputs for standard applications
- ▶ The safety outputs use semiconductor technology, require no maintenance and are non-wearing; they are therefore suitable for applications with frequent operations or cyclical functions. They can be used for 24 VDC applications.
- ▶ Safe semiconductor outputs with advanced fault detection can also be configured for the base units of the PNOZmulti Mini systems. These single-channel semiconductor outputs can be used to achieve a higher level of safety.
- ▶ The relay safety outputs are suitable for less frequent operations, but they have a higher breaking capacity and can be used for AC applications.
- ▶ The outputs for standard applications can also be evaluated via the integrated interface or via fieldbus modules (e.g. PROFIBUS-DP, CANopen, ...).

System description Overview

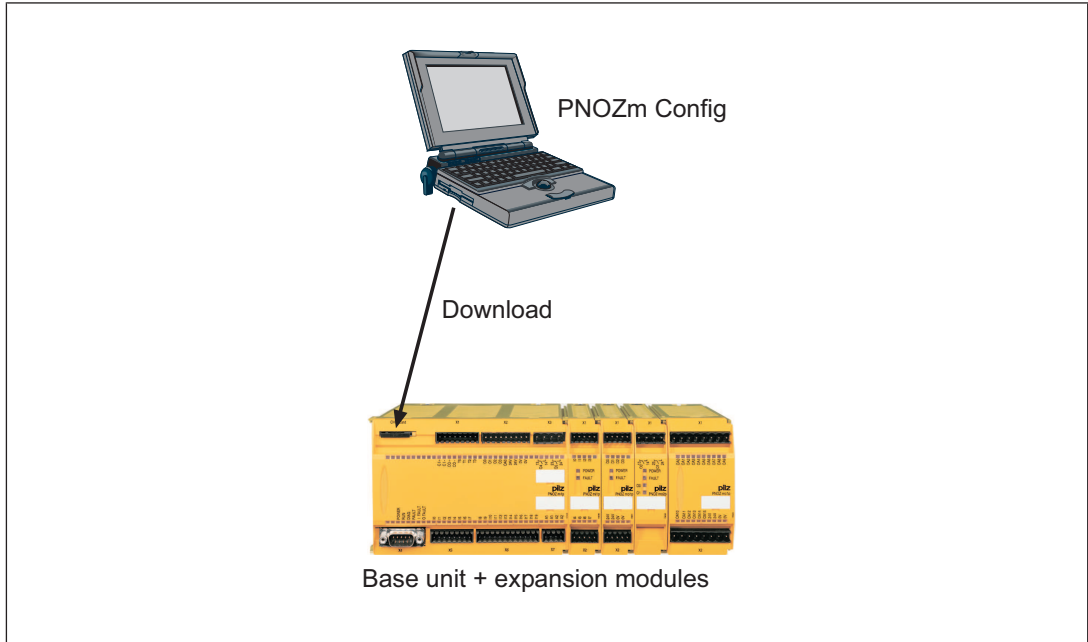

System description

Hardware

Structure of the configurable control system

The configurable control system consists of the base unit and expansion modules. Depending on the unit type, a base unit will have:

- ▶ Inputs
- ▶ Relay outputs
- ▶ Safe semiconductor outputs
- ▶ Outputs for standard applications
- ▶ Cascading input
- ▶ Cascading output

The number of inputs and outputs can be increased at any time using the expansion modules. The modules are linked via a jumper. The system is configured using the PNOZmulti Configurator. Special expansion modules enable data to be exchanged via a fieldbus (non-safety-related) or safe speed monitoring, for example.

Operation of the units

The PNOZmulti Configurator generates a project file which is downloaded to the base unit; there it defines:


- ▶ Which safety functions the inputs are to carry out, e.g. E-STOP monitoring, safety gate monitoring
- ▶ How the inputs are connected to the outputs via logic functions
- ▶ Which output is configured (semiconductor, relay)

The units react the same, irrespective of these functions:

If the start-up condition of the specific safety function is met, there will be a high signal at the output "Out1". The output signal can be linked via a logic function and is then present as the "Out2" signal at the output on the PNOZmulti Classic or PNOZmulti Mini unit.

System description

Hardware

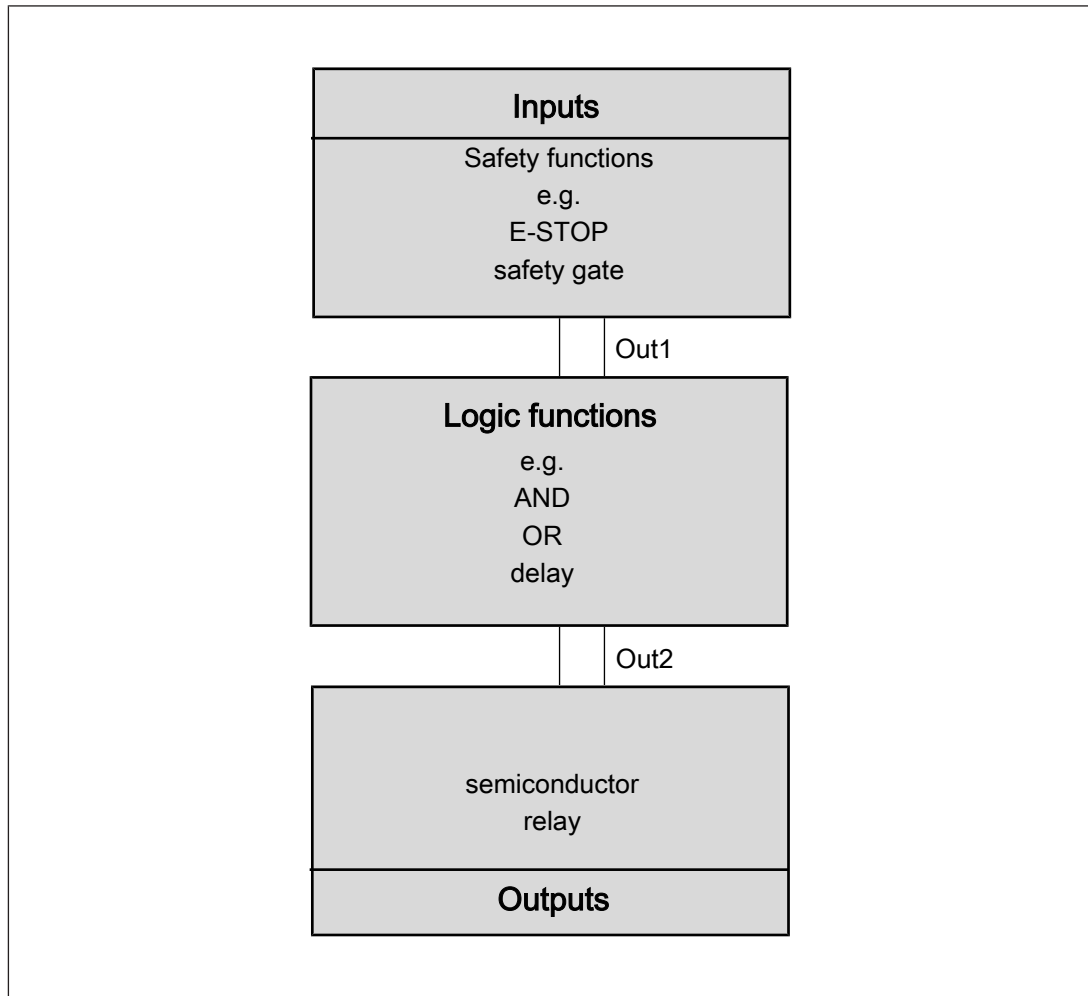

Fieldbus modules

The fieldbus modules are used to

- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions

Interfaces


The base units have an interface to

- ▶ Download the project
- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions
- ▶ Read the error stack.

System description

Hardware

Safety functions

The PNOZmulti Classic and PNOZmulti Mini systems have inputs and outputs, which can be used for various safety functions, depending on the system. Special base units and modules may be needed to implement safety functions (see chapter selection guide [Base units](#) [ 43]).

Configurable safe small controller PNOZmulti Classic, monitoring of

- ▶ E-STOP pushbuttons
- ▶ Operating mode selector switches
- ▶ Enabling switches
- ▶ Two-hand pushbuttons
- ▶ Safety gates
- ▶ Light curtains
- ▶ Light barriers
- ▶ Muting
- ▶ Pressure sensitive mats
- ▶ Standstill
- ▶ Speeds (modules PNOZ ms... see selection guide)
- ▶ Analogue input signals (analogue input module PNOZ ma1p)
- ▶ Mechanical presses (with base unit PNOZ m2p)
- ▶ Furnaces (with base unit PNOZ m3p)

Configurable safe compact controller PNOZmulti Mini, monitoring of:

- ▶ E-STOP pushbuttons
- ▶ Operating mode selector switches
- ▶ Enabling switches
- ▶ Two-hand pushbuttons
- ▶ Safety gates
- ▶ Light curtains
- ▶ Light barriers
- ▶ Muting
- ▶ Pressure sensitive mats

Various switch types are available for the required safety-related applications. With some switch types it is possible to monitor for simultaneity (see online help for the PNOZmulti Configurator).

System description

Software

The functions of the PNOZmulti Classic and PNOZmulti Mini systems are defined in the PNOZmulti Configurator software.

Procedure

- ▶ First, the required hardware is selected in the PNOZmulti Configurator via drag and drop. Each unit is given a resource label.
- ▶ When all the units are selected, the circuit diagram is created in the user program. The circuit diagram describes the application for which the safety system is to be used. It is here that you determine which inputs are assigned to which safety-related or standard functions.
- ▶ The inputs and/or the results of the safety-related or standard functions can be linked through logic functions. The results of the logic functions or the results of the safety-related or standard functions are channelled to the outputs on the PNOZmulti Classic or PNOZmulti Mini units.
- ▶ The circuit diagram is generated on a graphical interface. Symbols are provided for the safety-related or standard functions, logic functions and the various output types. These are simply dragged on to a workspace, configured and interconnected.
- ▶ Frequently used parts of the circuit diagram can be combined into macro elements, stored in the macro library and reused.
- ▶ Once the circuit diagram is complete, the data must be saved and downloaded to the base unit. The circuit diagram, device configuration and all the data that has been entered are stored within a project.
- ▶ When the project is saved, various passwords can be used to protect it from unauthorised access.
- ▶ Once it is saved, the project has to be downloaded to the base unit. To do this, the project data is downloaded on to a chip card. It is either downloaded directly via the communications interface or via a chip card reader.
- ▶ After downloading, a test must be performed to check that the safety devices function correctly.
- ▶ A project or diagnostic configuration can be created in multiple languages.

System description

Diagnostics

The PNOZmulti Classic and PNOZmulti Mini systems have many options for diagnostics and fault detection:

- ▶ LEDs on the base unit and expansion modules
- ▶ Diagnostic data via the communication interface and via a fieldbus
- ▶ Error stack
- ▶ Diagnostic word in the PNOZmulti Configurator
- ▶ Expanded diagnostic options using a visualisation system, e.g. PASvisu with PMI

Only for base units PNOZmulti Mini:

- ▶ Display messages can be configured in the PNOZmulti Configurator.

Detailed information on the diagnostic options are available in the document "PNOZmulti communication interfaces".

LEDs on the base unit and expansion modules

The LEDs signal

- ▶ Operating states (e.g. "RUN")
- ▶ External and internal errors

The key to the LEDs can be found in the operating instructions supplied with the units.

Communications interface

The integrated communications interface on the PNOZmulti Classic and PNOZmulti Mini systems is used to transfer diagnostic data to an application program.

Diagnostic data

The diagnostic data can be called up via the communications interface or via a connected fieldbus. All base units that have an Ethernet interface also support Modbus/TCP.

The diagnostic data may only be used for non-safety purposes, e.g. visualisation.

The diagnostic data on PNOZmulti Classic and PNOZmulti Mini systems is:

- ▶ Version:
Product number, unit version, serial number
- ▶ Status of inputs/outputs:
Indicates whether inputs and outputs are active or inactive (open/closed)
- ▶ LED status:
Indicates the status of the LEDs on the base unit and expansion modules (on/off/ flashes), plus the operating mode (start up, RUN, STOP)
- ▶ Simplified status scan:
Shows group messages relating to the safety system: Signal changes, LED status, operating statuses
- ▶ Virtual inputs and outputs:
Virtual inputs can be set. The status of the virtual inputs and outputs can be scanned.

System description

Diagnostics

- ▶ Diagnostic word:
The diagnostic word contains the status of elements from the user program within the PNOZmulti Classic or PNOZmulti Mini.
- ▶ Test data:
To check communication.
- ▶ Data in table form:
This is structured data (arranged in tables and segments) from the PNOZmulti Classic or PNOZmulti Mini systems, as it could also be read via a fieldbus module:
 - Configuration
 - Status of the inputs and outputs
 - Status of LED
 - Diagnostic word
 - Element types
- ▶ Expanded diagnostic options using a visualisation system (e.g. PASvisu with PMI).
An expanded diagnostic configuration can be created in the PNOZmulti Configurator. The diagnostic configuration enables appropriate event messages to be displayed in the case of:
 - Errors in or on the PNOZmulti Classic or PNOZmulti Mini system
Includes the event messages that are triggered when there are errors in or on the PNOZmulti Classic or PNOZmulti Mini system (error stack)
 - Changes in the operating status of the PNOZmulti Classic or PNOZmulti Mini system that are output when inputs, outputs and connection points reach a defined state

PNOZmulti Classic or PNOZmulti Mini system event messages can also be supplemented through additional information, which is helpful during diagnostics. With expanded diagnostics, a display unit is connected to a PNOZmulti Classic or PNOZmulti Mini system. If an event occurs in or on the PNOZmulti Classic or PNOZmulti Mini system, an event telegram is sent to the display unit. The event telegram is evaluated in the display unit. In most cases, the event message that corresponds to the event is displayed and is entered in the event list. The event message contains a description of the event. A remedy can be displayed for each event message. The remedy describes how to react to the event, in other words, what "actions" to take.

The diagnostic configuration is project-related, i.e. a separate diagnostic configuration is created for each PNOZmulti Classic or PNOZmulti Mini project. Then the diagnostic configuration is downloaded to the PNOZmulti Classic or PNOZmulti Mini system and to the display unit. The diagnostic configuration is described in detail in the PNOZmulti Configurator online help.

System description

Diagnostics

Error stack

The error stack of the PNOZmulti Classic or PNOZmulti Mini systems contains important information for diagnostics and troubleshooting. The error stack can be read from the PNOZmulti Configurator. It contains messages and help texts such as:

- ▶ Hardware errors
- ▶ Wiring errors
- ▶ Configuration errors
- ▶ Errors in the operation of the interface or fieldbus
- ▶ Errors in the project's user program
- ▶ Messages relating to differences between the programs stored on the PNOZmulti Classic or PNOZmulti Mini system and chip card

Diagnostic word

A diagnostic word can be called up for those elements of the PNOZmulti Configurator interface that have the ability to store a status:

- ▶ Online in PNOZmulti Configurator
- ▶ Via the Ethernet or serial interface on the base unit
- ▶ Via a connected fieldbus

The diagnostic word contains information about a certain element, e.g.:

- ▶ Operating states (e.g. switch operated)
- ▶ Error messages (e.g. monitoring time elapsed)


An individual bit from a diagnostic word can be evaluated in the user program of the PNOZmulti Configurator.

Installation

General guidelines

For detailed information about the installation of the PNOZmulti Classic or PNOZmulti Mini systems, please read the installation manual for the PNOZmulti.

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the section entitled [System expansion](#)  24 for details of the number of modules that can be connected to the base unit and the module types.


Install the expansion modules in the position in which it is configured in the PNOZmulti Configurator. For module selection please refer to the online help for the PNOZmulti Configurator.

Installation

Install PNOZmulti Classic systems

Control cabinet installation

- ▶ The control system should be installed in a control cabinet with a protection type of at least IP54. Fit the control system to a horizontal mounting rail. The venting slots must face upward and downward. Other mounting positions could destroy the control system.
- ▶ Use the locking elements on the rear of the unit to attach it to a mounting rail. Connect the control system to the mounting rail in an upright position, so that the earthing springs on the control system are pressed on to the mounting rail.
- ▶ The ambient temperature of the devices in the control cabinet must not exceed the figure stated in the technical details. Air conditioning may otherwise be required.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.

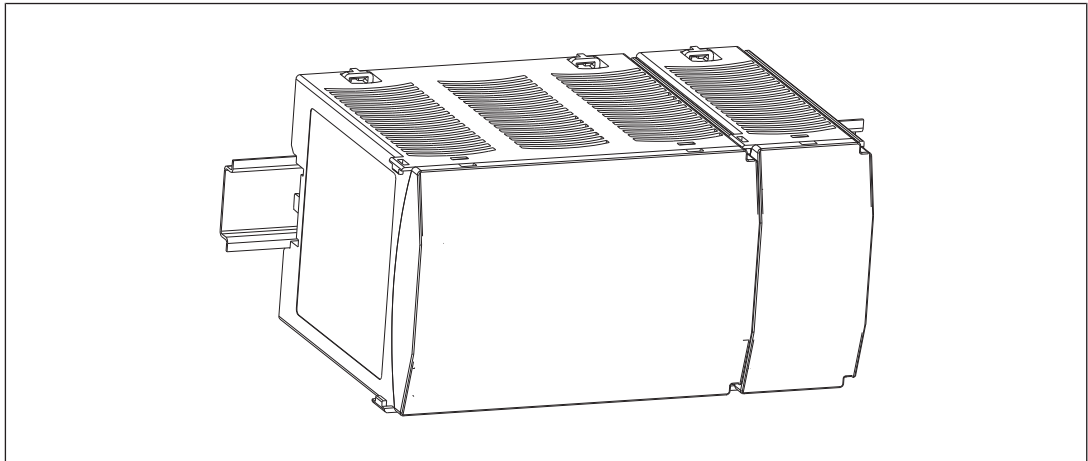


Installation

Install PNOZmulti Classic systems

Install base unit without expansion module

- ▶ The terminator must be fitted to the side of the base unit marked "Termination/Link".
- ▶ Do not fit a terminator on the left hand side of the base unit.

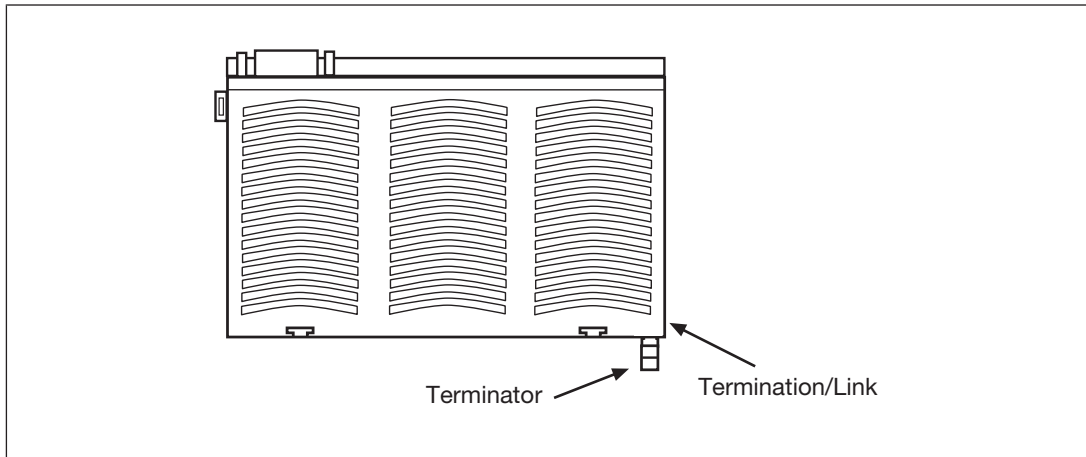

Installation

Install PNOZmulti Classic systems

Connecting the base unit and expansion modules

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.


Please refer to the section entitled [System expansion \[24\]](#) for details of the number of modules and the module types connected to the base unit.

The modules are linked via jumpers.

There are 2 pin connectors on the rear of the base unit.

A max. of 12 expansion modules plus one fieldbus module may be connected to one base unit.

- ▶ Ensure that no terminator is connected.
- ▶ Connect the base unit, the expansion modules and the fieldbus module using the jumpers supplied.
- ▶ The terminator must be fitted to the last expansion module to the right of the base unit.
- ▶ A terminator must not be fitted to the last expansion module to the left of the base unit.

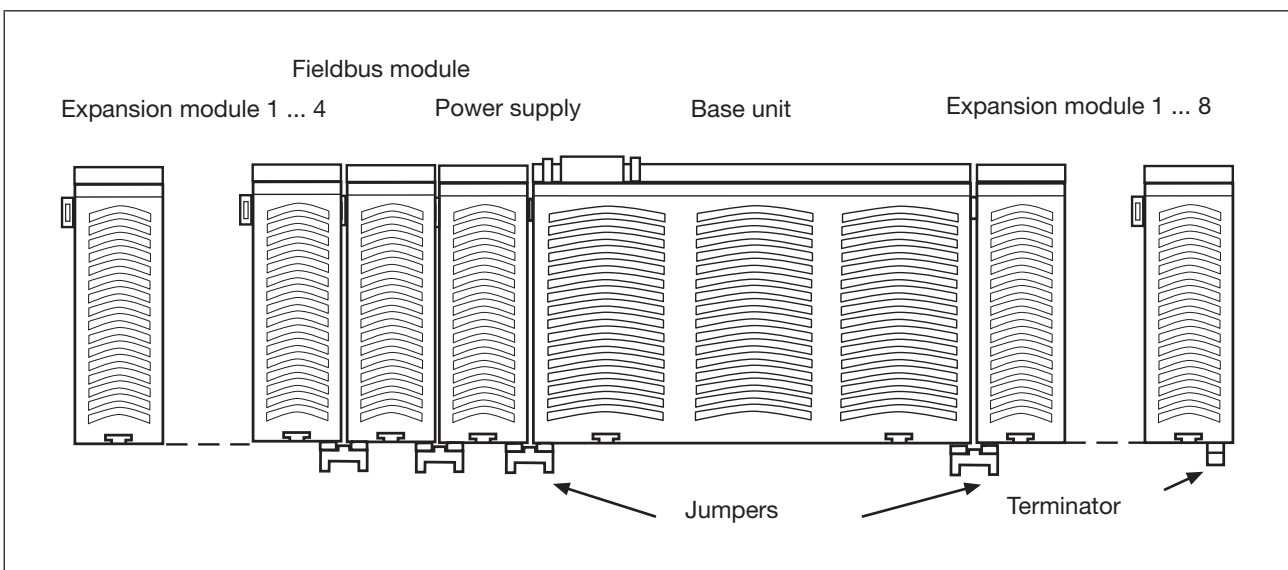

Installation

Install PNOZmulti Mini systems

Control cabinet installation

- ▶ The unit should be installed in a control cabinet with a protection type of at least IP54.
- ▶ Fit the safety system to a horizontal mounting rail. The venting slots must face upwards and downwards. Other mounting positions could destroy the safety system.
- ▶ Use the notch on the rear of the unit to attach it to a mounting rail.
- ▶ In environments exposed to heavy vibration, the unit should be secured using a fixing element (e.g. retaining bracket or end angle).
- ▶ Push the unit upwards or downwards before lifting it from the mounting rail.
- ▶ To comply with EMC requirements, the mounting rail must have a low impedance connection to the control cabinet housing.

Installation


Install PNOZmulti Mini systems

Mounting distances

With control cabinet installation it is essential to maintain a certain distance from the top and bottom, as well as to other heat-producing devices (see diagram). The values stated for the mounting distances are minimum specifications.

The ambient temperature in the control cabinet must not exceed the figure stated in the technical details. Air conditioning may otherwise be required.

Mounting distances:

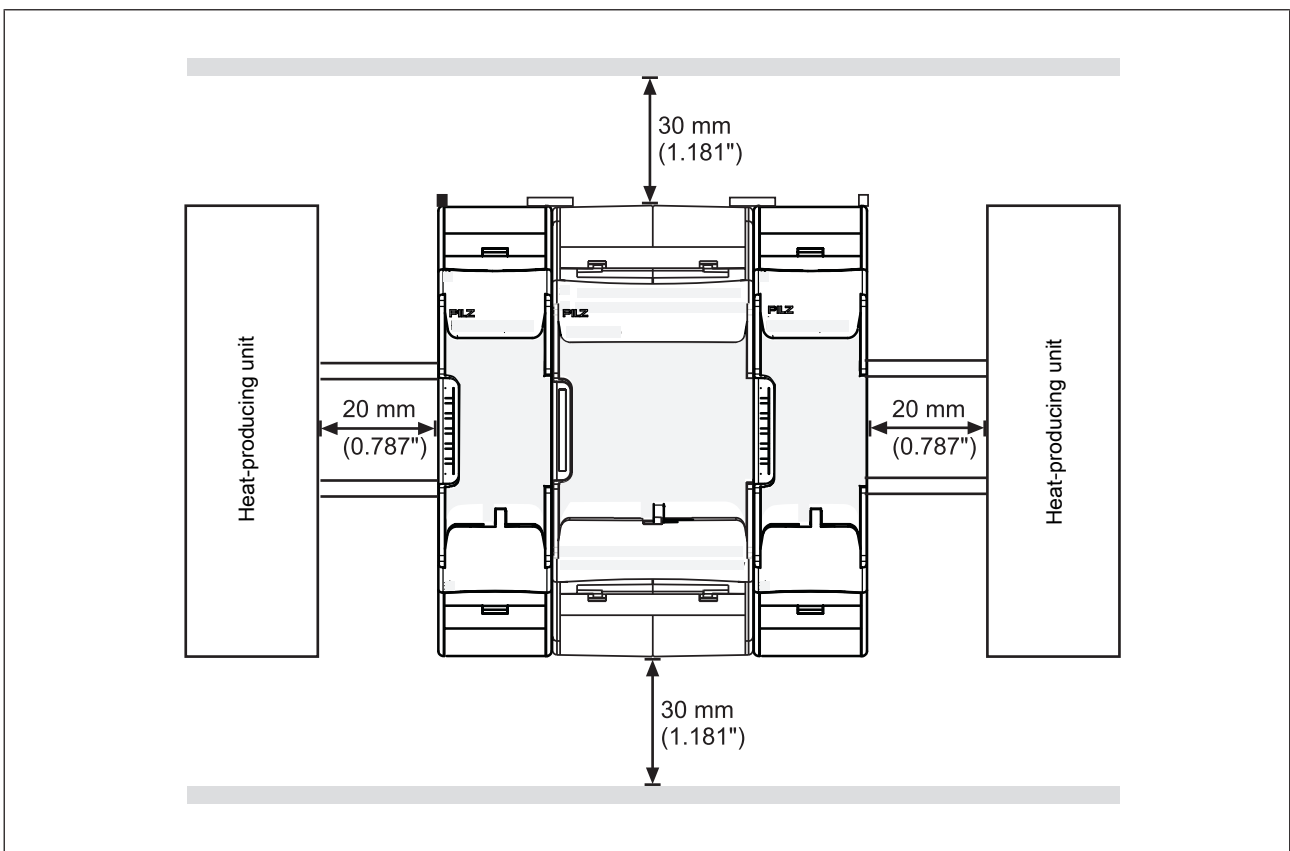


Installation

Install PNOZmulti Mini systems

Install base unit without expansion module

Make sure that the terminators are inserted on the top left and right of the unit :

- ▶ Left: Black/yellow terminator
- ▶ Right: Yellow terminator

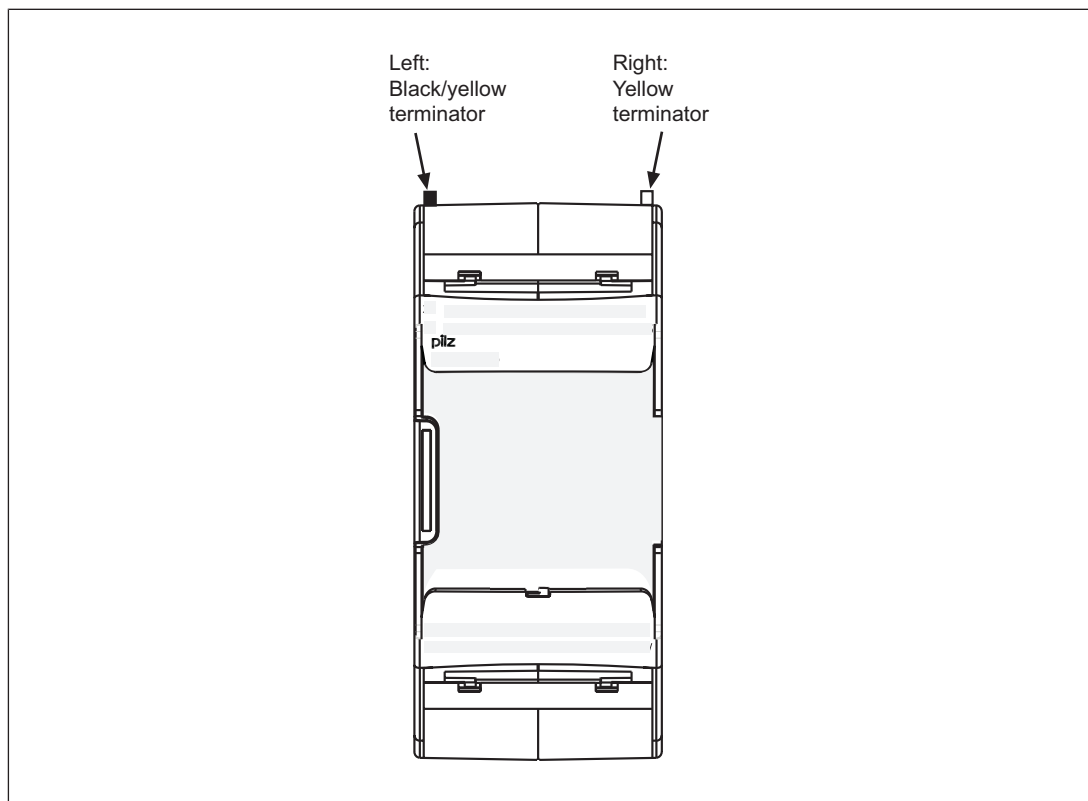

Installation

Install PNOZmulti Mini systems


Connecting the base unit and expansion modules

The position of the expansion modules is defined in the PNOZmulti Configurator. The expansion modules are connected to the left or right of the base unit, depending on the type.

Please refer to the section entitled [System expansion \[24\]](#) for details of the number of modules and the module types connected to the base unit.

The modules are linked via jumpers.

- ▶ Remove the terminator on the side of the base unit and on the expansion module.
- ▶ Before installing the units on the mounting rail, connect the base unit to the expansion module using the jumper supplied.
- ▶ Fit the appropriate terminator to the unconnected interfaces on the base unit and expansion module.
 - Left-hand side on the base unit and expansion modules to the left of the base unit: Black/yellow terminator
 - Right-hand side on the base unit and expansion modules to the right of the base unit: Yellow terminator

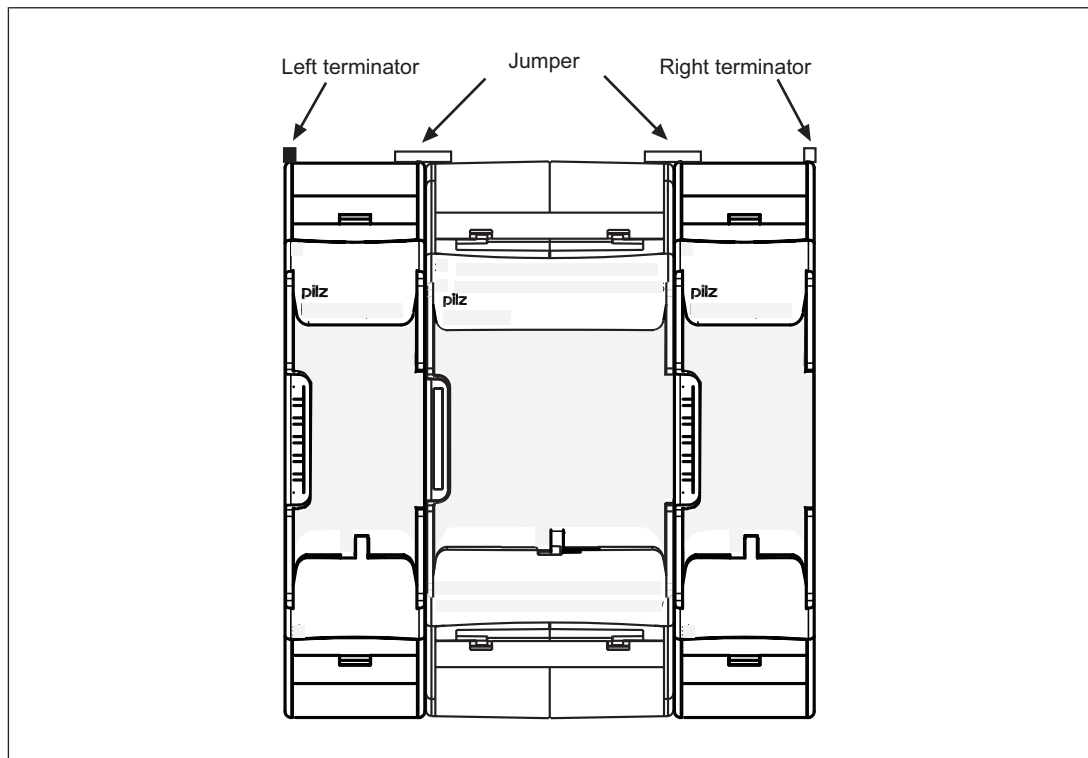


System expansion

Configurable safe small controllers PNOZmulti Classic

Maximum system expansion:

- ▶ Right of the base unit:
 - 8 expansion modules
- ▶ Left of the base unit
 - 4 expansion modules
 - and
 - 1 fieldbus module
- ▶ Connectable to the link module PNOZ ml2p:
 - 4 decentralised modules per link module (max. 16 decentralised modules)

Example of a control system PNOZmulti: Base unit PNOZ m1p ETH with expansion modules

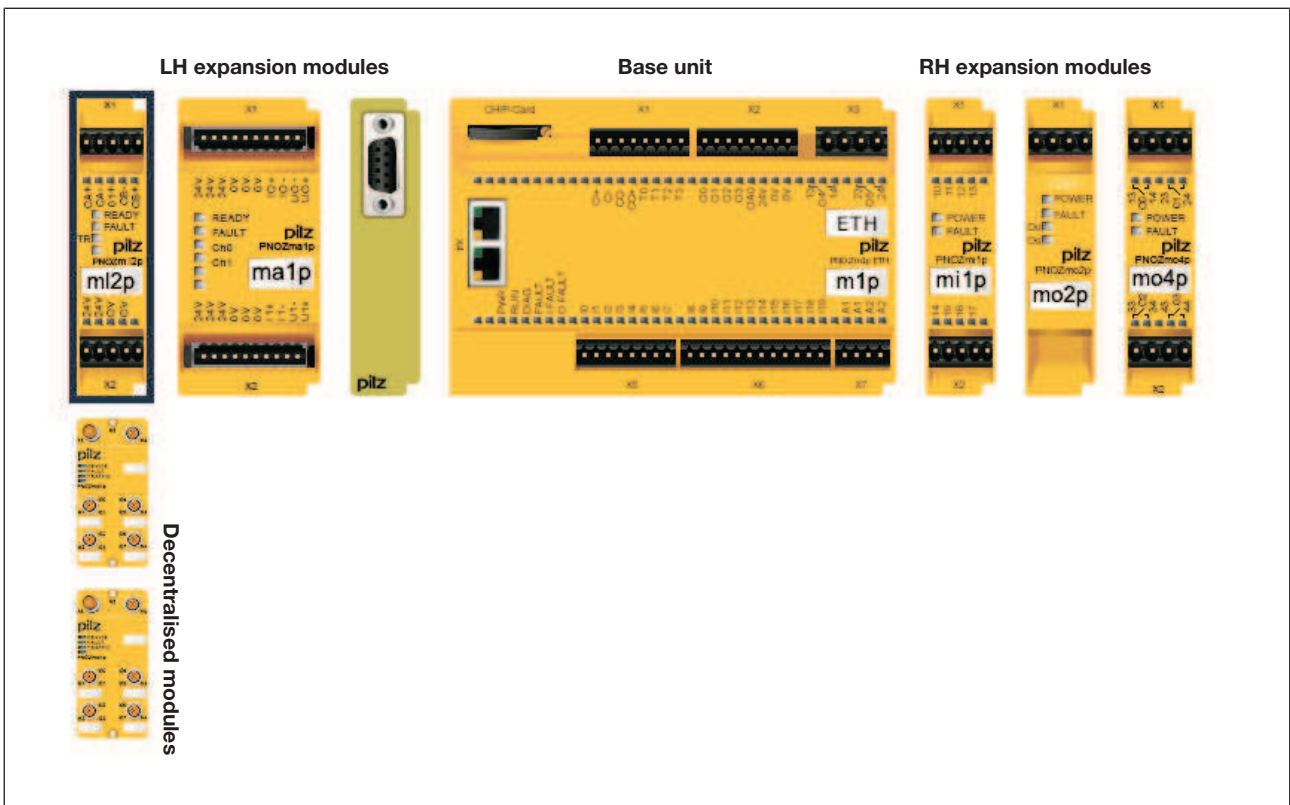

System expansion

Configurable safe small controllers PNOZmulti Classic

System expansion depends on the base units:

Expansion modules		Slot	PNOZ m0p (ETH)	PNOZ m1p (ETH)	PNOZ m2p (ETH)	PNOZ m3p (ETH)
		Number of connectable modules				
Analogue input modules		Left	-	4	4	4
PNOZ ma1p	Analogue input module					
Link modules		Left	4	4	4	4
PNOZ ml1p	To connect 2 base units					
PNOZ ml2p	To connect a base unit to up to 4 decentralised modules PDP67 (see below)					
Decentralised modules (connectable to the link module PNOZ ml2p)		Left	16	16	16	16
PDP67 F 8DI ION	IP67, 8 safe inputs					
PDP67 F 8DI ION HP	IP67, 8 safe inputs					
Input modules		Right	-	8	8	8
PNOZ mi1p	8 safe inputs					
PNOZ mi2p	8 inputs for standard applications					
Output modules		Right	-	6	6	6
PNOZ mo1p	4 safe semiconductor outputs					
PNOZ mo2p	2 safe relay outputs					
PNOZ mo3p	2 safe 2-pole semiconductor outputs					
PNOZ mo4p	4 safe relay outputs					
PNOZ mo5p	4 safe, diverse relay outputs					
Output modules for standard applications		Right	-	8	8	8
PNOZ mc1p	16 semiconductor outputs for standard applications					

System expansion

Configurable safe small controllers PNOZmulti Classic

Expansion modules		Slot	PNOZ m0p (ETH)	PNOZ m1p (ETH)	PNOZ m2p (ETH)	PNOZ m3p (ETH)
Speed monitor		Right	-	4	4	4
PNOZ ms1p	Monitoring of 2 axes Connectable encoders: Proximity switch, incremental encoder Sin/Cos, TTL					
PNOZ ms2p HTL	Monitoring of 2 axes Connectable encoders: Proximity switch, incremental encoder HTL					
PNOZ ms2p TTL	Monitoring of 2 axes Connectable encoders: Proximity switch, incremental encoder Sin/Cos, TTL					
PNOZ ms3p HTL	Monitoring of 2 axes Connectable encoders: Incremental encoder HTL					
PNOZ ms3p TTL	Monitoring of 2 axes Connectable encoders: Incremental encoder Sin/Cos, TTL					
PNOZ ms4p	Monitoring of 1 axis Connectable encoders: Incremental encoder Sin/Cos, TTL, HTL					

System expansion

Configurable safe small controllers PNOZmulti Classic


Expansion modules		Slot	PNOZ m0p (ETH)	PNOZ m1p (ETH)	PNOZ m2p (ETH)	PNOZ m3p (ETH)
Fieldbus modules		Left	1	1	1	1
PNOZ mc0p	Power supply to supply voltage to fieldbus modules					
PNOZ mc2p	EtherCAT					
PNOZ mc2.1p	EtherCAT (DS301 V4.02 compliant)					
PNOZ mc3p	PROFIBUS-DP					
PNOZ mc4p	DeviceNet					
PNOZ mc5p	Interbus					
PNOZ mc5.1p	Interbus fibre-optic cable					
PNOZ mc6p	CANopen					
PNOZ mc6.1p	CANopen					
PNOZ mc7p	CC-Link					
PNOZ mc8p	Ethernet IP/Modbus TCP					
PNOZ mc9p	Profinet					
PNOZ mc10p	sercos III					
PNOZ mc12p	Ethernet POWERLINK					

System expansion

Configurable safe small controllers PNOZmulti Classic

System reaction times

The reaction time between an input switching off and a linked output in the system switching off depends on the delay time at the input and the delay time at the output. The times vary depending on which input/output is used by which device.

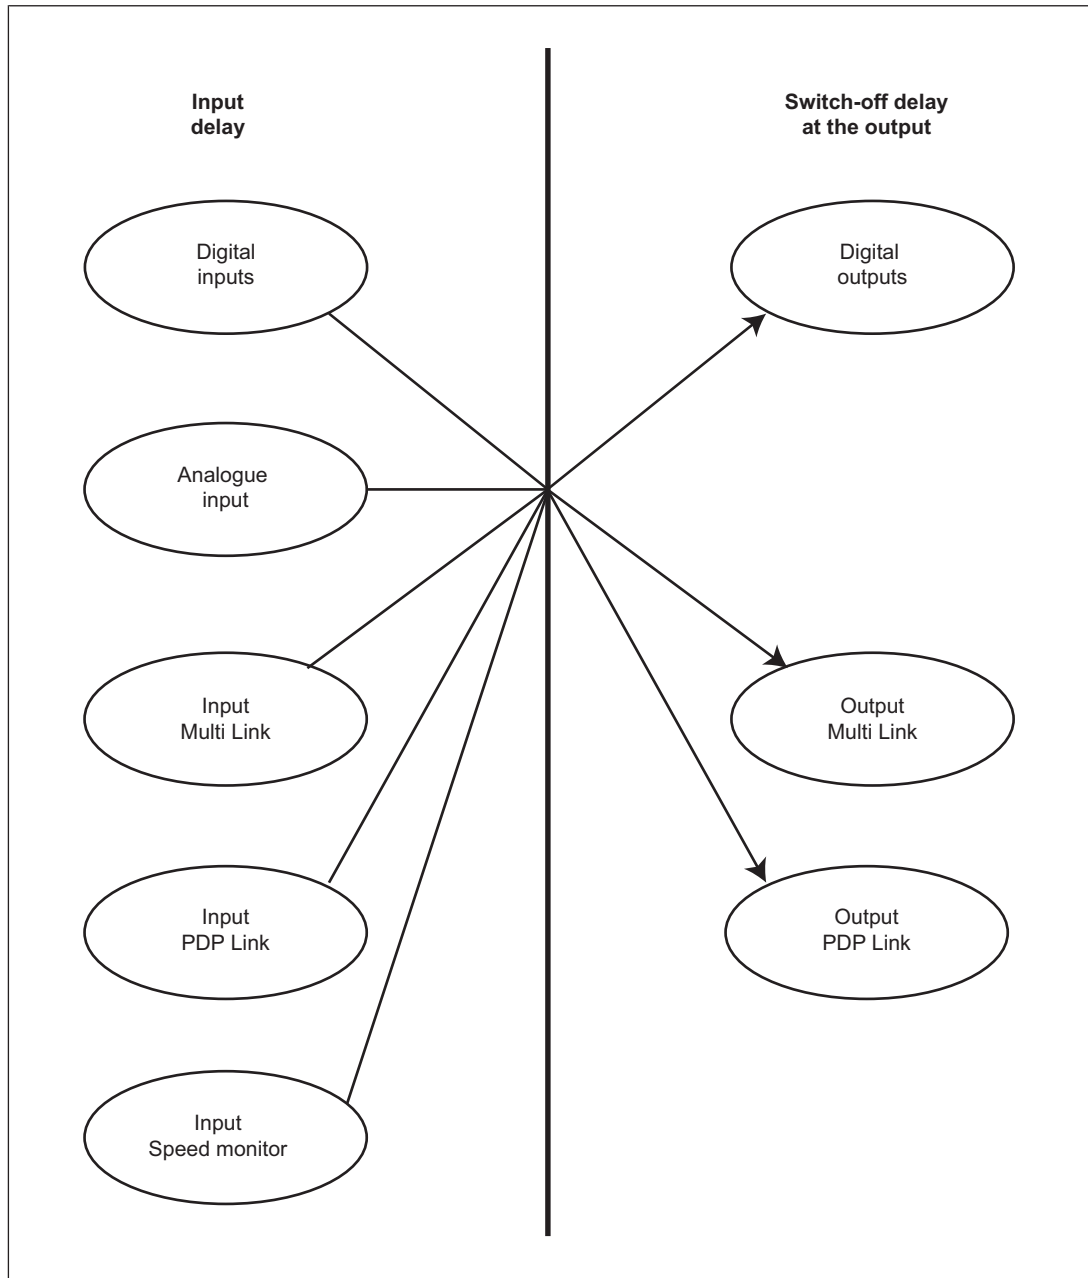

Calculation of the max. reaction time:

$$t_{\text{ReactionMax}} = t_{\text{Max. input delay}} + t_{\text{Max. switch-off delay at the output}}$$

Please note that the reaction time is also increased by

- ▶ Delay times configured in the user program

System expansion

Configurable safe small controllers PNOZmulti Classic

- ▶ Delay on the sensor that is used
- ▶ Delay on the actuator that is used
- ▶ Delay due to periphery devices or control systems

Reaction times of the base units and expansion modules

Modules	Max. input delay	Max. switch-off delay Output (incl. processing time)
PNOZ m0p ... PNOZ m3p	4 ms	30 ms (semiconductor output) 50 ms (relay output)
PNOZ mi1p ... PNOZ mi2p	4 ms	-
PNOZ mo1p, PNOZ mo3p	-	30 ms
PNOZ mo2p, PNOZ mo4p, PNOZ mo5p	-	50 ms
PNOZ ml1p	0 ms ⁽¹⁾	35 ms (connection's transmission delay)
PNOZ ml2p	15 ms + Max. processing time of the input PDP67 ⁽²⁾	35 ms
PNOZ ma1p	100 ms	-
PNOZ ms1p ... PNOZ ms4p	10 ms [+1/f] (+conf.switch-off delay)	-

(1) An input delay is not considered because it is already considered in the output delay of the communication partner.

(2) See technical details in the operating manual

To simplify the calculation, the stated times include various times that need to be considered within the system. As a result, transmission times, for example, do not need to be included separately in the calculation. The processing time in the base unit is already considered in the max. switch off delay at the output.

Example configuration: Input from PNOZ mi2p, output from PNOZ mo3p

Input PNOZ mi2p tInput Delay.Max	Output PNOZ mo3p tSwitch-offDelay.Max
4 ms	30 ms

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 30 \text{ ms}$$

System expansion

Configurable safe small controllers PNOZmulti Classic

$$t_{\text{ReactionMax}} = 34 \text{ ms}$$

Example configuration: Input from base unit PNOZ m1p, output from PNOZ mo4p

Input PNOZ m1p Input Delay.Max	Output PNOZ mo4p Switch-off Delay.Max
4 ms	50 ms

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 50 \text{ ms}$$

$$t_{\text{ReactionMax}} = 54 \text{ ms}$$


System expansion

Configurable safe compact controllers PNOZmulti Mini

Maximum system expansion:

- ▶ Right of the base unit:
 - 1 PNOZsigma expansion module (+1 contact expansion)
- ▶ Left of the base unit
 - 1 fieldbus module
 - and
 - 1 communication module
 - and
 - 4 link modules
- ▶ Connectable to the link module PNOZ mml2p:
 - 4 decentralised modules per link module (max. 16 decentralised modules)

Example of a control system PNOZmulti Mini: Base unit PNOZ mm0.1p with expansion modules

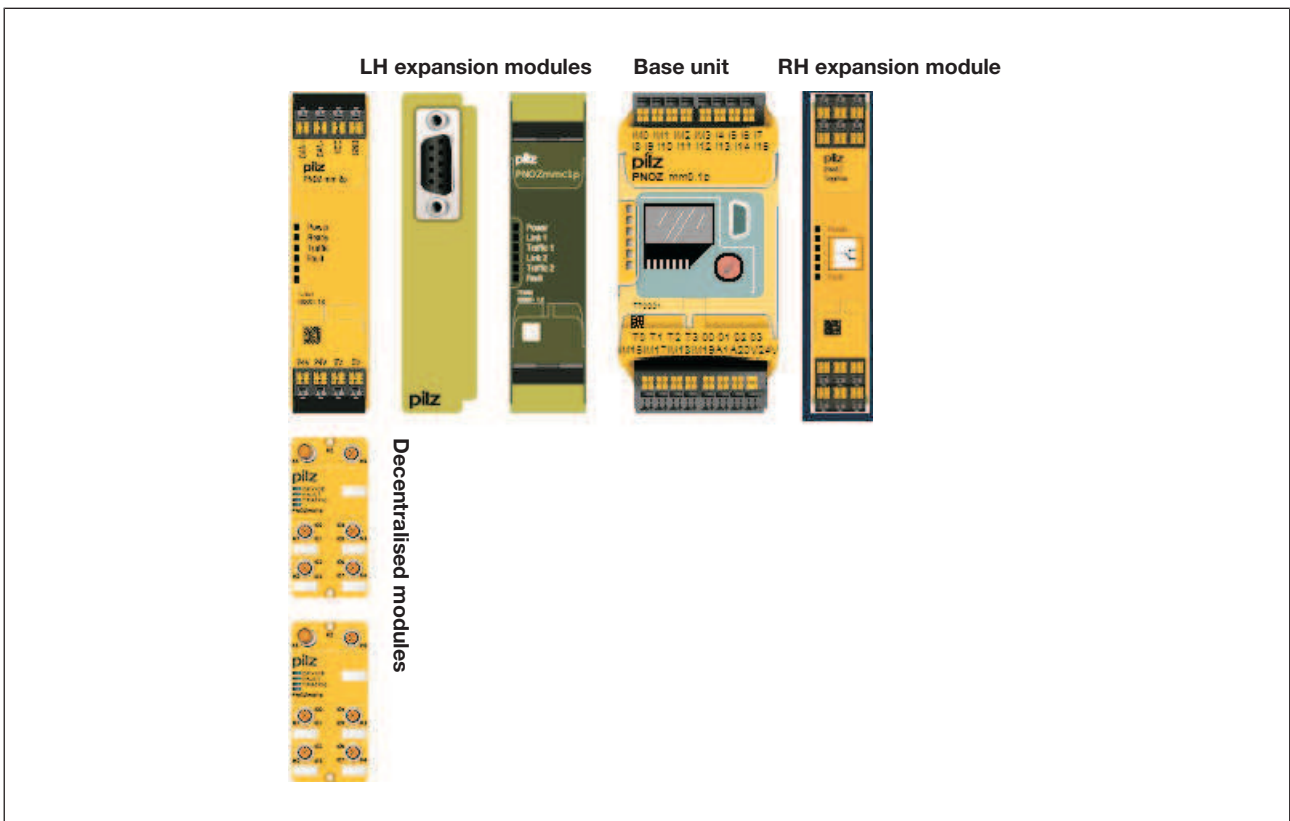

System expansion

Configurable safe compact controllers PNOZmulti Mini

System expansion depends on the base units:


Expansion modules		Slot	PNOZ mm0p	PNOZ mm0.1p	PNOZ mm0.2p
			Number of connectable modules		
Link modules		Left	-	4	4
PNOZ mml1p	To connect 2 base units				
PNOZ mml2p	To connect a base unit to up to 4 decentralised modules PDP67 (see below)				
Decentralised modules (connectable to the link module PNOZ mml2p)		Left	-	16	16
PDP67 F 8DI ION	IP67, 8 safe inputs				
PDP67 F 8DI ION HP	IP67, 8 safe inputs				
Communication modules		Left	-	1	1
PNOZ mmc1p	Ethernet interface				
PNOZ mmc2p	Serial interface RS232				
Fieldbus modules		Left	-	1	1
PNOZ mmc3p	PROFIBUS DP				
PNOZ mmc4p	DeviceNet				
PNOZ mmc6p	CANopen				
PNOZ mmc7p	CC-Link				
PNOZ mmc11p	EtherCAT				
PNOZ mmc12p	Ethernet POWERLINK				
PNOZsigma output modules		Right	-	1	1
PNOZ s7	1 safe relay output				
PNOZ s7.1	1 safe relay output (+ 1 PNOZ s7, PNOZ s10 or PNOZ s11 can be connected as a contact expansion module)				
PNOZ s7.2	1 safe relay output (+ 1 expansion module PNOZ s7, PNOZ s10 or PNOZ s11 can be connected)				
PNOZ s10	1 safe relay output				
PNOZ s11	1 safe relay output				
PNOZ s22	2 safe relay outputs				

System expansion

Configurable safe compact controllers PNOZmulti Mini

System reaction times

The reaction time between an input switching off and a linked output in the system switching off depends on the delay time at the input and the delay time at the output. The times vary depending on which input/output is used by which device.

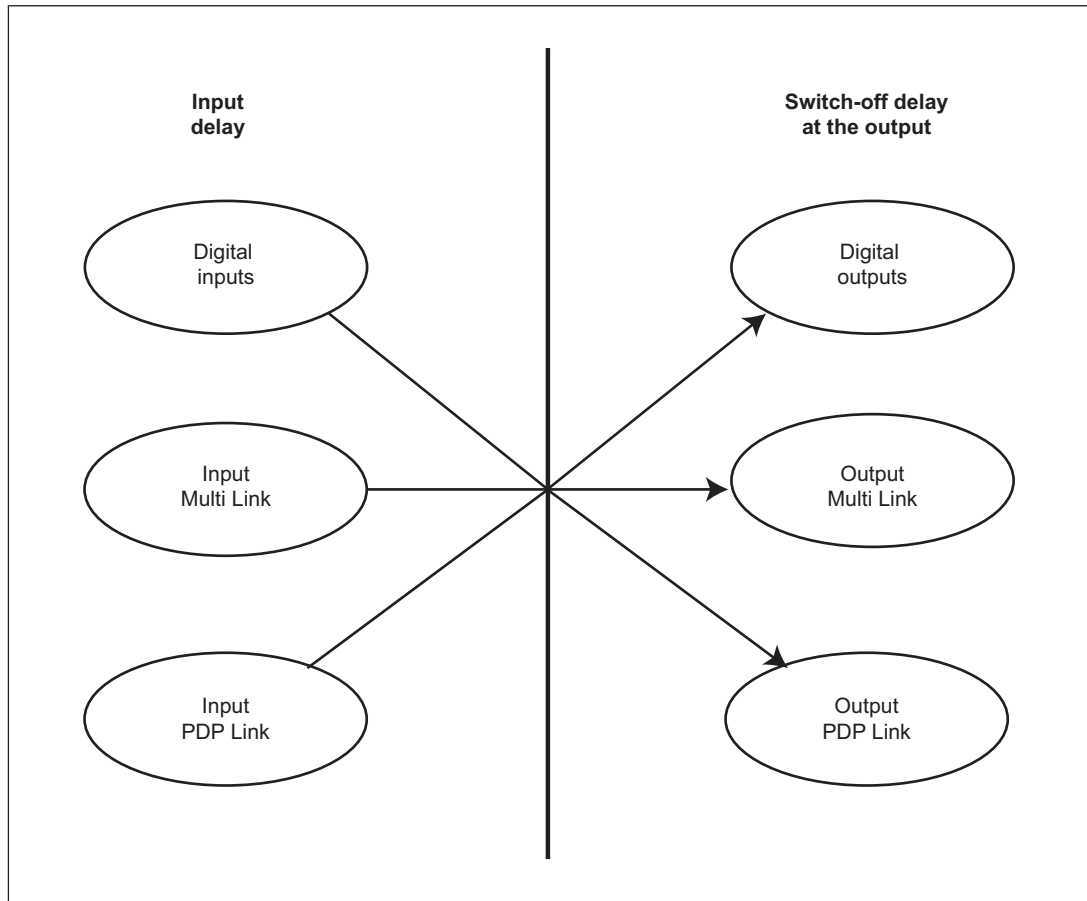

Calculation of the max. reaction time:

$$t_{\text{ReactionMax}} = t_{\text{Max. input delay}} + t_{\text{Max. switch-off delay at the output}}$$

Please note that the reaction time is also increased by

- ▶ Delay times configured in the user program
- ▶ Delay on the sensor that is used
- ▶ Delay on the actuator that is used
- ▶ Delay due to periphery devices or control systems

System expansion

Configurable safe compact controllers PNOZmulti Mini

Reaction times of the base units and expansion modules

Modules	Max. input delay	t Max. switch-off delay Output (incl. processing time)
PNOZ mm0p ... PNOZ mm0.2p	4 ms	30 ms (semiconductor output)
PNOZ mm0.2p	4 ms	35 ms (virtual outputs for data transfer when 2 base units are connected)
PNOZ s7, PNOZ s7.1, PNOZ s7.2, PNOZ s10, PNOZ s11, PNOZ s22	-	30 ms + delay-on de-energisation of expansion module
PNOZ mml1p	0 ms ⁽¹⁾	35 ms (connection's transmission delay)
PNOZ mml2p	15 ms + input delay PDP67 ⁽²⁾	35 ms

(1) An input delay is not considered because it is already considered in the output delay of the communication partner.

(2) See technical details in the operating manual

To simplify the calculation, the stated times include various times that need to be considered within the system. As a result, transmission times, for example, do not need to be included separately in the calculation. The processing time in the base unit is already considered in the max. switch off delay at the output.

Example configuration: Input from base unit PNOZ mm0.1p, output from PNOZ s7

Input PNOZ mm0.1p Input Delay.Max	Output PNOZ mo4p Switch-off Delay.Max
4 ms	30 ms + delay-on de-energisation 30 ms

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 30 \text{ ms} + 30 \text{ ms}$$

$$t_{\text{ReactionMax}} = 64 \text{ ms}$$

System expansion

Connection of multiple PNOZmulti systems


For safe data exchange two or more configurable control systems PNOZmulti can be connected to each other using the "PNOZmulti Link connection".

The connection is created via two connection modules and/or connection interfaces that are assigned to one base unit each.

Any number of base units can be connected via link modules.

However, only a max. of 4 link modules can be connected to a base unit.

Example: Connecting 4 base units

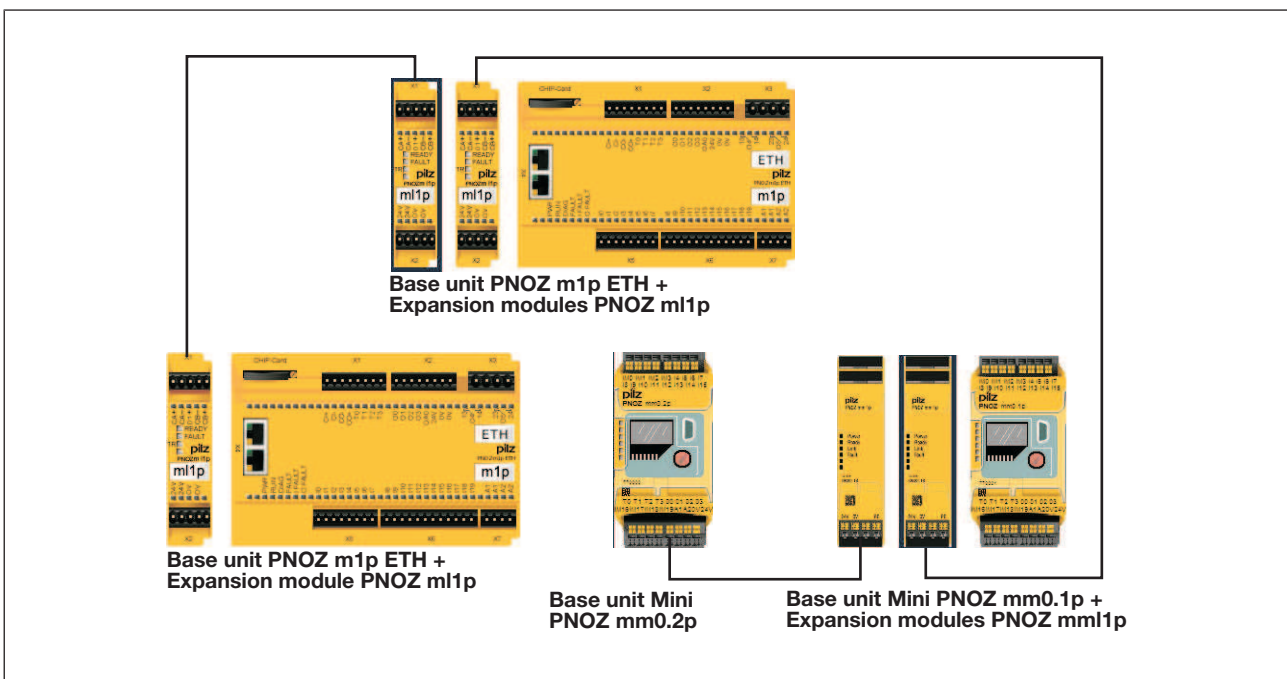

Connection options

	PNOZ m B0, PNOZ m B1 +PNOZ m EF Multi Link	PNOZ m0p/1p/ 2p/3p (ETH) +PNOZ ml1p	PNOZ mm0p	PNOZ mm0.1p +PNOZ mml1p	PNOZ mm0.2p
PNOZ m B0, PNOZ m B1 +PNOZ m EF Multi Link	x	x		x	x
PNOZ m0p/1p/2p/ 3p (ETH) +PNOZ ml1p	x	x		x	x
PNOZ mm0p					
PNOZ mm0.1p + PNOZ mml1p	x	x		x	x

System expansion

Connection of multiple PNOZmulti systems

	PNOZ m B0, PNOZ m B1 +PNOZ m EF Multi Link	PNOZ m0p/1p/ 2p/3p (ETH) +PNOZ ml1p		PNOZ mm0.1p +PNOZ mml1p	
PNOZ mm0.2p	x	x		x	x


Reaction times of the Multi Link connection

The reaction time when connecting two or more base units is calculated from the transmission delay of the connection at the link module of a communication partner and the input delay at the link module of the connected communication partner.

Example: Connecting 3 base units PNOZmulti


The maximum reaction time $t_{\text{ReactionMax}}$ includes the following times:

- ▶ Max. input delay PNOZ m1p (Base 1): 4 ms
- ▶ Data transfer time of the connection at the PNOZ ml1p (Base 1): 35 ms
- ▶ Max. input delay PNOZ ml1p (Base 2): 0 ms
- ▶ Data transfer time of the connection at the PNOZ ml1p (Base 2): 35 ms
- ▶ Max. input delay PNOZ ml1p (Base 3): 0 ms
- ▶ Max. switch-off delay at the output PNOZ m1p: 30 ms

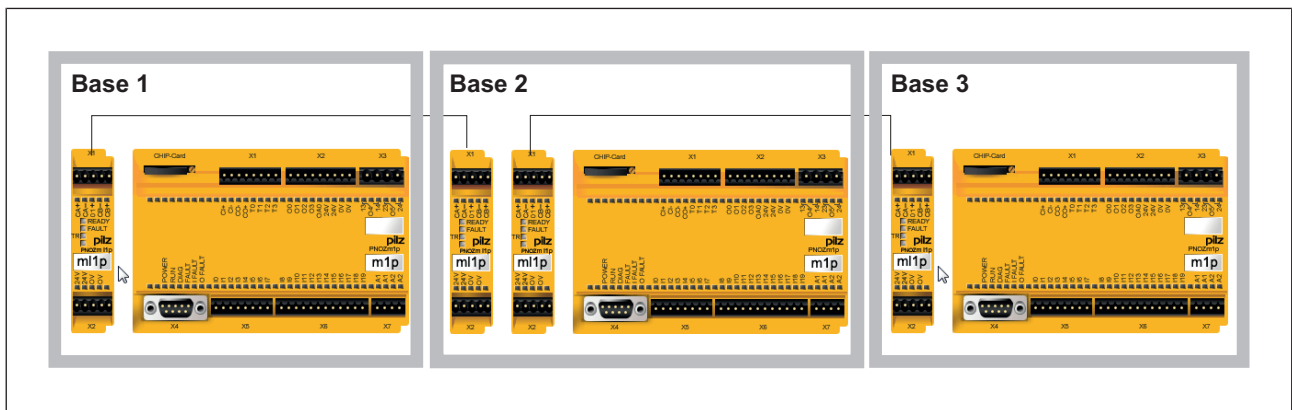

System expansion

Connection of multiple PNOZmulti systems

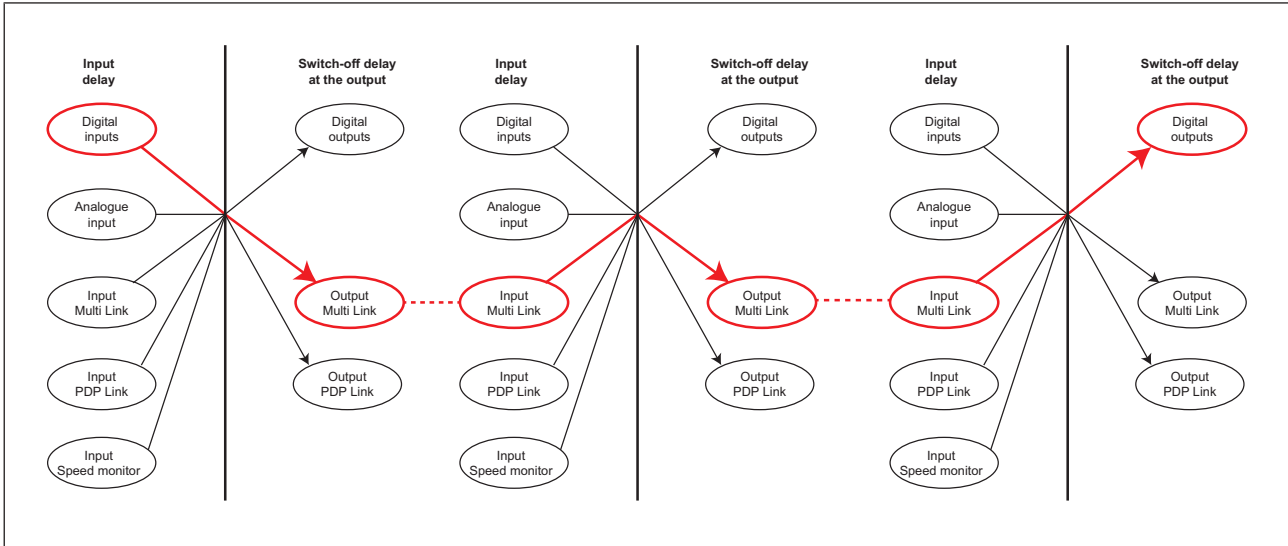

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 30 \text{ ms}$$

$$t_{\text{ReactionMax}} = 104 \text{ ms}$$


System expansion

Connection of multiple PNOZmulti systems

Example: Connecting 5 base units PNOZmulti


The maximum reaction time $t_{\text{ReactionMax}}$ includes the following times:

- ▶ Max. input delay PNOZ mm0.1p (Base 1): 4 ms
- ▶ Data transfer time of the connection at the PNOZ mml1p (Base 1): 35 ms
- ▶ Max. input delay PNOZ mml1p (Base 2): 0 ms
- ▶ Data transfer time of the connection at the PNOZ mml1p (Base 2): 35 ms
- ▶ Max. input delay PNOZ mml1p (Base 2): 0 ms
- ▶ Data transfer time of the connection at the PNOZ ml1p (Base 4): 35 ms
- ▶ Max. input delay PNOZ m EF Multi Link (Base 5): 0 ms
- ▶ Max. processing time PNOZ m B0 (Base 5): 30 ms
- ▶ Max. switch-off delay at the output PNOZ m B0 (Base 5): 1 ms

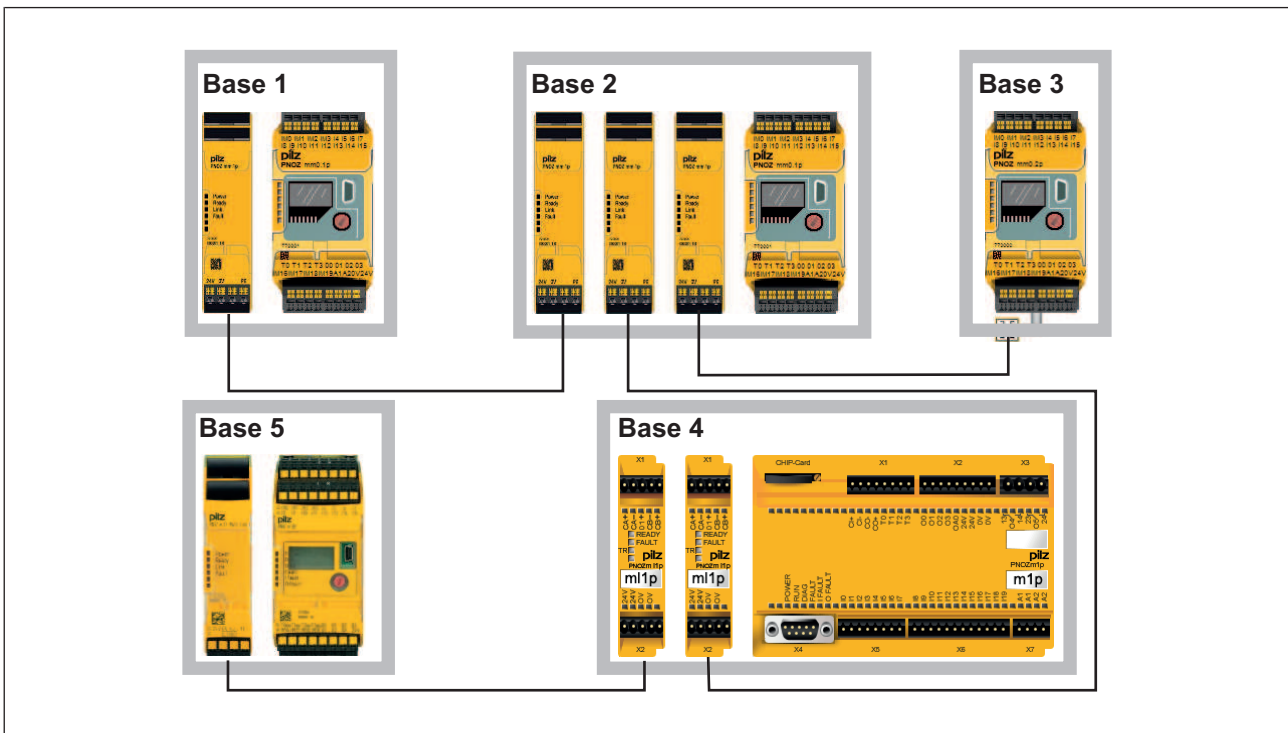

System expansion

Connection of multiple PNOZmulti systems

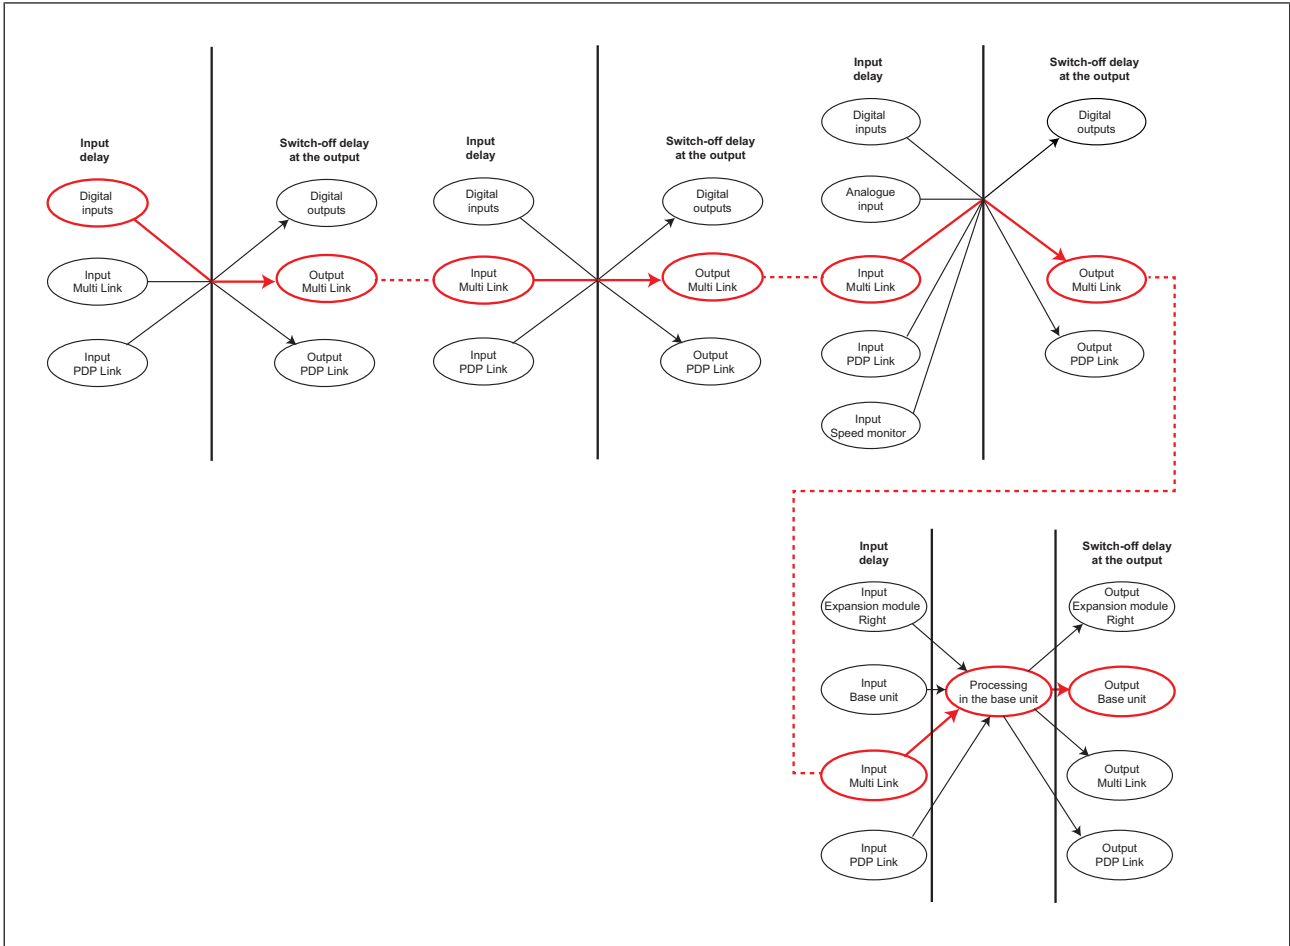

$$t_{\text{ReactionMax}} = 4 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 35 \text{ ms} + 0 \text{ ms} + 30 \text{ ms} + 1 \text{ ms}$$

$$t_{\text{ReactionMax}} = 140 \text{ ms}$$

System expansion

Connection via the cascading inputs and outputs

To connect base units from the safety systems PNOZmulti via the cascading inputs and outputs, please refer to the PNOZmulti Installation Manual.

Contents	Page
PNOZmulti Classic systems	43
PNOZmulti Mini systems	48

PNOZmulti Classic systems
Base units

Type	Order number	Features	Common features
PNOZ m0p PNOZ m0p ETH	773 110 773 113	Base unit From 3 ... 6 safety functions Only 1 link module and fieldbus module each can be connected, no other expansion modules can be used, From 3 ... 6 safety functions	<ul style="list-style-type: none"> ▶ To connect emergency stop devices, two-hand pushbuttons, safety gate limit switches, light beam devices, scanners, enabling switches, safety gate switches PSEN, operating mode selector switches, muting, safety mats, sensors, for example ▶ Can be configured in the PNOZmulti Configurator ▶ Exchangeable program memory ▶ Diagnostic interface ▶ 1 fieldbus module can be connected ▶ PNOZ m1p, PNOZ m2p, PNOZ m3p: Max. 8 expansion modules can be connected ▶ 20 safe inputs ▶ Semiconductor outputs: <ul style="list-style-type: none"> – 4 safety outputs Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061 – 1 output for standard applications ▶ Positive-guided relay outputs: <ul style="list-style-type: none"> – 2 safety outputs Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061 ▶ 4 test pulse outputs ▶ 1 cascading input and output; can also be used as a standard output ▶ LED for fault, diagnostics, supply voltage, input and output circuits ▶ Plug-in connection terminals: either spring-loaded or screw terminals (available as accessory) ▶ Dimensions (H x B x T): 94 x 135 x 121 mm
PNOZ m1p PNOZ m1p ETH PNOZ m1p coated version PNOZ m1p ETH coated version	772 001	Base unit Modular and expandable, max. 8 expansion modules and 1 fieldbus module can be connected From 4 safety functions and automation functions	
PNOZ m2p PNOZ m2p ETH	772 002	Base unit - specifically for press applications Monitoring of operating modes such as set-up mode, single-stroke and automatic, safety light curtains in single-break and double-break mode, rotary cam arrangement with run monitoring, press safety valves Modular and expandable as PNOZ m1p	
PNOZ m3p PNOZ m3p ETH	773 125 773 126	Base unit - specifically for burner management: Control and monitoring of furnaces, e.g. monitoring of safety sequences, combustion air pressure, ignition, flame, external compound controller and tightness control; plus control of safety valves, ignition valves, exhaust valves, ignition, external compound controller and combustion air blower Modular and expandable as PNOZ m1p	

Please refer to the section entitled [System expansion \[24\]](#) for details of the number and type of connectable expansion modules for the expandable base units.

PNOZmulti Classic systems
Expansion modules

Type	Order number	Application area	Features
Analogue input modules			
PNOZ ma1p PNOZ ma1p coated version	773 812 773 813	Safe analogue input module	<ul style="list-style-type: none"> ▶ 2 safe analogue inputs for current or voltage measurement ▶ Each input can be configured separately ▶ Voltage range: -10.24 ... +10.2375 V ▶ Current range: 0 ... 25.59 mA ▶ Resolution <ul style="list-style-type: none"> – Voltage measurement: 13 Bit (signed 12 Bit) – Current measurement: 12 Bit ▶ Range monitoring to monitor for wiring errors or errors in the sensor (4 range limits can be configured) ▶ Threshold value monitoring to monitor process variables (8 threshold values can be configured) ▶ Exact analogue value can be passed to a fieldbus for diagnostic purposes ▶ Status indicators ▶ Coated version: For increased environmental requirements
Link modules			
PNOZ ml1p PNOZ ml1p coated version	773 540 773 545	For safe connection of two PNOZmulti base units	<ul style="list-style-type: none"> ▶ Point-to-point connection via 4-core shielded and twisted-pair cable ▶ 32 virtual inputs and 32 virtual outputs ▶ Status indicators ▶ Coated version: For increased environmental requirements
PNOZ ml2p	773 602	For safe connection of one base unit with up to 4 decentralised modules PDP67 (see below)	<ul style="list-style-type: none"> ▶ Max. 4 decentralised modules PDP67 F 8DI ION can be connected to the link module PNOZ ml2p ▶ Status indicators
Decentralised modules (not included in this catalogue)			
PDP67 F 8DI ION	773 600	Decentralised safe input module IP67	<ul style="list-style-type: none"> ▶ Protection type IP67 ▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors ▶ 8 outputs, which can be configured as <ul style="list-style-type: none"> – Standard outputs – Test pulse outputs – 24 V outputs ▶ Status indicators

PNOZmulti Classic systems Expansion modules

Type	Order number	Application area	Features
PDP67 F 8DI ION HP	773 601	Decentralised safe input module IP67	<ul style="list-style-type: none"> ▶ Protection type IP67 ▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors ▶ 8 outputs, which can be configured as <ul style="list-style-type: none"> – Standard outputs – Test pulse outputs – 24 V outputs ▶ Separate output supply for applications with higher current consumption ▶ Module is galvanically isolated from CAN bus ▶ Status indicators
Input modules			
PNOZ mi1p	773 400	Safe input module	<ul style="list-style-type: none"> ▶ 8 safe inputs ▶ Status indicators ▶ Test pulse outputs used to monitor shorts across the inputs ▶ Coated version: For increased environmental requirements
PNOZ mi1p coated version	773 405		
PNOZ mi2p	773 410	Input module	<ul style="list-style-type: none"> ▶ 8 inputs for standard applications ▶ Status indicators
Output modules			
PNOZ mo1p	773 500	Safe semiconductor output module	<ul style="list-style-type: none"> ▶ 4 safe semiconductor outputs up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application ▶ Status indicators ▶ Coated version: For increased environmental requirements
PNOZ mo1p coated version	773 505		
PNOZ mo2p	773 520	Safe relay output module	<ul style="list-style-type: none"> ▶ 2 safe relay outputs, positive-guided up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application ▶ Status indicators ▶ Coated version: For increased environmental requirements
PNOZ mo2p coated version	773 525		
PNOZ mo3p	773 510	Safe semiconductor output module, dual-pole	<ul style="list-style-type: none"> ▶ 4 safe semiconductor outputs, dual-pole, up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application ▶ Status indicators
PNOZ mo4p	773 536	Safe relay output module, volt-free switching of actuators	<ul style="list-style-type: none"> ▶ 4 safe relay outputs, positive-guided up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application ▶ Status indicators ▶ Coated version: For increased environmental requirements
PNOZ mo4p coated version	773 537		
PNOZ mo5p	773 534	Safe relay output module to control the safety valves on a burner in accordance with EN 50156	<ul style="list-style-type: none"> ▶ 4 safe relay outputs, positive-guided, diverse ▶ Up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application ▶ Status indicators

PNOZmulti Classic systems Expansion modules

Type	Order number	Application area	Features
Output modules for standard applications			
PNOZ mc1p	773 700	Semiconductor output module for standard applications	<ul style="list-style-type: none"> ▶ 16 semiconductor outputs for standard applications ▶ Status indicators ▶ Coated version: For increased environmental requirements ▶ Status indicators
PNOZ mc1p coated version	773 705		
Speed monitor			
PNOZ ms1p	773 800	To connect <ul style="list-style-type: none"> ▶ Proximity switches ▶ Incremental encoders Sin/Cos, TTL (5V) 	<ul style="list-style-type: none"> ▶ Monitoring of 2 independent axes (8 cutoff frequencies can be set) ▶ Connection per axis: 1 incremental encoder or 2 proximity switches or one of each ▶ Measured variables: <ul style="list-style-type: none"> – Standstill – Speed (8 values can be set) – Direction of rotation ▶ Encoder types can be selected in the PNOZmulti Configurator ▶ Proximity detectors are connected directly to the terminals ▶ Status indicators
PNOZ ms2p HTL	773 815	To connect <ul style="list-style-type: none"> ▶ Proximity switches ▶ Incremental encoders HTL (24 V) 	
PNOZ ms2p TTL	773 816	To connect <ul style="list-style-type: none"> ▶ Proximity switches ▶ Incremental encoders Sin/Cos, TTL (5V) 	
PNOZ ms2p TTL coated version	773 811		
PNOZ ms3p	773 820	To connect <ul style="list-style-type: none"> ▶ Incremental encoders Sin/Cos, TTL (5V), HTL (24 V) 	
PNOZ ms3p HTL	773 825	To connect Incremental encoders HTL (24 V)	
PNOZ ms3p TTL	773 826	To connect <ul style="list-style-type: none"> ▶ Incremental encoders Sin/Cos, TTL (5V) 	
PNOZ ms4p	773 830	To connect <ul style="list-style-type: none"> ▶ Incremental encoders Sin/Cos, TTL (5V), HTL (24 V) 	<ul style="list-style-type: none"> ▶ Monitoring of 1 axis ▶ Connection per axis: 1 incremental encoder ▶ Measured variables: <ul style="list-style-type: none"> – Standstill – Speed (16 values can be set) – Direction of rotation ▶ Function to deactivate speed monitoring ▶ Encoder types can be selected in the PNOZmulti Configurator ▶ Status indicators
Fieldbus modules			

PNOZmulti Classic systems Expansion modules

Type	Order number	Application area	Features
PNOZ mc0p	773 720	Power supply to supply voltage to fieldbus modules	
PNOZ mc2.1p	773 713	EtherCAT (DS301 V4.02 compliant)	
PNOZ mc3p	773 732	PROFIBUS-DP	
PNOZ mc4p	773 711	DeviceNet	
PNOZ mc4p coated version	773 729		
PNOZ mc5p	773 723	Interbus	
PNOZ mc5.1p	773 728	Interbus fibre-optic cable	
PNOZ mc6p	773 712	CANopen	
PNOZ mc6p coated version	773 727		
PNOZ mc6.1p	773 733	CANopen	
PNOZ mc7p	773 726	CC-Link	
PNOZ mc7p coated version	773 725		
PNOZ mc8p	773 730	Ethernet IP/Modbus TCP	
PNOZ mc8p coated version	773 734		
PNOZ mc9p	773 731	Profinet	
PNOZ mc10p	773 715	sercos III	
PNOZ mc12p	773 719	Ethernet POWERLINK	

Please refer to the section entitled [System expansion](#) [24] for details of the number of connectable expansion modules and the slot.

PNOZmulti Mini systems Expansion modules

Type	Order number	Features	Common features
PNOZ mm0p PNOZ mm0p-T	772 000 772 010	Base unit From 3 ... 6 safety functions Not modular and expandable	<ul style="list-style-type: none"> ▶ To connect emergency stop devices, two-hand pushbuttons, safety gate limit switches, light beam devices, scanners, enabling switches, safety gate switches PSEN, operating mode selector switches, muting, safety mats, sensors, for example ▶ Can be configured in the PNOZmulti Configurator ▶ Exchangeable program memory ▶ 20 safe inputs, up to 8 of which can be configured as outputs for standard applications ▶ 4 safe semiconductor outputs up to PL e, SIL CL 3 ▶ 4 semiconductor outputs, can be configured as outputs for standard applications or as test pulses ▶ Display for error messages, state of the supply voltage, state of the inputs and outputs, status and device information. Customised texts can be displayed ▶ Rotary knob for menu control ▶ Plug-in connection terminals: either spring-loaded or screw terminals (available as accessory) ▶ Dimensions (H x B x T): 100 x 45 x 120 mm
PNOZ mm0.1p	772 001	Base unit From 4 safety functions and for standard control functions <ul style="list-style-type: none"> ▶ Expansion modules PNOZsigma can be connected ▶ 1 link module or communication module can be connected ▶ 1 fieldbus module can be connected ▶ Decentralisation: PDP67 modules can be connected to connect sensor technology ▶ Expanded diagnostics PVIS From 4 safety functions and for standard control functions	
PNOZ mm0.2p	772 002	Base unit As PNOZ mm0.1p, with additional integrated Multi-Link interface	

Please refer to the section entitled [System expansion \[24\]](#) for details of the number and type of connectable expansion modules for the expandable base units.

Type	Order number	Application area	Features
Link modules			
PNOZ mml1p	772 020	For safe connection of two PNOZmulti base units	<ul style="list-style-type: none"> ▶ Point-to-point connection via 4-core shielded and twisted-pair cable ▶ 32 virtual inputs and 32 virtual outputs ▶ Status indicators
PNOZ mml2p	772 020	For safe connection of one base unit with up to 4 decentralised modules PDP67 (see below)	<ul style="list-style-type: none"> ▶ Max. 4 decentralised modules PDP67 F 8DI ION can be connected to the link module PNOZ mml2p ▶ Status indicators
Decentralised modules (not included in this catalogue)			
PDP67 F 8DI ION	773 600	Decentralised safe input module IP67	<ul style="list-style-type: none"> ▶ Protection type IP67 ▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors ▶ 8 outputs, which can be configured as <ul style="list-style-type: none"> – Standard outputs – Test pulse outputs – 24 V outputs ▶ Status indicators

PNOZmulti Mini systems Expansion modules

Type	Order number	Application area	Features
PDP67 F 8DI ION HP	773 601	Decentralised safe input module IP67	<ul style="list-style-type: none"> ▶ Protection type IP67 ▶ 8 inputs for connecting 8 single-channel or 4 dual-channel sensors ▶ 8 outputs, which can be configured as <ul style="list-style-type: none"> – Standard outputs – Test pulse outputs – 24 V outputs ▶ Separate output supply for applications with higher current consumption ▶ Module is galvanically isolated from CAN bus ▶ Status indicators
Communication modules			
PNOZ mmc1p	772 030	Communication module with Ethernet interfaces (TCP/IP, Modbus/TCP)	<ul style="list-style-type: none"> ▶ 2 Ethernet interfaces ▶ Status indicators
PNOZ mmc2p	772 031	Communication module with serial interface RS232	<ul style="list-style-type: none"> ▶ 1 serial interface RS232 ▶ Status indicators
Fieldbus modules			
PNOZ mmc3p	772 032	Fieldbus module PROFIBUS DP	<ul style="list-style-type: none"> ▶ Connection for PROFIBUS DP ▶ Station addresses from 0 ... 99, selected via rotary switch ▶ Status indicators
PNOZ mmc4p	772 033	Fieldbus module DeviceNet	<ul style="list-style-type: none"> ▶ Connection for DeviceNet ▶ Station addresses from 0 ... 63 using DIP switch(es) ▶ Status indicators
PNOZ mmc6p	772 034	Fieldbus module CANopen	<ul style="list-style-type: none"> ▶ Connection for CANopen ▶ Station addresses from 0 ... 99, selected via rotary switch ▶ Transmission rate selected via rotary switch () ▶ Status indicators
PNOZ mmc7p	772 035	Fieldbus module CC-Link	<ul style="list-style-type: none"> ▶ Connection for CC-Link ▶ Station addresses from 1 ... 63, selected via rotary switch ▶ Station type: Remote Device ▶ Occupied stations: 2 ▶ Status indicators
PNOZ mmc11p	772 036	Fieldbus module EtherCAT	<ul style="list-style-type: none"> ▶ Connection for EtherCAT ▶ Network protocols: EtherCAT ▶ Supports CANopen over EtherCAT (DS301 V4.02 compliant) ▶ Status indicators

PNOZmulti Mini systems
Expansion modules

Type	Order number	Application area	Features
PNOZ mmc12p	772 019	Fieldbus module Ethernet POWERLINK	<ul style="list-style-type: none"> ▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol) ▶ Station addresses from 1 ... 239, selected via rotary switch ▶ The minimum cycle time for an application of 20 Byte Output and 20 Byte Input is 250µs. The minimum cycle time is 450 µs at the maximum PDO size of 254 Byte Input and 20 Byte Output (the inputs and outputs in this case are viewed from the Managing Node). ▶ Status indicators
PNOZsigma output modules (not included in this catalogue)			
PNOZ s7	751 107 750 107	1 safe relay output	Relay output modules for PNOZsigma product range (see Technical Catalogue PNOZ)
PNOZ s7.1	751 167 750 167	1 safe relay output (+ 1 PNOZ s7, PNOZ s10 or PNOZ s11 can be connected as a contact expansion module)	
PNOZ s7.2	751 177 750 177	1 safe relay output (+ 1 expansion module PNOZ s7, PNOZ s10 or PNOZ s11 can be connected)	
PNOZ s10	751 110 750 110	1 safe relay output	
PNOZ s11	751 111 750 111	8 safe relay outputs	
PNOZ s20	751 160 750 160	2 semiconductor outputs for standard applications	
PNOZ s22	751 132 750 132	2 safe relay outputs	

Please refer to the section entitled [System expansion \[24\]](#) for details of the number of connectable expansion modules and the slot.


Contents	Page
Base units	53
Input modules	139
Analogue input module	156
Output modules	166
Link modules	233
Speed monitors	259
Fieldbus modules	372

Base units

Base units

Contents	Page
PNOZ m0p	55
PNOZ m1p	75
PNOZ m2p	97
PNOZ m3p	118

Base units PNOZ m0p

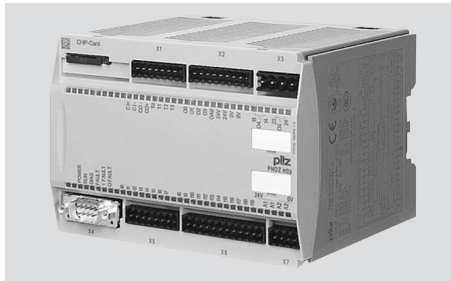

Overview

Unit features

Application of the product PNOZ m0p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
 - 2 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
 - 4 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
 - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand pushbuttons
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN
 - Operating mode selector switches

Base units PNOZ m0p

- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
 - Diagnostics
 - Supply voltage
 - Output circuits
 - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Integrated interfaces:
 - PNOZ m0p: Serial interface RS232
 - PNOZ m0p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).

Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Base units PNOZ m0p


Front view

PNOZ m0p

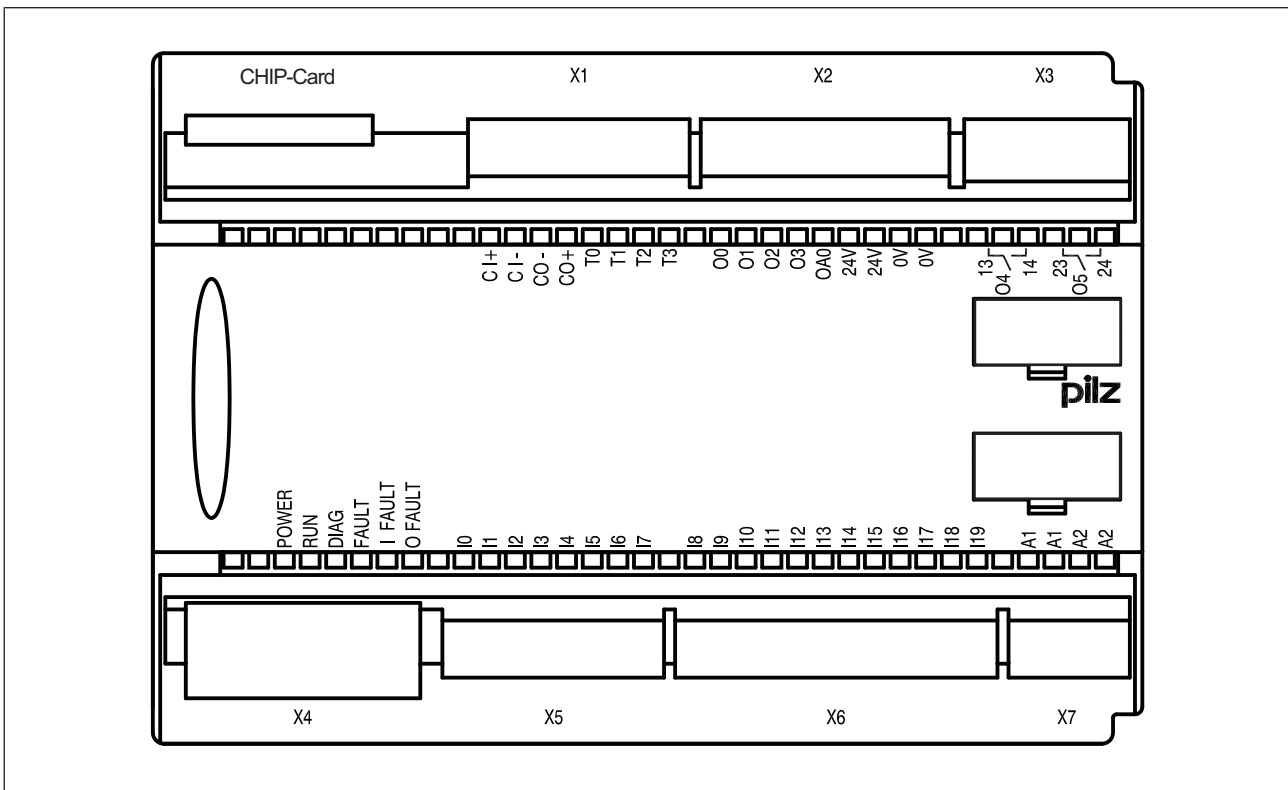

Base units PNOZ m0p

PNOZ m0p ETH

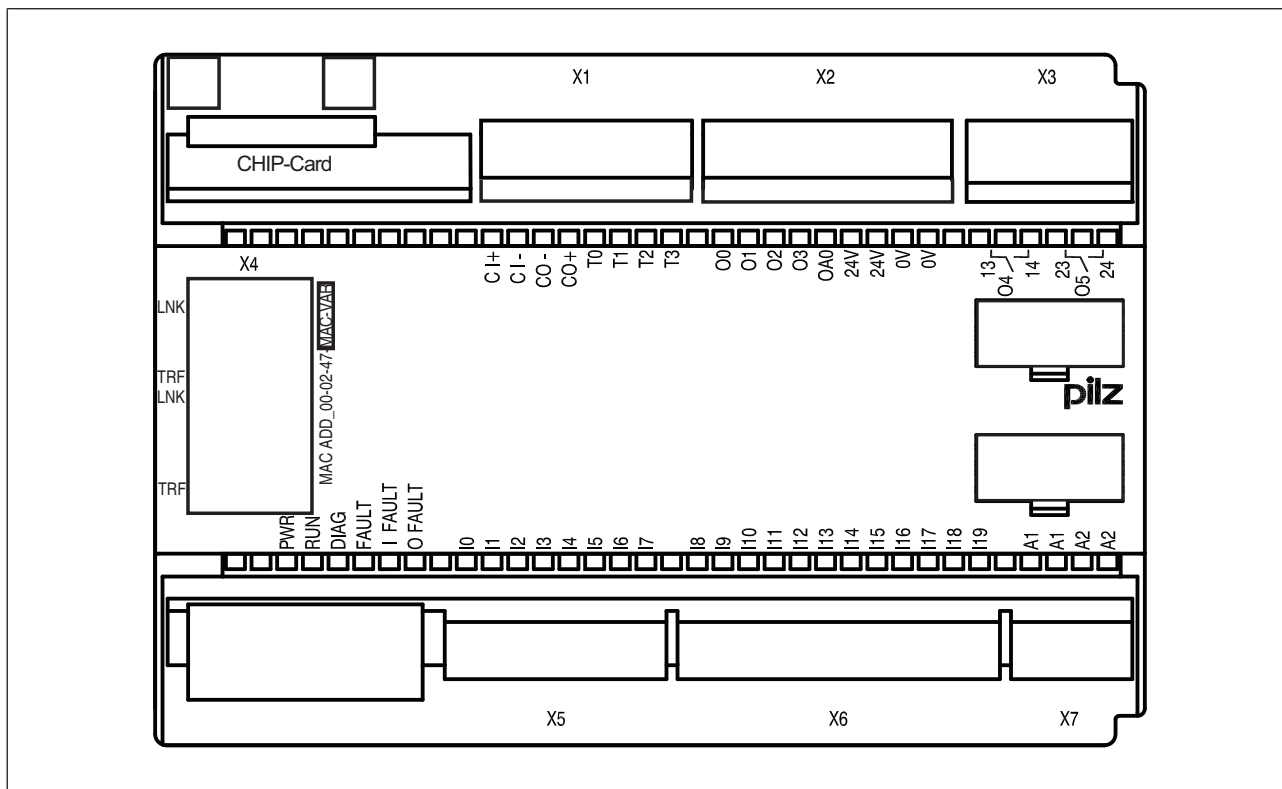

Legend:

- | | |
|-----------|---|
| CHIP card | Chipkarte interface |
| X1 | Cascading inputs and outputs CI and CO,
Test pulse outputs T0 ... T3 |
| X2 | Semiconductor outputs O0 ... O3,
Auxiliary output OA0,
Supply connections |
| X3 | Relay outputs O4 and O5 |
| X4 | RS232 interface / Ethernet interface |
| X5, X6 | Inputs I0 ... I19 |
| X7 | Power supply |
| LEDs: | PWR
RUN
DIAG
FAULT
I FAULT
O FAULT |

Base units PNOZ m0p

Function description


Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.


Block diagram

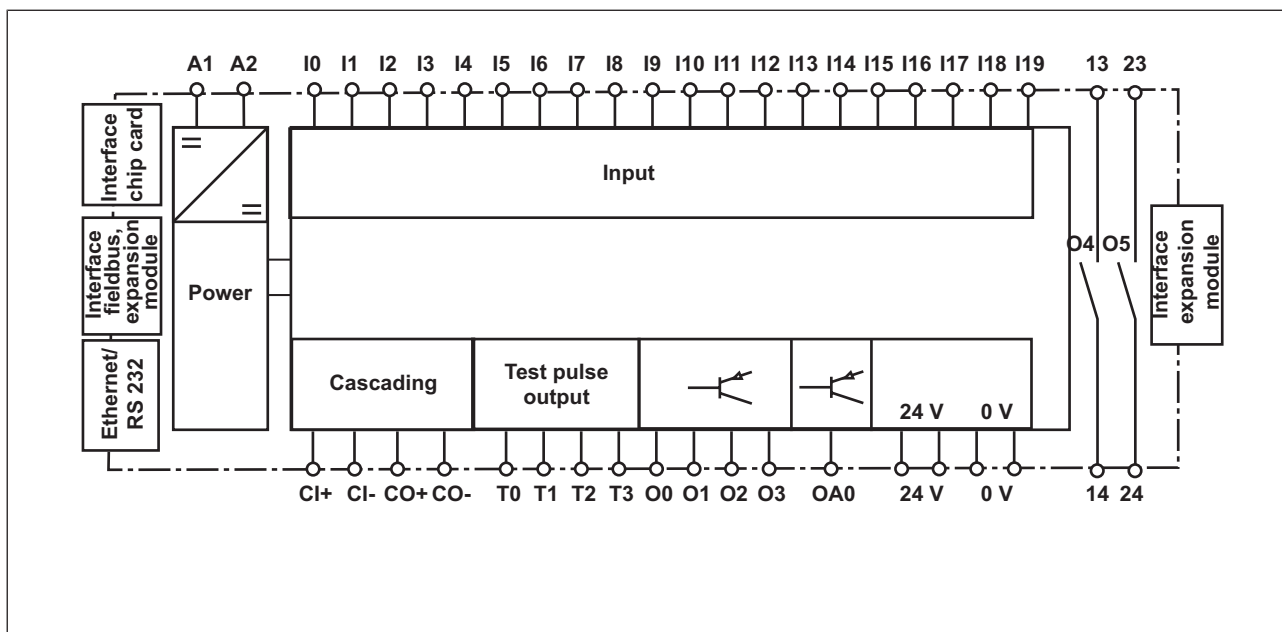

Base units PNOZ m0p

Installation

Dimensions

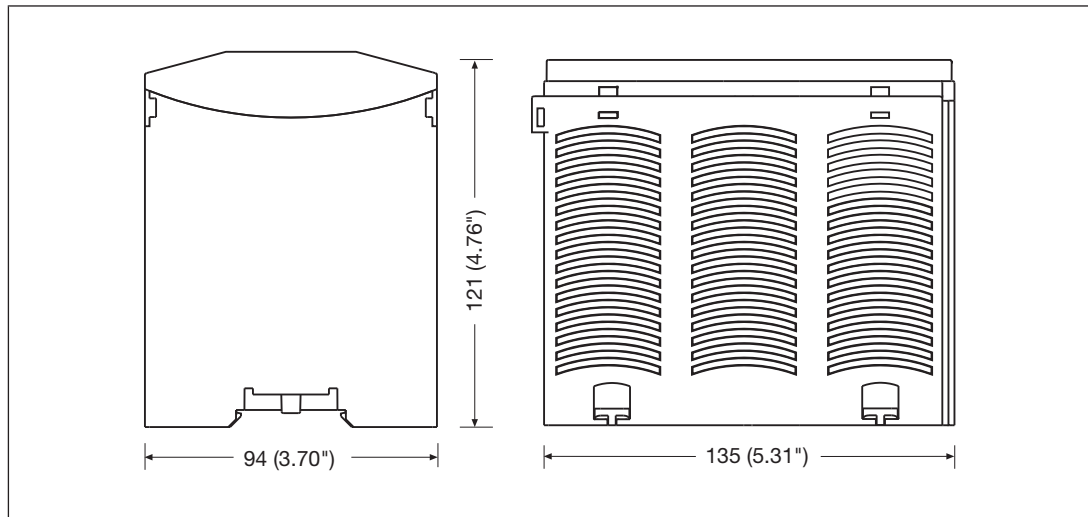

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[65\]](#) must be followed.
- ▶ Outputs:
 - O0 to O5 are safety outputs
 - O4 and O5 are relay outputs
 - O0 to O3 are semiconductor outputs
 - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Adequate protection circuit must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

Base units PNOZ m0p

- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.

Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		

Connection examples for the input circuit

Base units PNOZ m0p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

Redundant output		
Single output		

Connection examples for semiconductor outputs

Base units PNOZ m0p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs


<p>Feedback loop</p>	<p>Redundant output</p>	
<p>Contacts from external contactors</p>		

Connection examples for feedback loop

Base units PNOZ m0p

Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

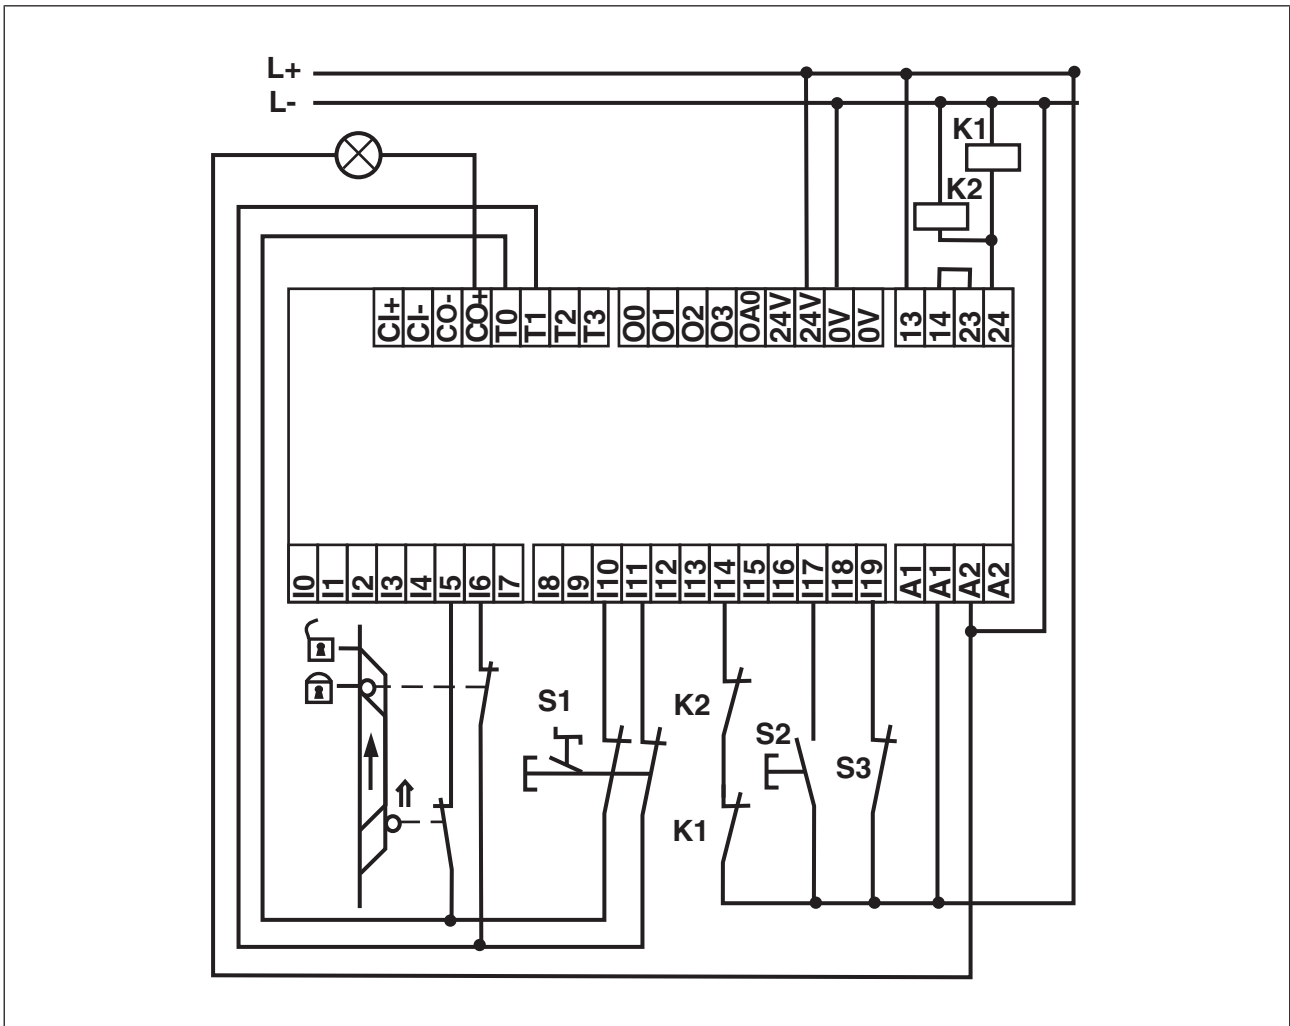

Base units PNOZ m0p

Technical Details

General	773110	773113
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773110	773113
Supply voltage		
for	Supply to the system	Supply to the system
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC) at no load	8 W	9 W
Residual ripple DC	5 %	5 %
Supply voltage		
for	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192 W	192 W
Residual ripple DC	5 %	5 %
Potential isolation	Yes	Yes
Status indicator	LED	LED
Inputs	773110	773113
Quantity	20	20
Max. number of live inputs within the max. permitted ambient temperature (see "Environmental data")	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15
Signal level at g0 h	-3 - +5 V DC	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC	24 V DC
Input current at rated voltage	8 mA	8 mA
Min. pulse duration	18 ms	18 ms
Pulse suppression	0,6 ms	0,6 ms
Maximum input delay	4 ms	4 ms
Potential isolation	No	No
Semiconductor outputs	773110	773113
Quantity	4	4

Base units PNOZ m0p

Semiconductor outputs	773110	773113
Switching capability		
Voltage	24 V	24 V
Current	2 A	2 A
Power	48 W	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA	0,5 mA
Max. capacitive load	1 µF	1 µF
Max. duration of off time during self test	300 µs	300 µs
Switch-off delay	30 ms	30 ms
Potential isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Semiconductor outputs (stand-ard)	773110	773113
Quantity	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Power	12 W	12 W
Galvanic isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
Test pulse outputs	773110	773113
Number of test pulse outputs	4	4
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Max. duration of off time during self test	5 ms	5 ms
Short circuit-proof	Yes	Yes
Potential isolation	No	No
Relay outputs	773110	773113
Number of relay outputs	2	2
Utilisation category		
in accordance with the standard	EN 60947-4-1	EN 60947-4-1

Base units PNOZ m0p

Relay outputs	773110	773113
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Max. current	6 A	6 A
Max. power	1440 VA	1440 VA
DC1 at	24 V	24 V
Max. current	6 A	6 A
Max. power	144 W	144 W
Utilisation category		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	3 A	3 A
Max. power	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V
Max. current	3 A	3 A
Max. power	72 W	72 W
Airgap creepage between		
Relay contacts	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm
External contact fuse protection, safety contacts		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	6 A	6 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A
Switch-off delay	50 ms	50 ms
Potential isolation	Yes	Yes
Cascading output as standard output		
Quantity	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,2 A	0,2 A
Power	4,8 W	4,8 W
Galvanic isolation	No	No
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Ethernet interface		
Quantity	–	2

Base units PNOZ m0p

Serial interface	773110	773113
Number of RS232 interfaces	1	–
Times	773110	773113
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s
Max. cycle time of the device	15 ms	15 ms
Max. processing time for data communication	–	50 ms
Environmental data	773110	773113
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	6 kV	6 kV

Base units PNOZ m0p

Environmental data	773110	773113
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Potential isolation	773110	773113
Potential isolation between	SC output and system voltage	SC output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	2500 V	2500 V
Potential isolation between	Relay output and system voltage	Relay output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	6000 V	6000 V
Mechanical data	773110	773113
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Cable length		
Max. cable length per input	1 km	1 km
Sum of individual cable lengths at the test pulse output	40 km	40 km
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm

Base units PNOZ m0p

Mechanical data	773110	773113
Torque setting with screw terminals (relay outputs)	0,5 Nm	0,5 Nm
Stripping length with screw terminals	7 mm	7 mm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm
Dimensions		
Height	94 mm	94 mm
Width	135 mm	135 mm
Depth	121 mm	121 mm
Weight	499 g	518 g

Where standards are undated, the 2020-07 latest editions shall apply.

Base units PNOZ m0p

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/max- imum SIL	EN IEC 62061 PFH _D [1/h]	EN ISO 13849-1: 2015 T _M [year]
Logic						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
Input						
Inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
Inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
Inputs	Short circuit- forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20
Cascad. in- puts	–	PL e	Cat. 4	SIL CL 3	3,10E-10	20
Output						
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	20
Cascad. out- puts	–	PL e	Cat. 4	SIL CL 3	4,91E-10	20
Relay outputs	1-channel	PL c	Cat. 1	-	2,90E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switch frequency and the load of the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Base units PNOZ m0p

Supplementary data

Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

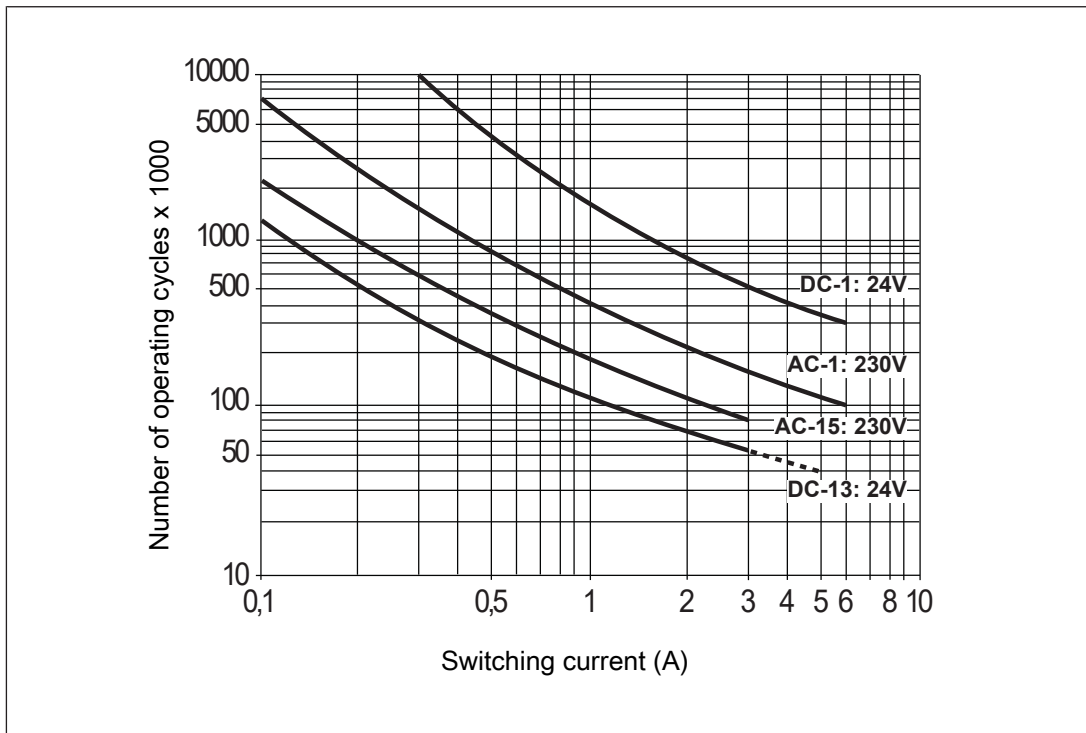


Fig.: Service life graphs at 24 VDC and 230 VAC

Base units PNOZ m0p

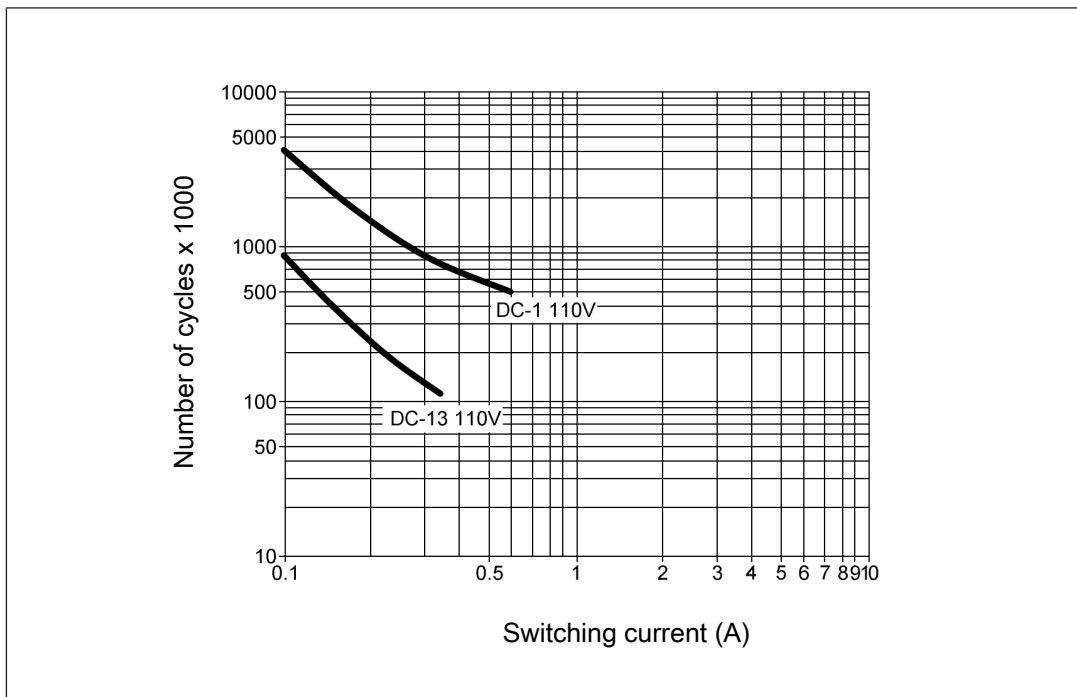


Fig.: Service life graphs at 110 VDC

Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[65\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

Base units PNOZ m0p

Order reference

Product

Product type	Features	Order no.
PNOZ m0p	Base unit	773110
PNOZ m0p ETH	Base unit, Ethernet interface	773113

Accessories


Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783100
Set screw terminals	1 set of screw terminals	793100

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Base units PNOZ m1p

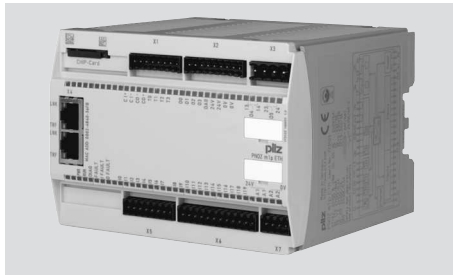

Overview

Unit features


Application of the product PNOZ m1p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
 - 2 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
 - 4 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
 - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand pushbuttons
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN
 - Operating mode selector switches

Base units PNOZ m1p

- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
 - Diagnostics
 - Supply voltage
 - Output circuits
 - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Expansion modules can be connected
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)
- ▶ Integrated interfaces:
 - PNOZ m1p: Serial interface RS232
 - PNOZ m1p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Coated version:
Increased environmental requirements (see [Technical details](#)  85)

Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Base units PNOZ m1p


Front view

PNOZ m1p

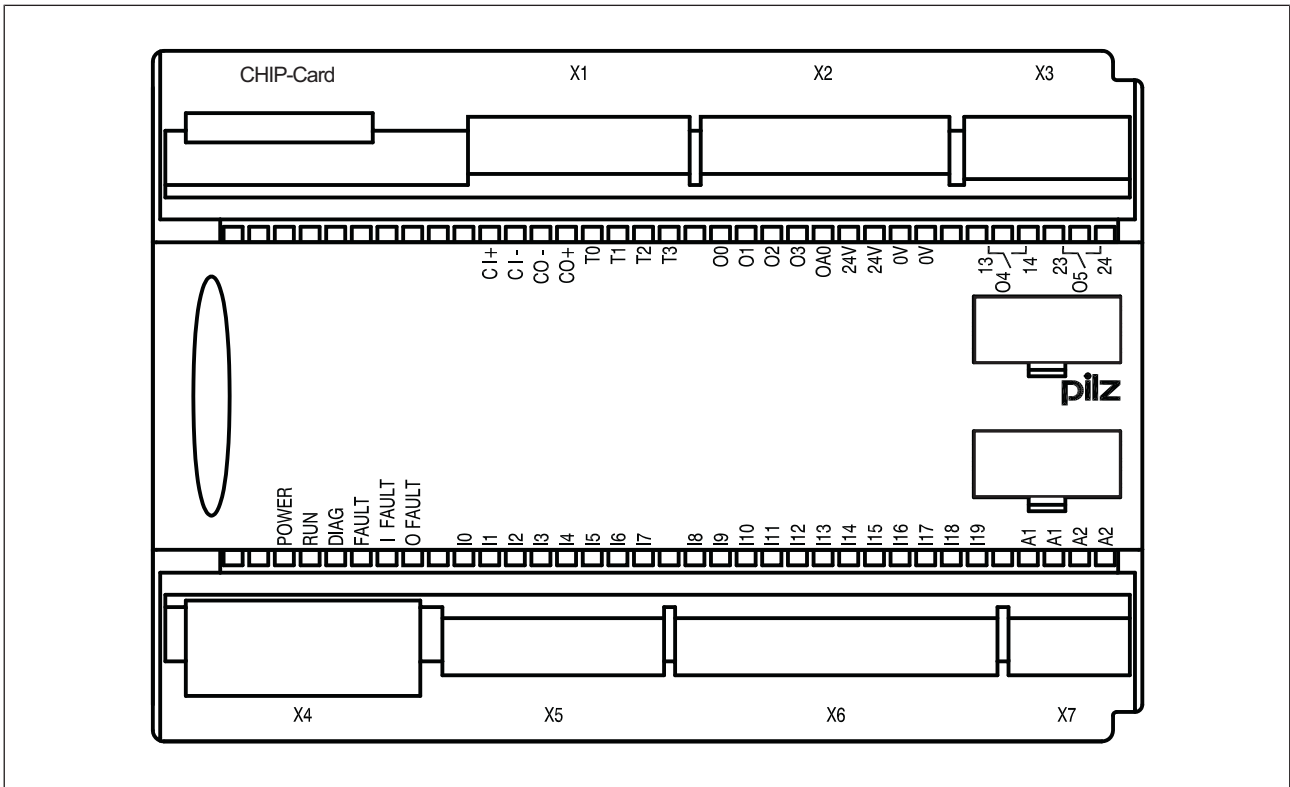

Base units PNOZ m1p

PNOZ m1p ETH

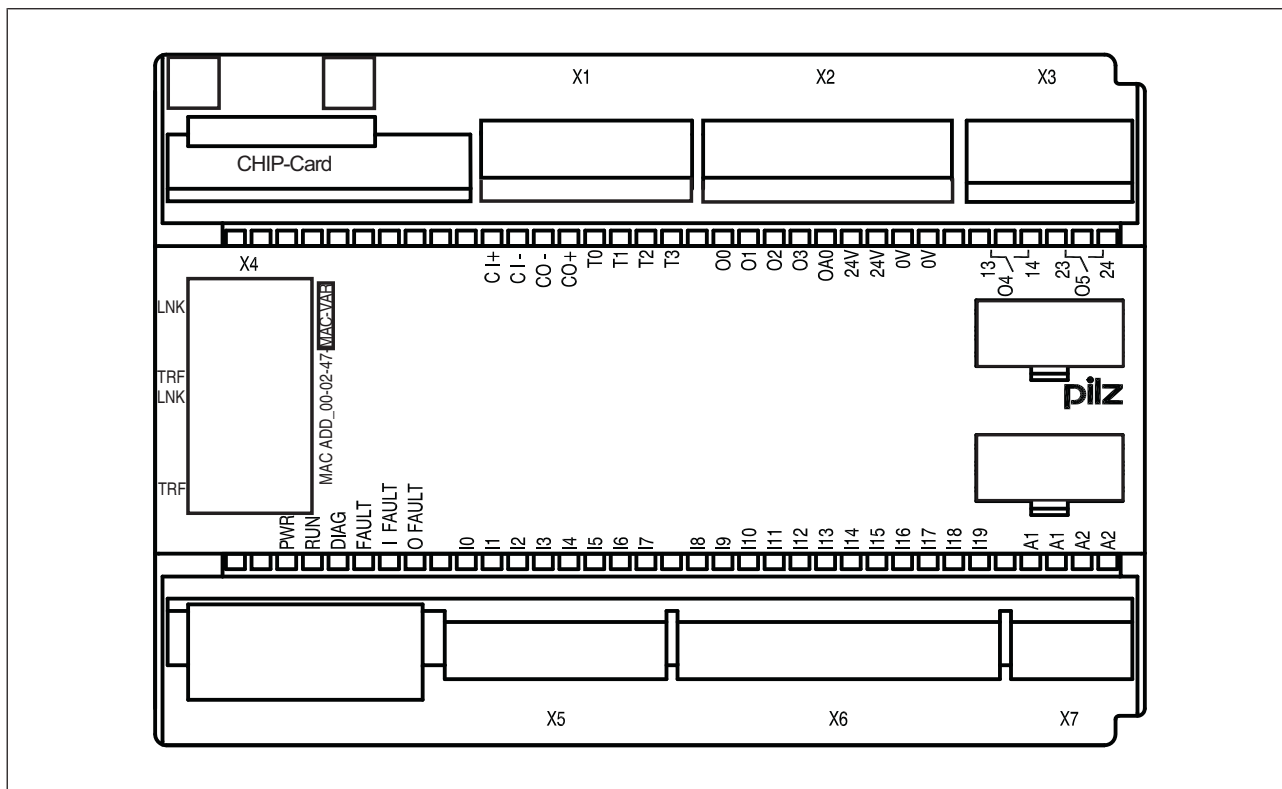

Legend:

CHIP card	Chipkarte interface
X1	Cascading inputs and outputs CI and CO, Test pulse outputs T0 ... T3
X2	Semiconductor outputs O0 ... O3, Auxiliary output OA0, Supply connections
X3	Relay outputs O4 and O5
X4	RS232 interface / Ethernet interface
X5, X6	Inputs I0 ... I19
X7	Power supply
LEDs:	PWR RUN DIAG FAULT I FAULT O FAULT

Base units PNOZ m1p

Function description


Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.


Block diagram

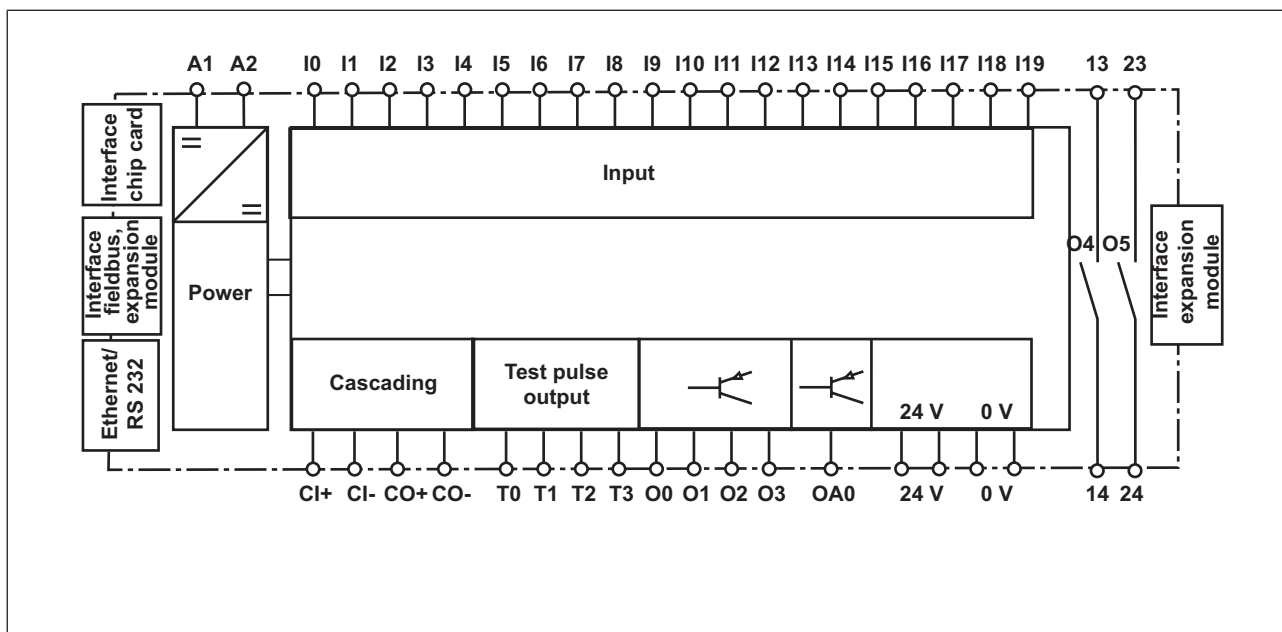

Base units PNOZ m1p

Installation

Dimensions

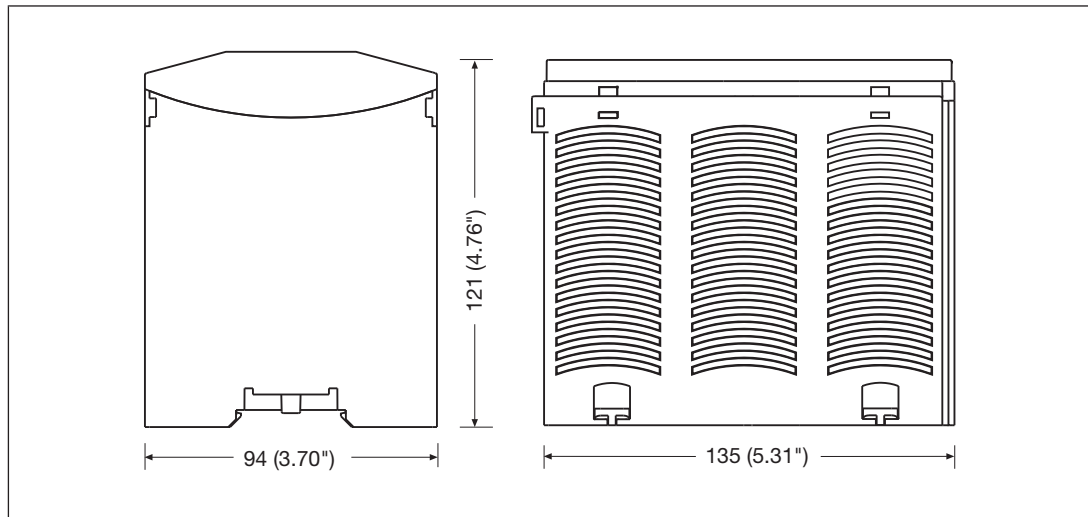

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[85\]](#) must be followed.
- ▶ Outputs:
 - O0 to O5 are safety outputs
 - O4 and O5 are relay outputs
 - O0 to O3 are semiconductor outputs
 - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Adequate protection circuit must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

Base units PNOZ m1p

- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.

Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		

Connection examples for the input circuit

Base units PNOZ m1p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

Redundant output		
Single output		

Connection examples for semiconductor outputs

Base units PNOZ m1p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs


<p>Feedback loop</p>	<p>Redundant output</p>	
<p>Contacts from external contactors</p>		

Connection examples for feedback loop

Base units PNOZ m1p

Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

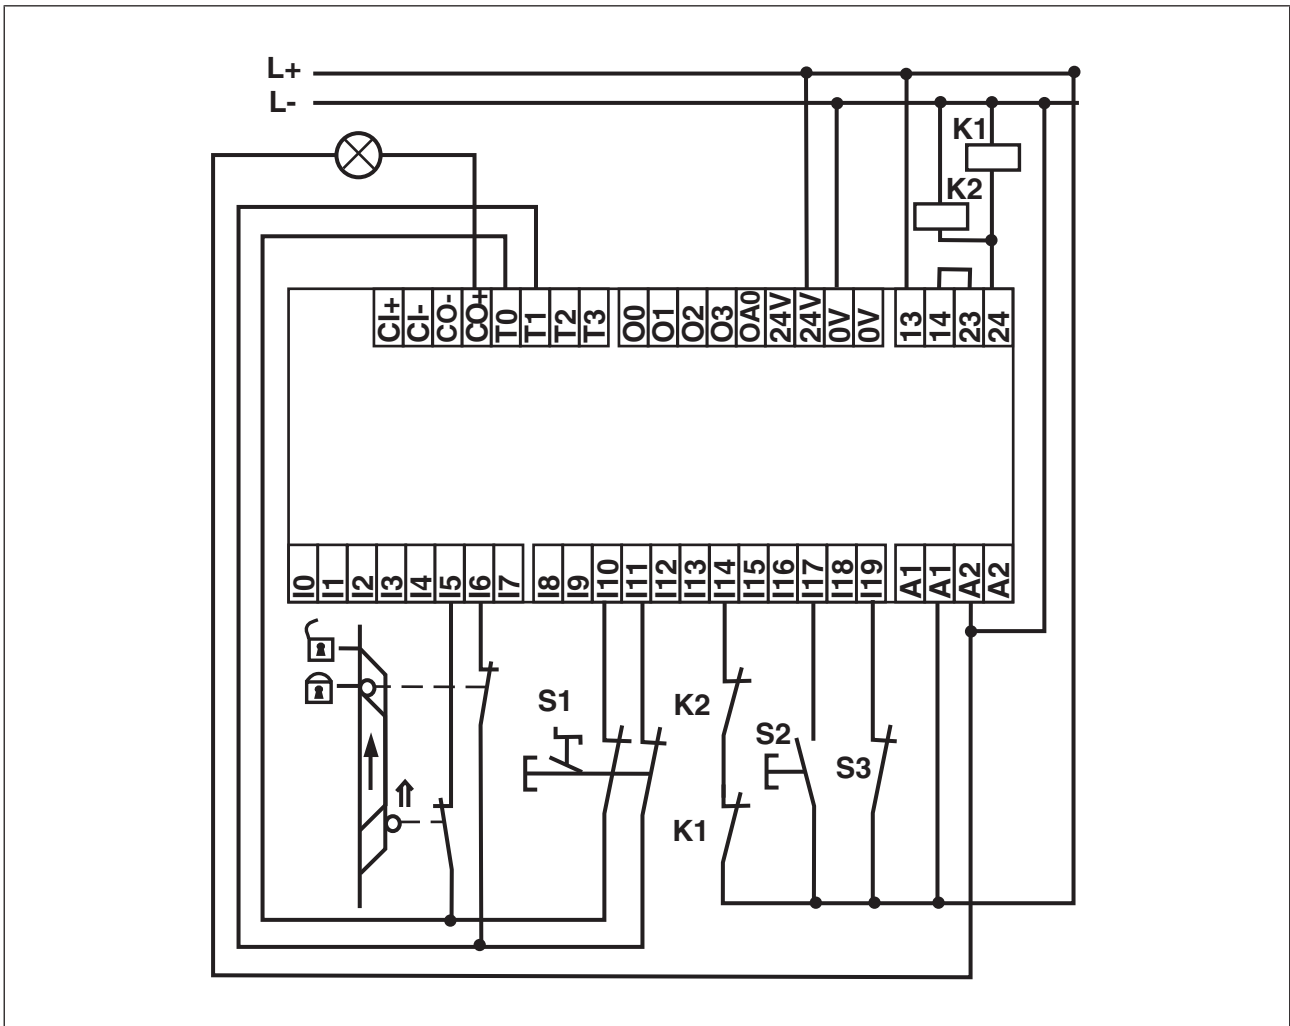

Base units PNOZ m1p

Technical Details

General	773100	773103	773104	773105
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773100	773103	773104	773105
Supply voltage for	Supply to the system	Supply to the system	Supply to the system	Supply to the system
Voltage	24 V	24 V	24 V	24 V
Kind	DC	DC	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC) at no load	8 W	9 W	9 W	8 W
Residual ripple DC	5 %	5 %	5 %	5 %
Supply voltage for	Supply to the SC outputs	Supply to the SC outputs	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V	24 V	24 V
Kind	DC	DC	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192 W	192 W	192 W	192 W
Residual ripple DC	5 %	5 %	5 %	5 %
Potential isolation	Yes	Yes	Yes	Yes
Supply voltage				
Power consumption per expansion module	2,5 W	2,5 W	2,5 W	2,5 W
Status indicator	LED	LED	LED	LED
Inputs	773100	773103	773104	773105
Quantity	20	20	20	20
Max. number of live inputs within the max. permitted ambient temperature (see "Environmental data")	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15
Signal level at g0 h	-3 - +5 V DC	-3 - +5 V DC	-3 - +5 V DC	-3 - +5 V DC

Base units PNOZ m1p

Inputs	773100	773103	773104	773105
Signal level at "1"	15 - 30 V DC	15 - 30 V DC	15 - 30 V DC	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC	24 V DC	24 V DC	24 V DC
Input current at rated voltage	8 mA	8 mA	8 mA	8 mA
Min. pulse duration	18 ms	18 ms	18 ms	18 ms
Pulse suppression	0,6 ms	0,6 ms	0,6 ms	0,6 ms
Maximum input delay	4 ms	4 ms	4 ms	4 ms
Potential isolation	No	No	No	No
Semiconductor outputs	773100	773103	773104	773105
Quantity	4	4	4	4
Switching capability				
Voltage	24 V	24 V	24 V	24 V
Current	2 A	2 A	2 A	2 A
Power	48 W	48 W	48 W	48 W
Derating of coated version at an ambient temperature > 50 °C				
Voltage	–	–	24 V	24 V
Current	–	–	1 A	1 A
Power	–	–	24 W	24 W
Signal level at "1"	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA	0,5 mA	0,5 mA	0,5 mA
Max. capacitive load	1 µF	1 µF	1 µF	1 µF
Max. duration of off time during self test	300 µs	300 µs	300 µs	300 µs
Switch-off delay	30 ms	30 ms	30 ms	30 ms
Potential isolation	Yes	Yes	Yes	Yes
Short circuit-proof	Yes	Yes	Yes	Yes
Semiconductor outputs (standard)	773100	773103	773104	773105
Quantity	1	1	1	1
Switching capability				
Voltage	24 V	24 V	24 V	24 V
Current	0,5 A	0,5 A	0,5 A	0,5 A
Power	12 W	12 W	12 W	12 W
Galvanic isolation	Yes	Yes	Yes	Yes

Base units PNOZ m1p

Semiconductor outputs (standard)	773100	773103	773104	773105
Short circuit-proof	Yes	Yes	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
Test pulse outputs	773100	773103	773104	773105
Number of test pulse outputs	4	4	4	4
Voltage	24 V	24 V	24 V	24 V
Current	0,5 A	0,5 A	0,5 A	0,5 A
Max. duration of off time during self test	5 ms	5 ms	5 ms	5 ms
Short circuit-proof	Yes	Yes	Yes	Yes
Potential isolation	No	No	No	No
Relay outputs	773100	773103	773104	773105
Number of relay outputs	2	2	2	2
Utilisation category in accordance with the standard	EN 60947-4-1	EN 60947-4-1	EN 60947-4-1	EN 60947-4-1
Utilisation category of safety contacts				
AC1 at	240 V	240 V	240 V	240 V
Max. current	6 A	6 A	6 A	6 A
Max. power	1440 VA	1440 VA	1440 VA	1440 VA
DC1 at	24 V	24 V	24 V	24 V
Max. current	6 A	6 A	6 A	6 A
Max. power	144 W	144 W	144 W	144 W
Derating of coated version at an ambient temperature > 50 °C				
Safety contacts, AC1 at	–	–	240 V	240 V
Max. current	–	–	4 A	4 A
Max. power	–	–	960 W	960 W
Safety contacts, DC 1 at	–	–	24 V	24 V
Max. current	–	–	4 A	4 A
Max. power	–	–	96 W	96 W

Base units PNOZ m1p

Relay outputs	773100	773103	773104	773105
Utilisation category in accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts				
AC15 at	230 V	230 V	230 V	230 V
Max. current	3 A	3 A	3 A	3 A
Max. power	690 W	690 W	690 W	690 W
DC13 (6 cycles/ min) at	24 V	24 V	24 V	24 V
Max. current	3 A	3 A	3 A	3 A
Max. power	72 W	72 W	72 W	72 W
Airgap creepage between				
Relay contacts	3 mm	3 mm	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm	5,5 mm	5,5 mm
External contact fuse protection, safety contacts in accordance with the standard	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A	6 A	6 A
Blow-out fuse, slow	6 A	6 A	6 A	6 A
Circuit breaker 24V AC/DC, char- acteristic B/C	6 A	6 A	6 A	6 A
Switch-off delay	50 ms	50 ms	50 ms	50 ms
Potential isolation	Yes	Yes	Yes	Yes
Cascading output as standard output	773100	773103	773104	773105
Quantity	1	1	1	1
Switching capability				
Voltage	24 V	24 V	24 V	24 V
Current	0,2 A	0,2 A	0,2 A	0,2 A
Power	4,8 W	4,8 W	4,8 W	4,8 W
Galvanic isolation	No	No	No	No
Short circuit-proof	Yes	Yes	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA	0,5 mA	0,5 mA

Base units PNOZ m1p

Ethernet interface	773100	773103	773104	773105
Quantity	–	2	2	–
Serial interface	773100	773103	773104	773105
Number of RS232 interfaces	1	–	–	1
Times	773100	773103	773104	773105
Switch-on delay	5 s	5 s	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s	0,5 s	0,5 s
Max. cycle time of the device	15 ms	15 ms	15 ms	15 ms
Max. processing time for data communication	–	50 ms	50 ms	–
Environmental data	773100	773103	773104	773105
Ambient temperature				
in accordance with the standard	EN 60068-2-14	EN 60068-2-14	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C	-25 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C	–	–
Storage temperature				
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C	-25 - 70 °C	-25 - 70 °C
Climatic suitability				
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted	Short-term (only with separated extra low voltage)	Short-term (only with separated extra low voltage)
Max. operating height above SL	2000 m	2000 m	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2	EN 61131-2	EN 61131-2

Base units PNOZ m1p

Environmental data	773100	773103	773104	773105
Vibration				
in accordance with the standard	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz	5 - 500 Hz	5 - 500 Hz
Acceleration	1g	1g	1g	1g
Broadband noise				
in accordance with the standard	–	–	EN 60068-2-64	EN 60068-2-64
Frequency	–	–	5 - 500 Hz	5 - 500 Hz
Acceleration	–	–	19 m/s ² rms	19 m/s ² rms
Corrosive gas check				
SO ₂ : Concentration 10 ppm, duration 10 days, passive	–	–	DIN V 40046-36	DIN V 40046-36
H ₂ S: Concentration 1 ppm, duration 10 days, passive	–	–	DIN V 40046-37	DIN V 40046-37
Shock stress				
in accordance with the standard	EN 60068-2-27	EN 60068-2-27	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g	15g	15g
Duration	11 ms	11 ms	11 ms	11 ms
Airgap creepage				
in accordance with the standard	EN 61131-2	EN 61131-2	EN 61131-2	EN 61131-2
Overvoltage category	III	III	III	III
Pollution degree	2	2	2	2
Rated insulation voltage	250 V	250 V	250 V	250 V
Rated impulse withstand voltage	6 kV	6 kV	6 kV	6 kV
Protection type				
in accordance with the standard	EN 60529	EN 60529	EN 60529	EN 60529
Housing	IP20	IP20	IP20	IP20
Terminals	IP20	IP20	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54	IP54	IP54

Base units PNOZ m1p

Potential isolation	773100	773103	773104	773105
Potential isolation between	SC output and system voltage	SC output and system voltage	SC output and system voltage	SC output and system voltage
Type of potential isolation	Protective separation	Protective separation	Protective separation	Protective separation
Rated surge voltage	2500 V	2500 V	2500 V	2500 V
Potential isolation between	Relay output and system voltage	Relay output and system voltage	Relay output and system voltage	Relay output and system voltage
Type of potential isolation	Protective separation	Protective separation	Protective separation	Protective separation
Rated surge voltage	6000 V	6000 V	6000 V	6000 V
Mechanical data	773100	773103	773104	773105
Mounting position	horizontally on mounting rail	horizontally on mounting rail	horizontally on mounting rail	horizontally on mounting rail
DIN rail				
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm	27 mm	27 mm
Cable length				
Max. cable length per input	1 km	1 km	1 km	1 km
Sum of individual cable lengths at the test pulse output	40 km	40 km	40 km	40 km
Material				
Bottom	PPO UL 94 V0	PPO UL 94 V0	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals				
1 core flexible	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG

Base units PNOZ m1p

Mechanical data	773100	773103	773104	773105
Conductor cross section with screw terminals (relay outputs)				
1 core flexible	0,25 - 2,5 mm ² , 24 - 12 AWG	0,25 - 2,5 mm ² , 24 - 12 AWG	0,25 - 2,5 mm ² , 24 - 12 AWG	0,25 - 2,5 mm ² , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm	0,25 Nm	0,25 Nm
Torque setting with screw terminals (relay outputs)	0,5 Nm	0,5 Nm	0,5 Nm	0,5 Nm
Stripping length with screw terminals	7 mm	7 mm	7 mm	7 mm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm	8 mm	8 mm
Conductor cross section with spring-loaded terminals				
1 core flexible without crimp connector	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG
Conductor cross section with spring-loaded terminals (relay outputs)				
1 core flexible without crimp connector	0,25 - 2,5 mm ² , 24 - 12 AWG	0,25 - 2,5 mm ² , 24 - 12 AWG	0,25 - 2,5 mm ² , 24 - 12 AWG	0,25 - 2,5 mm ² , 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1	1	1

Base units PNOZ m1p

Mechanical data	773100	773103	773104	773105
Stripping length with spring-loaded terminals	9 mm	9 mm	9 mm	9 mm
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm	10 mm	10 mm
Dimensions				
Height	94 mm	94 mm	94 mm	94 mm
Width	135 mm	135 mm	135 mm	135 mm
Depth	121 mm	121 mm	121 mm	121 mm
Weight	499 g	518 g	538 g	519 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/maximum SIL	EN IEC 62061 PFH _D [1/h]	EN ISO 13849-1: 2015 T _M [year]
Logic						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
Expansion	–	PL e	Cat. 4	SIL CL 3	9,20E-09	20
Input						
Inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
Inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20
Cascad. inputs	–	PL e	Cat. 4	SIL CL 3	3,10E-10	20
Output						
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	20
Cascad. outputs	–	PL e	Cat. 4	SIL CL 3	4,91E-10	20

Base units PNOZ m1p

Output						
Relay outputs	1-channel	PL c	Cat. 1	-	2,90E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switch frequency and the load of the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Supplementary data

Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

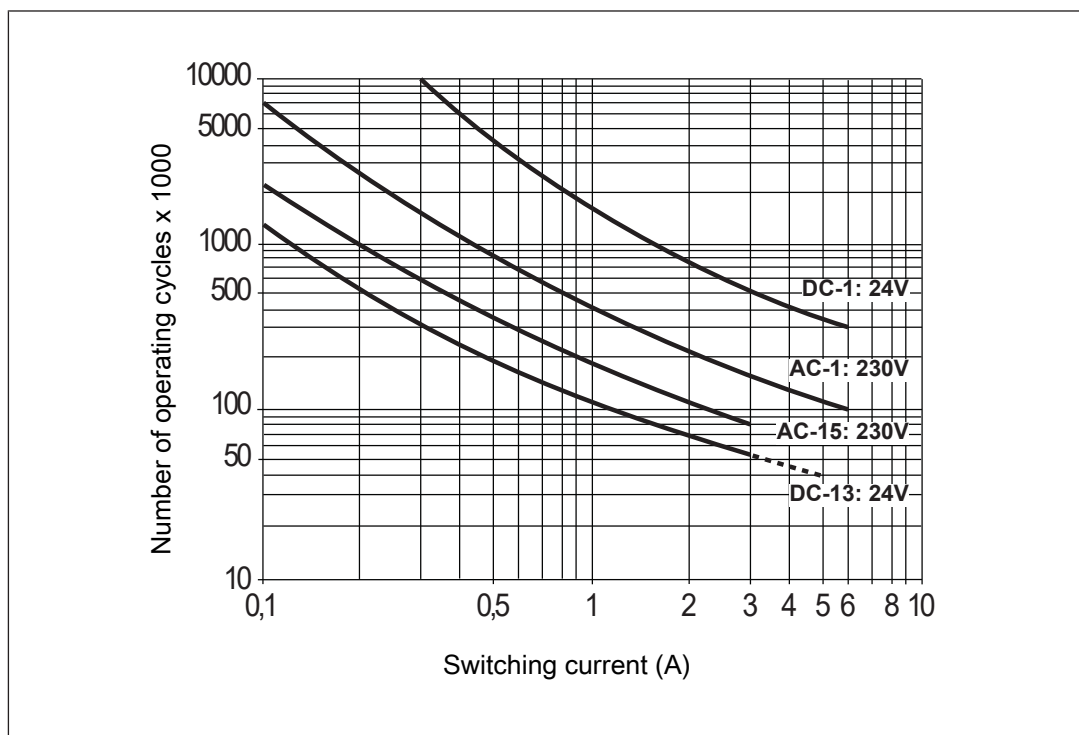


Fig.: Service life graphs at 24 VDC and 230 VAC

Base units PNOZ m1p

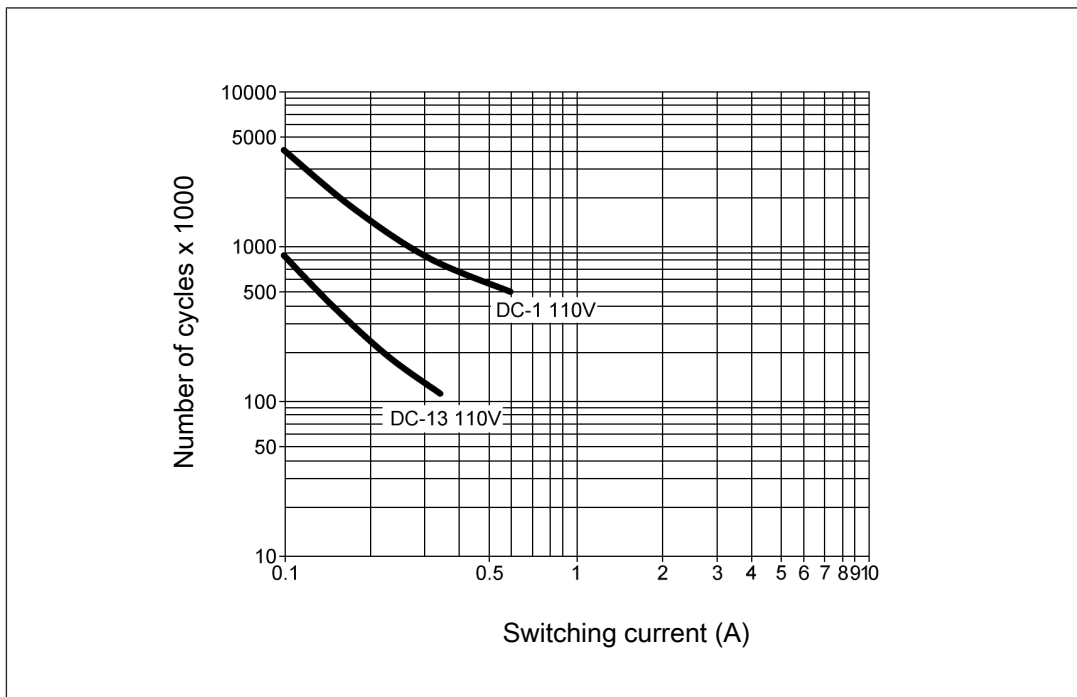


Fig.: Service life graphs at 110 VDC

Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[85\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

Base units PNOZ m1p

Order reference

Product

Product type	Features	Order no.
PNOZ m1p	Base unit	773100
PNOZ m1p coated version	Base unit, coated version	773105
PNOZ m1p ETH	Base unit, Ethernet interface	773103
PNOZ m1p ETH coated version	Base unit, Ethernet interface, coated version	773104

Accessories


Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783100
Set screw terminals	1 set of screw terminals	793100

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Base units PNOZ m2p

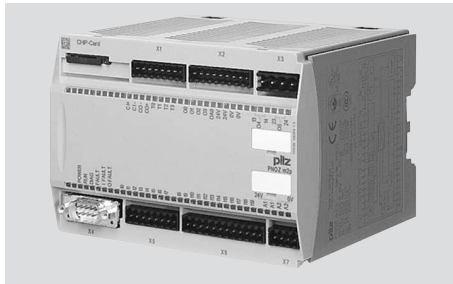

Overview

Unit features

Application of the product PNOZ m2p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ For applications on mechanical presses
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
 - 2 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
 - 4 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
 - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand pushbuttons
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN

Base units PNOZ m2p

- Operating mode selector switches
- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
 - Diagnostics
 - Supply voltage
 - Output circuits
 - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Expansion modules can be connected
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)
- ▶ Integrated interfaces:
 - PNOZ m2p: Serial interface RS232
 - PNOZ m2p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).

Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Base units PNOZ m2p


Front view

PNOZ m2p

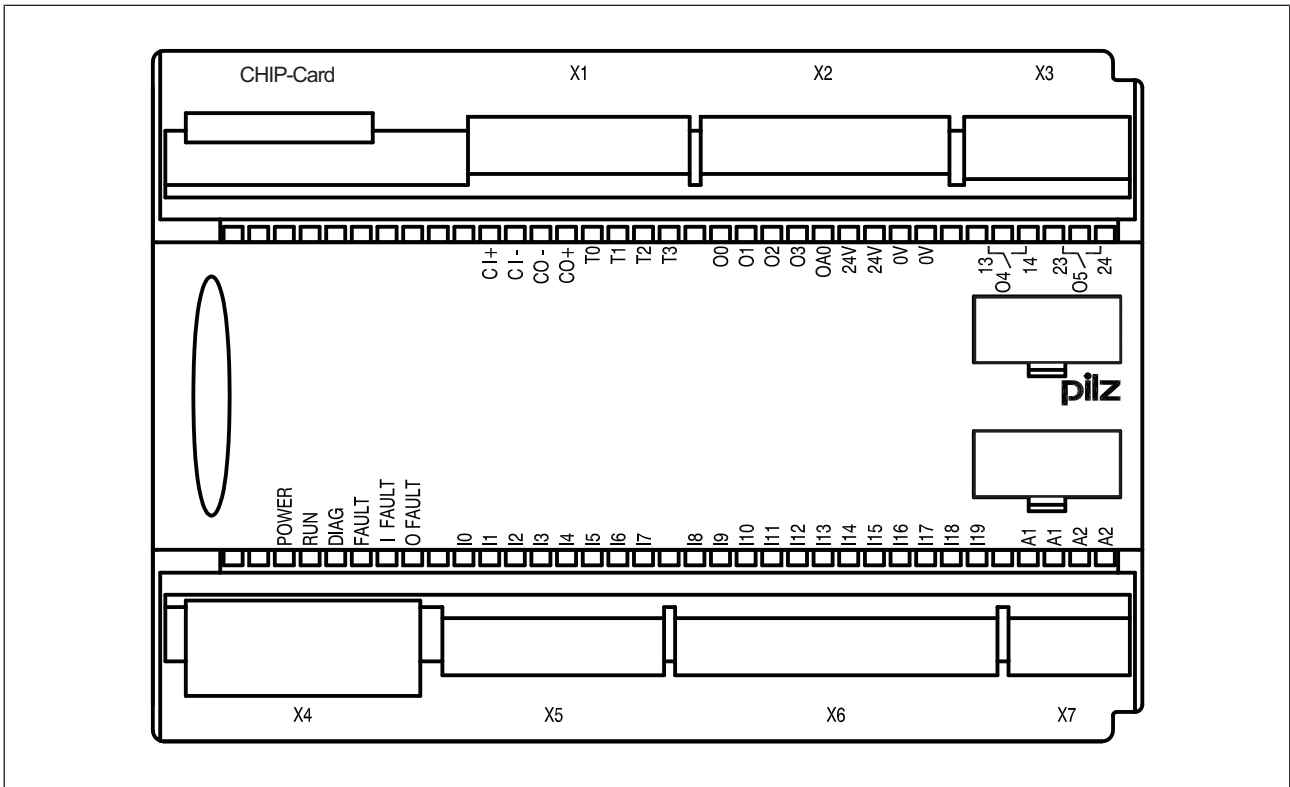

Base units PNOZ m2p

PNOZ m2p ETH

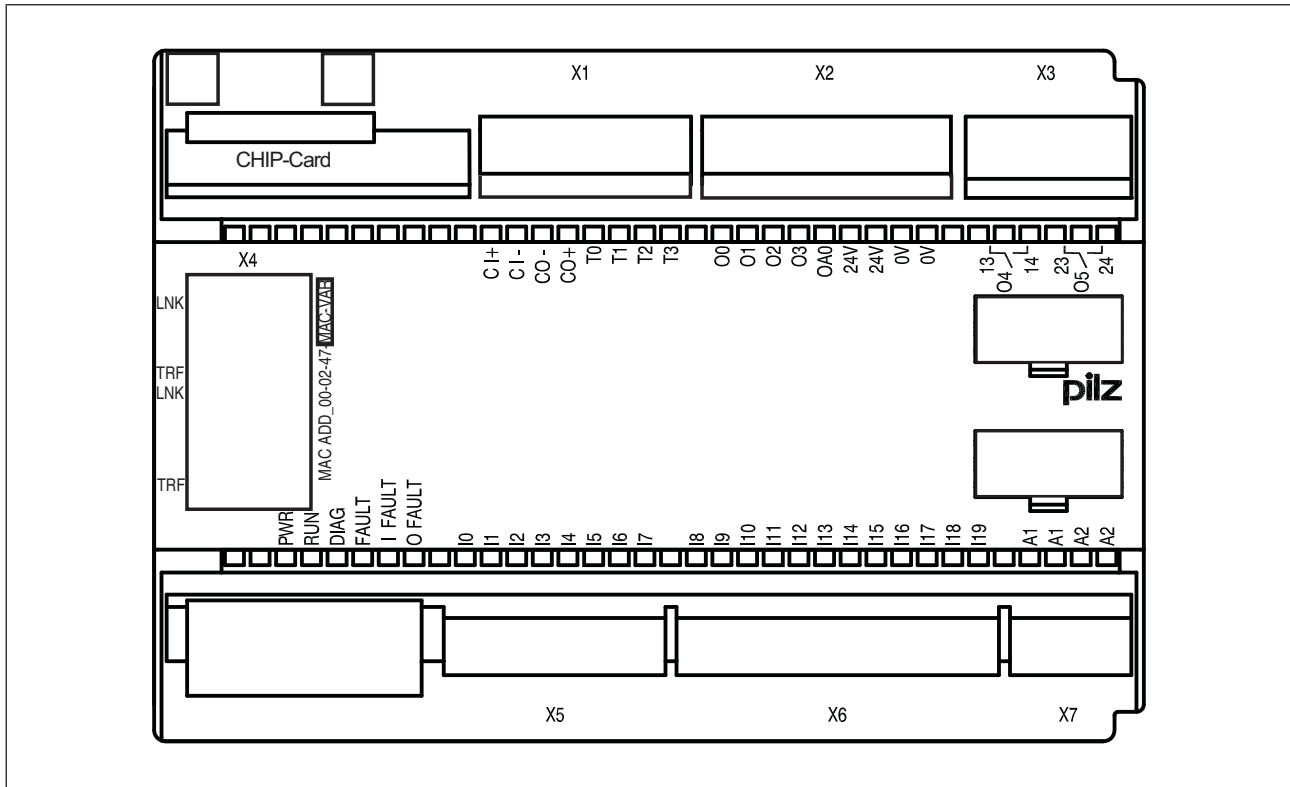

Legend:

- | | |
|-----------|---|
| CHIP card | Chipkarte interface |
| X1 | Cascading inputs and outputs CI and CO,
Test pulse outputs T0 ... T3 |
| X2 | Semiconductor outputs O0 ... O3,
Auxiliary output OA0,
Supply connections |
| X3 | Relay outputs O4 and O5 |
| X4 | RS232 interface / Ethernet interface |
| X5, X6 | Inputs I0 ... I19 |
| X7 | Power supply |
| LEDs: | PWR
RUN
DIAG
FAULT
I FAULT
O FAULT |

Base units PNOZ m2p

Function description

Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

Application on mechanical presses


The base unit PNOZ m2p is designed for applications on mechanical presses (see online help for the PNOZmulti Configurator).

Functions:

- ▶ Operating modes
 - Set-up mode
 - Single stroke
 - Automatic
- ▶ Monitoring a mechanical rotary cam arrangement
- ▶ Run monitoring
- ▶ Monitoring of electrosensitive protective equipment (cycle mode)
- ▶ Driving and monitoring a press safety valve


Base units PNOZ m2p

Block diagram

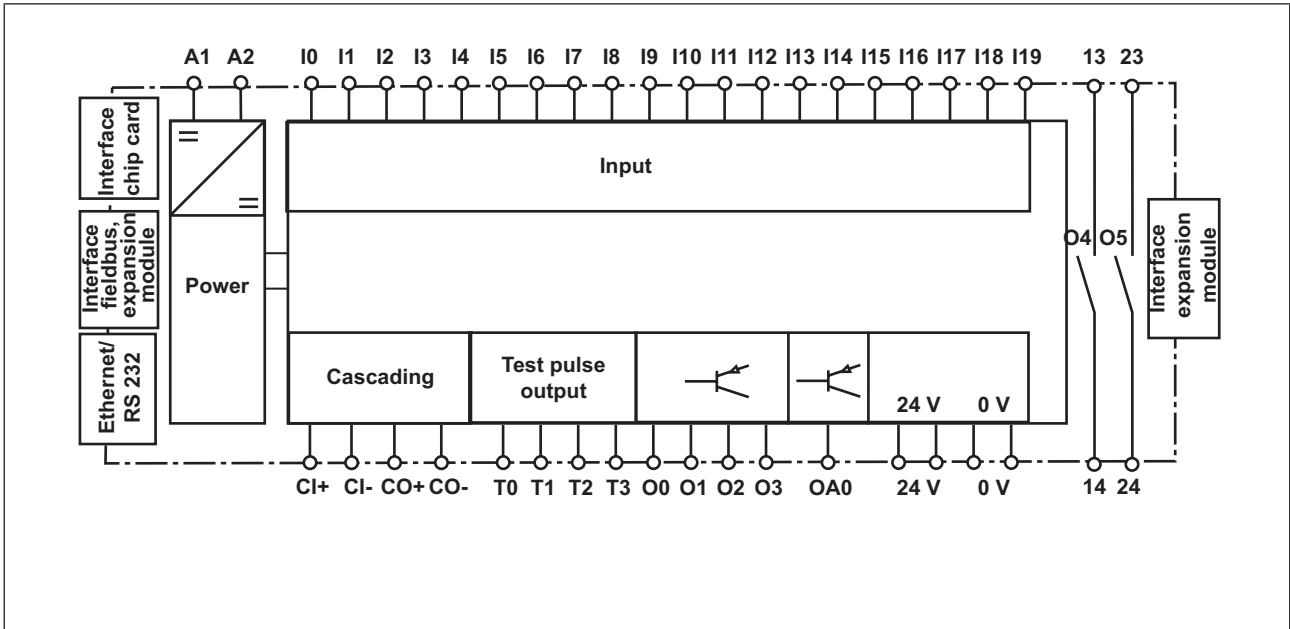

Installation

Dimensions

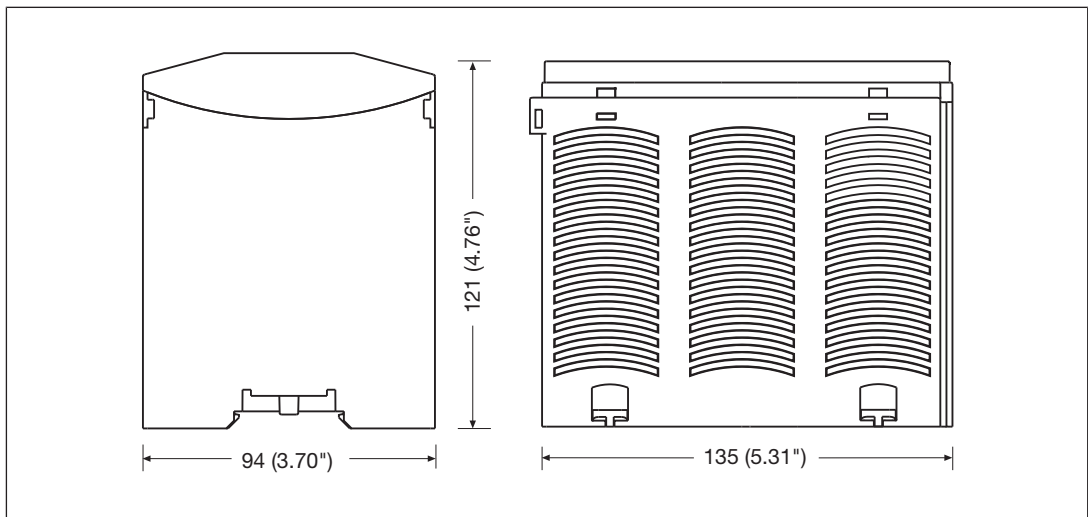

Base units PNOZ m2p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[108\]](#) must be followed.
- ▶ Outputs:
 - O0 to O5 are safety outputs
 - O4 and O5 are relay outputs
 - O0 to O3 are semiconductor outputs
 - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Adequate protection circuit must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.

Base units PNOZ m2p

Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		

Connection examples for the input circuit

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

Base units PNOZ m2p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for semiconductor outputs

Base units PNOZ m2p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs


<p>Feedback loop</p>	<p>Redundant output</p>	
<p>Contacts from external contactors</p>		

Connection examples for feedback loop

Base units PNOZ m2p

Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

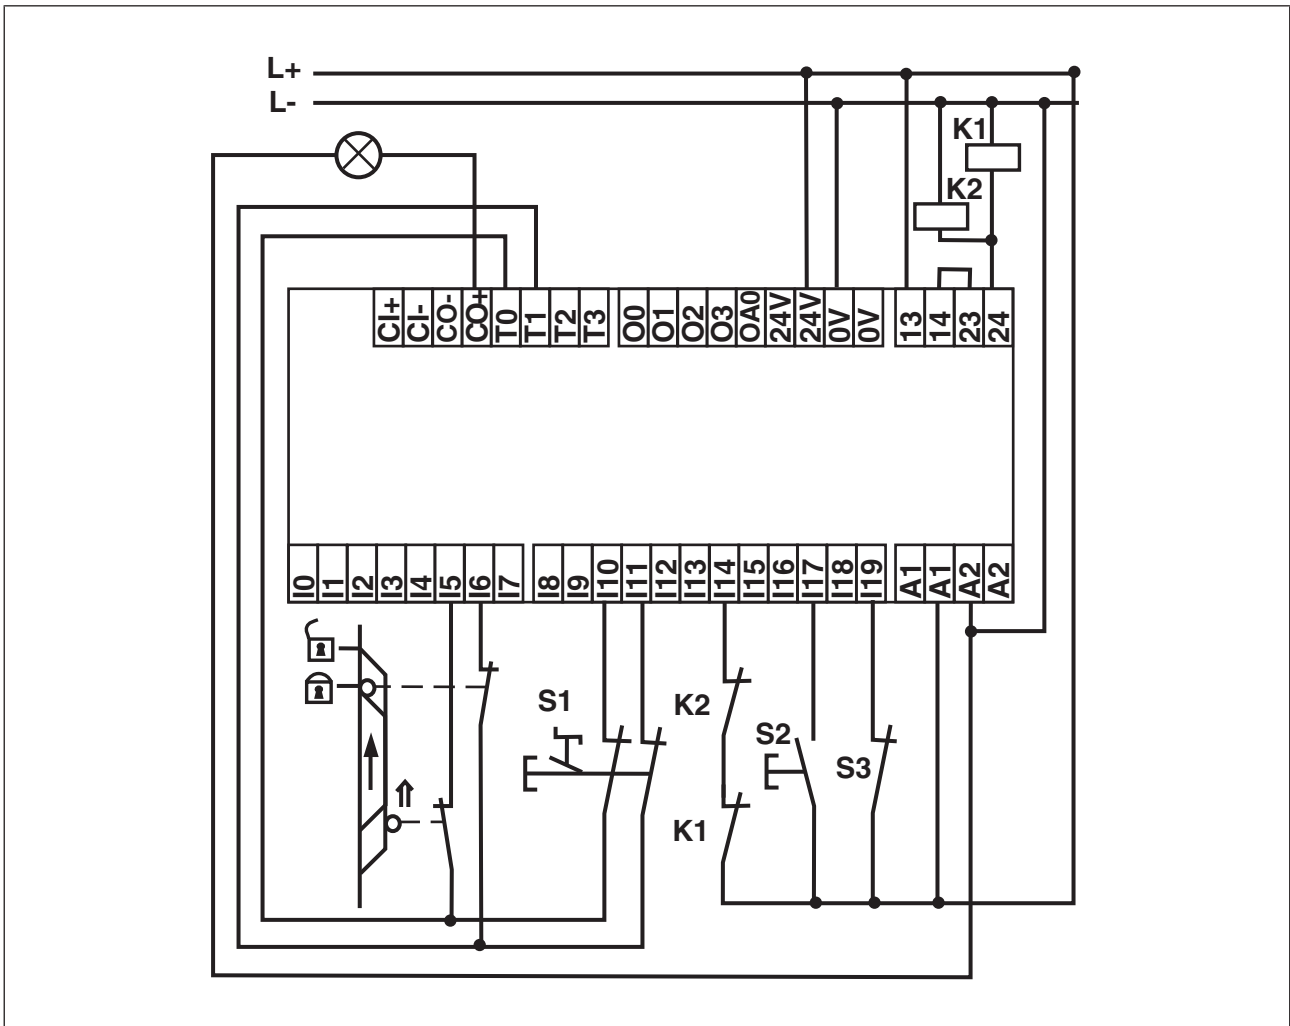

Base units PNOZ m2p

Technical Details

General	773120	773123
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773120	773123
Supply voltage		
for	Supply to the system	Supply to the system
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC) at no load	8 W	9 W
Residual ripple DC	5 %	5 %
Supply voltage		
for	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192 W	192 W
Residual ripple DC	5 %	5 %
Potential isolation	Yes	Yes
Supply voltage		
Power consumption per expansion module	2,5 W	2,5 W
Status indicator	LED	LED
Inputs	773120	773123
Quantity	20	20
Max. number of live inputs within the max. permitted ambient temperature (see "Environmental data")	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15
Signal level at g0 h	-3 - +5 V DC	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC	24 V DC
Input current at rated voltage	8 mA	8 mA
Min. pulse duration	18 ms	18 ms
Pulse suppression	0,6 ms	0,6 ms
Maximum input delay	4 ms	4 ms
Potential isolation	No	No

Base units PNOZ m2p

Semiconductor outputs	773120	773123
Quantity	4	4
Switching capability		
Voltage	24 V	24 V
Current	2 A	2 A
Power	48 W	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA	0,5 mA
Max. capacitive load	1 µF	1 µF
Max. duration of off time during self test	300 µs	300 µs
Switch-off delay	30 ms	30 ms
Potential isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Semiconductor outputs (stand-ard)	773120	773123
Quantity	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Power	12 W	12 W
Galvanic isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
Test pulse outputs	773120	773123
Number of test pulse outputs	4	4
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Max. duration of off time during self test	5 ms	5 ms
Short circuit-proof	Yes	Yes
Potential isolation	No	No
Relay outputs	773120	773123
Number of relay outputs	2	2
Utilisation category		
in accordance with the standard	EN 60947-4-1	EN 60947-4-1

Base units PNOZ m2p

Relay outputs	773120	773123
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Max. current	6 A	6 A
Max. power	1440 VA	1440 VA
DC1 at	24 V	24 V
Max. current	6 A	6 A
Max. power	144 W	144 W
Utilisation category in accordance with the standard EN 60947-5-1		
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	3 A	3 A
Max. power	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V
Max. current	3 A	3 A
Max. power	72 W	72 W
Airgap creepage between		
Relay contacts	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm
External contact fuse protection, safety contacts		
in accordance with the standard EN 60947-5-1		
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	6 A	6 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A
Switch-off delay	50 ms	50 ms
Potential isolation	Yes	Yes
Cascading output as standard output	773120	773123
Quantity	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,2 A	0,2 A
Power	4,8 W	4,8 W
Galvanic isolation	No	No
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Ethernet interface	773120	773123
Quantity	–	2

Base units PNOZ m2p

Serial interface	773120	773123
Number of RS232 interfaces	1	–
Times	773120	773123
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s
Max. cycle time of the device	15 ms	15 ms
Max. processing time for data communication	–	50 ms
Environmental data	773120	773123
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	6 kV	6 kV

Base units PNOZ m2p

Environmental data	773120	773123
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Potential isolation	773120	773123
Potential isolation between	SC output and system voltage	SC output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	2500 V	2500 V
Potential isolation between	Relay output and system voltage	Relay output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	6000 V	6000 V
Mechanical data	773120	773123
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Cable length		
Max. cable length per input	1 km	1 km
Sum of individual cable lengths at the test pulse output	40 km	40 km
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm

Base units PNOZ m2p

Mechanical data	773120	773123
Torque setting with screw terminals (relay outputs)	0,5 Nm	0,5 Nm
Stripping length with screw terminals	7 mm	7 mm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm
Dimensions		
Height	94 mm	94 mm
Width	135 mm	135 mm
Depth	121 mm	121 mm
Weight	499 g	521 g

Where standards are undated, the 2020-07 latest editions shall apply.

Base units PNOZ m2p

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/max-imum SIL	EN IEC 62061 PFH _D [1/h]	EN ISO 13849-1: 2015 T _M [year]
Logic						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
Expansion	–	PL e	Cat. 4	SIL CL 3	9,20E-09	20
Input						
Inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
Inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20
Cascad. inputs	–	PL e	Cat. 4	SIL CL 3	3,10E-10	20
Output						
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	20
Cascad. outputs	–	PL e	Cat. 4	SIL CL 3	4,91E-10	20
Relay outputs	1-channel	PL c	Cat. 1	-	2,90E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switch frequency and the load of the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Base units PNOZ m2p

Supplementary data

Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

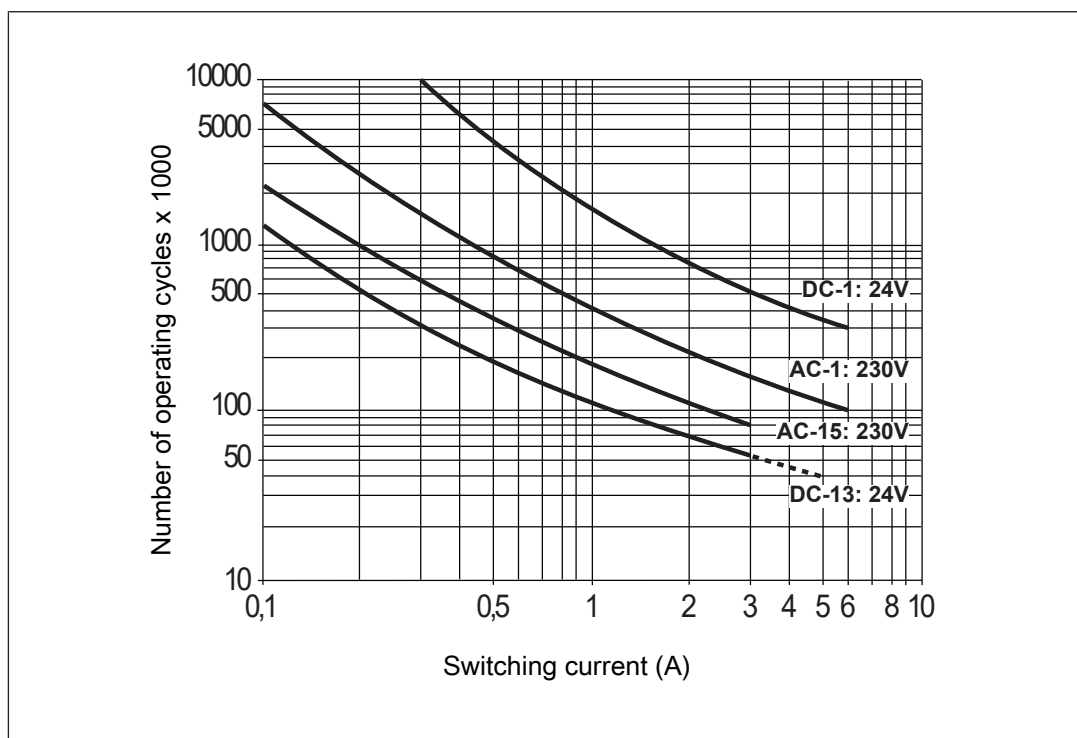


Fig.: Service life graphs at 24 VDC and 230 VAC

Base units PNOZ m2p

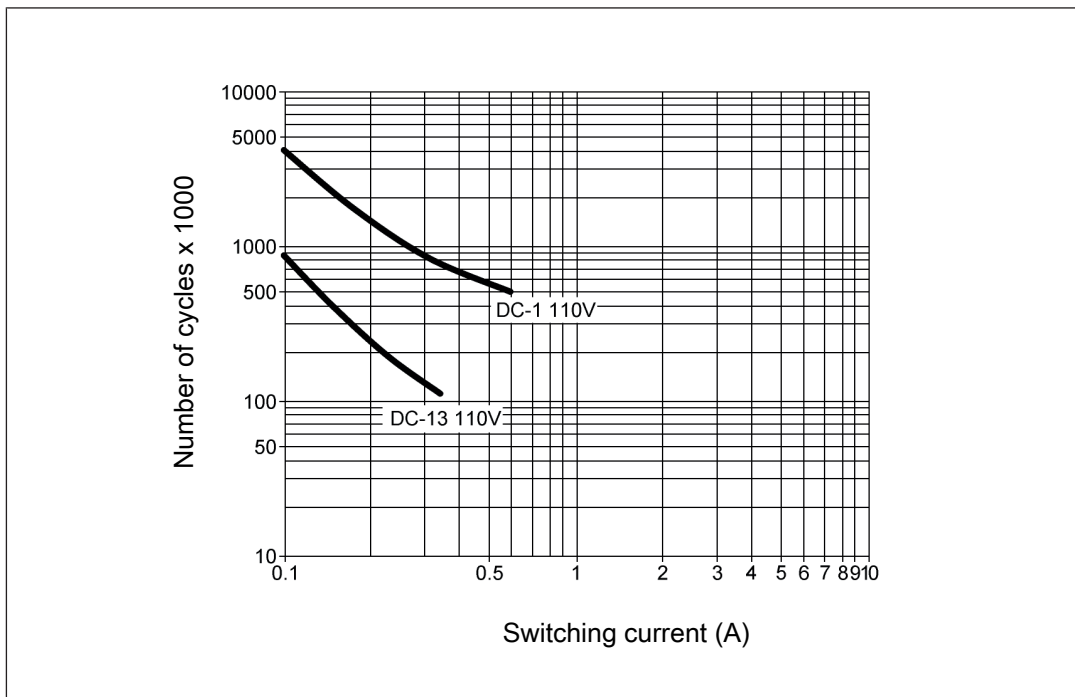


Fig.: Service life graphs at 110 VDC

Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[108\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

Base units PNOZ m2p

Order reference

Product

Product type	Features	Order no.
PNOZ m2p	Base unit	773120
PNOZ m2p ETH	Base unit, Ethernet interface	773123

Accessories


Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783100
Set screw terminals	1 set of screw terminals	793100

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Base units PNOZ m3p

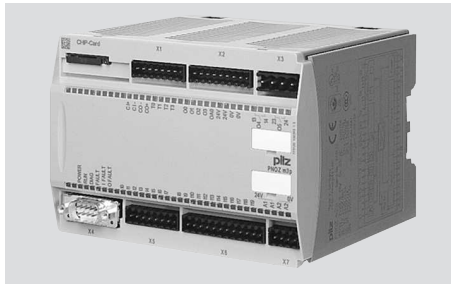

Overview

Unit features

Application of the product PNOZ m3p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Designed to monitor and control furnaces
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs:
 - 2 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Semiconductor outputs:
 - 4 safety outputs
Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
 - 1 output for standard applications
- ▶ 4 test pulse outputs
- ▶ 1 cascading input and output;
can also be used as a standard output
- ▶ 20 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand pushbuttons
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN

Base units PNOZ m3p

- Operating mode selector switches
- Safety mats
- ▶ Muting function
- ▶ LED indicator for:
 - Diagnostics
 - Supply voltage
 - Output circuits
 - Input circuits
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Integrated interfaces:
 - PNOZ m3p: Serial interface RS232
 - PNOZ m3p **ETH**: 2 Ethernet interfaces
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).

Chip card


To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Base units PNOZ m3p


Front view

PNOZ m3p

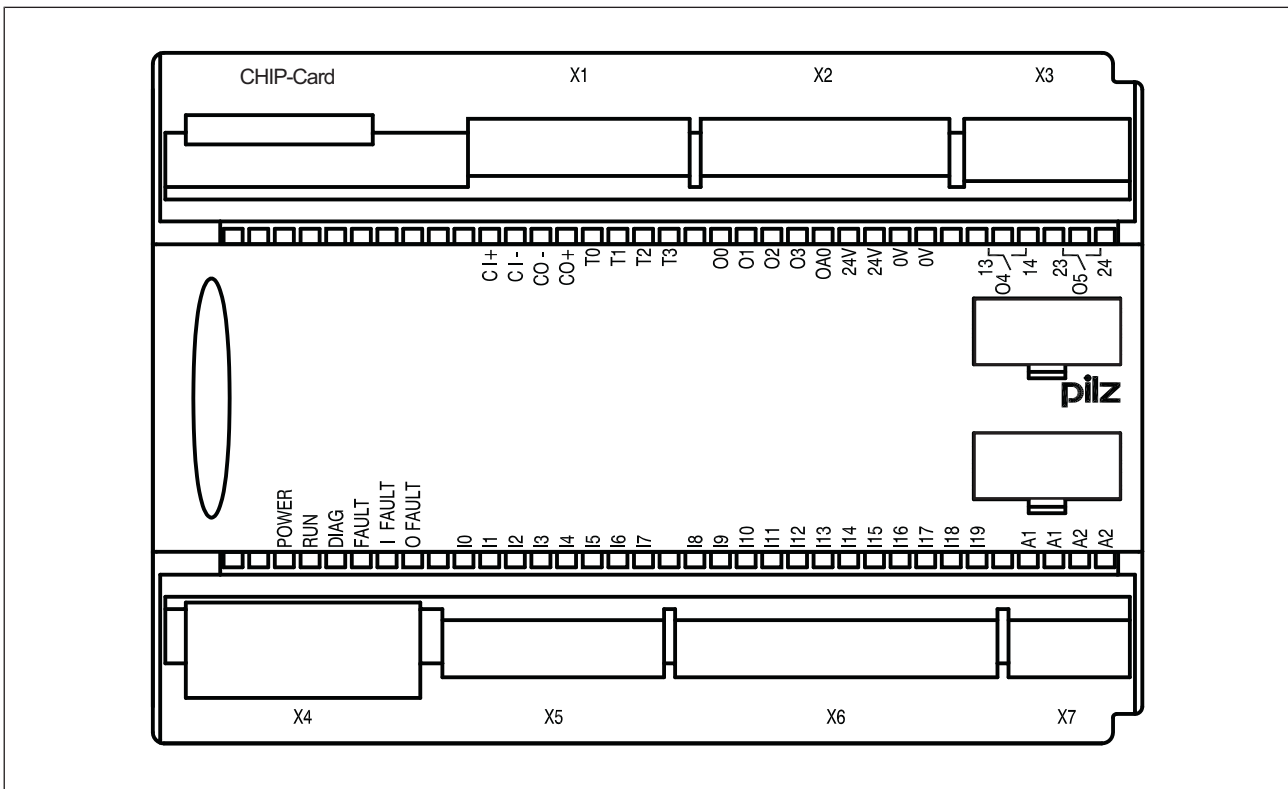

Base units PNOZ m3p

PNOZ m3p ETH

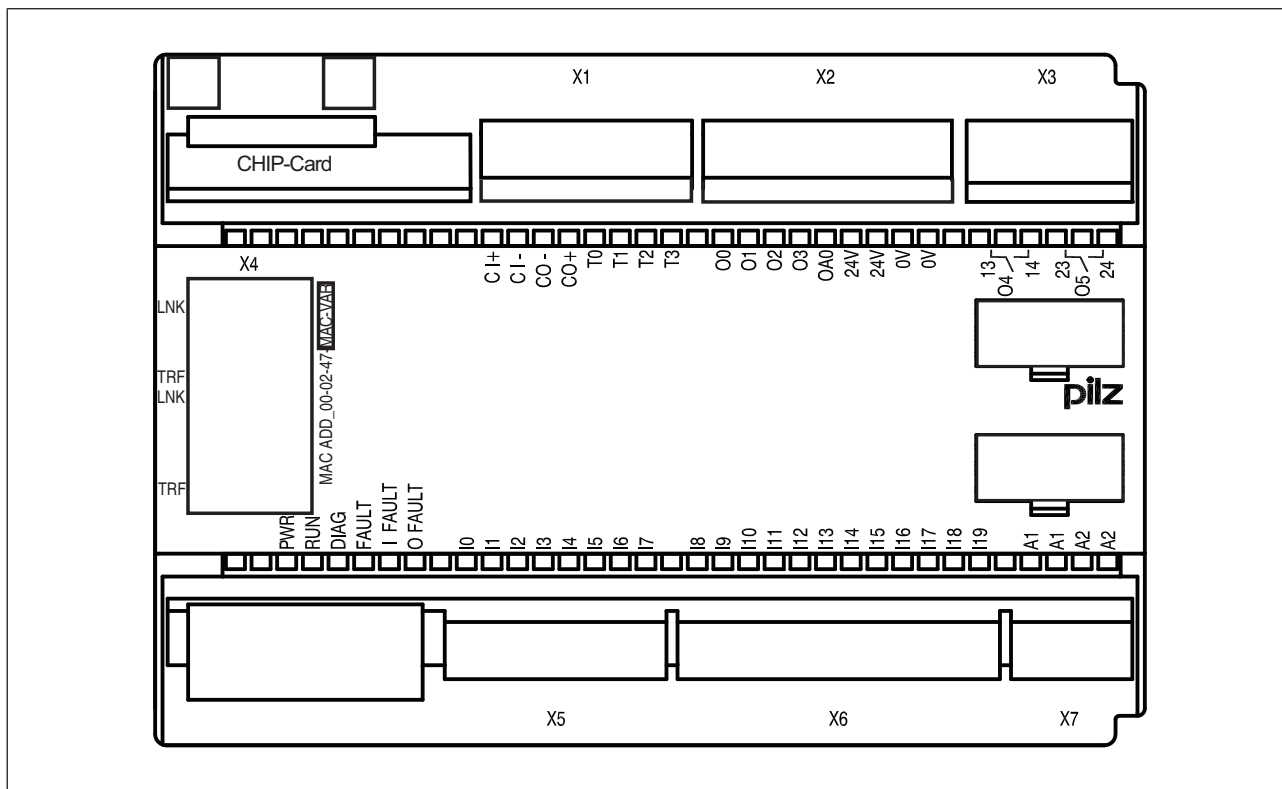

Legend:

- ▶ CHIP card:
 - Interface chip card
- ▶ X1:
 - Cascading inputs and outputs CI and CO,
 - Test pulse outputs T0 ... T3
- ▶ X2:
 - Semiconductor outputs O0 ... O3,
 - Auxiliary output OA0,
 - Supply connections
- ▶ X3:
 - Relay outputs O4 and O5
- ▶ X4:
 - RS232 interface / Ethernet interface
- ▶ X5, X6:
 - Inputs I0 ... I19

Base units PNOZ m3p

- ▶ X7:
 - Power supply
- ▶ LEDs:
 - PWR
 - RUN
 - DIAG
 - FAULT
 - I FAULT
 - O FAULT

Function description

Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

Application for furnaces

The base unit PNOZ m3p is designed for controlling and monitoring furnaces (see online help for the PNOZmulti Configurator).

These include:

Monitoring:

- ▶ Safety chains
- ▶ Combustion air pressure
- ▶ Ignition
- ▶ Flame monitoring
- ▶ External compound controller
- ▶ Tightness control

and controlling:

- ▶ Safety valves
- ▶ Ignition valves


Base units PNOZ m3p

- ▶ Vent valve
- ▶ Ignition
- ▶ External compound controller
- ▶ Combustion air blower

The following oil and gas burner types can be monitored:

- ▶ Master burner with direct ignition
- ▶ Master burner with indirect ignition and joint flame monitoring
- ▶ Master burner with indirect ignition and separate flame monitoring
- ▶ Slave burner with direct ignition
- ▶ Slave burner with indirect ignition and joint flame monitoring
- ▶ Slave burner with indirect ignition and separate flame monitoring


Block diagram

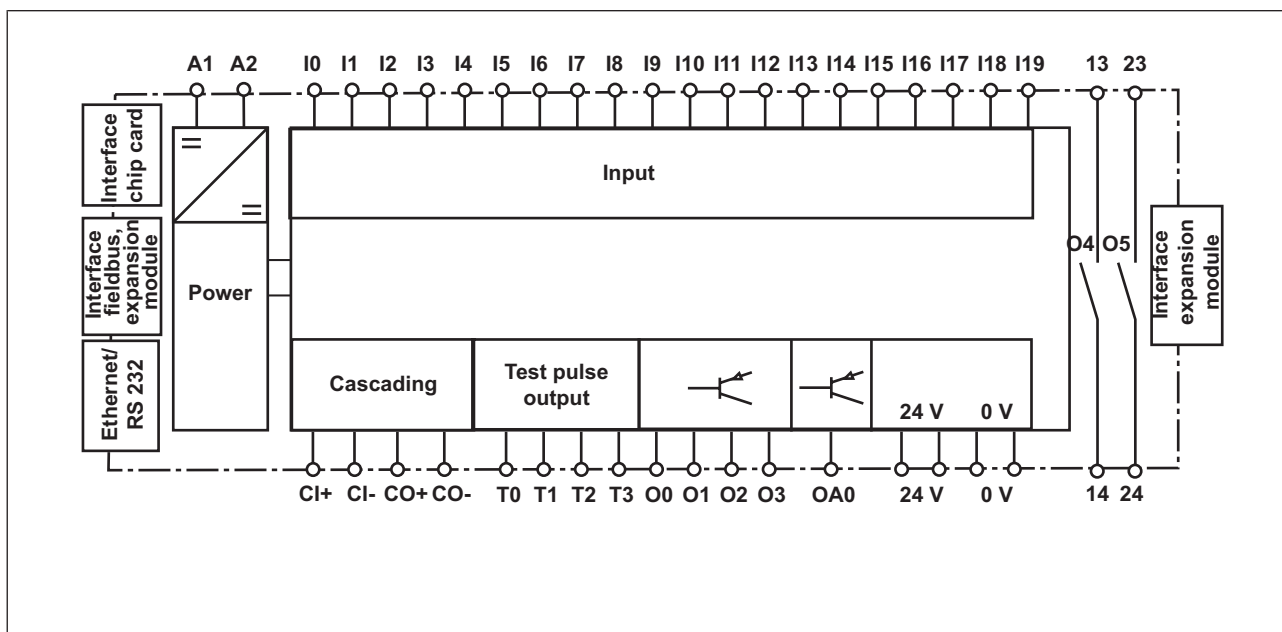

Base units PNOZ m3p

Installation

Dimensions

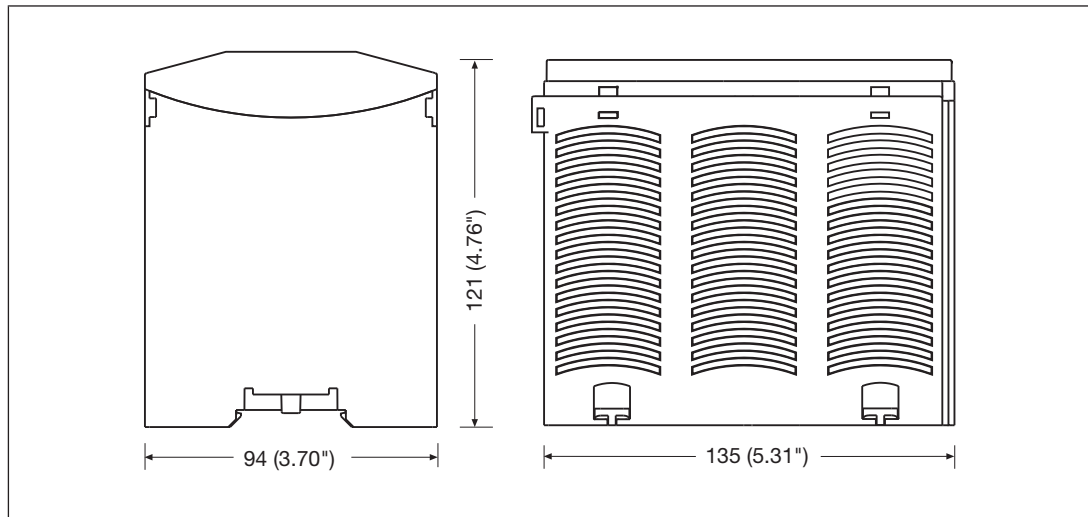

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Please note:

- ▶ Information given in the [Technical details \[129\]](#) must be followed.
- ▶ Outputs:
 - O0 to O5 are safety outputs
 - O4 and O5 are relay outputs
 - O0 to O3 are semiconductor outputs
 - OA0 is an output to delete a project from the base unit (see online help for the PNOZmulti Configurator).
- ▶ To prevent contact welding, a fuse should be connected before the output contacts (see technical details).
- ▶ Use copper wiring with a temperature stability of 75°C.
- ▶ Adequate protection circuit must be provided on all output contacts with inductive loads.
- ▶ The control system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

Base units PNOZ m3p

- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse lines together with actuator cables within an unprotected multicore cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.

The base unit PNOZ m3p is not suitable for connection to DC supplies.

Connection

Supply voltage	AC	DC
For the safety system (connector X7)		
For the semiconductor outputs (connector X2) Must always be present, even if the semiconductor outputs are not used		

Supply voltage

Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		

Connection examples for the input circuit

Base units PNOZ m3p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Connection examples for start circuit

Redundant output		
Single output		

Connection examples for semiconductor outputs

Base units PNOZ m3p

<p>Redundant output</p>		
<p>Single output</p>		

Connection examples for relay outputs


<p>Feedback loop</p>	<p>Redundant output</p>	
<p>Contacts from external contactors</p>		

Connection examples for feedback loop

Base units PNOZ m3p

Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (I17), feedback loop (I14), cascading output as auxiliary output (CO+/A2)

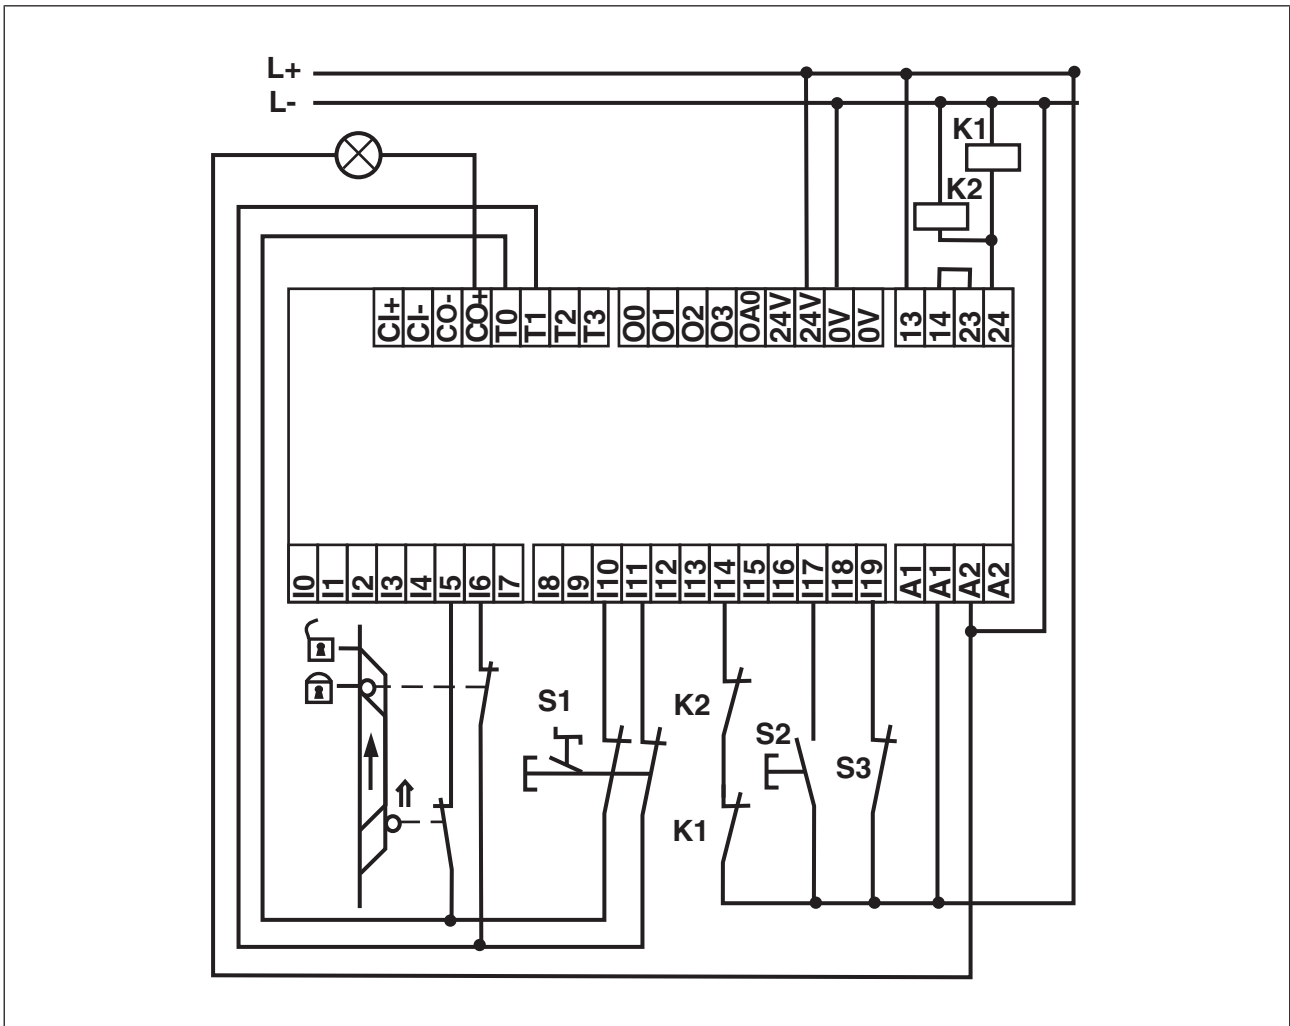

Base units PNOZ m3p

Technical Details

General	773125	773126
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773125	773126
Supply voltage		
for	Supply to the system	Supply to the system
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC) at no load	8 W	9 W
Residual ripple DC	5 %	5 %
Supply voltage		
for	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192 W	192 W
Residual ripple DC	5 %	5 %
Potential isolation	Yes	Yes
Supply voltage		
Power consumption per expansion module	2,5 W	2,5 W
Status indicator	LED	LED
Inputs	773125	773126
Quantity	20	20
Max. number of live inputs within the max. permitted ambient temperature (see "Environmental data")	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15	U_B ≤ 26,4 V : 20, U_B > 26,4 V : 15
Signal level at g0 h	-3 - +5 V DC	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC	24 V DC
Input current at rated voltage	8 mA	8 mA
Min. pulse duration	18 ms	18 ms
Pulse suppression	0,6 ms	0,6 ms
Maximum input delay	4 ms	4 ms
Potential isolation	No	No

Base units PNOZ m3p

Semiconductor outputs	773125	773126
Quantity	4	4
Switching capability		
Voltage	24 V	24 V
Current	2 A	2 A
Power	48 W	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA	0,5 mA
Max. capacitive load	1 µF	1 µF
Max. duration of off time during self test	300 µs	300 µs
Switch-off delay	30 ms	30 ms
Potential isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Semiconductor outputs (stand-ard)	773125	773126
Quantity	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Power	12 W	12 W
Galvanic isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
Test pulse outputs	773125	773126
Number of test pulse outputs	4	4
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Max. duration of off time during self test	5 ms	5 ms
Short circuit-proof	Yes	Yes
Potential isolation	No	No
Relay outputs	773125	773126
Number of relay outputs	2	2
Utilisation category		
in accordance with the standard	EN 60947-4-1	EN 60947-4-1

Base units PNOZ m3p

Relay outputs	773125	773126
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Max. current	6 A	6 A
Max. power	1440 VA	1440 VA
DC1 at	24 V	24 V
Max. current	6 A	6 A
Max. power	144 W	144 W
Utilisation category		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	3 A	3 A
Max. power	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V
Max. current	3 A	3 A
Max. power	72 W	72 W
Airgap creepage between		
Relay contacts	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm
External contact fuse protection, safety contacts		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	6 A	6 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A
Switch-off delay	50 ms	50 ms
Potential isolation	Yes	Yes
Cascading output as standard output	773125	773126
Quantity	1	1
Switching capability		
Voltage	24 V	24 V
Current	0,2 A	0,2 A
Power	4,8 W	4,8 W
Galvanic isolation	No	No
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Ethernet interface	773125	773126
Quantity	–	2

Base units PNOZ m3p

Serial interface	773125	773126
Number of RS232 interfaces	1	–
Times	773125	773126
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s
Max. cycle time of the device	15 ms	15 ms
Max. processing time for data communication	–	50 ms
Environmental data	773125	773126
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Not permitted
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	6 kV	6 kV

Base units PNOZ m3p

Environmental data	773125	773126
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Potential isolation	773125	773126
Potential isolation between	SC output and system voltage	SC output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	2500 V	2500 V
Potential isolation between	Relay output and system voltage	Relay output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	6000 V	6000 V
Mechanical data	773125	773126
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Cable length		
Max. cable length per input	1 km	1 km
Sum of individual cable lengths at the test pulse output	40 km	40 km
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm

Base units PNOZ m3p

Mechanical data	773125	773126
Torque setting with screw terminals (relay outputs)	0,5 Nm	0,5 Nm
Stripping length with screw terminals	7 mm	7 mm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm
Dimensions		
Height	94 mm	94 mm
Width	135 mm	135 mm
Depth	121 mm	121 mm
Weight	499 g	520 g

Where standards are undated, the 2020-07 latest editions shall apply.

Base units PNOZ m3p

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/max-imum SIL	EN IEC 62061 PFH _D [1/h]	EN ISO 13849-1: 2015 T _M [year]
Logic						
CPU	2-channel	PL e	Cat. 4	SIL CL 3	4,90E-09	20
Expansion	–	PL e	Cat. 4	SIL CL 3	9,20E-09	20
Input						
Inputs	1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	20
Inputs	2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	20
Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	20
Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	20
Cascad. inputs	–	PL e	Cat. 4	SIL CL 3	3,10E-10	20
Output						
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	20
Cascad. outputs	–	PL e	Cat. 4	SIL CL 3	4,91E-10	20
Relay outputs	1-channel	PL c	Cat. 1	-	2,90E-08	20
Relay outputs	2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	20

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switch frequency and the load of the relay output. If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Base units PNOZ m3p

Supplementary data

Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

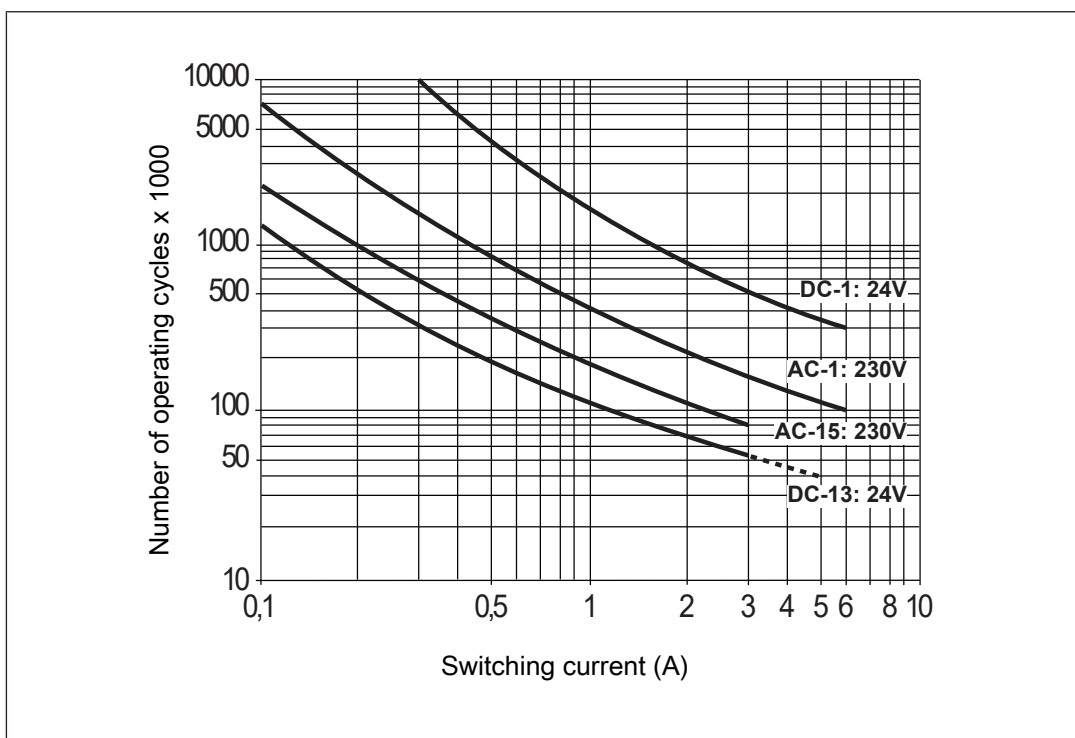


Fig.: Service life graphs at 24 VDC and 230 VAC

Base units PNOZ m3p

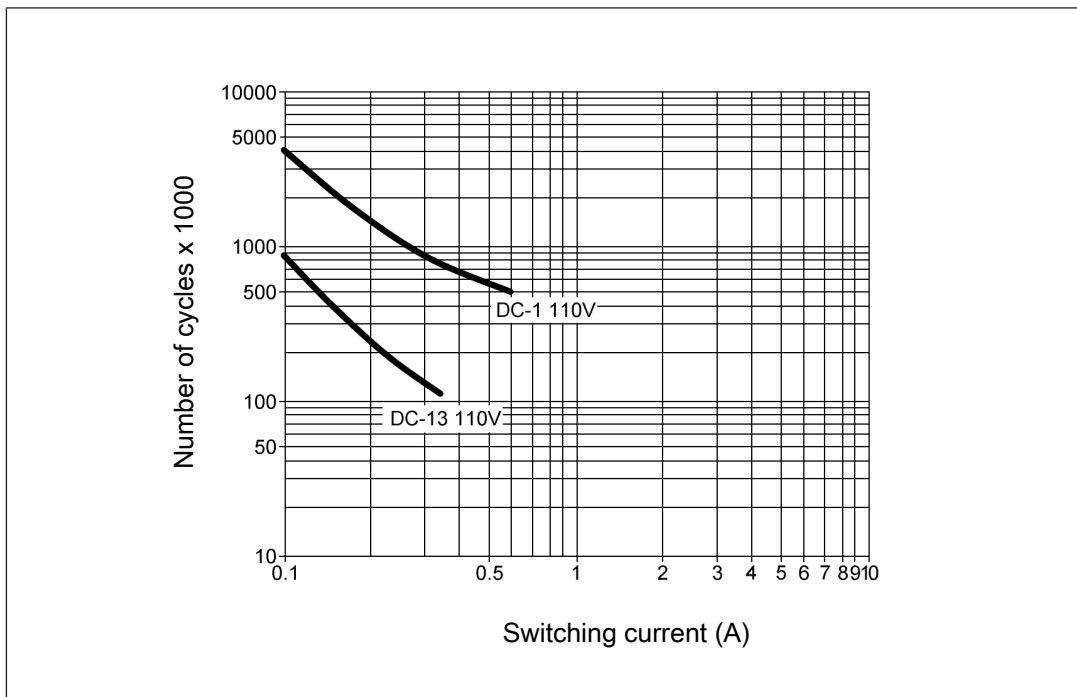


Fig.: Service life graphs at 110 VDC

Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[129\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

Base units PNOZ m3p

Order reference

Product

Product type	Features	Order no.
PNOZ m3p	Base unit	773125
PNOZ m3p ETH	Base unit, Ethernet interface	773126

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783100
Set screw terminals	1 set of screw terminals	793100

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639


Input modules PNOZ mi1p



Overview


Unit features

The product has the following features:

- ▶ 8 inputs for connecting:
 - E-STOP pushbuttons
 - Two-hand button
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN
 - Operating mode selector switches
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ LED indicator for:
 - Status of PNOZmulti
- ▶ Max. 8 PNOZ mi1p units can be connected to the base unit
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ Coated version:
 - Increased environmental requirements (see [Technical details](#)  143])

Input modules PNOZ mi1p

Front view

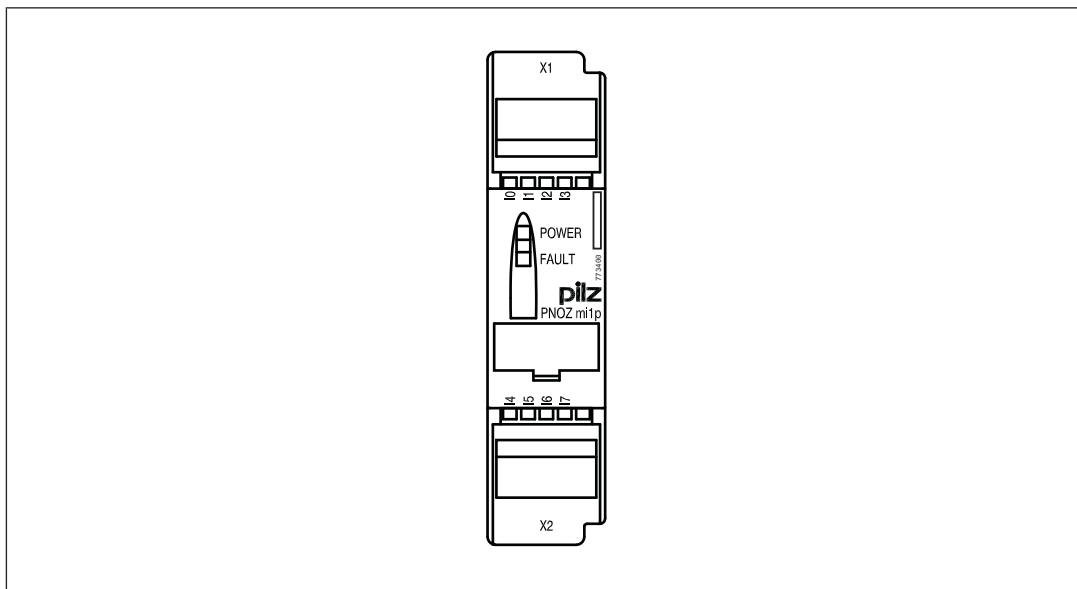

Legend:

- ▶ Inputs I0 – I7

Function description

Functions

The expansion module provides additional inputs.

The function of the inputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A removable data medium is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".


Input modules PNOZ mi1p

Block diagram

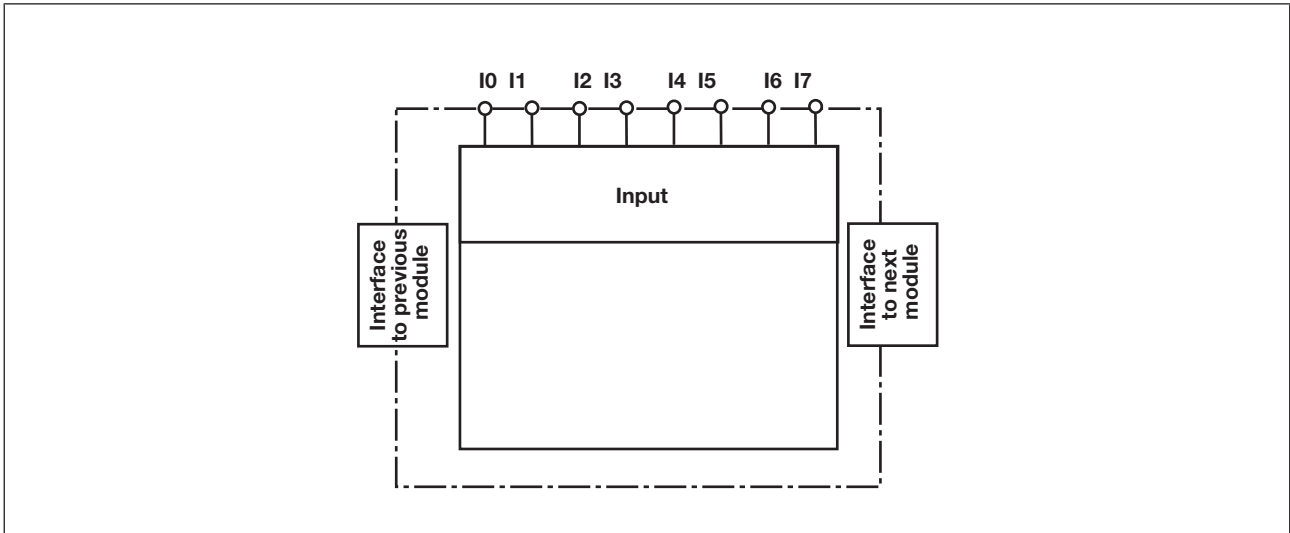

Installation

Dimensions in mm

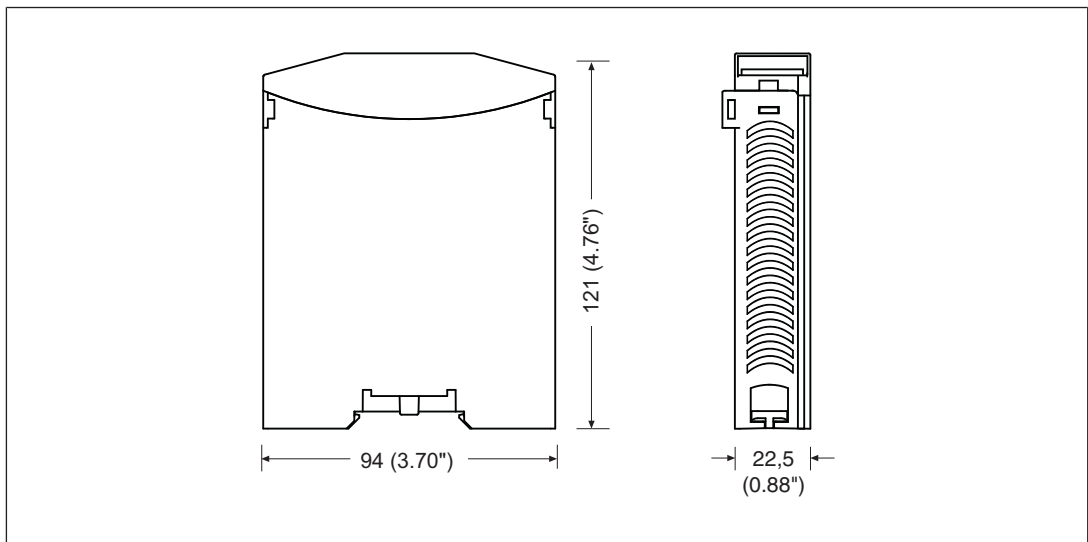

Input modules PNOZ mi1p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[143\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.

Preparing for operation

The N/C contact on the trigger element (e.g. E-STOP) must be connected to the input circuit. A short circuit in the input circuit may or may not be detected, depending on the configuration and wiring. The test pulse outputs on the base unit must be used to detect shorts across contacts. The input assignment is defined in the PNOZmulti Configurator.

The input circuit should be connected as described in the table. The wiring at I0 and I1 is illustrated as an example; inputs I2 ... 17 are wired in a similar way.


Connection

Input circuit	Single-channel	Dual-channel
Example: E-Stop without detection of shorts across contacts		
Example: E-Stop with detection of shorts across contacts		

Input circuit

Input modules PNOZ mi1p

Connection example

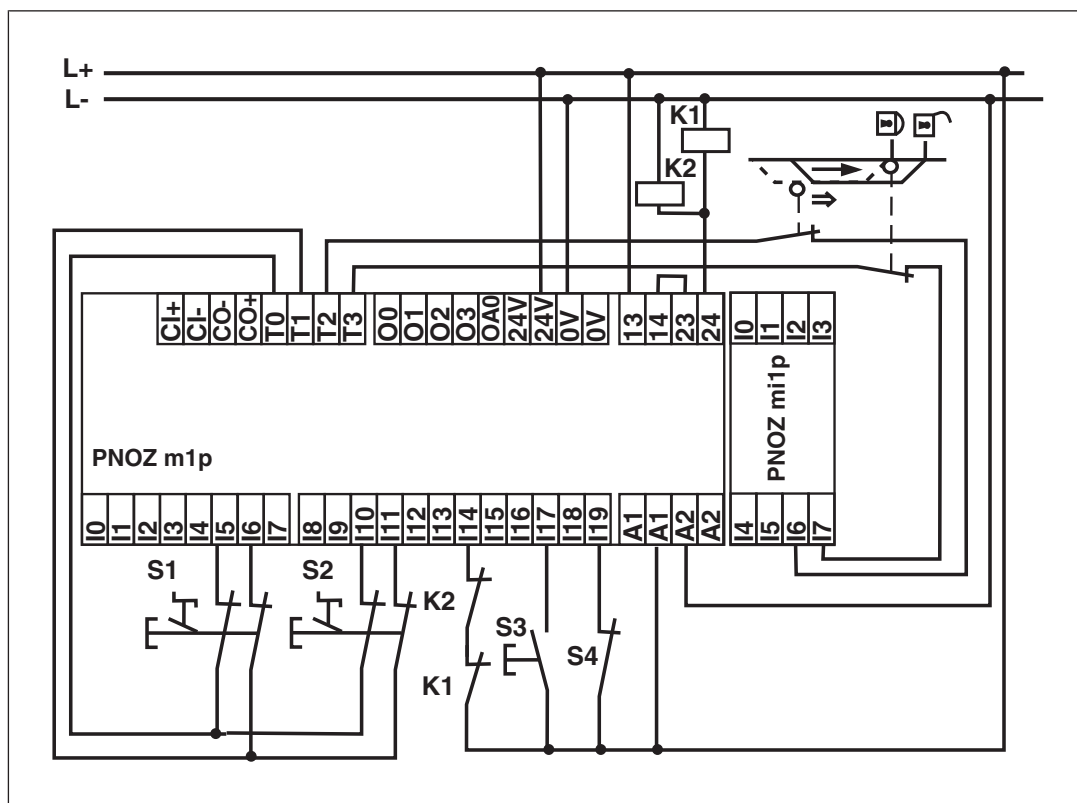

Technical details

General	773400	773405
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773400	773405
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	2,5 W	2,5 W
Status indicator	LED	LED
Inputs	773400	773405
Quantity	8	8
Signal level at g0 h	-3 - +5 V DC	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC	15 - 30 V DC

Input modules PNOZ mi1p

Inputs	773400	773405
Input voltage in accordance with EN 61131-2 Type 1	24 V DC	24 V DC
Min. pulse duration	18 ms	18 ms
Pulse suppression	0,6 ms	0,6 ms
Maximum input delay	4 ms	4 ms
Potential isolation	No	No
Times	773400	773405
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Simultaneity, channel 1 and 2 max.	3 s	3 s
Simultaneity in the two-hand circuit	0,5 s	0,5 s
Environmental data	773400	773405
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	–
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	5 - 500 Hz
Acceleration	1g	1g
Broadband noise		
in accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms
Corrosive gas check		
SO2: Concentration 10 ppm, duration 10 days, passive	–	DIN V 40046-36
H2S: Concentration 1 ppm, duration 10 days, passive	–	DIN V 40046-37

Input modules PNOZ mi1p

Environmental data	773400	773405
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773400	773405
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Cable length		
Max. cable length per input	1 km	1 km
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm
Stripping length with screw terminals	7 mm	7 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG

Input modules PNOZ mi1p

Mechanical data	773400	773405
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	121 mm	121 mm
Weight	120 g	123 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
1-channel	PL d	Cat. 2	SIL CL 2	2,50E-09	SIL 2	2,20E-04	20
2-channel	PL e	Cat. 4	SIL CL 3	2,90E-10	SIL 3	4,50E-06	20
Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,81E-09	SIL 2	9,34E-05	20
1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	2,50E-10	SIL 3	2,21E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Input modules PNOZ mi1p

Order reference

Product

Product type	Features	Order no.
PNOZ mi1p	Expansion module, 8 inputs	773400
PNOZ mi1p coated version	Expansion module, 8 inputs, coated version	773405

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783400
Set screw terminals	1 set of screw terminals	793400

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Input modules PNOZ mi2p



Overview

Unit features

Application of the product PNOZ mi2p:


Expansion module for connection to a base unit from the PNOZmulti system.

The product has the following features:

- ▶ 8 inputs for standard functions
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ LED indicator for:
 - Status of PNOZmulti
- ▶ Max. 8 PNOZ mi2p can be connected to the base unit
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Input modules PNOZ mi2p

Front view

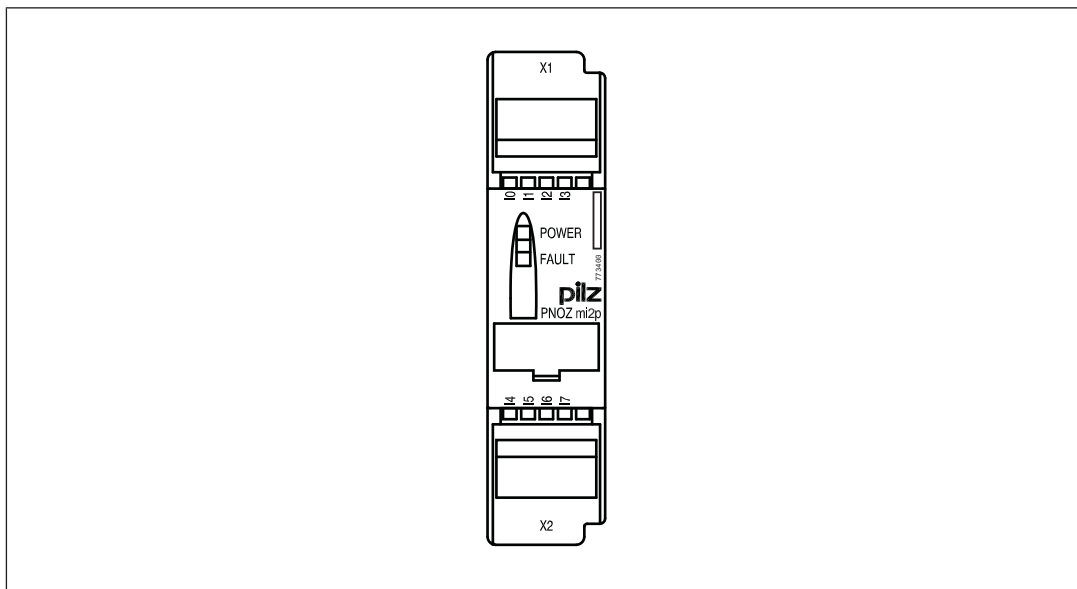

Legend:

- ▶ Inputs I0 – I7

Function description

Functions

The expansion module provides additional inputs.

The function of the inputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A removable data medium is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".


Input modules PNOZ mi2p

Block diagram

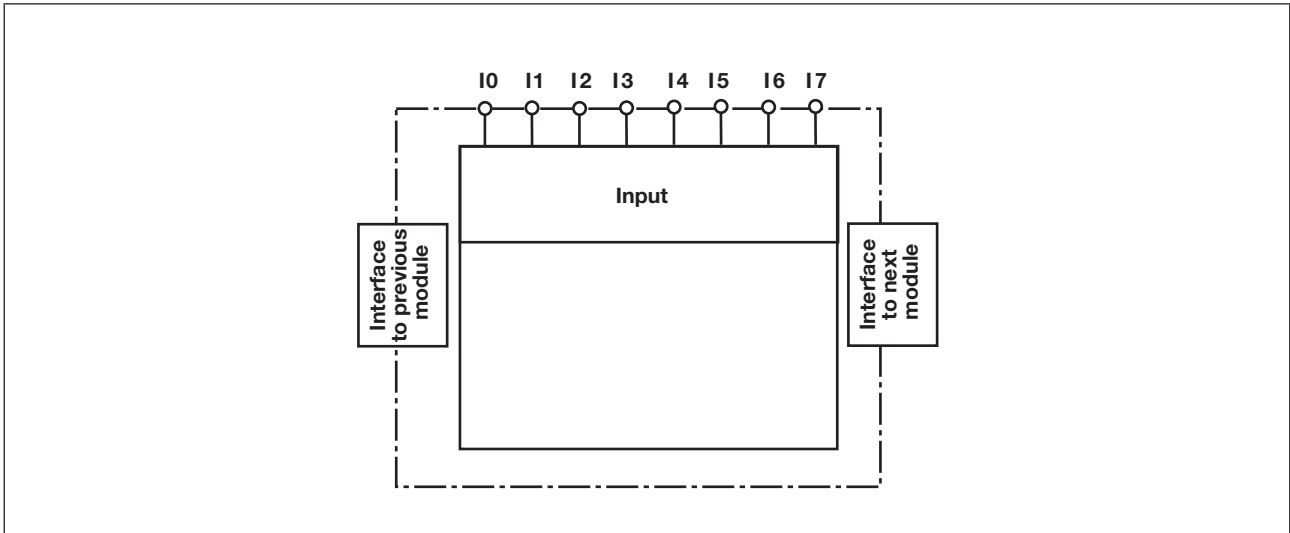

Installation

Dimensions in mm

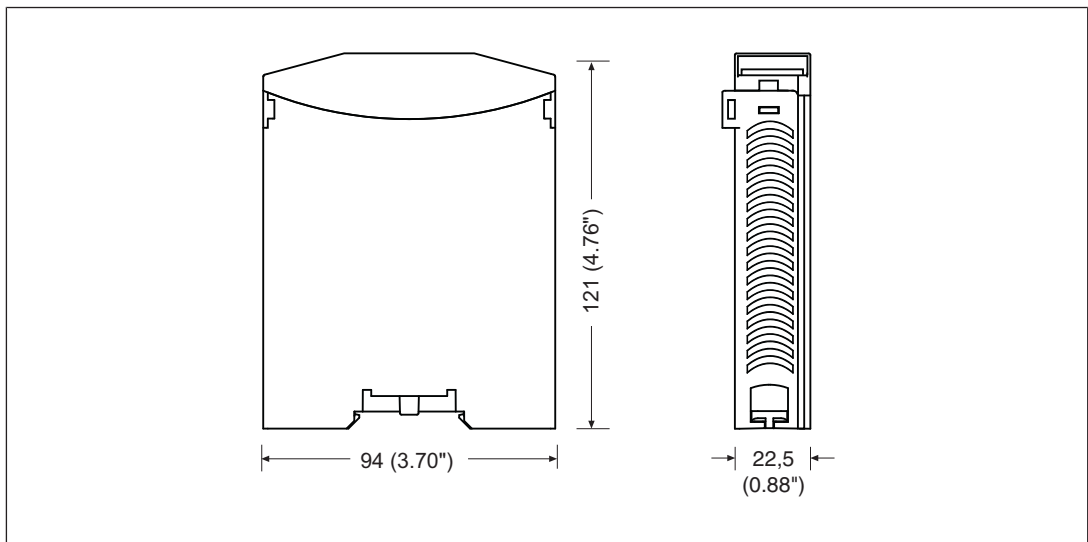

Input modules PNOZ mi2p

Commissioning



General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[153\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation.


Connection

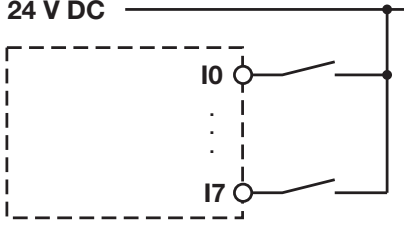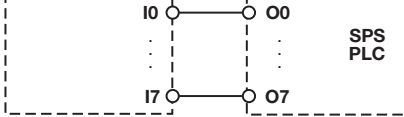Input circuit	Contact	Semiconductor
<p>Not safety-related</p>		

Input modules PNOZ mi2p

Connection example

Poll of PLC outputs (standard function)

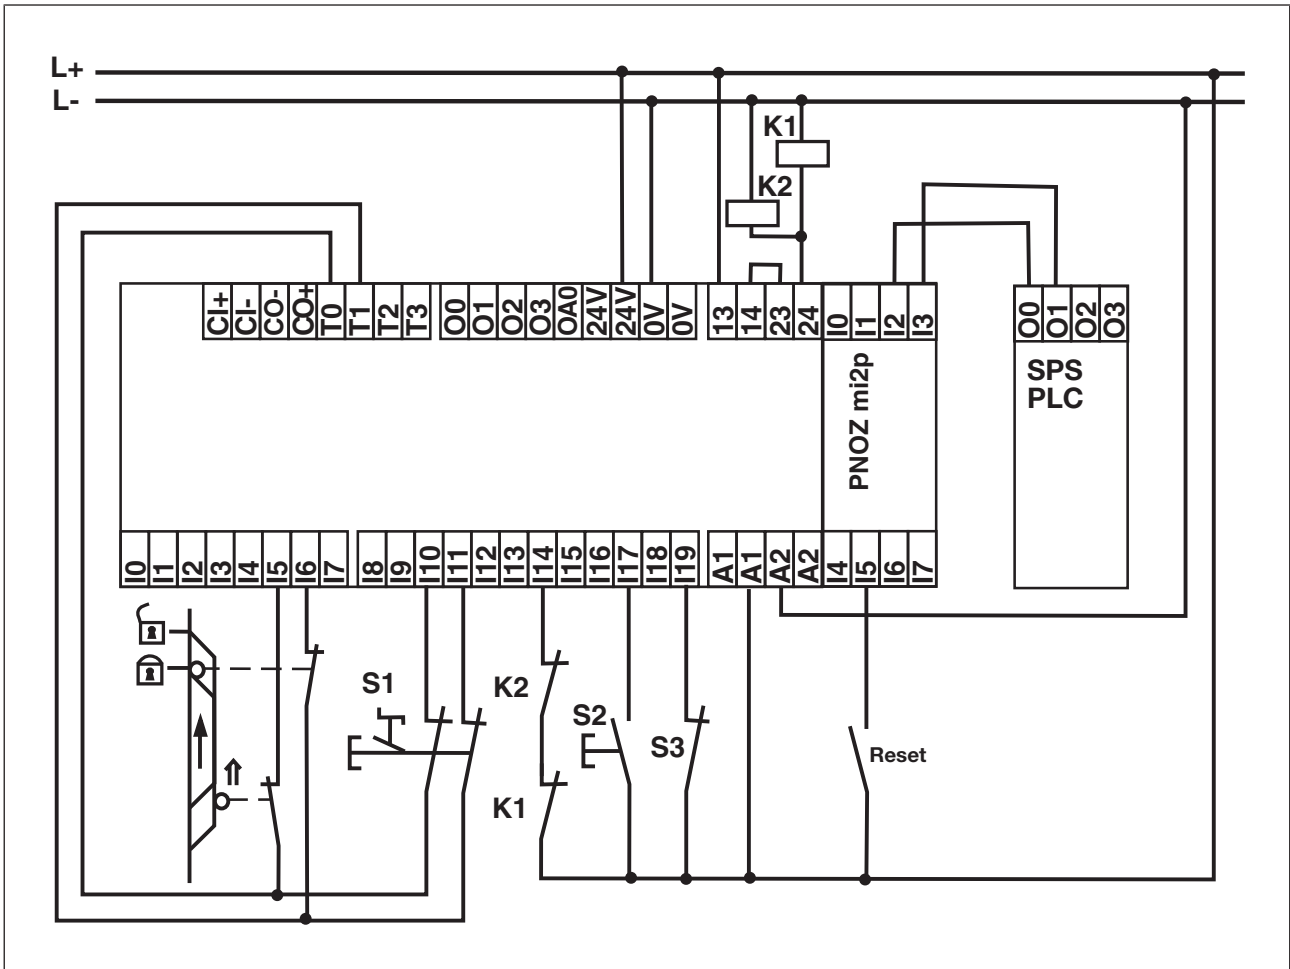

Input modules PNOZ mi2p

Technical details

General	
Certifications	CE, EAC, KOSHA, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	2,5 W
Status indicator	LED
Inputs	
Quantity	8
Signal level at g0 h	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Min. pulse duration	18 ms
Pulse suppression	0,6 ms
Potential isolation	No
Times	
Switch-on delay	5 s
Supply interruption before de-energisation	20 ms
Simultaneity, channel 1 and 2 max.	3 s
Simultaneity in the two-hand circuit	0,5 s
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Max. temperature in accordance with UL	0 - 55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2

Input modules PNOZ mi2p

Environmental data

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage

30 V

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Cable length

Max. cable length per input	1 km
-----------------------------	-------------

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Connection type

Spring-loaded terminal, screw terminal

Conductor cross section with screw terminals

1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG

Torque setting with screw terminals

0,25 Nm

Stripping length with screw terminals

7 mm

Conductor cross section with spring-loaded terminals

1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG

Spring-loaded terminals: Terminal points per connection

1

Stripping length with spring-loaded terminals

9 mm

Input modules

PNOZ mi2p

Mechanical data

Dimensions

Height	94 mm
Width	22,5 mm
Depth	121 mm

Weight	119 g
--------	--------------

Where standards are undated, the 2020-07 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mi2p	8 standard inputs	773410

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783400
Set screw terminals	1 set of screw terminals	793400

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Analogue input module PNOZ ma1p




Overview

Unit features

Application of the product PNOZ ma1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ 2 safe analogue inputs for current or voltage measurement
- ▶ Each input can be configured separately
- ▶ Voltage range: -10,24 ... +10.2375 V
- ▶ Current range: 0 ... 25.59 mA
- ▶ Resolution
 - Voltage measurement: 13 Bit (signed 12 Bit)
 - Current measurement: 12 Bit
- ▶ Range monitoring to monitor for wiring errors or errors in the sensor (4 range limits can be configured)
- ▶ Threshold value monitoring to monitor process variables (8 threshold values can be configured)
- ▶ Max. 4 PNOZ ma1p units can be connected to the base unit
- ▶ Exact analogue value can be passed to a fieldbus for diagnostic purposes
- ▶ LEDs for
 - Operating state
 - State of the input signals (Ch0, Ch1)
 - Error
- ▶ Coated version:
 - Increased environmental requirements (see [Technical details](#) [ 161])
- ▶ Plug-in connection terminals:
 - Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).

Analogue input module PNOZ ma1p

- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Front view

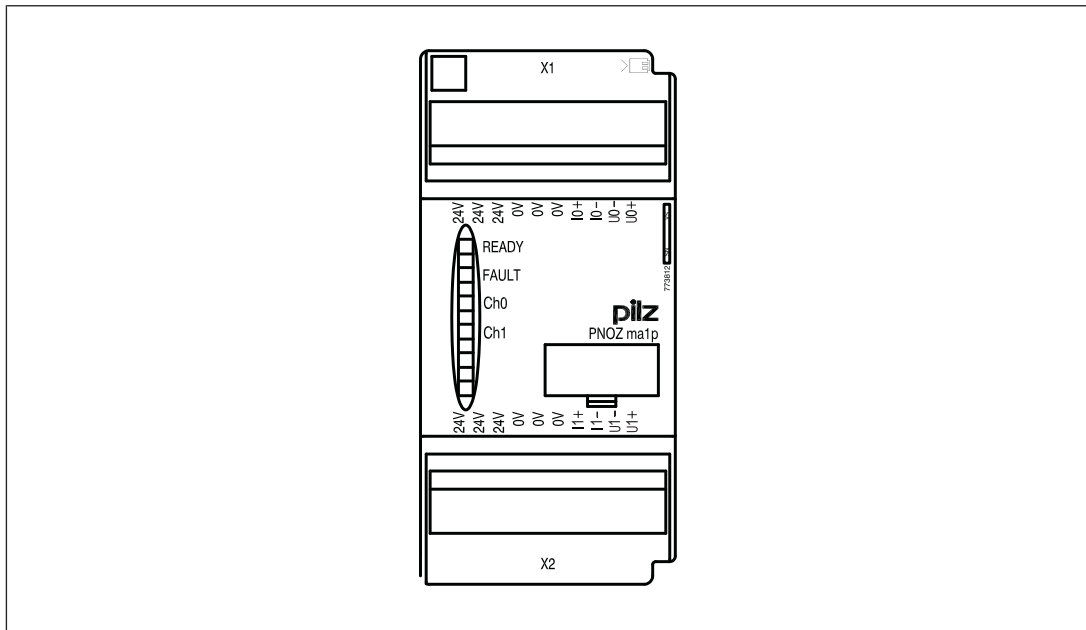

Key:

- ▶ 0 V, 24 V:
Supply connections
- ▶ I0+, I0-:
Inputs for current measurement
- ▶ U0+, U0-:
Inputs for voltage measurement

Function Description

Functions

The analogue input module monitors analogue input signals. It can measure both current and voltage.

The input signals are collected and read in at each input through two channels and are converted into digital signals. The resolution is 13 Bit for voltage measurement, 12 Bit for current measurement.

Analogue input module PNOZ ma1p

In the PNOZmulti Configurator you can define limit values, which are to be monitored:

▶ **Range monitoring**

With range monitoring you can define the permitted value range. You can define up to 4 range limits (e.g. $<3 \text{ mA}$ monitored for open circuit; $I > 21 \text{ mA}$ monitored for encoder error). Depending on the selected condition ("greater than" or "less than"), the ENBL output bit and output bits 1 - 8 for threshold value monitoring are set to "0" if the recorded value exceeds or drops below a range limit. An entry is added to the error stack.


Exception: If "automatic start" type has been selected, no entry will be added to the error stack.

▶ **Threshold value monitoring**

You can define up to 8 switching thresholds, which can be used to monitor certain process variables (e.g. different temperature values). The thresholds can be configured with or without scaling. 2 threshold values are configured per threshold. One threshold value defines when the relevant output bit (1 ... 8) is set to "1". The second threshold value defines when the output bit is reset to "0". No entry is added to the error stack.

The **exact analogue values** are made available to the base unit to forward to a fieldbus. This value is transmitted through a single channel and is not safety-related. It can be used for diagnostic purposes.


Block diagram

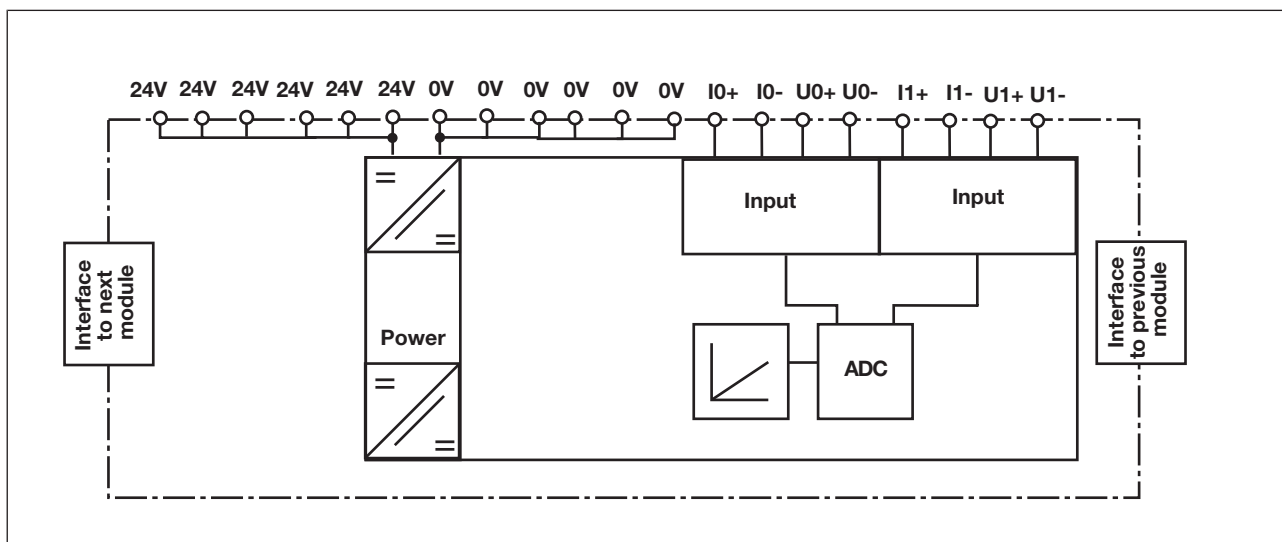

Analogue input module PNOZ ma1p

Installation

Dimensions

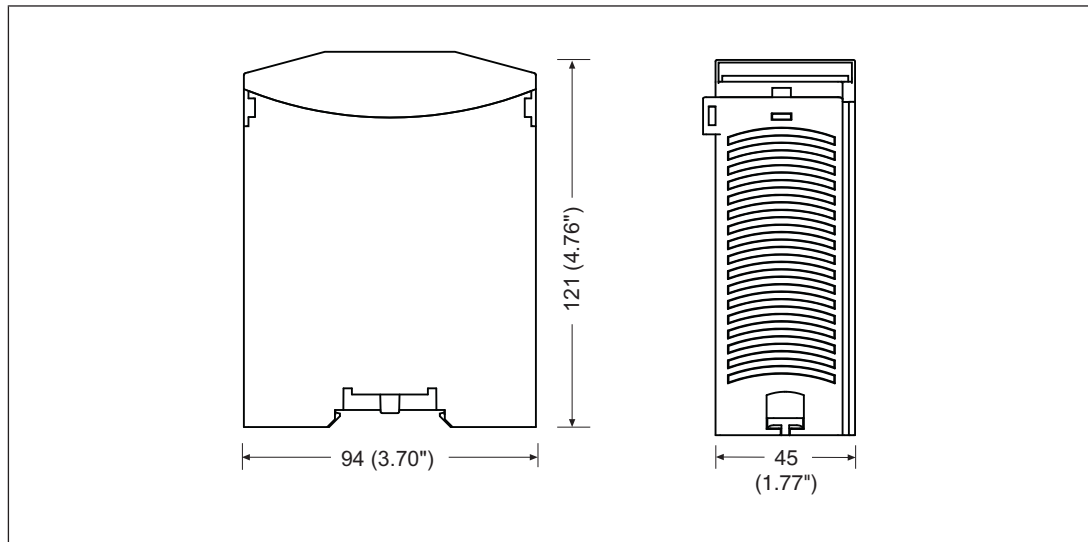

Commissioning

Wiring

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[161\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ The power supply that feeds the expansion module and the input devices must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).
- ▶ 6 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections and the encoder can be supplied.
- ▶ For the connection cables of the transducers use shielded cables with twisted pair cables and place the cable shield on both sides over a wide surface area and with low impedance on the earth potential.
- ▶ Separate the supply voltage cable from the analogue input current lines.
- ▶ If the analogue input module is used to measure current, the voltage inputs must be short-circuited.

Analogue input module PNOZ ma1p

- ▶ **For transducers located outside the control cabinet:** Where the cable enters the control cabinet, the cable shield **must** be connected to the earth potential over a wide surface area and with low impedance (connect in star).

Connection

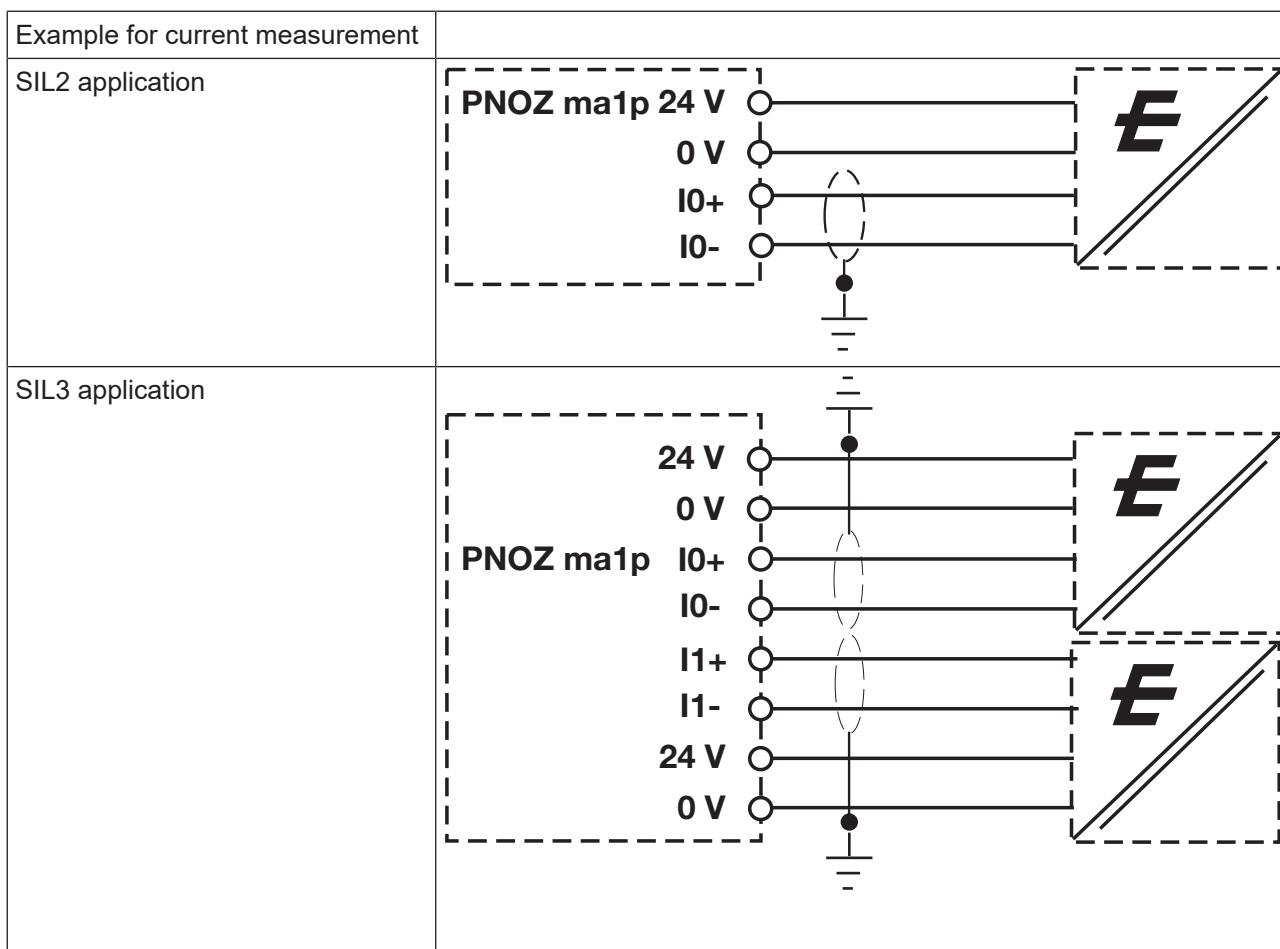

Connection to transducer (SIL2 or SIL3)

Please note:

- ▶ The transducers are SIL2 certified
- ▶ The voltage supply to the input device is optional
- ▶ With current measurement, the voltage inputs U+ - U- must be short-circuited.

Analogue input module PNOZ ma1p

Technical details

General	773812	773813
Certifications	CE, EAC, TÜV, UKCA, cULus Listed	CE, EAC, TÜV, UKCA, cULus Listed
Electrical data	773812	773813
Supply voltage		
for	Module supply	Module supply
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	2 W	2 W
Residual ripple DC	5 %	5 %
Status indicator	LED	LED
Analogue inputs	773812	773813
Number of analogue inputs	2	2
Type of analogue inputs	Voltage, current	Voltage, current
Input filter	RC filter, 1st order	RC filter, 1st order
Cutoff frequency	80 Hz	80 Hz
Current measurement		
Signal range	0,00 - 25,59 mA	0,00 - 25,59 mA
Value range	0 - 4095 d	0 - 4095 d
Resolution	–	–
Value of least significant bit (LSB)	6,25 µA	6,25 µA
Input resistance	100 Ohm	100 Ohm
Max. continuous current	50 mA	50 mA
Voltage measurement		
Signal range	-10,24 - 10,2375 V	-10,24 - 10,2375 V
Value range	-4096 - 4095 d	-4096 - 4095 d
Resolution	13 Bit (signed 12 Bit)	13 Bit (signed 12 Bit)
Value of least significant bit (LSB)	5 mV	5 mV
Input resistance	290 kOhm	290 kOhm
Max. continuous voltage	-30 - 30 V	-30 - 30 V

Analogue input module PNOZ ma1p

Analogue inputs	773812	773813
Deviations from the measuring range limit value		
Output variable error at 25 °C	0,5 %	0,5 %
Temperature coefficient	0,0025 %/K	0,0025 %/K
Greatest transient deviation during el. interference test	1 %	1 %
Max. measurement error at full temperature range	0,5 %	0,5 %
Max. measurement error in the case of a potential module error	1,5 %	1,5 %
Max. voltage between inputs I0 and I1 with current or voltage measurement	30 V	30 V
Filter time constant	2 ms	2 ms
Potential isolation	No	No
Times	773812	773813
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Max. reaction time when the input signal changes	100 ms	100 ms
Environmental data	773812	773813
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	55 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	–
Acceleration	1g	1g

Analogue input module PNOZ ma1p

Environmental data	773812	773813
Broadband noise		
in accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773812	773813
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm
Stripping length with screw terminals	7 mm	7 mm

Analogue input module PNOZ ma1p

Mechanical data	773812	773813
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94 mm	94 mm
Width	45 mm	45 mm
Depth	121 mm	121 mm
Weight	184 g	196 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
1-channel	PL e	Cat. 4	SIL CL 3	8,71E-09	SIL 3	4,21E-05	20
2-channel	PL e	Cat. 4	SIL CL 3	8,71E-09	SIL 3	4,21E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Analogue input module PNOZ ma1p

Order reference

Product

Product type	Features	Order no.
PNOZ ma1p	Expansion module, 2 analogue inputs	773812
PNOZ ma1p coated version	Expansion module, 2 analogue inputs, coated version	773813

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783700
Set screw terminals	1 set of screw terminals	793700

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Output modules PNOZ mo1p




Overview

Unit features

Application of the product PNOZ mo1p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 4 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Plug-in connection terminals:
 - Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Coated version:
 - Increased environmental requirements (see [Technical details](#) [ 171])

Output modules PNOZ mo1p

Front view

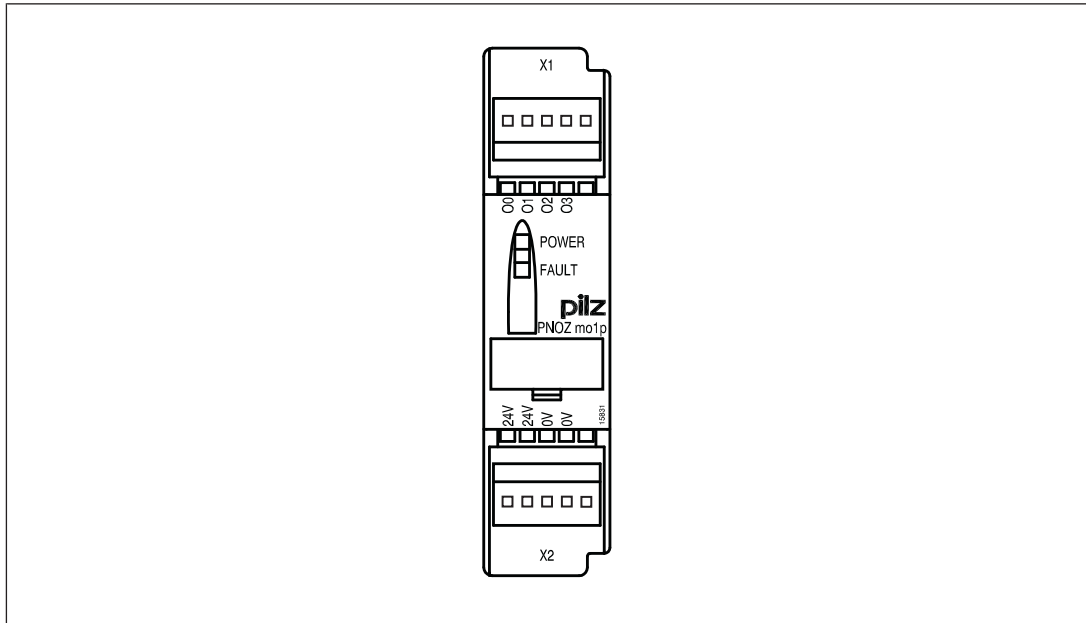

Legend:

- ▶ 0 V, 24 V
Supply connections
- ▶ O0 – O4
Semiconductor outputs

Function description

Functions


The expansion module provides additional semiconductor outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

Output modules PNOZ mo1p

Block diagram

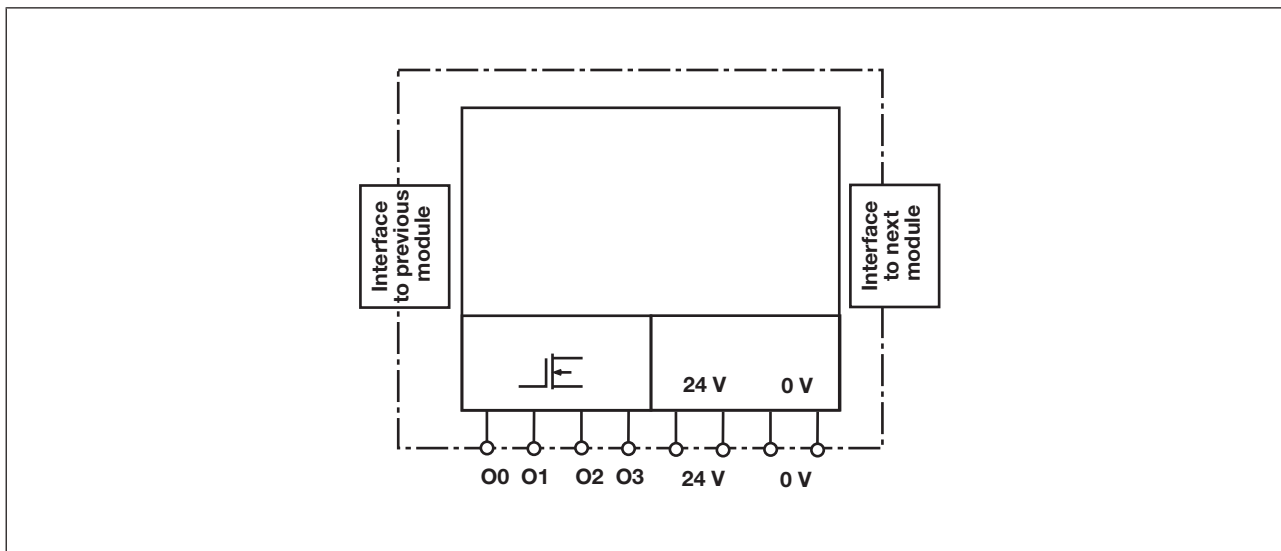


System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Installation

Dimensions in mm

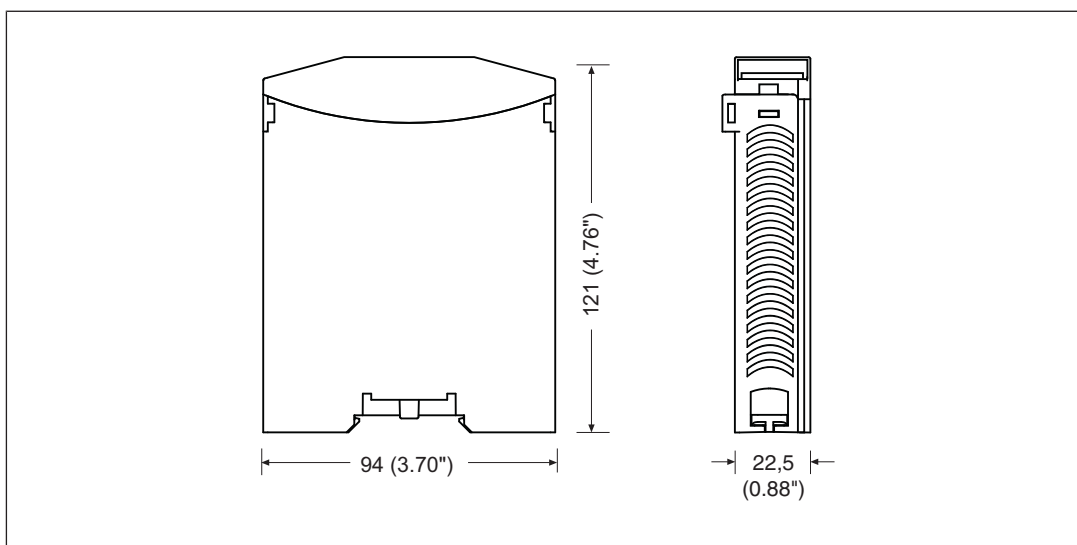

Output modules PNOZ mo1p

Commissioning


General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[171\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.

Connection

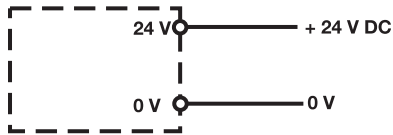
Supply voltage	AC	DC
	/	

Output modules PNOZ mo1p

<p>Redundant output</p>		
<p>Single output</p>		
<p>Feedback loop</p>	<p>Redundant output</p>	
<p>Contacts from external contactors</p>		

Output modules PNOZ mo1p

Connection example

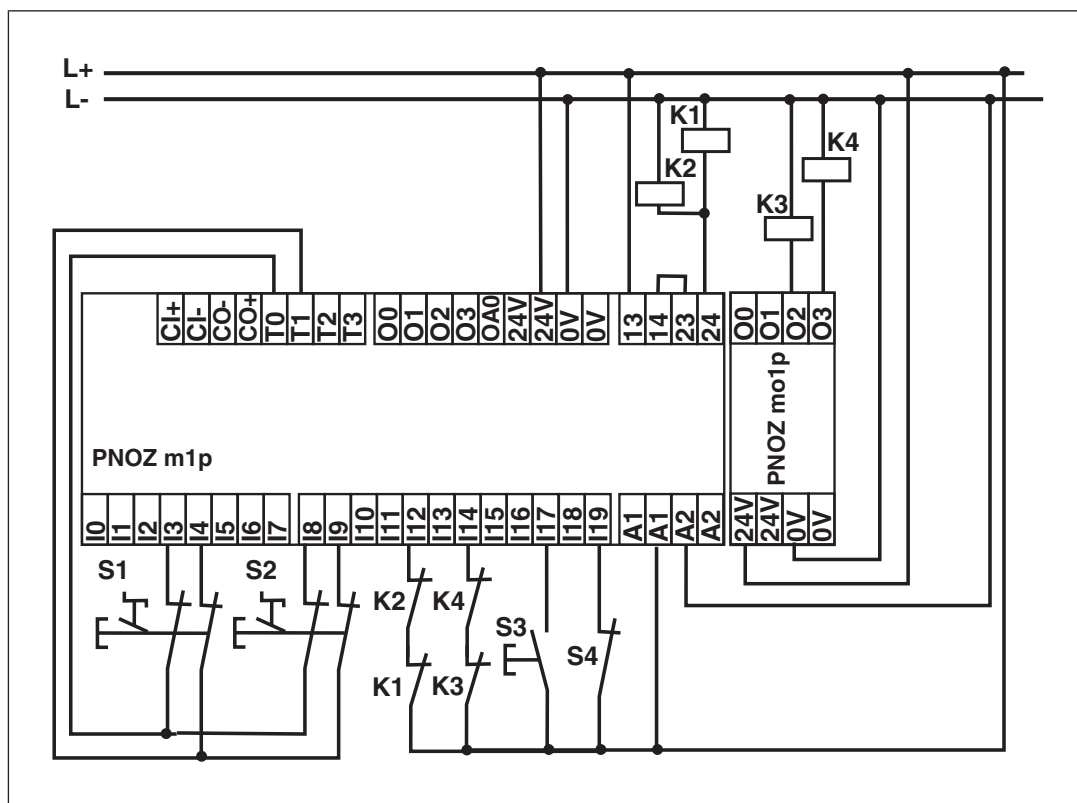

PNOZ mo1p: Contactor K3 and K4
 PNOZ m1p: Feedback loop K3 and K4 at I14

Technical details

General	773500	773505
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773500	773505
Supply voltage		
for	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192 W	192 W
Residual ripple DC	5 %	5 %
Potential isolation	Yes	Yes

Output modules PNOZ mo1p

Electrical data	773500	773505
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	2,5 W	2,5 W
Status indicator	LED	LED
Semiconductor outputs	773500	773505
Quantity	4	4
Switching capability		
Voltage	24 V	24 V
Current	2 A	2 A
Power	48 W	48 W
Derating of coated version at an ambient temperature > 50 °C		
Voltage	–	24 V
Current	–	1 A
Power	–	24 W
Signal level at "1"	UB - 0.5 VDC at 2 A	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA	0,5 mA
Max. capacitive load	1 µF	1 µF
Max. duration of off time during self test	300 µs	300 µs
Switch-off delay	30 ms	30 ms
Potential isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Times	773500	773505
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Environmental data	773500	773505
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	–
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C

Output modules PNOZ mo1p

Environmental data	773500	773505
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	5 - 500 Hz
Acceleration	1g	1g
Broadband noise		
in accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms
Corrosive gas check		
SO ₂ : Concentration 10 ppm, duration 10 days, passive	–	DIN V 40046-36
H ₂ S: Concentration 1 ppm, duration 10 days, passive	–	DIN V 40046-37
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Potential isolation	773500	773505
Potential isolation between	SC output and system voltage	SC output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	2500 V	2500 V
Mechanical data	773500	773505
Mounting position	horizontally on mounting rail	horizontally on mounting rail

Output modules PNOZ mo1p

Mechanical data	773500	773505
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm
Stripping length with screw terminals	7 mm	7 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	121 mm	121 mm
Weight	154 g	156 g

Where standards are undated, the 2020-07 latest editions shall apply.

Output modules PNOZ mo1p

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
1-channel	PL d	Cat. 2	SIL CL 2	7,00E-09	SIL 2	6,14E-04	20
2-channel	PL e	Cat. 4	SIL CL 3	8,60E-10	SIL 3	1,30E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Output modules PNOZ mo1p

Order reference

Product

Product type	Features	Order no.
PNOZ mo1p	Expansion module, 2 or 4 semiconductor outputs, safe	773500
PNOZ mo1p coated version	Expansion module, 2 or 4 semiconductor outputs, safe, coated version	773505

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640


Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783400
Set screw terminals	1 set of screw terminals	793400

Output modules PNOZ mo1p

Supplementary data

Maximum capacitive load C (μF) with load current I (mA) at the semiconductor outputs

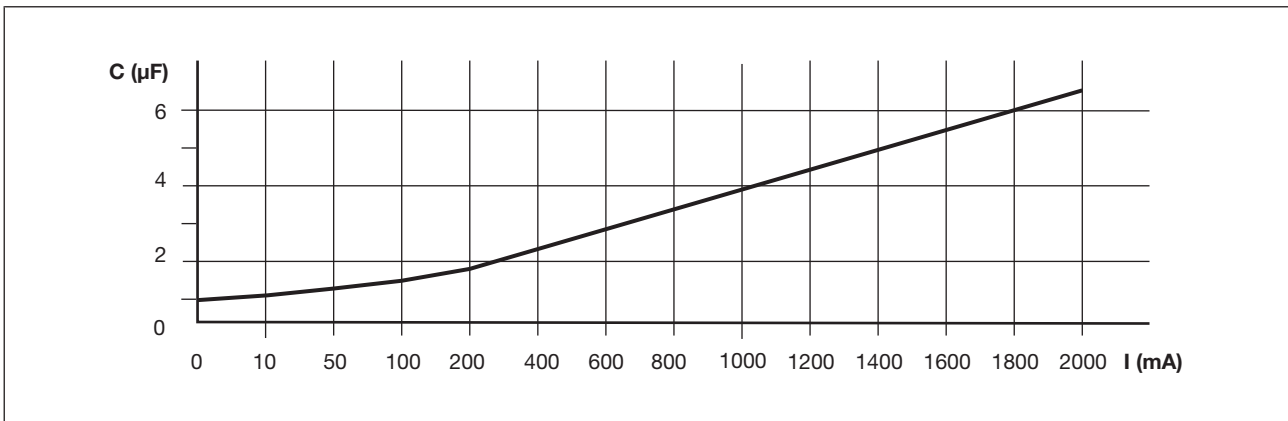

Output modules PNOZ mo2p




Overview

Unit features

Application of the product PNOZ mo2p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Positive-guided relay outputs:
 - 2 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Status indicators
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Plug-in connection terminals:
 - Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Coated version:
 - Increased environmental requirements (see [Technical details](#) [ 182])

Output modules PNOZ mo2p

Front view

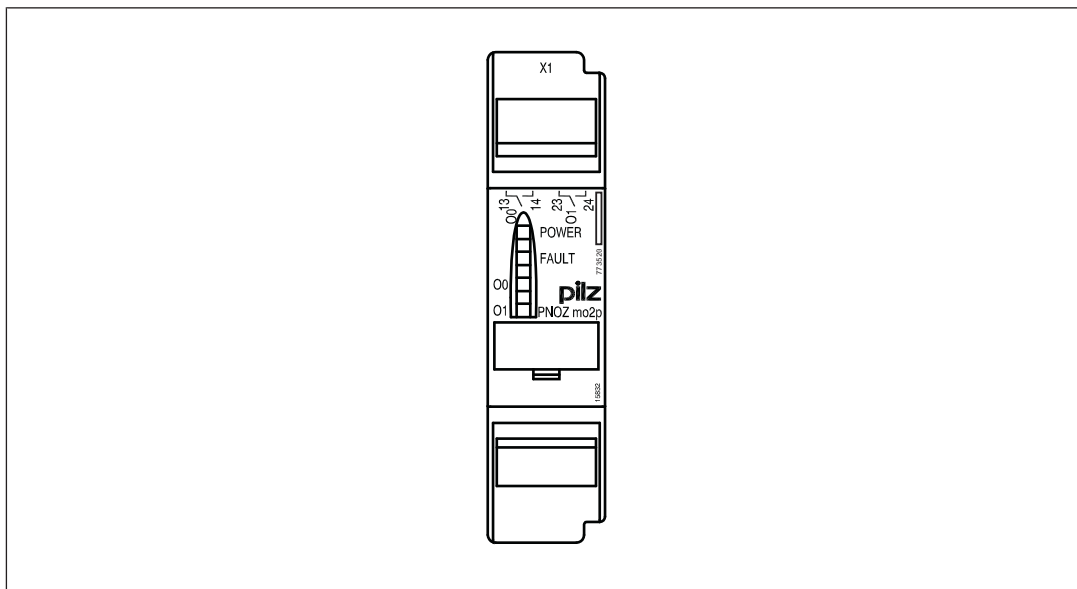

Key:

- ▶ 00 – 01
Relay outputs

Function description

Functions

The expansion module provides additional relay outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".


Output modules PNOZ mo2p

Block diagram

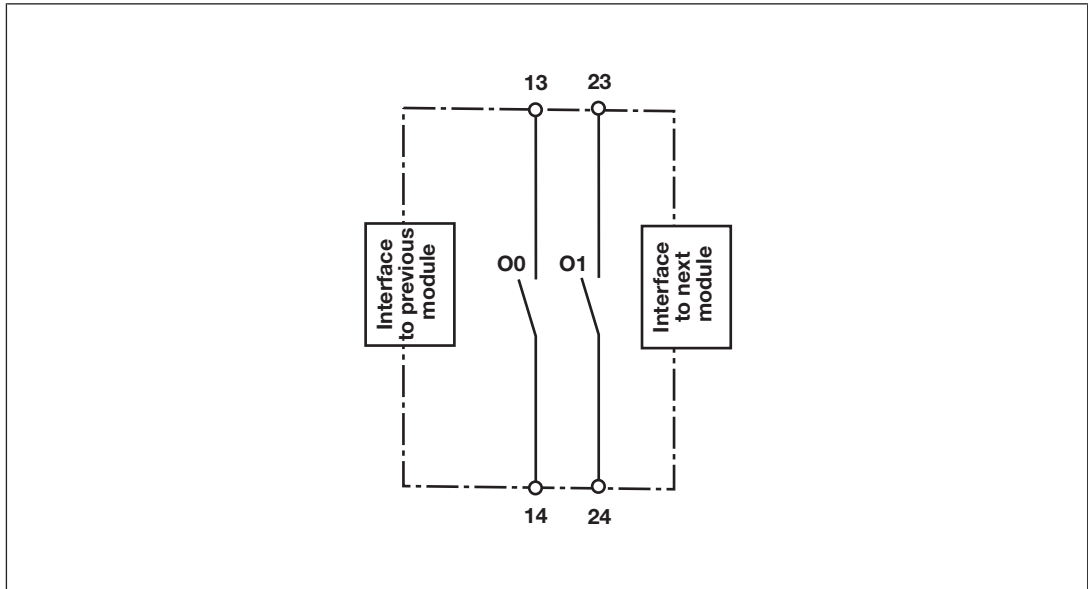

Installation

Dimensions in mm

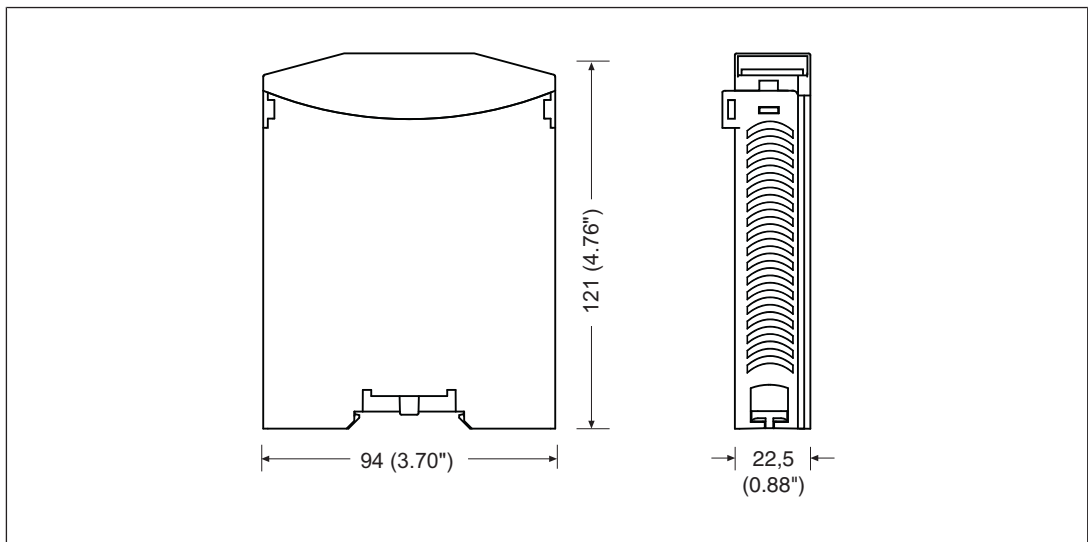

Output modules PNOZ mo2p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[182\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Connection

Redundant		
single		
Feedback loop Contacts from external contactors		

Output modules PNOZ mo2p

Connection example

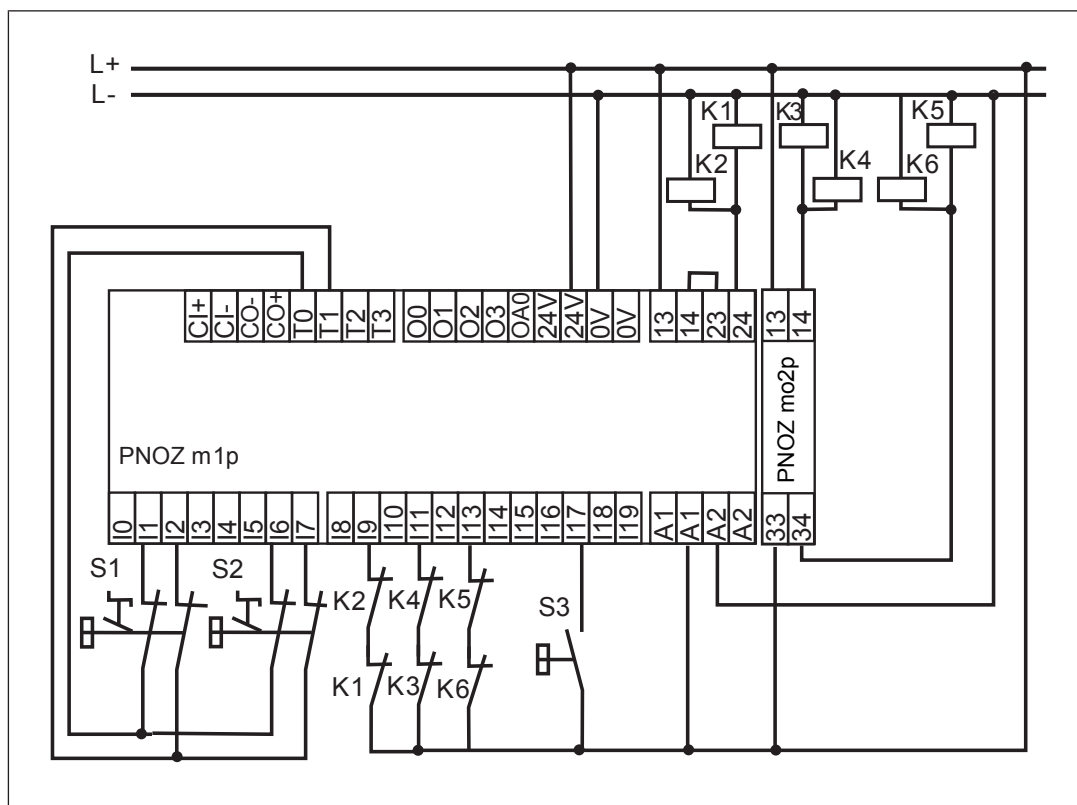

Technical details

General	773520	773525
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773520	773525
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	2,5 W	2,5 W
Status indicator	LED	LED
Relay outputs	773520	773525
Number of relay outputs	2	2
Utilisation category		
in accordance with the standard	EN 60947-4-1	EN 60947-4-1

Output modules PNOZ mo2p

Relay outputs	773520	773525
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Min. current	10 mA	10 mA
Max. current	6 A	6 A
Max. power	1440 VA	1440 VA
DC1 at	24 V	24 V
Min. current	10 mA	10 mA
Max. current	6 A	6 A
Max. power	144 W	144 W
Derating of coated version at an ambient temperature > 50 °C		
Safety contacts, AC1 at	–	240 V
Max. current	–	4 A
Max. power	–	960 W
Safety contacts, DC 1 at	–	24 V
Max. current	–	4 A
Max. power	–	96 W
Utilisation category		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	3 A	3 A
Max. power	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V
Max. current	3 A	3 A
Max. power	72 W	72 W
Airgap creepage between		
Relay contacts	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm
External contact fuse protection, safety contacts		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	6 A	6 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A
Switch-off delay	50 ms	50 ms
Potential isolation	Yes	Yes
Times	773520	773525
Switch-on delay	5 s	5 s

Output modules PNOZ mo2p

Times	773520	773525
Supply interruption before de-energisation	20 ms	20 ms
Environmental data	773520	773525
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	–
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term (only with separated extra low voltage)
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g
Broadband noise		
in accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms
Corrosive gas check		
SO ₂ : Concentration 10 ppm, duration 10 days, passive	–	DIN V 40046-36
H ₂ S: Concentration 1 ppm, duration 10 days, passive	–	DIN V 40046-37
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	6 kV	6 kV

Output modules PNOZ mo2p

Environmental data	773520	773525
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Potential isolation	773520	773525
Potential isolation between	Relay output and system voltage	Relay output and system voltage
Type of potential isolation	Protective separation	Protective separation
Rated surge voltage	6000 V	6000 V
Mechanical data	773520	773525
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals (relay outputs)	0,5 Nm	0,5 Nm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm

Output modules PNOZ mo2p

Mechanical data	773520	773525
Dimensions		
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	121 mm	121 mm
Weight	170 g	151 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
1-channel	PL c	Cat. 1	-	2,90E-08	-	2,60E-03	20
2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	SIL 3	5,20E-07	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switch frequency and the load of the relay output.

If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Output modules PNOZ mo2p

Supplementary data

Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

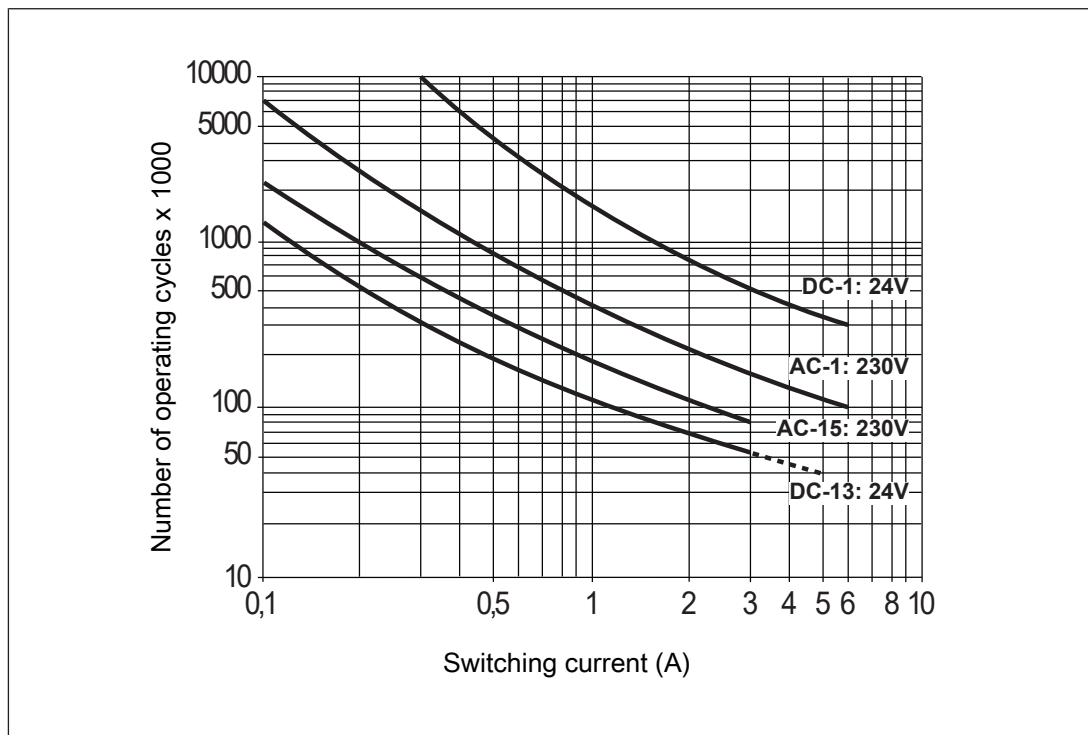


Fig.: Service life graphs at 24 VDC and 230 VAC

Output modules PNOZ mo2p

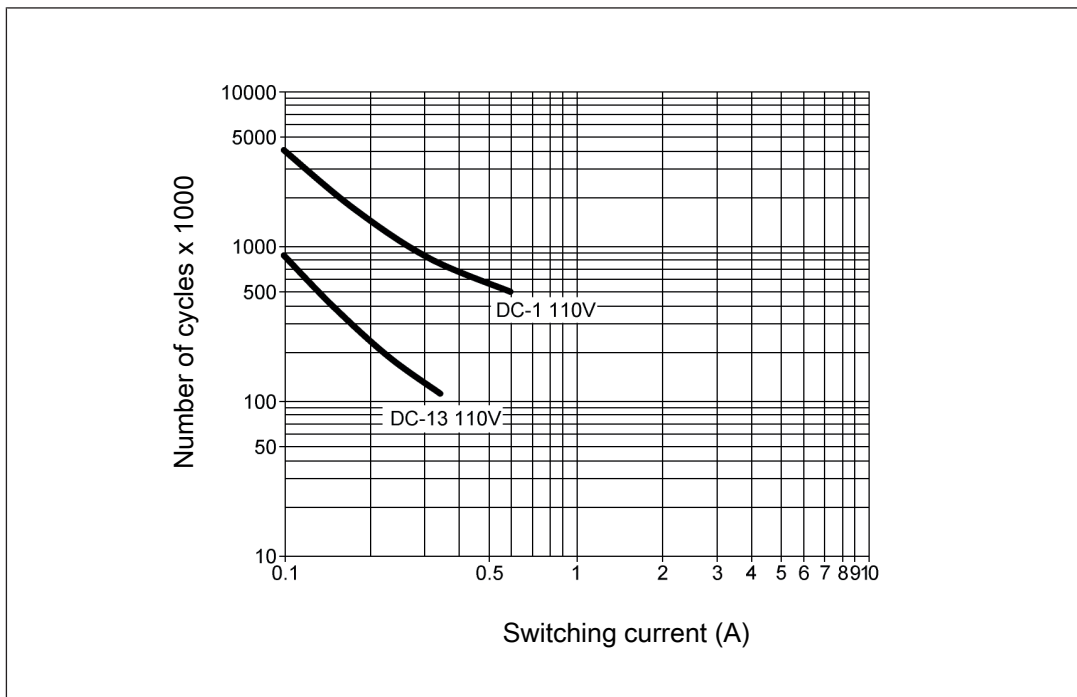


Fig.: Service life graphs at 110 VDC

Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[182\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

Output modules PNOZ mo2p

Order reference

Product

Product type	Features	Order no.
PNOZ mo2p	Expansion module, 1 or 2 relay outputs, positive-guided	773520
PNOZ mo2p coated version	Expansion module, 1 or 2 relay outputs, positive-guided, coated version	773525

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783520
Set screw terminals	1 set of screw terminals	793520

Output modules PNOZ mo3p



Overview

Unit features

Application of the product PNOZ mo3p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 2 dual-pole safety outputs
 - up to PL e of EN ISO 13849-1 and SIL CL 3 of EN IEC 62061, depending on the application
- ▶ Open circuit detection
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Plug-in connection terminals:
 - Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).

Output modules PNOZ mo3p

Front view

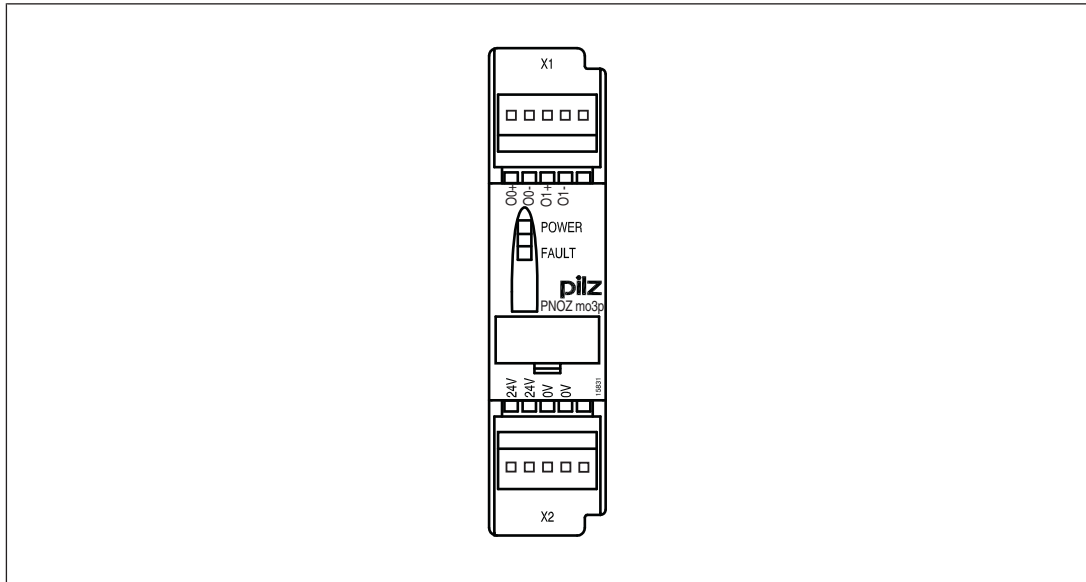

Legend:

- ▶ 0 V, 24 V
Supply connections
- ▶ O0+, O0- and O1+, O1-
Dual-pole semiconductor outputs

Function description

Functions


The expansion module provides additional semiconductor outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

Output modules PNOZ mo3p

Block diagram

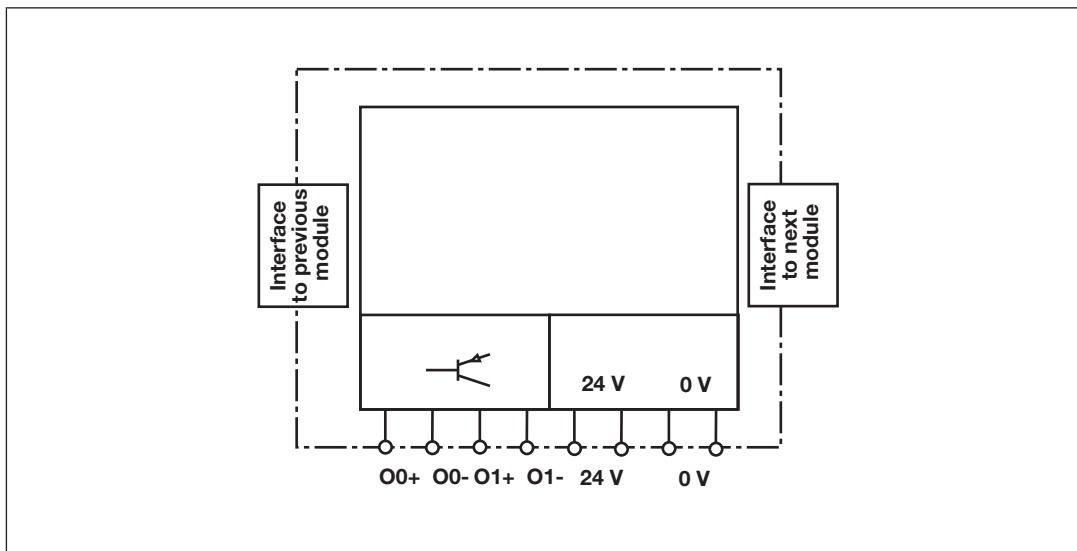


System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Installation

Dimensions in mm

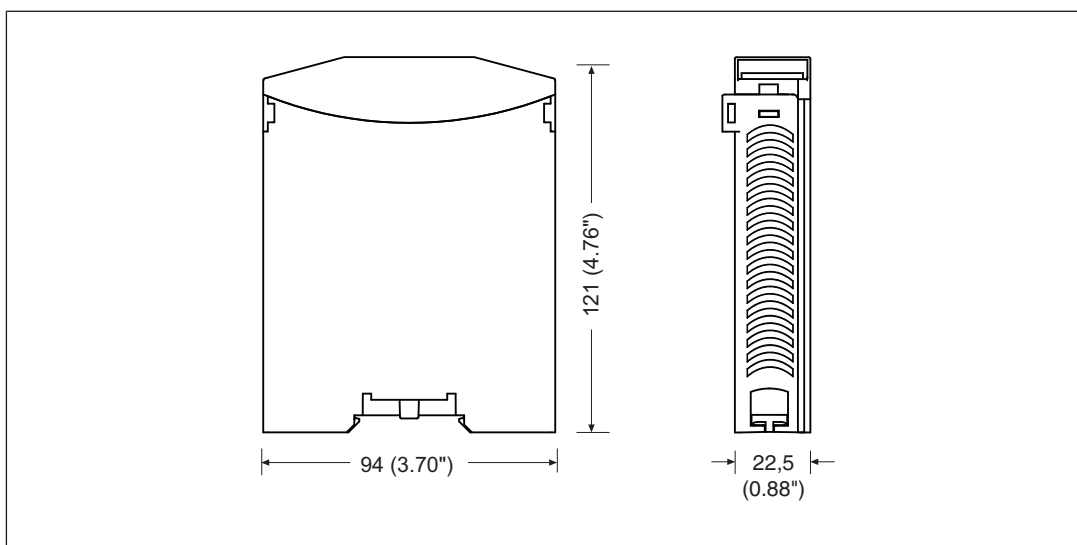

Output modules PNOZ mo3p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:







- ▶ Information given in the [Technical details \[195\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Please note: The supply voltage always must be present at X2, even if you do not use the semiconductor outputs.

The unit has 2 dual-pole semiconductor outputs. These may be configured as single or redundant outputs. The output assignment is defined in the PNOZmulti Configurator. Wire the output circuit as described in the table.

Connection


Supply voltage	AC	DC
	/	

Output modules PNOZ mo3p
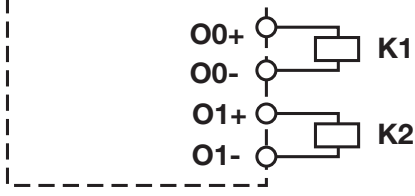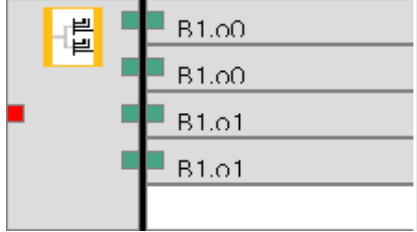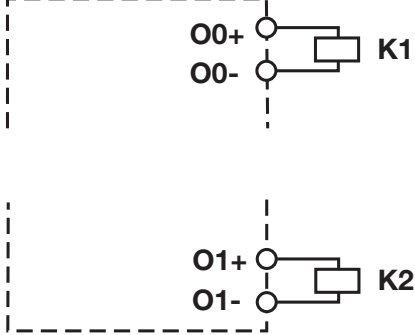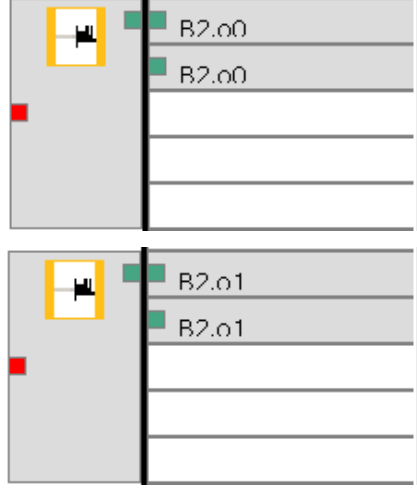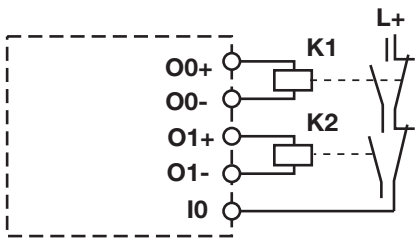
<p>Redundant output</p>		
<p>Single output</p>		
<p>Feedback loop Contacts from external contactors</p>		

Output modules PNOZ mo3p

Connection example

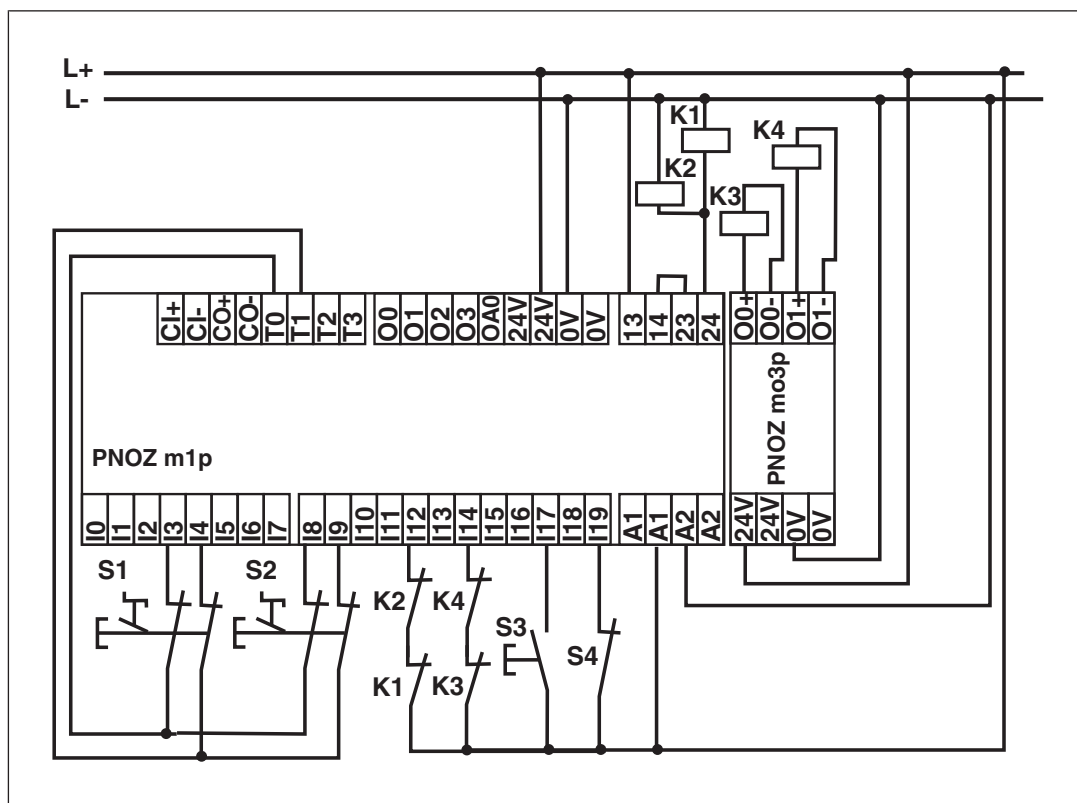

Technical details

General

Certifications **CE, EAC, KOSHA, TÜV, UKCA, cULus Listed**

Electrical data

Supply voltage

for

Supply to the SC outputs

Voltage

24 V

Kind

DC

Voltage tolerance

-15 %/+20 %

Output of external power supply (DC)

96 W

Residual ripple DC

5 %

Potential isolation

Yes

Output modules PNOZ mo3p

Electrical data

Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	2,5 W
Status indicator	LED

Semiconductor outputs, 2-pole

Quantity	2
Switching capability	
Voltage	24 V DC
Current	2 A
Power	48 W
Residual current at "0"	0,5 mA
Signal level at "1"	2 A: UB - 0,5 V DC
Switch-off delay	30 ms
Open circuit detection off	3 kOhm
Galvanic isolation	Yes
Short circuit-proof	Yes

Times

Switch-on delay	5 s
Supply interruption before de-energisation	20 ms

Environmental data

Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2

Output modules PNOZ mo3p

Environmental data

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage

30 V

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between	SC output and system voltage
Type of potential isolation	Protective separation
Rated surge voltage	2500 V

Mechanical data

Mounting position	horizontally on mounting rail
-------------------	--------------------------------------

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Connection type	Spring-loaded terminal, screw terminal
-----------------	---

Conductor cross section with screw terminals

1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG

Torque setting with screw terminals	0,25 Nm
-------------------------------------	----------------

Stripping length with screw terminals	7 mm
---------------------------------------	-------------

Conductor cross section with spring-loaded terminals

1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG

Output modules PNOZ mo3p

Mechanical data

Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94 mm
Width	22,5 mm
Depth	121 mm
Weight	127 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
2-channel	PL e	Cat. 4	SIL CL 3	1,74E-09	SIL 3	2,48E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Output modules PNOZ mo3p

Order reference

Product

Product type	Features	Order no.
PNOZ mo3p	Expansion module, 2 dual-pole semiconductor outputs, safe	773510

Accessories

Connection terminals


Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783400
Set screw terminals	1 set of screw terminals	793400

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Supplementary data

Maximum capacitive load C (μF) with load current I (mA) at the semiconductor outputs

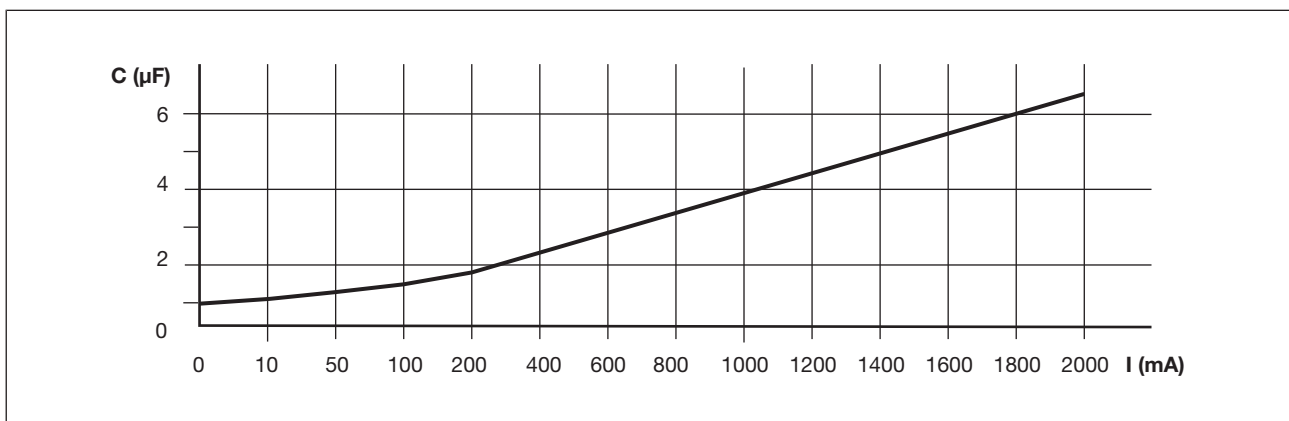

Output modules PNOZ mo4p




Overview

Unit features

Application of the product PNOZ mo4p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Positive-guided relay outputs:
 - 4 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Status indicators
- ▶ Max. 6 PNOZ mo4p units can be connected to the base unit
- ▶ Plug-in connection terminals:
 - Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Coated version:
 - Increased environmental requirements (see [Technical details](#) [ 204])

Output modules PNOZ mo4p

Front view

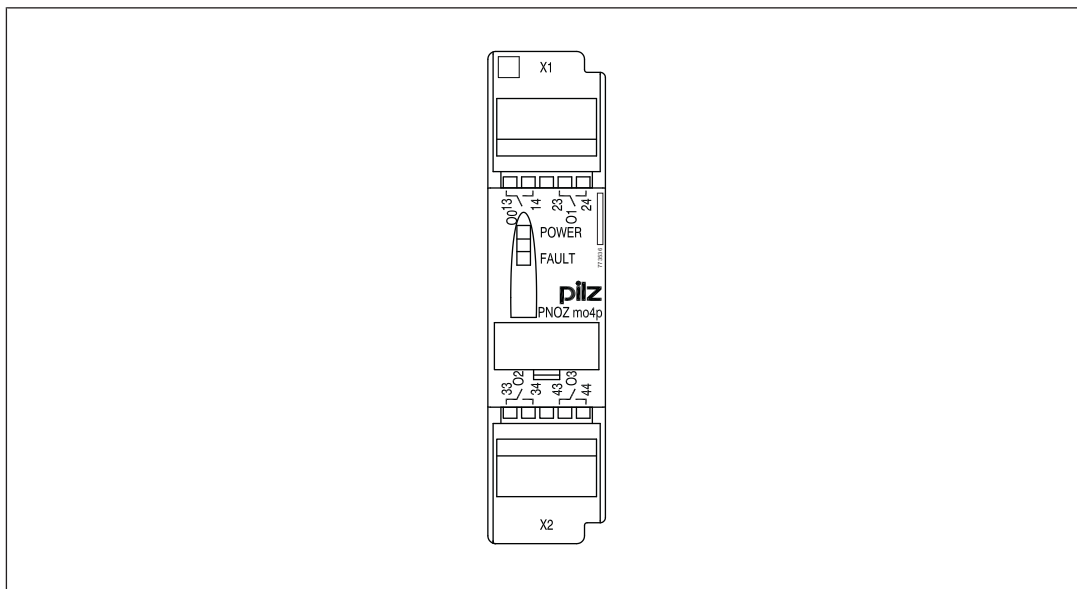

Legend:

- ▶ O0 – O3
Relay outputs

Function description

Functions

The expansion module provides additional relay outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".


Output modules PNOZ mo4p

Block diagram

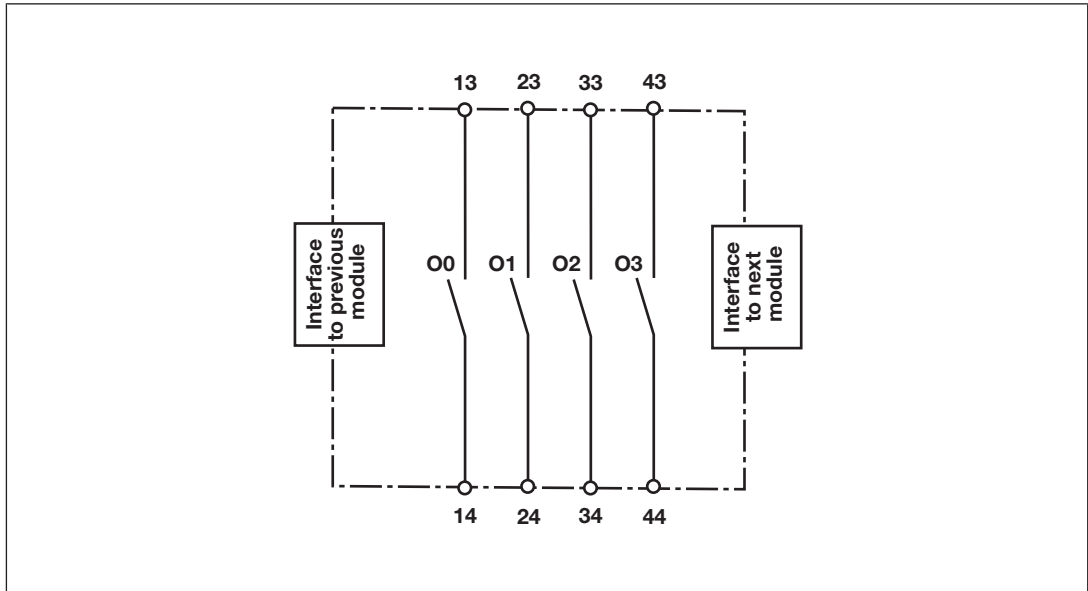

Installation

Dimensions in mm

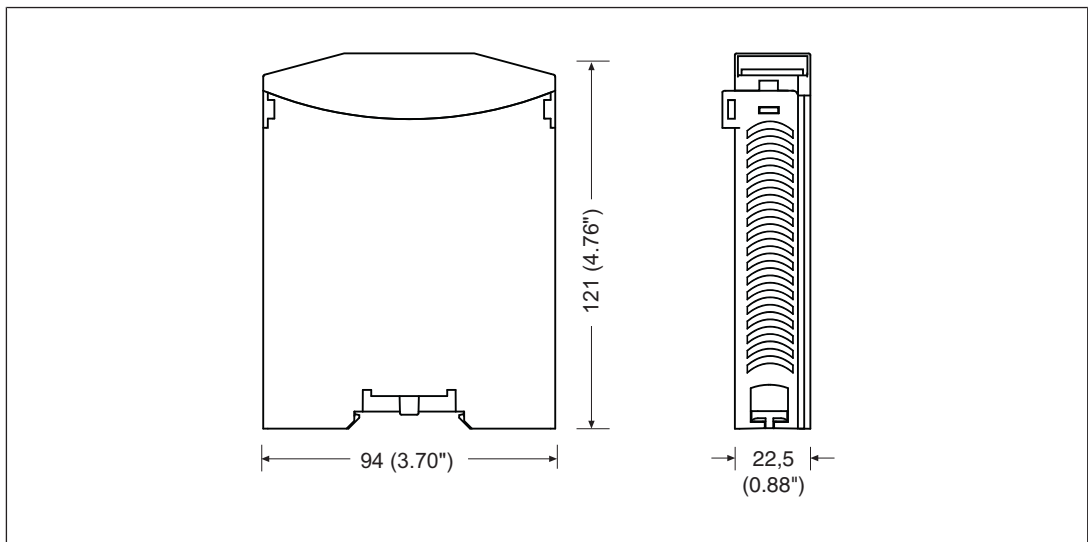

Output modules PNOZ mo4p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[204\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Connection

Redundant		
single		
Feedback loop Contacts from external contactors		

Output modules PNOZ mo4p

Connection example

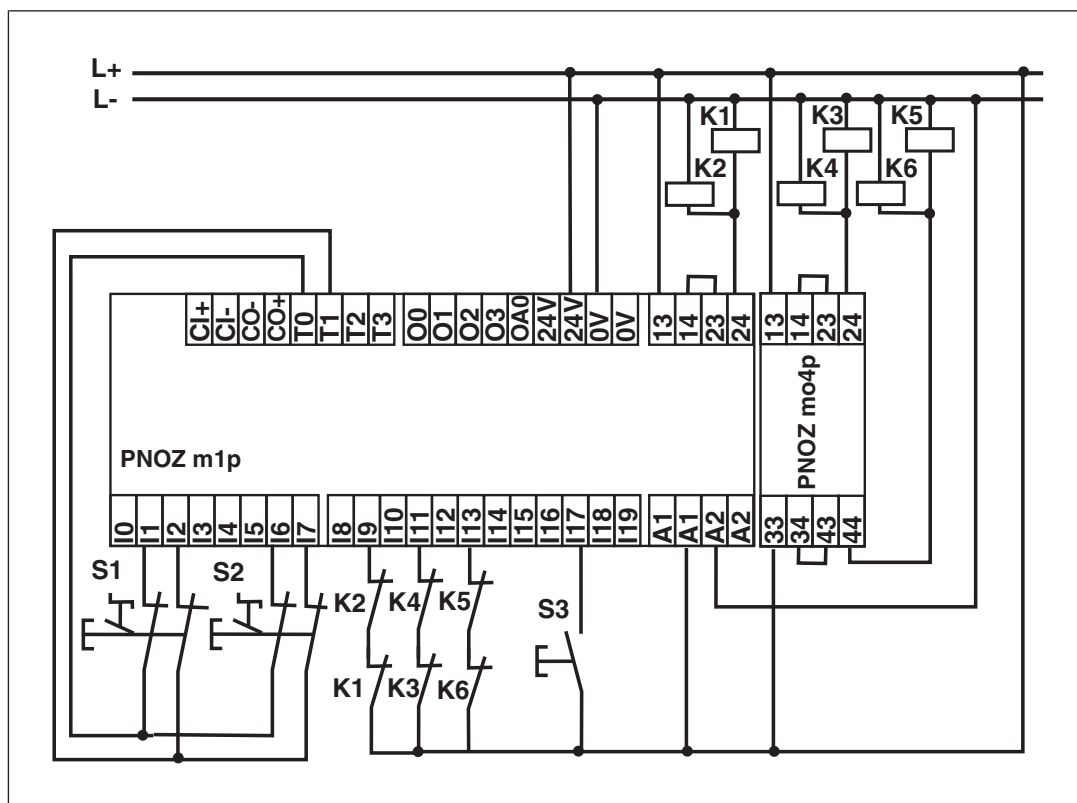

Technical details

General	773536	773537
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773536	773537
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	2,5 W	2,5 W
Status indicator	LED	LED
Relay outputs	773536	773537
Number of relay outputs	4	4
Utilisation category		
in accordance with the standard	EN 60947-4-1	EN 60947-4-1

Output modules PNOZ mo4p

Relay outputs	773536	773537
Utilisation category of safety contacts		
AC1 at	240 V	240 V
Min. current	10 mA	10 mA
Max. current	6 A	6 A
Max. power	1440 VA	1440 VA
DC1 at	24 V	24 V
Min. current	10 mA	10 mA
Max. current	6 A	6 A
Max. power	144 W	144 W
Derating of coated version at an ambient temperature > 50 °C		
Safety contacts, AC1 at	–	240 V
Max. current	–	2 A
Max. power	–	480 W
Safety contacts, DC 1 at	–	24 V
Max. current	–	2 A
Max. power	–	48 W
Utilisation category		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Utilisation category of safety contacts		
AC15 at	230 V	230 V
Max. current	3 A	3 A
Max. power	690 W	690 W
DC13 (6 cycles/min) at	24 V	24 V
Max. current	3 A	3 A
Max. power	72 W	72 W
AC15 at	–	230 V
Max. current	–	2 A
Max. power	–	460 W
DC13 (6 cycles/min) at	–	24 V
Max. current	–	2 A
Max. power	–	48 W
Max. permitted total current of relay outputs at an ambient temperature of > 50 °C		
	12 A	–
Airgap creepage between		
Relay contacts	3 mm	3 mm
Relay contacts and other circuits	5,5 mm	5,5 mm

Output modules PNOZ mo4p

Relay outputs	773536	773537
External contact fuse protection, safety contacts		
in accordance with the standard	EN 60947-5-1	EN 60947-5-1
Blow-out fuse, quick	6 A	6 A
Blow-out fuse, slow	6 A	6 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A	6 A
Switch-off delay	50 ms	50 ms
Conventional thermal current	12 A	12 A
Times	773536	773537
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Environmental data	773536	773537
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	–
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term (only with separated extra low voltage)
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	5 - 500 Hz
Acceleration	1g	1g
Broadband noise		
in accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms
Corrosive gas check		
SO ₂ : Concentration 10 ppm, duration 10 days, passive	–	DIN V 40046-36
H ₂ S: Concentration 1 ppm, duration 10 days, passive	–	DIN V 40046-37

Output modules PNOZ mo4p

Environmental data	773536	773537
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	250 V	250 V
Rated impulse withstand voltage	6 kV	6 kV
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773536	773537
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals (relay outputs)		
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals (relay outputs)	0,5 Nm	0,5 Nm
Stripping length with screw terminals (relay outputs)	8 mm	8 mm

Output modules PNOZ mo4p

Mechanical data	773536	773537
Conductor cross section with spring-loaded terminals (relay outputs)		
1 core flexible without crimp connector	0,25 - 2,5 mm ² , 24 - 12 AWG	0,25 - 2,5 mm ² , 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals (relay outputs)	10 mm	10 mm
Dimensions		
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	121 mm	121 mm
Weight	204 g	204 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
1-channel	PL c	Cat. 1	-	2,90E-08	-	2,60E-03	20
2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	SIL 3	5,20E-07	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switch frequency and the load of the relay output.

If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Output modules PNOZ mo4p

Supplementary data

Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

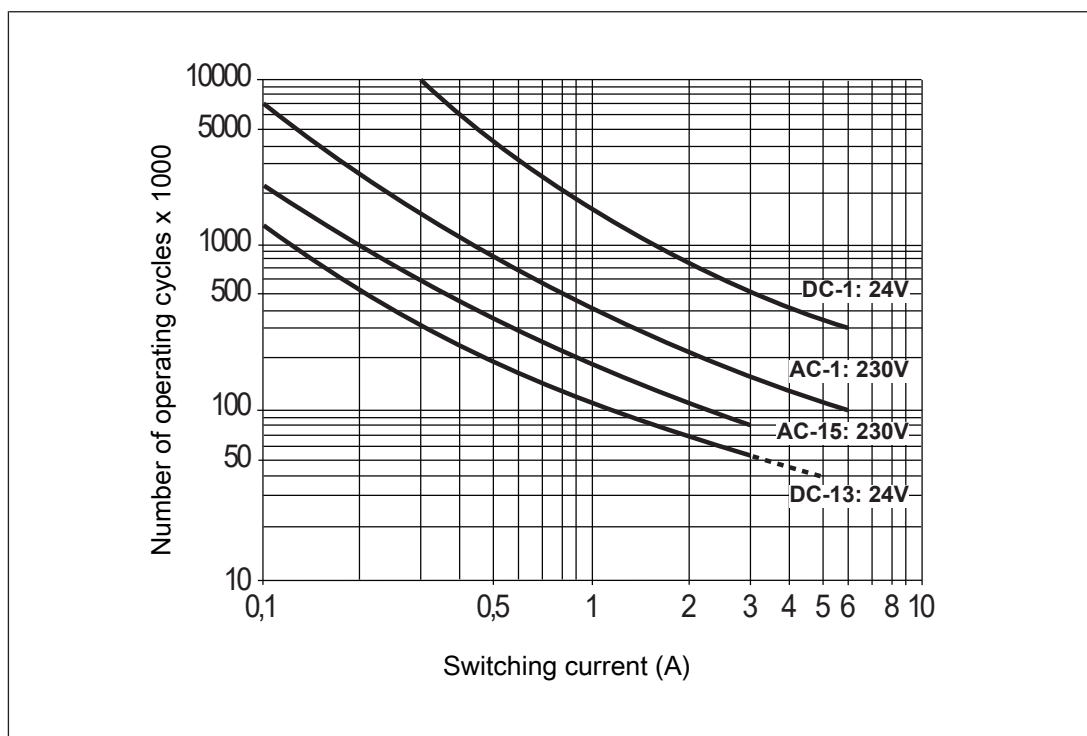


Fig.: Service life graphs at 24 VDC and 230 VAC

Output modules PNOZ mo4p

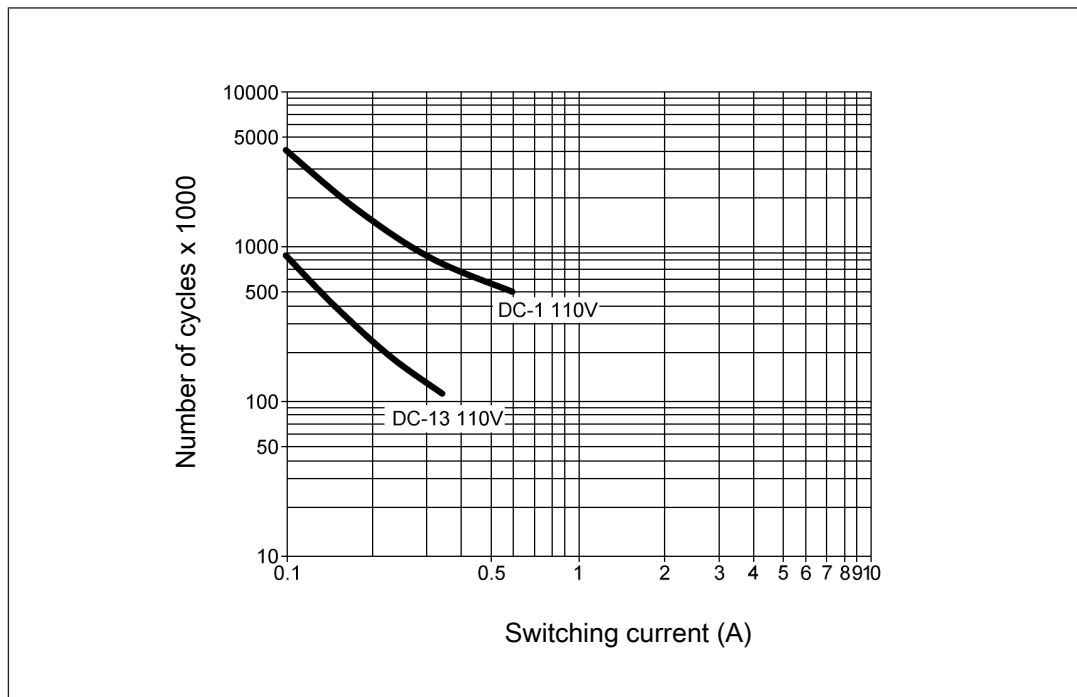


Fig.: Service life graphs at 110 VDC

Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[📖 204\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

Output modules

PNOZ mo4p

Order reference

Product

Product type	Features	Order no.
PNOZ mo4p	Expansion module, 2 or 4 relay outputs, positive-guided	773536
PNOZ mo4p coated version	Expansion module, 2 or 4 relay outputs, positive-guided, coated version	773537

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783536
Set screw terminals	1 set of screw terminals	793536

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Output modules PNOZ mo5p




Overview

Unit features

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Positive-guided relay outputs, diverse:
 - 4 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ Suitable for controlling the safety valves on a burner in accordance with EN 50156
- ▶ Status indicators
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ Max. 8 expansion modules and one fieldbus module can be connected to a base unit. A max. 6 of these may be the expansion modules PNOZ mo5p, PNOZ mo4p, PNOZ mo2p and PNOZ mo1p.

Front view

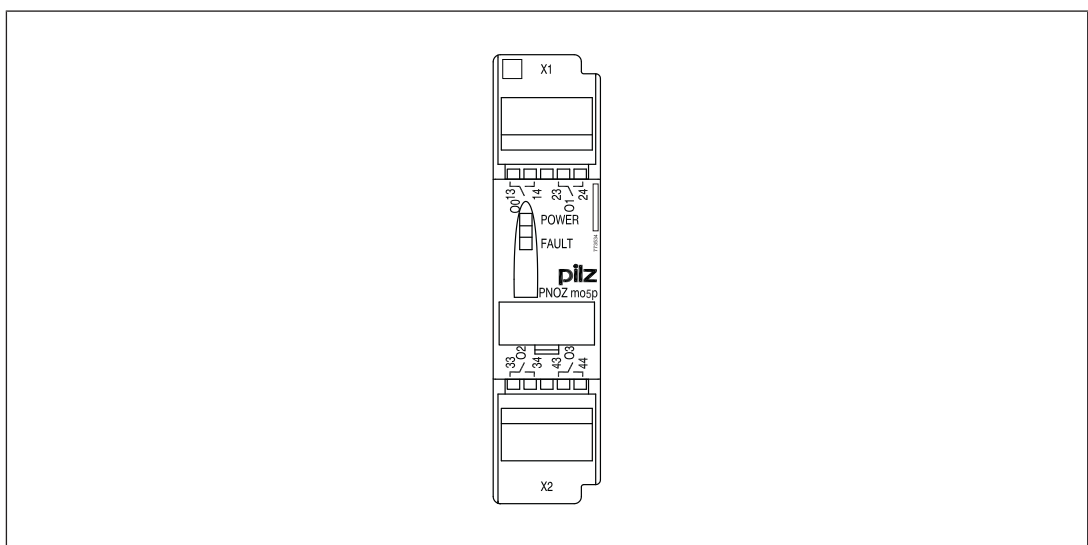

Output modules PNOZ mo5p

Key:

- ▶ O0 – O3
Relay outputs

Function description

Integrated protection mechanisms

The relay meets the following safety requirements:

- ▶ The circuit is redundant with built-in self-monitoring.
- ▶ The safety device remains effective in the case of a component failure.
- ▶ The relay contacts meet the requirements for protective separation through increased insulation compared with all other circuits in the safety system.
- ▶ A defective relay contact will be detected during switching.
- ▶ The relays are diverse in design.

Operation

The expansion module provides additional relay outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".


Output modules PNOZ mo5p

Block diagram

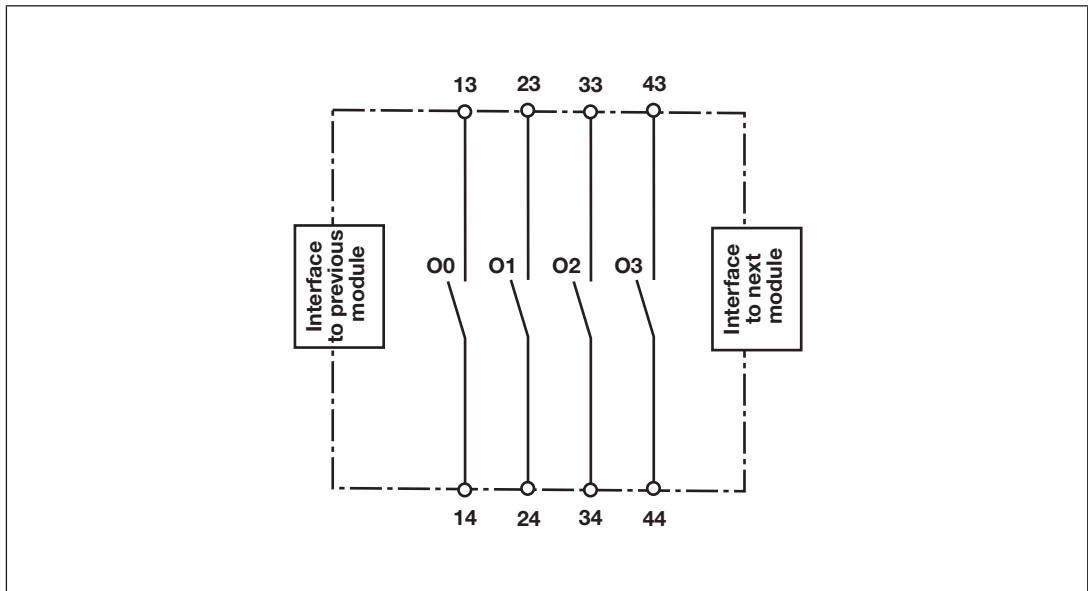

Installation

Dimensions in mm

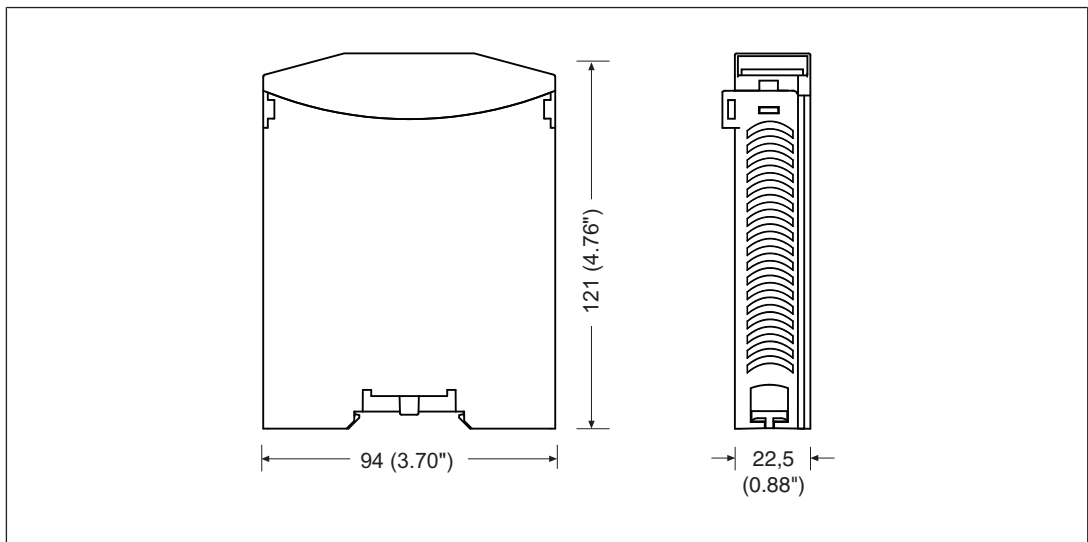

Output modules PNOZ mo5p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[218\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Connection

Redundant		
single		
Feedback loop Contacts from external contactors		


Output modules PNOZ mo5p

Connecting the safety valves on a burner in accordance with EN 50156

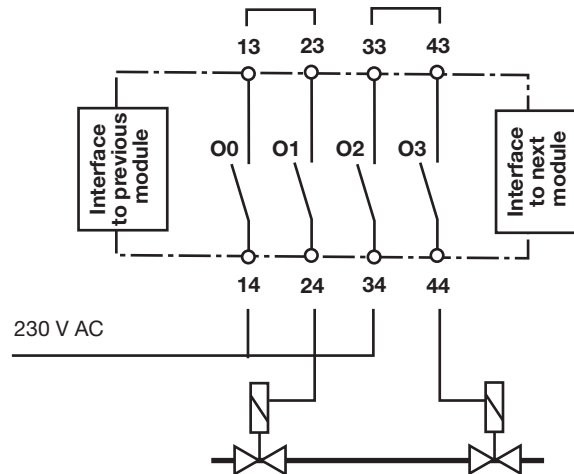

Output modules PNOZ mo5p

Connection example

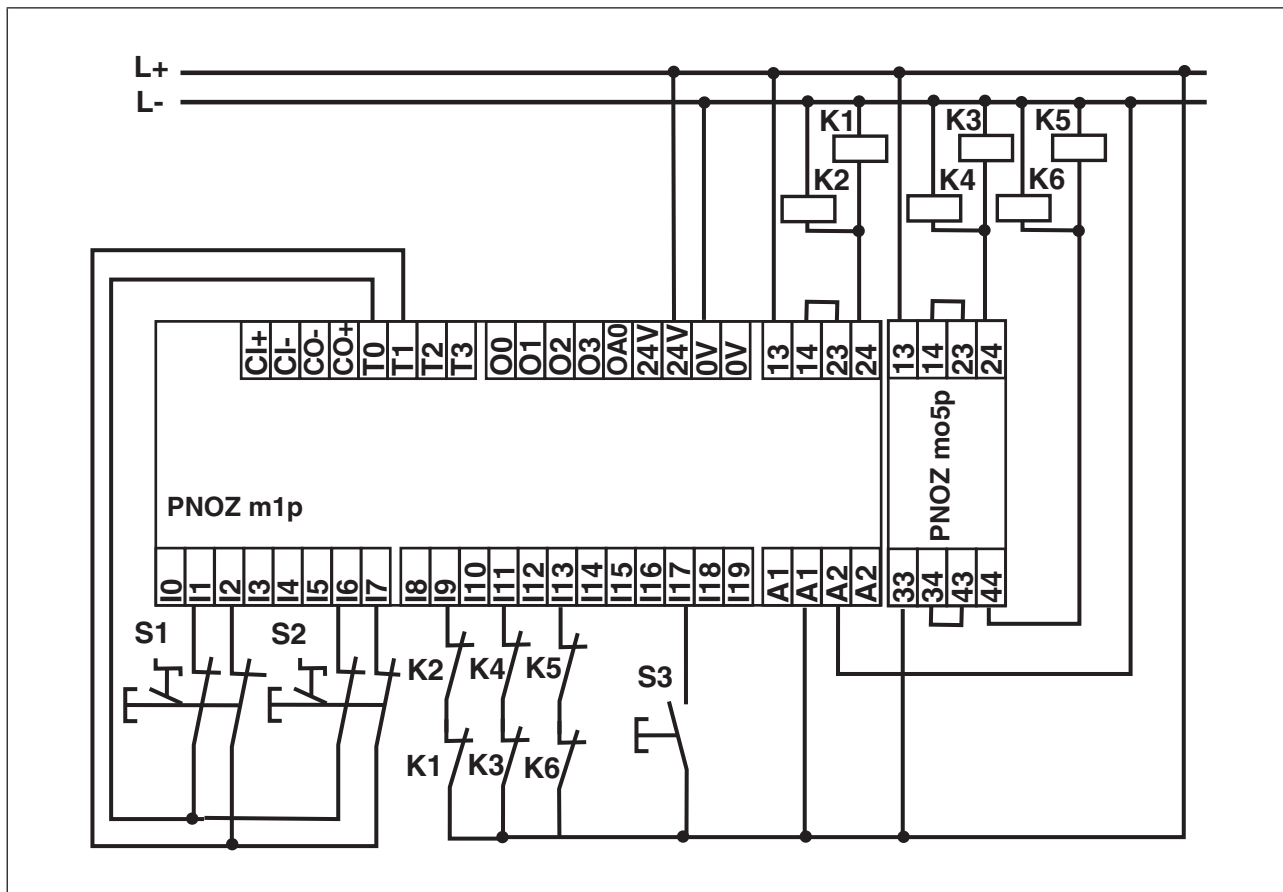

Output modules PNOZ mo5p

Technical details

General	
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	3,5 W
Status indicator	LED
Relay outputs	
Number of relay outputs	4
Utilisation category	
in accordance with the standard	EN 60947-4-1
Utilisation category of safety contacts	
AC1 at	240 V
Min. current	10 mA
Max. current	1,5 A
Max. power	360 VA
DC1 at	24 V
Min. current	10 mA
Max. current	6 A
Max. power	144 W
Utilisation category	
in accordance with the standard	EN 60947-5-1
Utilisation category of safety contacts	
AC15 at	230 V
Max. current	0,6 A
Max. power	138 W
DC13 (6 cycles/min) at	24 V
Max. current	0,4 A
Max. power	9 W
Airgap creepage between	
Relay contacts	3 mm
Relay contacts and other circuits	5,5 mm

Output modules PNOZ mo5p

Relay outputs

External contact fuse protection, safety contacts

in accordance with the standard	EN 60947-5-1
Blow-out fuse, quick	6 A
Blow-out fuse, slow	6 A
Circuit breaker 24V AC/DC, characteristic B/C	6 A

Switch-off delay	50 ms
------------------	--------------

Conventional thermal current	12 A
------------------------------	-------------

Times

Switch-on delay	5 s
-----------------	------------

Supply interruption before de-energisation	20 ms
--	--------------

Environmental data

Ambient temperature

in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C

Storage temperature

in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C

Climatic suitability

in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C

Condensation during operation	Not permitted
-------------------------------	----------------------

Max. operating height above SL	2000 m
--------------------------------	---------------

EMC	EN 61131-2
-----	-------------------

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage	250 V
--------------------------	--------------

Rated impulse withstand voltage	6 kV
---------------------------------	-------------

Output modules PNOZ mo5p

Environmental data

Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals (relay outputs)	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals (relay outputs)	0,5 Nm
Stripping length with screw terminals (relay outputs)	8 mm
Conductor cross section with spring-loaded terminals (relay outputs)	
1 core flexible without crimp connector	0,25 - 2,5 mm², 24 - 12 AWG
1 core flexible with crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals (relay outputs)	10 mm
Dimensions	
Height	94 mm
Width	22,5 mm
Depth	121 mm
Weight	198 g

Where standards are undated, the 2020-07 latest editions shall apply.

Output modules PNOZ mo5p

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
1-channel	PL c	Cat. 1	-	2,90E-08	-	2,60E-03	20
2-channel	PL e	Cat. 4	SIL CL 3	3,00E-10	SIL 3	5,20E-07	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

The PFH value depends on the switch frequency and the load of the relay output.

If the service life graphs are not accessible, the stated PFH value can be used irrespective of the switch frequency and the load, as the PFH value already considers the relay's B10d value as well as the failure rates of the other components.

Output modules PNOZ mo5p

Supplementary data

Service life graph for the relay contacts

The service life graphs indicate the number of cycles from which failures due to wear must be expected. The wear is mainly caused by the electrical load; the mechanical load is negligible.

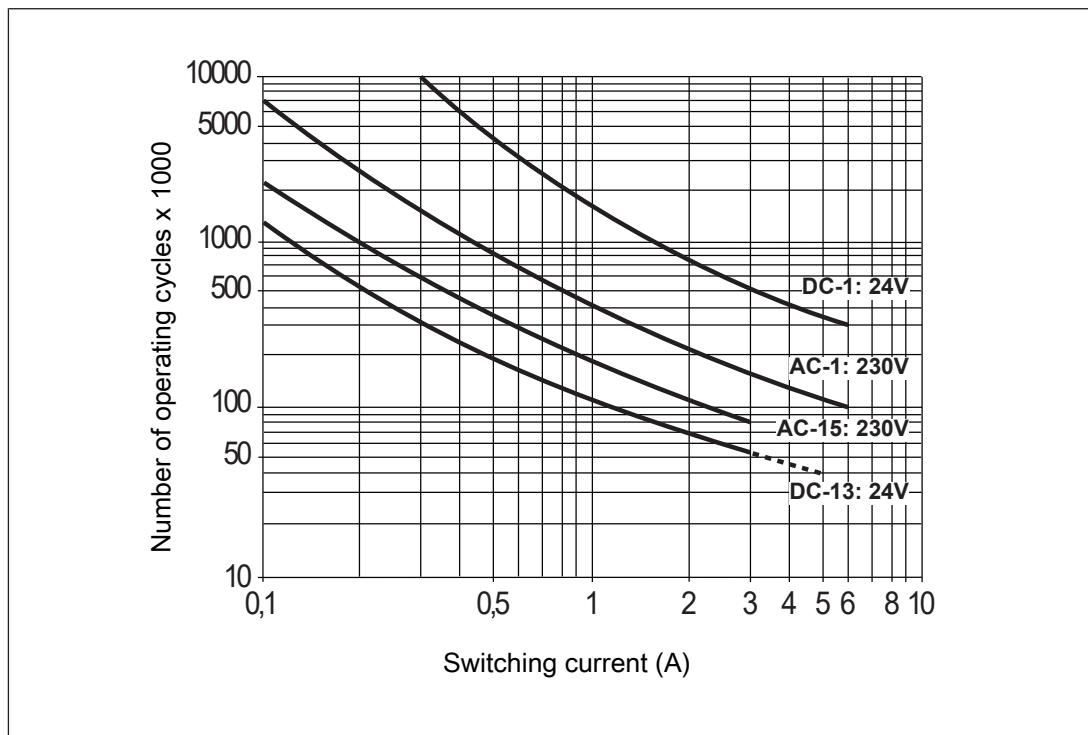


Fig.: Service life graphs at 24 VDC and 230 VAC

Output modules PNOZ mo5p

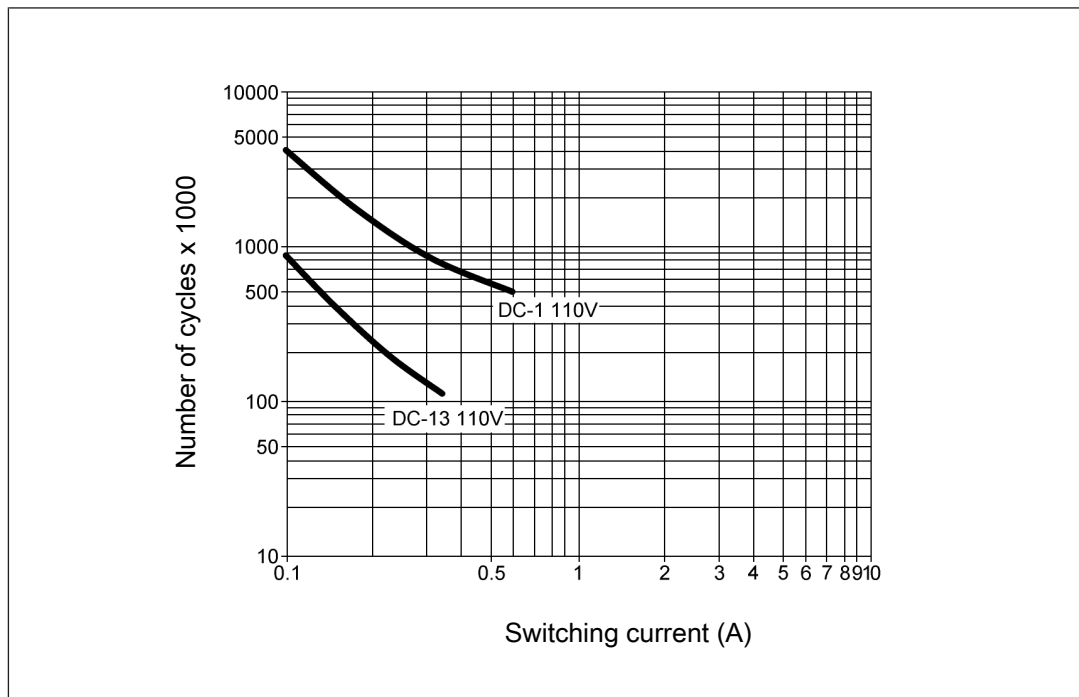


Fig.: Service life graphs at 110 VDC

Example

- ▶ Inductive load: 0.2 A
- ▶ Utilisation category: AC15
- ▶ Contact service life: 1 000 000 cycles

Provided the application to be implemented requires fewer than 1 000 000 cycles, the PFH value (see [Technical details \[218\]](#)) can be used in the calculation.

To increase the service life, sufficient spark suppression must be provided on all relay contacts. With capacitive loads, any power surges that occur must be noted. With DC contactors, use flywheel diodes for spark suppression.

We recommend you use semiconductor outputs to switch 24 VDC loads.

Output modules PNOZ mo5p

Order reference

Product

Product type	Features	Order no.
PNOZ mo5p	Expansion module, 2 or 4 relay outputs, positive-guided, diverse	773534

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783536
Set screw terminals	1 set of screw terminals	793536

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Output modules PNOZ mc1p



Overview

Unit features

Application of the product PNOZ mc1p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 16 auxiliary outputs
- ▶ Status indicators
- ▶ Coated version:
Increased environmental requirements (see [Technical details \[📖 229\]](#))
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units that can be connected.

Output modules PNOZ mc1p

Front view

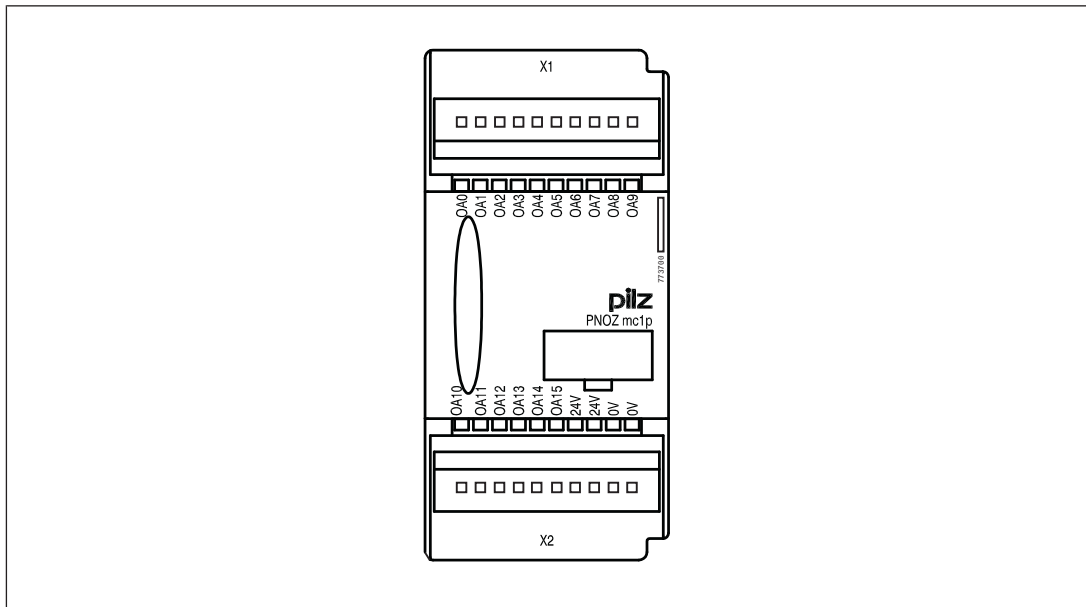

Function description

Functions


The expansion module operates as a signal module with non-safety-related outputs.

The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.


Output modules PNOZ mc1p

Block diagram

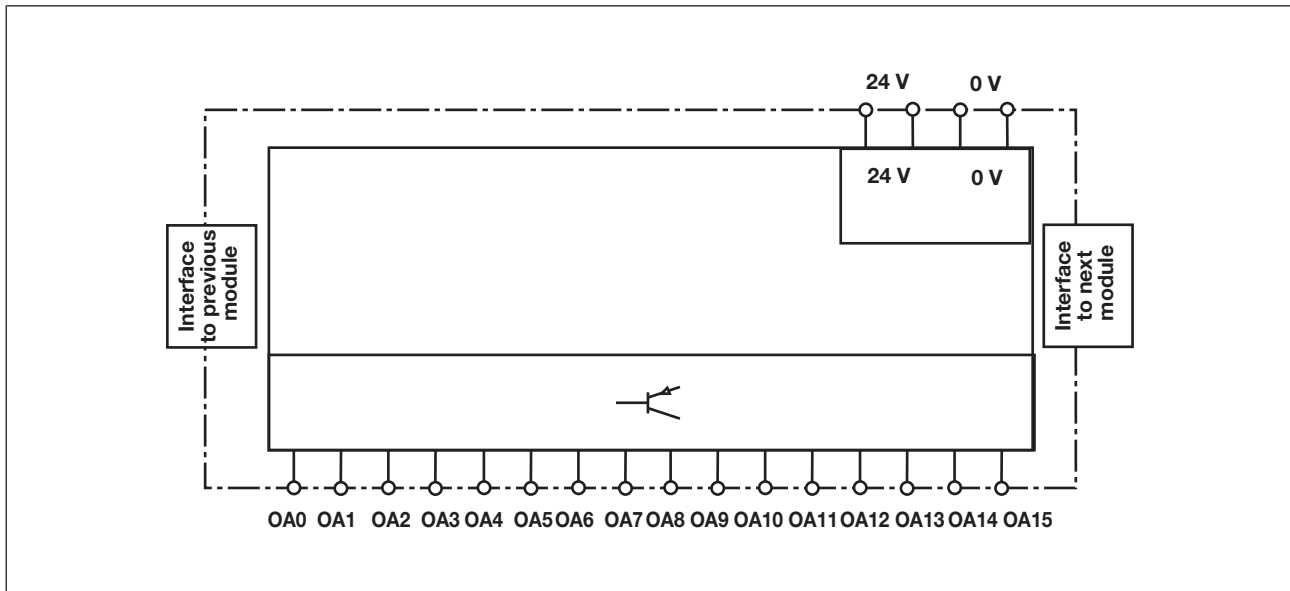

Installation

Dimensions

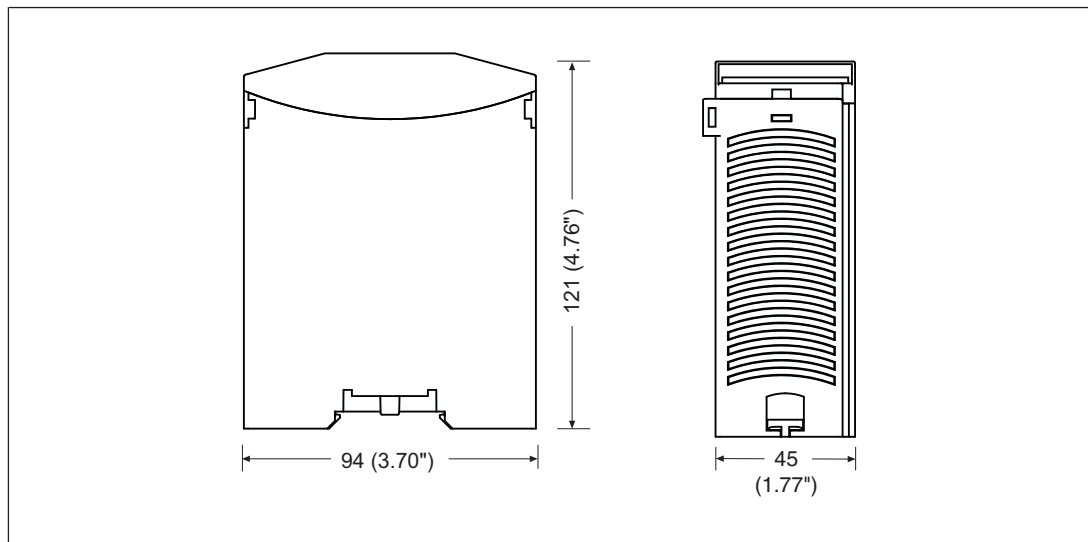

Output modules PNOZ mc1p

Commissioning


General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator.



Please note:

- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ Outputs OA0 to OA15 are auxiliary outputs using semiconductor technology.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Information given in the [Technical details \[229\]](#) must be followed.

Connection

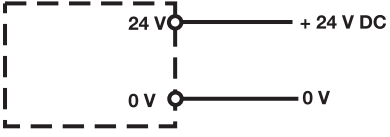Supply voltage	AC	DC
	/	

Supply voltage

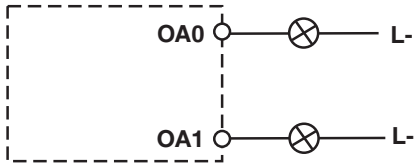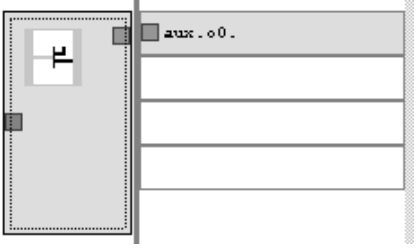		
--	--	---

Semiconductor outputs

Output modules PNOZ mc1p

Technical details

General	773700	773705
Certifications	CE, EAC, KOSHA, UKCA, cULus Listed	CE, EAC, KOSHA, UKCA, cULus Listed
Electrical data	773700	773705
Supply voltage		
for	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192 W	192 W
Potential isolation	Yes	Yes
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	0,6 W	0,6 W
Status indicator	LED	LED
Semiconductor outputs (standard)	773700	773705
Quantity	16	16
Switching capability		
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Power	12 W	12 W
Max. permitted overall performance of semiconductor outputs at an ambient temperature of > 50 °C	–	144 W
Galvanic isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
Times	773700	773705
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms

Output modules PNOZ mc1p

Environmental data	773700	773705
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	–
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation		
	Not permitted	Short-term
Max. operating height above SL		
	2000 m	2000 m
EMC		
	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g
Corrosive gas check		
SO ₂ : Concentration 10 ppm, duration 10 days, passive	–	DIN V 40046-36
H ₂ S: Concentration 1 ppm, duration 10 days, passive	–	DIN V 40046-37
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage		
	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773700	773705
Mounting position	horizontally on mounting rail	horizontally on mounting rail

Output modules PNOZ mc1p

Mechanical data	773700	773705
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm
Stripping length with screw terminals	7 mm	7 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94 mm	94 mm
Width	45 mm	45 mm
Depth	121 mm	121 mm
Weight	164 g	166 g

Where standards are undated, the 2020-07 latest editions shall apply.

Output modules PNOZ mc1p

Order reference

Product

Product type	Features	Order no.
PNOZ mc1p	Expansion module, 16 semiconductor outputs, standard	773700
PNOZ mc1p coated version	Expansion module, 16 semiconductor outputs, standard, coated version	773705

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783700
Set screw terminals	1 set of screw terminals	793700

Link modules PNOZ ml1p




Overview

Unit features

Application of the product PNOZ ml1p:


Link module to safely connect two configurable small control systems PNOZmulti.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Point-to-point connection via 4-core shielded and twisted-pair cable
- ▶ 32 virtual inputs and 32 virtual outputs
- ▶ Status indicators
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ Max. 4 PNOZ ml1p units can be connected to the base unit
- ▶ LEDs for
 - Operating state
 - Error
 - Connection status
- ▶ Coated version:
Increased environmental requirements (see [Technical details](#) [ 240])

Link modules PNOZ ml1p

Front view

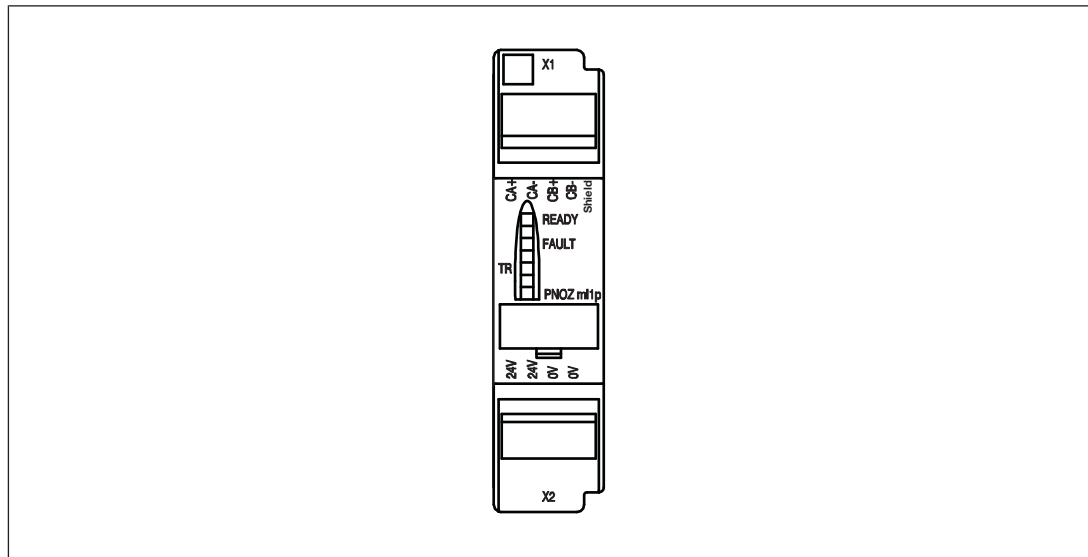

Key:

- ▶ 0 V, 24 V:
Supply connections
- ▶ CA+, CA-, CB+, CB-:
Connections for 2 expansion modules PNOZ ml1p
- ▶ Shield:
Connection for the cable shield

Function Description

Functions

The PNOZ ml1p link module is used to safely transfer the input information from 32 virtual inputs and 32 virtual outputs between two PNOZmulti systems. One link module is assigned to each base unit. Data is exchanged cyclically.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

Link modules

PNOZ ml1p

Data exchange:

- ▶ Data is exchanged cyclically.
- ▶ After the end of a PNOZmulti cycle, each base unit sends its output data to its link module. This output data is immediately sent to the link module on the other base unit.
- ▶ At the same time, the base unit reads the input data from the link module.

Connection of multiple base units:

Any number of base units can be connected via PNOZ ml1p link modules. Two PNOZ ml1p are required for the connection between two base units. However, only a maximum of 4 link modules may be connected to any one base unit.

Data transmission time:

The data transmission time t_{BUS} is the time between the virtual output at base unit 1 being set and the virtual input at base unit 2 becoming available (see [Technical details \[📖 240\]](#)).

The maximum reaction time for series connection of n base units

This is the time between the activation of a safety function at the input on one base unit and the switching of an output on the connected base unit.

- ▶ The maximum reaction time t_{SUM} includes the following times:

t_{ON} : Input delay = 4 ms

t_{COND} : Switch-off delay of semiconductor output = 30 ms

t_{REL} : Switch-off delay of relay output = 50 ms

t_{BUS} : Data transmission time between two base units = 35 ms

n: Number of connections between base units

The maximum reaction time t_{SUM} for series connection of n base units

- ▶ On semiconductor outputs:

$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{COND}}$$

- ▶ On relay outputs:


$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{REL}}$$

- ▶ Input delay and switch-off delay are only included once in the reaction time. The data transmission time between the link modules is multiplied by the number of connections.
- ▶ Please refer to the [Connection examples \[📖 239\]](#).

Link modules PNOZ ml1p

Virtual inputs and outputs:


Inputs and outputs for both PNOZmulti systems are assigned in the PNOZmulti Configurator. Inputs and outputs with the same number are assigned to each other, e.g. output o5 on one PNOZmulti system to input i5 on the other PNOZmulti system.

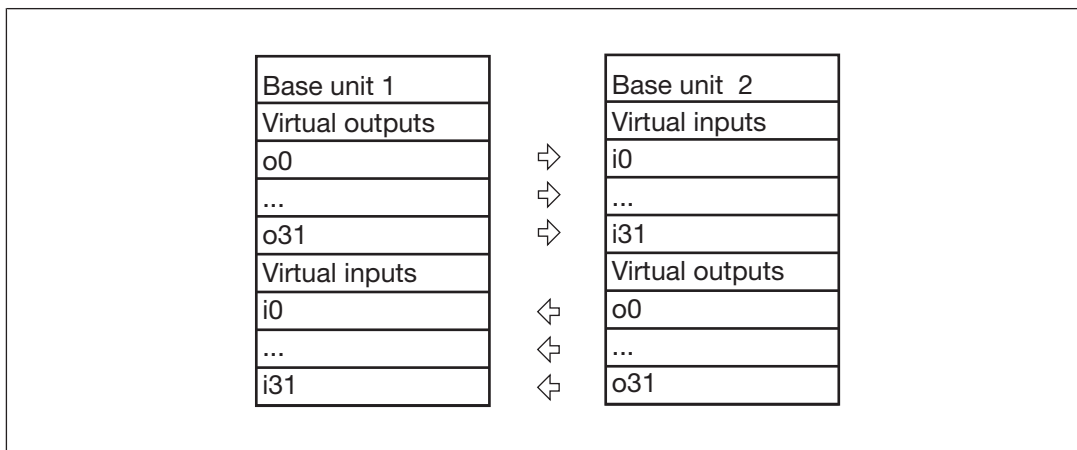

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Block diagram

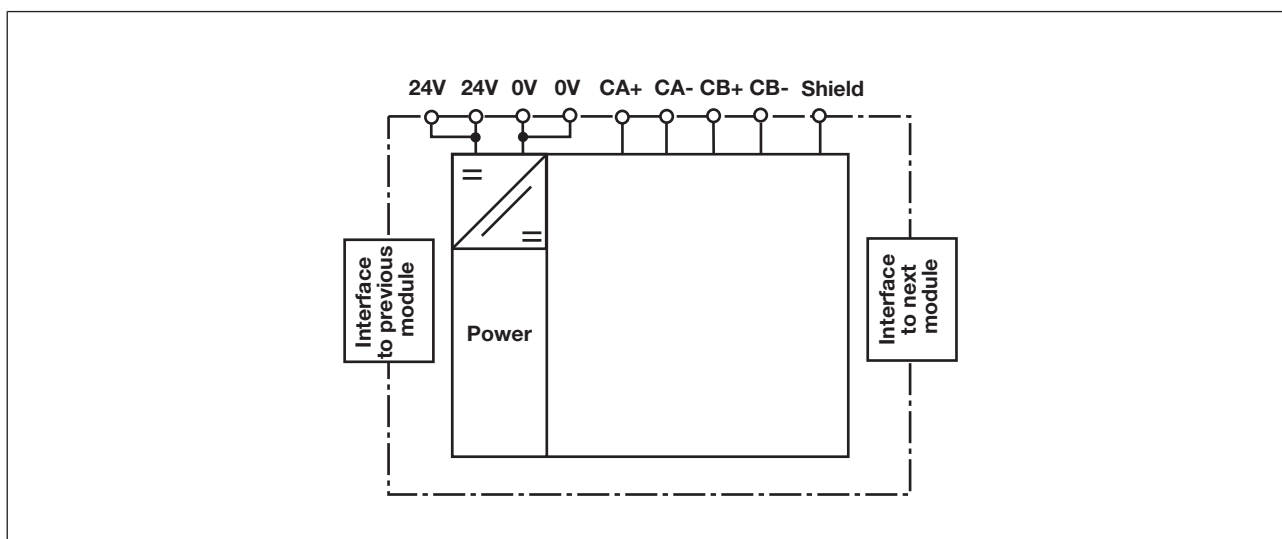


Link modules

PNOZ ml1p

Installation

Dimensions in mm

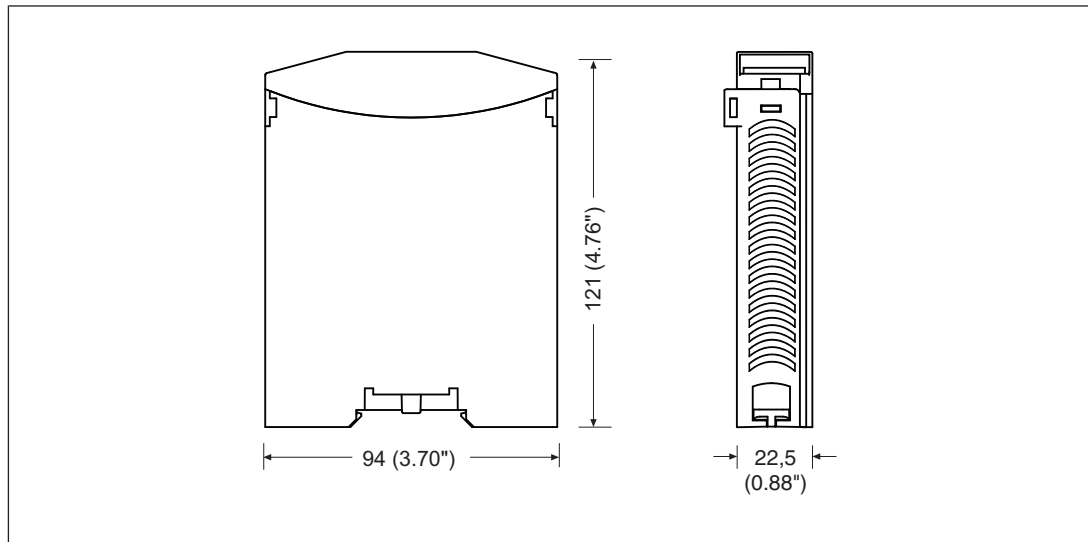

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[240\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ The max. cable length between two link modules may be max. 1000 m.
Please note:
When connecting to a PNOZ ml1p with a version < 2.0, the cable length may be max. 100 m. The reduced cable length must be configured in the PNOZmulti Configurator.
- ▶ Connect the inputs and outputs from two PNOZ ml1p with a 4-core shielded cable. The cables must be twisted in pairs.
- ▶ Note the crossover cabling, e.g. CA+ with CB+.
- ▶ The cables must be classified into a minimum of Category 5 in accordance with ISO/IEC 11801.


Link modules PNOZ ml1p

- ▶ You can use ready-made cable from Pilz to connect two PNOZ ml1p. The plug-in connection terminals are either designed as cage clamp terminals or screw terminals (see order reference).
- ▶ Cable shield:
 - Please note: Always connect the shield to both link modules (**Shield** terminal).
 - The shield of the connection cable may only be connected to the **Shield** terminals on both PNOZ ml1p. Do **not** connect the shield to the equipotential bonding bar, for example.

Connection

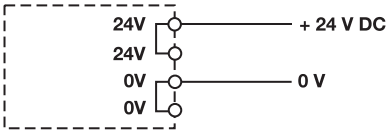Supply voltage	AC	DC
	/	

Connection of two PNOZmulti base units via the module PNOZ ml1p

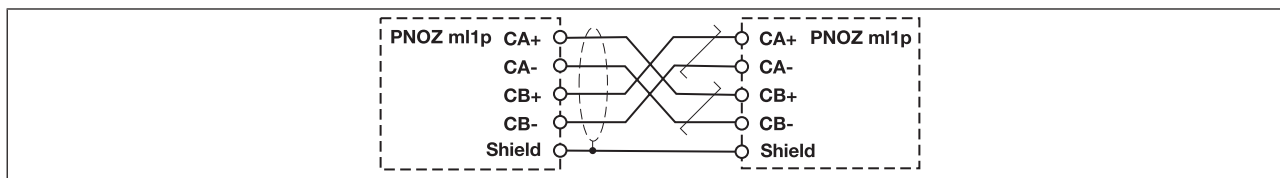

Link modules PNOZ ml1p

Connection examples

Example: Series connection of 3 base units

Reaction time t_{SUM} between base unit Base 1 and Base 2:

Input delay t_{ON} at I3 and I6 + data transmission time $1 * t_{BUS}$ through link module + switch-off delay t_{COND} of the semiconductor output at O0

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$


$$t_{SUM} = 4 \text{ ms} + (1 * 35 \text{ ms}) + 30 \text{ ms} = 69 \text{ ms}$$

Reaction time t_{SUM} between base unit Base 1 and Base 3:

Input delay t_{ON} at I3 and I6 + data transmission time $2 * t_{BUS}$ through link modules + switch-off delay t_{COND} of the semiconductor output at O1

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$

$$t_{SUM} = 4 \text{ ms} + (2 * 35 \text{ ms}) + 30 \text{ ms} = 104 \text{ ms}$$

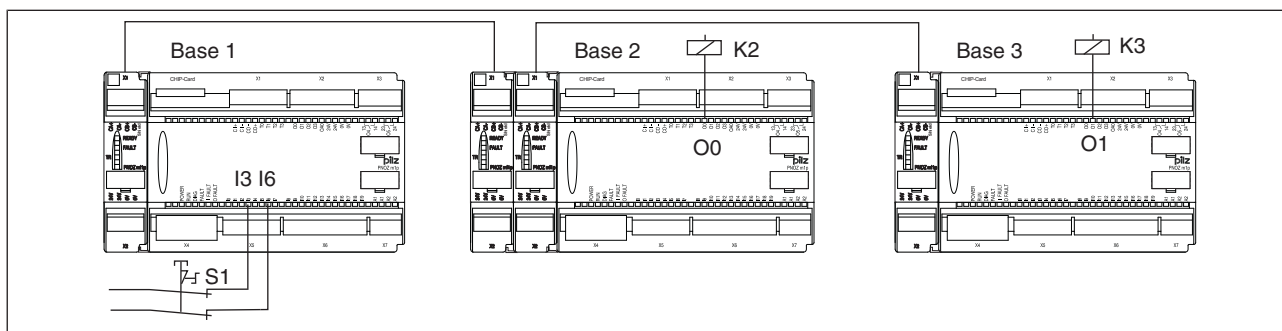


Link modules PNOZ ml1p

Example: Connection of 5 base units

The reaction times are calculated in the same way as application example 1. After pressing S1 on Base 1, the semiconductor outputs switch after the following reaction times t_{SUM} :

- O0 on Base 1: 69 ms
- O1 on Base 3: 104 ms
- O0 on Base 4: 139 ms
- O0 on Base 5: 104 ms

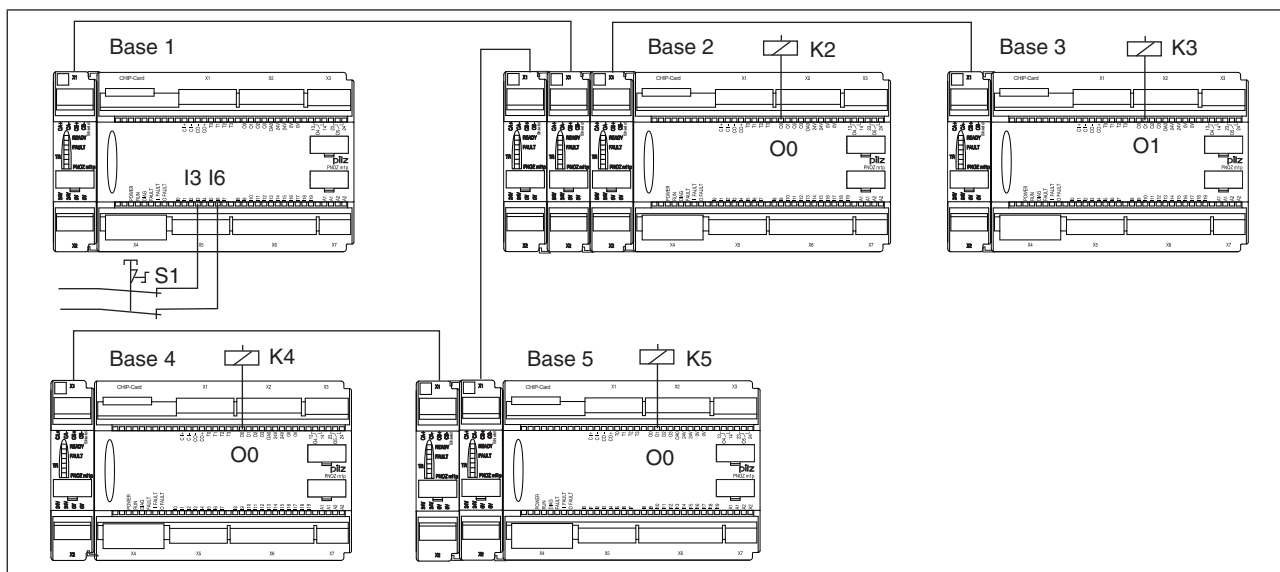

Technical details

General	773540	773545
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773540	773545
Supply voltage		
for	Module supply	Module supply
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	5 W	5 W
Residual ripple DC	5 %	5 %
Status indicator	LED	LED
Virtual inputs	773540	773545
Number of virtual inputs	32	32
Virtual outputs	773540	773545
Number of virtual outputs	32	32

Link modules PNOZ ml1p

Times	773540	773545
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms
Max. data transmission time	35 ms	35 ms
Environmental data	773540	773545
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	5 - 500 Hz
Acceleration	1g	1g
Broadband noise		
in accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54

Link modules PNOZ ml1p

Mechanical data	773540	773545
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Max. cable length between two link modules	1 km	1 km
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm
Stripping length with screw terminals	7 mm	7 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm ² , 24 - 16 AWG	0,25 - 1,5 mm ² , 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm ² , 24 - 20 AWG	0,25 - 0,75 mm ² , 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	121 mm	121 mm
Weight	129 g	135 g

Where standards are undated, the 2020-07 latest editions shall apply.

Link modules PNOZ ml1p

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
2-channel	PL e	Cat. 4	SIL CL 3	8,82E-09	SIL 3	3,86E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Link modules PNOZ ml1p

Order reference

Product

Product type	Features	Order no.
PNOZ ml1p	Link module	773540
PNOZ ml1p coated version	Link module, coated version	773545

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Cable

Product type	Features	Order no.
PNOZ mli1p 5m screw	Cable, 5-pin, shielded, screw terminal, 5 m	773890
PNOZ mli1p 10m screw	Cable, 5-pin, shielded, screw terminal, 10 m	773891
PNOZ mli1p 50m screw	Cable, 5-pin, shielded, screw terminal, 50 m	773892
PNOZ mli1p 5m spring	Cable, 5-pin, shielded, spring-loaded terminal, 5 m	773893
PNOZ mli1p 10m spring	Cable, 5-pin, shielded, spring-loaded terminal, 10 m	773894
PNOZ mli1p 50m spring	Cable, 5-pin, shielded, spring-loaded terminal, 50 m	773895
PNOZ mli1p 1.5 m spring	Cable, 5-pin, shielded, spring-loaded terminal, 1.5 m	773896
PNOZ mli1p 1.5.m screw	Cable, 5-pin, shielded, screw terminal, 1.5 m	773897
SafetyNET p cable	SafetyNET p cable, 1 - 500 m	380000

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783400
Set screw terminals	1 set of screw terminals	793400

Link modules PNOZ ml2p



Overview

Unit features

Application of the product PNOZ ml2p:

Link module to safely connect decentralised input/output modules to a configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Max. 4 PNOZ ml2p can be connected to the base unit
- ▶ Max. 4 decentralised modules PDP67 F 8DI ION can be connected to the link module PNOZ ml2p
- ▶ Plug-in connection terminals (either cage clamp terminal or screw terminal)
- ▶ LEDs for
 - Operating status
 - Fault
 - Connection status
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Link modules

PNOZ ml2p

Front view

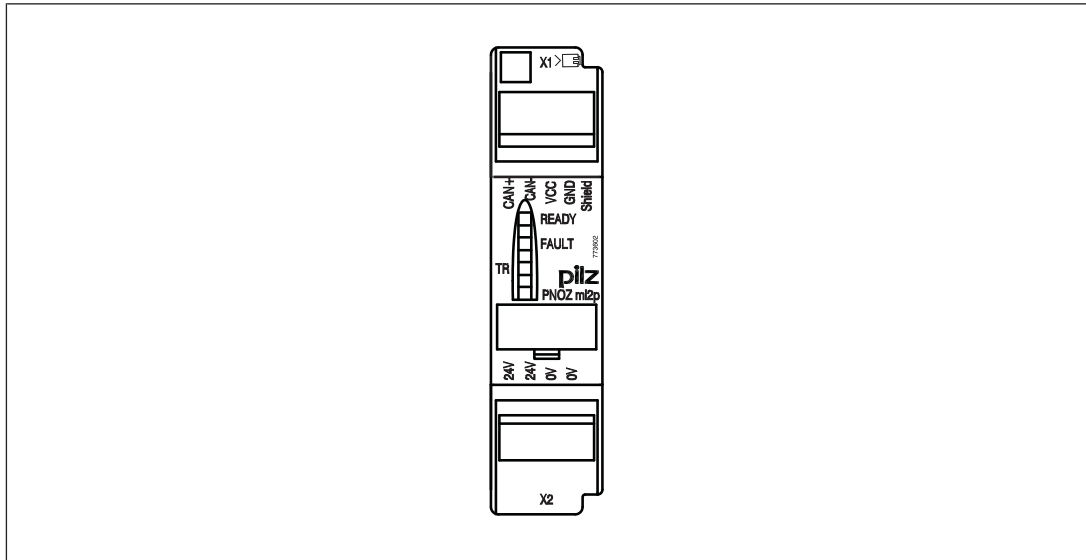

Key:

- ▶ 0 V, 24 V:
Supply connections
- ▶ CAN+, CAN-, VCC, GND:
Connection for decentralised modules
- ▶ Shield:
Connection for the cable shield

Function description

Operation

The link module PNOZ ml2p is used to safely transfer the input information from decentralised modules to the safety system PNOZmulti.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

Data exchange:

- ▶ Communication with the decentralised modules is via a safe data link.


Link modules PNOZ ml2p

- ▶ The link module PNOZ ml2p reads the input information from the decentralised modules as part of each cycle and then forwards it to the base unit.
- ▶ At the end of a PNOZmulti cycle, the base unit sends its output data to its link module. This output data is immediately sent to the decentralised modules.

Linking several decentralised modules:

- ▶ A maximum of 4 link modules can be connected to a PNOZmulti base unit.
- ▶ A maximum of 4 decentralised modules can be connected to a link module PNOZ ml2p.
- ▶ If a decentralised module receives data intended for a different decentralised module that is connected, the data is forwarded without being processed.

Block diagram

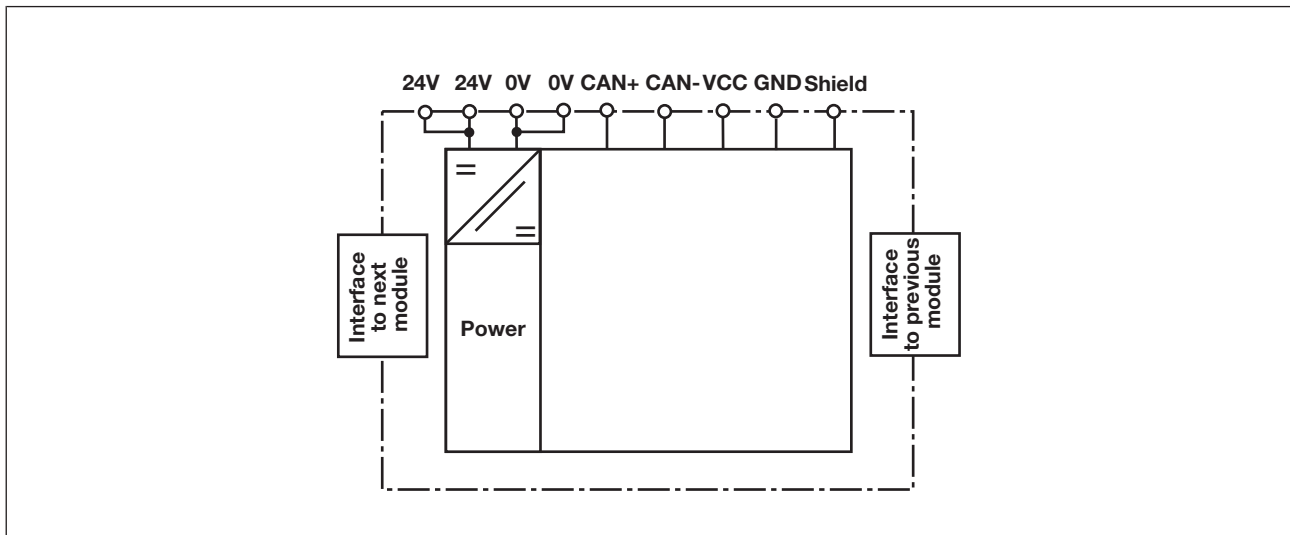


Link modules

PNOZ ml2p

Installation

Dimensions in mm

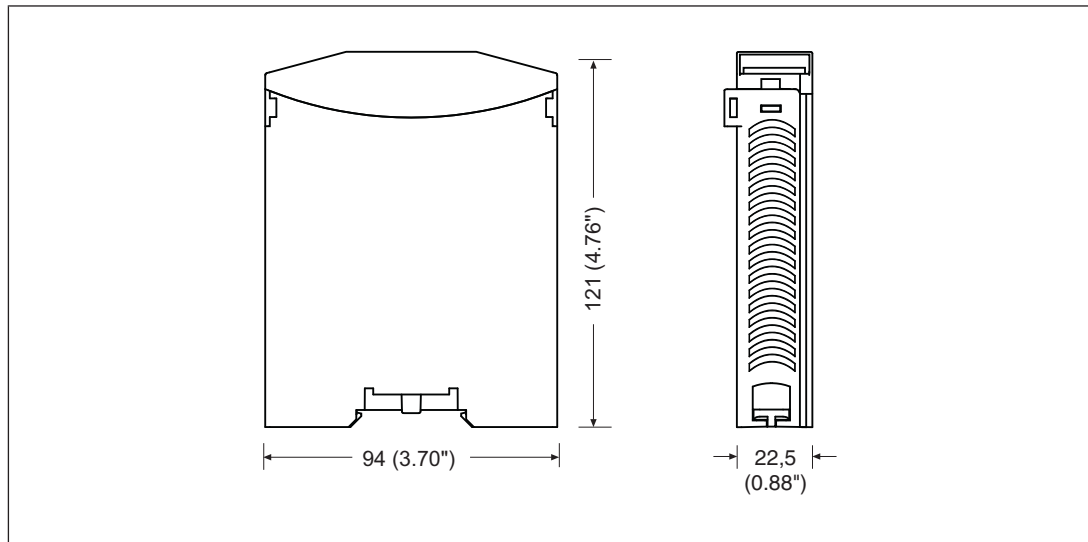

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[253\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Please refer to the technical details for information on the maximum cable length. Please also read the section entitled [Voltage drop \[251\]](#).
- ▶ With a cable length of 30 m or above, or in environments with strong interferences, shielded cables must be used.
- ▶ If there are signal interferences/EMC problems that are to be expected or present, we recommend that you use a shielded cable from the beginning. In addition, you can place the braided shield of the cables directly next to the device via a shielded terminal to the functional earth (mounting rail).

Link modules PNOZ ml2p

- ▶ Pilz pre-assembled cables can be used to connect the decentralised modules (see [Order references](#) [📖 256]).
- ▶ The plug-in connection terminals are either designed as cage clamp terminals or screw terminals (see [Order references](#) [📖 256]).

Insulation voltage test


The product PNOZ ml2p is connected to functional earth  via protection elements on the supply voltage. Insulation voltage tests are only possible with voltages up to ca. 42 V.

Preparing for operation

Download modified project to the PNOZmulti safety system


As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Connection

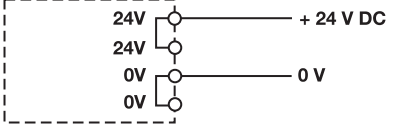Supply voltage	AC	DC
	/	

Supply voltage


Connection to a decentralised input module PDP67

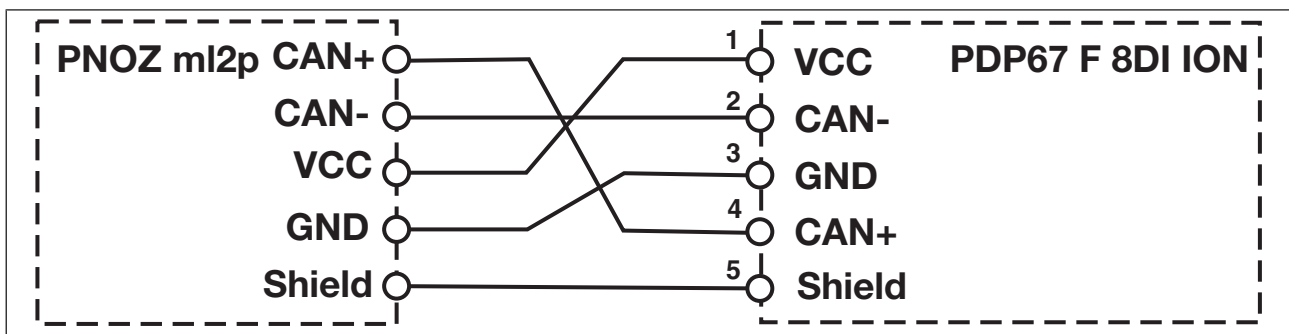

Link modules

PNOZ ml2p


Connection when using the PSS SB BUSCABLE LC in conjunction with a Pilz self-assembly "PSS67 M12 connector" (see order reference in the Technical Catalogue)

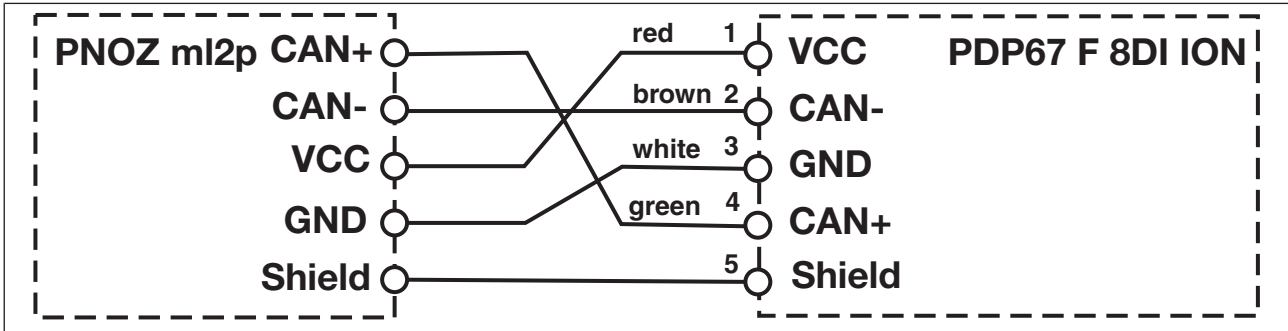

Link modules PNOZ ml2p

Series connection of 4 decentralised modules

You can connect up to 4 decentralised modules in series to a PNOZmulti link module.

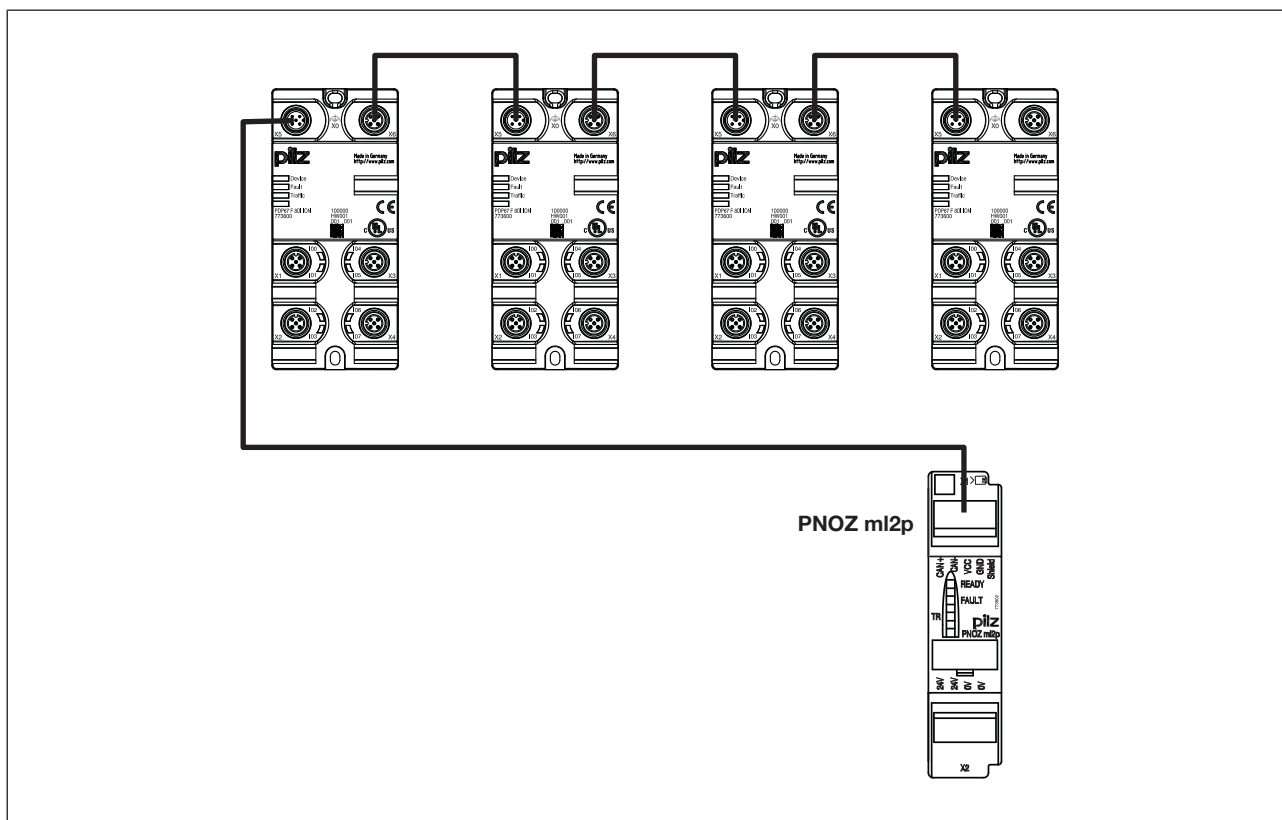

Voltage drop

The max. cable length depends on the voltage drop in the supply voltage cables. The level of voltage drop is determined by the:

- ▶ Cable resistance on the supply voltage cables
- ▶ Operating current of the modules
- ▶ Load on the modules

To increase the max. cable length, the input voltage can be permanently increased by the voltage tolerance (see Technical Details).

Link modules PNOZ ml2p


Guidelines for various cable types

Cable type	Voltage drop per 10 m and per 100 mA
PSS SB BUSCABLE LC	0.1 V
Sensor cable 0.25 mm ²	0.15 V
Sensor cable 0.34 mm ²	0.11 V
Sensor cable 0.5 mm ²	0.07 V

Calculation example

- ▶ The PSS SB BUSCABLE LC is used in accordance with the pin assignment in section 6.2.2.

Voltage drop per 10 m and per 100 mA: 0.1 V

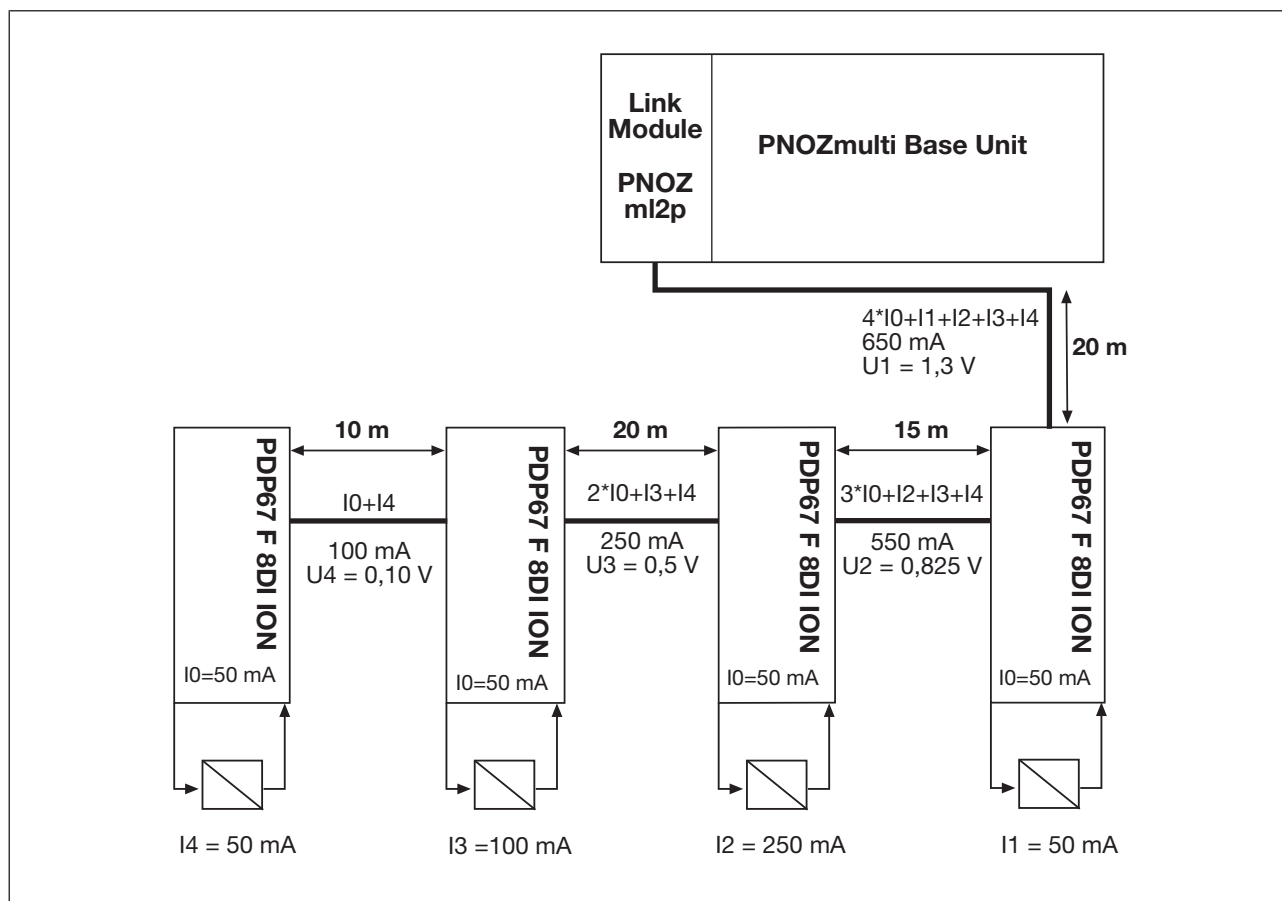

Key:

- ▶ I0: Module's consumption.
- ▶ I1 ... I5: Load current taken from the module
- ▶ U1 ... U4: Voltage drop on the respective connection path

Link modules PNOZ ml2p

Total voltage drop from the link module PNOZ ml2p to the final PDP67 F 8DI ION:

$$U_{\text{total}} = U_1 + U_2 + U_3 + U_4$$

$$U_{\text{total}} = 1.3 \text{ V} + 0.825 \text{ V} + 0.5 \text{ V} + 0.10 \text{ V} = 2.725 \text{ V}$$

Technical details

General	
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	101 W
Output of external power supply (DC) at no load	5 W
Residual ripple DC	5 %
Status indicator	LED
Inputs	
Maximum input delay	15 ms
Semiconductor outputs	
Switch-off delay	35 ms
Test pulse outputs	
Maximum output current, decentralised module supply	4 A
Short circuit protection of decentralised module supply	Yes
Times	
Switch-on delay	5 s
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted

Link modules PNOZ ml2p

Environmental data

Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Max. cable length unshielded	30 m
Max. cable length shielded	100 m
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG

Link modules PNOZ ml2p

Mechanical data

Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94 mm
Width	22,5 mm
Depth	121 mm
Weight	133 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
–	PL e	Cat. 4	SIL CL 3	5,35E-09	SIL 3	3,30E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Link modules PNOZ ml2p

Order reference

Products

Product type	Features	Order no.
PNOZ ml2p	Link module	773602

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Adapter

Product type	Features	Order no.
PSEN ma adapter	Adapter for connection to safety switch PSENmag	380300
PSEN cs adapter	Adapter for connection to safety switch PSENcode	380301
PSEN sl adapter	Adapter for connection to safety switch PSENSlock	380325

Cable

Product type	Features	Order no.
PSS SB BUSCABLE LC	Cable, shielded, 1 - 100 m	311074
PSS67 I/O Cable	Cable, 1 - 30 m	380320
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 3 m	380200
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 5 m	380201
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 10 m	380202
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 30 m	380203
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 3 m	380204
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 5 m	380205
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 10 m	380206

Link modules PNOZ ml2p

Product type	Features	Order no.
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 30 m	380207
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 3m	380208
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 5 m	380209
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 10 m	380210
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 20 m	380220
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 30 m	380211
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 3m	380212
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 5 m	380213
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 10 m	380214
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 30 m	380215
PSEN op cable axial M12 5-pole 3m	Cable, straight, M12, 5-pin, open-ended socket, 3 m	630310
PSEN op cable axial M12 5-pole 5m	Cable, straight, M12, 5-pin, open-ended socket, 5 m	630311
PSEN op cable axial M12 5-pole 10m	Cable, straight, M12, 5-pin, open-ended socket, 10 m	630312
PSEN op cable axial M12 5-pole 20m	Cable, straight, M12, 5-pin, open-ended socket, 20 m	630298
PSEN op cable axial M12 5-pole 30m	Cable, straight, M12, 5-pin, open-ended socket, 30 m	630297

Link modules PNOZ ml2p

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783400
Set screw terminals	1 set of screw terminals	793400

Connectors

Product type	Features	Order no.
PSS67 M12 connector	Connector, M12, straight, 5-pin, A-coded	380308
PSS67 M12 connector	Socket, M12, straight, 5-pin, A-coded	380309
PSS67 M12 connector	Connector, M12, angled, 5-pin, A-coded	380310
PSS67 M12 connector	Socket, M12, angled, 5-pin, A-coded	380311
PSS67 M8 connector	Connector, M8, straight, 4-pin	380316
PSS67 M8 connector	Socket, M8, straight, 4-pin	380317
PSS67 M8 connector	Connector, M8, angled, 4-pin	380318
PSS67 M8 connector	Socket, M8, angled, 4-pin	380319

Speed monitors PNOZ ms1p



Overview

Unit features

Application of the product PNOZ ms1p:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:


- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
 - 1 incremental encoder
or
 - 2 proximity switches
or
 - 1 incremental encoder and 1 proximity switch
- ▶ Measured variables:
 - Standstill
 - Speed (8 values can be set)
 - Direction of rotation
- ▶ Axis types, input device types and reset mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
 - Supply voltage
 - Incremental encoder
 - Proximity switch
 - Axis status, standstill and excess speed
 - Faults on the system
- ▶ Proximity switch connection technology: Plug-in connection terminals (either cage clamp terminal or screw terminal)

Speed monitors

PNOZ ms1p

- ▶ Connection technology incremental encoder:
Female RJ45 connector
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

Front view

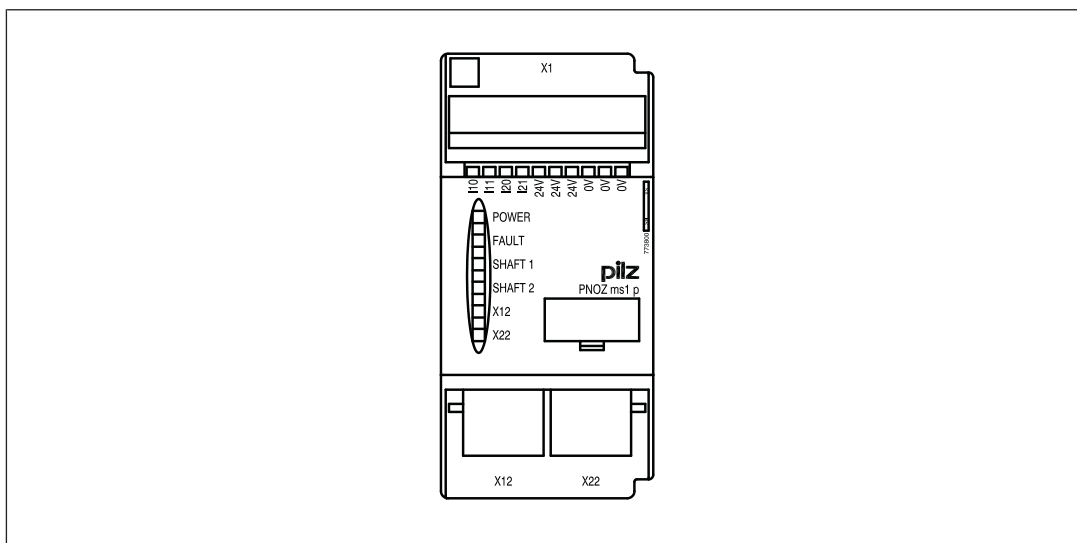

Key:

- ▶ X1:
 - I10, I11:
connection terminals for proximity switch at axis 1
 - I20, I21:
connection terminals for proximity switch at axis 2
 - 0 V, 24 V:
supply connections
- ▶ X12:
 - female connector for the connection of an incremental encoder at axis 1
- ▶ X22:
 - female connector for the connection of an incremental encoder at axis 2
- ▶ LEDs:
 - POWER
 - FAULT
 - SHAFT 1
 - SHAFT 2
 - X12

Speed monitors PNOZ ms1p

– X22


Function description

Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the safety circuit loaded, the values can be transferred from the base unit, e.g. to a relay output on the safety system. Incremental encoders and/or proximity detectors can be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

Block diagram

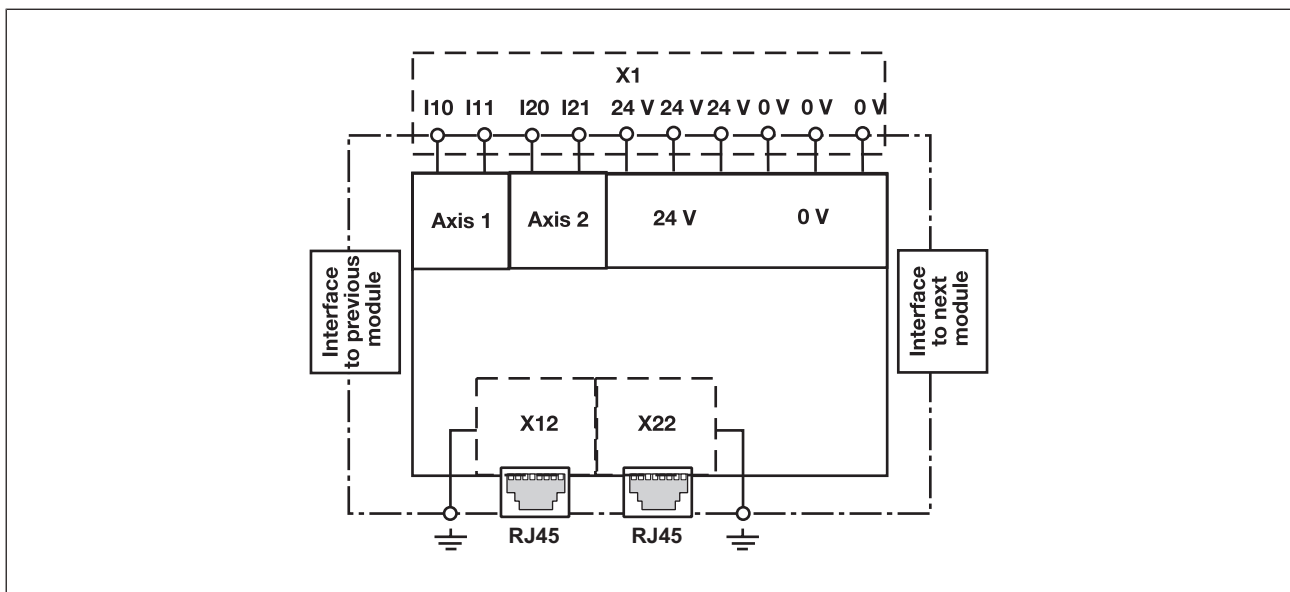

Input device types

Proximity switch

Requirements of the proximity switches

- ▶ Only "pnp" type proximity switches may be used (N/O contact, switching to positive).
- ▶ The proximity switches require a 24 VDC supply.
- ▶ The proximity switches must be fitted so that at least one is always activated (carries a high signal).
- ▶ The proximity switches must be fitted so that the recorded signals overlap.

Speed monitors

PNOZ ms1p

- ▶ When monitoring with proximity switches we recommend you use proximity switches with hysteresis in order to prevent bounce and therefore incorrect measurements.

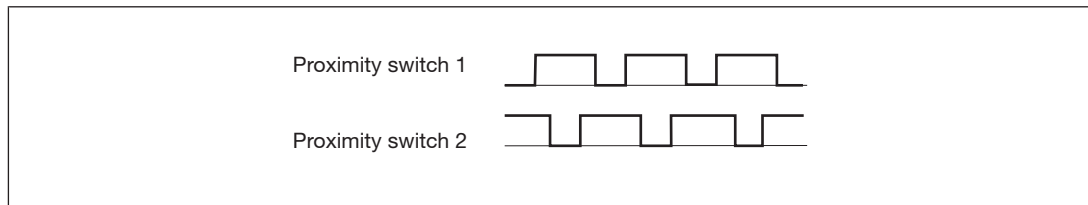


Fig.: Example proximity switch signal behaviour

- ▶ Please note the values stated in the technical details

Incremental encoders

Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
 - Sin/Cos
 - TTL (RS422)
- ▶ Please note the values stated in the technical details

Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms1p via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

Incremental encoder and proximity switch on one axis

In order to increase the availability, a proximity switch and an incremental encoder can be configured on one axis for the speed monitor. The speed monitor then monitors 3 signals on an axis: Track A and track B of the incremental encoder and the proximity switch

Standstill monitoring

Standstill is detected when at least two of these signals fall below the standstill frequency.

Speed monitors PNOZ ms1p

Monitoring for broken shearpins

If the Broken shearpin monitoring option is activated, a shearpin break is recognised if


- ▶ both signals of the incremental encoder fall below the set standstill frequency (standstill)
- and
- ▶ the proximity switch exceeds the set standstill frequency (rotating shaft).

The recognised broken shearpin leads to safe condition (see status B2 in "Signal statuses" table in Chapter 8 of the operating manual). If individual or multiple signals change, the system may leave a safe state (see "Signal statuses" table).

Hazards that can arise through an automatic restart must be excluded from the user program.

Installation

Dimensions

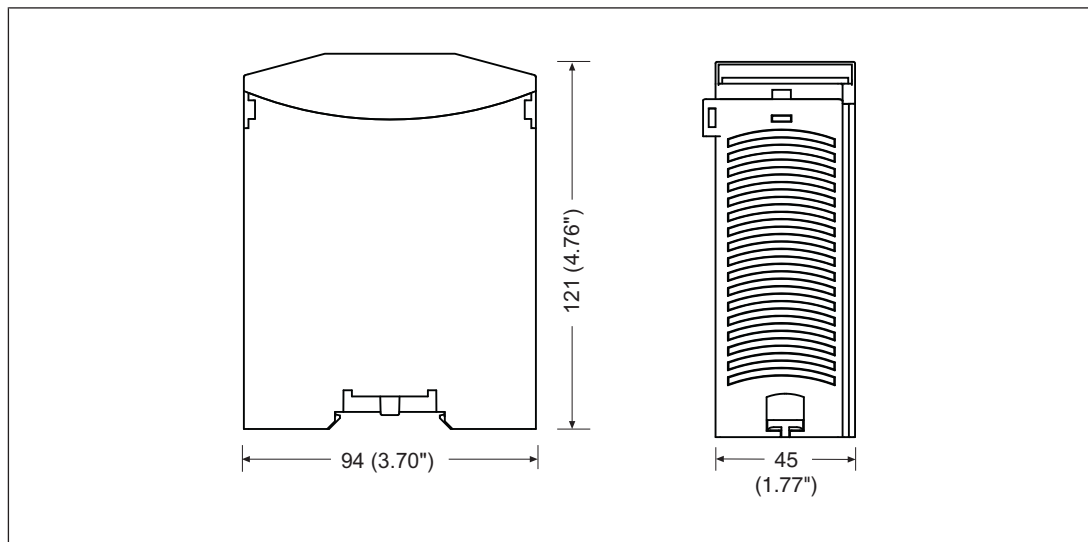

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[272\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.


Speed monitors PNOZ ms1p

On each of the 2 axes you can connect as required:

- ▶ 1 incremental encoder
or
- ▶ 2 proximity switches
or
- ▶ 1 incremental encoder and 1 proximity switch

	Incremental encoder	Proximity switch
Connection axis 1	X12	-
	-	I10, I11, 0 V
	X12	I10, 0 V
Connection axis 2	X22	-
	-	I20, I21, 0 V
	X22	I20, 0 V

Pin assignment of RJ45 socket

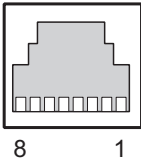RJ45 socket 8-pin	PIN	Track
	1	5 V
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

Connection of proximity switches


Proceed as follows when connecting proximity switches:

- ▶ Terminals I10 and I11: connect the proximity switch for axis 1
- ▶ Terminals I20 and I21: connect the proximity switch for axis 2.
- ▶ If only one axis is to be monitored, either terminals I10 and I11 or terminals I20 and I21 will remain free.
- ▶ When connecting incremental encoders and proximity switches on one axis:
 - Terminals I10: connect proximity switch for axis 1 (I11 is not used)
 - Terminals I20: connect proximity switch for axis 2 (I21 is not used)

Speed monitors

PNOZ ms1p

- ▶ The proximity switch must always be connected to a 0 V terminal of the speed monitor. The 0 V terminals are connected internally.
- ▶ Connect proximity switch to 24 VDC of the power supply or the speed monitor (the 24 V terminals of the speed monitor are connected internally)

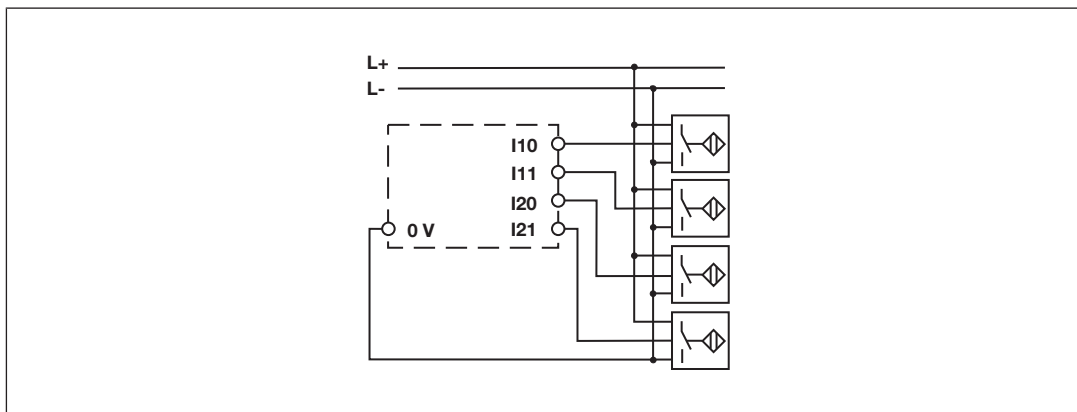

Connection of the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

Speed monitors PNOZ ms1p

Connect signals of the incremental encoder to the speed monitor

Input device types: 1 Vss, 5 V-TTL

- ▶ Supply incremental encoder and speed monitor with 5 VDC
- ▶ Terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

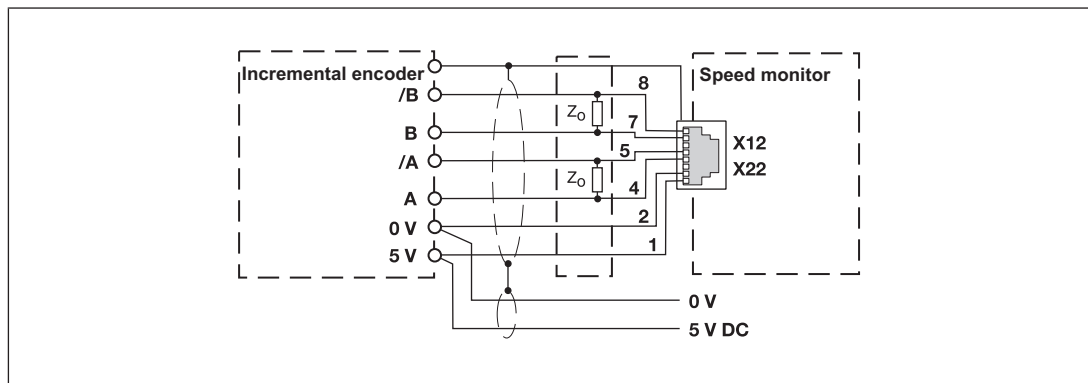


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

Connect incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with $Z_0 = 120 \text{ Ohm}$.
- ▶ If the signal lines in the drive are already terminated with $Z_0 = 120 \text{ Ohm}$, the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under [Connect signals of the incremental encoder to the speed monitor \[266\]](#) and in the adapter operating manual must be observed when connecting the supply voltage.

Speed monitors PNOZ ms1p

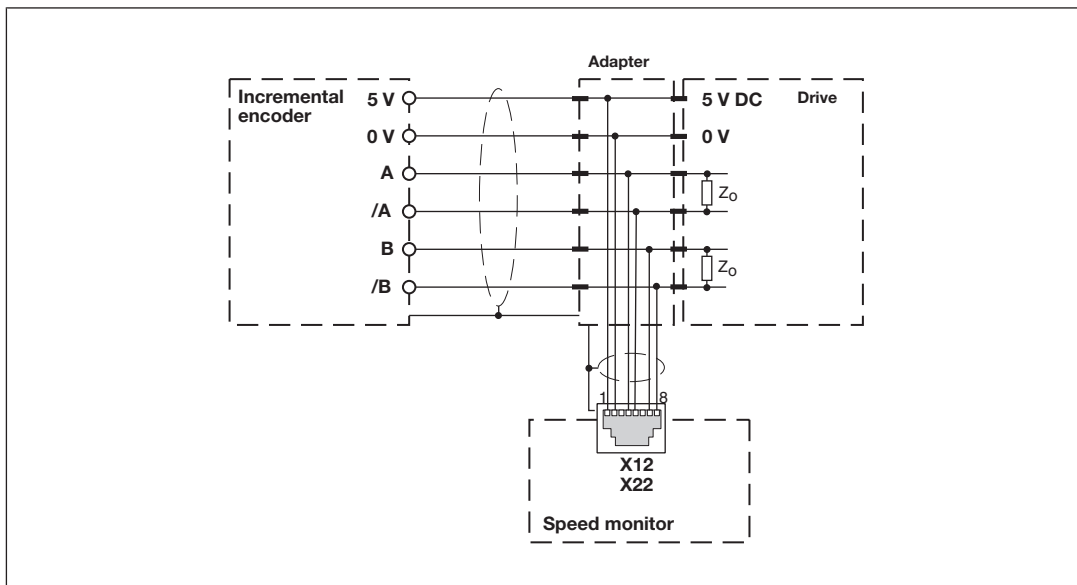


Fig.: Connection via adapter and drive

Connection of proximity switches and incremental encoder

Proximity switch and incremental encoder on various axes

Axis 1:

Proximity switch at I10, I11

or

incremental encoder at X12

Axis 2:

Proximity switch at I20, I21

or

incremental encoder at X22

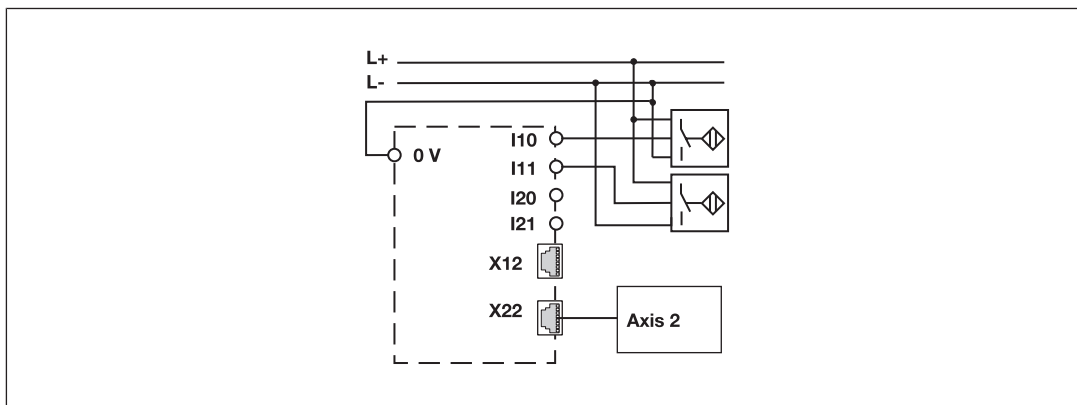


Fig.: Proximity switch and incremental encoder on various axes

Speed monitors PNOZ ms1p

Proximity switch and incremental encoder on one axis

Axis 1:

Proximity switch at I10 (I11 is unused)

and

Incremental encoder at X12

Axis 2:

Proximity switch at I20 (I21 is unused)

and

Incremental encoder at X22

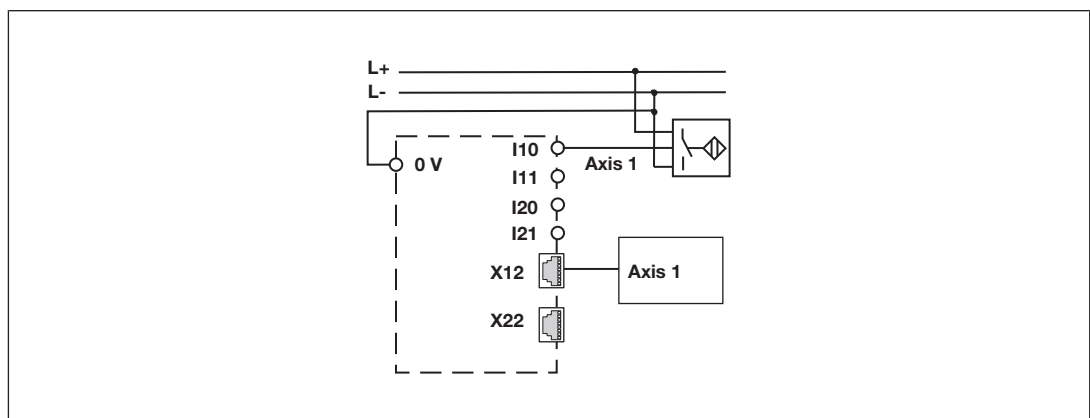


Fig.: Proximity switch and incremental encoder on one axis

Speed monitors PNOZ ms1p

Connection examples

Connection of 2 proximity switches and an incremental encoder

Description

- ▶ 2 proximity switches, pnp-switching
- ▶ 1 incremental encoder

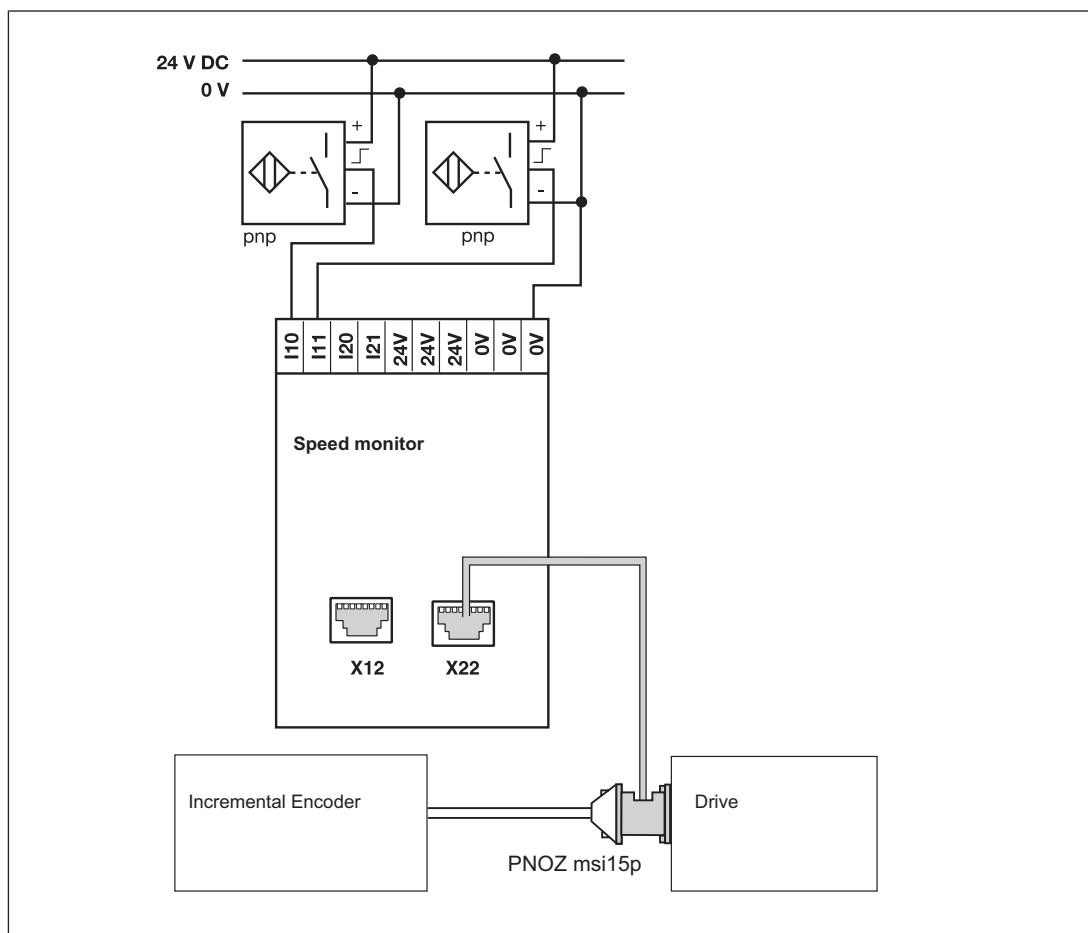


Fig.: Connection of 2 proximity switches, pnp-switching, one incremental encoder

Speed monitors PNOZ ms1p

Connection of 4 proximity switches

Description

- ▶ 4 proximity switches, pnp-switching
- ▶ Connection through 24 V terminals and 0 V

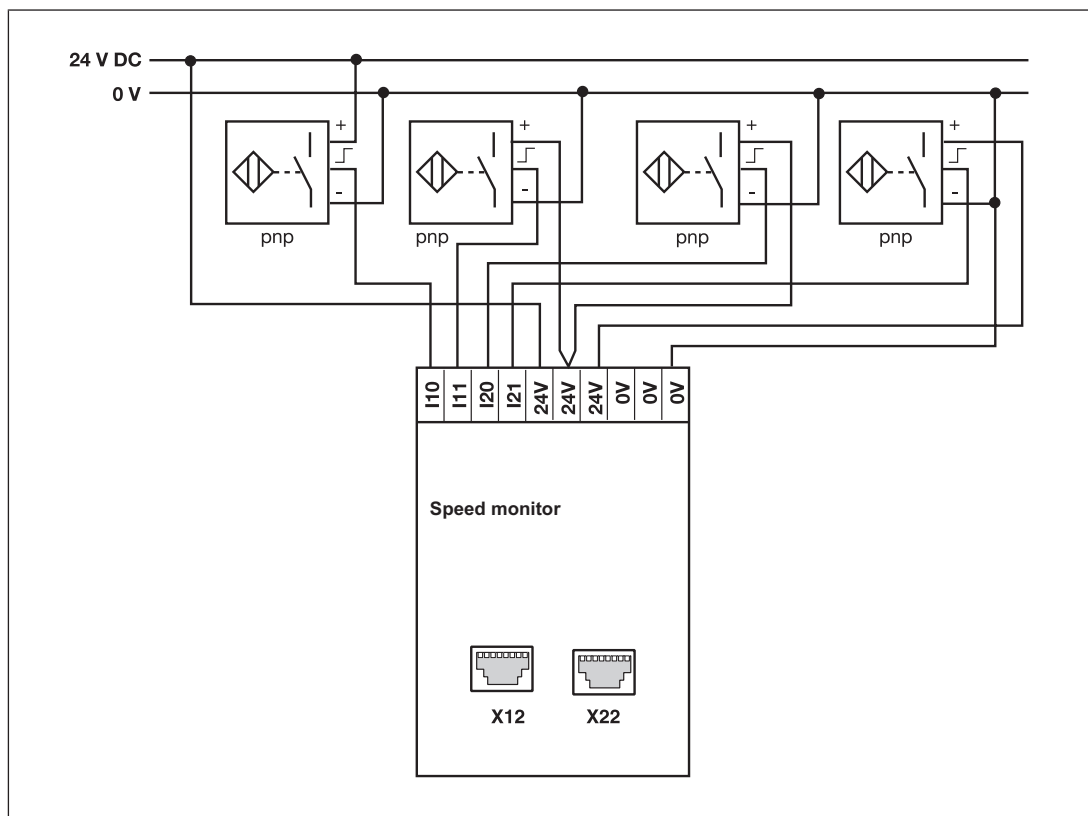


Fig.: Connection of 4 proximity switches, pnp-switching, connection through 24 V terminals and 0 V

Speed monitors PNOZ ms1p

Connection of an incremental encoder and proximity switch on an axis

Description

- ▶ 1 proximity switch, pnp-switching
- ▶ 1 incremental encoder
- ▶ Incremental encoder and proximity switch on one axis

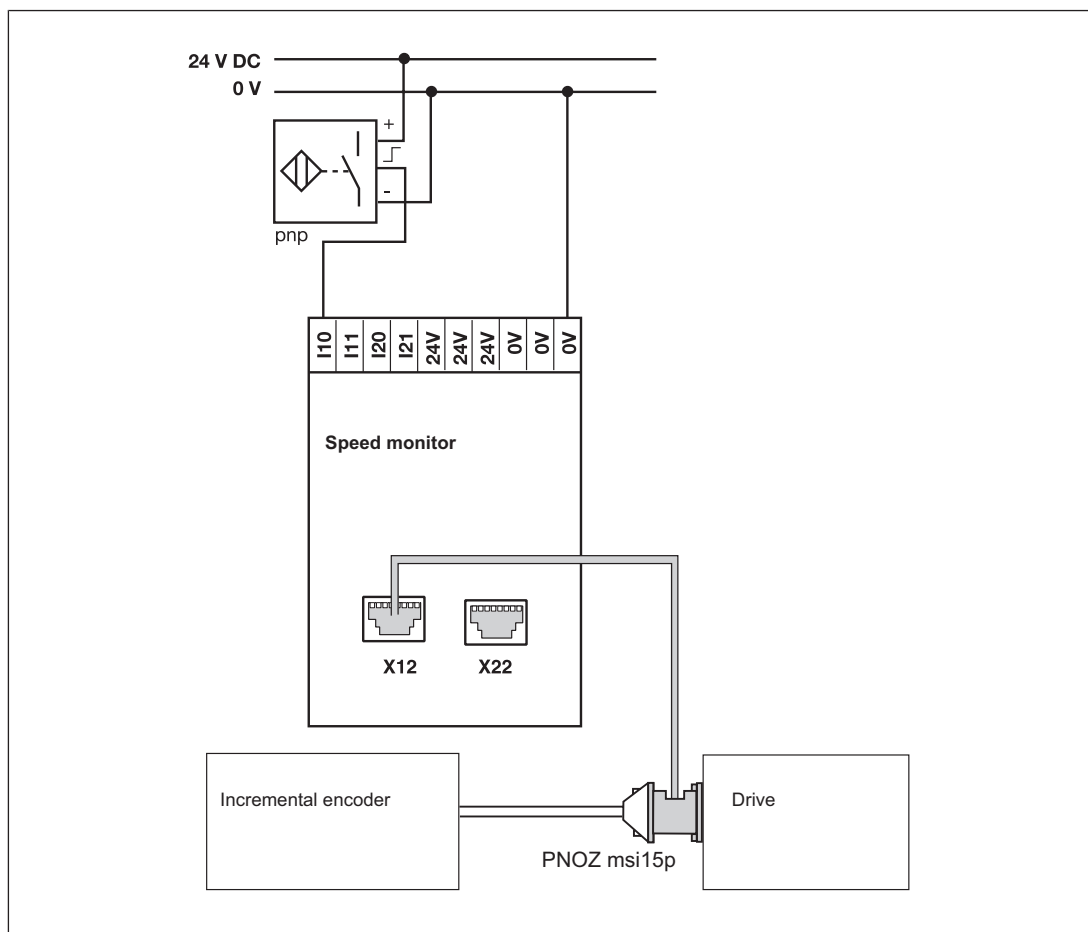


Fig.: Connection of an incremental encoder and proximity switch, pnp-switching, on an axis

Speed monitors PNOZ ms1p

Technical details

General	
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	1 W
Status indicator	LED
Proximity switch input	
Number of inputs	4
Input signal level	
Signal level at "1"	11 - 30 V
Signal level at g0 h	-3 - 5 V
Input resistance	3 kOhm
Input's frequency range	0 - 3 kHz
Configurable monitoring frequency	
without hysteresis	0,1 Hz - 3 kHz
with hysteresis	0.2 Hz - 3 kHz
Incremental encoder input	
Number of inputs	2
Connection type	RJ45 female connector, 8-pin
Supply voltage for incremental encoders	P_IG_VERSORG_U
Input signal level	0,5 - 5 V_{ss}
Phase position for the differential signals A, /A and B, /B	90° ±30°
Overload protection	-30 - 30 V
Input resistance	10 kOhm
Input's frequency range	0 - 500 kHz
Configurable monitoring frequency	
Without hysteresis	0,1 Hz - 500 kHz
With hysteresis	0.2 Hz - 500 kHz
Times	
Configurable switch-off delay	0 - 2.500 ms
Supply interruption before de-energisation	20 ms

Speed monitors

PNOZ ms1p

Times

Reaction time

f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms + 1/f

Environmental data

Ambient temperature

in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C

Storage temperature

in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C

Climatic suitability

in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C

Condensation during operation

Not permitted

Max. operating height above SL

2000 m

EMC

EN 61131-2

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage

30 V

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position

horizontally on mounting rail

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Speed monitors PNOZ ms1p

Mechanical data

Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94 mm
Width	45 mm
Depth	121 mm
Weight	192 g

Where standards are undated, the 2020-07 latest editions shall apply.

Speed monitors PNOZ ms1p

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
Initiator	PL e	Cat. 3	SIL CL 3	3,68E-09	SIL 3	4,84E-05	20
Incremental encoder	PL e	Cat. 3	SIL CL 3	4,52E-09	SIL 3	5,80E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Order reference

Product

Product type	Features	Order no.
PNOZ ms1p	Expansion module, speed monitor	773800

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783800
Set screw terminals	1 set of screw terminals	793800


Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Speed monitors PNOZ ms1p

Application Examples

Safe standstill monitoring

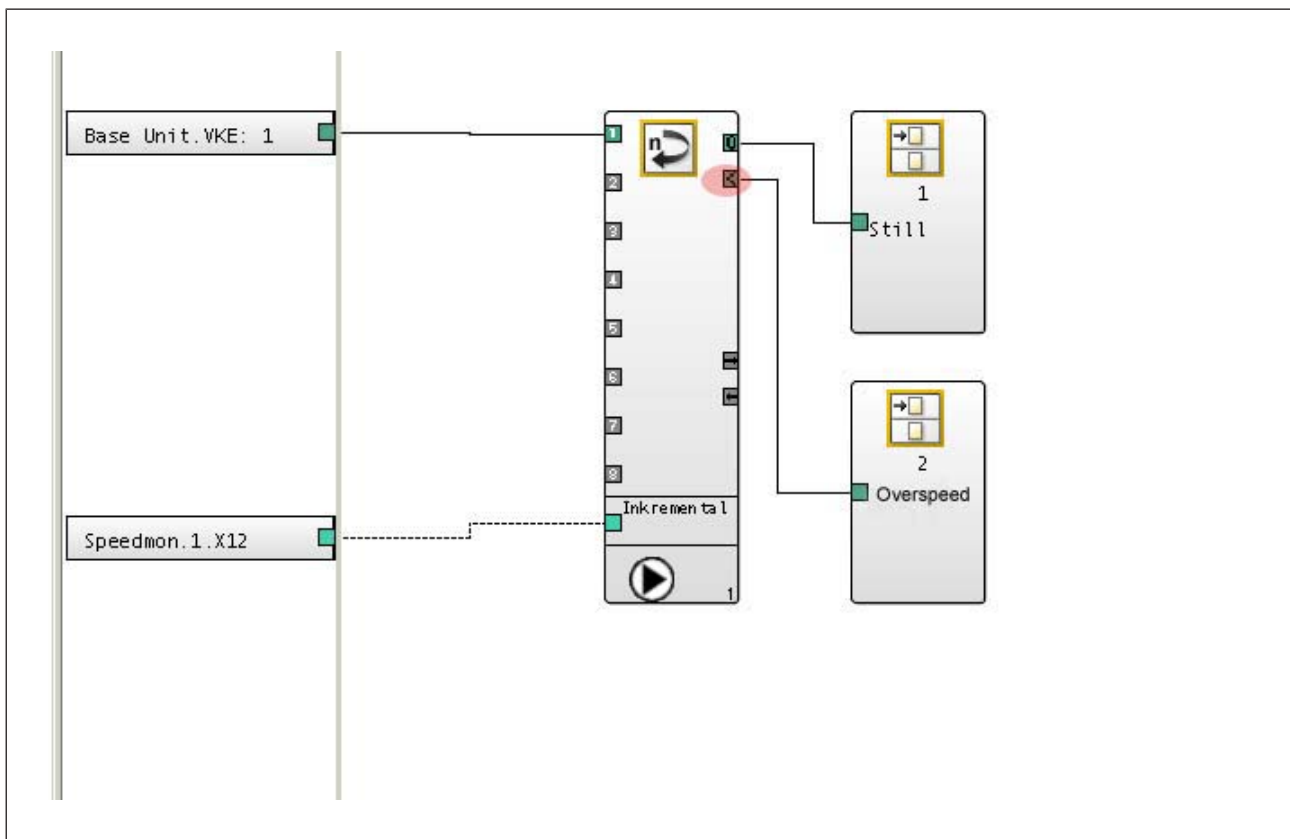

Configuration in the PNOZmulti Configurator


- ▶ Standstill: depending on requirement
- ▶ Speed n1: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overdrive" output = "0" must lead to the shutdown of the relevant axis.

Safe monitoring with "reduced speed" operating mode

Speed monitors PNOZ ms1p

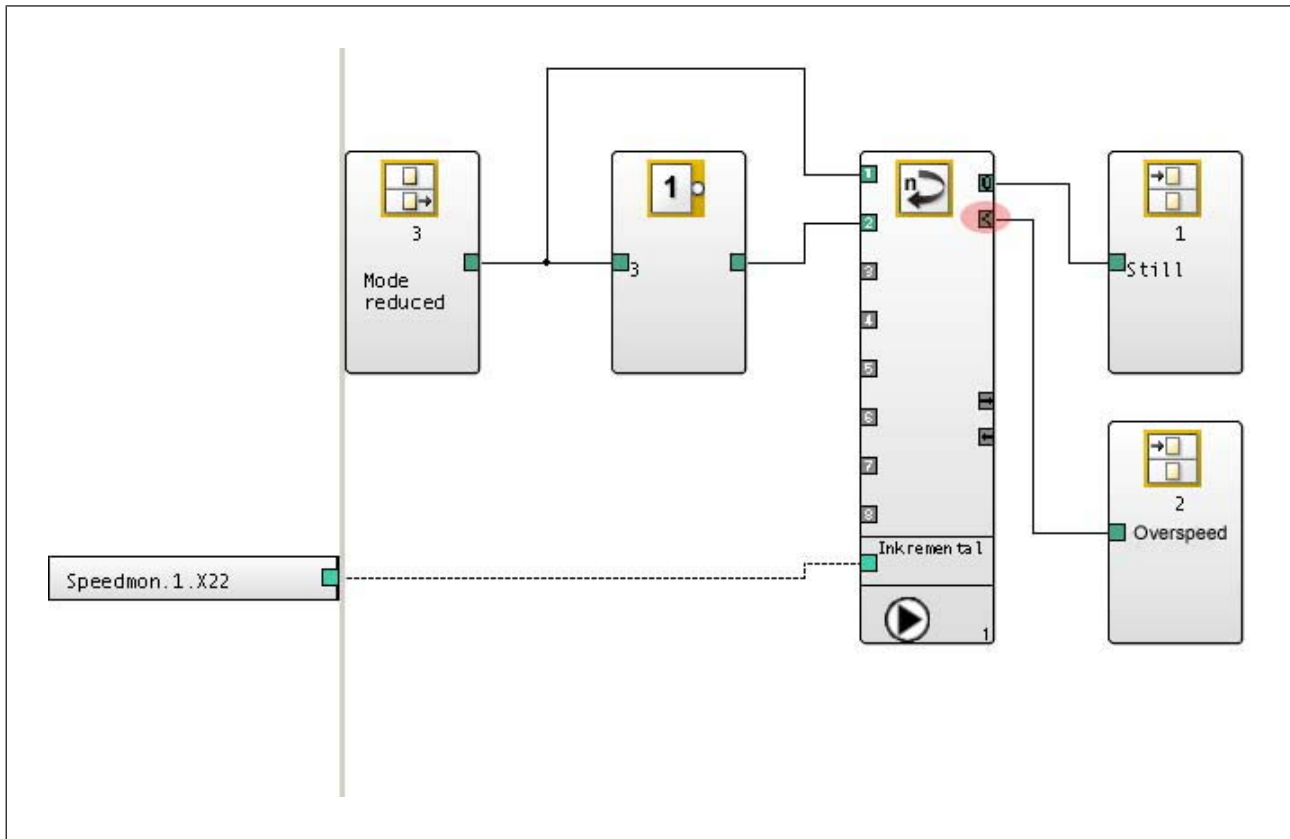

Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: reduced speed, depending on requirement
- ▶ Speed n2: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis, irrespective of whether the "reduced speed" operating mode is active.

Speed monitors PNOZ ms2p HTL



Overview

Unit features

Application of the product PNOZ ms2p HTL:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
 - 1 incremental encoder
or
 - 2 proximity switches
or
 - 1 incremental encoder and 1 proximity switch
- ▶ Measured variables:
 - Standstill
 - Speed (8 values can be set)
 - Direction of rotation
- ▶ Axis types, input device types and start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
 - Supply voltage
 - Incremental encoder
 - Proximity switch
 - Axis status, standstill and excess speed
 - Faults on the system
- ▶ Proximity switch connection technology: Plug-in connection terminals (either cage clamp terminal or screw terminal)

Speed monitors PNOZ ms2p HTL

- ▶ Incremental encoder connection technology:
RJ45 female connector
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

Front view

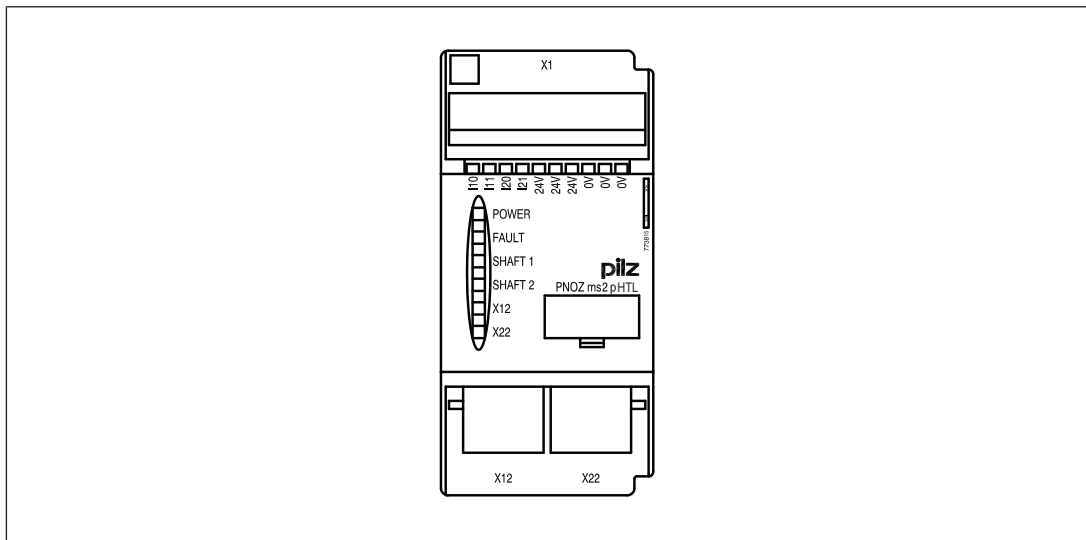

Legend:

- ▶ X1:
 - I10, I11:
Connection terminals for proximity switch at axis 1
 - I20, I21:
Connection terminals for proximity switch at axis 2
 - 0 V, 24 V:
Supply connections
- ▶ X12:
 - female connector for the connection of an incremental encoder at axis 1
- ▶ X22:
 - female connector for the connection of an incremental encoder at axis 2

Speed monitors PNOZ ms2p HTL

- ▶ LEDs:
 - POWER
 - FAULT
 - SHAFT 1
 - SHAFT 2
 - X12
 - X22


Function description

Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the safety circuit loaded, the values can be transferred from the base unit, e.g. to a relay output on the safety system. Incremental encoders and/or proximity detectors can be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

Block diagram

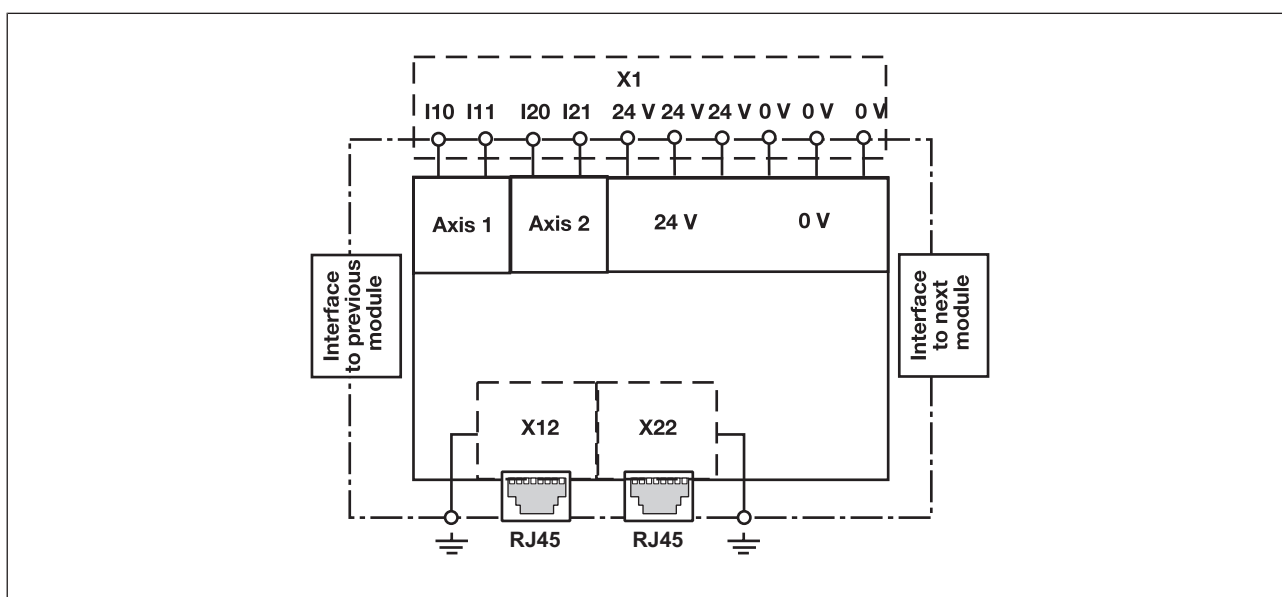

Speed monitors PNOZ ms2p HTL

Input device types

Proximity switch

Requirements of the proximity switches

- ▶ Only "pnp" type proximity switches may be used (N/O contact, switching to positive).
- ▶ The proximity switches require a 24 VDC supply.
- ▶ The proximity switches must be fitted so that at least one is always activated (carries a high signal).
- ▶ The proximity switches must be fitted so that the recorded signals overlap.
- ▶ When monitoring with proximity switches we recommend you use proximity switches with hysteresis in order to prevent bounce and therefore incorrect measurements.

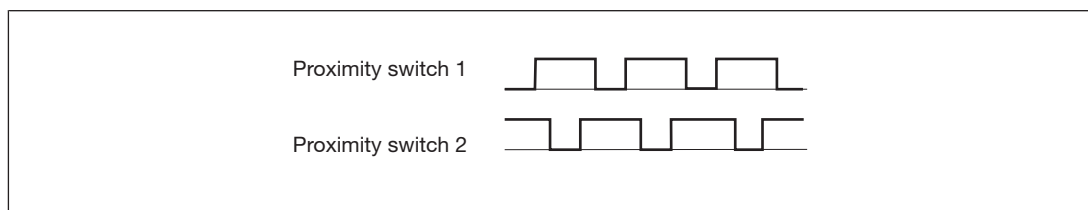


Fig.: Example proximity switch signal behaviour

- ▶ Please note the values stated in the technical details

Incremental encoders

Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
 - HTL (12 V – 30 V)
- ▶ Please note the values stated in the technical details

Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms2p HTL via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

Speed monitors PNOZ ms2p HTL

Incremental encoder and proximity switch on one axis

In order to increase the availability, a proximity switch and an incremental encoder can be configured on one axis for the speed monitor. The speed monitor then monitors 3 signals on an axis: Track A and track B of the incremental encoder and the proximity switch

Standstill monitoring

Standstill is detected when at least two of these signals fall below the standstill frequency.

Monitoring for broken shearpins

If the Broken shearpin monitoring option is activated, a shearpin break is recognised if


- ▶ both signals of the incremental encoder fall below the set standstill frequency (standstill) and
- ▶ the proximity switch exceeds the set standstill frequency (rotating shaft).

The recognised broken shearpin leads to safe condition (see status B2 in "Signal statuses" table in Chapter 8 of the operating manual). If individual or multiple signals change, the system may leave a safe state (see "Signal statuses" table).

Hazards that can arise through an automatic restart must be excluded from the user program.

Installation

Dimensions

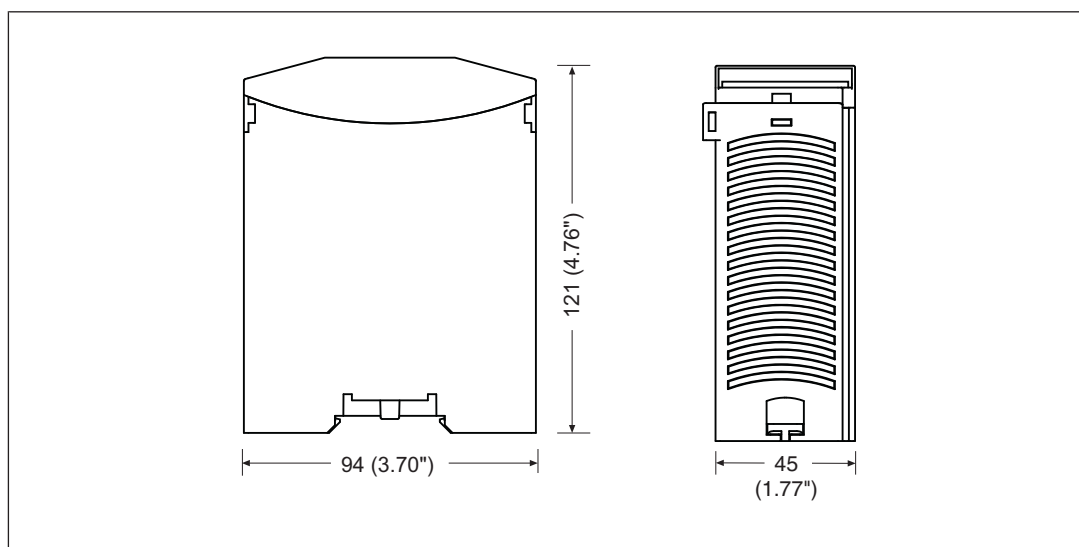

Speed monitors PNOZ ms2p HTL

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[291\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

On each of the 2 axes you can connect as required:

- ▶ 1 incremental encoder
or
- ▶ 2 proximity switches
or
- ▶ 1 incremental encoder and 1 proximity switch

	Incremental encoder	Proximity switch
Connection axis 1	X12	-
	-	I10, I11, 0 V
	X12	I10, 0 V
Connection axis 2	X22	-
	-	I20, I21, 0 V
	X22	I20, 0 V

Pin assignment of RJ45 socket

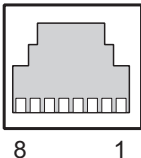
RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

Speed monitors PNOZ ms2p HTL

Connection of proximity switches

Proceed as follows when connecting proximity switches:

- ▶ Terminals I10 and I11: connect the proximity switch for axis 1
- ▶ Terminals I20 and I21: connect the proximity switch for axis 2.
- ▶ If only one axis is to be monitored, either terminals I10 and I11 or terminals I20 and I21 will remain free.
- ▶ When connecting incremental encoders and proximity switches on one axis:
 - Terminals I10: connect proximity switch for axis 1 (I11 is not used)
 - Terminals I20: connect proximity switch for axis 2 (I21 is not used)
- ▶ The proximity switch must always be connected to a 0 V terminal of the speed monitor. The 0 V terminals are connected internally.
- ▶ Connect proximity switch to 24 VDC of the power supply or the speed monitor (the 24 V terminals of the speed monitor are connected internally)

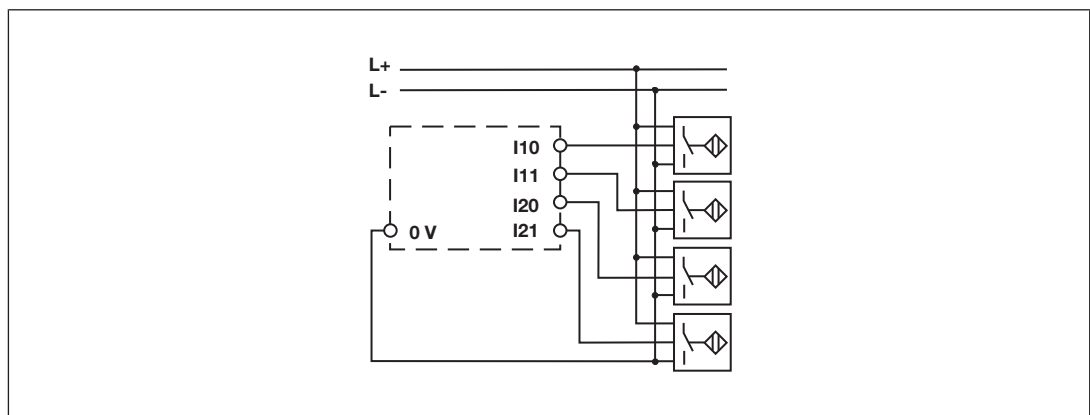

Connection of the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

Connect signals of the incremental encoder to the speed monitor

Encoder types: 24 V-HTL

- ▶ Apply 24 VDC supply voltage to incremental encoder only

Speed monitors PNOZ ms2p HTL

- ▶ Do not terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

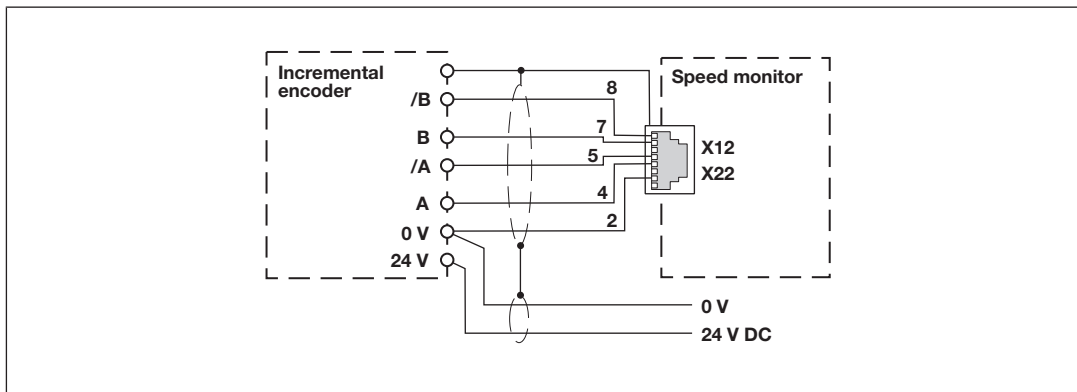


Fig.: Connection to incremental encoder type 24 V-HTL

Connect incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply voltage (12 V – 30 V) to incremental encoder only.
- ▶ HTL signals may not be fitted with a terminating resistor.

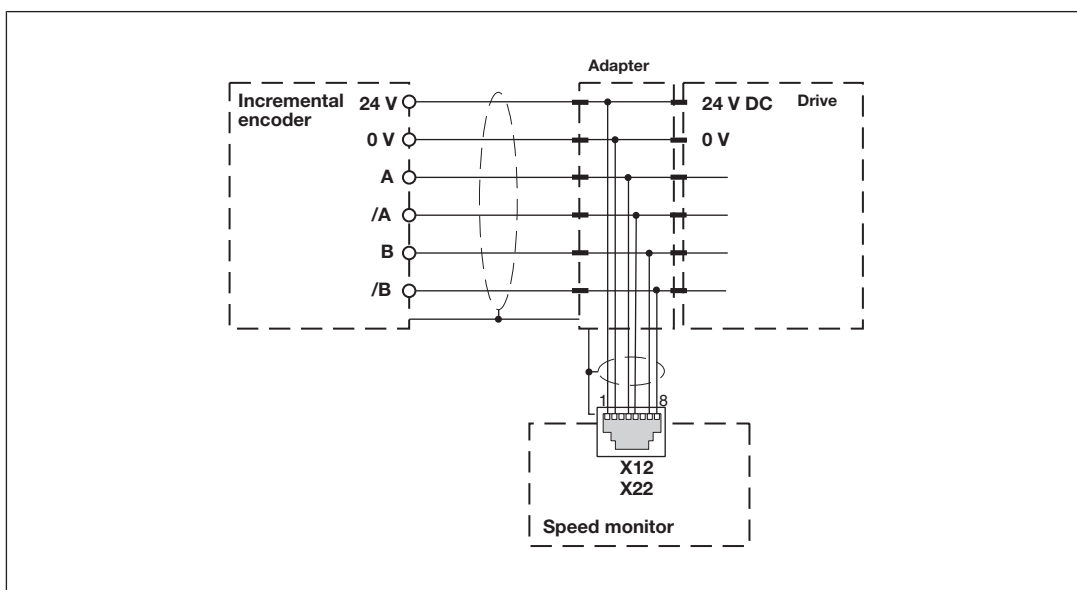


Fig.: Connection via adapter and drive

Speed monitors PNOZ ms2p HTL

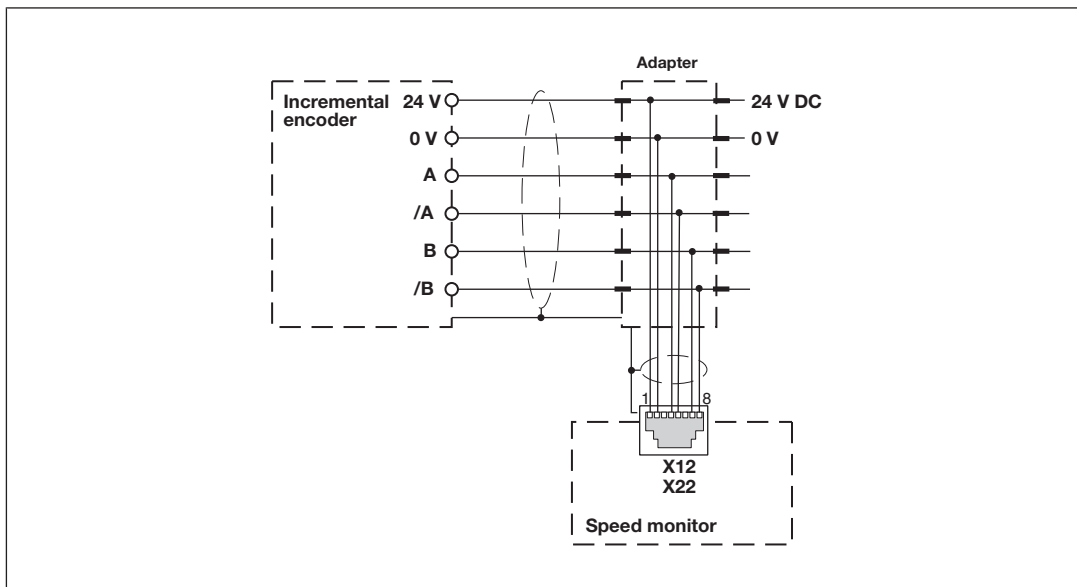


Fig.: Connection via adapter

Connection of proximity switches and incremental encoder

Proximity switch and incremental encoder on various axes

Axis 1:

Proximity switch at I10, I11

or

incremental encoder at X12

Axis 2:

Proximity switch at I20, I21

or

incremental encoder at X22

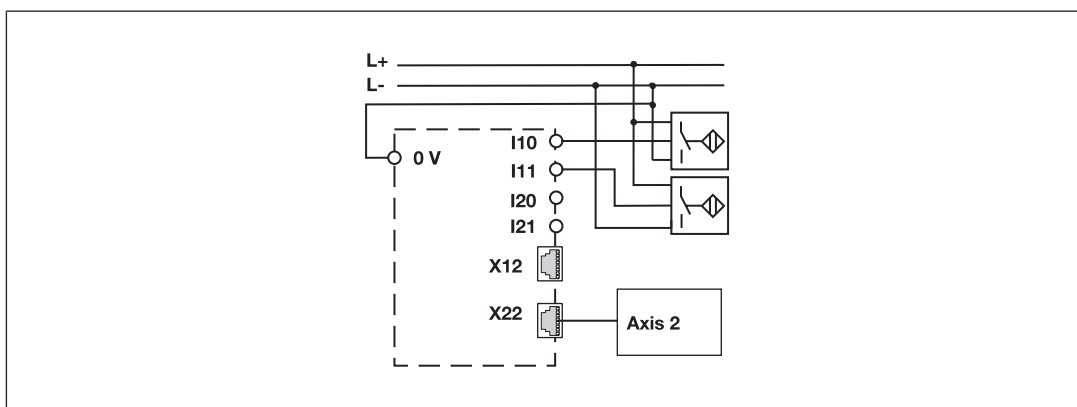


Fig.: Proximity switch and incremental encoder on various axes

Speed monitors PNOZ ms2p HTL

Proximity switch and incremental encoder on one axis

Axis 1:

Proximity switch at I10 (I11 is unused)

and

Incremental encoder at X12

Axis 2:

Proximity switch at I20 (I21 is unused)

and

Incremental encoder at X22

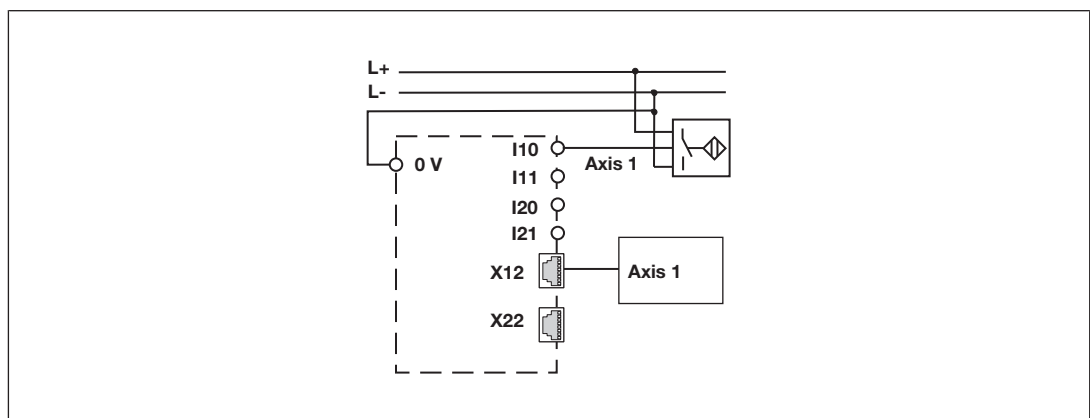


Fig.: Proximity switch and incremental encoder on one axis

Speed monitors PNOZ ms2p HTL

Connection examples

Connection of 2 proximity switches and an incremental encoder

Description

- ▶ 2 proximity switches, pnp-switching
- ▶ 1 incremental encoder

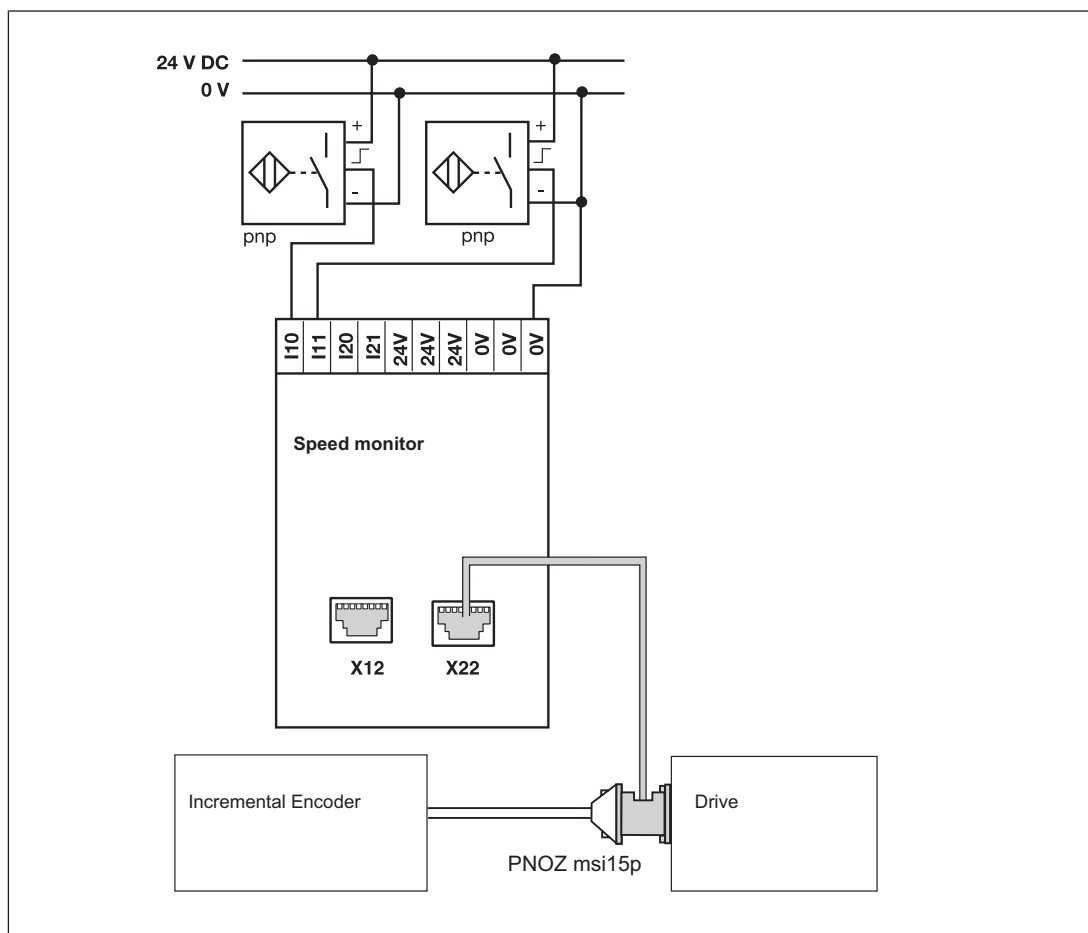


Fig.: Connection of 2 proximity switches, pnp-switching, one incremental encoder

Speed monitors PNOZ ms2p HTL

Connection of 4 proximity switches

Description

- ▶ 4 proximity switches, pnp-switching
- ▶ Connection through 24 V terminals and 0 V

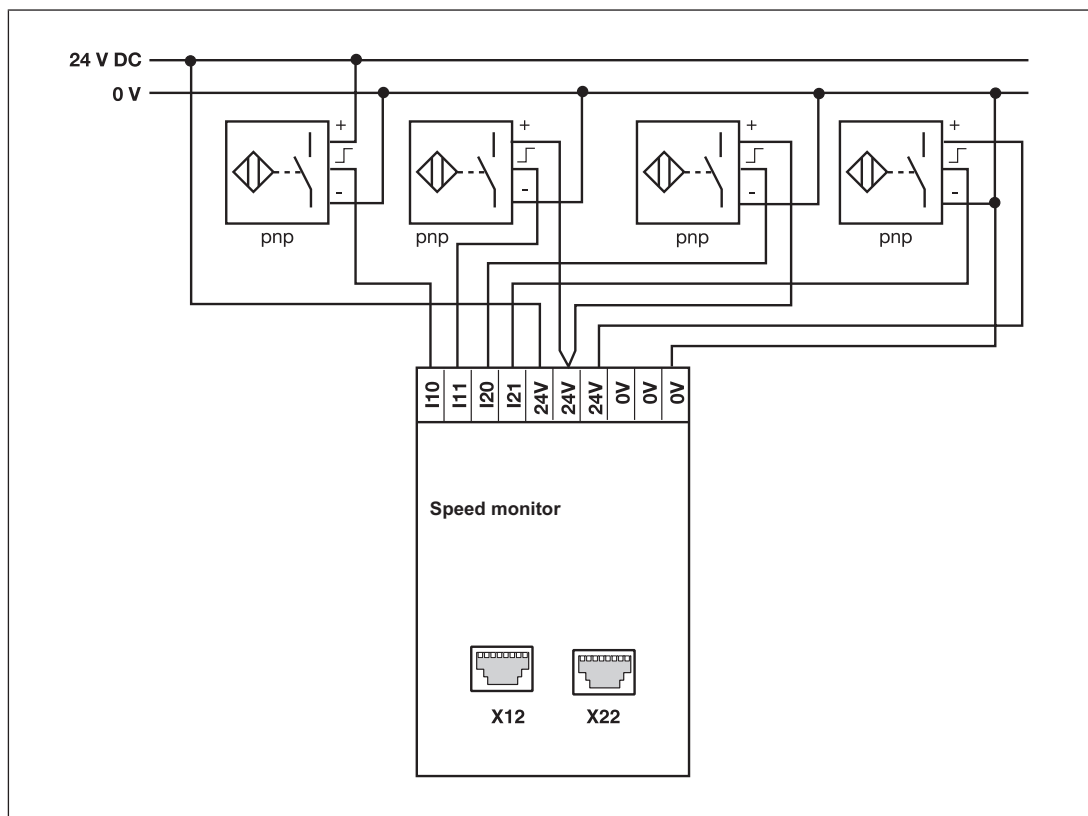


Fig.: Connection of 4 proximity switches, pnp-switching, connection through 24 V terminals and 0 V

Speed monitors PNOZ ms2p HTL

Connection of an incremental encoder and proximity switch on an axis

Description

- ▶ 1 proximity switch, pnp-switching
- ▶ 1 incremental encoder
- ▶ Incremental encoder and proximity switch on one axis

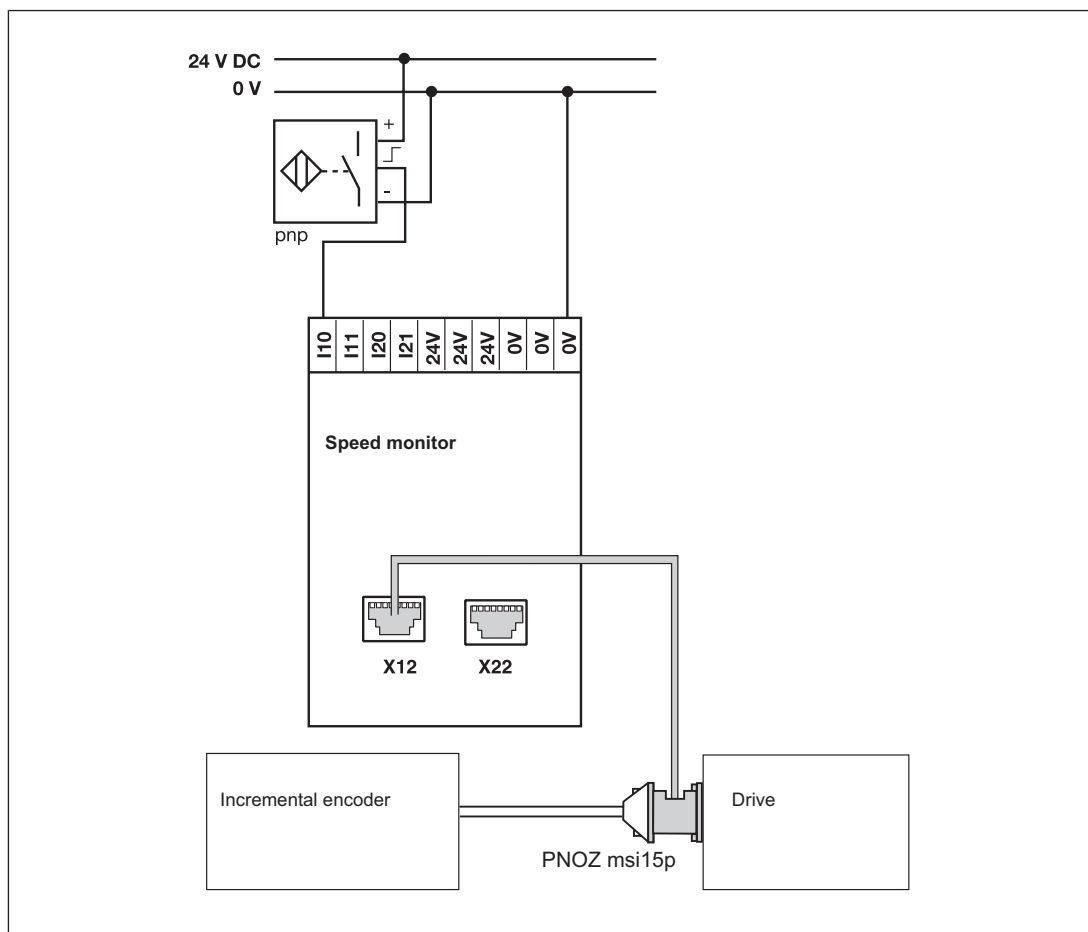


Fig.: Connection of an incremental encoder and proximity switch, pnp-switching, on an axis

Speed monitors PNOZ ms2p HTL

Technical details

General	
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	1 W
Status indicator	LED
Proximity switch input	
Number of inputs	4
Input signal level	
Signal level at "1"	11 - 30 V
Signal level at g0 h	-3 - 5 V
Input resistance	3 kOhm
Input's frequency range	0 - 3 kHz
Configurable monitoring frequency	
without hysteresis	0,1 Hz - 3 kHz
with hysteresis	0.2 Hz - 3 kHz
Incremental encoder input	
Number of inputs	2
Connection type	RJ45 female connector, 8-pin
Input signal level	12 - 30 Vss
Phase position for the differential signals A, /A and B, /B	90° ±30°
Overload protection	-30 - 30 V
Input resistance	10 kOhm
Input's frequency range	0 - 200 kHz
Configurable monitoring frequency	
Without hysteresis	0,1 Hz - 200 kHz
With hysteresis	0.2 Hz - 200 kHz
Times	
Configurable switch-off delay	0 - 2.500 ms
Supply interruption before de-energisation	20 ms

Speed monitors PNOZ ms2p HTL

Times

Reaction time

f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms + 1/f

Environmental data

Ambient temperature

in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C

Storage temperature

in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C

Climatic suitability

in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C

Condensation during operation

Not permitted

Max. operating height above SL

2000 m

EMC

EN 61131-2

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage

30 V

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Speed monitors PNOZ ms2p HTL

Mechanical data

Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94 mm
Width	45 mm
Depth	121 mm
Weight	220 g

Where standards are undated, the 2020-07 latest editions shall apply.

Speed monitors PNOZ ms2p HTL

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
Initiator	PL e	Cat. 3	SIL CL 3	3,68E-09	SIL 3	4,84E-05	20
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,73E-09	SIL 3	8,18E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Order reference

Product

Product type	Features	Order no.
PNOZ ms2p HTL	Expansion module, speed monitor	773815

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639


Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783800
Set screw terminals	1 set of screw terminals	793800

Speed monitors PNOZ ms2p HTL

Application Examples

Safe standstill monitoring

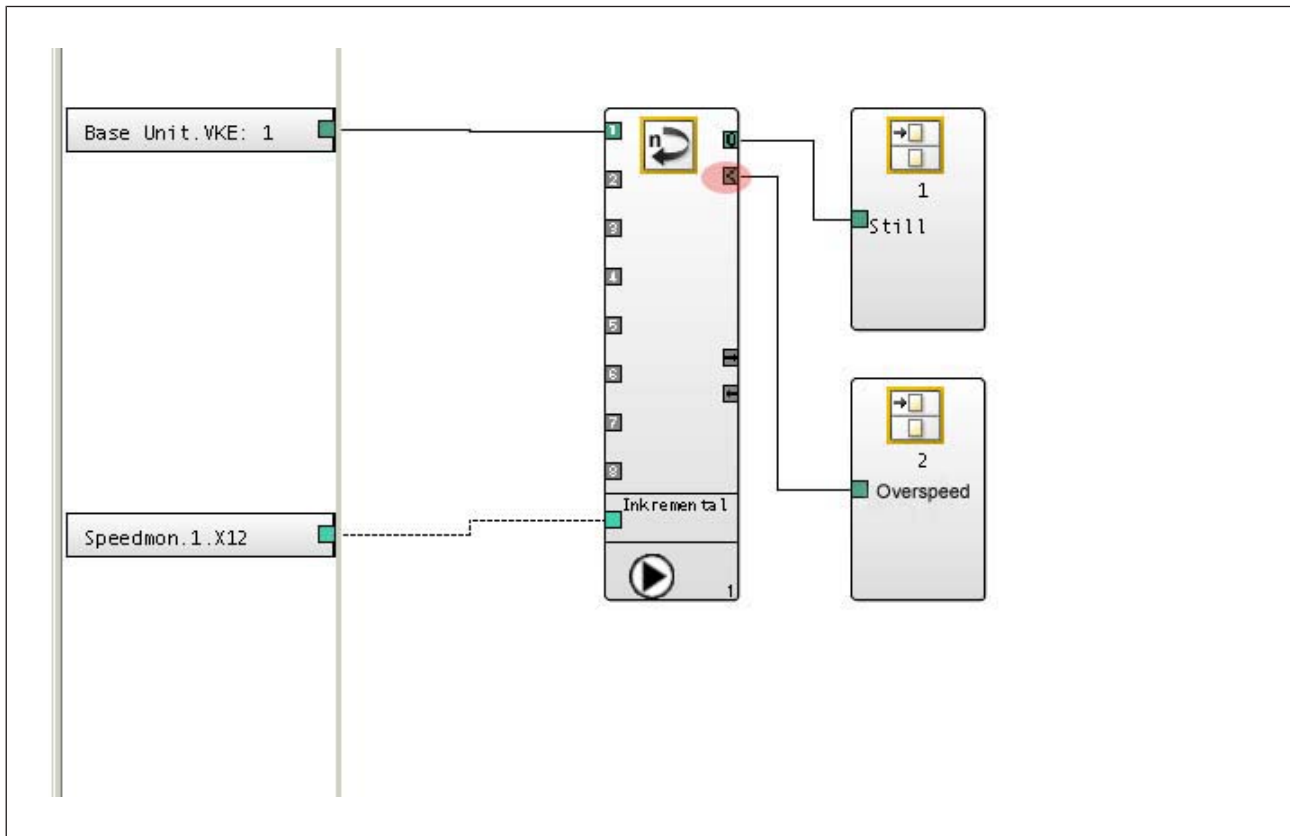

Configuration in the PNOZmulti Configurator


- ▶ Standstill: depending on requirement
- ▶ Speed n1: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis.

Speed monitors PNOZ ms2p HTL

Safe monitoring with "reduced speed" operating mode

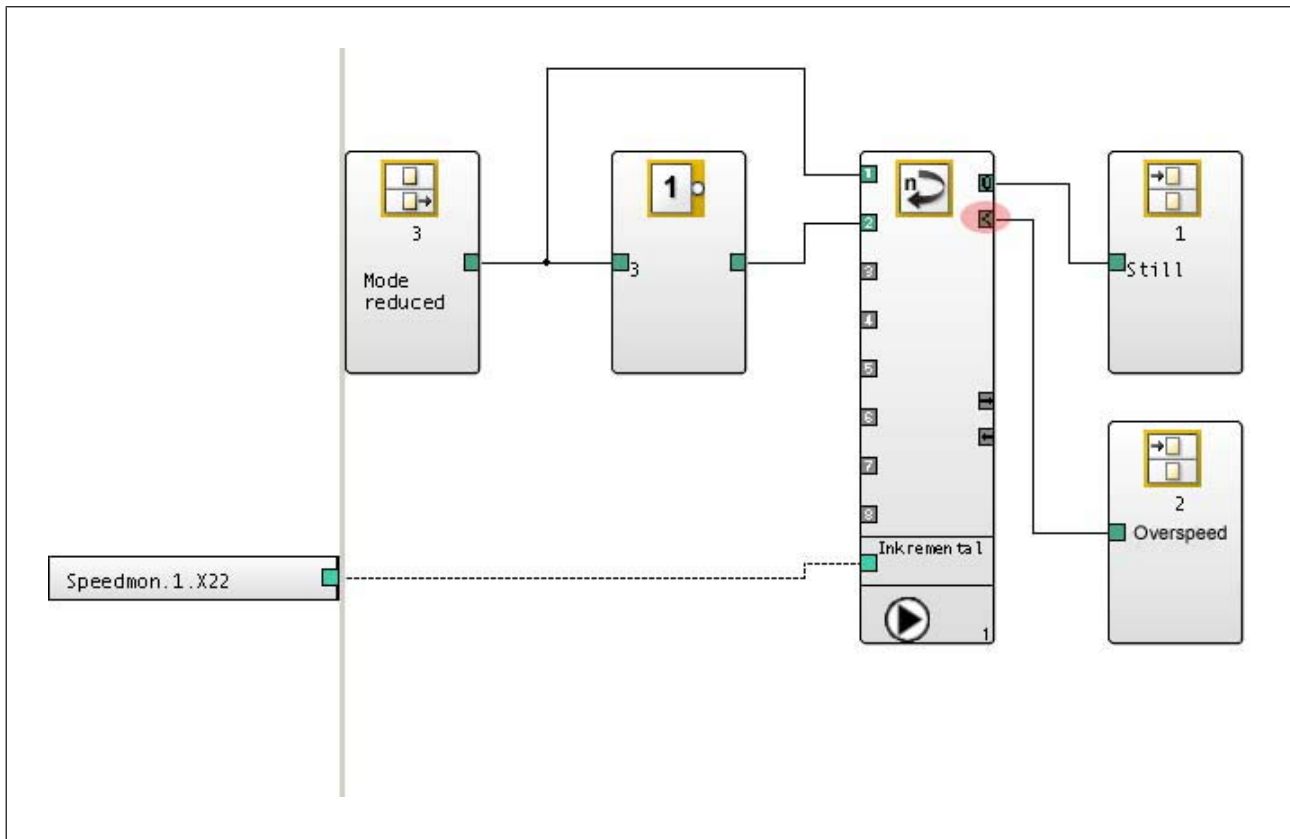

Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: reduced speed, depending on requirement
- ▶ Speed n2: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis, irrespective of whether the "reduced speed" operating mode is active.

Speed monitors PNOZ ms2p TTL (Coated Version)



Overview

Unit features

Application of the product PNOZ ms2p TTL (Coated Version):

Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:


- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
 - 1 incremental encoder
or
 - 2 proximity switches
or
 - 1 incremental encoder and 1 proximity switch
- ▶ Measured variables:
 - Standstill
 - Speed (8 values can be set)
 - Direction of rotation
- ▶ Axis types, input device types and start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
 - Supply voltage
 - Incremental encoder
 - Proximity switch
 - Axis status, standstill and excess speed
 - Faults on the system
- ▶ Proximity switch connection technology: Plug-in connection terminals (either cage clamp terminal or screw terminal)

Speed monitors

PNOZ ms2p TTL (Coated Version)

- ▶ Incremental encoder connection technology:
RJ45 female connector
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit
- ▶ Coated version:
Increased environmental requirements (see [Technical details \[310\]](#))

Front view

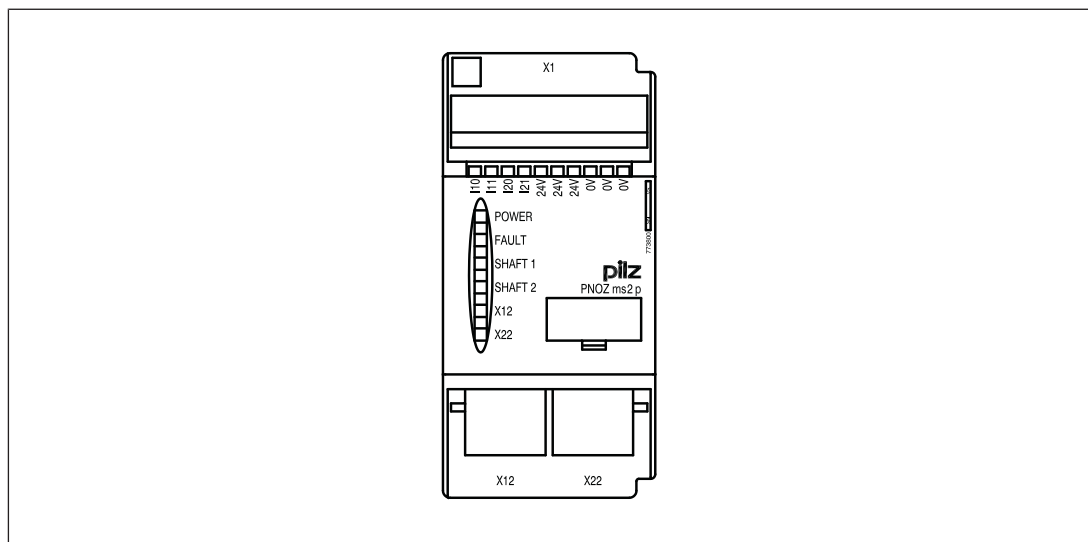

Key:

- ▶ X1:
 - I10, I11:
connection terminals for proximity switch at axis 1
 - I20, I21:
connection terminals for proximity switch at axis 2
 - 0 V, 24 V:
supply connections
- ▶ X12:
 - female connector for the connection of an incremental encoder at axis 1
- ▶ X22:
 - female connector for the connection of an incremental encoder at axis 2

Speed monitors PNOZ ms2p TTL (Coated Version)

- ▶ LEDs:
 - POWER
 - FAULT
 - SHAFT 1
 - SHAFT 2
 - X12
 - X22


Function description

Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the safety circuit loaded, the values can be transferred from the base unit, e.g. to a relay output on the safety system. Incremental encoders and/or proximity detectors can be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

Block diagram

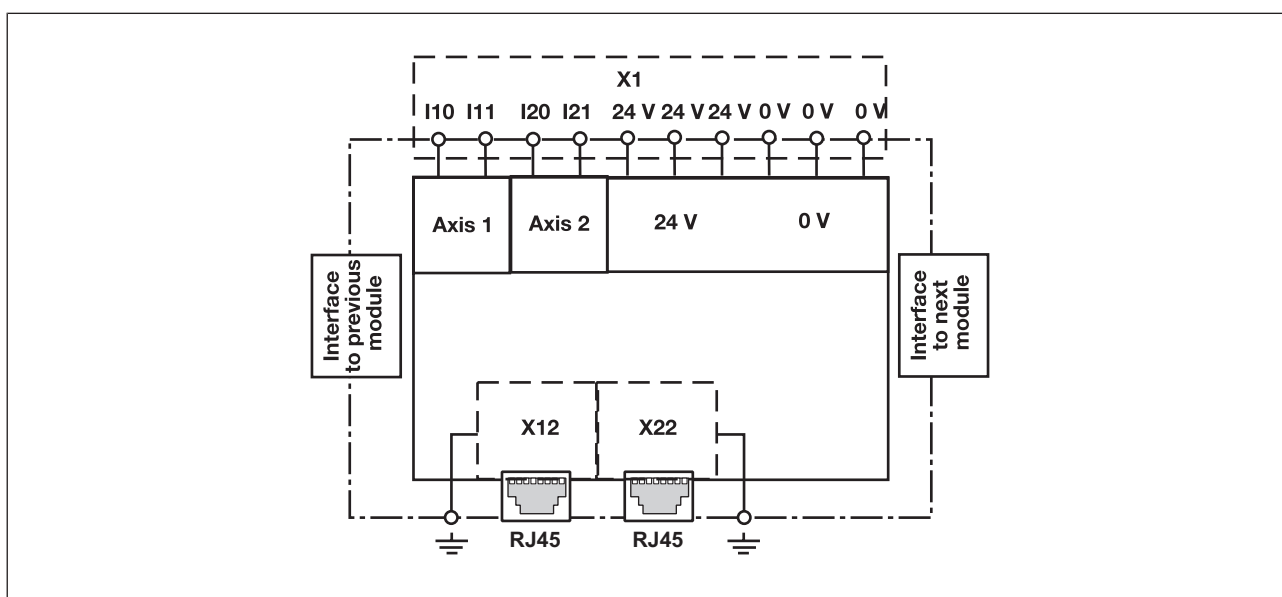

Speed monitors

PNOZ ms2p TTL (Coated Version)

Input device types

Proximity switch

Requirements of the proximity switches

- ▶ Only "pnp" type proximity switches may be used (N/O contact, switching to positive).
- ▶ The proximity switches require a 24 VDC supply.
- ▶ The proximity switches must be fitted so that at least one is always activated (carries a high signal).
- ▶ The proximity switches must be fitted so that the recorded signals overlap.
- ▶ When monitoring with proximity switches we recommend you use proximity switches with hysteresis in order to prevent bounce and therefore incorrect measurements.

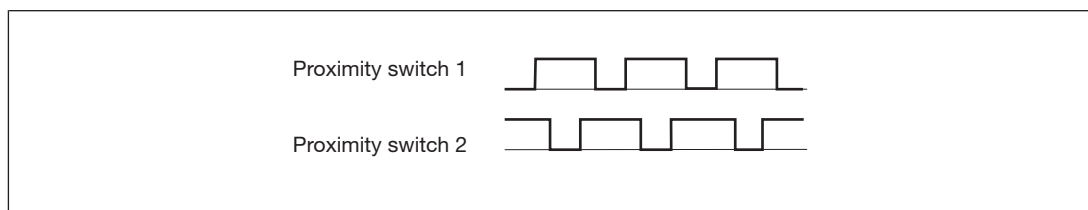


Fig.: Example proximity switch signal behaviour

- ▶ Please note the values stated in the technical details

Incremental encoders

Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
 - Sin/Cos
 - TTL (RS422)
- ▶ Please note the values stated in the technical details

Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms2p TTL (Coated Version) via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

Speed monitors

PNOZ ms2p TTL (Coated Version)

Incremental encoder and proximity switch on one axis

In order to increase the availability, a proximity switch and an incremental encoder can be configured on one axis for the speed monitor. The speed monitor then monitors 3 signals on an axis: Track A and track B of the incremental encoder and the proximity switch

Standstill monitoring

Standstill is detected when at least two of these signals fall below the standstill frequency.

Monitoring for broken shearpins

If the Broken shearpin monitoring option is activated, a shearpin break is recognised if


- ▶ both signals of the incremental encoder fall below the set standstill frequency (standstill)
and
- ▶ the proximity switch exceeds the set standstill frequency (rotating shaft).

The recognised broken shearpin leads to safe condition (see status B2 in "Signal statuses" table in Chapter 8 of the operating manual). If individual or multiple signals change, the system may leave a safe state (see "Signal statuses" table).

Hazards that can arise through an automatic restart must be excluded from the user program.

Installation

Dimensions

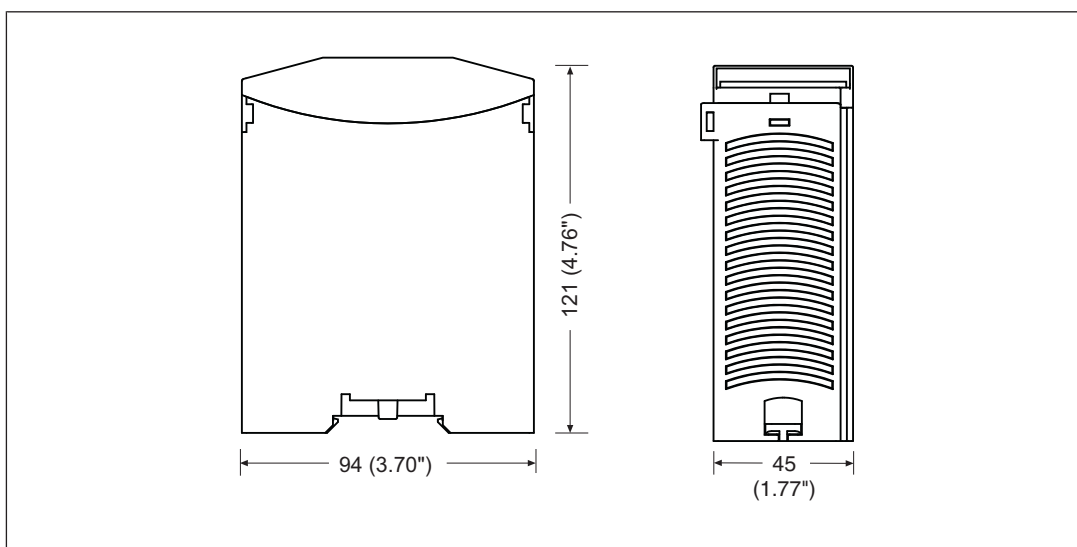

Speed monitors PNOZ ms2p TTL (Coated Version)

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[310\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

On each of the 2 axes you can connect as required:

- ▶ 1 incremental encoder
or
- ▶ 2 proximity switches
or
- ▶ 1 incremental encoder and 1 proximity switch

	Incremental encoder	Proximity switch
Connection axis 1	X12	-
	-	I10, I11, 0 V
	X12	I10, 0 V
Connection axis 2	X22	-
	-	I20, I21, 0 V
	X22	I20, 0 V

Pin assignment of RJ45 socket

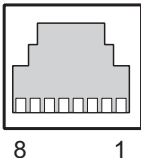
RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

Speed monitors PNOZ ms2p TTL (Coated Version)

Connection of proximity switches

Proceed as follows when connecting proximity switches:

- ▶ Terminals I10 and I11: connect the proximity switch for axis 1
- ▶ Terminals I20 and I21: connect the proximity switch for axis 2.
- ▶ If only one axis is to be monitored, either terminals I10 and I11 or terminals I20 and I21 will remain free.
- ▶ When connecting incremental encoders and proximity switches on one axis:
 - Terminals I10: connect proximity switch for axis 1 (I11 is not used)
 - Terminals I20: connect proximity switch for axis 2 (I21 is not used)
- ▶ The proximity switch must always be connected to a 0 V terminal of the speed monitor. The 0 V terminals are connected internally.
- ▶ Connect proximity switch to 24 VDC of the power supply or the speed monitor (the 24 V terminals of the speed monitor are connected internally)

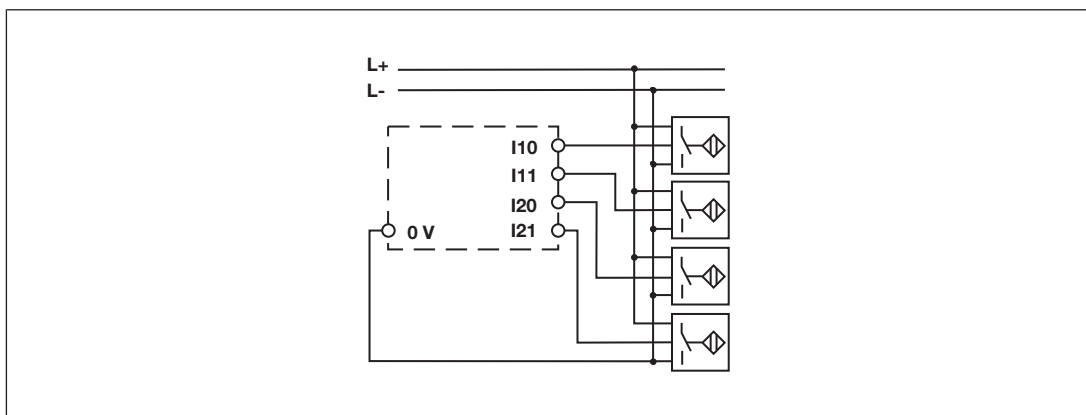

Connection of the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

Speed monitors PNOZ ms2p TTL (Coated Version)

Connect signals of the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 VDC to incremental encoder only
- ▶ Terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

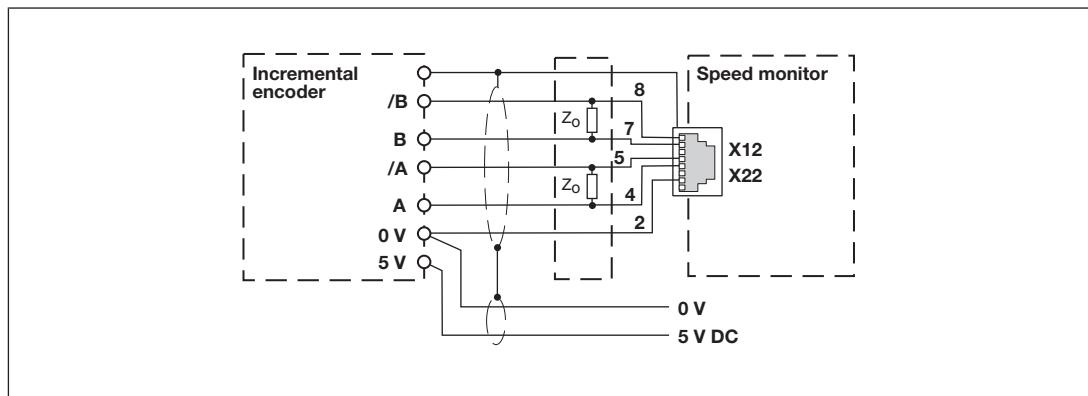


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

Connect incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with $Z_0 = 120 \text{ Ohm}$.
- ▶ If the signal lines in the drive are already terminated with $Z_0 = 120 \text{ Ohm}$, the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 VDC.

Speed monitors PNOZ ms2p TTL (Coated Version)

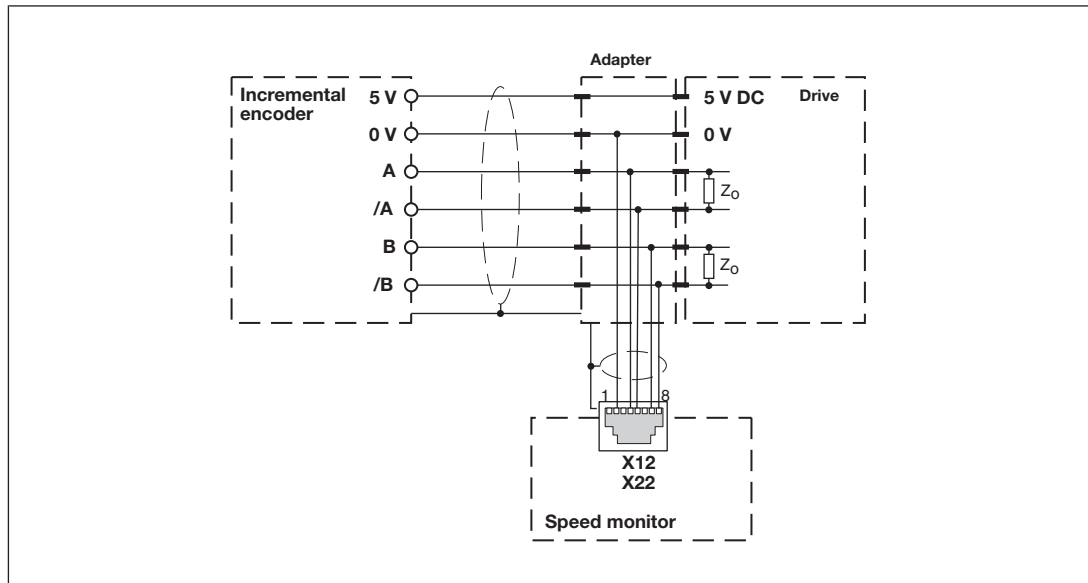


Fig.: Connection via adapter and drive

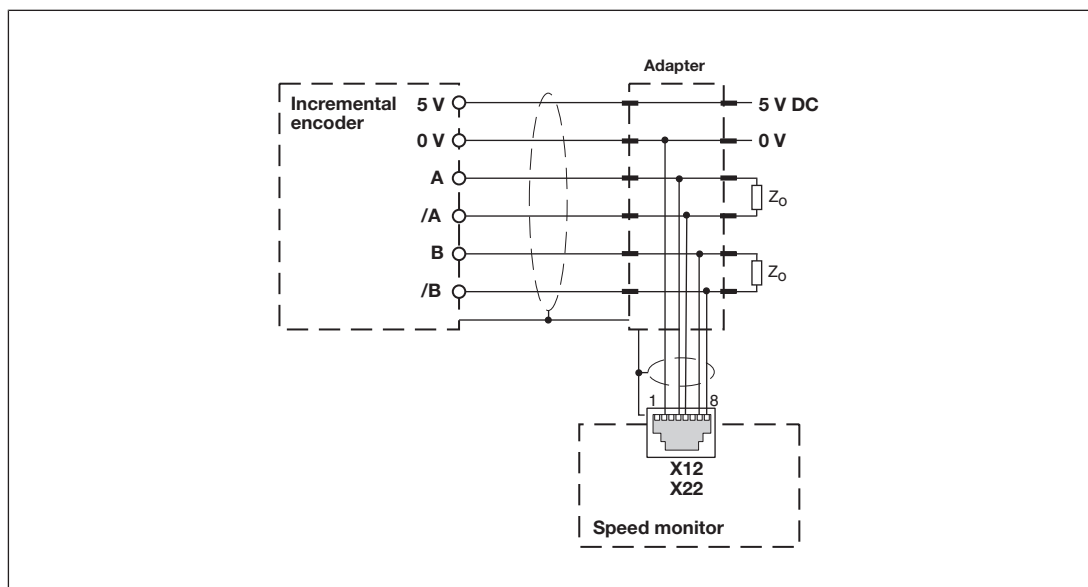


Fig.: Connection via adapter

Connection of proximity switches and incremental encoder

Proximity switch and incremental encoder on various axes

Axis 1:

Proximity switch at I10, I11

or

incremental encoder at X12

Speed monitors PNOZ ms2p TTL (Coated Version)

Axis 2:
Proximity switch at I20, I21
or
incremental encoder at X22

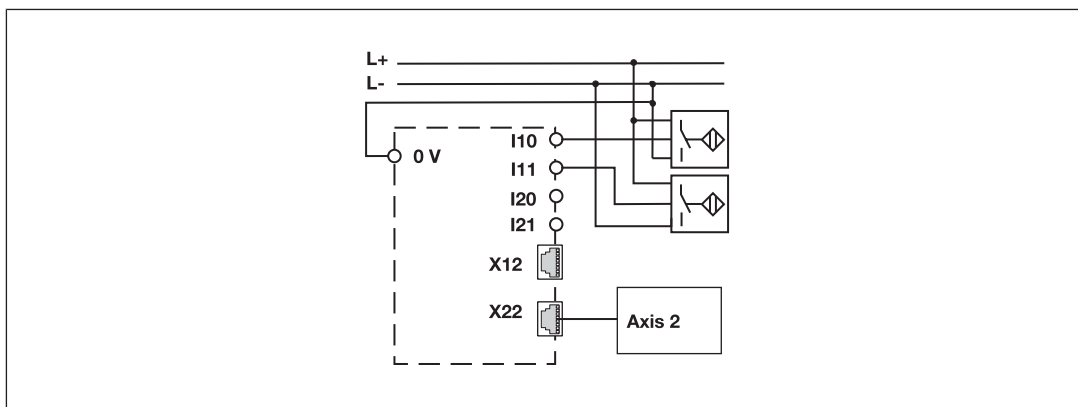


Fig.: Proximity switch and incremental encoder on various axes

Proximity switch and incremental encoder on one axis

Axis 1:
Proximity switch at I10 (I11 is unused)
and
Incremental encoder at X12
Axis 2:
Proximity switch at I20 (I21 is unused)
and
Incremental encoder at X22

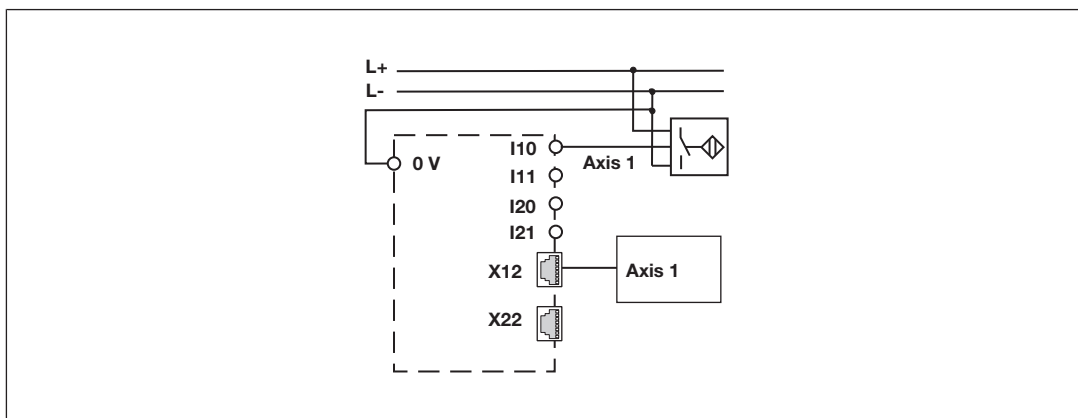


Fig.: Proximity switch and incremental encoder on one axis

Speed monitors PNOZ ms2p TTL (Coated Version)

Connection examples

Connection of 2 proximity switches and an incremental encoder

Description

- ▶ 2 proximity switches, pnp-switching
- ▶ 1 incremental encoder

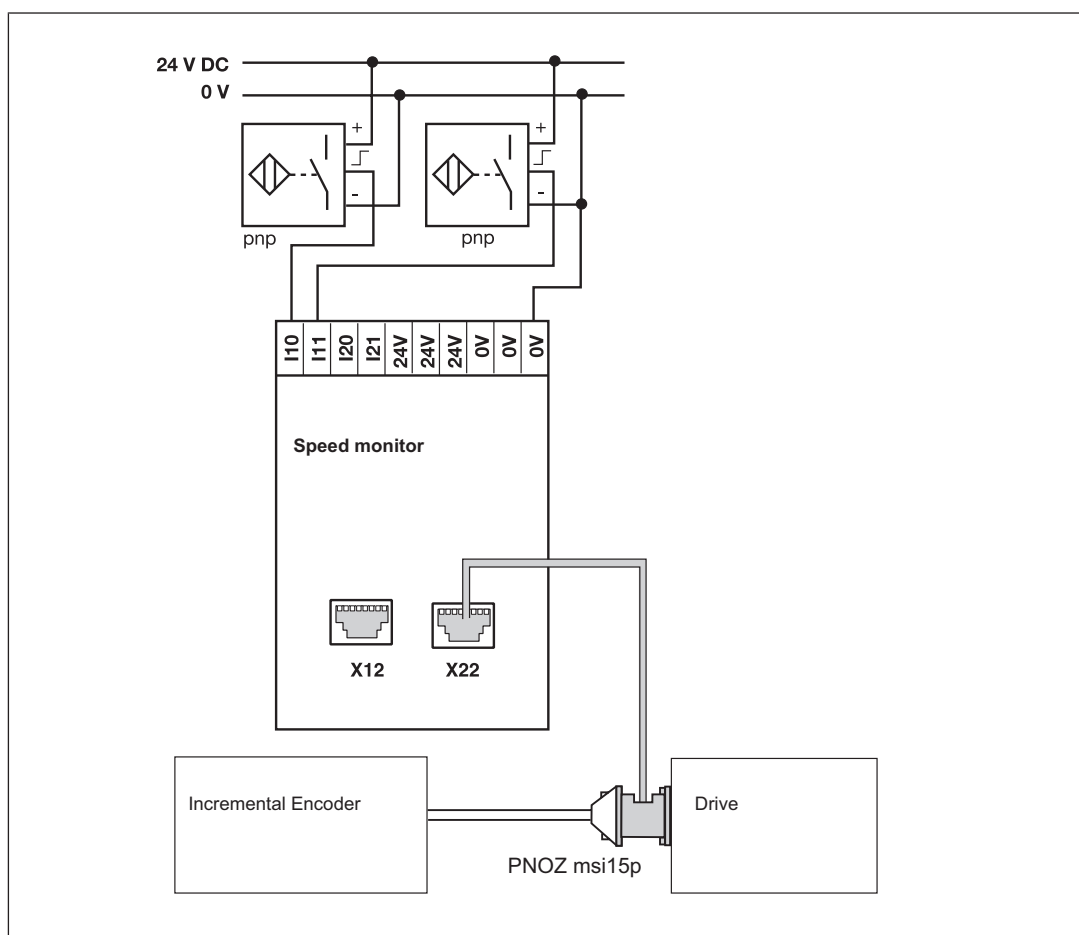


Fig.: Connection of 2 proximity switches, pnp-switching, one incremental encoder

Speed monitors PNOZ ms2p TTL (Coated Version)

Connection of 4 proximity switches

Description

- ▶ 4 proximity switches, pnp-switching
- ▶ Connection through 24 V terminals and 0 V

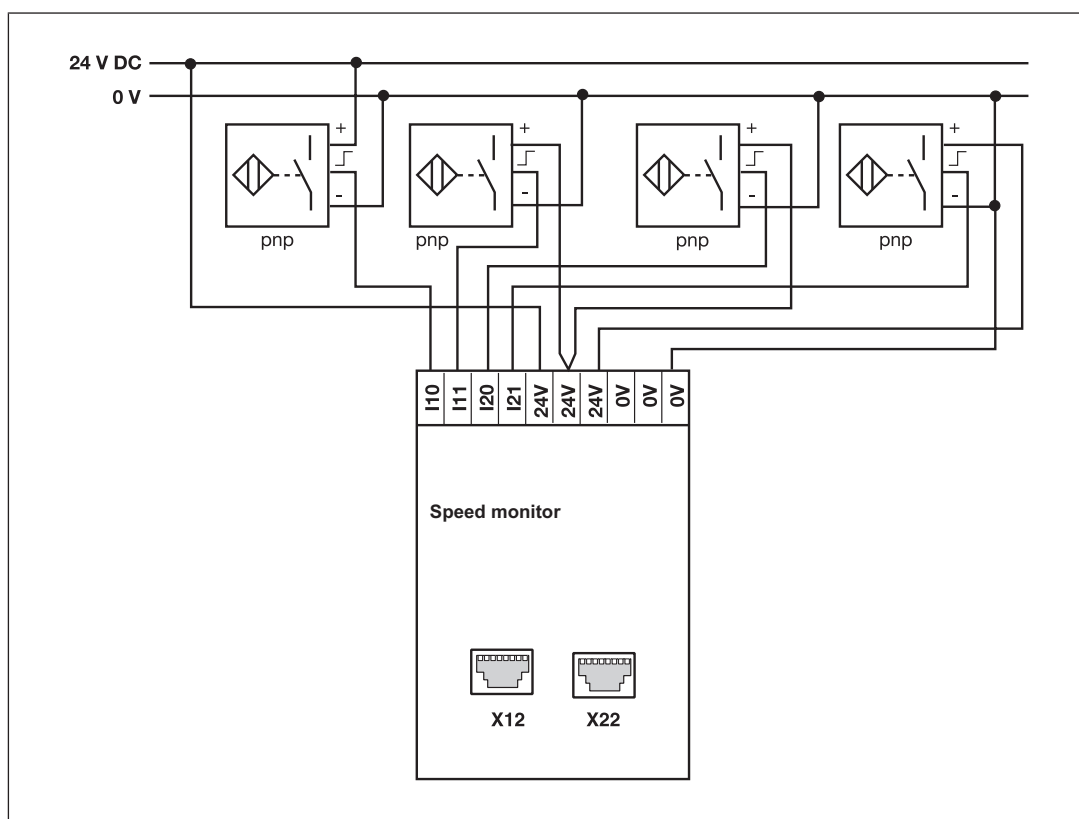


Fig.: Connection of 4 proximity switches, pnp-switching, connection through 24 V terminals and 0 V

Speed monitors PNOZ ms2p TTL (Coated Version)

Connection of an incremental encoder and proximity switch on an axis

Description

- ▶ 1 proximity switch, pnp-switching
- ▶ 1 incremental encoder
- ▶ Incremental encoder and proximity switch on one axis

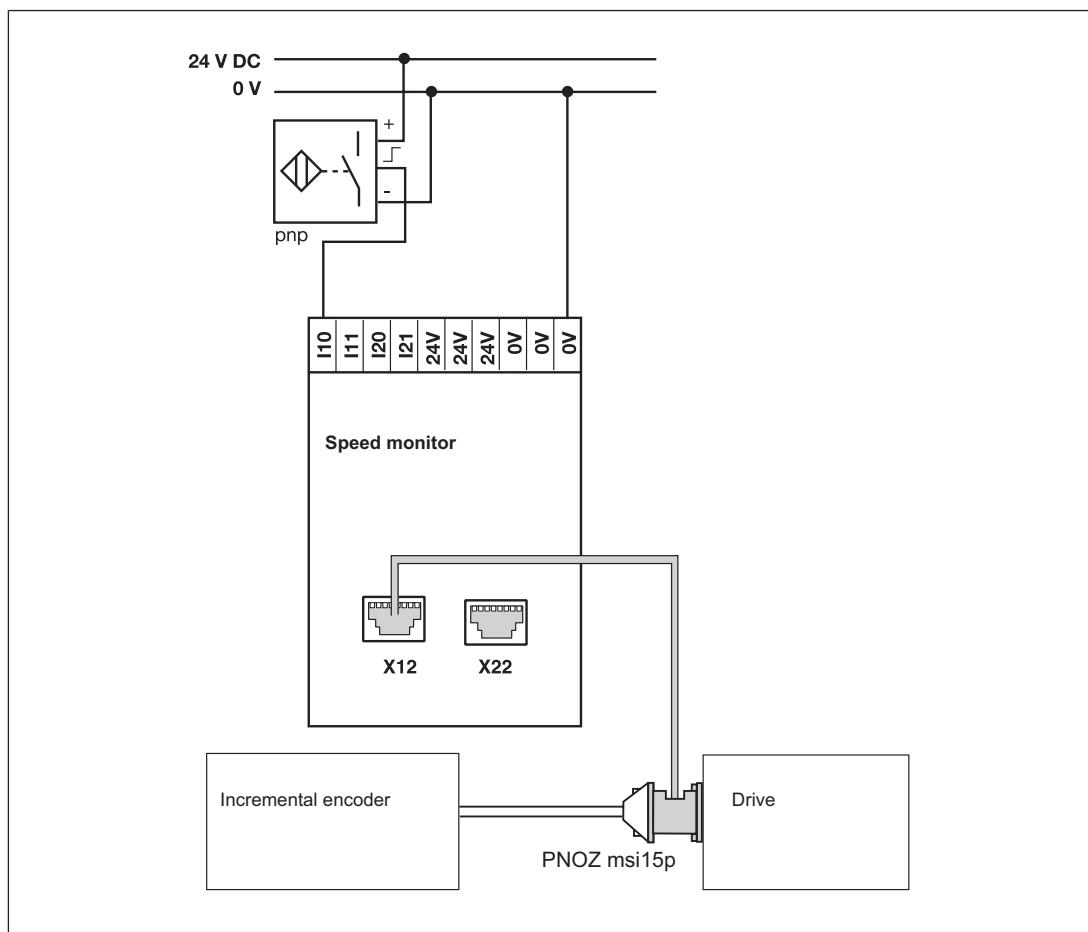


Fig.: Connection of an incremental encoder and proximity switch, pnp-switching, on an axis

Speed monitors PNOZ ms2p TTL (Coated Version)

Technical details

General	773811	773816
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	773811	773816
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	1 W	1 W
Status indicator	LED	LED
Proximity switch input	773811	773816
Number of inputs	4	4
Input signal level		
Signal level at "1"	11 - 30 V	11 - 30 V
Signal level at g0 h	-3 - 5 V	-3 - 5 V
Input resistance	3 kOhm	3 kOhm
Input's frequency range	0 - 3 kHz	0 - 3 kHz
Configurable monitoring frequency		
without hysteresis	0,1 Hz - 3 kHz	0,1 Hz - 3 kHz
with hysteresis	0.2 Hz - 3 kHz	0.2 Hz - 3 kHz
Incremental encoder input	773811	773816
Number of inputs	2	2
Connection type	RJ45 female connector, 8-pin	RJ45 female connector, 8-pin
Input signal level	0,5 - 5 Vss	0,5 - 5 Vss
Phase position for the differential signals A, /A and B, /B	90° ±30°	90° ±30°
Overload protection	-30 - 30 V	-30 - 30 V
Input resistance	10 kOhm	10 kOhm
Input's frequency range	0 - 500 kHz	0 - 500 kHz
Configurable monitoring frequency		
Without hysteresis	0,1 Hz - 500 kHz	0,1 Hz - 500 kHz
With hysteresis	0.2 Hz - 500 kHz	0.2 Hz - 500 kHz
Times	773811	773816
Configurable switch-off delay	0 - 2.500 ms	0 - 2.500 ms
Supply interruption before de-energisation	20 ms	20 ms

Speed monitors PNOZ ms2p TTL (Coated Version)

Times	773811	773816
Reaction time		
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms	10 ms
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms + 1/f	10 ms + 1/f
Environmental data		
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	-25 - 60 °C	0 - 60 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Short-term	Not permitted
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	5 - 500 Hz	10 - 150 Hz
Acceleration	1g	1g
Broadband noise		
in accordance with the standard	EN 60068-2-64	–
Frequency	5 - 500 Hz	–
Acceleration	1,9grms	–
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V

Speed monitors PNOZ ms2p TTL (Coated Version)

Environmental data	773811	773816
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773811	773816
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm
Stripping length with screw terminals	7 mm	7 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94 mm	94 mm
Width	45 mm	45 mm
Depth	121 mm	121 mm
Weight	220 g	220 g

Where standards are undated, the 2020-07 latest editions shall apply.

Speed monitors

PNOZ ms2p TTL (Coated Version)

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015 PL	EN ISO 13849-1: 2015 Category	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
Initiator	PL e	Cat. 3	SIL CL 3	3,68E-09	SIL 3	4,84E-05	20
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,73E-09	SIL 3	8,18E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Speed monitors

PNOZ ms2p TTL (Coated Version)

Order reference

Product

Product type	Features	Order no.
PNOZ ms2p TTL	Expansion module, speed monitor	773816
PNOZ ms2p TTL coated version	Expansion module, speed monitor, coated version	773811

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Connection terminals


Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783800
Set screw terminals	1 set of screw terminals	793800

Speed monitors

PNOZ ms2p TTL (Coated Version)

Application Examples

Safe standstill monitoring

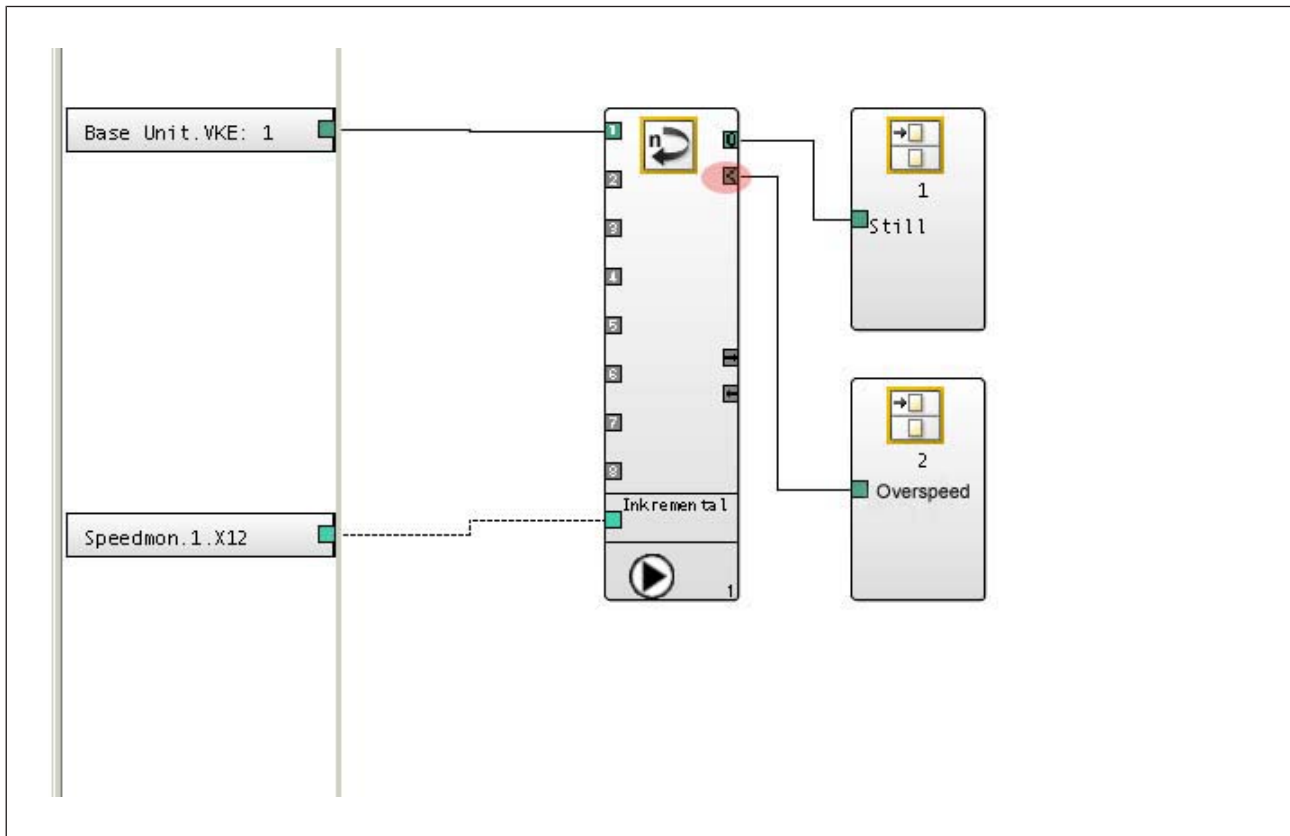

Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: greater than the maximum permitted speed.


If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis.

Speed monitors

PNOZ ms2p TTL (Coated Version)

Safe monitoring with "reduced speed" operating mode

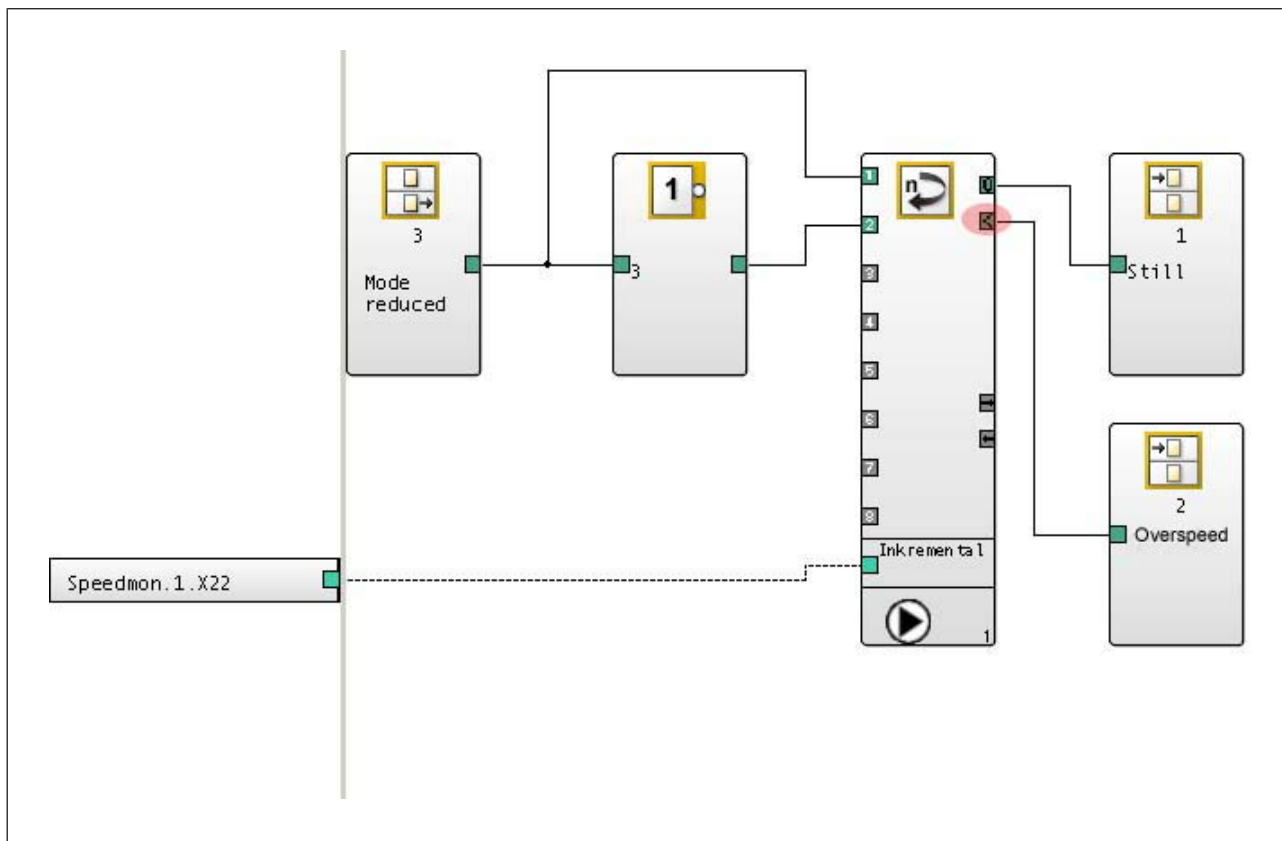

Configuration in the PNOZmulti Configurator

- ▶ Standstill: depending on requirement
- ▶ Speed n1: reduced speed, depending on requirement
- ▶ Speed n2: greater than the maximum permitted speed.

If the "Overspeed" output (see red marking) = "0", either the maximum permitted speed has been exceeded or the speed monitor has recognised a fault.

"Overspeed" output = "0" must lead to the shutdown of the relevant axis, irrespective of whether the "reduced speed" operating mode is active.

Speed monitors PNOZ ms3p



Overview

Unit features

Application of the product PNOZ ms3p:


Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
 - 1 incremental encoder
- ▶ Measured variables:
 - Standstill
 - Speed (8 values can be set)
 - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
 - Supply voltage
 - Incremental encoder
 - Axis status, standstill and excess speed
 - Faults on the system
- ▶ Incremental encoder connection technology:
RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

Speed monitors PNOZ ms3p

Front view

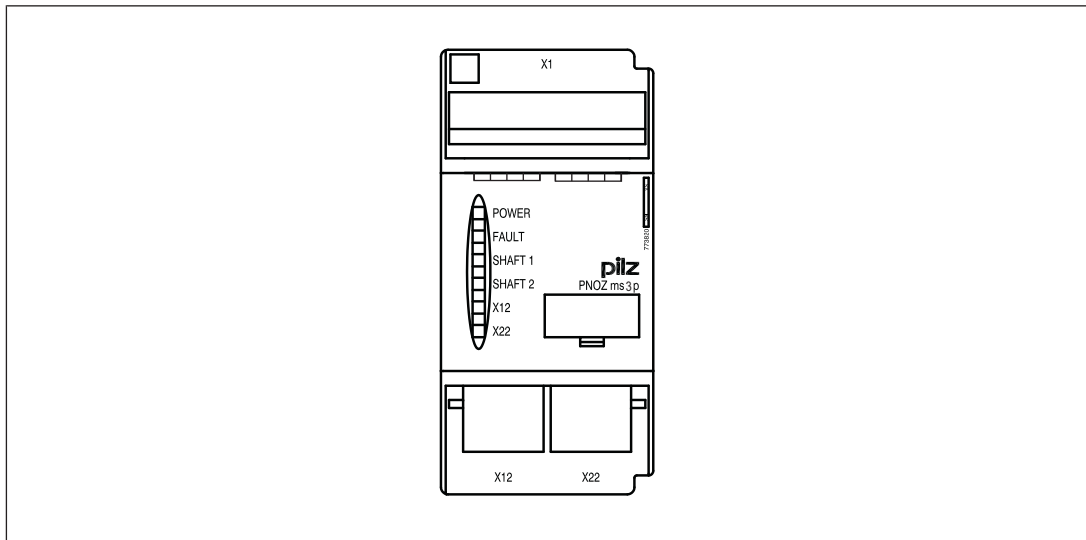

Key:

- ▶ X12:
 - Female connector for connecting an incremental encoder to axis 1
- ▶ X22:
 - Female connector for connecting an incremental encoder to axis 2
- ▶ LEDs:
 - POWER
 - FAULT
 - SHAFT 1
 - SHAFT 2
 - X12
 - X22

Function description


Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

Speed monitors PNOZ ms3p

Block diagram

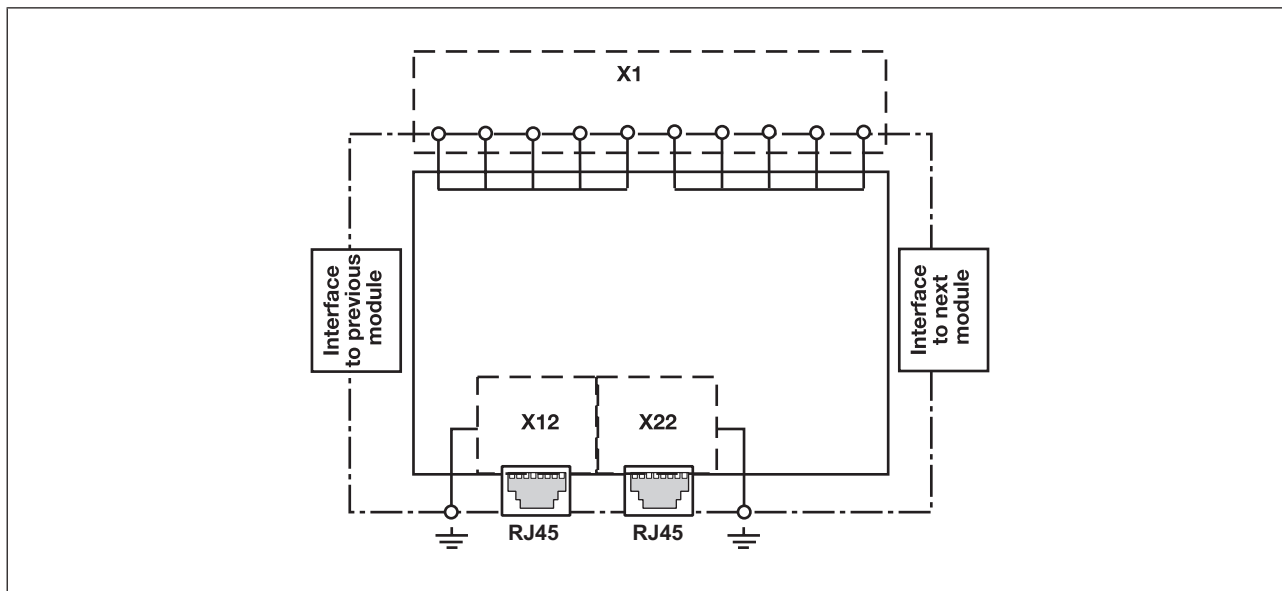

Incremental encoders

Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
 - Sin/Cos
 - TTL (RS 422)
 - HTL (24 V)
- ▶ Please note the values stated in the technical details

Adapter for incremental encoders


The adapter records the data between the encoder and drive and makes it available to the PNOZ ms3p via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

Speed monitors PNOZ ms3p

Installation

Dimensions

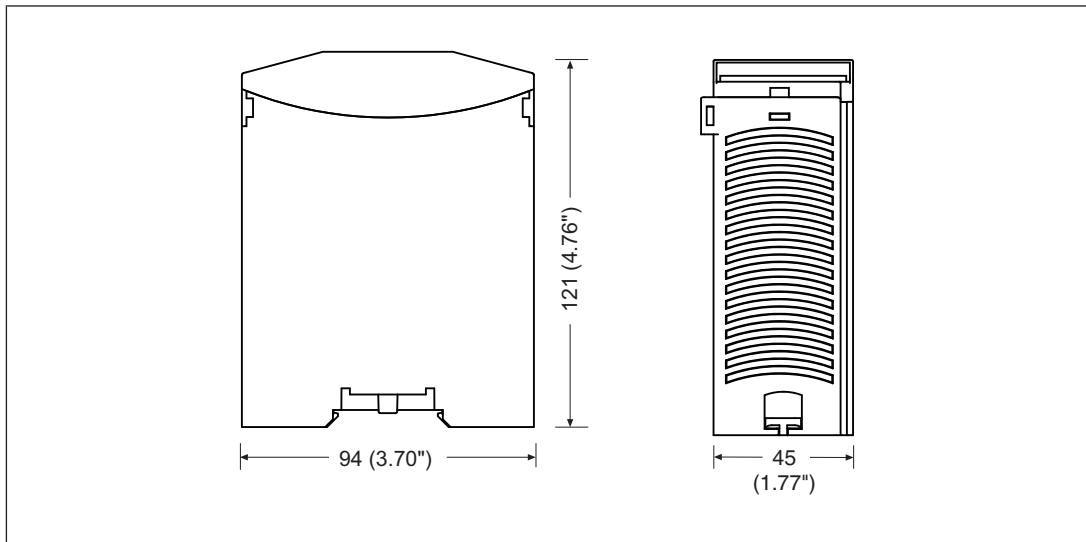

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[310\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Speed monitors PNOZ ms3p

Pin assignment of RJ45 socket

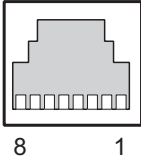RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

Connect the signals from the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 V DC to incremental encoder only
- ▶ Do not terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

Speed monitors PNOZ ms3p

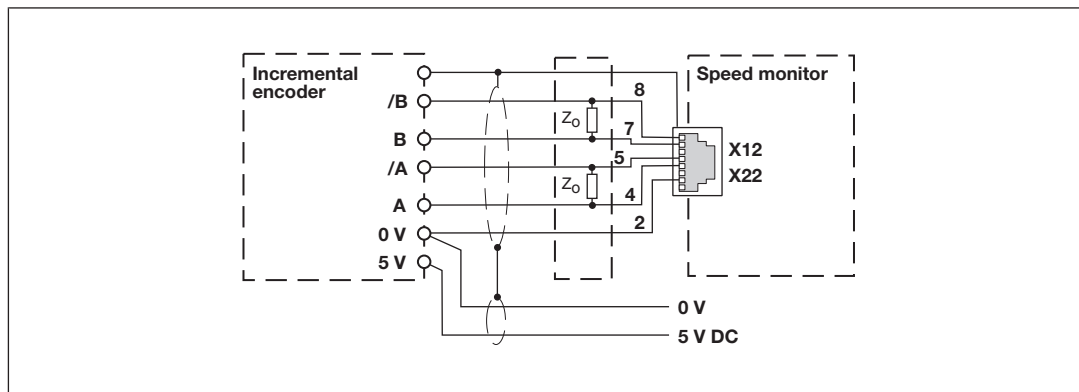


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

Encoder types: 24 V-HTL

- ▶ Apply 24 V DC supply voltage to incremental encoder only
- ▶ Do not terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

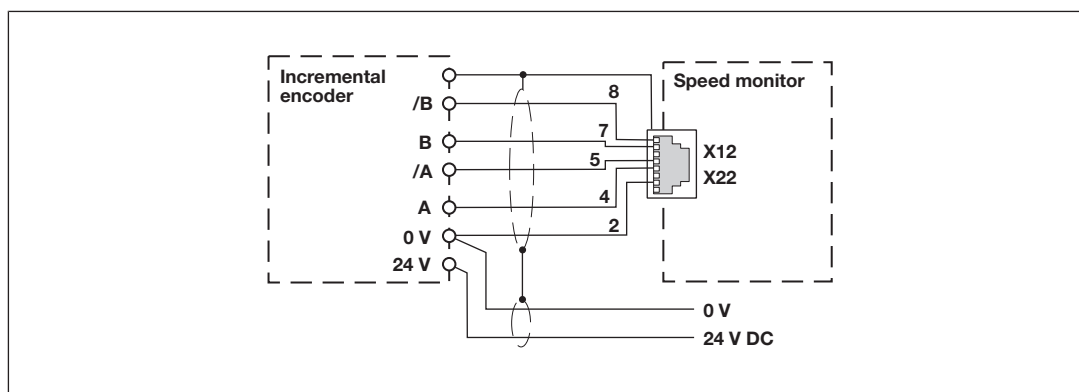


Fig.: Connection to incremental encoder type 24 V-HTL

Connect the incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with $Z_0 = 120 \text{ Ohm}$.
- ▶ If the signal lines in the drive are already terminated with $Z_0 = 120 \text{ Ohm}$, the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 VDC. 24 V-HTL signals may not be terminated.

Speed monitors PNOZ ms3p

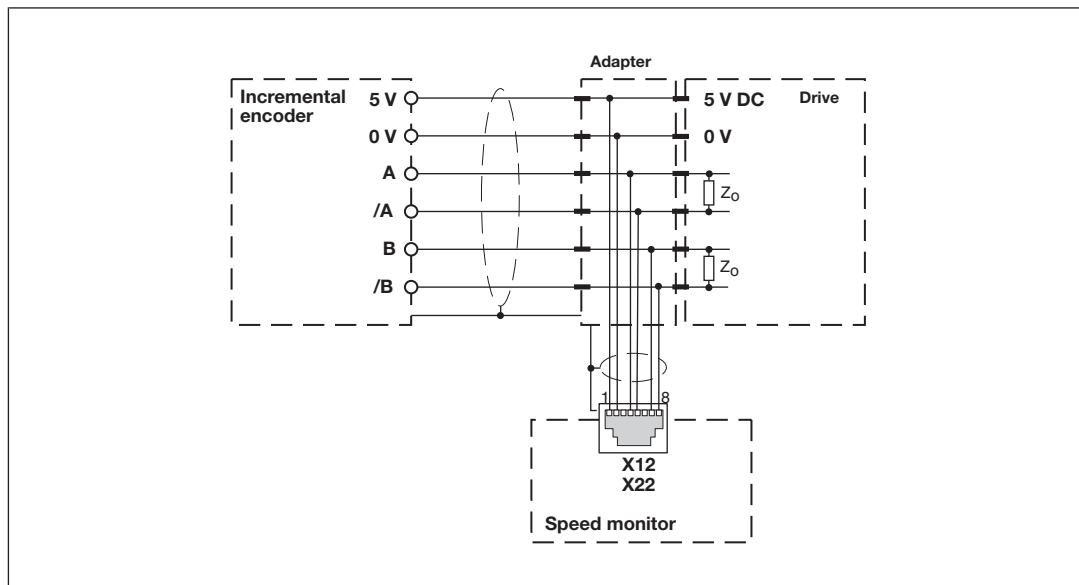


Fig.: Connection via adapter and drive

Technical details

General	
Certifications	CE, EAC, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	1 W
Status indicator	LED
Incremental encoder input	
Number of inputs	2
Connection type	RJ45 female connector, 8-pin
Input signal level	0,5 - 30 V_{ss}
Phase position for the differential signals A, /A and B, /B	90° ±30°
Overload protection	-30 - 30 V
Input resistance	10 kOhm
Input's frequency range	0 - 500 kHz

Speed monitors PNOZ ms3p

Incremental encoder input

Configurable monitoring frequency

Without hysteresis	0,1 Hz - 500 kHz
With hysteresis	0.2 Hz - 500 kHz

Times

Configurable switch-off delay **0 - 2.500 ms**

Supply interruption before de-energisation **20 ms**

Reaction time

f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit **10 ms**

f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit **10 ms + 1/f**

Environmental data

Ambient temperature

in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C

Storage temperature

in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C

Climatic suitability

in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C

Condensation during operation **Not permitted**

Max. operating height above SL **2000 m**

EMC **EN 61131-2**

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage **30 V**

Speed monitors PNOZ ms3p

Environmental data

Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94 mm
Width	45 mm
Depth	121 mm
Weight	211 g

Where standards are undated, the 2020-07 latest editions shall apply.

Speed monitors PNOZ ms3p

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN/IEC 61511	EN/IEC 61511	EN ISO 13849-1: 2015
PL	Category	SIL CL/ maximum SIL	PFH_D [1/h]	SIL	PFD	T_M [year]	

Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20
---------------------	-------------	---------------	-----------------	-----------------	--------------	-----------------	-----------

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Order reference

Product

Product type	Features	Order no.
PNOZ ms3p	Expansion module, speed monitor	773820

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783800
Set screw terminals	1 set of screw terminals	793800

Speed monitors PNOZ ms3p

Application examples

Examples without position control


Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

Example 1

Immediate shutdown as soon as diagnostic bit 10 is set.

The bit is evaluated as follows:

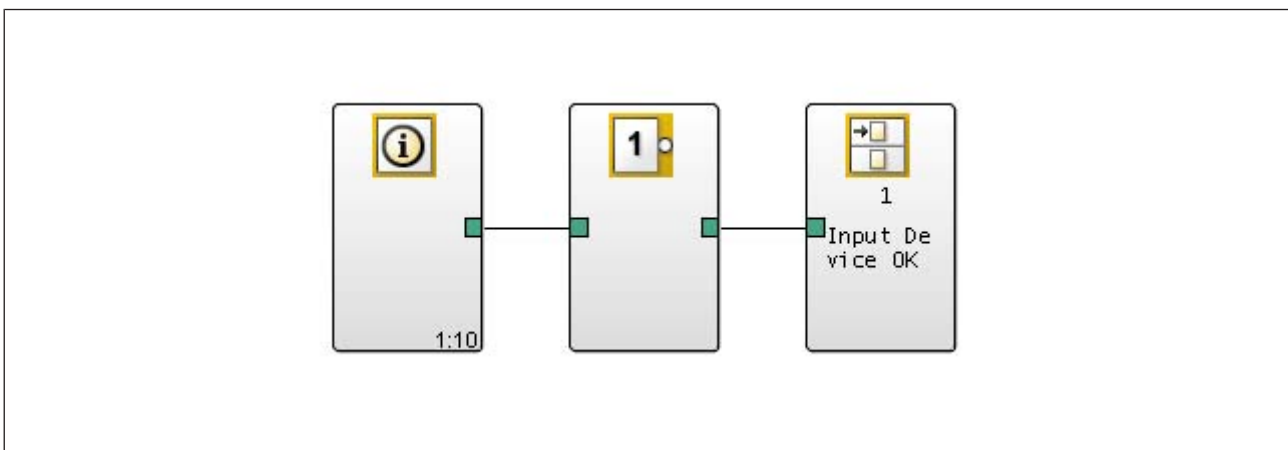


The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

Speed monitors PNOZ ms3p

Example 2

A set diagnostic bit 10 can be tolerated for a maximum of 4 hours (occurrence of second error). If no feasible signals above standstill frequency are measured within this time, a shut-down will occur.

In this case, the bit will be evaluated as follows:

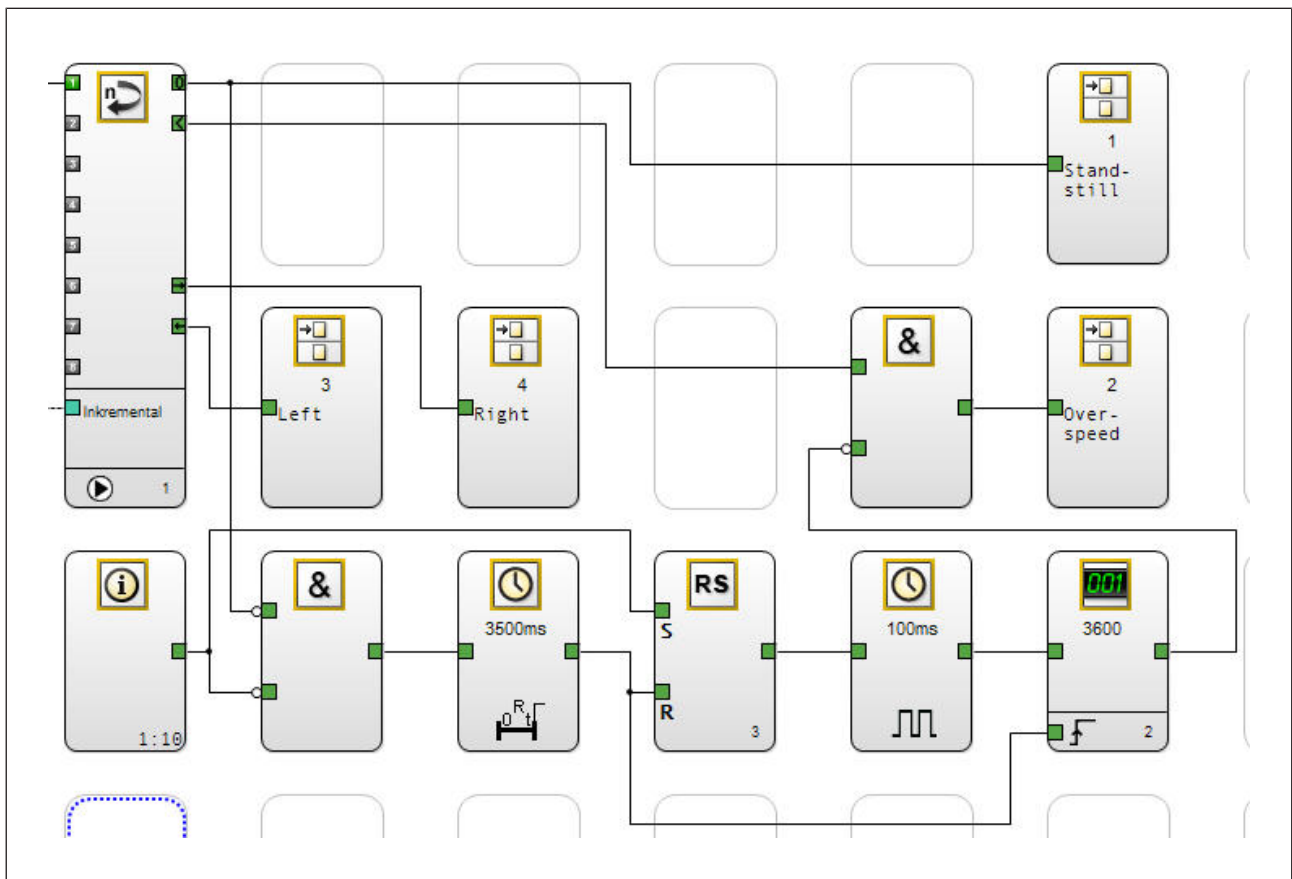

Please note that the direction of rotation must be evaluated for this example!

Speed monitors PNOZ ms3p

Example with position control

Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control


Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.

The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shutdown will not occur if the following conditions are met:

- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
 - Position control: Signal status = 1
 - Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

Application example:

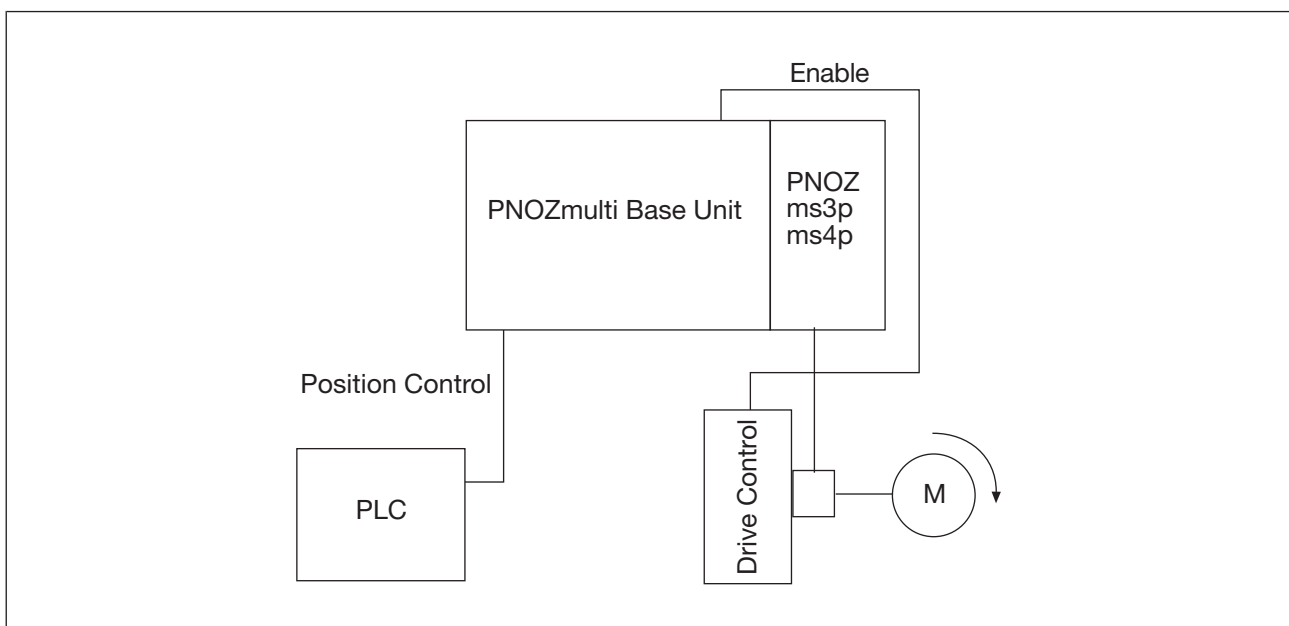

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

Speed monitors PNOZ ms3p

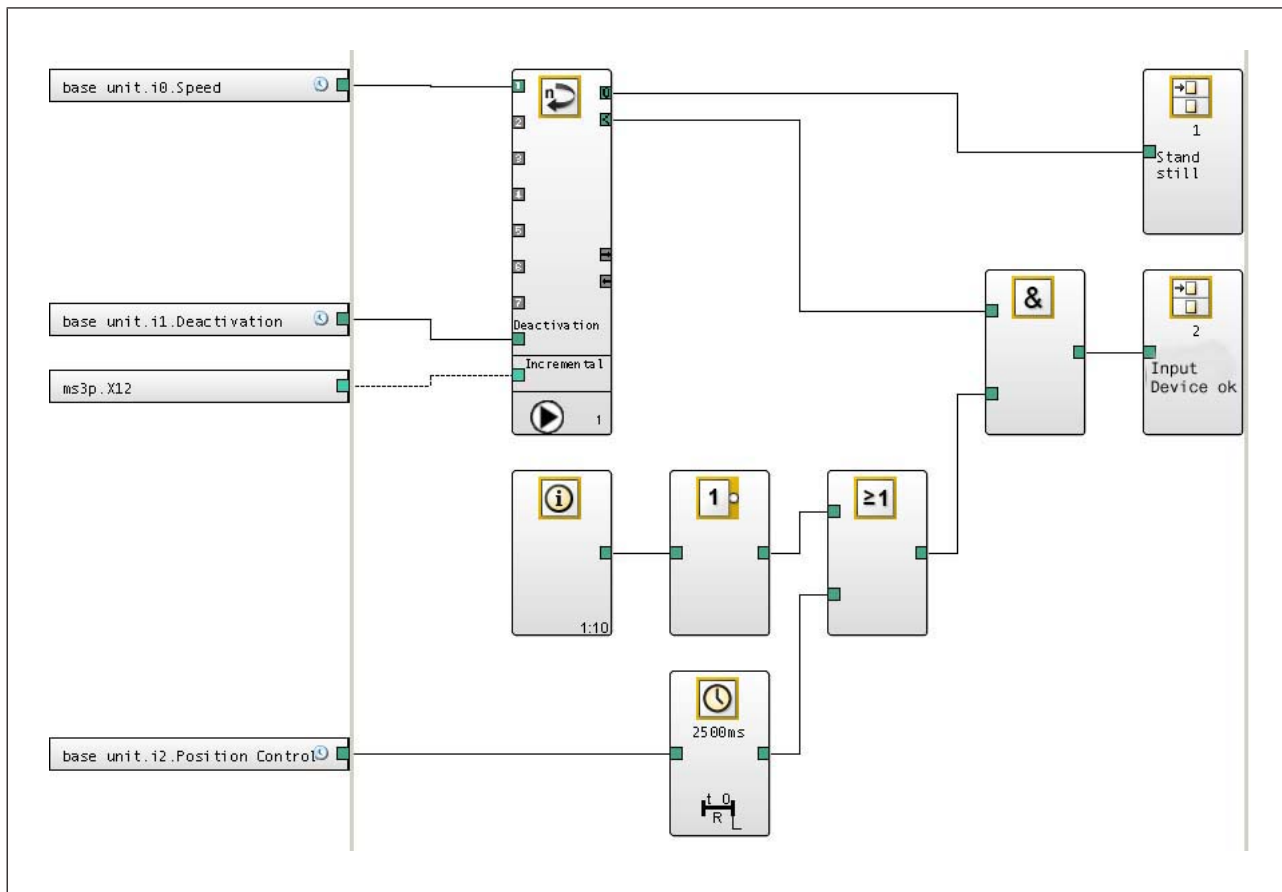

An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

Speed monitors PNOZ ms3p HTL



Overview

Unit features

Application of the product PNOZ ms3p HTL:


Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
 - 1 incremental encoder
- ▶ Measured variables:
 - Standstill
 - Speed (8 values can be set)
 - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
 - Supply voltage
 - Incremental encoder
 - Axis status, standstill and excess speed
 - Faults on the system
- ▶ Incremental encoder connection technology:
RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

Speed monitors PNOZ ms3p HTL

Front view

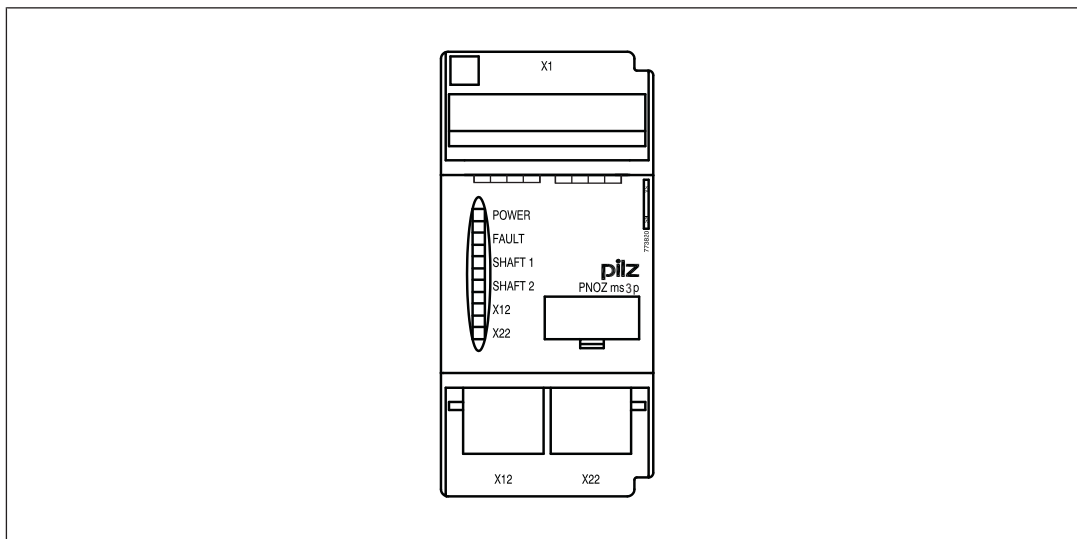

Key:

- ▶ X12:
 - Female connector for connecting an incremental encoder to axis 1
- ▶ X22:
 - Female connector for connecting an incremental encoder to axis 2
- ▶ LEDs:
 - POWER
 - FAULT
 - SHAFT 1
 - SHAFT 2
 - X12
 - X22

Function description


Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

Speed monitors PNOZ ms3p HTL

Block diagram

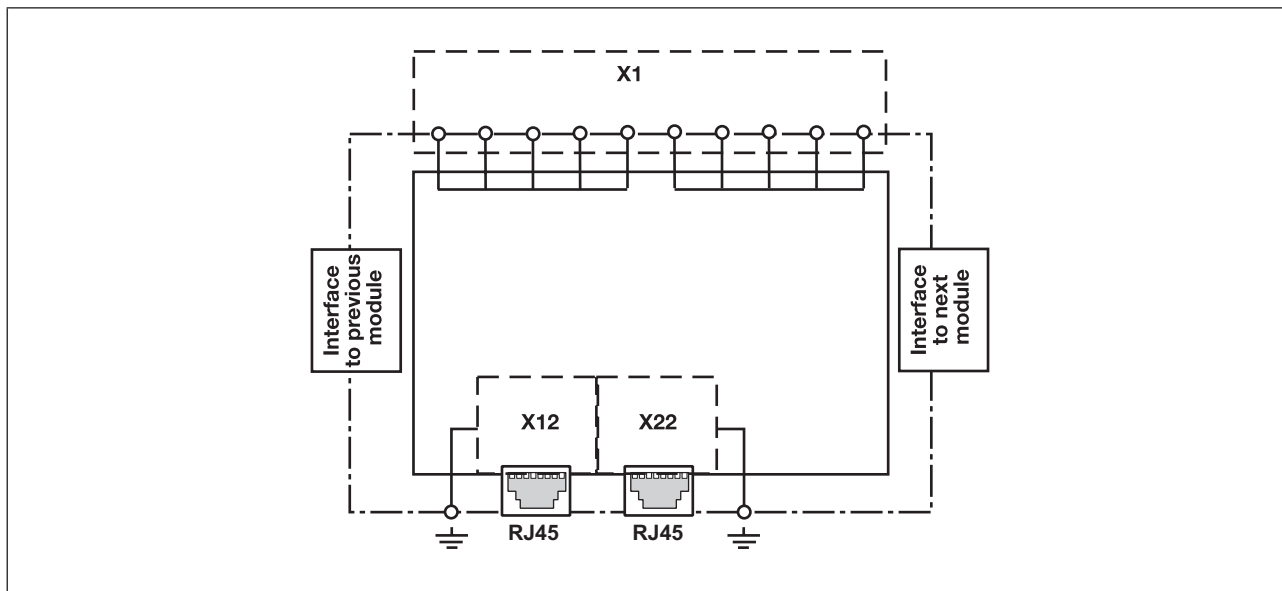

Incremental encoders

Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
 - HTL (12 V – 30 V)
- ▶ Please note the values stated in the technical details

Adapter for incremental encoders


The adapter records the data between the encoder and drive and makes it available to the PNOZ ms3p HTL via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

Speed monitors PNOZ ms3p HTL

Installation

Dimensions

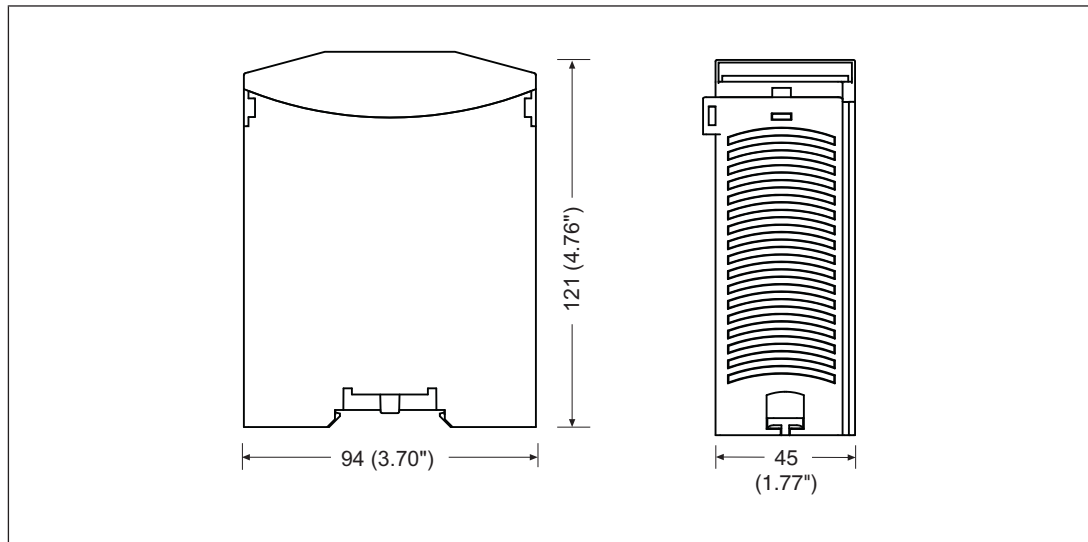

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[310\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Speed monitors PNOZ ms3p HTL

Pin assignment of RJ45 socket

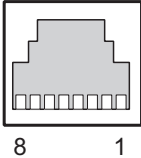RJ45 socket 8-pin	PIN	Track
	1	5 V
	2	0 V
	3	T
	4	A
	5	/A
	6	/Z
	7	B
	8	/B

Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

Connect the signals from the incremental encoder to the speed monitor

Encoder types: 24 V-HTL

- ▶ Apply 24 VDC supply voltage to incremental encoder only
- ▶ Do not terminate incremental encoder with $Z0 = 120 \text{ Ohm}$

Speed monitors PNOZ ms3p HTL

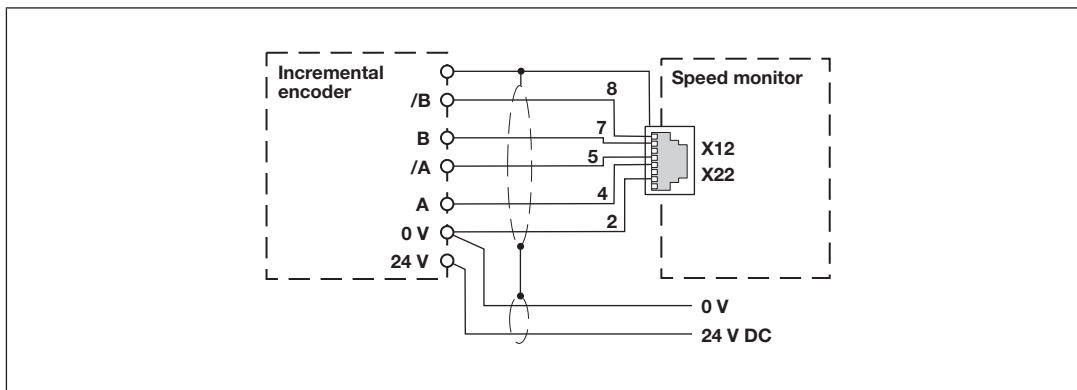


Fig.: Connection to incremental encoder type 24 V-HTL

Connect the incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply voltage (12 V – 30 V) to incremental encoder only.
- ▶ HTL signals may not be fitted with a terminating resistor.

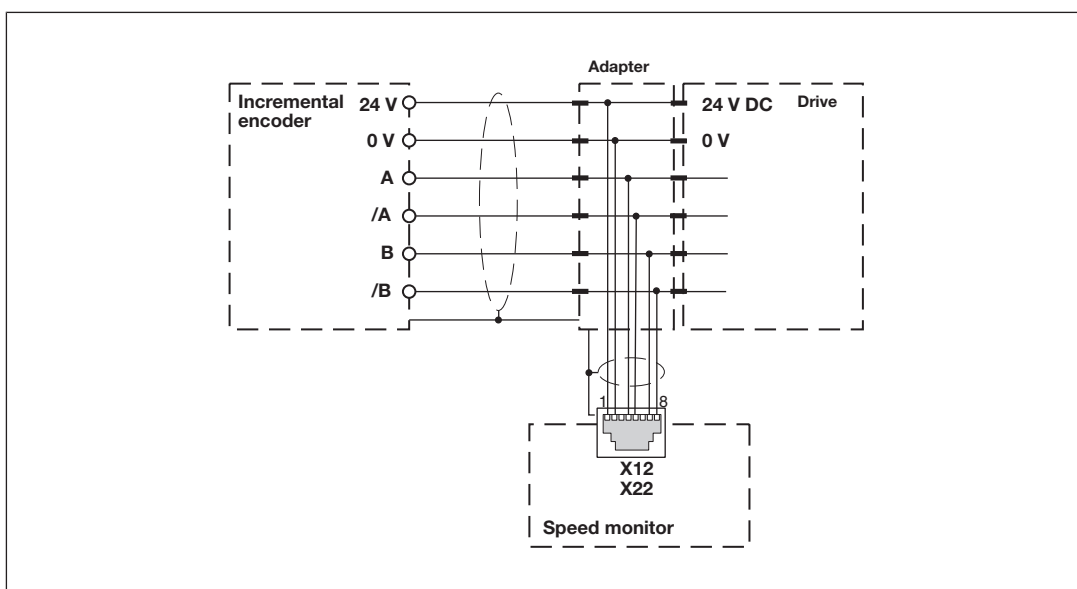


Fig.: Connection via adapter and drive

Speed monitors PNOZ ms3p HTL

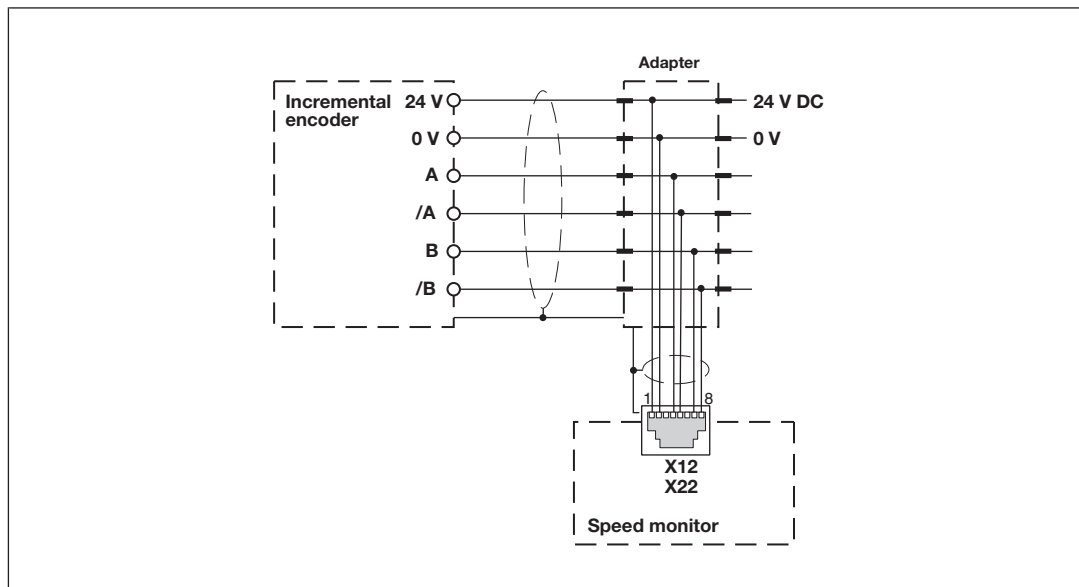


Fig.: Connection via adapter

Technical details

General

Certifications **CE, EAC, TÜV, UKCA, cULus Listed**

Electrical data

Supply voltage

for

internal

Voltage

Kind

Voltage tolerance

Power consumption

Module supply

Via base unit

5 V

DC

-2 %/+2 %

1 W

Status indicator

LED

Incremental encoder input

Number of inputs

2

Connection type

RJ45 female connector, 8-pin

Input signal level

12 - 30 V_{ss}

Phase position for the differential signals A, /A and B, /B

90° ±30°

Overload protection

-30 - 30 V

Input resistance

10 kOhm

Input's frequency range

0 - 200 kHz

Speed monitors PNOZ ms3p HTL

Incremental encoder input

Configurable monitoring frequency

Without hysteresis	0,1 Hz - 200 kHz
With hysteresis	0.2 Hz - 200 kHz

Times

Configurable switch-off delay **0 - 2.500 ms**

Supply interruption before de-energisation **20 ms**

Reaction time

f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit **10 ms**

f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit **10 ms + 1/f**

Environmental data

Ambient temperature

in accordance with the standard **EN 60068-2-14**

Temperature range **0 - 60 °C**

Storage temperature

in accordance with the standard **EN 60068-2-1/-2**

Temperature range **-25 - 70 °C**

Climatic suitability

in accordance with the standard **EN 60068-2-30, EN 60068-2-78**

Humidity **93 % r. h. at 40 °C**

Condensation during operation

Not permitted

Max. operating height above SL

2000 m

EMC

EN 61131-2

Vibration

in accordance with the standard **EN 60068-2-6**

Frequency **10 - 150 Hz**

Acceleration **1g**

Shock stress

in accordance with the standard **EN 60068-2-27**

Acceleration **15g**

Duration **11 ms**

Airgap creepage

in accordance with the standard **EN 61131-2**

Overvoltage category **III**

Pollution degree **2**

Rated insulation voltage

30 V

Speed monitors PNOZ ms3p HTL

Environmental data

Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94 mm
Width	45 mm
Depth	121 mm
Weight	211 g

Where standards are undated, the 2020-07 latest editions shall apply.

Speed monitors PNOZ ms3p HTL

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN/IEC 61511	EN/IEC 61511	EN ISO 13849-1: 2015
	PL	Category	SIL CL/ maximum SIL	PFH_D [1/h]	SIL	PFD	T_M [year]

Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20
---------------------	-------------	---------------	-----------------	-----------------	--------------	-----------------	-----------

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Order reference

Product

Product type	Features	Order no.
PNOZ ms3p HTL	Expansion module, speed monitor	773825

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783800
Set screw terminals	1 set of screw terminals	793800

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Speed monitors PNOZ ms3p HTL

Application examples

Examples without position control


Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

Example 1

Immediate shutdown as soon as diagnostic bit 10 is set.

The bit is evaluated as follows:

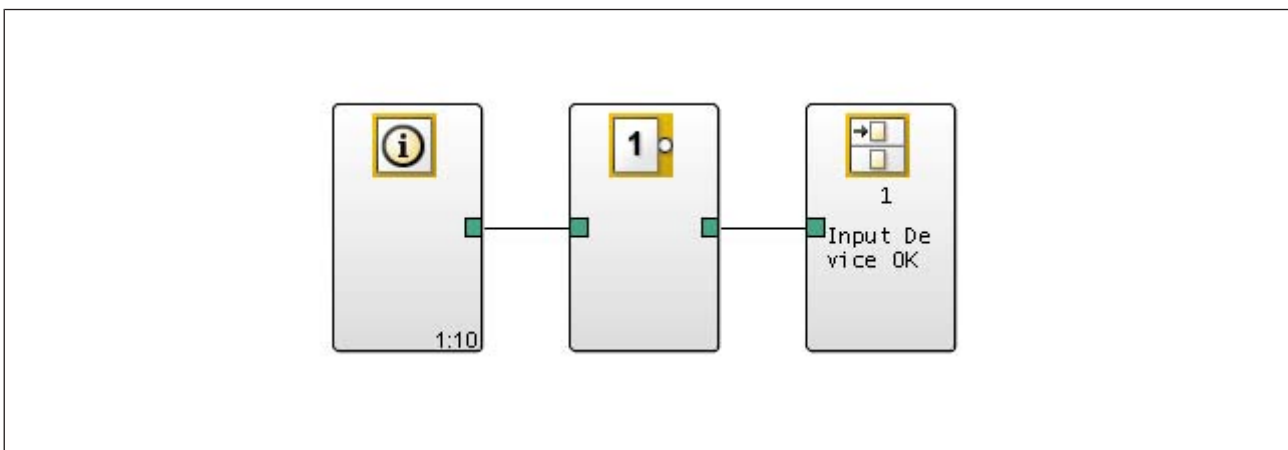


The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

Speed monitors PNOZ ms3p HTL

Example 2

A set diagnostic bit 10 can be tolerated for a maximum of 4 hours (occurrence of second error). If no feasible signals above standstill frequency are measured within this time, a shut-down will occur.

In this case, the bit will be evaluated as follows:

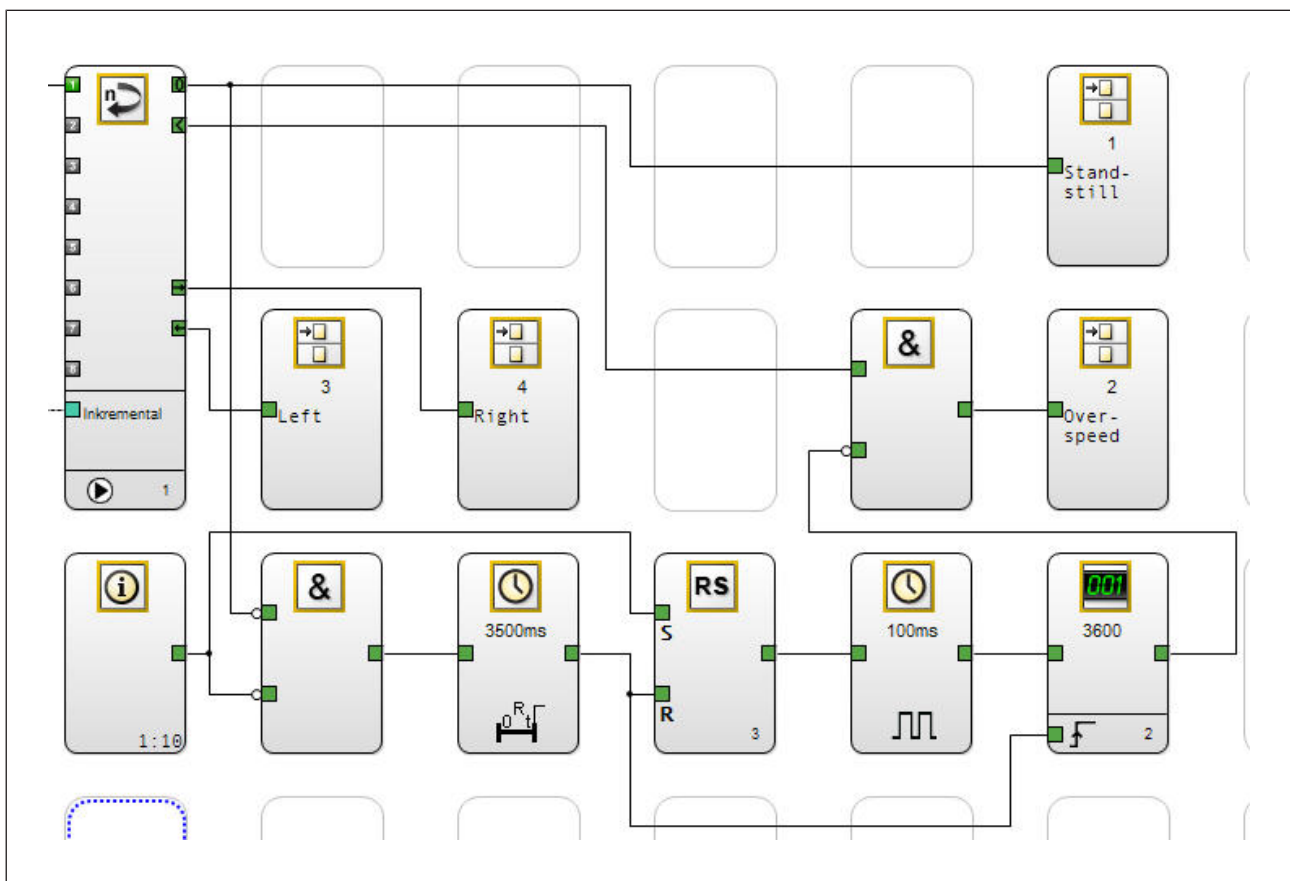

Please note that the direction of rotation must be evaluated for this example!

Example with position control

Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.

The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shut-down will not occur if the following conditions are met:


- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
 - Position control: Signal status = 1

Speed monitors PNOZ ms3p HTL

- Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

Application example:

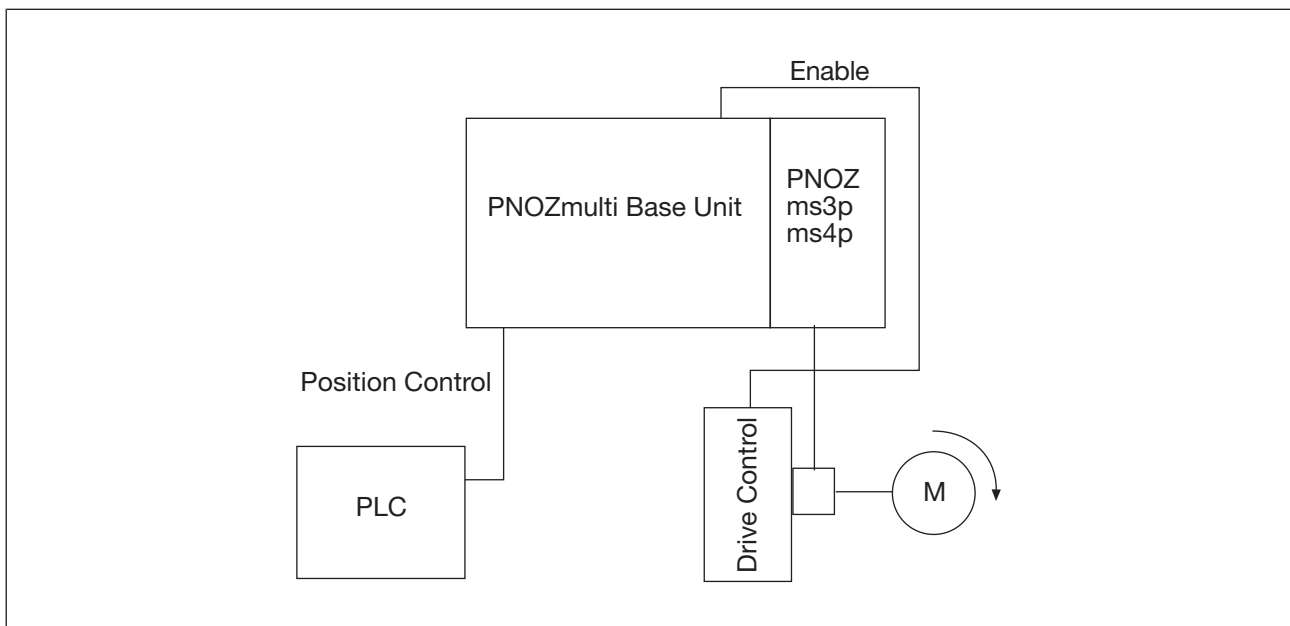

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

Speed monitors PNOZ ms3p HTL

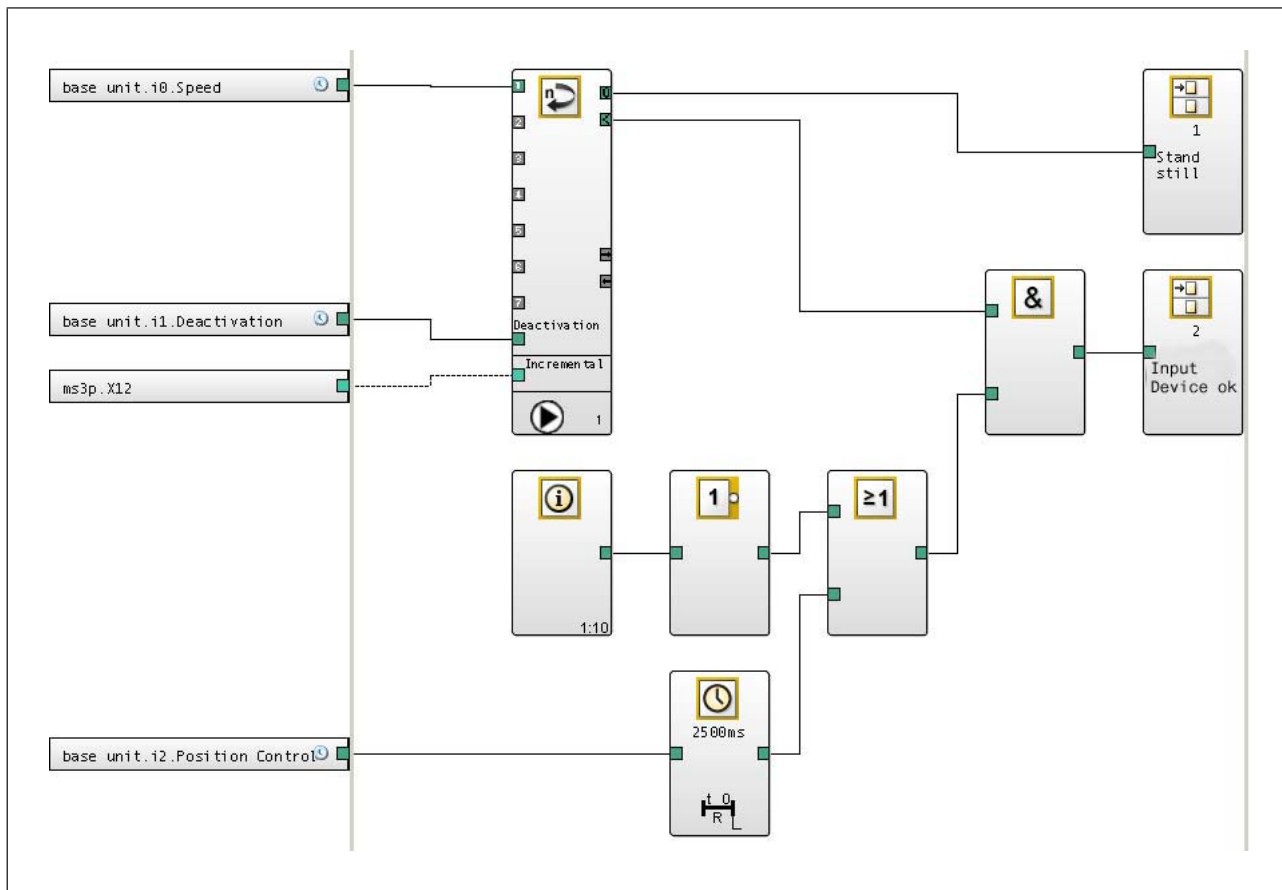

An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK"= 0.

Speed monitors PNOZ ms3p TTL



Overview

Unit features

Application of the product PNOZ ms3p TTL:


Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Monitoring of 2 independent axes
- ▶ Connection per axis
 - 1 incremental encoder
- ▶ Measured variables:
 - Standstill
 - Speed (8 values can be set)
 - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
 - Supply voltage
 - Incremental encoder
 - Axis status, standstill and excess speed
 - Faults on the system
- ▶ Incremental encoder connection technology:
RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1, X12 and X22
- ▶ Max. 4 speed monitors can be connected to the base unit

Speed monitors PNOZ ms3p TTL

Front view

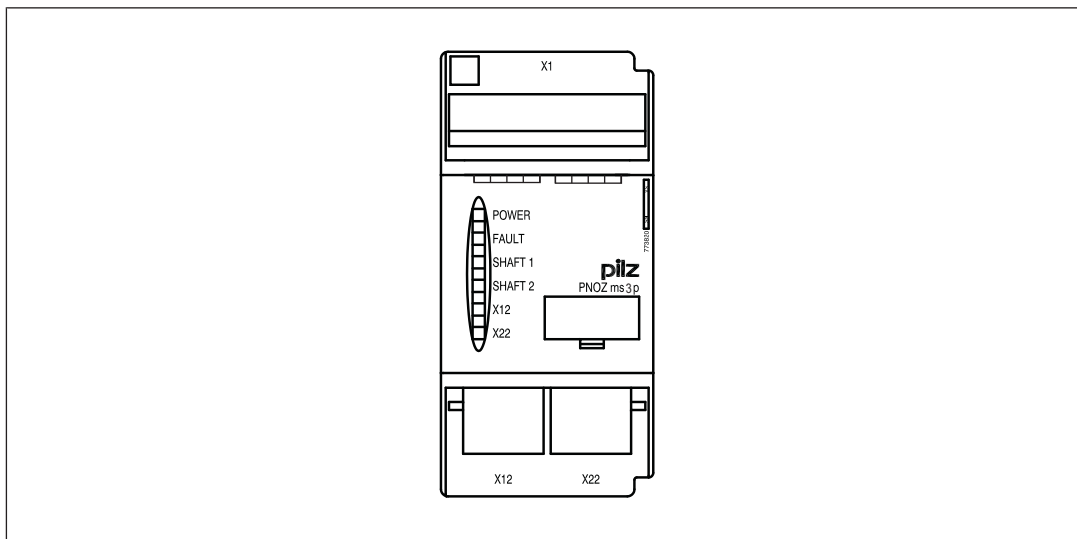

Key:

- ▶ X12:
 - Female connector for connecting an incremental encoder to axis 1
- ▶ X22:
 - Female connector for connecting an incremental encoder to axis 2
- ▶ LEDs:
 - POWER
 - FAULT
 - SHAFT 1
 - SHAFT 2
 - X12
 - X22

Function description


Operation

The speed monitor can independently monitor two axes for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

Speed monitors PNOZ ms3p TTL

Block diagram

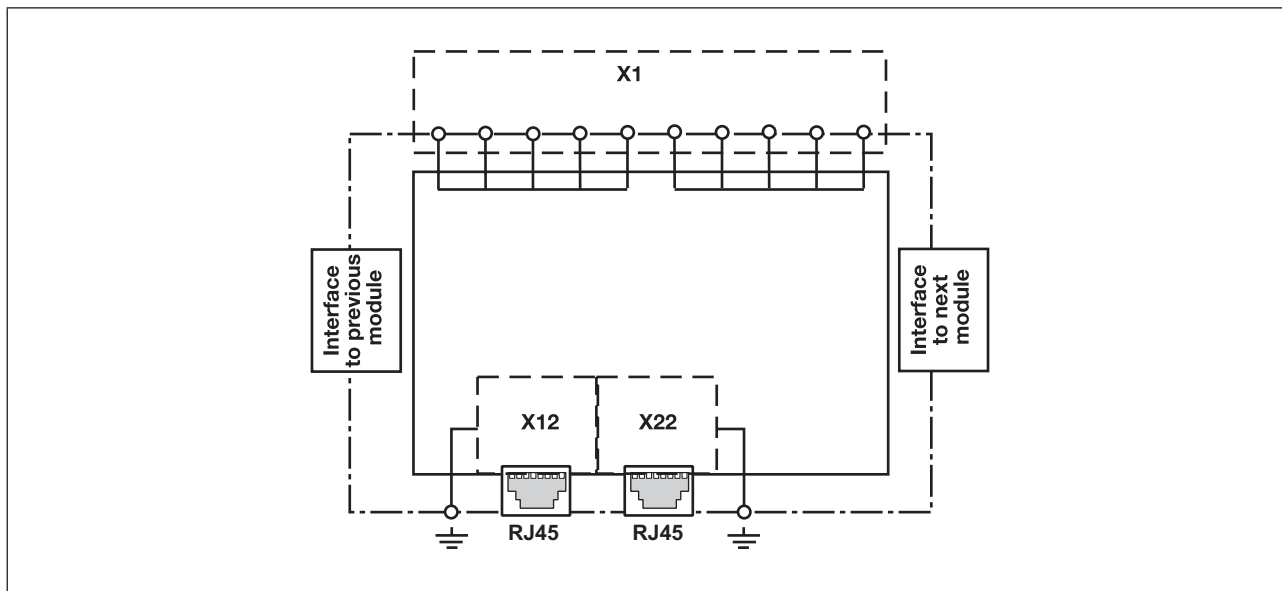

Incremental encoders

Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
 - Sin/Cos
 - TTL (RS422)
- ▶ Please note the values stated in the technical details

Adapter for incremental encoders


The adapter records the data between the encoder and drive and makes it available to the PNOZ ms3p TTL via the RJ45 socket.

Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

Speed monitors PNOZ ms3p TTL

Installation

Dimensions

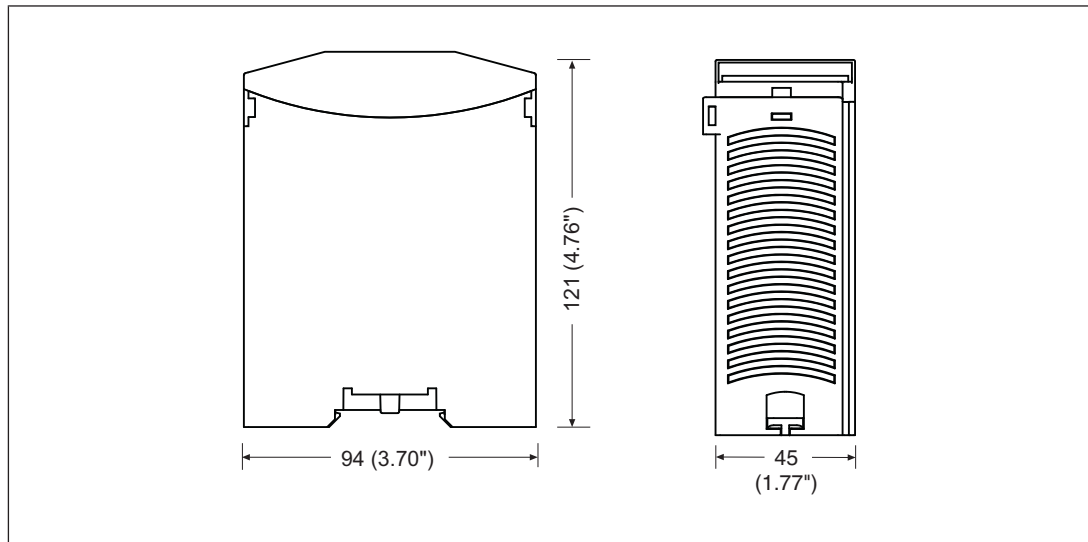

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[310\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Speed monitors PNOZ ms3p TTL

Pin assignment of RJ45 socket

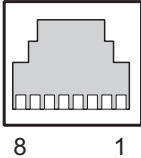RJ45 socket 8-pin	PIN	Track
	1	n.c.
	2	0 V
	3	n.c.
	4	A
	5	/A
	6	n.c.
	7	B
	8	/B

Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors axis 1; the incremental encoder on connector X22 monitors axis 2.
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

Connect the signals from the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 VDC to incremental encoder only
- ▶ Do not terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

Speed monitors PNOZ ms3p TTL

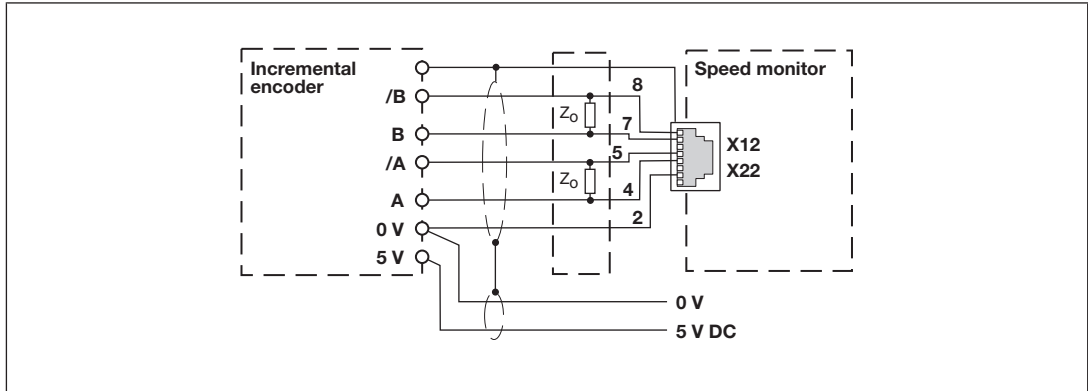


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

Connect the incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the female RJ45 connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with $Z_0 = 120 \text{ Ohm}$.
- ▶ If the signal lines in the drive are already terminated with $Z_0 = 120 \text{ Ohm}$, the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 VDC.

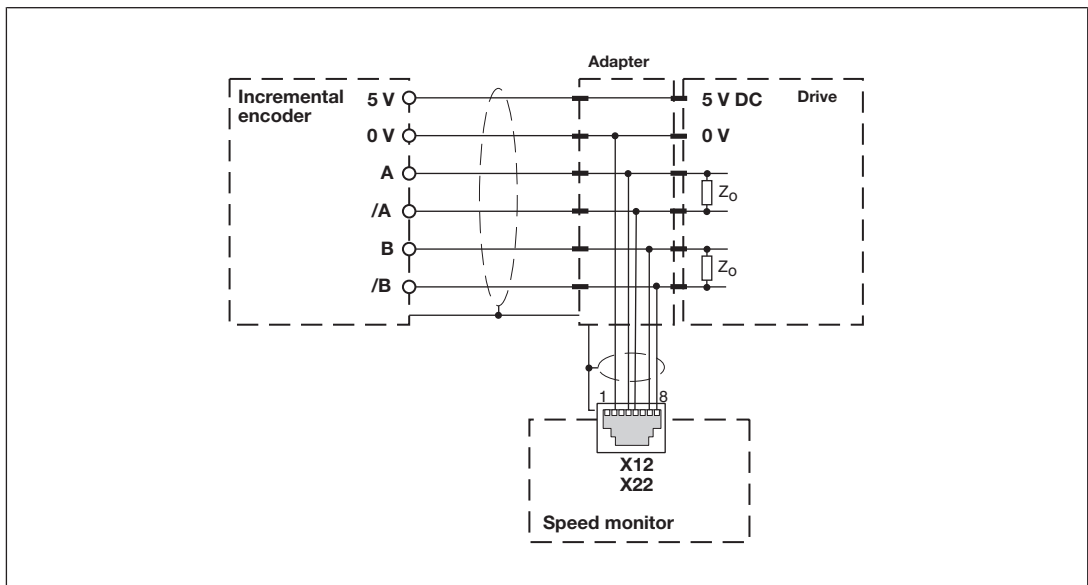


Fig.: Connection via adapter and drive

Speed monitors PNOZ ms3p TTL

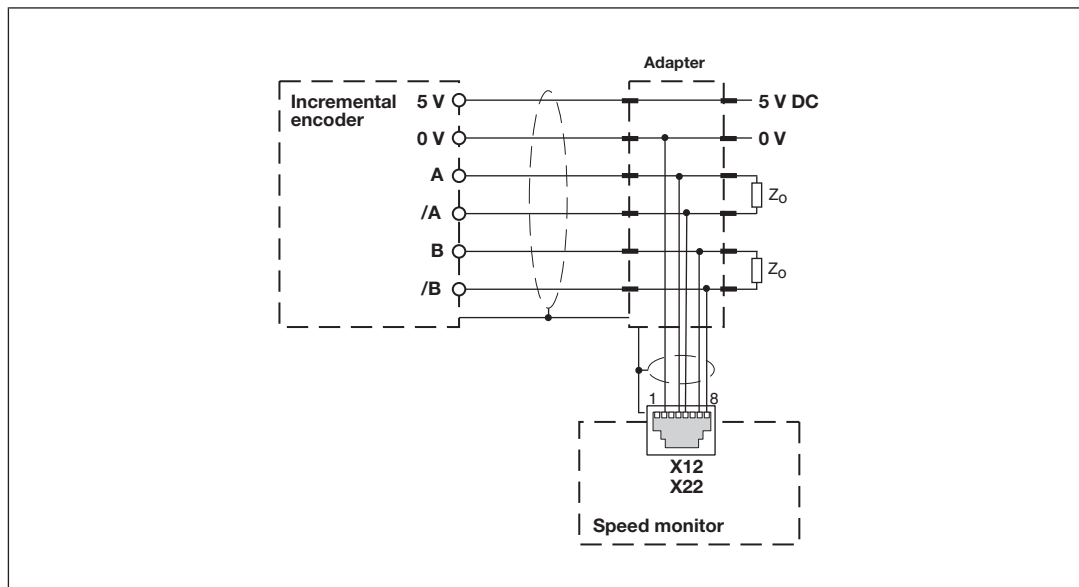


Fig.: Connection via adapter

Technical details

General

Certifications **CE, EAC, TÜV, UKCA, cULus Listed**

Electrical data

Supply voltage

for

internal

Voltage

Kind

Voltage tolerance

Power consumption

Module supply

Via base unit

5 V

DC

-2 %/+2 %

1 W

Status indicator

LED

Incremental encoder input

Number of inputs

2

Connection type

RJ45 female connector, 8-pin

Input signal level

0,5 - 5 V_{ss}

Phase position for the differential signals A, /A and B, /B

90° ±30°

Overload protection

-30 - 30 V

Input resistance

10 kOhm

Input's frequency range

0 - 500 kHz

Speed monitors PNOZ ms3p TTL

Incremental encoder input

Configurable monitoring frequency

Without hysteresis	0,1 Hz - 500 kHz
With hysteresis	0.2 Hz - 500 kHz

Times

Configurable switch-off delay **0 - 2.500 ms**

Supply interruption before de-energisation **20 ms**

Reaction time

f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit **10 ms**

f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit **10 ms + 1/f**

Environmental data

Ambient temperature

in accordance with the standard **EN 60068-2-14**

Temperature range **0 - 60 °C**

Storage temperature

in accordance with the standard **EN 60068-2-1/-2**

Temperature range **-25 - 70 °C**

Climatic suitability

in accordance with the standard **EN 60068-2-30, EN 60068-2-78**

Humidity **93 % r. h. at 40 °C**

Condensation during operation

Not permitted

Max. operating height above SL

2000 m

EMC

EN 61131-2

Vibration

in accordance with the standard **EN 60068-2-6**

Frequency **10 - 150 Hz**

Acceleration **1g**

Shock stress

in accordance with the standard **EN 60068-2-27**

Acceleration **15g**

Duration **11 ms**

Airgap creepage

in accordance with the standard **EN 61131-2**

Overvoltage category **III**

Pollution degree **2**

Rated insulation voltage

30 V

Speed monitors PNOZ ms3p TTL

Environmental data

Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm
Stripping length with screw terminals	7 mm
Conductor cross section with spring-loaded terminals	
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	94 mm
Width	45 mm
Depth	121 mm
Weight	220 g

Where standards are undated, the 2020-07 latest editions shall apply.

Speed monitors PNOZ ms3p TTL

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN/IEC 61511	EN/IEC 61511	EN ISO 13849-1: 2015
	PL	Category	SIL CL/ maximum SIL	PFH_D [1/h]	SIL	PFD	T_M [year]

Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20
---------------------	-------------	---------------	-----------------	-----------------	--------------	-----------------	-----------

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Order reference

Product

Product type	Features	Order no.
PNOZ ms3p TTL	Expansion module, speed monitor	773826

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783800
Set screw terminals	1 set of screw terminals	793800

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Speed monitors PNOZ ms3p TTL

Application examples

Examples without position control


Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

Example 1

Immediate shutdown as soon as diagnostic bit 10 is set.

The bit is evaluated as follows:

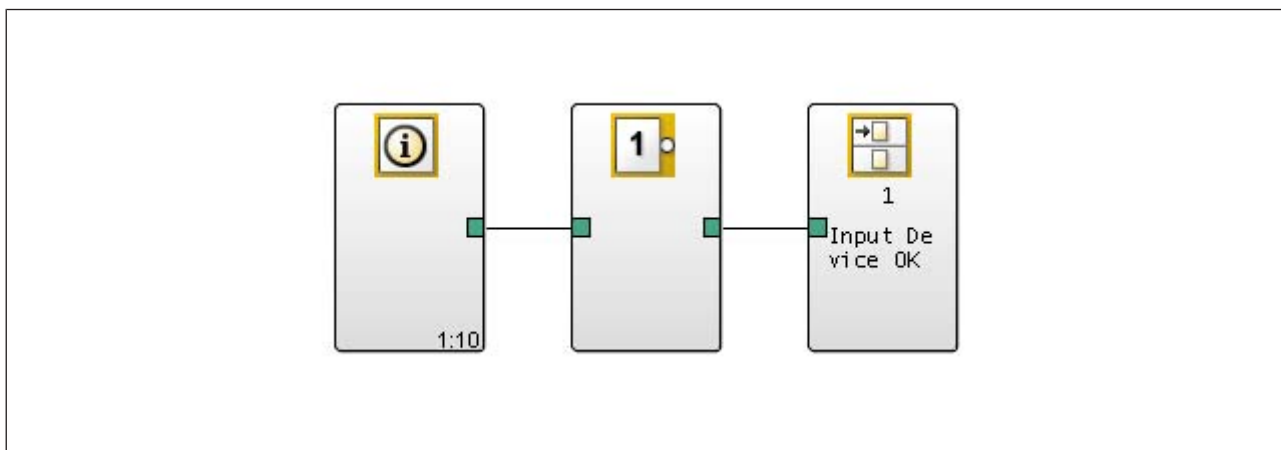


The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

Example 2

A set diagnostic bit 10 can be tolerated for a maximum of 4 hours (occurrence of second error). If no feasible signals above standstill frequency are measured within this time, a shutdown will occur.

In this case, the bit will be evaluated as follows:

Speed monitors PNOZ ms3p TTL

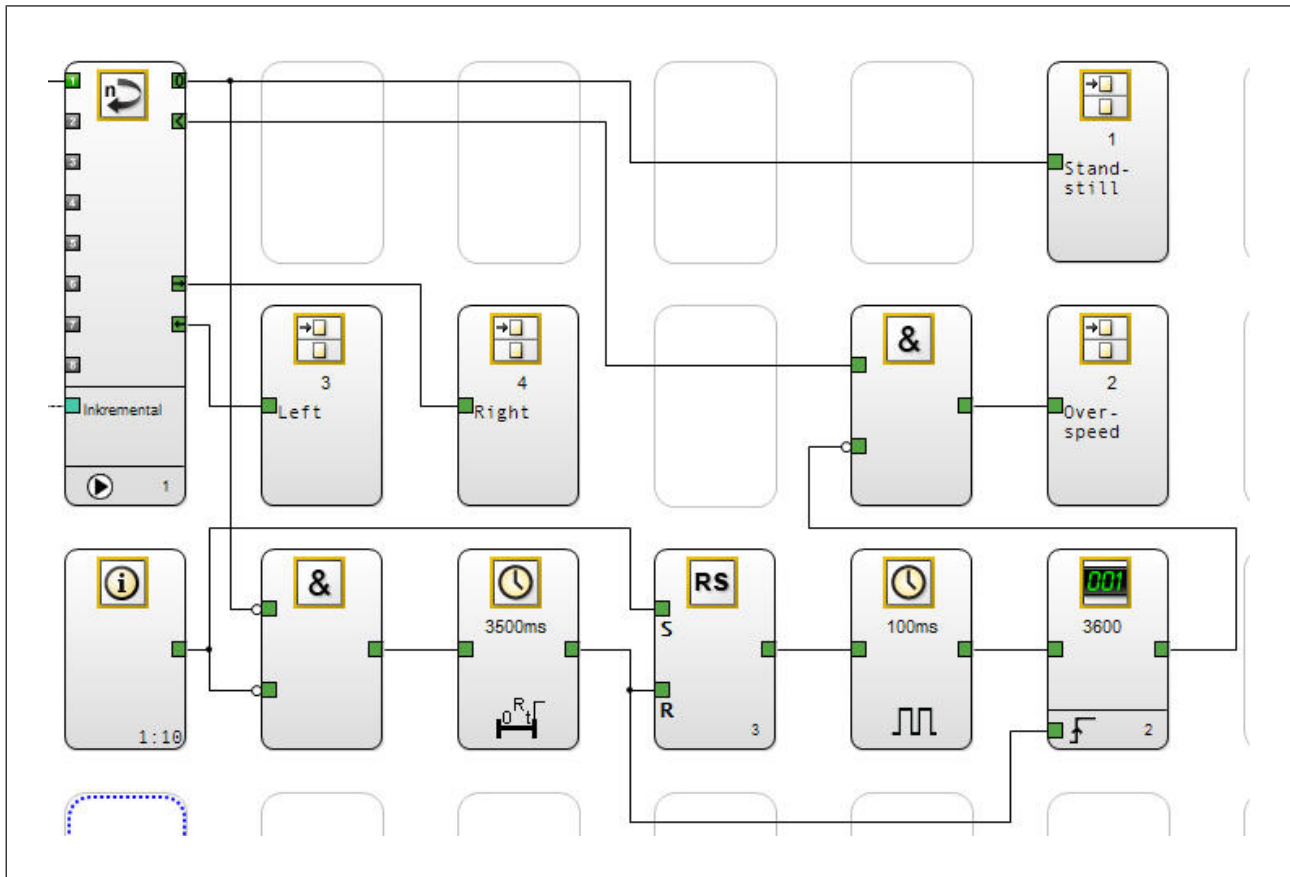

Please note that the direction of rotation must be evaluated for this example!

Example with position control

Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.


The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shutdown will not occur if the following conditions are met:

- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
 - Position control: Signal status = 1
 - Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

Speed monitors PNOZ ms3p TTL

Application example:

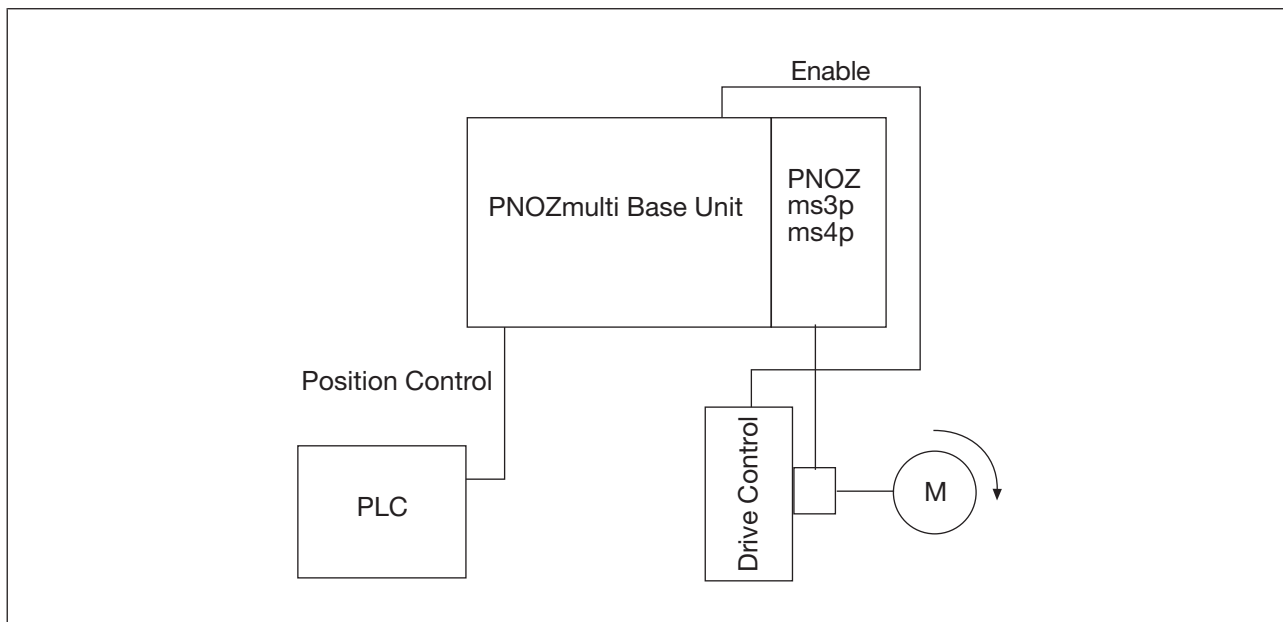

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

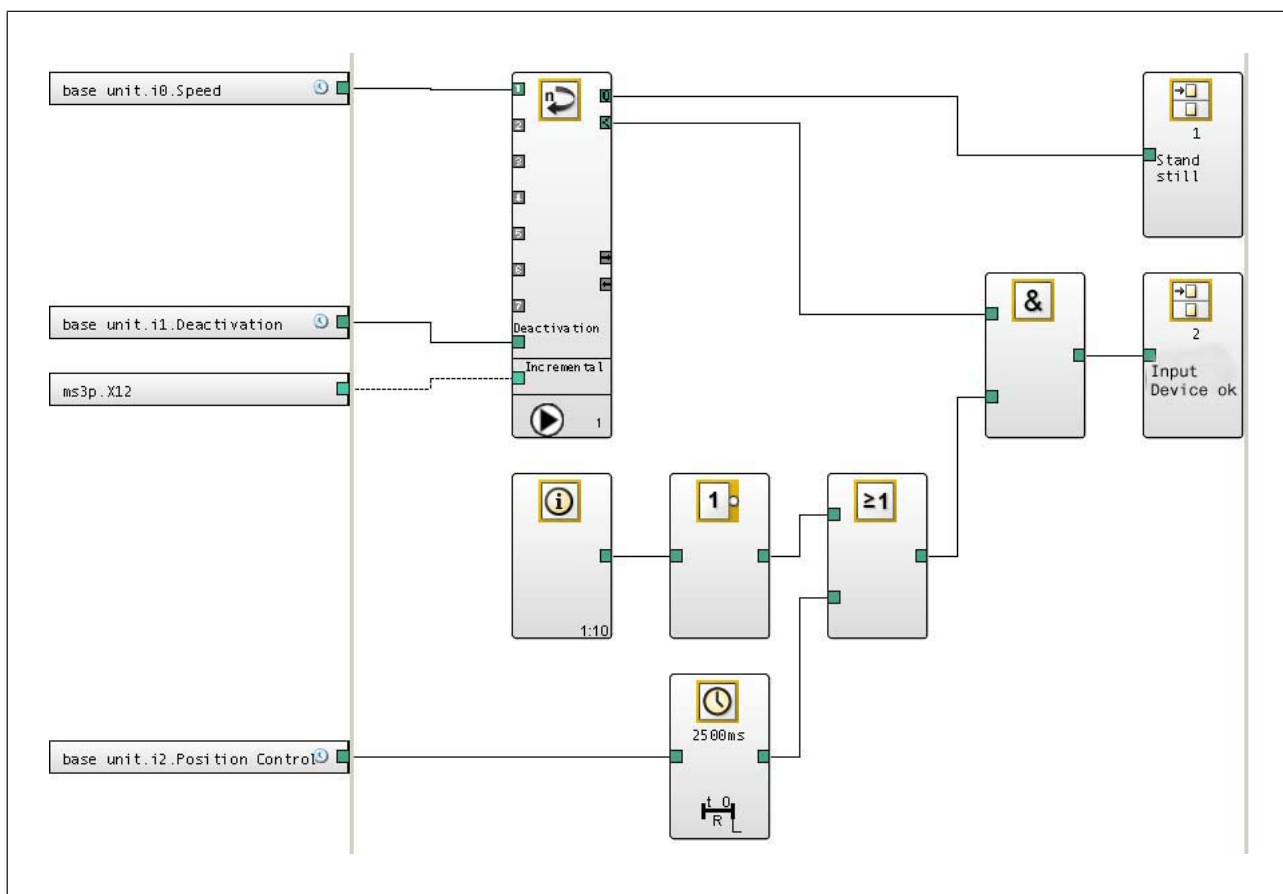

Speed monitors PNOZ ms3p TTL

An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

Speed monitors PNOZ ms4p



Overview

Unit features

Application of the product PNOZ ms4p:

Speed monitor for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Monitoring of 1 axis
- ▶ Connection: 1 incremental encoder
- ▶ Measured variables:
 - Standstill
 - Speed (16 values can be set)
 - Direction of rotation
- ▶ Axis types, start mode can be selected in the PNOZmulti Configurator
- ▶ Status indicators for
 - Supply voltage
 - Incremental encoder
 - Axis status, standstill and excess speed
 - Faults on the system
- ▶ Incremental encoder connection technology:
RJ45 female connector
- ▶ Function to deactivate speed monitoring
- ▶ Galvanic isolation between the connections X1 and X12
- ▶ Max. 4 speed monitors can be connected to the base unit

Speed monitors PNOZ ms4p

Front view

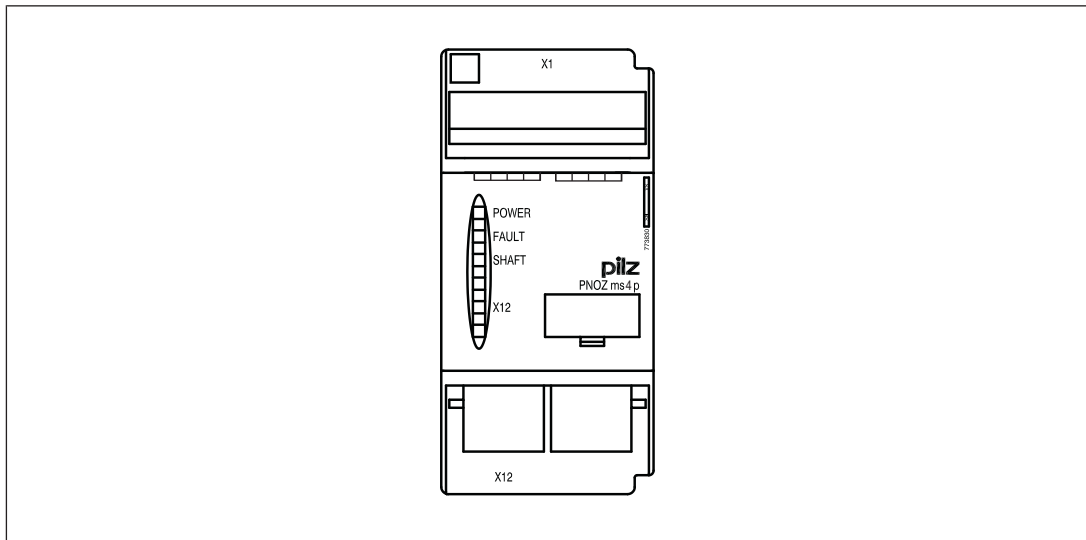


Fig.: Front view of PNOZ ms4p

Key:

- ▶ X12:
 - Female connector for connecting an incremental encoder
- ▶ LEDs:
 - POWER
 - FAULT
 - SHAFT
 - X12

Function description


Operation

The speed monitor can monitor an axis for standstill, speed and direction of rotation. The speed monitor signals the status of the monitored values to the base unit. Depending on the implemented safety circuit, the values may be transferred from the base unit to a relay output on the safety system, for example. Incremental encoders may be used to record the values.

The configuration of the speed monitor is described in detail in the PNOZmulti Configurator's online help.

Speed monitors PNOZ ms4p

Block diagram

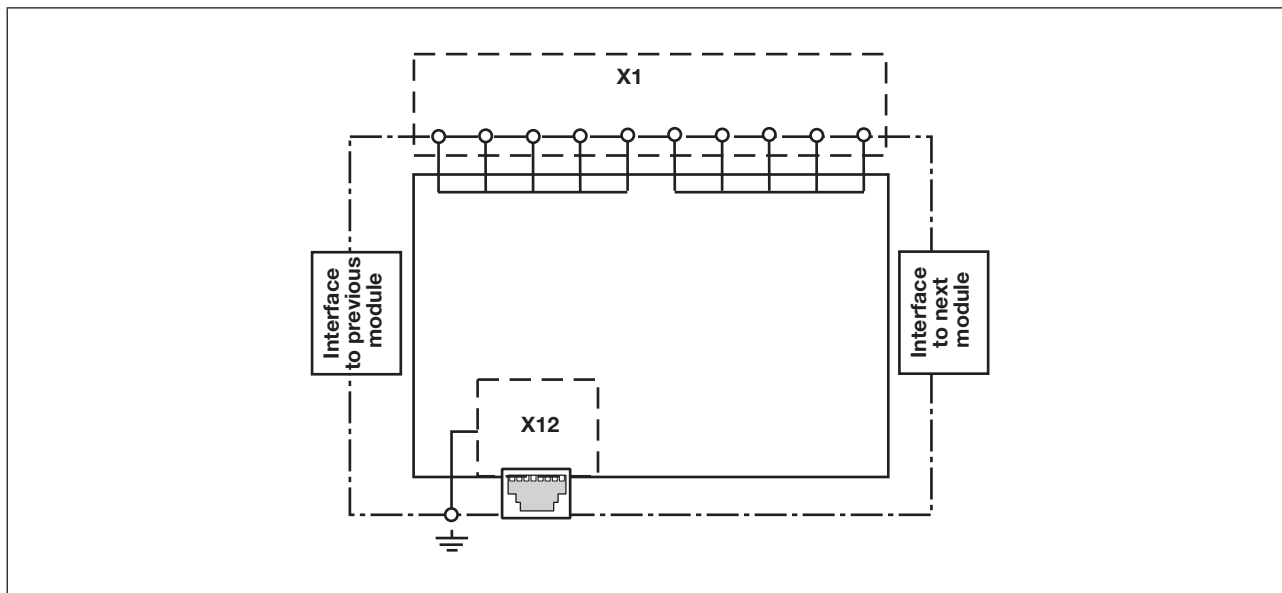

Incremental encoders

Requirements of the incremental encoders

- ▶ Only incremental encoders with a differential output of the following type are permitted
 - Sin/Cos
 - TTL (RS 422)
 - HTL (24 V)
- ▶ Please note the values stated in the technical details

Adapter for incremental encoders

The adapter records the data between the encoder and drive and makes it available to the PNOZ ms4p via the RJ45 socket.


Pilz supplies complete adapters as well as ready-made cable with RJ45 connector, which can be used when making your own adapter. The range of products in this area is constantly being expanded. Please contact us about the range of adapters that is currently available.

Speed monitors

PNOZ ms4p

Installation

Dimensions

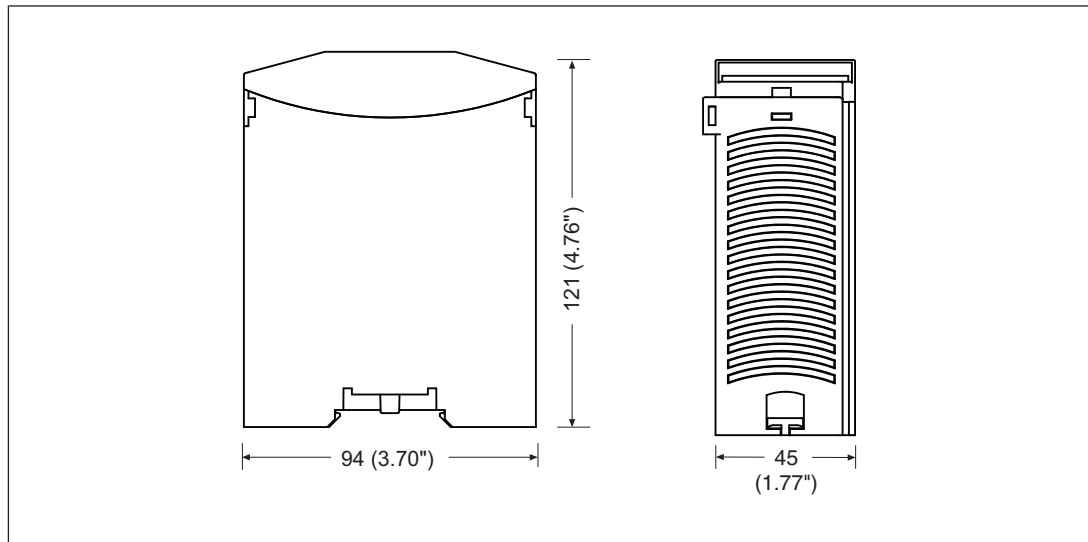

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Details of the input type, axis type and reset mode, plus the values for standstill, speed monitoring and direction of rotation are also defined in the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[310\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Speed monitors PNOZ ms4p

Pin assignment of RJ45 socket

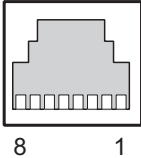RJ45 socket 8-pin	PIN	Track
	1	5 V
	2	0 V
	3	T
	4	A
	5	/A
	6	/Z
	7	B
	8	/B

Connecting the incremental encoder

Proceed as follows when connecting the incremental encoder:

- ▶ The incremental encoder may be connected via an adapter (e.g. MM A Mini-IO-CAB99) or directly to the speed monitor.
- ▶ The incremental encoder on connector X12 monitors the axis
- ▶ Use only shielded cables for all connections
- ▶ 0 V from the incremental encoder and speed monitor should always be connected.
- ▶ Position the terminating resistors of the signal lines as close as possible to the speed monitor input.

Connect the signals from the incremental encoder to the speed monitor

Encoder types: 1 Vss, 5 V-TTL

- ▶ Apply 5 V DC to incremental encoder only
- ▶ Do not terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

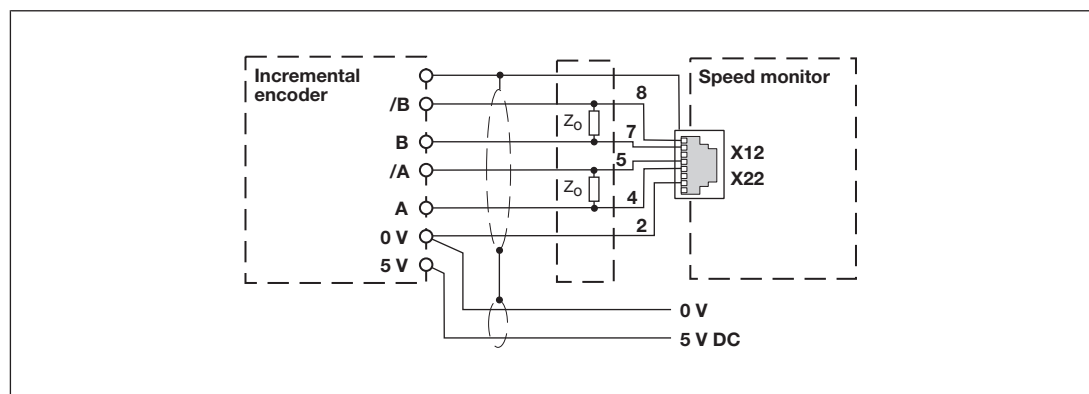


Fig.: Connection to incremental encoder type 1 Vss, 5 V-TTL

Speed monitors PNOZ ms4p

Encoder types: 24 V-HTL

- ▶ Apply 24 V DC supply voltage to incremental encoder only
- ▶ Do not terminate incremental encoder with $Z_0 = 120 \text{ Ohm}$

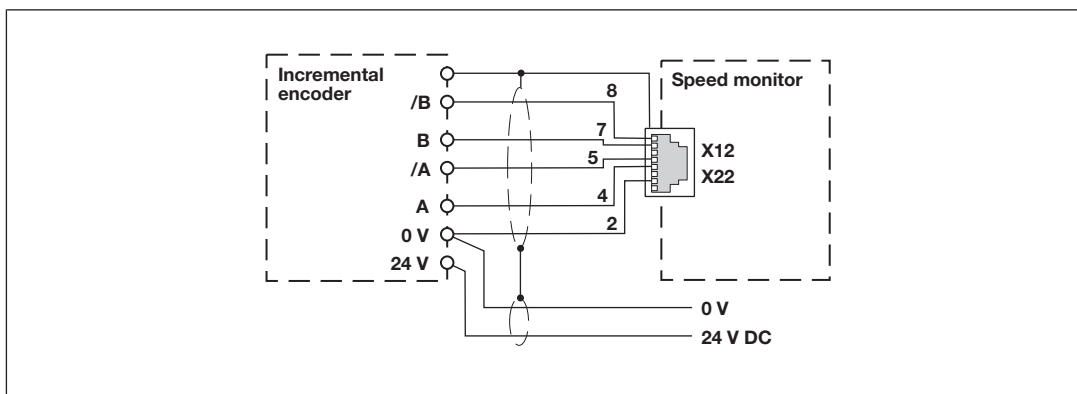


Fig.: Connection to incremental encoder type 24 V-HTL

Connect the incremental encoder to the speed monitor via an adapter

- ▶ The adapter is connected between the incremental encoder and the drive. The output on the adapter is connected to the RJ-45 female connector on the speed monitor.
- ▶ The adapter can also be used without connecting to a drive. The signal lines can then be terminated directly at the adapter with $Z_0 = 120 \text{ Ohm}$.
- ▶ If the signal lines in the drive are already terminated with $Z_0 = 120 \text{ Ohm}$, the incremental encoder may no longer be terminated.
- ▶ The signals relevant for the speed monitor are utilised in parallel by the adapter. The information stated under "Connect incremental encoder signals to the speed monitor" and in the adapter operating manual must be observed when connecting the supply voltage.
- ▶ Supply only incremental encoder with 5 V DC. 24 V-HTL signals may not be terminated.

Speed monitors PNOZ ms4p

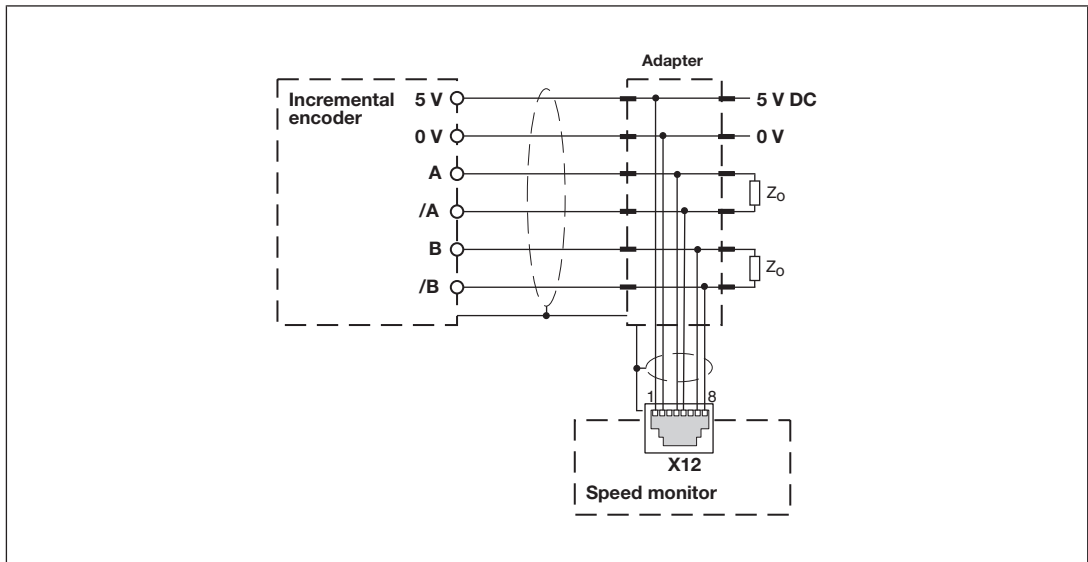


Fig.: Connection via adapter

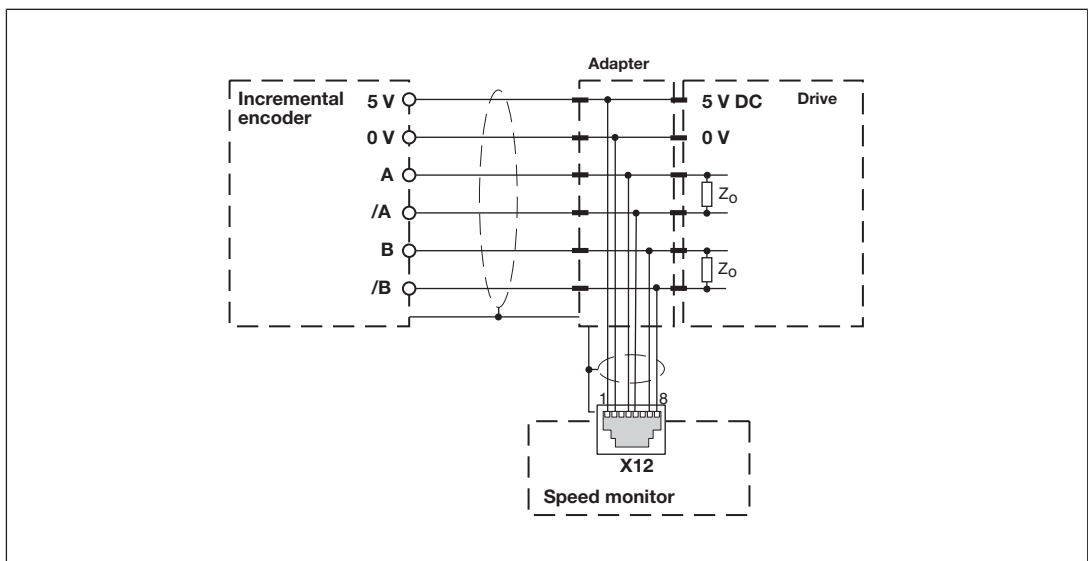


Fig.: Connection via adapter and drive

Speed monitors PNOZ ms4p

Technical details

General	
Certifications	CE, EAC, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	1 W
Status indicator	LED
Incremental encoder input	
Number of inputs	1
Connection type	RJ45 female connector, 8-pin
Input signal level	0,5 - 30 V_{ss}
Phase position for the differential signals A, /A and B, /B	90° ±30°
Overload protection	-30 - 30 V
Input resistance	10 kOhm
Input's frequency range	0 - 500 kHz
Configurable monitoring frequency	
Without hysteresis	0,1 Hz - 500 kHz
With hysteresis	0.2 Hz - 500 kHz
Times	
Configurable switch-off delay	0 - 2.500 ms
Supply interruption before de-energisation	20 ms
Reaction time	
f > 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms
f < 100 Hz: Configurable switch-off delay + switch-off delay of base unit	10 ms + 1/f
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C

Speed monitors PNOZ ms4p

Environmental data

Climatic suitability

in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C

Condensation during operation	Not permitted
-------------------------------	----------------------

Max. operating height above SL	2000 m
--------------------------------	---------------

EMC	EN 61131-2
-----	-------------------

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage	30 V
--------------------------	-------------

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
-------------------	--------------------------------------

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Connection type	Spring-loaded terminal, screw terminal
-----------------	---

Conductor cross section with screw terminals

1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG

Torque setting with screw terminals	0,25 Nm
-------------------------------------	----------------

Stripping length with screw terminals	7 mm
---------------------------------------	-------------

Speed monitors PNOZ ms4p

Mechanical data

Conductor cross section with spring-loaded terminals

1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG

Spring-loaded terminals: Terminal points per connection

1

Stripping length with spring-loaded terminals

9 mm

Dimensions

Height	94 mm
Width	45 mm
Depth	121 mm

Weight

203 g

Where standards are undated, the 2020-07 latest editions shall apply.

Safety characteristic data

Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061 SIL CL/ maximum SIL	EN IEC 62061 PFH _D [1/h]	EN/IEC 61511 SIL	EN/IEC 61511 PFD	EN ISO 13849-1: 2015 T _M [year]
Incremental encoder	PL e	Cat. 3	SIL CL 3	6,36E-09	SIL 3	8,45E-05	20

Explanatory notes for the safety-related characteristic data:

- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.

Speed monitors PNOZ ms4p

Order reference

Product

Product type	Features	Order no.
PNOZ ms4p	Expansion module, speed monitor	773830

Accessories

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783800
Set screw terminals	1 set of screw terminals	793800

Terminator, jumper


Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Application examples

Example without position control

Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", without position control

Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" must be evaluated in the user program during operation in such a way that a set bit leads to a safety-related error reaction (shutdown).

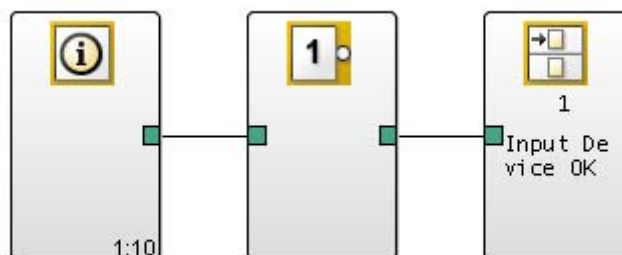

Speed monitors PNOZ ms4p

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

Example with position control

Evaluation of bit: "Unfeasible or single-channel signal from the incremental encoder", with position control


Diagnostic bit 10: "Unfeasible or single-channel signal from the incremental encoder" may be set during position control as a result of jitter on the encoder.

The set bit can be tolerated, i.e. evaluated in the user program in such a way that a shutdown will not occur if the following conditions are met:

- ▶ An additional position control signal must be provided from an external control system (e.g. PLC) and
- ▶ The signal must have the following status conditions:
 - Position control: Signal status = 1
 - Operation: Signal status = 0


During operation, diagnostic bit 10 must be evaluated in the user program in such a way that a set bit leads to a safety-related error reaction (shutdown).

Application example:

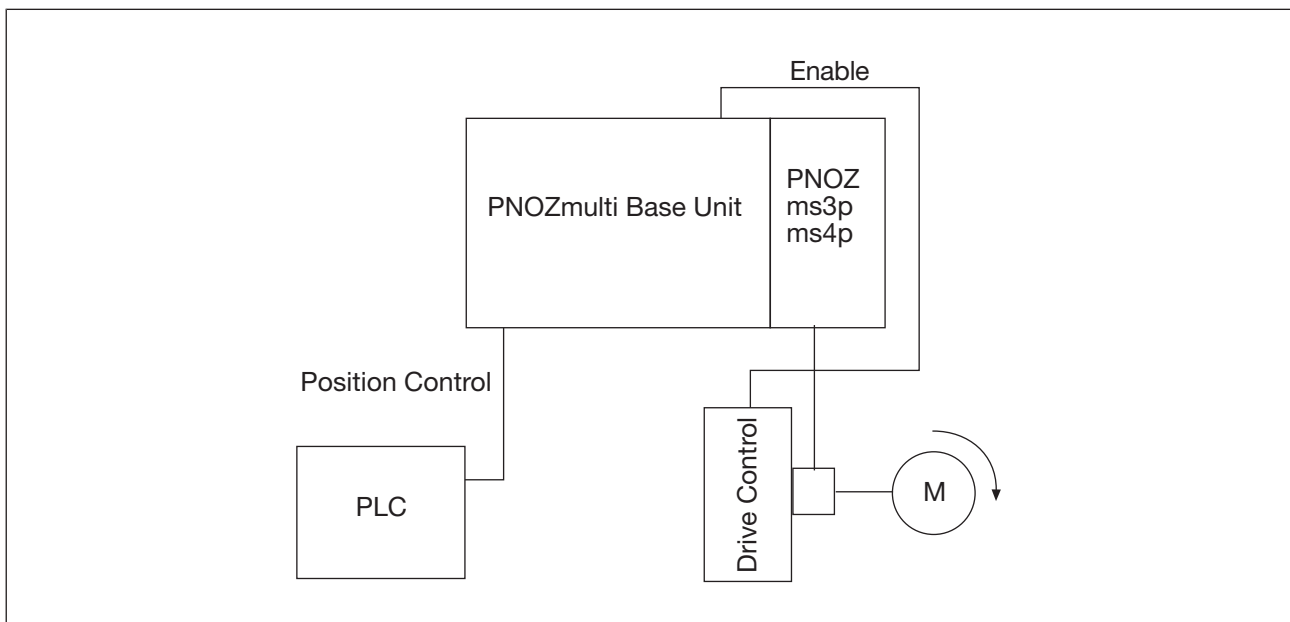

Depending on the operating mode, evaluation of diagnostic bit 10 can be implemented in the user program as follows:

Speed monitors PNOZ ms4p

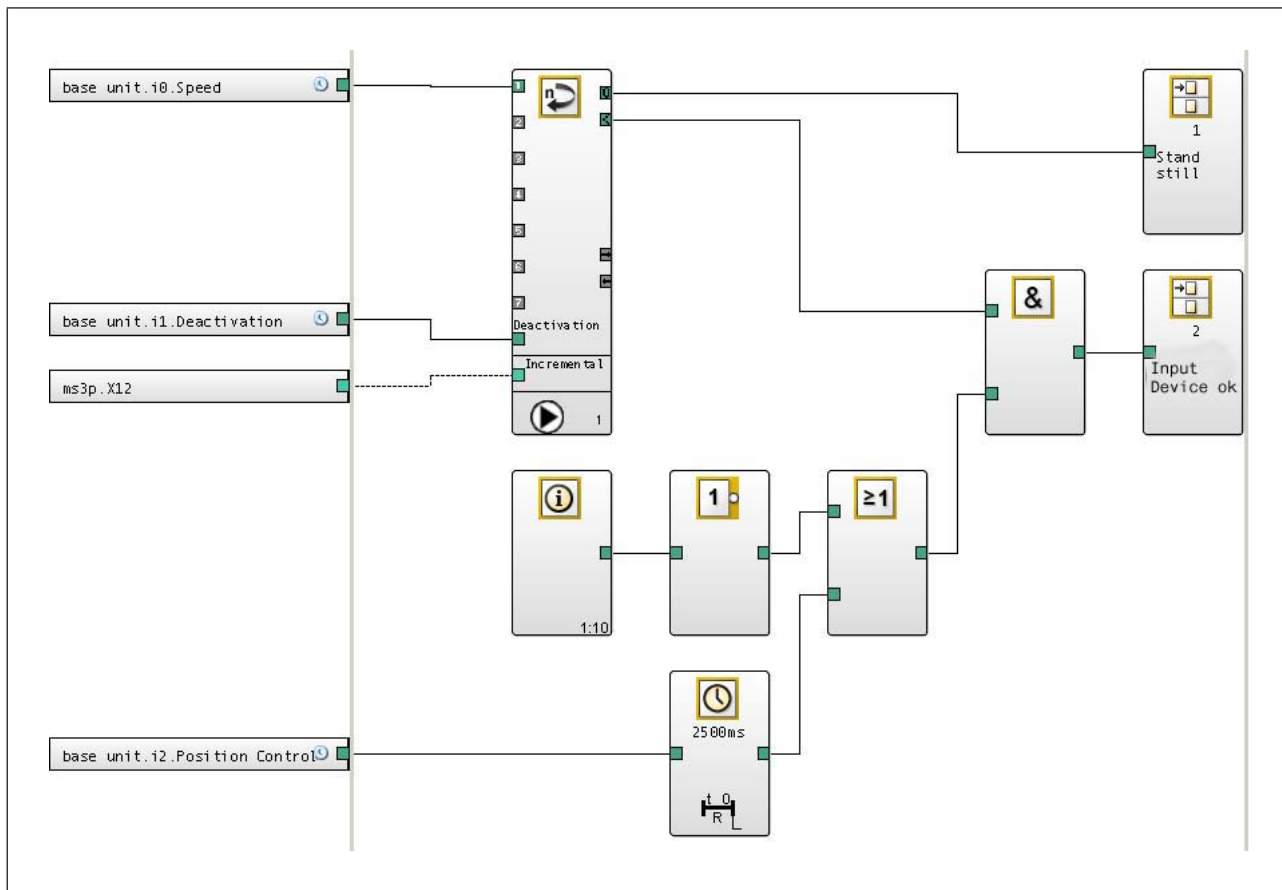


An additional "Position Control" signal is incorporated. This signal indicates whether the relevant axis is in position control (signal status = 1) or in operation (signal status = 0).

The time element with configured switch-off delay operates as a start-up suppressor, as the bit: "Unfeasible or single-channel signal from the incremental encoder" may still be present for 2 s after leaving standstill.

The connection point "Input Device OK" must be incorporated into the application and evaluated in such a way that a shutdown occurs if the connection point "Input Device OK" = 0.

Fieldbus modules

PNOZ mc0p

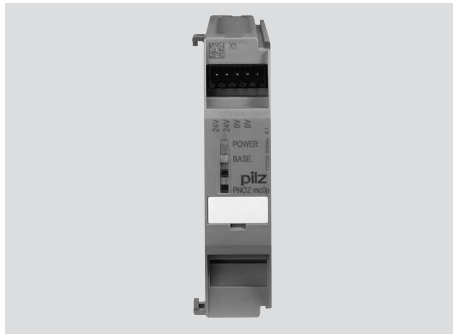

Overview

Unit features

Application of the product PNOZ mc0p:

Power supply used to supply voltage to the fieldbus modules PNOZ mc5p or PNOZ mc5.1p LWL.


The product has the following features:

- ▶ Interface to connect the base unit and a fieldbus module
- ▶ Galvanic isolation
- ▶ Max. 1 fieldbus module (PNOZ mc5p or PNOZ mc5.1p LWL) can be connected
- ▶ Supply voltage 24 V DC
- ▶ Status indicators
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules

PNOZ mc0p

Front view

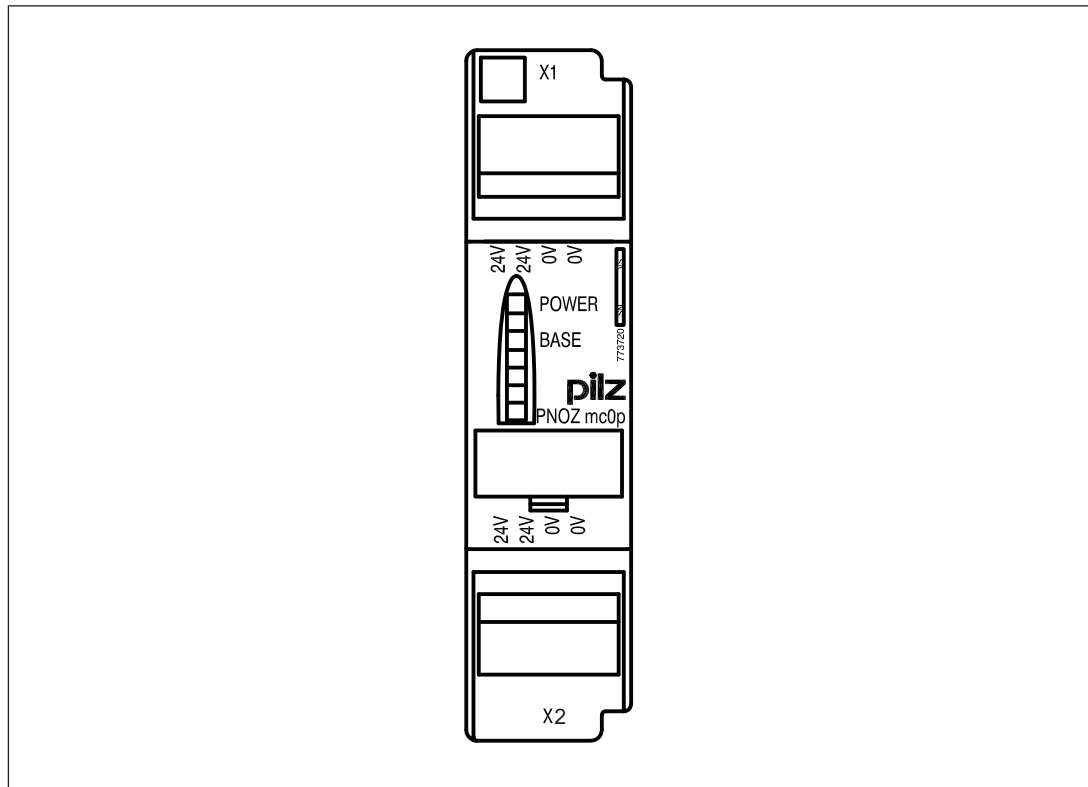


Function description

Functions

The PNOZ mc0p power supply provides the fieldbus module with the necessary internal supply voltage. This way the fieldbus module remains available even when the base unit is switched off. The power supply is connected to the base unit and fieldbus module via jumpers. When the 24 VDC supply voltage is applied, the “POWER” LED is lit. The “BASE” LED is lit when supply voltage is applied to the base unit.


Fieldbus modules PNOZ mc0p

Block diagram

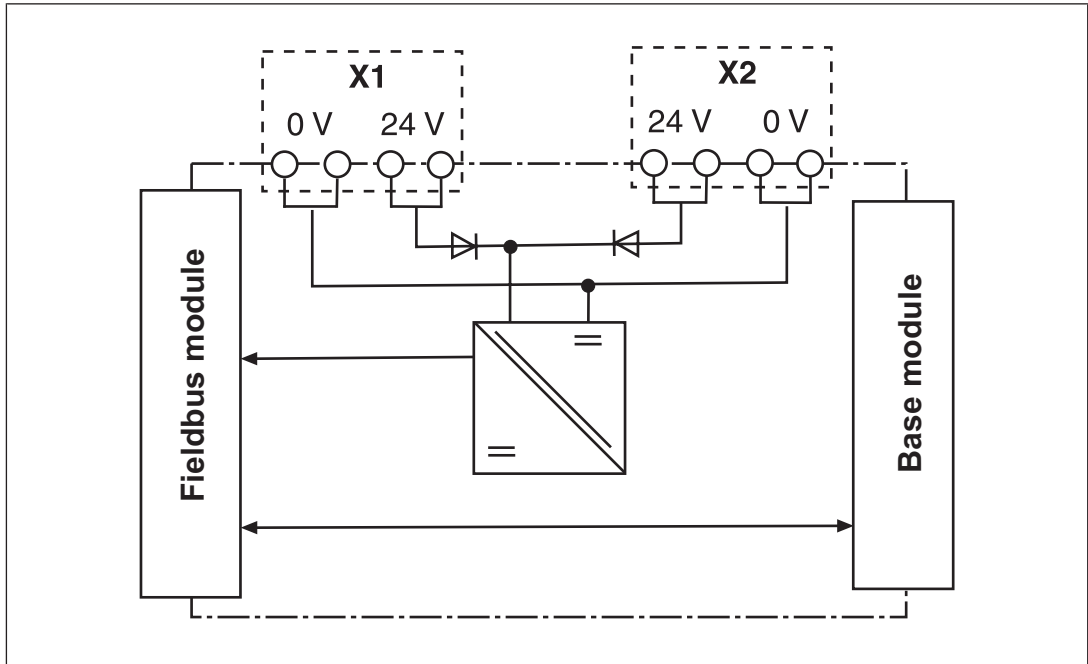

Installation

Dimensions in mm

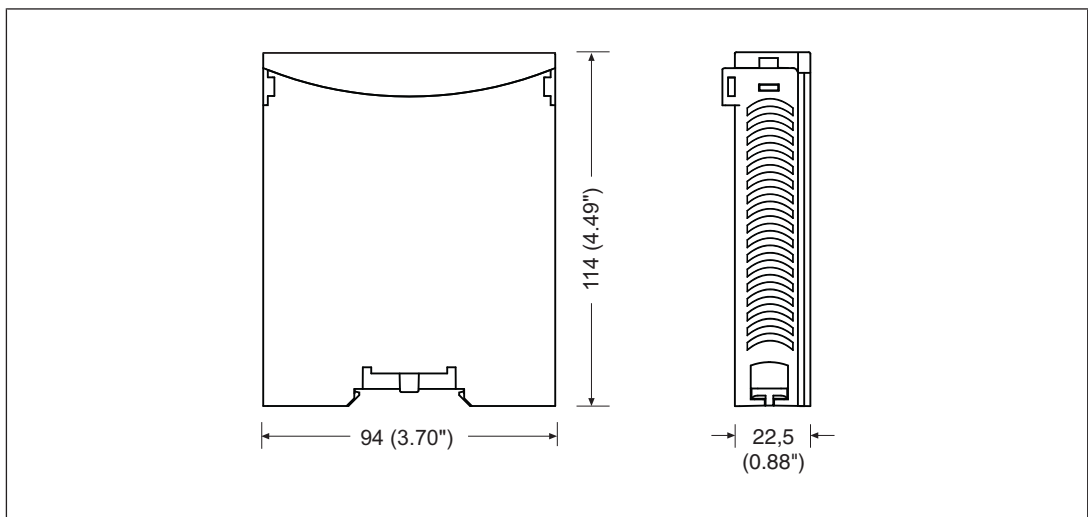

Fieldbus modules PNOZ mc0p

Commissioning

General wiring guidelines

Please note:

- ▶ The PNOZ mc0p can be supplied by a separate power supply (see [Connection example](#) [376]). The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).
- ▶ The torque setting of the screws on the connection terminals is specified under [Technical details](#) [376].
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Information given in the [Technical details](#) [376] must be followed.

Connection


Supply voltage	AC	DC
<p>Supply voltage from Interbus master only:</p> <p>Connect the supply voltage to X1 or X2.</p> <p>The fieldbus connection is maintained if the base unit is switched off.</p> <p>When the Interbus master is restarted, the power supply to the base unit must be reset.</p>	/	
<p>Supply voltage from Interbus master and base unit:</p> <p>Example:</p> <p>Connect the supply voltage from the base unit to X1.</p> <p>Connect the supply voltage from the Interbus master to X2.</p> <p>The fieldbus connection is maintained if the base unit is switched off.</p> <p>When the Interbus master is restarted, the fieldbus is available immediately.</p>	/	

Fieldbus modules

PNOZ mc0p

Connection example

Redundant power supply

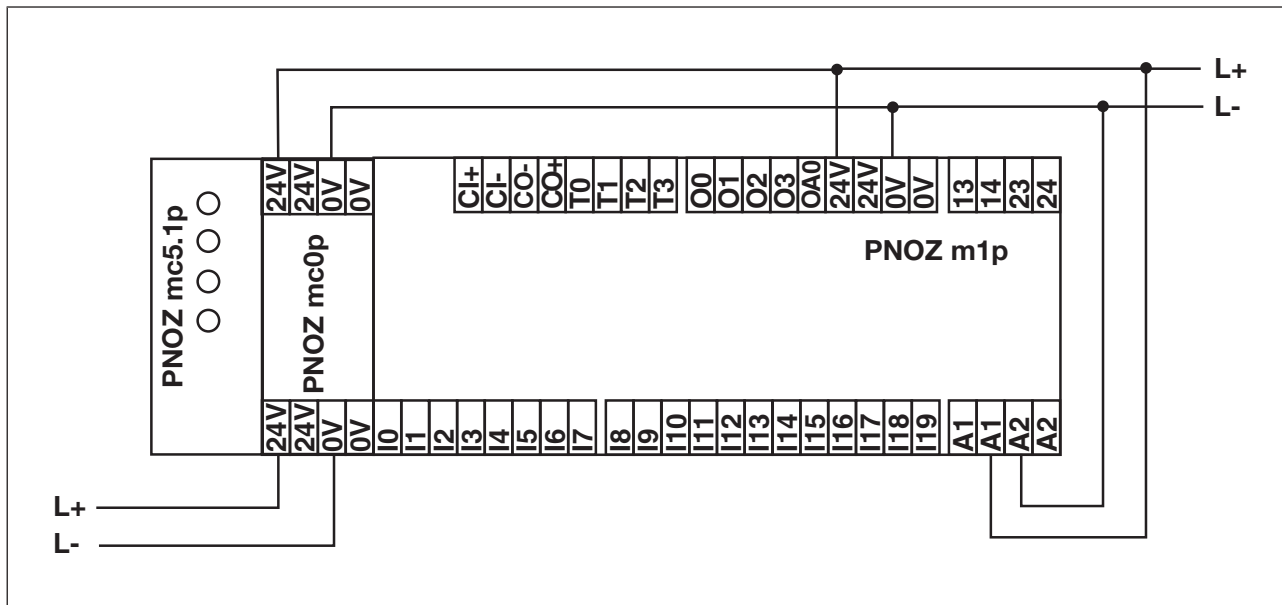

Technical details

General

Certifications **CE, EAC, UKCA, cULus Listed**

Electrical data

Supply voltage

for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	5 W
Residual ripple DC	5 %
Potential isolation	Yes

Status indicator **LED**

Times

Supply interruption before de-energisation **20 ms**

Environmental data

Ambient temperature

in accordance with the standard	EN 60068-2-14
Temperature range	0 - 55 °C

Fieldbus modules PNOZ mc0p

Environmental data

Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between	Module and system voltage
Type of potential isolation	Functional insulation
Rated surge voltage	500 V

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal

Fieldbus modules PNOZ mc0p

Mechanical data

Conductor cross section with screw terminals

1 core flexible **0,25 - 1,5 mm², 24 - 16 AWG**

2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors **0,25 - 0,75 mm², 24 - 20 AWG**

Torque setting with screw terminals **0,25 Nm**

Stripping length with screw terminals **7 mm**

Conductor cross section with spring-loaded terminals

1 core flexible without crimp connector **0,25 - 1,5 mm², 24 - 16 AWG**

1 core flexible with crimp connector **0,25 - 0,75 mm², 24 - 20 AWG**

Spring-loaded terminals: Terminal points per connection **1**

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **94 mm**

Width **22,5 mm**

Depth **121 mm**

Weight **125 g**

Where standards are undated, the 2020-07 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mc0p	Expansion module, power supply for fieldbus modules	773720

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783400
Set screw terminals	1 set of screw terminals	793400

Fieldbus modules PNOZ mc1p



Overview

Unit features

Application of the product PNOZ mc1p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 16 auxiliary outputs
- ▶ Status indicators
- ▶ Coated version:
Increased environmental requirements (see [Technical details \[383\]](#))
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units that can be connected.

Fieldbus modules PNOZ mc1p

Front view

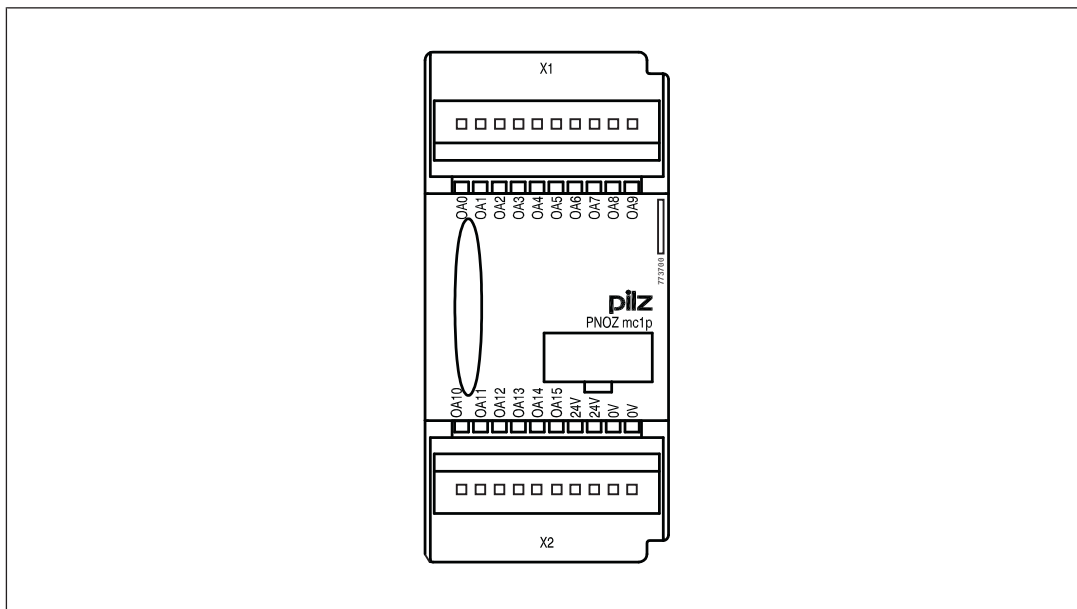

Function description

Functions

The expansion module operates as a signal module with non-safety-related outputs.


The function of the outputs on the safety system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

Fieldbus modules


PNOZ mc1p

Block diagram

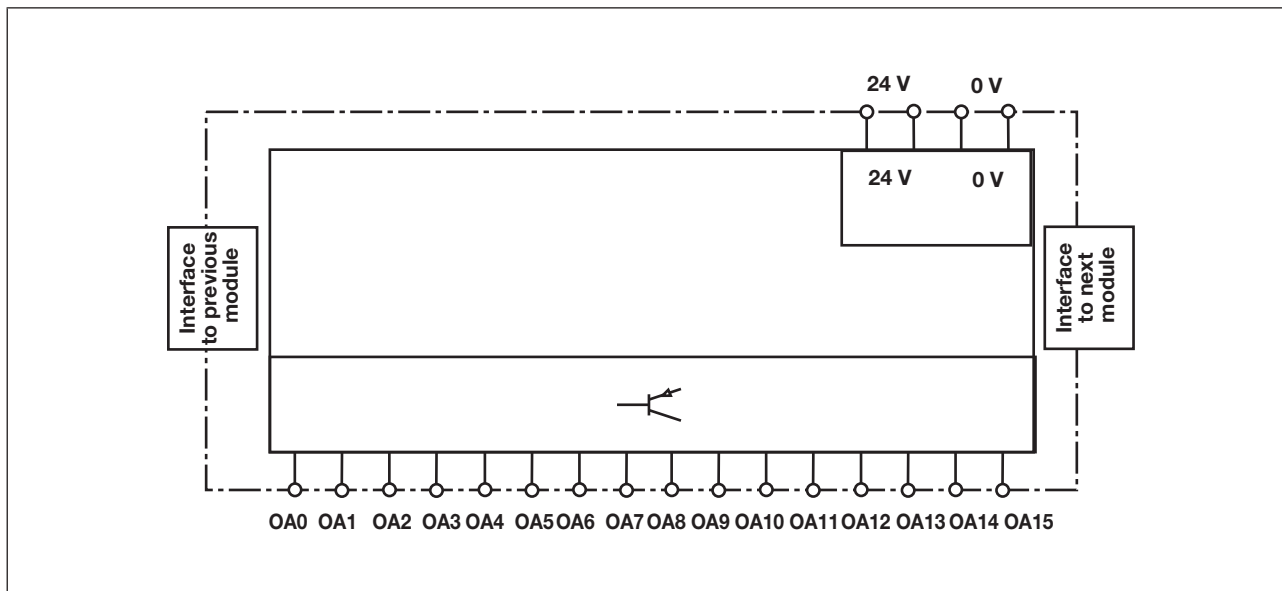

Installation

Dimensions

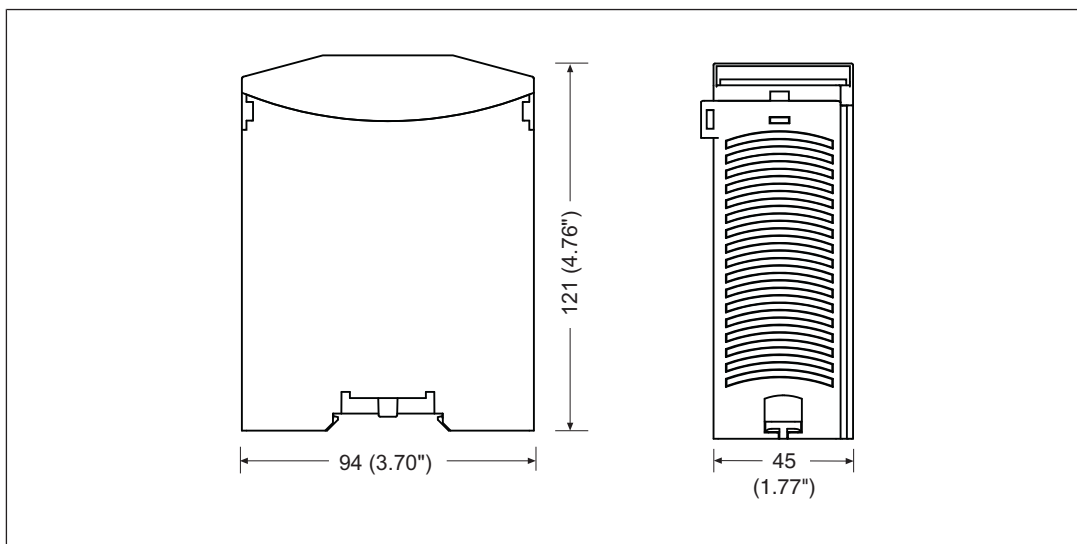

Commissioning

General wiring guidelines


The wiring is defined in the circuit diagram in the Configurator.

Please note:



Fieldbus modules PNOZ mc1p

- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ Outputs OA0 to OA15 are auxiliary outputs using semiconductor technology.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Information given in the [Technical details \[383\]](#) must be followed.

Connection

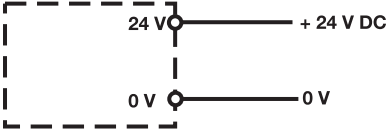Supply voltage	AC	DC
	/	

Supply voltage

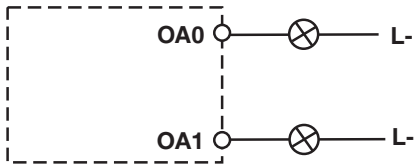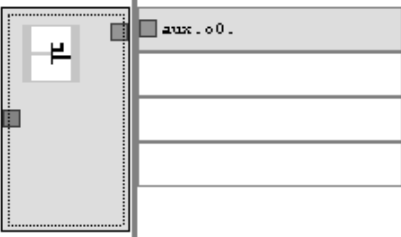		
--	--	---

Semiconductor outputs

Fieldbus modules PNOZ mc1p

Technical details

General	773700	773705
Certifications	CE, EAC, KOSHA, UKCA, cULus Listed	CE, EAC, KOSHA, UKCA, cULus Listed
Electrical data	773700	773705
Supply voltage		
for	Supply to the SC outputs	Supply to the SC outputs
Voltage	24 V	24 V
Kind	DC	DC
Voltage tolerance	-15 %/+20 %	-15 %/+20 %
Output of external power supply (DC)	192 W	192 W
Potential isolation	Yes	Yes
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	0,6 W	0,6 W
Status indicator	LED	LED
Semiconductor outputs (standard)	773700	773705
Quantity	16	16
Switching capability		
Voltage	24 V	24 V
Current	0,5 A	0,5 A
Power	12 W	12 W
Max. permitted overall performance of semiconductor outputs at an ambient temperature of > 50 °C	–	144 W
Galvanic isolation	Yes	Yes
Short circuit-proof	Yes	Yes
Residual current at "0"	0,5 mA	0,5 mA
Signal level at "1"	UB - 0.5 VDC at 0.5 A	UB - 0.5 VDC at 0.5 A
Times	773700	773705
Switch-on delay	5 s	5 s
Supply interruption before de-energisation	20 ms	20 ms

Fieldbus modules PNOZ mc1p

Environmental data	773700	773705
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	55 °C	–
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g
Corrosive gas check		
SO ₂ : Concentration 10 ppm, duration 10 days, passive	–	DIN V 40046-36
H ₂ S: Concentration 1 ppm, duration 10 days, passive	–	DIN V 40046-37
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773700	773705
Mounting position	horizontally on mounting rail	horizontally on mounting rail

Fieldbus modules PNOZ mc1p

Mechanical data	773700	773705
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Connection type	Spring-loaded terminal, screw terminal	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals		
1 core flexible	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Torque setting with screw terminals	0,25 Nm	0,25 Nm
Stripping length with screw terminals	7 mm	7 mm
Conductor cross section with spring-loaded terminals		
1 core flexible without crimp connector	0,25 - 1,5 mm², 24 - 16 AWG	0,25 - 1,5 mm², 24 - 16 AWG
1 core flexible with crimp connector	0,25 - 0,75 mm², 24 - 20 AWG	0,25 - 0,75 mm², 24 - 20 AWG
Spring-loaded terminals: Terminal points per connection	1	1
Stripping length with spring-loaded terminals	9 mm	9 mm
Dimensions		
Height	94 mm	94 mm
Width	45 mm	45 mm
Depth	121 mm	121 mm
Weight	164 g	166 g

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules

PNOZ mc1p

Order reference

Product

Product type	Features	Order no.
PNOZ mc1p	Expansion module, 16 semiconductor outputs, standard	773700
PNOZ mc1p coated version	Expansion module, 16 semiconductor outputs, standard, coated version	773705

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
PNOZmulti bus terminator coated	Terminator, coated version	779112
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Connection terminals

Product type	Features	Order no.
Set spring terminals	1 set of spring-loaded terminals	783700
Set screw terminals	1 set of screw terminals	793700

Fieldbus modules PNOZ mc2.1p



Overview

Unit features

Application of the product PNOZ mc2.1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Network protocols: EtherCAT
- ▶ supports CANopen over EtherCAT (DS301 V4.02-compliant)
- ▶ Status indicators for communication with EtherCAT and for errors
- ▶ The data length and the content of the PDOs can be freely configured from EtherCAT-Master (max. 148 Bytes TxPDO and 20 Bytes RxPDO). The data are described in the document entitled "Communication Interfaces".
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherCAT . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc2.1p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules

PNOZ mc2.1p

Front view

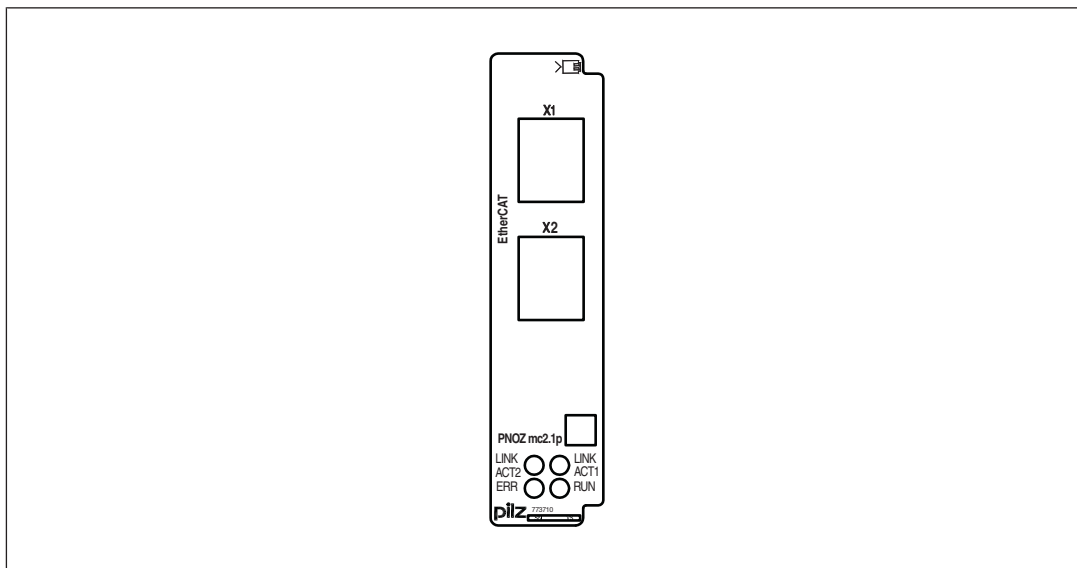

Legend:

- ▶ X1: EtherCAT IN
- ▶ X2: EtherCAT OUT
- ▶ LEDs:
 - LINK ACT1
 - LINK ACT2
 - ERR
 - RUN



is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

Function description

Operation

The virtual inputs and outputs that are to be transferred via EtherCAT are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc2.1p are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc2.1p is configured and started automatically.

The connection to EtherCAT is made via the two RJ45 sockets.

LEDs indicate the status of the expansion module on EtherCAT.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules

PNOZ mc2.1p

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

Assigning the inputs/outputs in the PNOZmulti Configurator to the EtherCAT inputs/outputs


Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Fieldbus modules


PNOZ mc2.1p

Block diagram

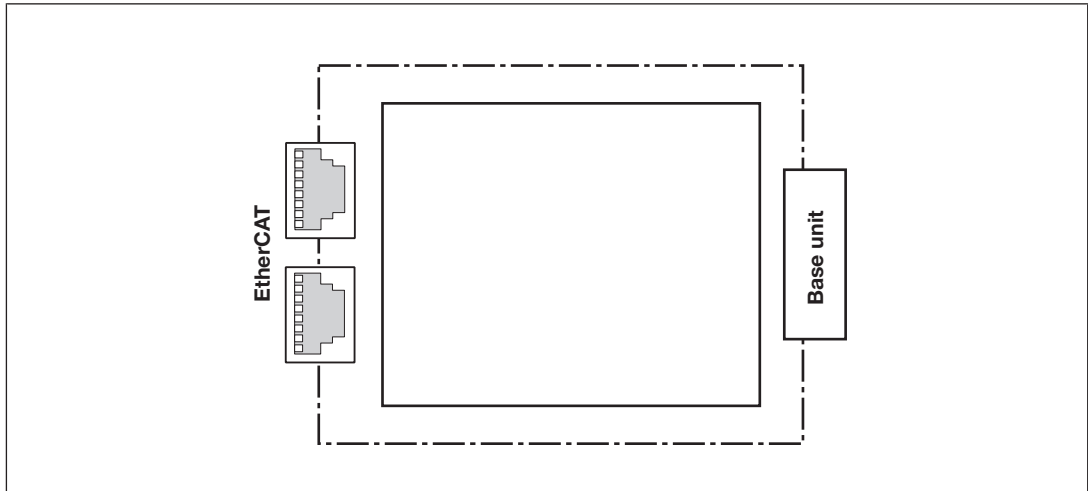

Installation

Dimensions in mm

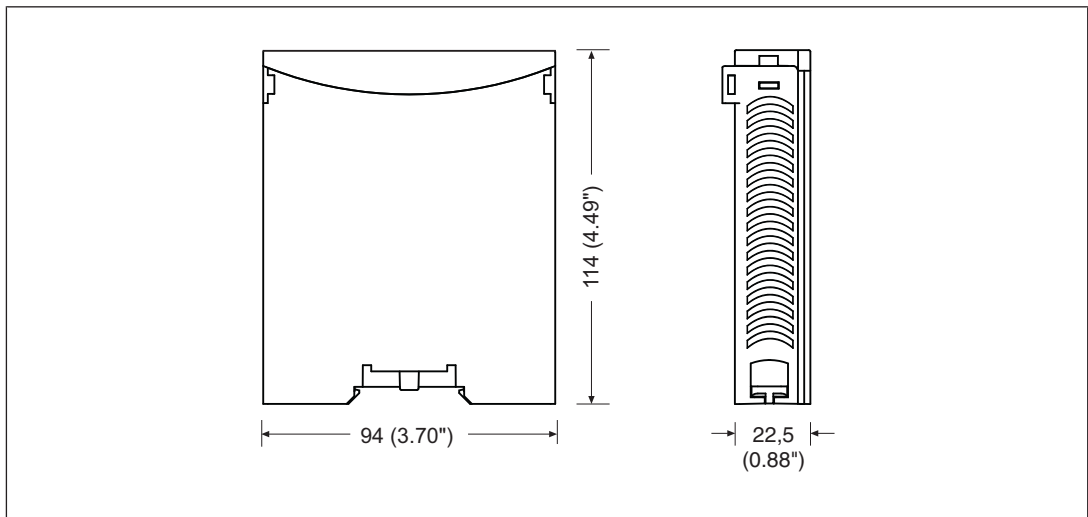

Fieldbus modules

PNOZ mc2.1p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which inputs and outputs on the safety system will communicate with EtherCAT.


Please note:

- ▶ Information given in the [Technical details \[393\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to EtherCAT:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:
 - Ensure the requirements for the industrial use of EtherCAT are met, as stated in the Installation Manual published by the User Group.

Interface assignment

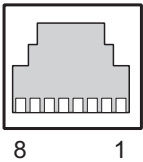RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

Fieldbus modules PNOZ mc2.1p

Preparing for operation

- ▶ Install Device Description File


Install the *Device Description File* in your configuration software. You can only then use the PNOZ mc2.1p.

- ▶ Connect the supply voltage to the base unit:

Terminals **24 V** and **A1 (+)**: + 24 VDC

Terminals **0 V** and **A2 (-)**: 0 V

Connection example

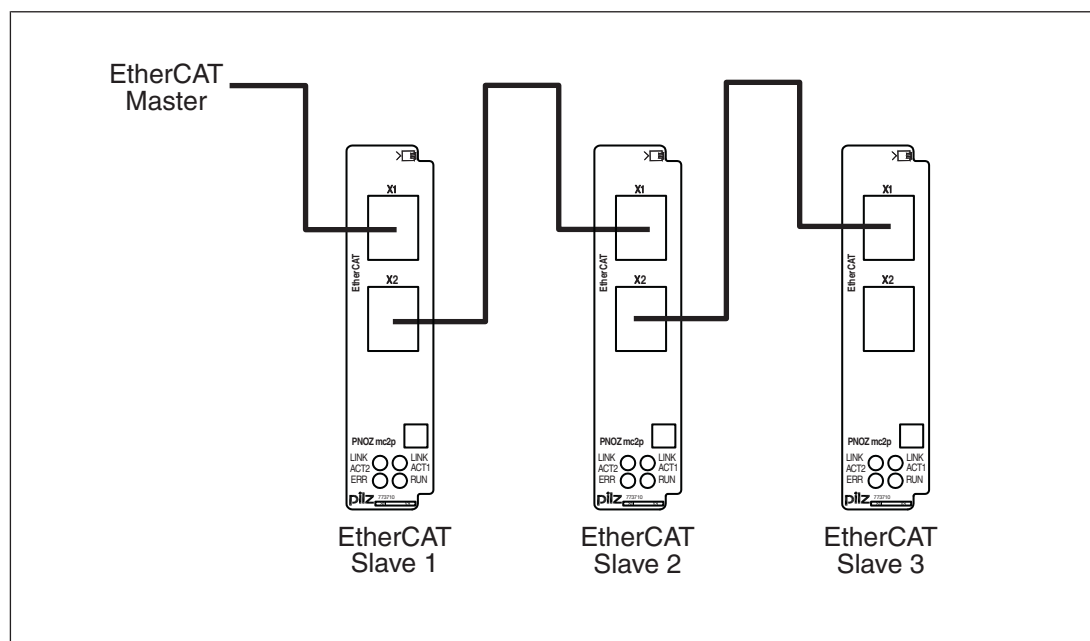

Fieldbus modules PNOZ mc2.1p

Technical details

General	
Certifications	CE, EAC, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	1,6 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	EtherCAT
Device type	Slave
Protocol	CANopen over EtherCAT
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	Yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Fieldbus modules

PNOZ mc2.1p

Environmental data

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage **30 V**

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Dimensions

Height	94 mm
Width	22,5 mm
Depth	114 mm

Weight **114 g**

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules

PNOZ mc2.1p

Order reference

Product

Product type	Features	Order no.
PNOZ mc2.1p	Fieldbus module, EtherCAT	773713

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Fieldbus modules PNOZ mc3p



Overview

Unit features

Application of the product PNOZ mc3p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for PROFIBUS-DP
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Status indicators for communication with PROFIBUS-DP and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFIBUS-DP . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc3p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules PNOZ mc3p

Front view

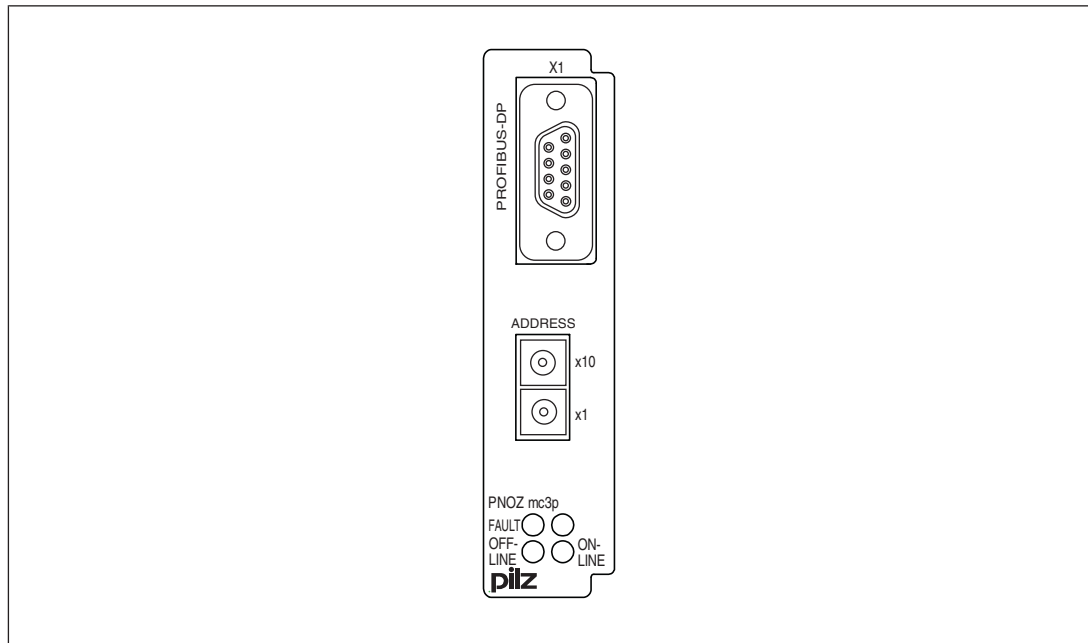

Key:

- ▶ X1:
PROFIBUS-DP interface (female 9-pin D-Sub connector)
- ▶ LEDs:
 - FAULT
 - OFFLINE
 - ONLINE

Function description

Functions

The virtual inputs and outputs that are to be transferred via PROFIBUS are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc3p are connected via a jumper. The expansion module PNOZ mc3p is also supplied with voltage via this jumper.

The station address is set via rotary switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc3p is configured and started automatically.

LEDs indicate the status of the expansion module on PROFIBUS.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules

PNOZ mc3p

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


Assigning the inputs/outputs in the PNOZmulti Configurator to the PROFIBUS-DP inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


Fieldbus modules PNOZ mc3p

Block diagram

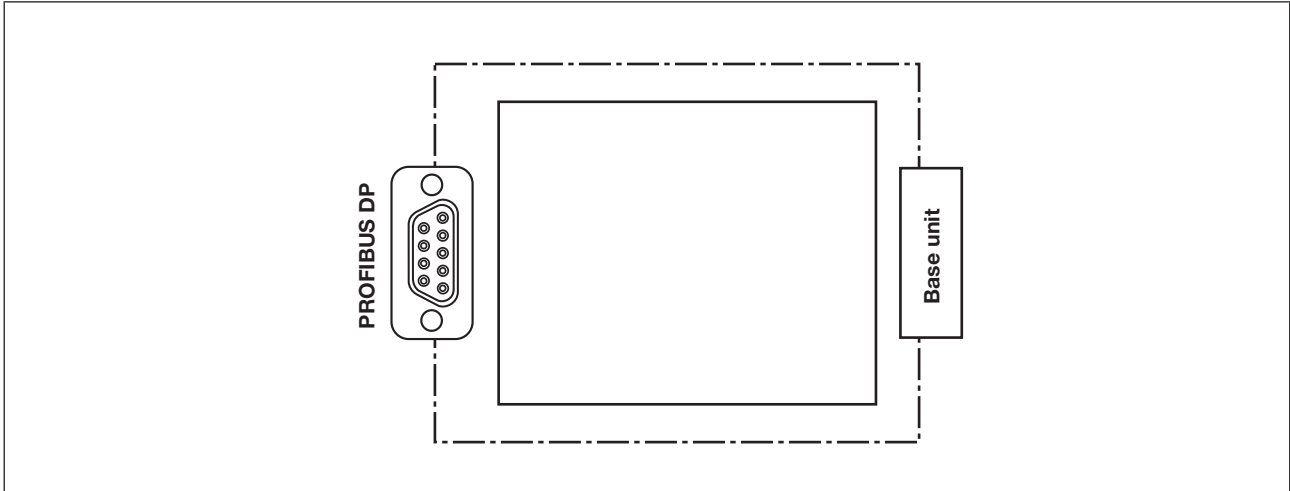

Installation

Dimensions in mm

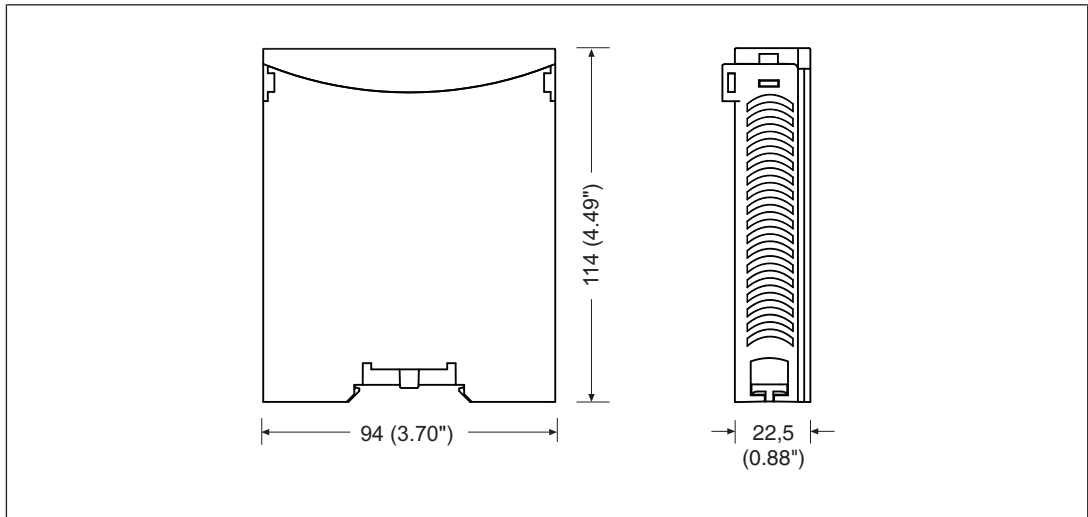

Fieldbus modules

PNOZ mc3p

Commissioning

Wiring

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[402\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).


Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

PROFIBUS DP interface

It is possible to define which outputs on the control system will communicate with PROFIBUS-DP. The connection to PROFIBUS-DP is made via a female 9-pin D-Sub connector in accordance with the guidelines of the PROFIBUS User Group (PNO).

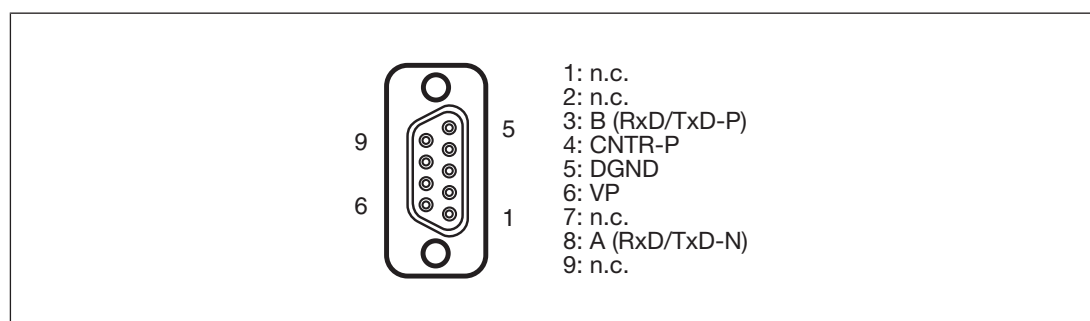

n.c. = not connected

Please note the following when connecting to PROFIBUS-DP:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces


Fieldbus modules

PNOZ mc3p


Preparing for operation

Setting the station address

The station address of the expansion module PNOZ mc3p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

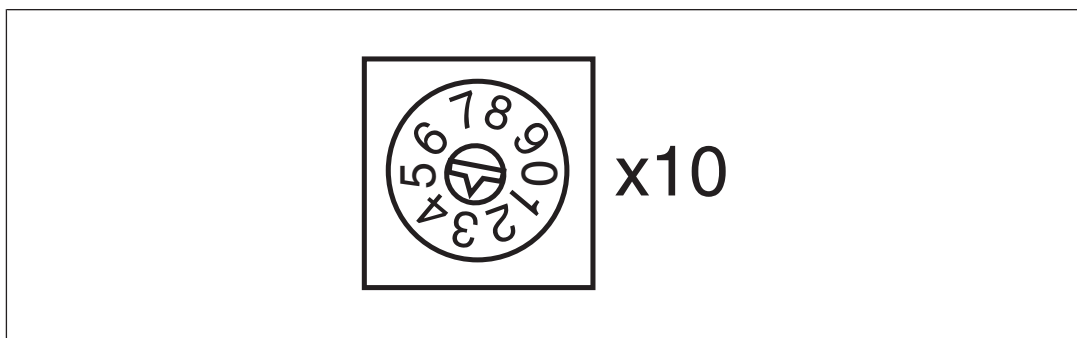

- ▶ On the upper rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

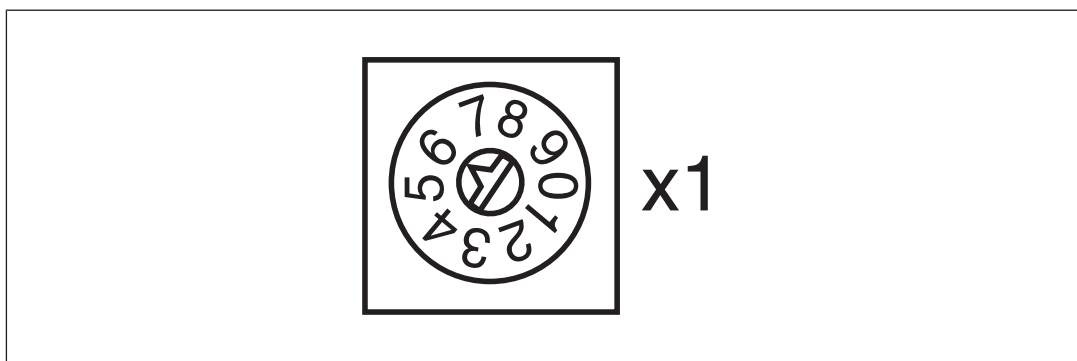

- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example).

Station address 36 is set in the diagrams as an example.


Download modified project to the control system PNOZmulti

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Fieldbus modules

PNOZ mc3p

Connection example

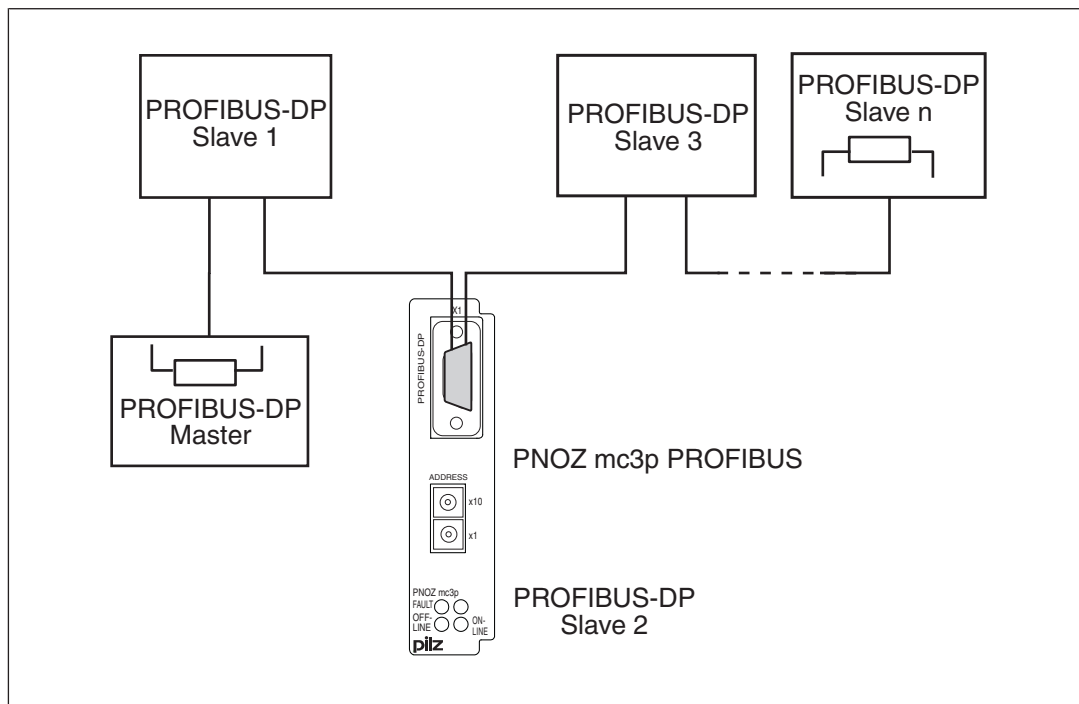

Technical details

General

Certifications **CE, EAC, KCC, KOSHA, UKCA, cULus Listed**

Electrical data

Supply voltage

for **Module supply**

internal **Via base unit**

Voltage **5 V**

Kind **DC**

Voltage tolerance **-2 %/+2 %**

Power consumption **2,5 W**

Status indicator **LED**

Fieldbus interface

Fieldbus interface **PROFIBUS-DP**

Device type **Slave**

Station address **0 - 99d**

Transmission rate **9,6 kBit/s - 12 MBit/s**

Connection **9-pin D-Sub female connector**

Galvanic isolation **Yes**

Test voltage **500 V AC**

Fieldbus modules PNOZ mc3p

Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54
Mechanical data	
Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Fieldbus modules

PNOZ mc3p

Mechanical data

Dimensions

Height	94 mm
Width	22,5 mm
Depth	119 mm

Weight	119 g
--------	--------------

Where standards are undated, the 2020-07 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mc3p	Fieldbus module, PROFIBUS-DP	773732

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Fieldbus modules PNOZ mc4p




Overview

Unit features

Application of the product PNOZ mc4p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for DeviceNet
- ▶ Station addresses from 0 ... 63 can be selected via DIP switches
- ▶ Status indicators for communication with DeviceNet and for errors
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Coated version:
Increased environmental requirements (see [Technical details](#) [ 411])

Fieldbus modules

PNOZ mc4p

Front view

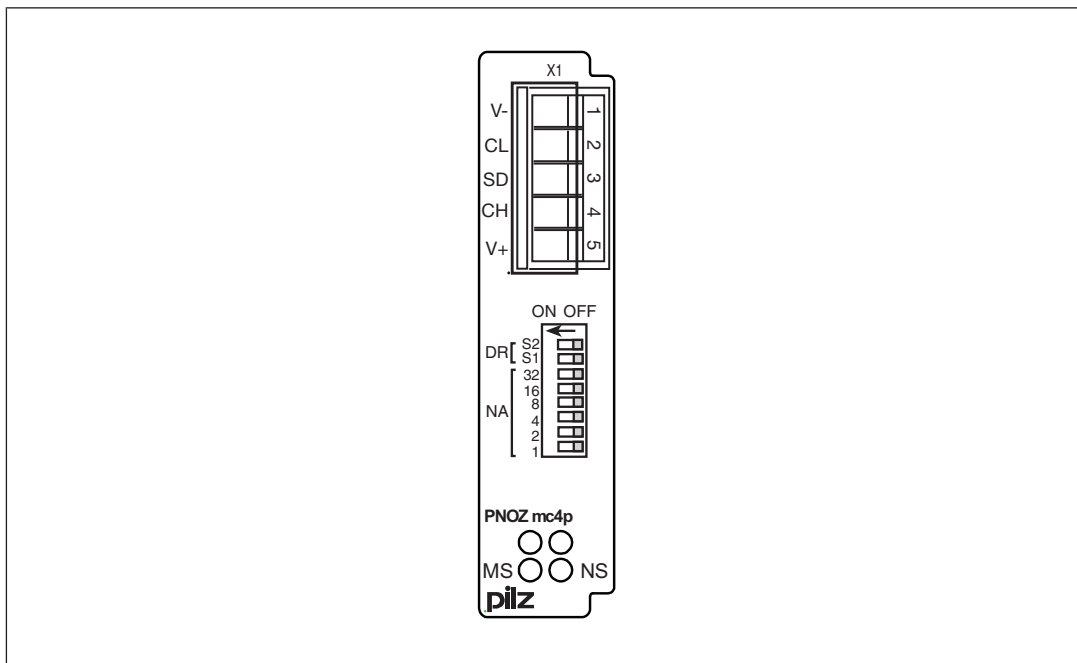

Legend:

- ▶ X1: DeviceNet interface (5-pin screw connector)
- ▶ LED:
 - Power
 - NS
 - MS

Function description

Operation

The virtual inputs and outputs that are to be transferred via DeviceNet are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc4p are connected via a jumper. The expansion module PNOZ mc4p is also supplied with voltage via this jumper.

The station address and the transmission rate are set using DIP switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc4p is configured and started automatically.

LEDs indicate the status of the expansion module on DeviceNet.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules

PNOZ mc4p

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


Assigning the inputs/outputs in the PNOZmulti Configurator to the DeviceNet inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


Fieldbus modules PNOZ mc4p

Block diagram

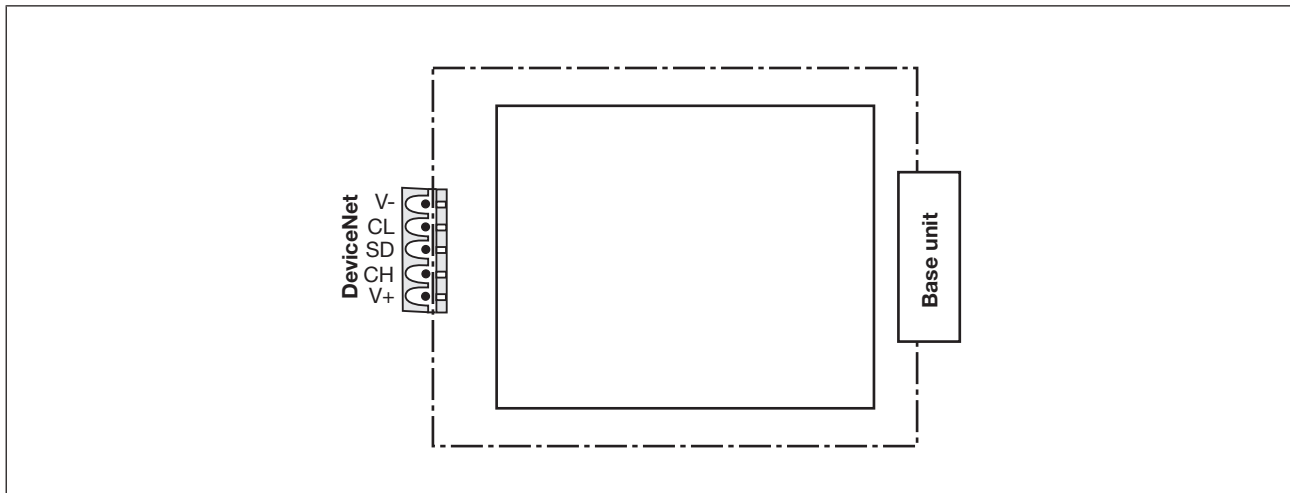

Installation

Dimensions in mm

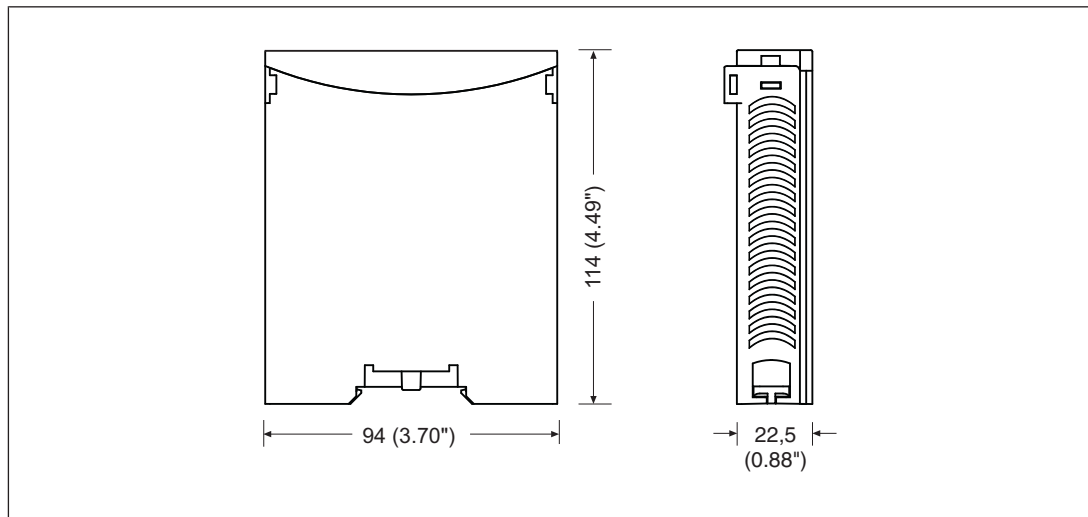

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[411\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.

Fieldbus modules

PNOZ mc4p

- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.


Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

DeviceNet interface

It is possible to define which outputs on the control system will communicate with DeviceNet. The connection to DeviceNet is made via a 5-pin screw connector.

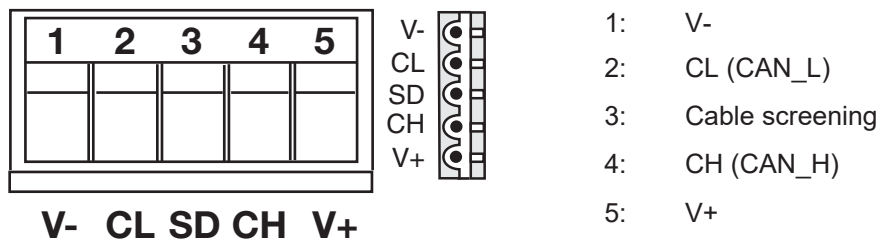

Termination DeviceNet

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, DeviceNet must be terminated at both ends.

Setting the transmission rate

Set the transmission rate using DIP switches S1 and S2 (DR).

Transmission rate	DIP switch	
	S1	S2
125 kBit/s	Off	Off
250 kBit/s	On	Off
500 kBit/s	Off	On
---	On	On

Fieldbus modules

PNOZ mc4p

Setting the station address


The station address of the expansion module PNOZ mc4p is set from 0 ... 63 (binary) using DIP switches 1 to 32.

Station address	DIP switch					
	32	16	8	4	2	1
0	Off	Off	Off	Off	Off	Off
1	Off	Off	Off	Off	Off	On
2	Off	Off	Off	Off	On	Off
3	Off	Off	Off	Off	On	On
...
62	On	On	On	On	On	Off
63	On	On	On	On	On	On

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Connection example

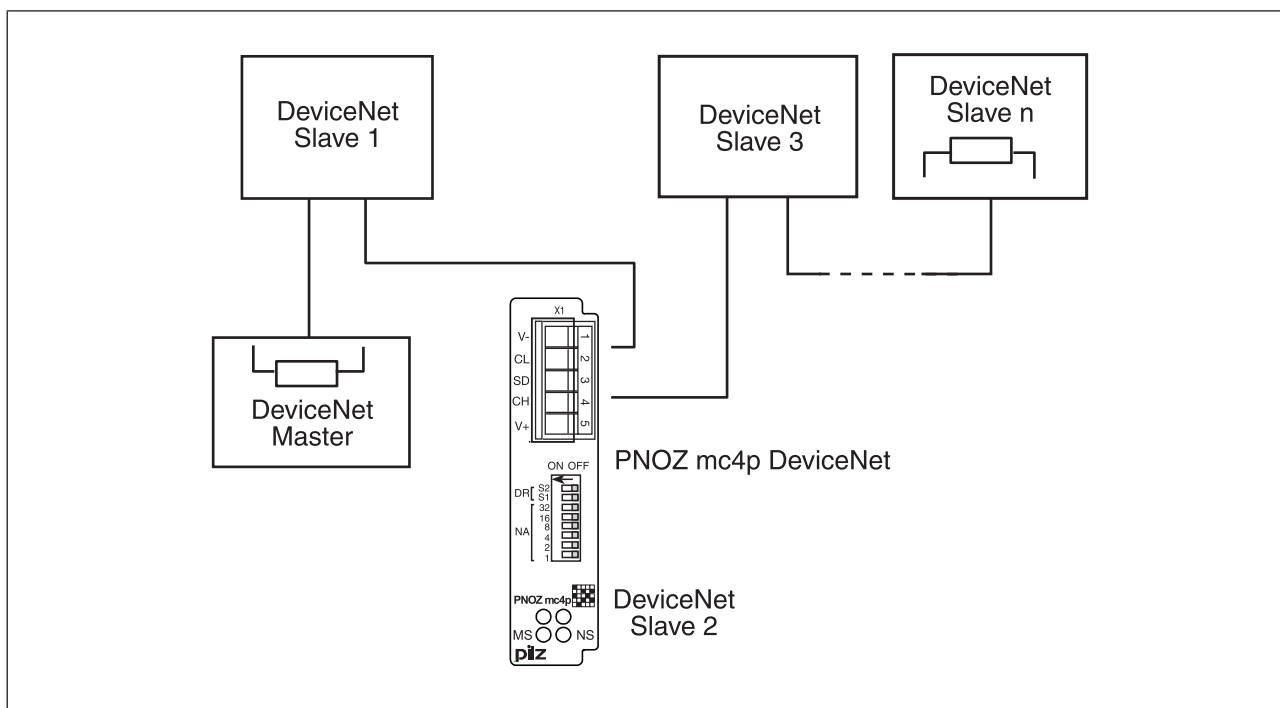

Fieldbus modules PNOZ mc4p

Technical Details

General	773711	773729
Certifications	CE, EAC, KOSHA, UKCA, cULus Listed	CCC, CE, EAC, KCC, KOSHA, TÜV, cULus Listed
Electrical data	773711	773729
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	1 W	1,6 W
Status indicator	LED	LED
Fieldbus interface	773711	773729
Fieldbus interface	DeviceNet	DeviceNet
External supply (DC)	24 V	24 V
Power consumption	0,75 W	0,75 W
Device type	Slave	Slave
Station address	0 ... 63d	0 ... 63d
Transmission rates	125 kBit/s, 250 kBit/s, 500 kBit/s	125 kBit/s, 250 kBit/s, 500 kBit/s
Connection	5-pin Combicon plug-in connector	5-pin Combicon plug-in connector
Galvanic isolation	Yes	Yes
Test voltage	500 V AC	500 V AC
Times	773711	773729
Supply interruption before de-energisation	20 ms	20 ms
Environmental data	773711	773729
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 50 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2

Fieldbus modules PNOZ mc4p

Environmental data	773711	773729
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773711	773729
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Dimensions		
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	122 mm	122 mm
Weight	110 g	143 g

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules PNOZ mc4p

Order reference

Product

Product type	Features	Order no.
PNOZ mc4p	Fieldbus module, DeviceNet	773711
PNOZ mc4p coated version	Fieldbus module, DeviceNet, coated version	773729

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Fieldbus modules PNOZ mc5p



Overview

Unit features

Application of the product PNOZ mc5p:

Expansion module for connection to a base unit from the PNOZmulti system.


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for INTERBUS
- ▶ Transmission rate, selectable between 500 kBit/s and 2 MBit/s
- ▶ Status indicators for communication with INTERBUS and for errors
- ▶ Max. 1 PNOZ mc5p can be connected to the base unit
- ▶ In the PNOZmulti Configurator, 24 inputs (standard) and 24 outputs (standard) can be configured for communication via a fieldbus.
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules

PNOZ mc5p

Front view

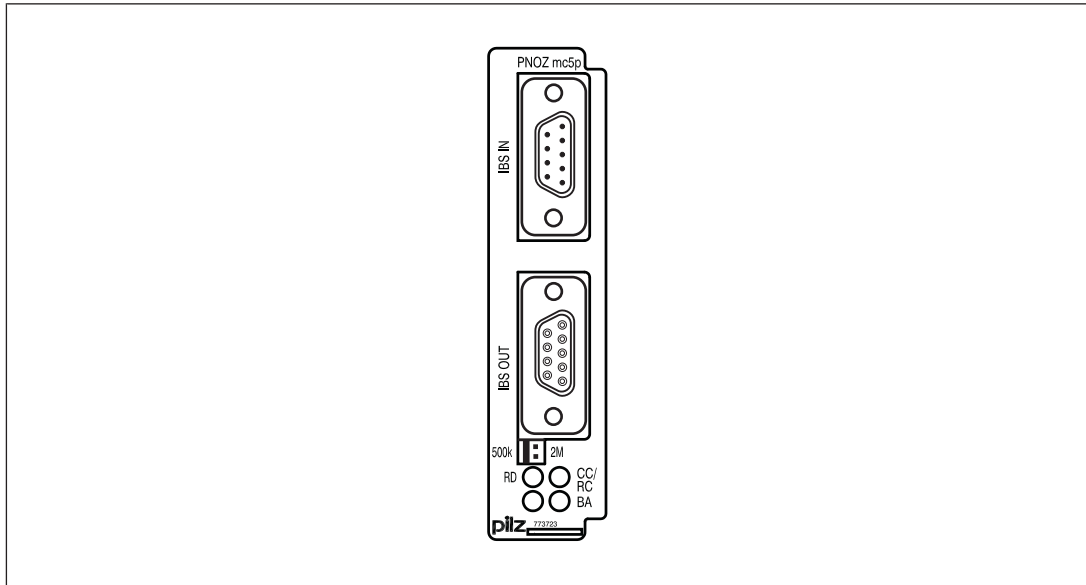

Function description

Functions

The data to be transferred via INTERBUS is selected and configured in the PNOZmulti Configurator. The base unit and PNOZ fieldbus module PNOZ mc5p are connected via a jumper. The fieldbus module is also supplied with voltage PNOZ mc5p via this jumper. After the supply voltage is switched on or the safety system PNOZmulti is reset, the fieldbus module PNOZ mc5p is configured and started automatically.

Input and output data

The data is structured as follows:

- ▶ **Input area**

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.
- ▶ **Output range**

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

Fieldbus modules PNOZ mc5p

- ▶ Output range only: Byte 3
 - Bits 0 ... 4: Status of LEDs on the PNOZmulti
 - Bit 0: OFAULT
 - Bit 1: IFAULT
 - Bit 2: FAULT
 - Bit 3: DIAG
 - Bit 4: RUN
 - Bit 5: Data is being exchanged.


Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

Assigning the inputs/outputs in the PNOZmulti Configurator to the INTERBUS inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data INTERBUS	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data INTERBUS	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


Block diagram

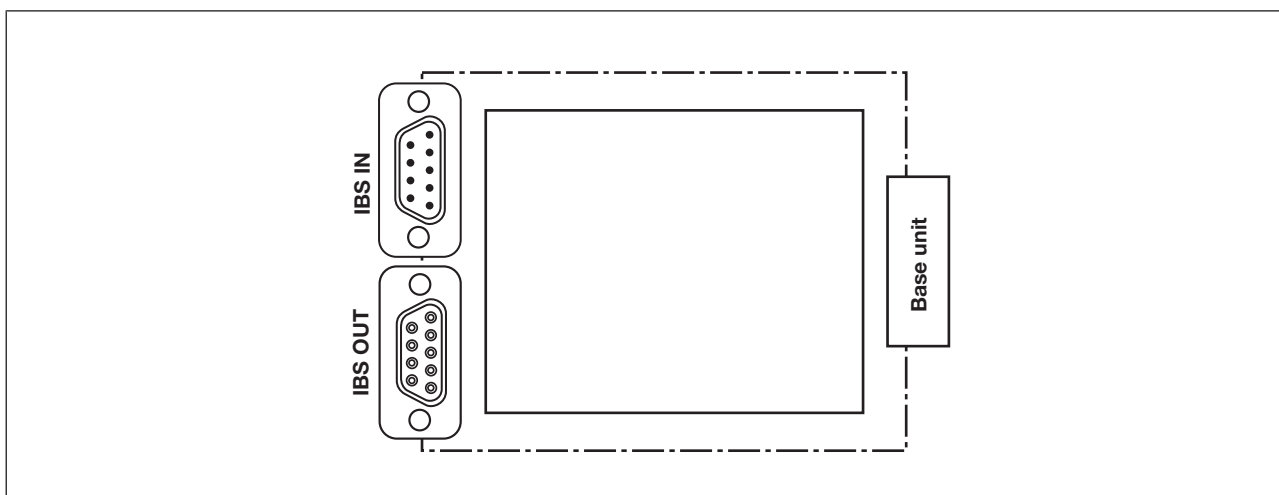

Fieldbus modules PNOZ mc5p

Installation

Dimensions in mm


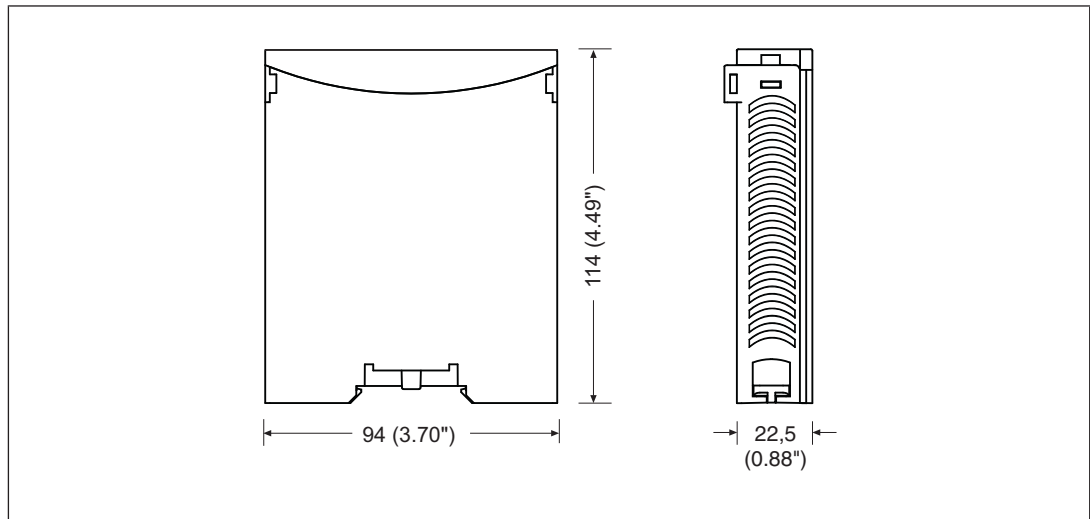


Commissioning

Preparing for commissioning

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which outputs on the safety system will communicate with INTERBUS. The connection to INTERBUS is made via two female 9-pin D-Sub screw connectors

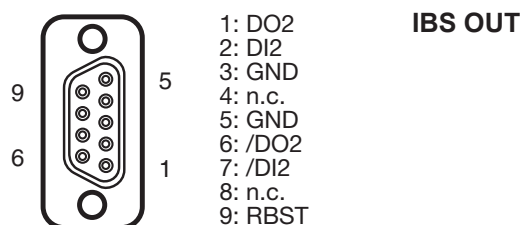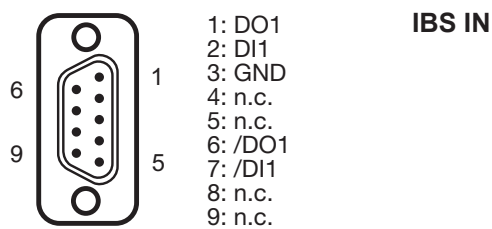

n. c. = not connected

Fieldbus modules

PNOZ mc5p

Please note:

- ▶ Information given in the "Technical details" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to INTERBUS:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

Setting the transmission rate

The transmission rate is set using a jumper. You can choose between 500 kBit/s and 2 MBit/s.

500 kBit/s: 500k  2M

2 MBit/s 500k  2M

Connecting the supply voltage

Connect the supply voltage to the base unit:


- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Fieldbus modules PNOZ mc5p

Connection example

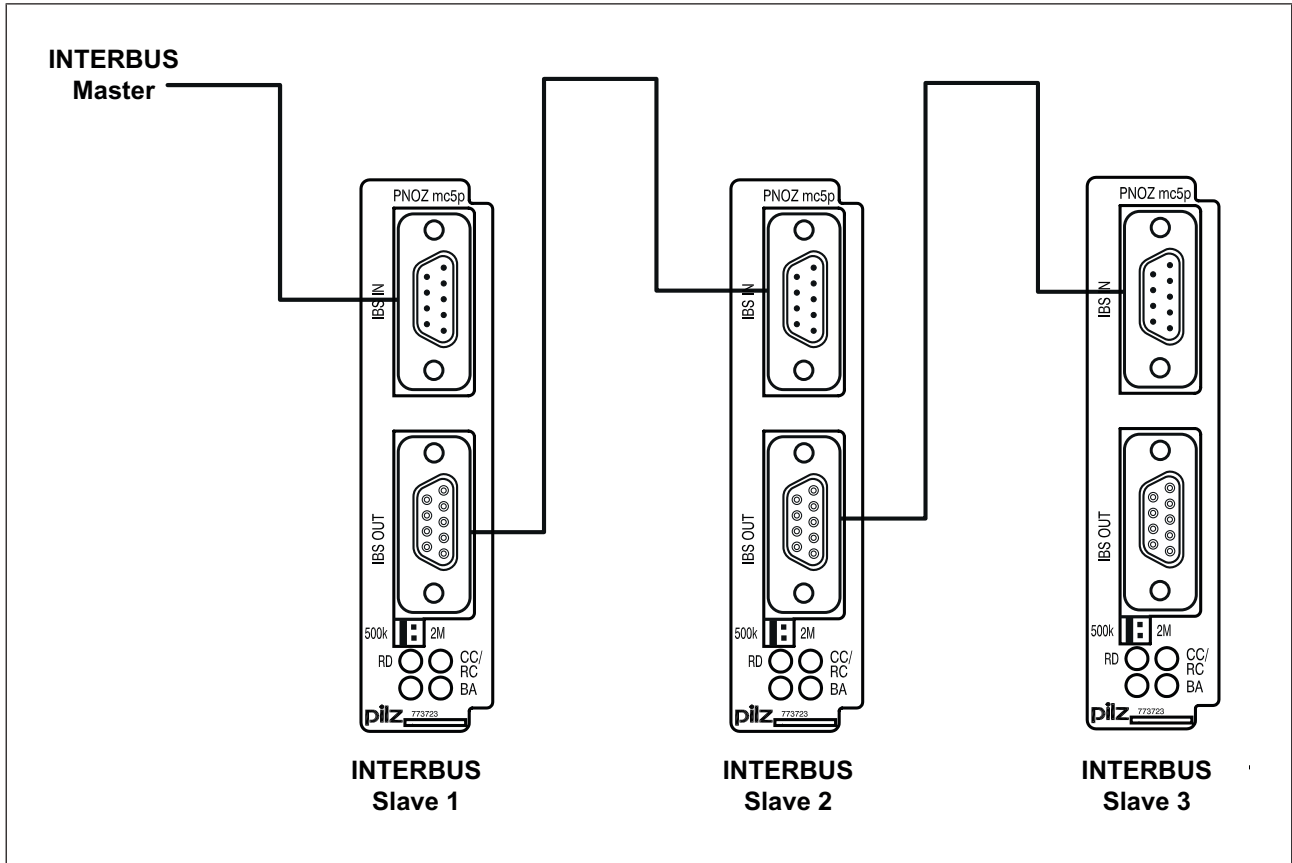

Fieldbus modules PNOZ mc5p

Technical Details

General	
Certifications	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	2,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	INTERBUS-S
Device type	Slave
Transmission rates	2 MBit/s, 500 kBit/s
Connection IBS IN	9-pin D-Sub male connector
Connection IBS OUT	9-pin D-Sub female connector
Galvanic isolation	Yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Fieldbus modules

PNOZ mc5p

Environmental data

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage	30 V
--------------------------	-------------

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
-------------------	--------------------------------------

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Dimensions

Height	94 mm
Width	22,5 mm
Depth	119 mm

Weight	155 g
--------	--------------

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules PNOZ mc5p

Order reference

Product

Product type	Features	Order no.
PNOZ mc5p	Fieldbus module, INTERBUS	773723

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Fieldbus modules PNOZ mc5.1p



Overview

Unit features

Application of the product PNOZ mc5.1p:

Expansion module for connection to a base unit from the PNOZmulti system.


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for INTERBUS with fibre-optic cable
- ▶ Transmission rate, selectable between 500 kBit/s and 2 MBit/s
- ▶ Status indicators for communication with INTERBUS and for errors
- ▶ F-SMA connection technology
- ▶ Max. 1 PNOZ mc5.1p can be connected to the base unit
- ▶ In the PNOZmulti Configurator, 24 inputs (standard) and 24 outputs (standard) can be configured for communication via a fieldbus.
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules

PNOZ mc5.1p

Front view

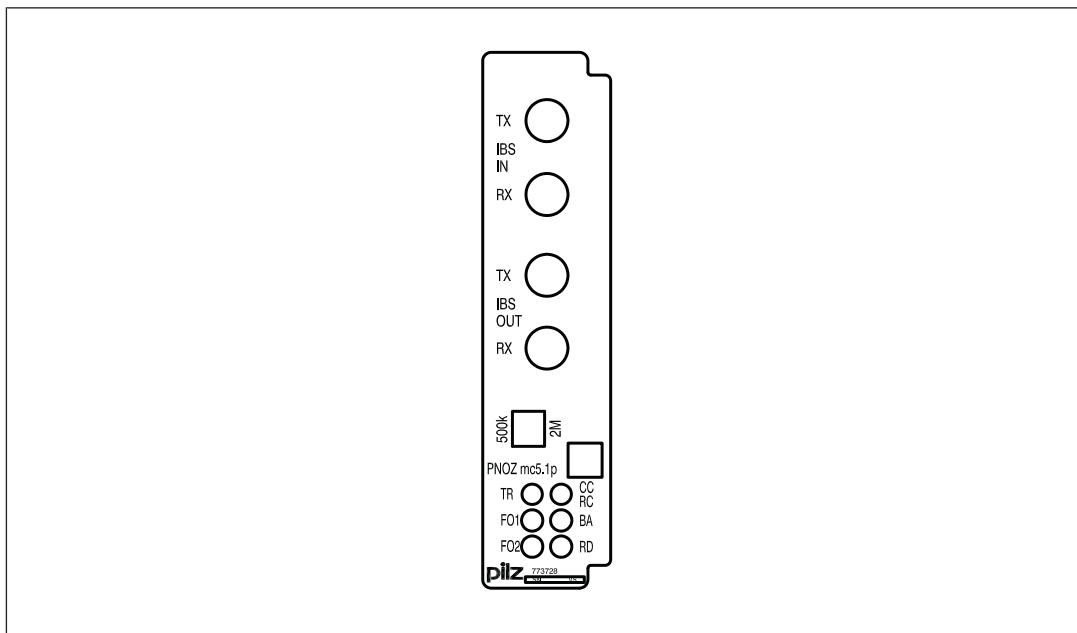

Legend

IBS IN	Remote bus IN
TX	Transmitter
RX	Receiver
IBS OUT	Remote bus OUT
TX	Transmitter
RX	Receiver
LEDs:	CR/CC, BA, RD, TR, FO1, FO2

Function description

Functions

The data to be transferred via INTERBUS LWL is selected and configured in the PNOZmulti Configurator. The base unit and PNOZ fieldbus module PNOZ mc5.1p are connected via a jumper. The fieldbus module is also supplied with voltage PNOZ mc5.1p via this jumper. After the supply voltage is switched on or the safety system PNOZmulti is re-set, the fieldbus module PNOZ mc5.1p is configured and started automatically.

Fieldbus modules

PNOZ mc5.1p

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

Assigning the inputs/outputs in the PNOZmulti Configurator to the INTERBUS inputs/outputs


Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data INTERBUS LWL	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data INTERBUS LWL	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Fieldbus modules


PNOZ mc5.1p

Block diagram

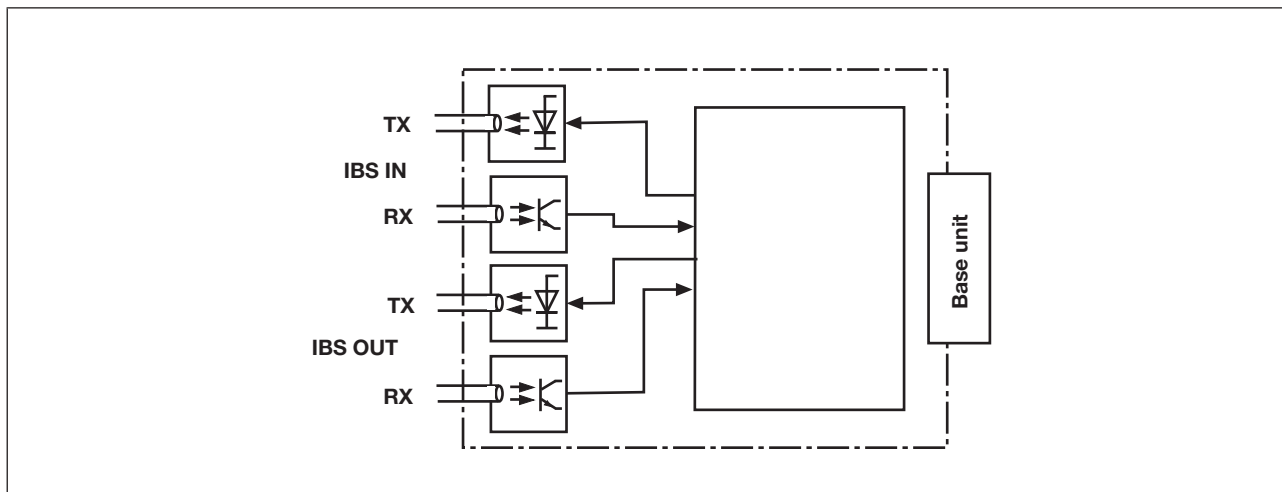

Installation

Dimensions in mm

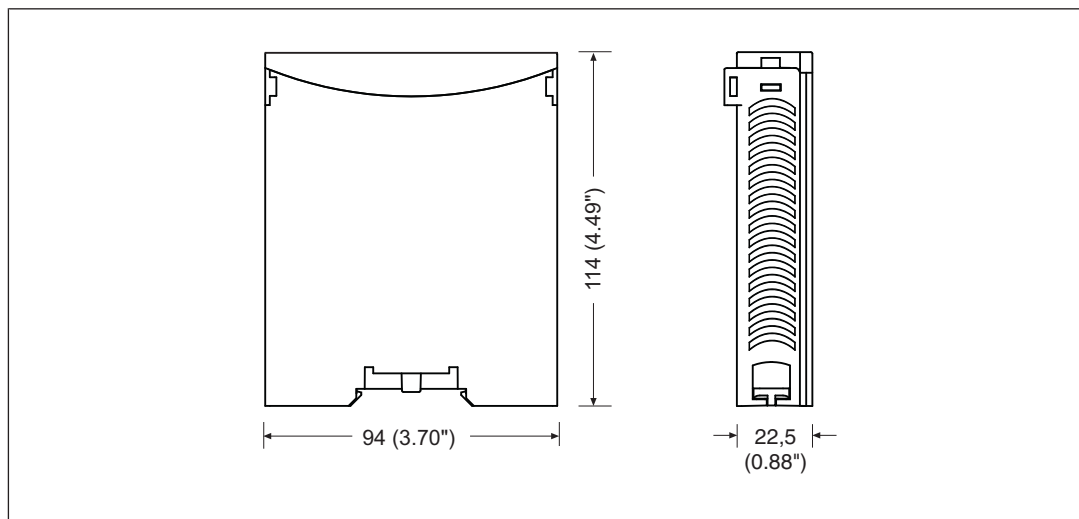

Commissioning

Preparing for commissioning

Please note the following when preparing for commissioning:

The fieldbus module PNOZ mc5.1p features F-SMA connection technology for fibre-optic cables. The visible light of the FO sender LED presents no danger to human skin or eyes. Do, however, avoid extended periods of direct eye contact with the LED.

Fieldbus modules


PNOZ mc5.1p

Use only the following fibre-optic cables:


- ▶ Polymer fibre, fibre type 980/1000 µm
- ▶ HCS fibre, fibre type 200/230 µm

Preparing for operation

- ▶ Connect fibre-optic cable
 - Connect the FO cable to the F-SMA plug-in connector on the transmitter and receiver.
 - Hand-tighten the union nut in a clockwise direction.

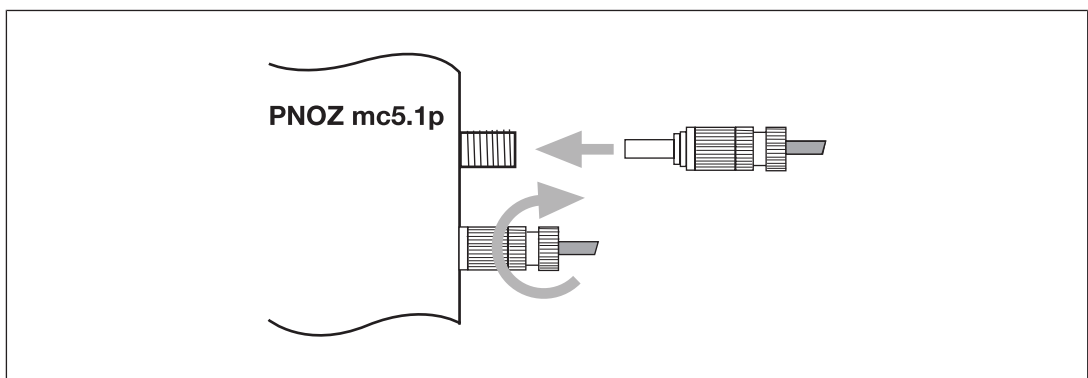

- ▶ Connect the TX transmitter of the IBS OUT remote bus to the RX receiver of the IBS IN remote bus.
- ▶ Connect the RX receiver of the IBS OUT remote bus to the TX transmitter of the IBS IN remote bus.

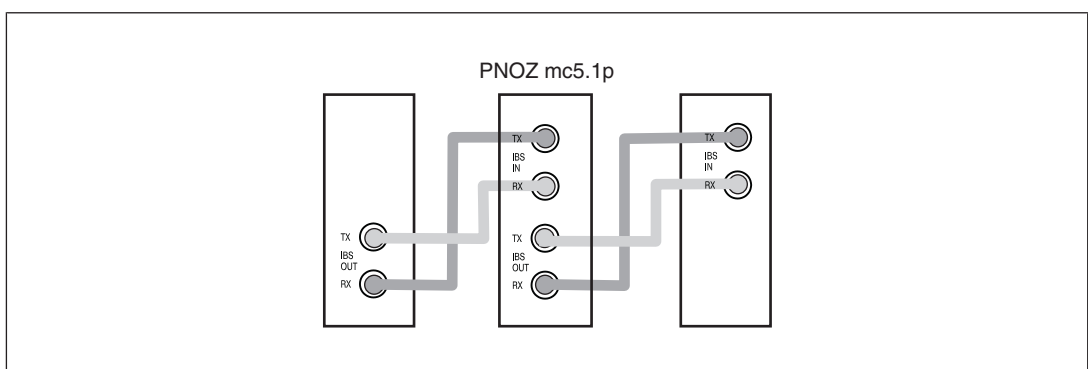


Fieldbus modules

PNOZ mc5.1p

INTERBUS interface

It is possible to define which inputs and outputs on the safety system will communicate with INTERBUS FO. The PNOZ mc5.1p features RX and TX F-SMA screw connections for IBS IN and RX and TX for IBS OUT for connecting to the INTERBUS FO.

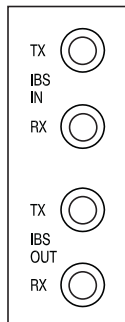

IBS IN: Remote bus IN

TX: Transmitter

RX: Receiver

IBS OUT: Remote bus OUT

TX: Transmitter

RX: Receiver

Setting the transmission rate

The transmission rate is set using a jumper. You can choose between 500 kBit/s and 2 MBit/s.

500 kBit/s: 500k  2M

2 MBit/s 500k  2M

Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V


Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Connection example

The sender and receiver of the incoming and outgoing remote buses are configured in a crossover formation. Cover unused connections with a protective cap.

Fieldbus modules PNOZ mc5.1p

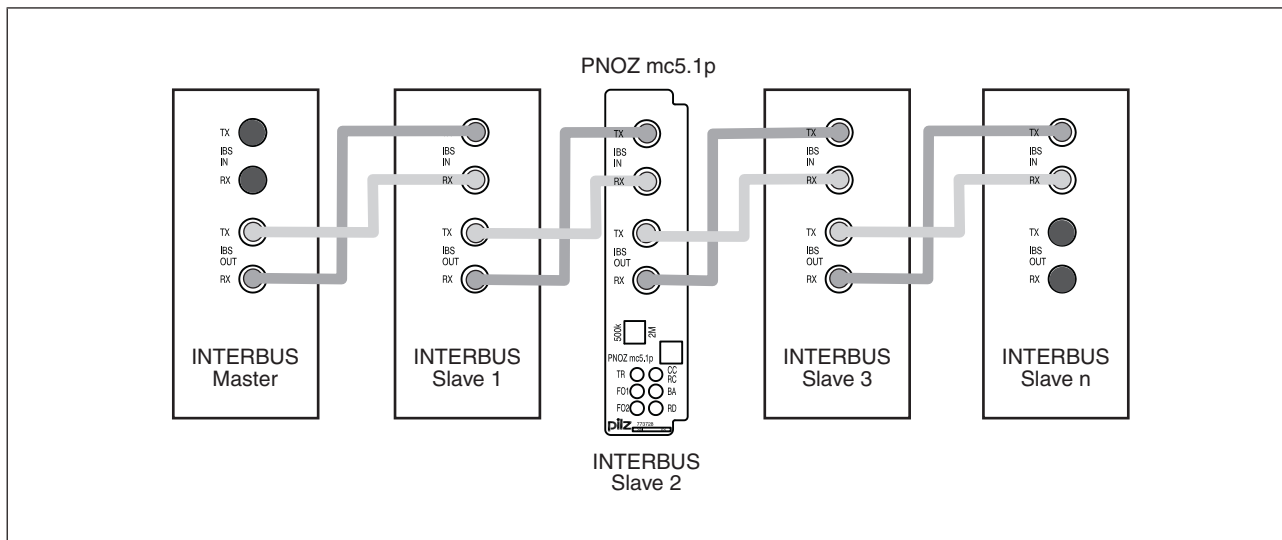

Technical Details

General

Certifications

CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed

Electrical data

Supply voltage

for

internal

Voltage

Kind

Voltage tolerance

Power consumption

Module supply

Via base unit

5 V

DC

-2 %/+2 %

2 W

Status indicator

LED

Fieldbus interface

Fieldbus interface

INTERBUS LWL

Device type

Slave

Transmission rates

2 MBit/s, 500 kBit/s

Connection

F-SMA connector

Times

Supply interruption before de-energisation

20 ms

Environmental data

Ambient temperature

in accordance with the standard

EN 60068-2-14

Temperature range

0 - 55 °C

Fieldbus modules PNOZ mc5.1p

Environmental data

Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Max. operating height above SL	2000 m
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Mounting area (e.g. control cabinet)	IP54
Housing	IP20
Terminals	IP20

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0
Dimensions	
Height	94 mm
Width	22,5 mm
Depth	121 mm
Weight	145 g

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules

PNOZ mc5.1p

Order reference

Product

Product type	Features	Order no.
PNOZ mc5.1p	Fieldbus module, INTERBUS FO	773728

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Fieldbus modules

PNOZ mc6p/mc6.1p



Overview

Unit features

Application of the product PNOZ mc6p/mc6.1p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CANopen
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Transmission rate selected via rotary switch (1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s)
- ▶ Status indicators for communication with CANopen and for errors
- ▶ Supported protocols:
 - PNOZ mc6p:** CiA DS-301 V3.0
 - PNOZ mc6.1p:** CiA DS-301 V4.0.2
- ▶ **PNOZ mc6.1p:** Default COB-ID has been adapted for RPDO 3 (400 h) and TPDO 3 (380 h)
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CANopen . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc6p/mc6.1p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.
- ▶ Coated version:
 - Increased environmental requirements (see [Technical details \[439\]](#))

Fieldbus modules

PNOZ mc6p/mc6.1p

Front view

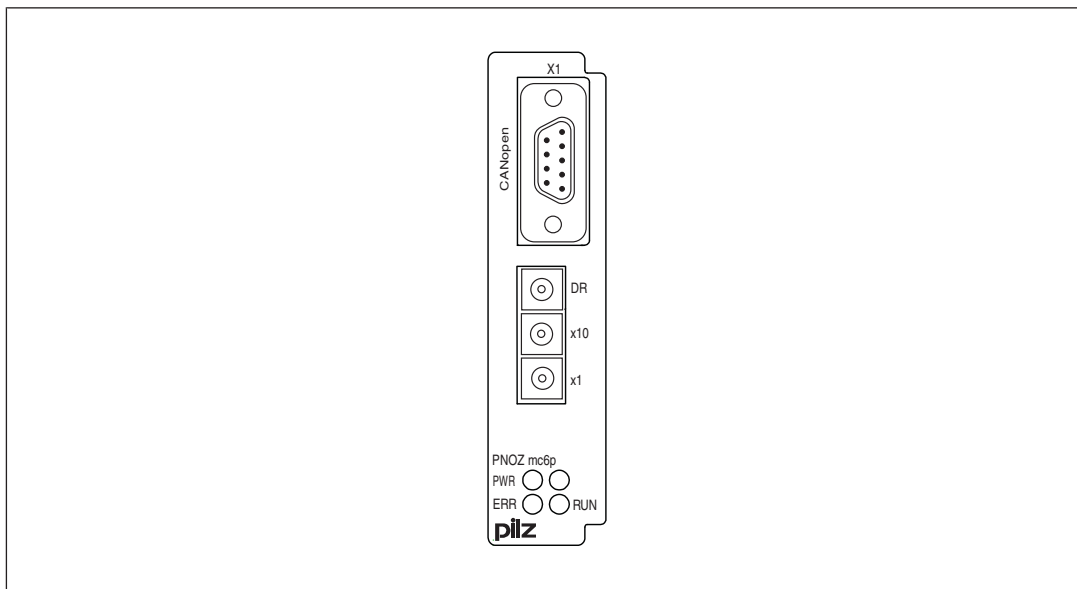

Key

- ▶ X1: CANopen interface (male 9-pin D-Sub connector)
- ▶ LED:
 - Power
 - Run
 - Error

Function description

Operation

The virtual inputs and outputs that are to be transferred via CANopen are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mc6p/mc6.1p are connected via a jumper. The station address and the transmission rate are set using rotary switches. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mc6p/mc6.1p is configured and started automatically.

LEDs indicate the status of the expansion module on CANopen.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules PNOZ mc6p/mc6.1p

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


Assigning the inputs/outputs in the PNOZmulti Configurator to the CANopen inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


Fieldbus modules PNOZ mc6p/mc6.1p

Block diagram

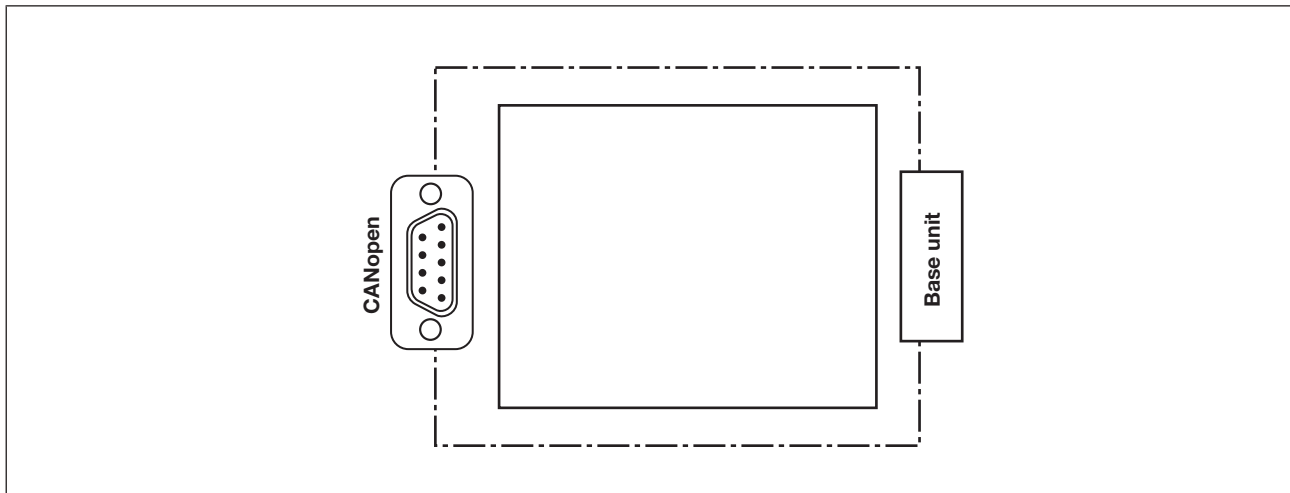

Installation

Dimensions in mm

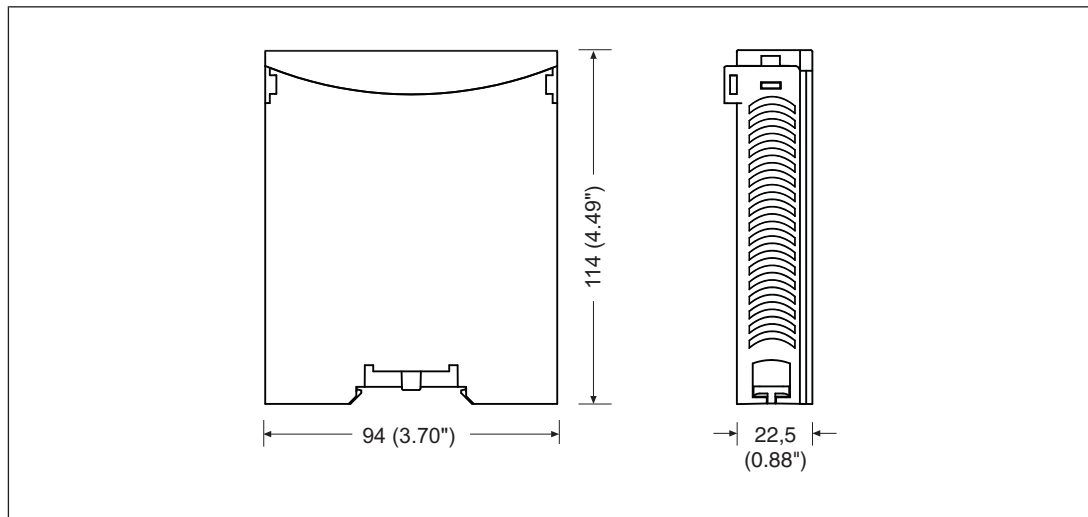

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[439\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.

Fieldbus modules

PNOZ mc6p/mc6.1p

- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).


Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

CANopen interface

The connection to CANopen is made via a male 9-pin D-Sub connector.

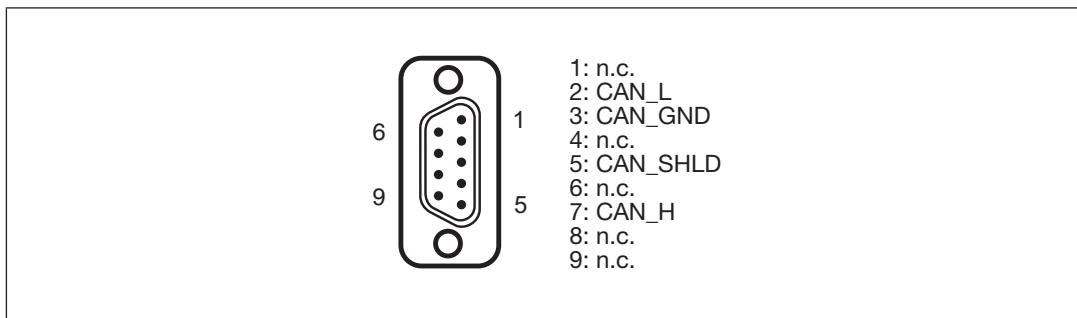

n.c. = not connected

Please note the following when connecting to CANopen:

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

CANopen termination

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, CANopen must be terminated at both ends.

Fieldbus modules

PNOZ mc6p/mc6.1p

Preparing for operation

Setting the transmission rate




- ▶ On the upper rotary switch DR, use a small screwdriver to set the transmission rate (in the example, "3" corresponds to 50 kBit/s).

Switch setting	0	1	2	3	4	5	6	7	8	9
Transmission rate	-	10 kBit/s	20 kBit/s	50 kBit/s	125 kBit/s	250 kBit/s	500 kBit/s	800 kBit/s	1 MBit/s	-


Setting the station address

The station address of the expansion module PNOZ mc6p/mc6.1p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

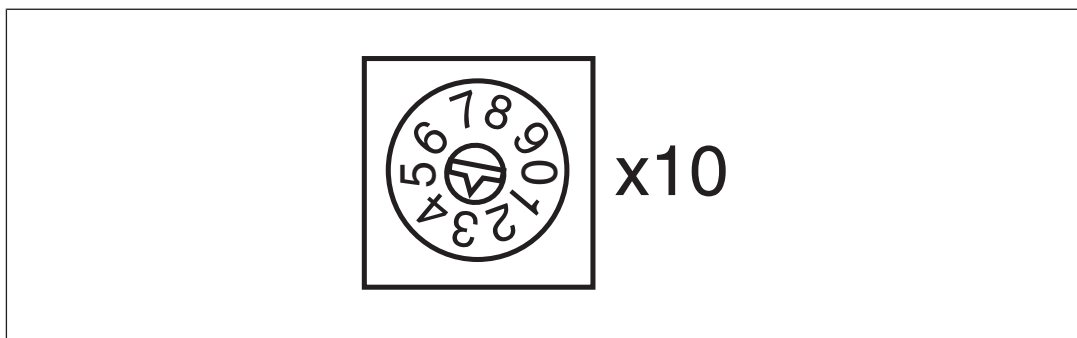

- ▶ On the middle rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

Fieldbus modules PNOZ mc6p/mc6.1p

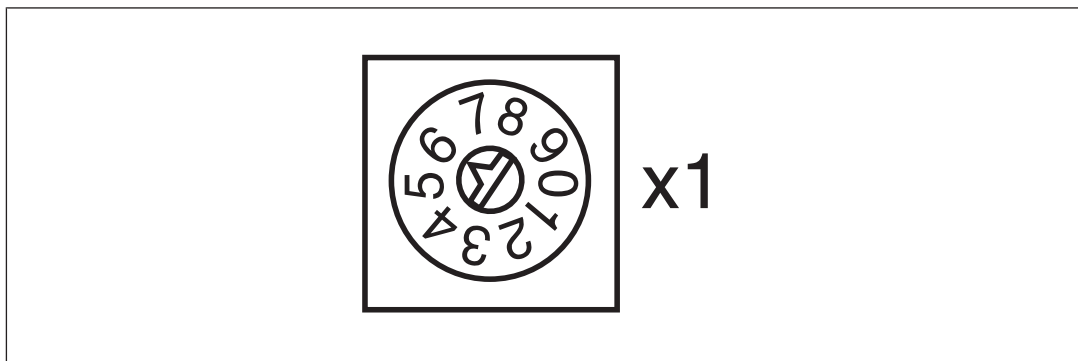


- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example). Station address 36 is set in the diagrams as an example.

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Connection example

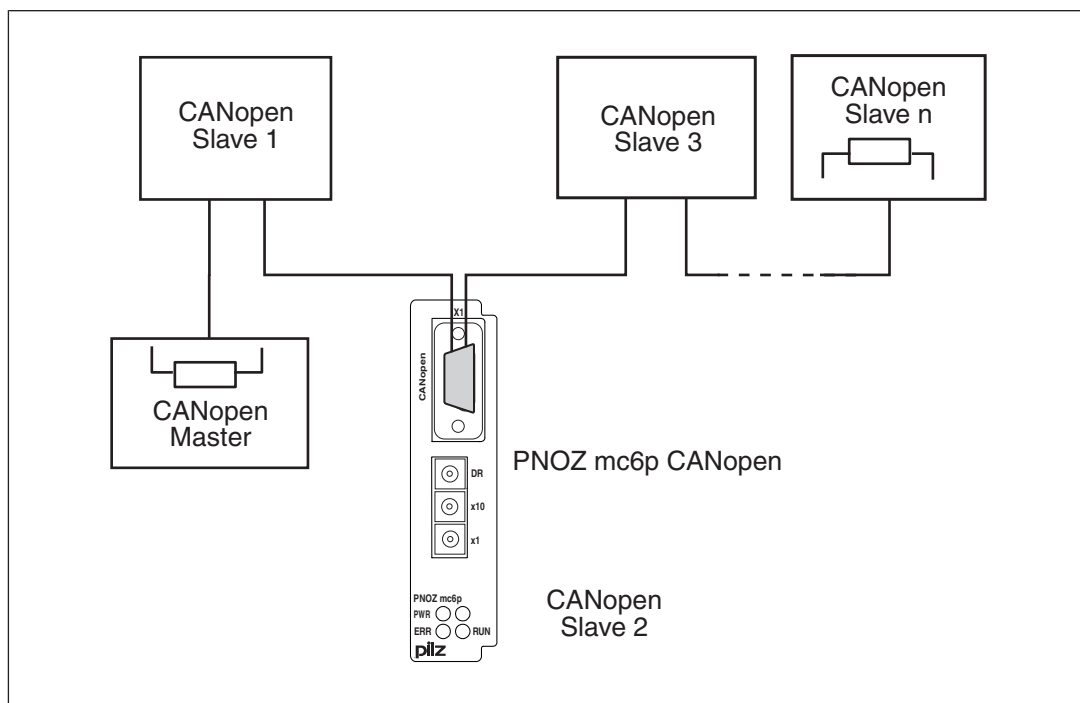

Fieldbus modules PNOZ mc6p/mc6.1p

Technical details

General	773712	773727	773733
Certifications	CE, EAC, KOSHA, UKCA, cULus Listed	CCC, CE, EAC, KCC, KOSHA, TÜV, cULus Listed	CE, EAC, UKCA, cULus Listed
Electrical data	773712	773727	773733
Supply voltage			
for	Module supply	Module supply	Module supply
internal	Via base unit	Via base unit	Via base unit
Voltage	5 V	5 V	5 V
Kind	DC	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %	-2 %/+2 %
Power consumption	1 W	2,5 W	1 W
Status indicator	LED	LED	LED
Fieldbus interface	773712	773727	773733
Fieldbus interface	CANopen	CANopen	CANopen
Device type	Slave	Slave	Slave
Protocol	CiA DS-301 V3.0	CiA DS-301 V3.0	CiA DS-301 V4.02
Station address	0 - 99d	0 - 99d	0 - 99d
Transmission rates	1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s	1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s	1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s
Connection	9-pin D-Sub male connector	9-pin D-Sub male connector	9-pin D-Sub male connector
Galvanic isolation	Yes	Yes	Yes
Test voltage	500 V AC	500 V AC	500 V AC
Times	773712	773727	773733
Supply interruption before de-energisation	20 ms	20 ms	20 ms
Environmental data	773712	773727	773733
Ambient temperature			
in accordance with the standard	EN 60068-2-14	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	0 - 50 °C	0 - 60 °C
Storage temperature			
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C	-25 - 70 °C

Fieldbus modules PNOZ mc6p/mc6.1p

Environmental data	773712	773727	773733
Climatic suitability			
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term	Not permitted
Max. operating height above SL	2000 m	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2	EN 61131-2
Vibration			
in accordance with the standard	EN 60068-2-6	EN 60068-2-6	EN 60068-2-6
Frequency	10 - 150 Hz	10 - 150 Hz	10 - 150 Hz
Acceleration	1g	1g	1g
Corrosive gas check			
SO ₂ : Concentration 10 ppm, duration 10 days, passive	–	DIN V 40046-36	–
H ₂ S: Concentration 1 ppm, duration 10 days, passive	–	DIN V 40046-37	–
Shock stress			
in accordance with the standard	EN 60068-2-27	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g	15g
Duration	11 ms	11 ms	11 ms
Airgap creepage			
in accordance with the standard	EN 61131-2	EN 61131-2	EN 61131-2
Overvoltage category	III	III	III
Pollution degree	2	2	2
Rated insulation voltage	30 V	30 V	30 V
Protection type			
in accordance with the standard	EN 60529	EN 60529	EN 60529
Housing	IP20	IP20	IP20
Terminals	IP20	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54	IP54
Mechanical data	773712	773727	773733
Mounting position	horizontally on mounting rail	horizontally on mounting rail	horizontally on mounting rail

Fieldbus modules PNOZ mc6p/mc6.1p

Mechanical data	773712	773727	773733
DIN rail			
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm	27 mm
Material			
Bottom	PPO UL 94 V0	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0	ABS UL 94 V0
Dimensions			
Height	94 mm	94 mm	94 mm
Width	22,5 mm	22,5 mm	22,5 mm
Depth	119 mm	119 mm	119 mm
Weight	115 g	145 g	110 g

Where standards are undated, the 2020-07 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mc6p	Fieldbus module, CANopen, protocol: CiA DS-301 V3.0	773712
PNOZ mc6p coated version	Fieldbus module, CANopen, coated version, protocol: CiA DS-301 V3.0	773727
PNOZ mc6.1p	Fieldbus module, CANopen, protocol: CiA DS-301 4.0.2	773733


Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Fieldbus modules

PNOZ mc7p

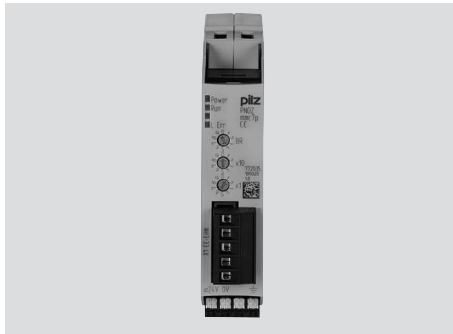

Overview

Unit features

Application of the product PNOZ mc7p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CC-Link
- ▶ Station addresses from 0 ... 63, selected via rotary switch
- ▶ Station type: Remote Device
- ▶ Occupied stations: 2
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CC-Link . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc7p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules PNOZ mc7p

Front view

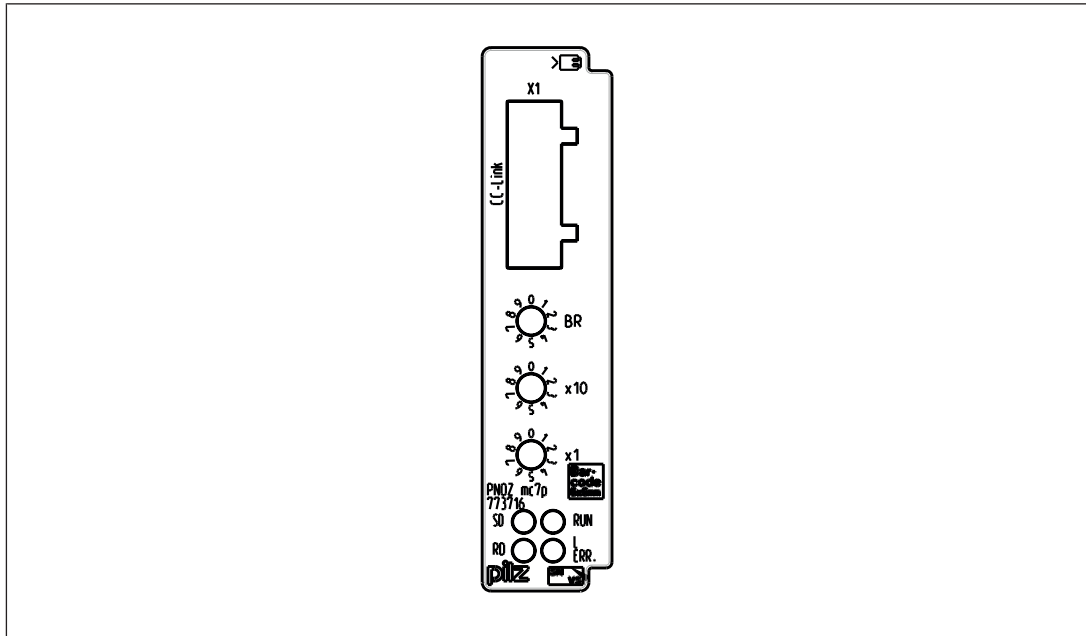

Legend:

- ▶ LED:
 - Run
 - SD
 - RD
 - L Err

Function description

Functions

The virtual inputs and outputs that are to be transferred via the fieldbus CC-Link are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc7p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc7p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus CC-Link .

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules PNOZ mc7p

Input and output data

The data is structured as follows:

- ▶ Input area
 - Inputs on PNOZmulti Configurator: i00 ... i23
 - Input data CC-Link: RY0n, RY1n with n = 0 ... F

Example: i23 -> RY17

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RY0n	i15	i14	i13	i12	i11	i10	i09	i08	i07	i06	i05	i04	i03	i02	i01	i00
RY1n	-	-	-	-	-	-	-	-	i23	i22	i21	i20	i19	i18	i17	i16

- ▶ Output range
 - Outputs on PNOZmulti Configurator: o00 ... o23
 - Output data CC-Link: RXn, RX1n with n = 0 ... F


Example: o22 -> Rx16

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RX 0n	o15	o14	o13	o12	o11	o10	o09	o08	o07	o06	o05	o04	o03	o02	o01	o00
RX 1n	-	-	-	-	-	-	-	-	o23	o22	o21	o20	o19	o18	o17	o16

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Detailed information on data exchange is available in the document "Communication Interfaces PNOZmulti 2" in the section entitled "Fieldbus modules".


Block diagram

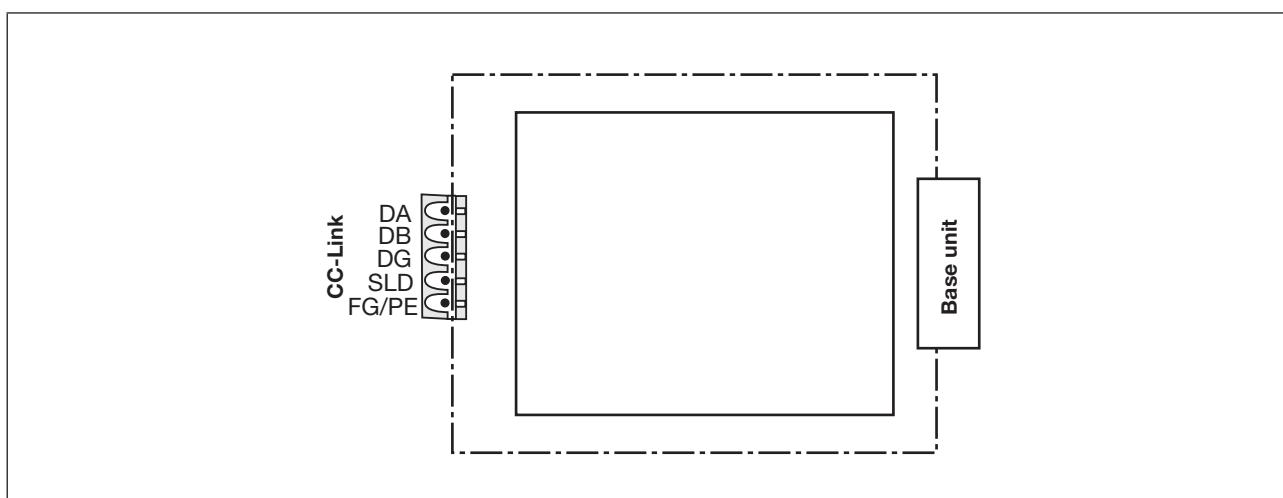

Fieldbus modules PNOZ mc7p

Installation

Dimensions in mm

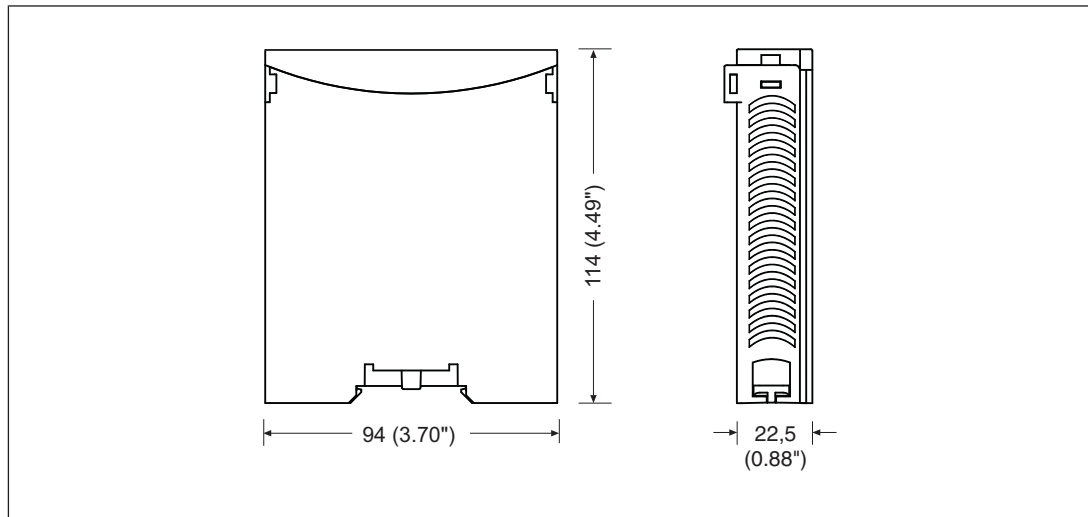

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:


- ▶ Information given in the [Technical details \[447\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).

Interface assignment

It is possible to define which outputs on the safety system will communicate with CC-Link. The connection to CC-Link is made via a 5-pin screw connector.

Fieldbus modules

PNOZ mc7p

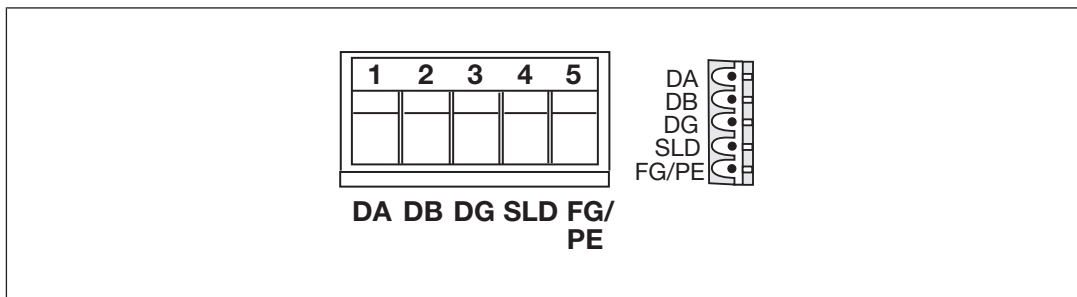


- 1: DA (Channel A)
- 2: DB (Channel B)
- 3: DG (Earth)
- 4: SLD (Cable shield)
- 5: FG/PE (Functional earth)

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Connection example

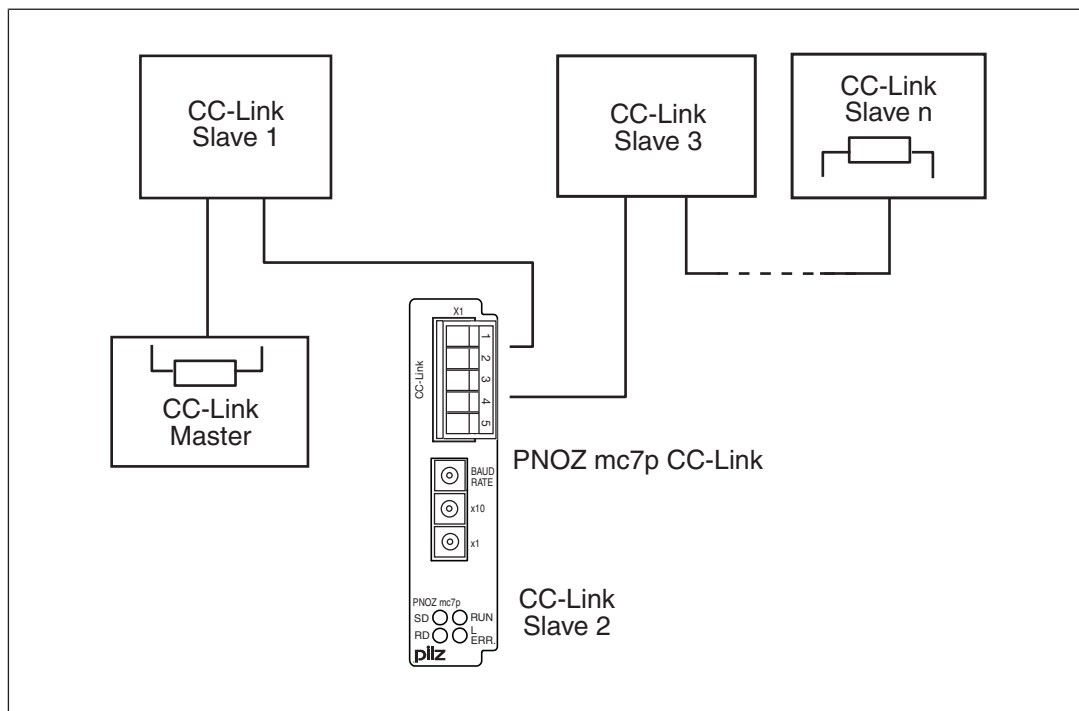

Fieldbus modules PNOZ mc7p

Technical Details

General	
Certifications	CE, EAC, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	2,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	CC-Link V1.10
Device type	Slave
Station address	0 ... 63d
Transmission rates	10 MBit/s, 156 kbit/s, 2,5 MBit/s, 5 MBit/s, 625 kbit/s
Connection	5-pin Combicon plug-in connector
Assigned stations	2
Galvanic isolation	Yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Fieldbus modules

PNOZ mc7p

Environmental data

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage	30 V
--------------------------	-------------

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between	Fieldbus and module voltage
-----------------------------	------------------------------------

Type of potential isolation	Functional insulation
-----------------------------	------------------------------

Rated surge voltage	500 V
---------------------	--------------

Mechanical data

Mounting position	horizontally on mounting rail
-------------------	--------------------------------------

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Dimensions

Height	94 mm
Width	22,5 mm
Depth	122 mm

Weight	110 g
--------	--------------

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules PNOZ mc7p

Order reference

Product

Product type	Features	Order no.
PNOZ mc7p	Fieldbus module, CC-Link	773716

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Fieldbus modules PNOZ mc8p



Overview

Unit features

Application of the product PNOZ mc8p:


Expansion module for connection to a base unit from the PNOZmulti system.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for Ethernet/IP and Modbus TCP
- ▶ Transmission rate 10 MBit/s (10BaseT) and 100 MBit/s (100BaseTX), full and half duplex
- ▶ IP address is set via DIP switches on the front of the unit
- ▶ Status indicators for communication and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherNet/IP, Modbus TCP . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc8p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti that can be connected.

Fieldbus modules PNOZ mc8p

Front view

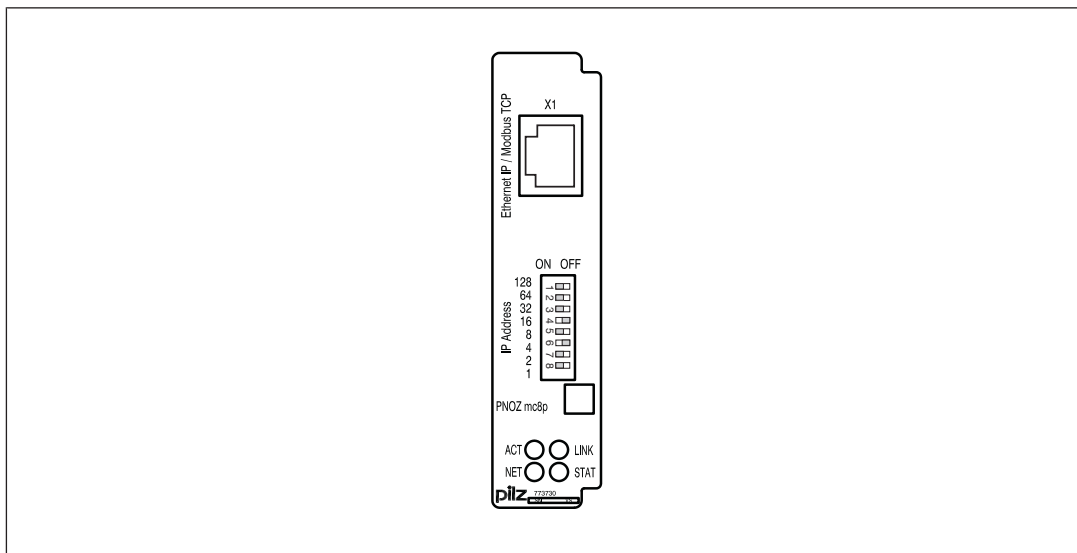

Legend

- X1: EtherNet/IP, Modbus TCP interface
- IP address: for setting the IP address
- LEDs: ACT, LINK, STAT, NET

EtherNet/IP™ is registered trademark and patented technology, licensed by ODVA.

Function description

Functions

The virtual inputs and outputs that are to be transferred via the fieldbus EtherNet/IP, Modbus TCP are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc8p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc8p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus EtherNet/IP, Modbus TCP.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules

PNOZ mc8p

Data exchange

Twenty bytes always must be sent and received for communication with the PNOZmulti.

Ethernet/IP

The input/output data from the PNOZmulti can be polled using the assembly object (Class 04h).

- ▶ Data from the PNOZmulti are requested with instance 64h.
- ▶ Instance 96h writes the data from the Ethernet IP scanner to the PNOZmulti.

Modbus TCP

No connection needs to be configured for the PNOZ mc8p. Port 502 is used in accordance with the Modbus TCP specification.

The Modbus TCP supports the following function codes:

3, 16 and 23 (refer to the document "PNOZmulti Communication Interfaces" for details of additional function codes)

The address input range begins with Register 0. The address output range begins with Register 1024. The Byte sequence for a Word is High Byte/Low Byte

Word	
Left Byte	Right Byte
Low Byte (Bit 7 ... 00)	High Byte (Bit 15 ... 08)

Input and output data

The data is structured as follows:

Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number I12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23	...	I120...I127
EtherNet/IP, Modbus TCP	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. O0, O5... .

The status of output O0 is stored in bit 0 of byte 0; the status of output O5 is stored in bit 5 of byte 0 etc.

Fieldbus modules

PNOZ mc8p


Virtual inputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23	...	O120... O127
EtherNet/IP, Modbus TCP	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

- ▶ Bits 0 ... 4: Status of LEDs on the PNOZmulti
 - Bit 0: OFAULT
 - Bit 1: IFAULT
 - Bit 2: FAULT
 - Bit 3: DIAG
 - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

Detailed information on data exchange is available in the document "Communication Interfaces", under "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces", under "Fieldbus modules").


Block diagram

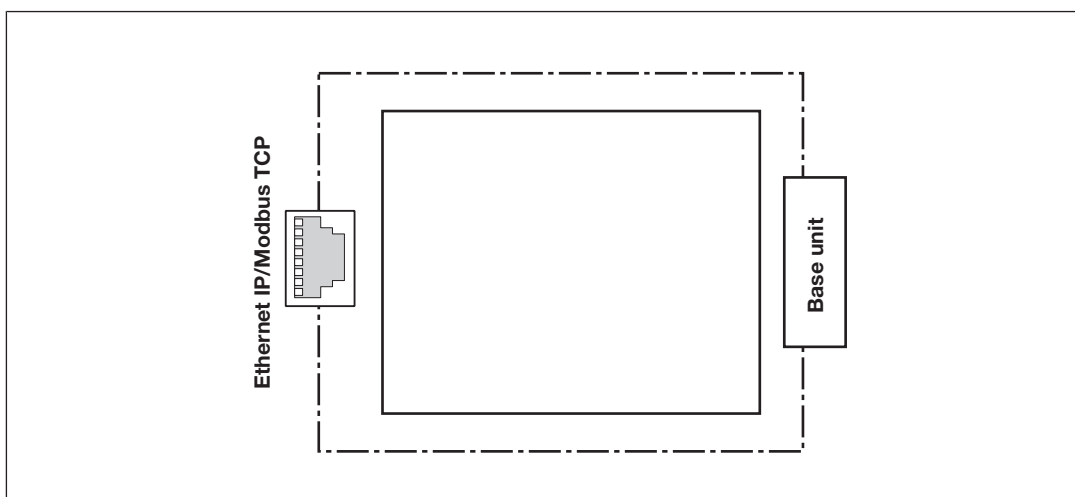

Fieldbus modules PNOZ mc8p

Installation

Dimensions in mm

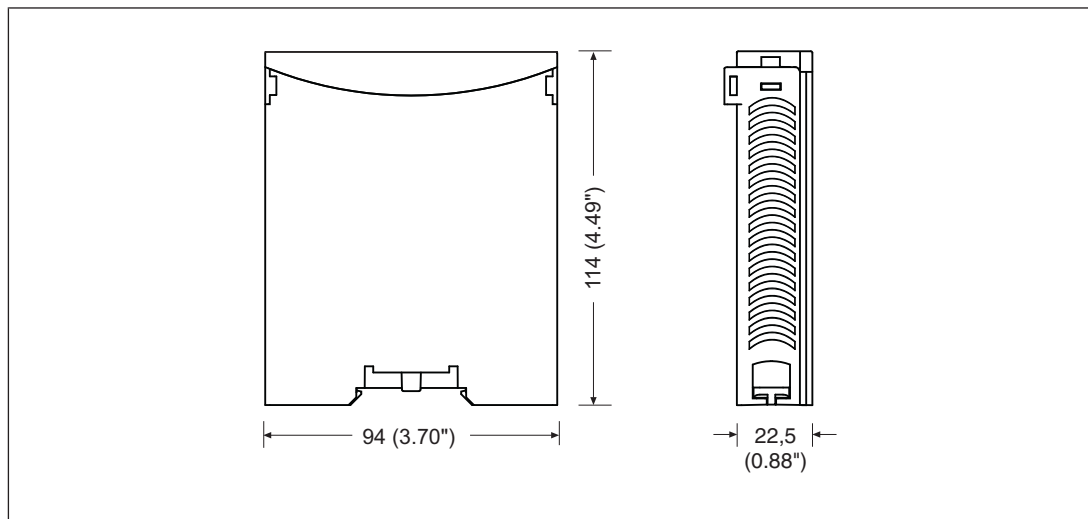

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with EtherNet/IP, Modbus TCP.

Please note:

- ▶ Information given in the "[Technical details \[457\]](#)" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to EtherNet/IP, Modbus TCP:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of EtherNet/IP, Modbus TCP are met, as stated in the Installation Manual published by the User Group.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.

Fieldbus modules PNOZ mc8p


- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).

Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

Interface assignment

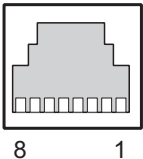RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.


n.c.: Not connected

Set IP address

The IP address of the fieldbus module PNOZ mc8p is set using the DIP switch on the front.

- ▶ The first three bytes of the IP address are: 192.168.0.
- ▶ Subnet mask: 255.255.255.0.
- ▶ The last byte of the IP address is configured (value range: 1 ...255).

Example: DIP switch: 00010100 (20 decimal)

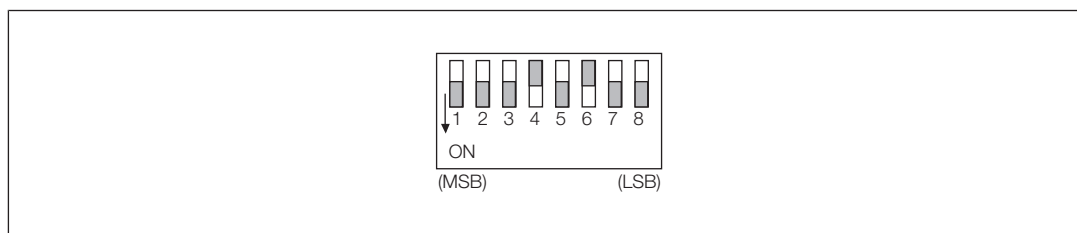

IP address: 192.168.0.20

Fieldbus modules

PNOZ mc8p

Change IP settings

Once the IP addresses of the computer and PNOZ mc8p have been configured, you can change the IP settings of the PNOZ mc8p.

- ▶ Connect the PNOZ mc8p to the computer.
- ▶ Call up the following html page: <http://192.168.0.20/config.htm>
- ▶ Configure the settings for the PNOZ mc8p.

Example:

IP address: 172.16.216.139

Subnet mask: 255.255.0.0

Gateway address: --

DNS1 address: --

DNS1 address: --

Host name: ---


Domain name: --

SMTP server: --

DHCP enabled: No

- ▶ Click on **Store Configuration**. The settings are transferred to the expansion module.
- ▶ Switch off the supply voltage.
- ▶ Set all DIP switches to zero.
- ▶ Switch on the supply voltage. The new IP address for the unit is now set.

Connection example

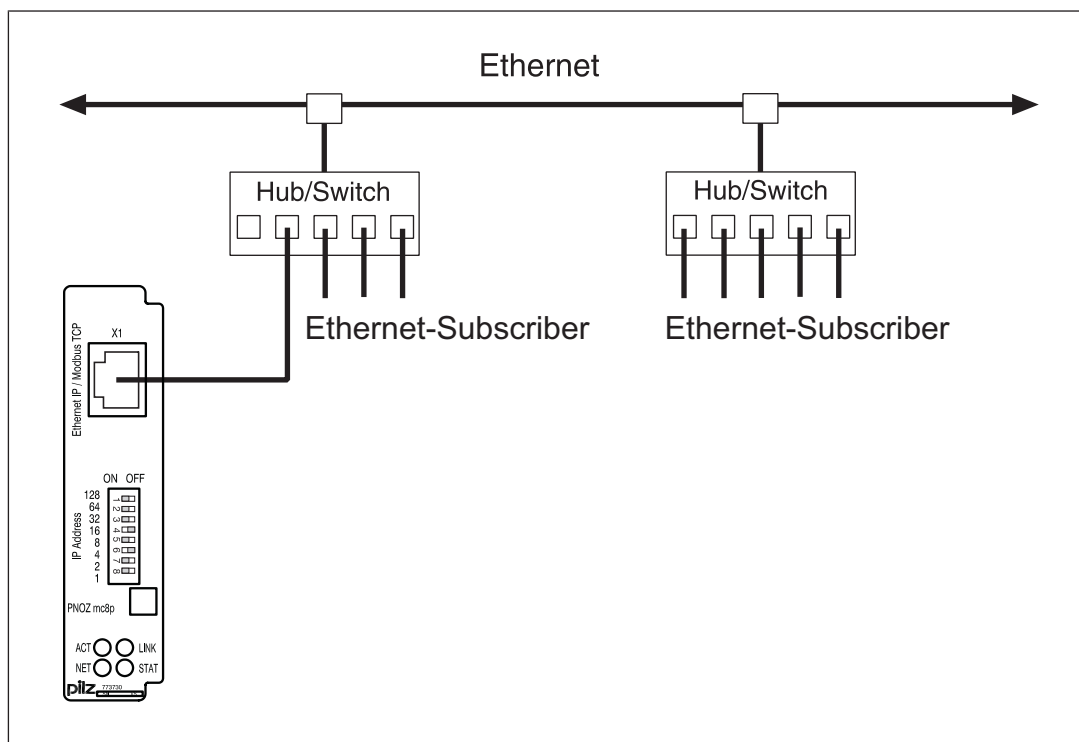

Fieldbus modules PNOZ mc8p

Technical Details

General	773730	773734
Certifications	CCC, CE, EAC, KCC, KOSHA, TÜV, cULus Listed	CE, EAC, KOSHA, UKCA, cULus Listed
Electrical data	773730	773734
Supply voltage		
for	Module supply	Module supply
internal	Via base unit	Via base unit
Voltage	5 V	5 V
Kind	DC	DC
Voltage tolerance	-2 %/+2 %	-2 %/+2 %
Power consumption	2,5 W	2,5 W
Status indicator	LED	LED
Fieldbus interface	773730	773734
Fieldbus interface	EtherNet/IP (TM), Modbus/TCP	EtherNet/IP (TM), Modbus/TCP
Device type	Slave	Slave
Transmission rates	10 MBit/s, 100 MBit/s	10 MBit/s, 100 MBit/s
Connection	RJ45	RJ45
Galvanic isolation	Yes	Yes
Test voltage	500 V AC	500 V AC
Times	773730	773734
Supply interruption before de-energisation	20 ms	20 ms
Environmental data	773730	773734
Ambient temperature		
in accordance with the standard	EN 60068-2-14	EN 60068-2-14
Temperature range	0 - 60 °C	-25 - 60 °C
Forced convection in control cabinet off	50 °C	50 °C
Storage temperature		
in accordance with the standard	EN 60068-2-1/-2	EN 60068-2-1/-2
Temperature range	-25 - 70 °C	-25 - 70 °C
Climatic suitability		
in accordance with the standard	EN 60068-2-30, EN 60068-2-78	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C	93 % r. h. at 40 °C
Condensation during operation	Not permitted	Short-term
Max. operating height above SL	2000 m	2000 m
EMC	EN 61131-2	EN 61131-2

Fieldbus modules PNOZ mc8p

Environmental data	773730	773734
Vibration		
in accordance with the standard	EN 60068-2-6	EN 60068-2-6
Frequency	5 - 500 Hz	5 - 500 Hz
Acceleration	1g	1g
Broadband noise		
in accordance with the standard	–	EN 60068-2-64
Frequency	–	5 - 500 Hz
Acceleration	–	1,9grms
Shock stress		
in accordance with the standard	EN 60068-2-27	EN 60068-2-27
Acceleration	15g	15g
Duration	11 ms	11 ms
Airgap creepage		
in accordance with the standard	EN 61131-2	EN 61131-2
Overvoltage category	III	III
Pollution degree	2	2
Rated insulation voltage	30 V	30 V
Protection type		
in accordance with the standard	EN 60529	EN 60529
Housing	IP20	IP20
Terminals	IP20	IP20
Mounting area (e.g. control cabinet)	IP54	IP54
Mechanical data	773730	773734
Mounting position	horizontally on mounting rail	horizontally on mounting rail
DIN rail		
Top hat rail	35 x 7,5 EN 50022	35 x 7,5 EN 50022
Recess width	27 mm	27 mm
Material		
Bottom	PPO UL 94 V0	PPO UL 94 V0
Front	ABS UL 94 V0	ABS UL 94 V0
Dimensions		
Height	94 mm	94 mm
Width	22,5 mm	22,5 mm
Depth	114 mm	114 mm
Weight	137 g	140 g

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules PNOZ mc8p

Order reference

Product

Product type	Features	Order no.
PNOZ mc8p	Fieldbus module, Ethernet/IP, Modbus TCP	773730
PNOZ mc8p coated version	Fieldbus module, Ethernet/IP, Modbus TCP	773734

Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639
KOP-XE coated	Jumper, coated version	774640

Fieldbus modules PNOZ mc9p



Overview

Unit features

Application of the product PNOZ mc9p:

Expansion module for connection to a base unit from the PNOZmulti system.


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for PROFINET IO
- ▶ Transmission rate 100 MBit/s (100BaseTX), full and half duplex
- ▶ Status indicators for communication and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFINET . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc9p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti that can be connected.

Fieldbus modules

PNOZ mc9p

Front view

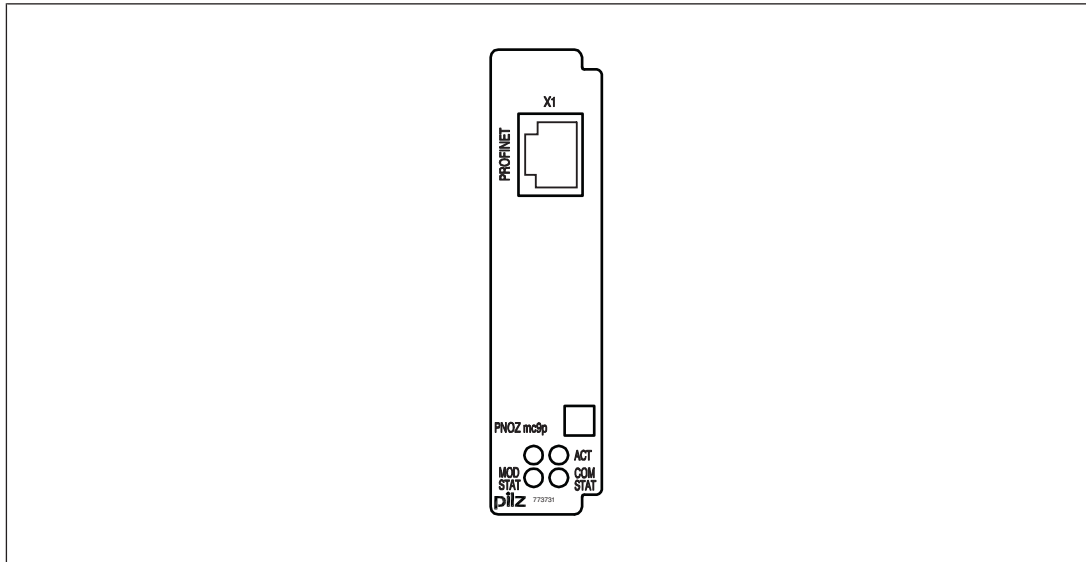

Legend:

- ▶ X1: Profinet interface
- ▶ LED:
 - ACT
 - COM STAT
 - MOD STAT

Function description

Functions

The virtual inputs and outputs that are to be transferred via the fieldbus PROFINET are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc9p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc9p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus PROFINET .

The configuration is described in detail in the PNOZmulti Configurator's online help.

Input and output data

32 bytes must always be sent and received for communication with the PNOZmulti. Only the first 20 bytes are used (see document "PNOZmulti Communication Interfaces").

Fieldbus modules

PNOZ mc9p

The data is structured as follows:

Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number I12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23	...	I120...I127
PROFINET	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7

Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. O0, O5... .

The status of output O0 is stored in bit 0 of byte 0; the status of output O5 is stored in bit 5 of byte 0 etc.

Virtual inputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23	...	O120... O127
PROFINET	Byte 0: Bit 0 ... 7	Byte 1: Bit 0 ... 7	Byte 2: Bit 0 ... 7	...	Byte 15: Bit 0 ... 7


- ▶ Bits 0 ... 4: Status of LEDs on the PNOZmulti
 - Bit 0: OFAULT
 - Bit 1: IFAULT
 - Bit 2: FAULT
 - Bit 3: DIAG
 - Bit 4: RUN
- ▶ Data exchange is displayed in Bit 5.
- ▶ Polling the payload data: 2 Bytes with the table number and segment number are sent by the Master for access to the payload data table (15 Bytes are returned to the Master).

Detailed information on data exchange is available in the document "Communication Interfaces", under "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "PNOZmulti Communication Interfaces", under "Fieldbus modules")


Fieldbus modules PNOZ mc9p

Block diagram

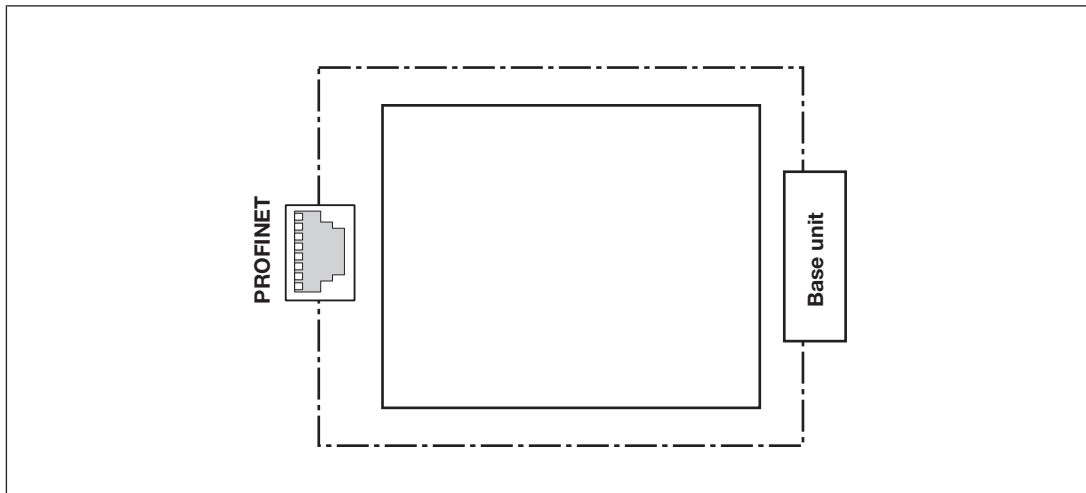

Installation

Dimensions in mm

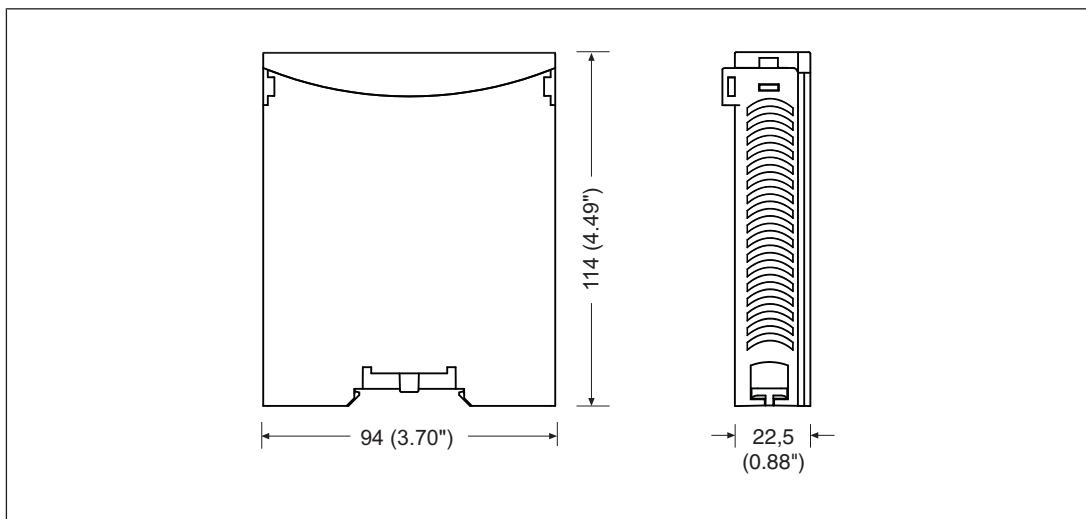

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with PROFINET.

Please note:

- ▶ Information given in the "[Technical details \[467\]](#)" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.


Fieldbus modules PNOZ mc9p

Please note the following when connecting to PROFINET:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of PROFINET are met, as stated in the Installation Manual published by the User Group.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).

Interface assignment

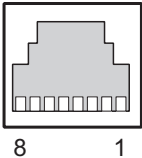RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

Fieldbus modules

PNOZ mc9p

Preparing for operation

Assign unit name

The unit name is assigned in the PNOZmulti Configurator. When selecting the PNOZ mc9p, enter the unit name under **Equipment Identifier**.

- ▶ You can also assign the unit name through the IO Controller. In this case, insert a "\$" symbol in front of the unit name in the PNOZmulti Configurator, under **Equipment Identifier**.
- ▶ The unit name on the Ethernet subnet must be unique. It must comply with the DNS conventions:
 - Max. 127 characters (letters, numbers, hyphen or period)
 - Max. 63 characters between two periods
- ▶ The following characters are invalid: ä ö ü () _ / space
- ▶ The unit name may not
 - Begin or end with the "-" character.
 - Have the form n.n.n.n (n = 0 ... 999).
 - Start with the sequence "port-xyz-" (x, y, z = 0 ... 9).

Install GSD file

Install the GSD file. The GSD file is available on the Internet at www.pilz.de.

Set IP address

There are two options:

- ▶ Automatic assignment of the IP address with the Dynamic Host Configuration Protocol (DHCP)
- ▶ Assignment of the IP address by the IO controller before system startup based on the unique unit name.


Connecting the supply voltage

Connect the supply voltage to the base unit:

- ▶ Terminal **24 V** and **A1 (+)**: + 24 VDC
- ▶ Terminal **0 V** and **A2 (-)**: 0 V

Fieldbus modules PNOZ mc9p

Connection example

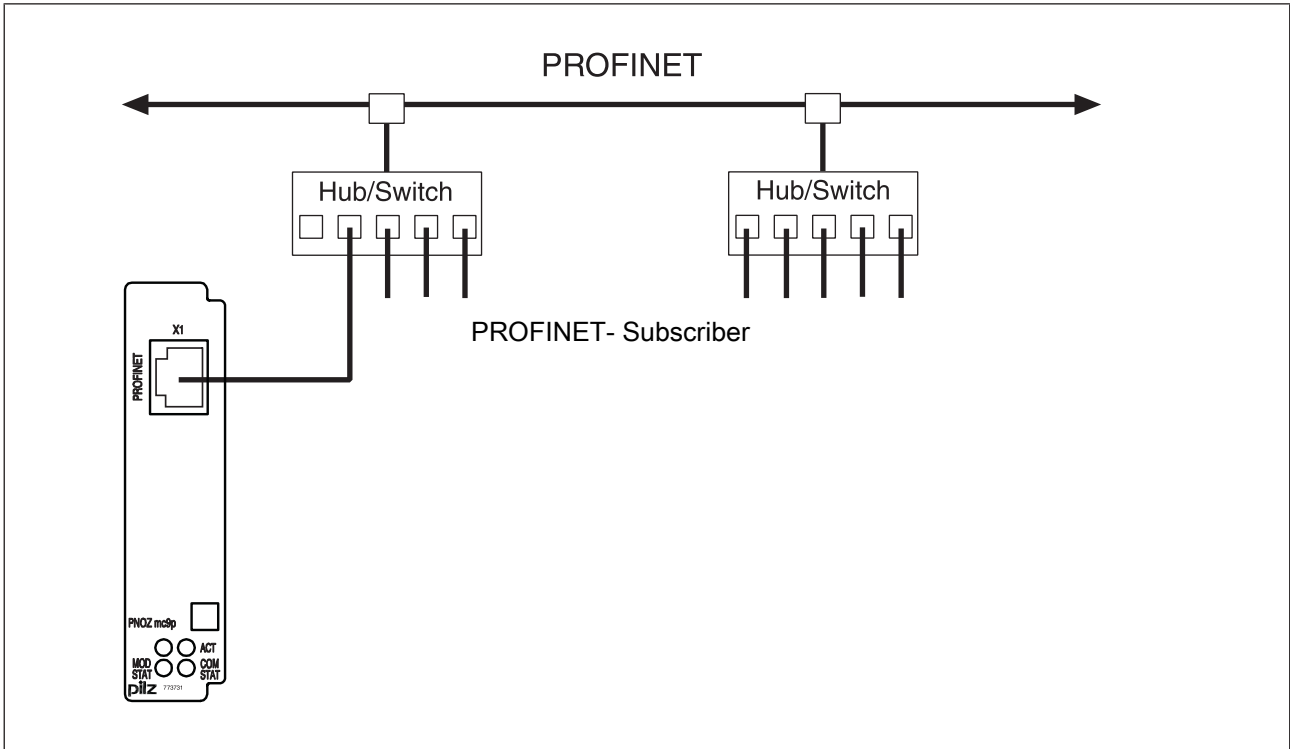

Fieldbus modules

PNOZ mc9p

Technical details

General	
Certifications	CCC, CE, EAC (Eurasian), KCC, KOSHA, TÜV, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	2,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	PROFINET IO
Device type	Slave
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	Yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	50 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Fieldbus modules

PNOZ mc9p

Environmental data

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Max. operating height above SL	2000 m
--------------------------------	---------------

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage	30 V
--------------------------	-------------

Protection type

in accordance with the standard	EN 60529
Mounting area (e.g. control cabinet)	IP54
Housing	IP20
Terminals	IP20

Mechanical data

Mounting position	horizontally on mounting rail
-------------------	--------------------------------------

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Dimensions

Height	94 mm
Width	22,5 mm
Depth	114 mm

Weight	135 g
--------	--------------

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules

PNOZ mc9p

Order reference

Product

Product type	Features	Order no.
PNOZ mc9p	Fieldbus module, PROFINET IO	773731


Accessories

Jumper

Product type	Features	Order no.
KOP-XE	Jumper	774639

Fieldbus modules

PNOZ mc10p

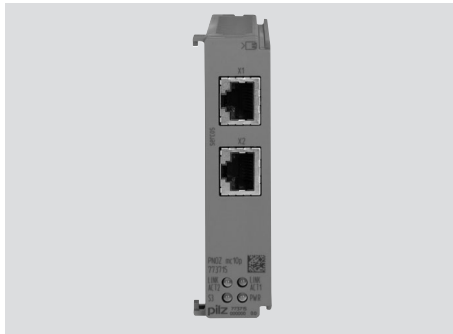

Overview

Unit features

Application of the product PNOZ mc10p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for sercos III
- ▶ Status indicators for communication with sercos III and for errors
- ▶ Delivery configuration with IP address: 192.168.1.64 and Sercos address: 64
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus sercos III . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc10p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules

PNOZ mc10p

Front view

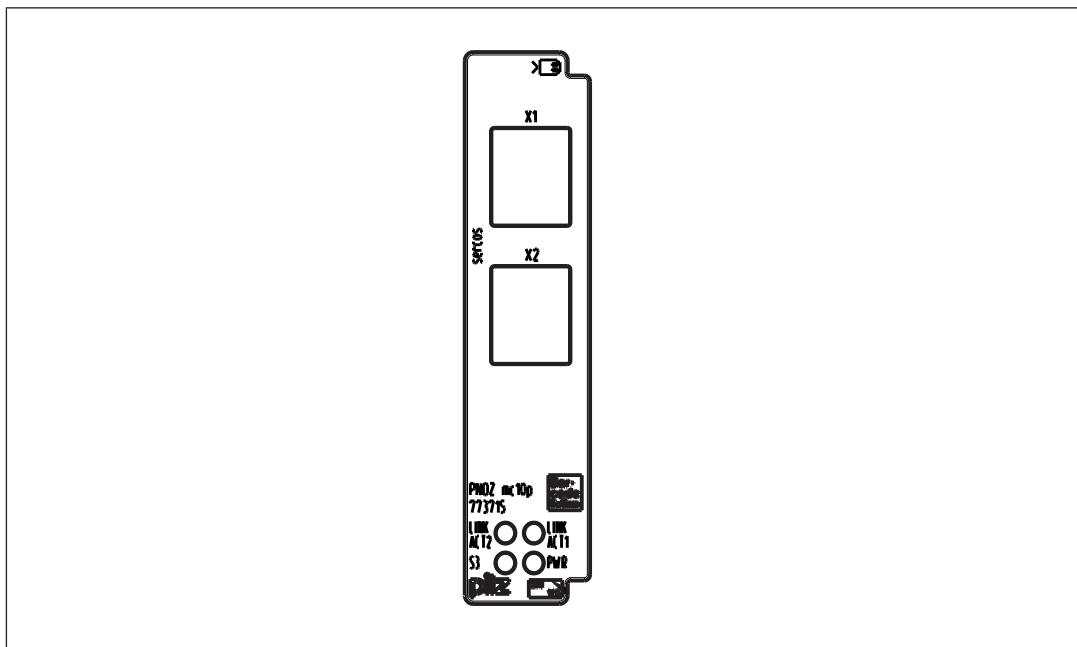

Legend

- ▶ X1, X2: sercos III interfaces
- ▶ LED:
 - LINK ACT1
 - LINK ACT2
 - PWR
 - S3

Function description

Functions

The virtual inputs and outputs that are to be transferred via the fieldbus sercos III are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc10p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc10p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus sercos III .

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules

PNOZ mc10p

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


Assigning the inputs/outputs in the PNOZmulti Configurator to the sercos III inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data sercos III	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data sercos III	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


Fieldbus modules PNOZ mc10p

Block diagram

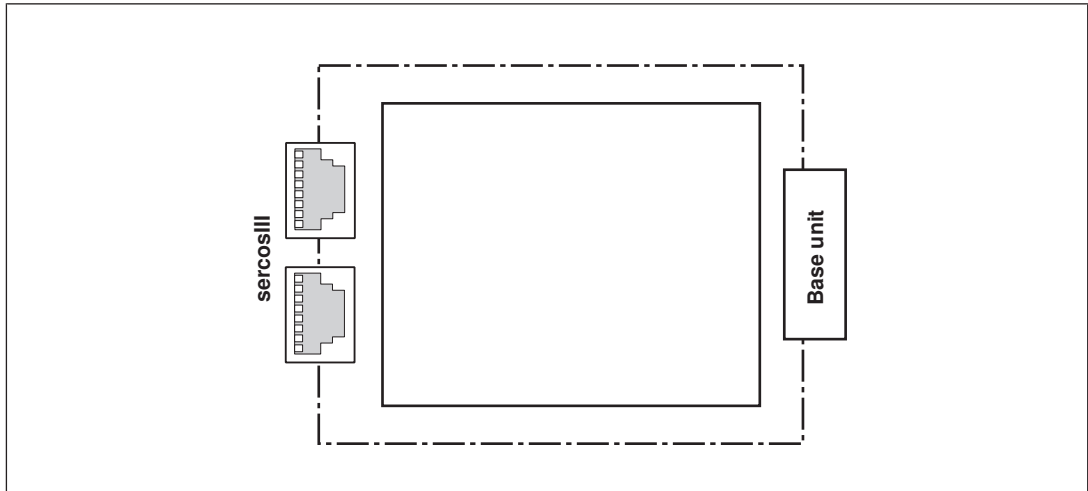

Installation

Dimensions in mm

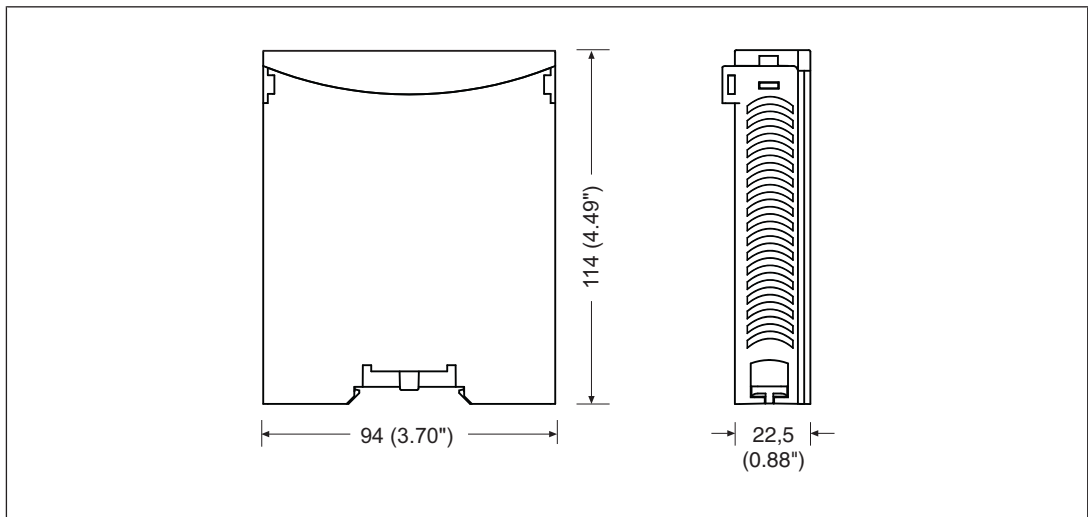

Fieldbus modules PNOZ mc10p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which inputs and outputs on the safety system will communicate with sercos III.

Please note:


- ▶ Information given in the “Technical details” must be followed.
- ▶ Use copper wire that can withstand 75 °C.

Please note the following when connecting to sercos III:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of sercos III are met, as stated in the Installation Manual published by the User Group.


Interface assignment

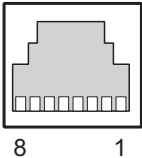RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

Fieldbus modules PNOZ mc10p

Connection example

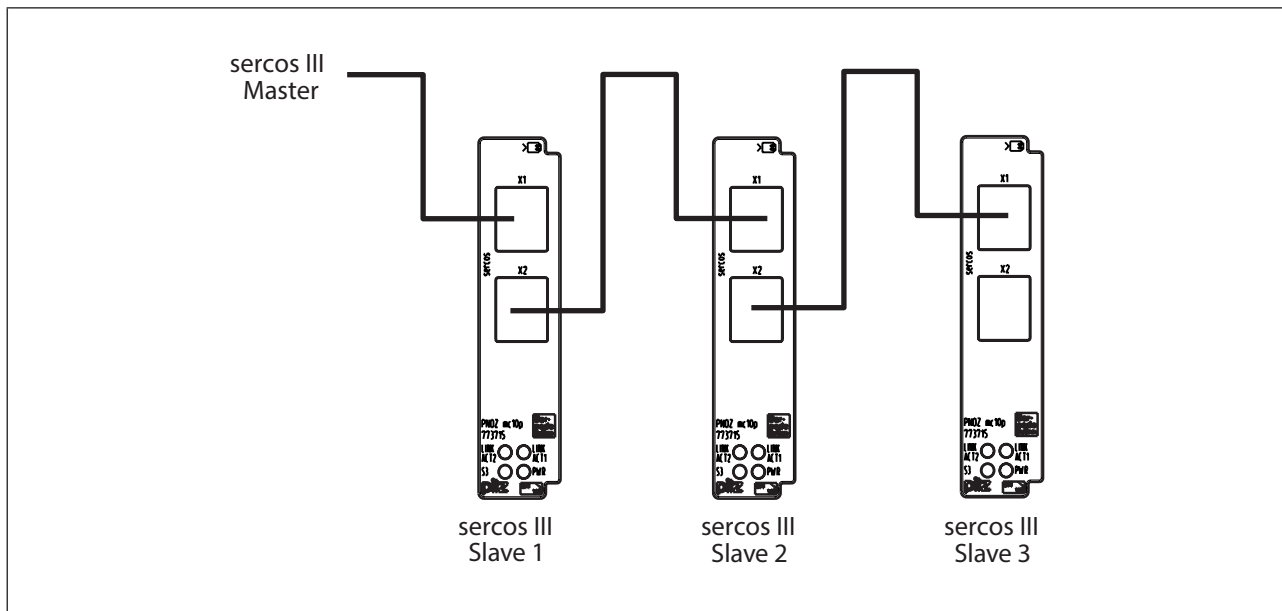

Technical details

General

Certifications **CE, EAC, UKCA, cULus Listed**

Electrical data

Supply voltage

for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	2,5 W

Status indicator **LED**

Fieldbus interface

Fieldbus interface	sercos III
Device type	Slave
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	Yes
Test voltage	500 V AC

Times

Supply interruption before de-energisation **20 ms**

Fieldbus modules PNOZ mc10p

Environmental data

Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Fieldbus modules

PNOZ mc10p

Mechanical data

Dimensions

Height	94 mm
Width	22,5 mm
Depth	114 mm

Weight	125 g
--------	--------------

Where standards are undated, the 2020-07 latest editions shall apply.

Order reference

Product type	Features	Order no.
PNOZ mc10p	Fieldbus module, sercos III	773715

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Fieldbus modules PNOZ mc12p



Overview

Unit features

Application of the product PNOZ mc12p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol)
- ▶ Station addresses from 1 ... 239, selected via rotary switch
- ▶ The minimum cycle time for an application of 20 Byte Output and 50 Byte Input is 350µs. The minimum cycle time is 500 µs at the maximum PDO size of 240 Byte Input and 20 Byte Output (the inputs and outputs in this case are viewed from the Managing Node).
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus Ethernet POWERLINK . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mc12p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules

PNOZ mc12p

Front view

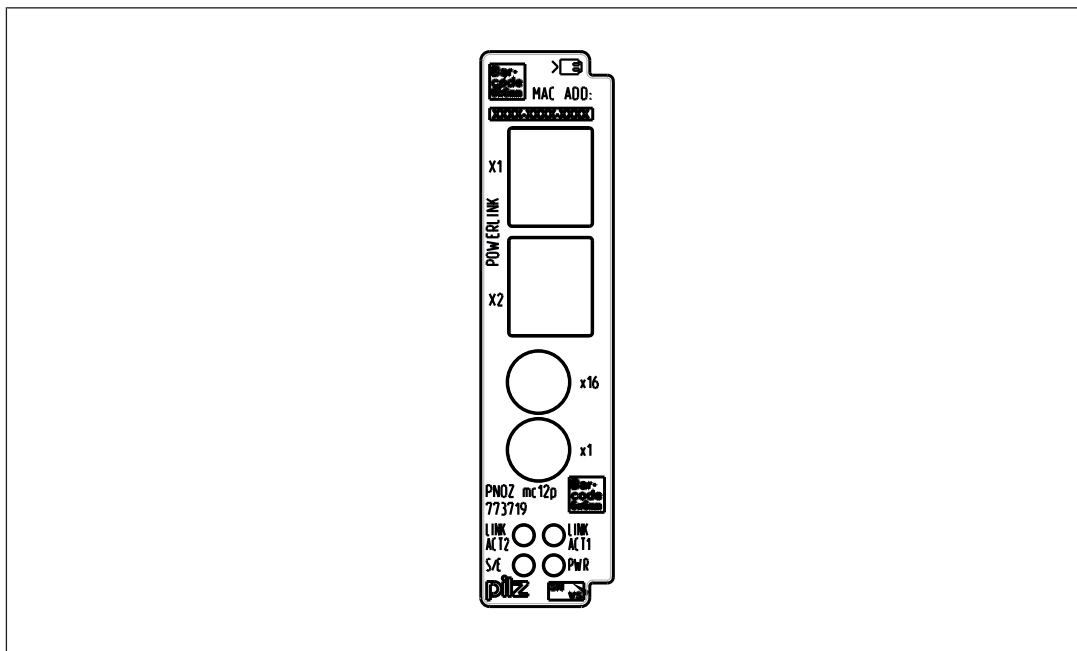

Legend:

- ▶ X1, X2 Ethernet POWERLINK interfaces
- ▶ LED:
 - LINK ACT1
 - LINK ACT2
 - PWR
 - S/E (Status/Error)

Function description

Functions

The virtual inputs and outputs that are to be transferred via the fieldbus Ethernet POWERLINK are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mc12p are connected via a jumper. The fieldbus module is also supplied with voltage via this jumper. After the supply voltage is switched on or the control system PNOZmulti is reset, the fieldbus module PNOZ mc12p is configured and started automatically.

LEDs indicate the status of the fieldbus module on the fieldbus Ethernet POWERLINK .

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules

PNOZ mc12p

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the Managing Node and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of SDO 2100:02 has the number i12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23
Ethernet POWER-LINK	SDO 2100:01: Bit 0 ... 7	SDO 2100:02: Bit 0 ... 7	SDO 2100:03: Bit 0 ... 7

▶ Output range


The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The state of output o0 is stored in Bit 0 of SDO 2000:01.

Virtual outputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23
Ethernet POWER-LINK	SDO 2000:01: Bit 0 ... 7	SDO 2000:02: Bit 0 ... 7	SDO 2000:03: Bit 0 ... 7

Detailed information on data exchange is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Block diagram

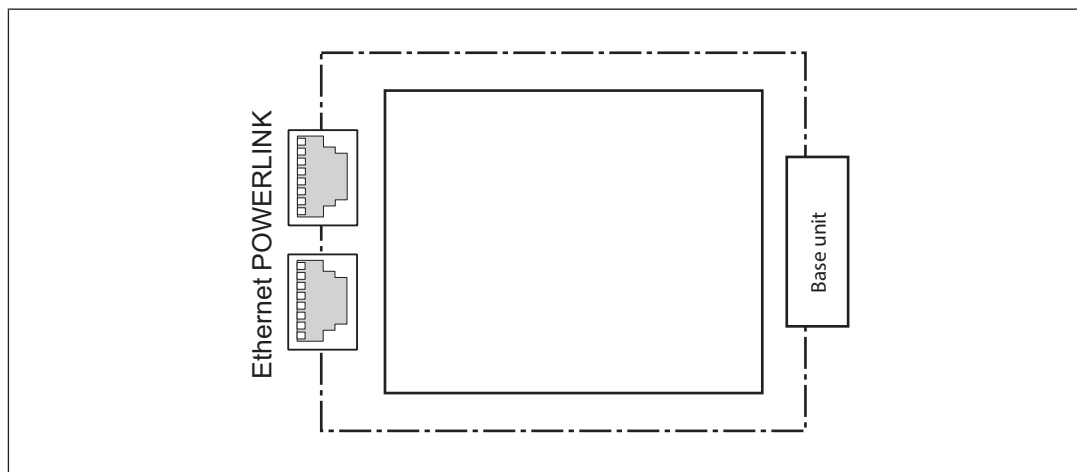


Fieldbus modules

PNOZ mc12p

Installation

Dimensions in mm

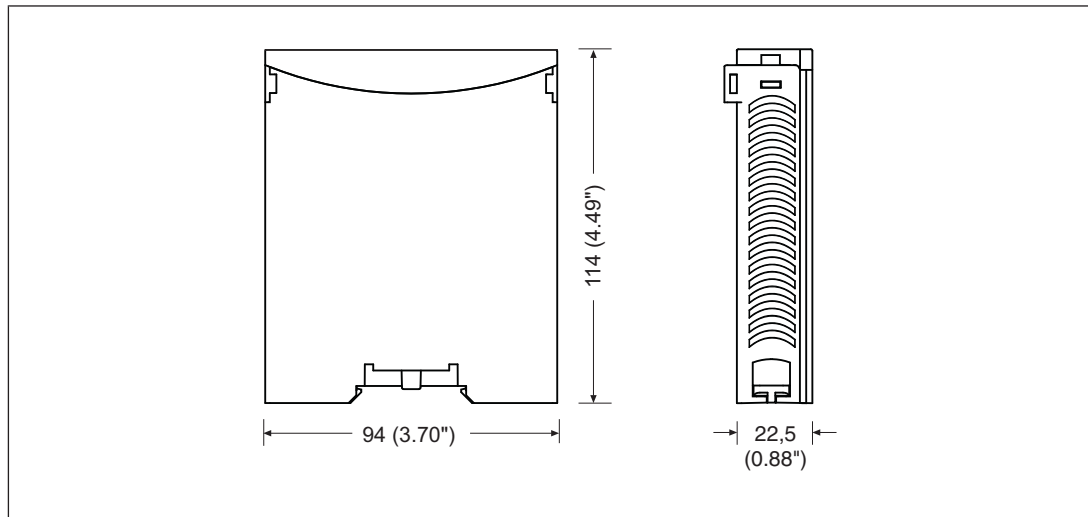

Commissioning

Wiring

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with Ethernet POWERLINK.

Please note:

- ▶ Information given in the [Technical details \[483\]](#) must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.


Please note the following when connecting to Ethernet POWERLINK:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:

Ensure the requirements for the industrial use of Ethernet POWERLINK are met, as stated in the Installation Manual published by the User Group.


Fieldbus modules PNOZ mc12p

Interface assignment

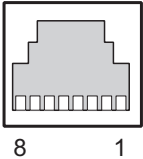RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

Connection example

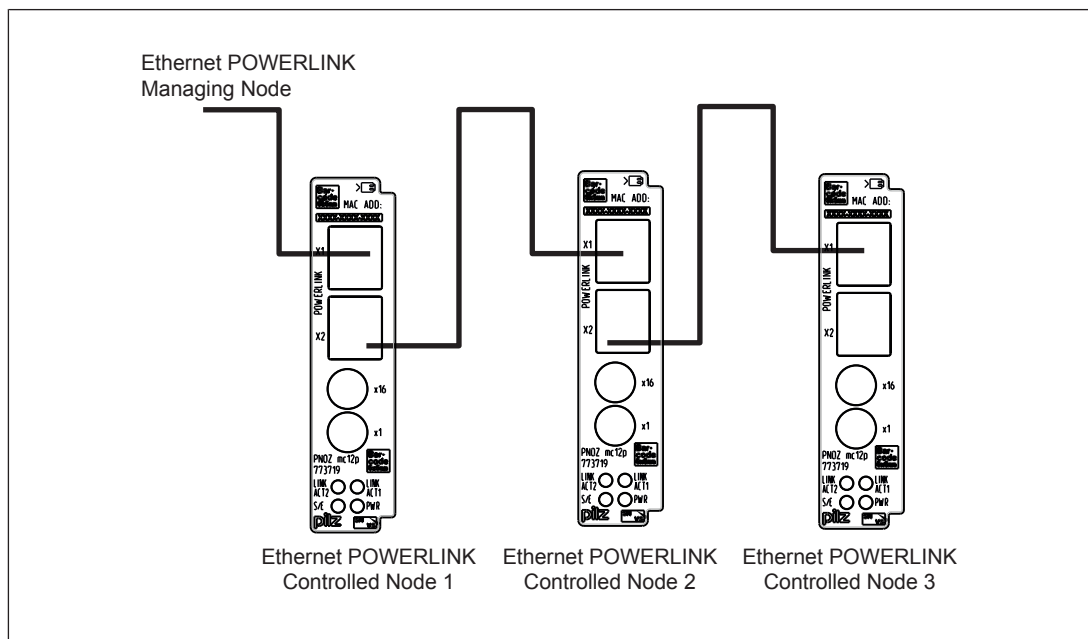

Fieldbus modules PNOZ mc12p

Technical Details

General	
Certifications	CE, EAC, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	5 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	1,6 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	Ethernet POWERLINK V2
Device type	Controlled Node
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	Yes
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Fieldbus modules PNOZ mc12p

Environmental data

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	III
Pollution degree	2

Rated insulation voltage **25 V**

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between **Fieldbus and module voltage**

Type of potential isolation **Functional insulation**

Rated surge voltage **500 V**

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PPO UL 94 V0
Front	ABS UL 94 V0

Dimensions

Height	94 mm
Width	22,5 mm
Depth	114 mm

Weight **115 g**

Where standards are undated, the 2020-07 latest editions shall apply.

Fieldbus modules PNOZ mc12p

Order reference

Product

Product type	Features	Order no.
PNOZ mc12p	Fieldbus module, Ethernet POWERLINK	773719

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZmulti bus terminator	Terminator	779110
KOP-XE	Jumper	774639

Contents	Page
Base units	488
Link modules	558
Communication modules	582
Fieldbus modules	598

Base units PNOZ mm0p



Overview

Unit features

Application of the product PNOZ mm0p:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 4 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand button
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN
 - Operating mode selector switches
 - Safety mats
- ▶ 8 configurable inputs/outputs
 - Can be configured as:
 - Inputs (see above for connection options)
 - or
 - Outputs for standard applications

Base units PNOZ mm0p

- ▶ 4 configurable outputs
Can be configured as:
 - Outputs for standard applicationsor
 - Test pulse outputs
- ▶ LED indicator for:
 - Error messages
 - Diagnostics
 - Supply voltage
 - Output circuits
 - Input circuits
- ▶ Display for:
 - Error messages
 - State of supply voltage
 - State of the inputs and outputs
 - Status information
 - Unit information
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Rotary knob for menu control


Chip card

To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Base units PNOZ mm0p

Front view

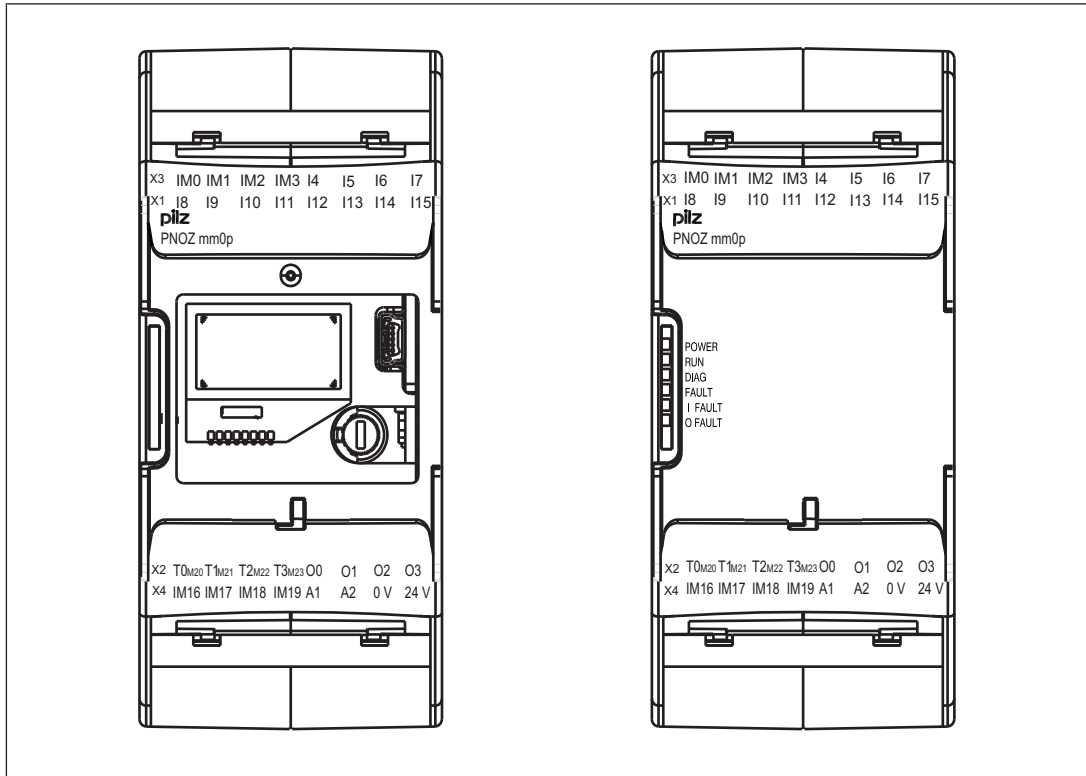

Front view with and without cover

Legend

- X1: Inputs I8 ... I15
- X2: Configurable test pulse/auxiliary outputs T0M20 ... T3M23
Semiconductor outputs O0 ... O3
- X3: Configurable inputs/outputs IM0 – IM3
Inputs I4 ... I7
- X4: Configurable inputs/outputs IM16 – IM19
Supply connections
- LEDs: PWR
RUN
DIAG
FAULT
I FAULT
O FAULT

Base units PNOZ mm0p

Function description

Functions

The function of the safety system's inputs and outputs depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits and switch the outputs accordingly.

The LEDs indicate the status of the PNOZmulti safety system.


The LC display indicates the status of the inputs/outputs and the supply voltage.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Block diagram

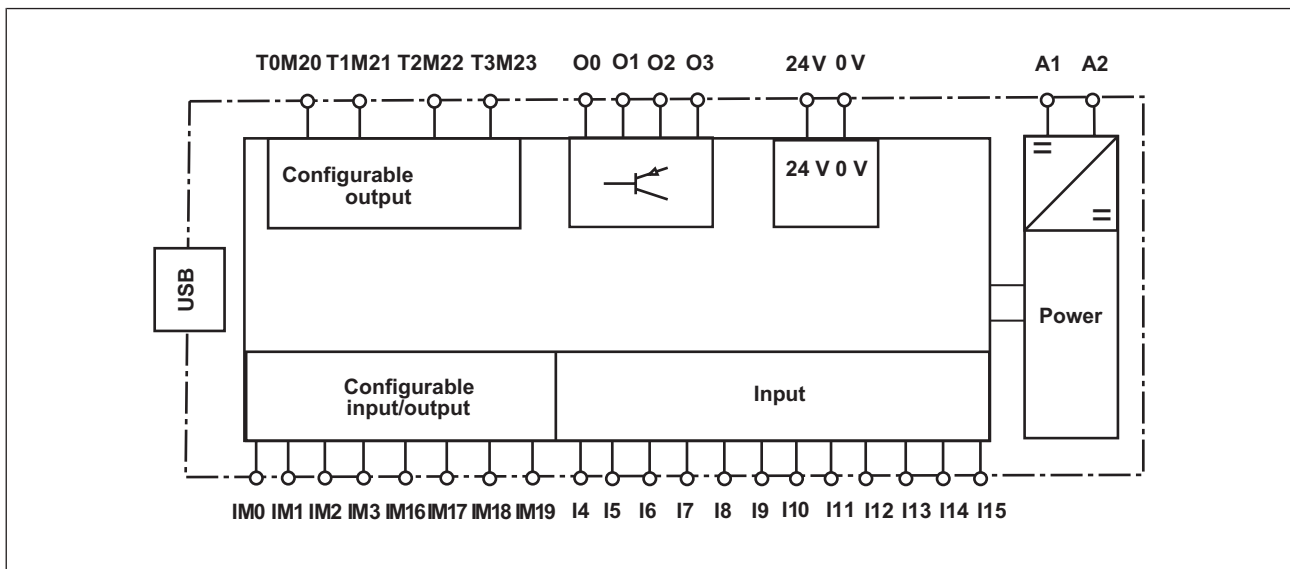


Base units

PNOZ mm0p

Installation

Dimensions

*with spring-loaded terminals

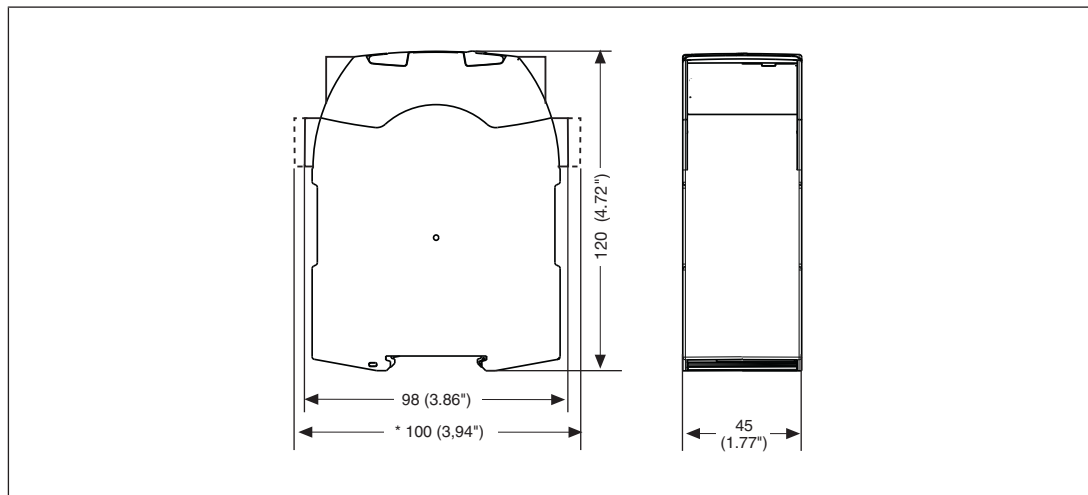

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Note:

- ▶ Information given in the [Technical details \[497\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient protection circuit must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation (SELV/PELV).
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse cables together with actuator cables within an unprotected sheathed cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.


Base units PNOZ mm0p

Preparing for operation

Function test during commissioning

Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

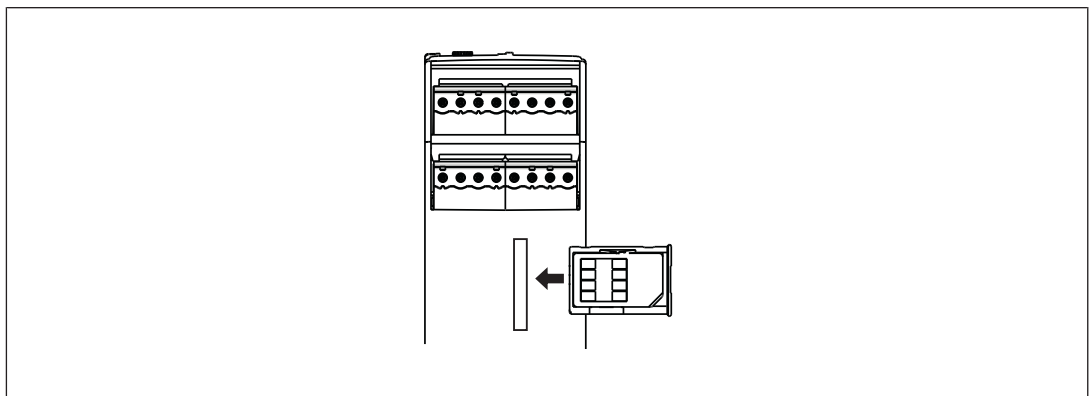

Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
 - Supply voltage for the control system:
 - Terminal A1: + 24 VDC
 - Terminal A2: 0 V
 - Supply voltage for the semiconductor outputs:
 - 24 V terminal: + 24 VDC
 - 0V terminal: 0 V

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

Load project from chip card

Procedure:

- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The LC display shows the project name, CRC sum and the date the project was created. Please check this information.
- ▶ Load the project by pressing the rotary knob. For the project to be downloaded, the rotary knob must be held down for between 3 and 8 seconds. Once the project has been successfully downloaded, the status of the inputs and outputs will be shown on the display.

Base units PNOZ mm0p

Load project via USB port

Procedure:

- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown on the display. The "RUN" LED will be lit.

Connection

Supply voltage	AC	DC
For the safety system		
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used		


Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		

Base units PNOZ mm0p

Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts
Redundant output		
Single output		
Single output with advanced fault detection*		


*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

Base units PNOZ mm0p

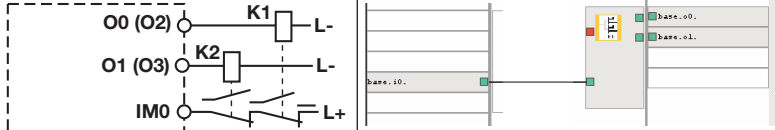Feedback loop	Redundant output
Contacts from external contactors	

Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

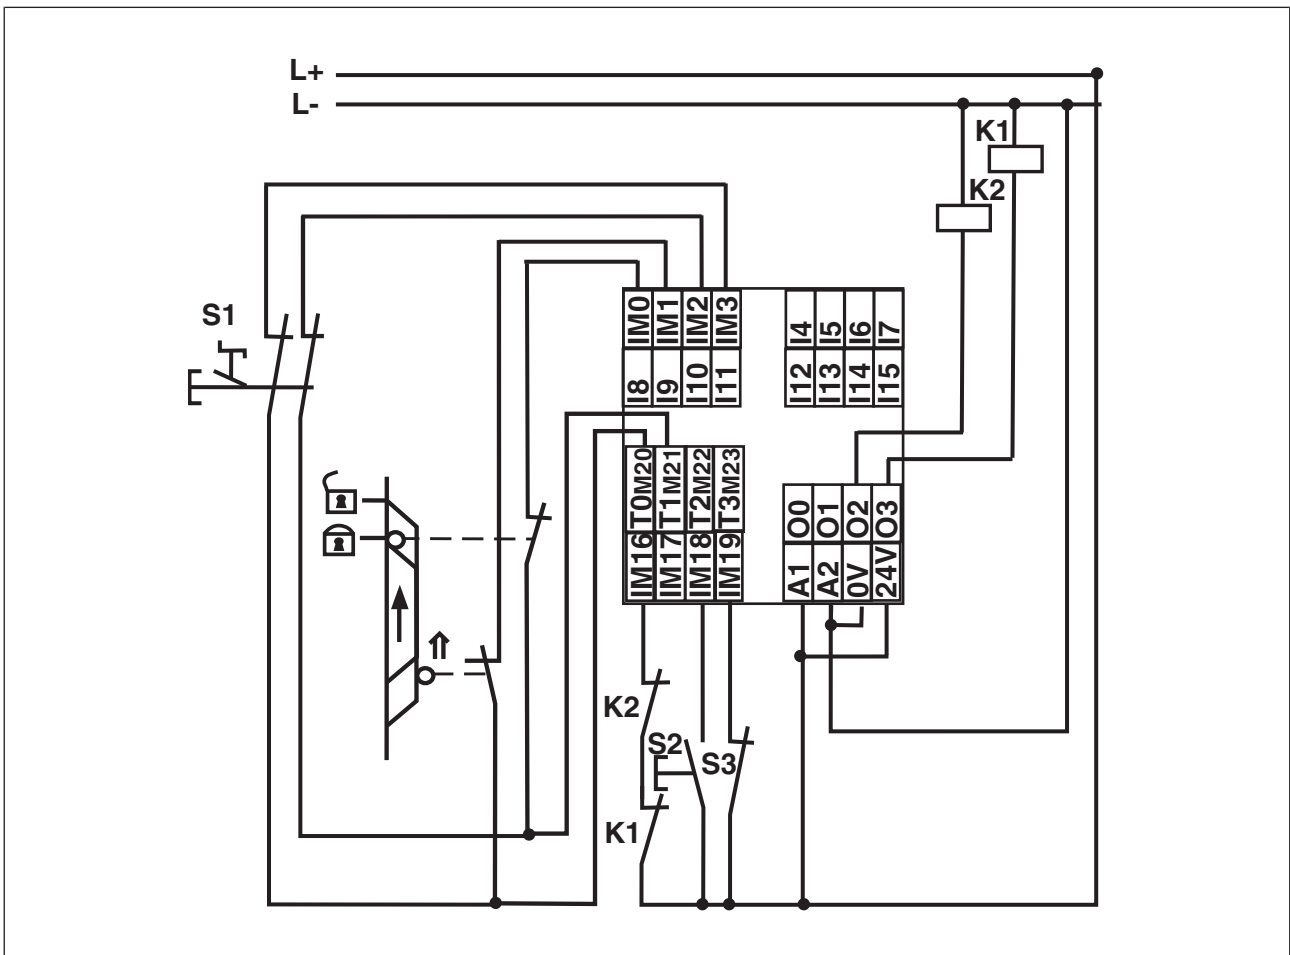

Base units PNOZ mm0p

Technical details

General	
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Supply to the system
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	35 W
Output of external power supply (DC) at no load	8 W
Residual ripple DC	5 %
Supply voltage	
for	Supply to the SC outputs
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	192 W
Status indicator	Display, LED
Configurable inputs/outputs (inputs or auxiliary outputs)	
Quantity	8
Galvanic isolation	No
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	24 V
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Signal level at "1"	15 ... 30 V DC
Signal level at g0 h	-3 ... +5 V DC
Maximum input delay	4 ms
Configurable auxiliary outputs	
Voltage	24 V
Output current	75 mA
Power	1,8 W
Short circuit-proof	Yes
Residual current at "0"	0,5 mA
Voltage at "1"	UB - 2 V at 0.1 A

Base units PNOZ mm0p

Inputs	
Quantity	12
Signal level at g0 h	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Maximum input delay	4 ms
Potential isolation	No
Semiconductor outputs	
Quantity	4
Switching capability	
Voltage	24 V
Current	2 A
Power	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA
Max. capacitive load	1 µF
Max. duration of off time during self test	330 µs
Switch-off delay	30 ms
Potential isolation	Yes
Short circuit-proof	Yes
Test pulse outputs	
Number of test pulse outputs	4
Voltage	24 V
Current	0,1 A
Max. duration of off time during self test	5 ms
Short circuit-proof	Yes
Potential isolation	No
Times	
Switch-on delay	5 s
Supply interruption before de-energisation	20 ms
Simultaneity, channel 1 and 2 max.	3 s
Simultaneity in the two-hand circuit	0,5 s
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C

Base units PNOZ mm0p

Environmental data

Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Rated impulse withstand voltage	2,5 kV
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between	SC output and system voltage
Type of potential isolation	Basic insulation
Rated surge voltage	2500 V

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Cable length	
Max. cable length per input	1 km
Sum of individual cable lengths at the test pulse output	2 km

Base units PNOZ mm0p

Mechanical data

Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm ² , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm ² , 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,2 - 2,5 mm ² , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100 mm
Width	45 mm
Depth	120 mm
Weight	226 g

Where standards are undated, the 2010-08 latest editions shall apply.

Base units PNOZ mm0p

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN/IEC 61511	EN/IEC 61511	EN ISO 13849-1: 2015
		PL	Category	SIL CL/ maximum SIL	PFH_D [1/h]	SIL	PFD	T_M [year]

Logic

CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	SIL 3	1,66E-05	20
-----	-----------	------	--------	----------	----------	-------	----------	----

Input

Inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	SIL 2	3,46E-04	20
--------	-----------	------	--------	----------	----------	-------	----------	----

Inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	SIL 3	7,08E-06	20
--------	-----------	------	--------	----------	----------	-------	----------	----

Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,86E-09	SIL 2	9,62E-05	20
--------	-----------------------------------	------	--------	----------	----------	-------	----------	----

Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	SIL 3	3,49E-05	20
--------	-----------------------------	------	--------	----------	----------	-------	----------	----

Output

SC outputs	1-channel with advanced fault detection	PL e	Cat. 4	SIL CL 3	7,65E-10	SIL 3	1,33E-06	20
------------	---	------	--------	----------	----------	-------	----------	----

SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	8,90E-10	SIL 2	1,21E-05	20
------------	-----------	------	--------	----------	----------	-------	----------	----

SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	7,86E-10	SIL 3	1,12E-05	20
------------	-----------	------	--------	----------	----------	-------	----------	----

Explanatory notes for the safety-related characteristic data:


- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.


Base units PNOZ mm0p

Supplementary data

Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

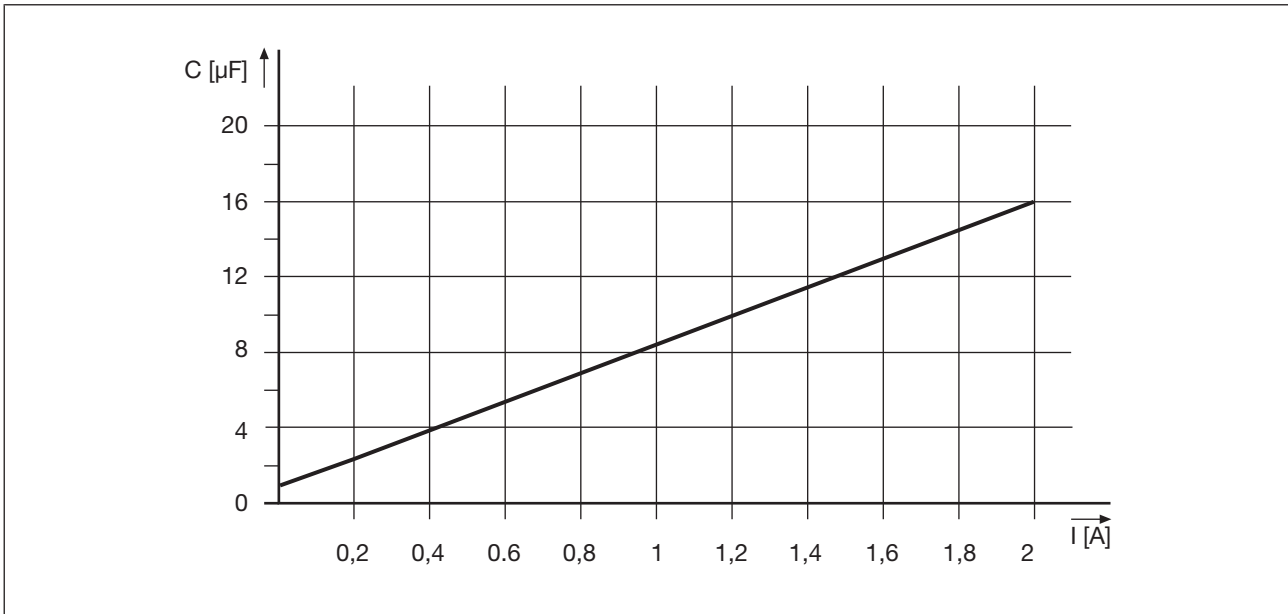

Maximum permitted total current of the semiconductor outputs

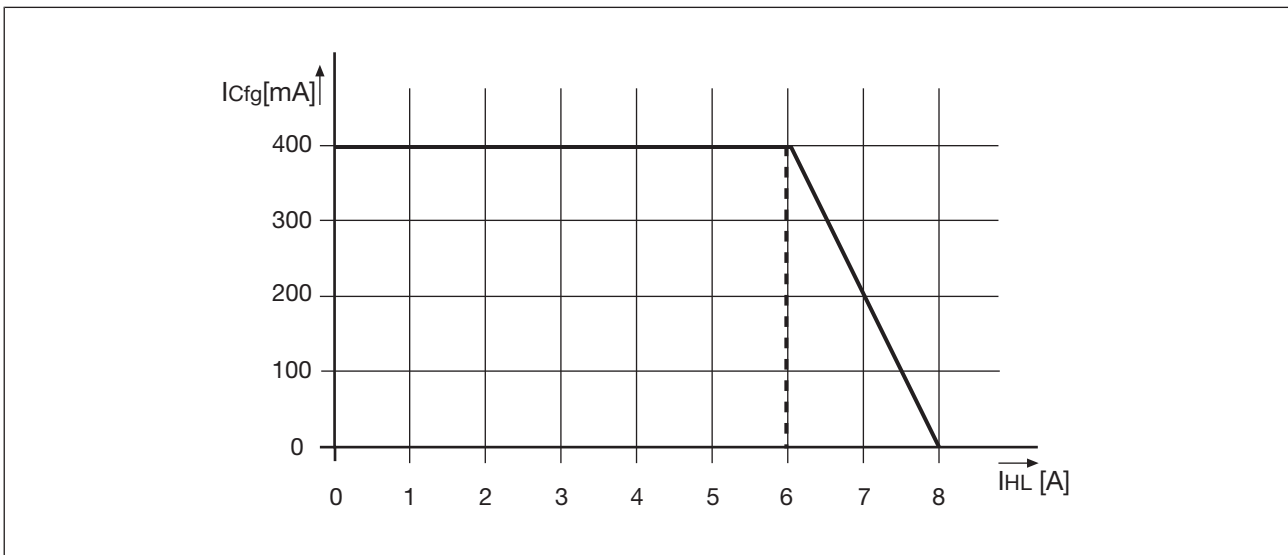

$I_{C_{fg}}$: Total current of the configurable semiconductor outputs (auxiliary outputs)

I_{HL} : Total current: Semiconductor outputs (safety outputs)

Base units PNOZ mm0p

Order reference

Product type	Features	Order no.
PNOZ mm0p	Base unit	772000

Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751008
PNOZ s Set1 screw terminals	1 set of screw terminals	750008

Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312992
PSSu A USB-CAB05	Mini USB cable, 5 m	312993

Base units PNOZ mm0p-T



Overview

Unit features


Application of the product PNOZ mm0p-T:

Base unit from the configurable control system PNOZmulti

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 4 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand pushbuttons
 - Safety gate limit switches
 - Reset buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN
 - Operating mode selector switches
 - Pressure sensitive mats
- ▶ 8 configurable inputs/outputs
 - Can be configured as:
 - Inputs (see above for connection options)
 - or
 - Outputs for standard applications

Base units PNOZ mm0p-T

- ▶ 4 configurable outputs
Can be configured as:
 - Outputs for standard applicationsor
 - Test pulse outputs
- ▶ LED for:
 - Error messages
 - Diagnostics
 - Supply voltage
 - State of the inputs
 - State of the outputs
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Pushbutton to change the operating status and download the project.
- ▶ Coated version:
Increased environmental requirements (see [Technical details](#) [ 514])


Chip card

To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Base units PNOZ mm0p-T

Front view

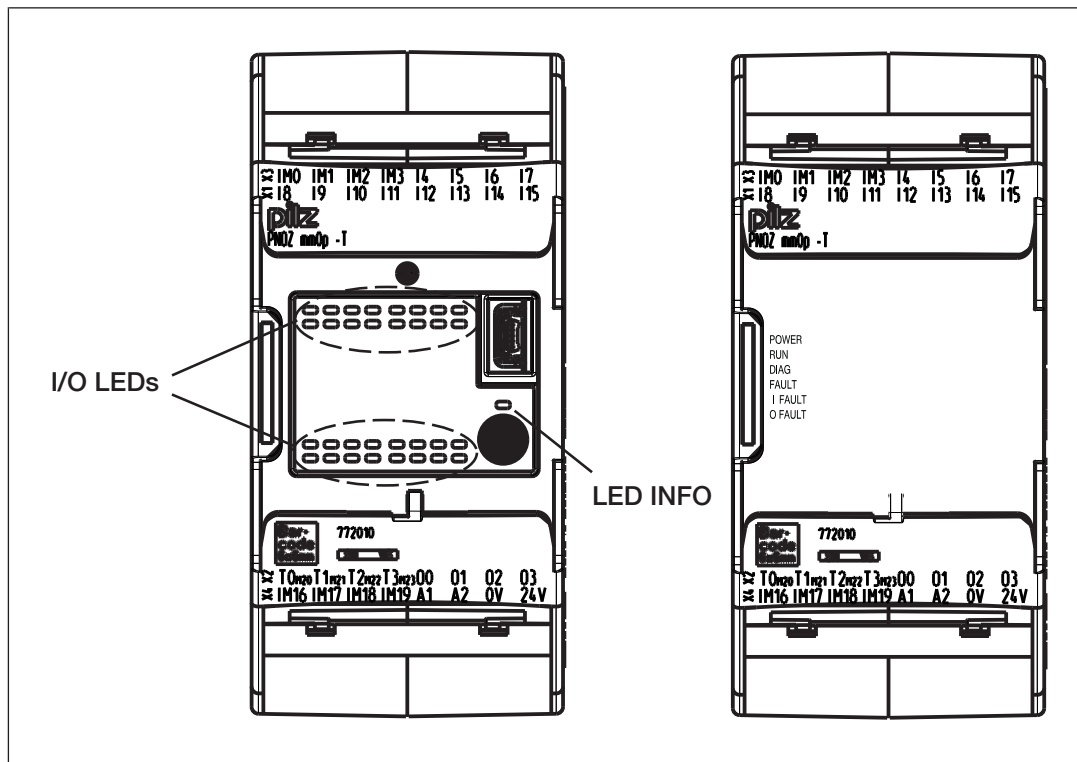

Front view with and without cover

Legend

- ▶ X1:
 - Inputs I8 ... I15
- ▶ X2:
 - Configurable test pulse/auxiliary outputs T0M20 ... T3M23
 - Semiconductor outputs O0 ... O3
- ▶ X3:
 - Configurable inputs/outputs IM0 – IM3
 - Inputs I4 ... I7
- ▶ X4:
 - Configurable inputs/outputs IM16 – IM19
 - Supply connections

Base units PNOZ mm0p-T

- ▶ LEDs:
 - POWER
 - RUN
 - DIAG
 - FAULT
 - I FAULT
 - O FAULT
 - INFO
 - I/O

Function description

Functions

The function of the safety system's inputs and outputs depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits and switch the outputs accordingly.

The LEDs indicate the status of the safety system plus the inputs and outputs.


The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the PNOZmulti safety system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Base units PNOZ mm0p-T


Block diagram

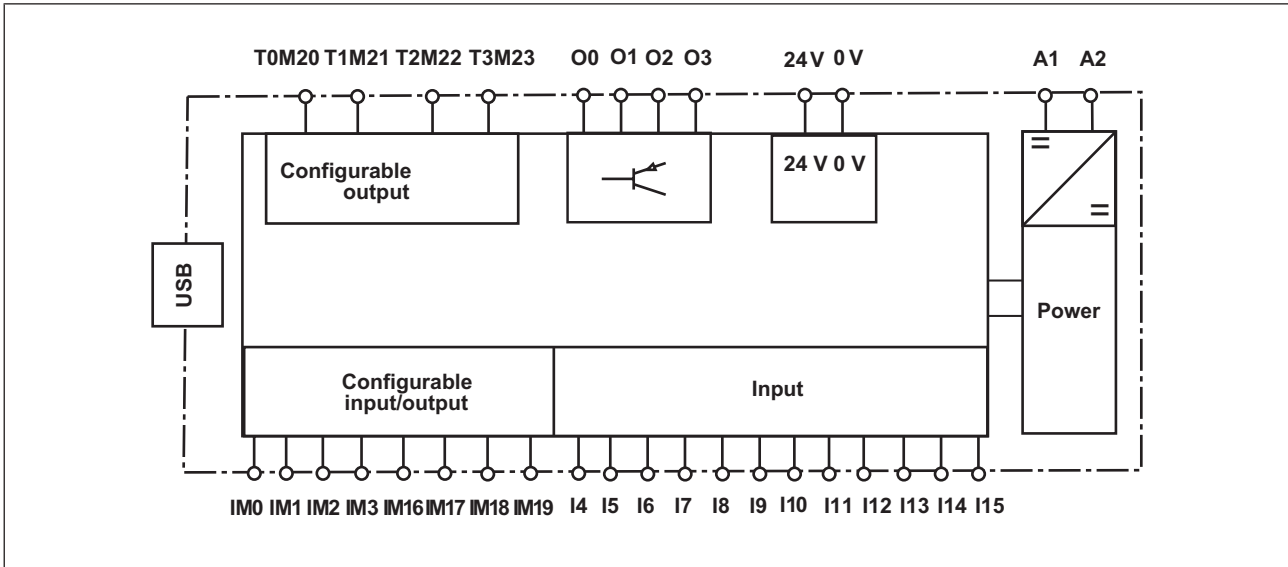

Installation

Dimensions

*with spring-loaded terminals

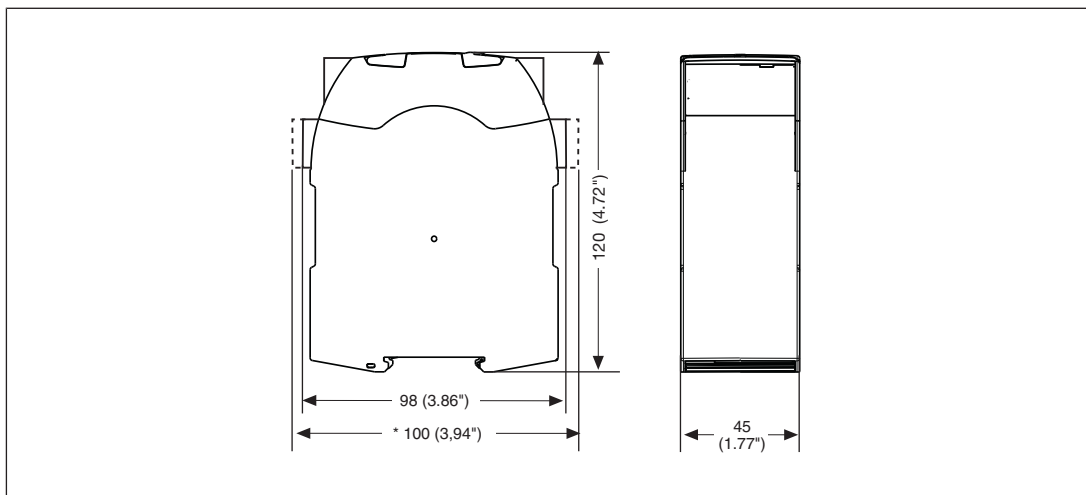

Base units PNOZ mm0p-T

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Note:


- ▶ Information given in the [Technical details \[514\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient protection circuit must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation (SELV/PELV).
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse cables together with actuator cables within an unprotected sheathed cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.

Preparing for operation

Function test during commissioning

Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

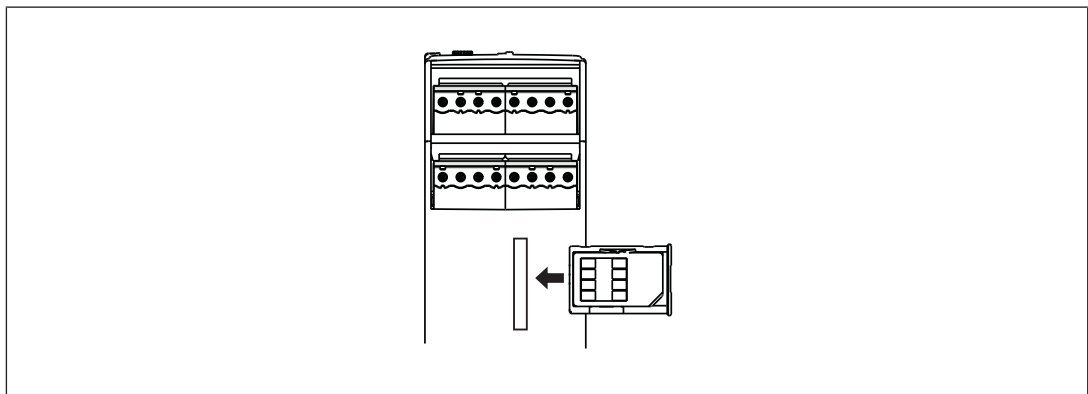

Base units PNOZ mm0p-T

Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
 - Supply voltage for the control system:
 - Terminal A1: + 24 VDC
 - Terminal A2: 0 V
 - Supply voltage for the semiconductor outputs:
 - 24 V terminal: + 24 VDC
 - 0V terminal: 0 V

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

Load project from chip card

Procedure:

- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The INFO LED lights when a new or modified project is present.
- ▶ Load the project by pressing the pushbutton. For the project to be downloaded, the pushbutton must be held down for between 4 and 8 seconds. Release the pushbutton while the INFO LED flashes rapidly.
If you hold the pushbutton down for too long, the process will be aborted and the project will not be downloaded.

Load project via USB port

Procedure:

- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown via the LEDs. The "RUN" LED is lit.

Base units PNOZ mm0p-T

Connection

Supply voltage	AC	DC
For the safety system		
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used		

Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		
Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts

Base units PNOZ mm0p-T

<p>Redundant output</p>		
<p>Single output</p>		
<p>Single output with advanced fault detection*</p>		


*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

<p>Feedback loop</p>	<p>Redundant output</p>
<p>Contacts from external contactors</p>	

Base units PNOZ mm0p-T

Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

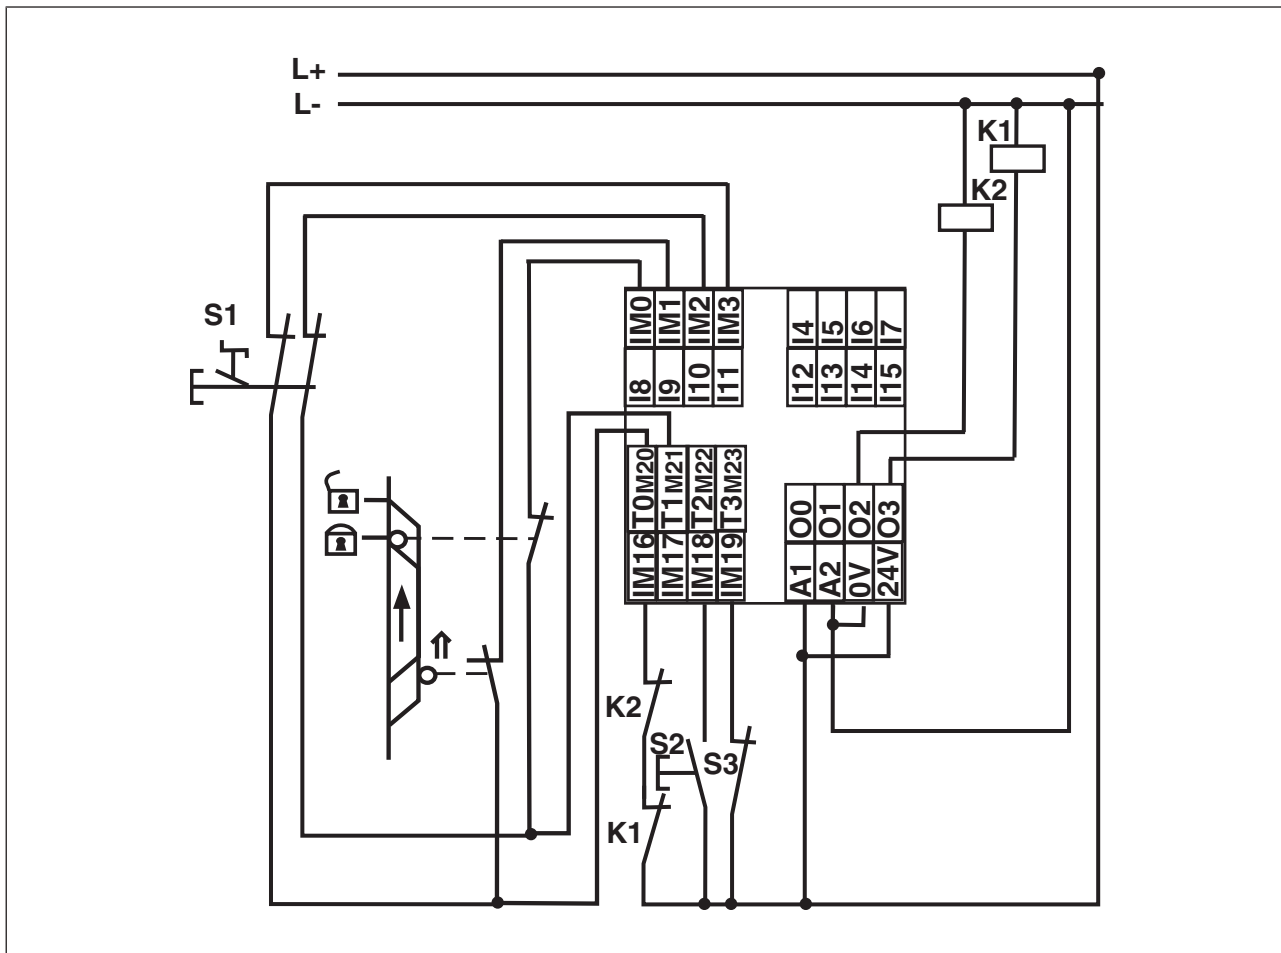

Base units PNOZ mm0p-T

Technical details

General	
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Supply to the system
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	35 W
Output of external power supply (DC) at no load	8 W
Residual ripple DC	5 %
Supply voltage	
for	Supply to the SC outputs
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	192 W
Potential isolation	Yes
Status indicator	LED
Configurable inputs/outputs (inputs or auxiliary outputs)	
Quantity	8
Potential isolation	No
Galvanic isolation	No
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	24 V
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Signal level at "1"	15 ... 30 V DC
Signal level at g0 h	-3 ... +5 V DC
Maximum input delay	4 ms
Configurable auxiliary outputs	
Voltage	24 V
Output current	75 mA
Power	1,8 W
Short circuit-proof	Yes
Residual current at "0"	0,5 mA
Voltage at "1"	UB - 2 V at 0.1 A

Base units PNOZ mm0p-T

Inputs	
Quantity	12
Signal level at g0 h	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Input current at rated voltage	5 mA
Input current range	2,5 - 5,3 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Maximum input delay	4 ms
Potential isolation	No
Semiconductor outputs	
Quantity	4
Switching capability	
Voltage	24 V
Current	2 A
Power	48 W
Derating of coated version at an ambient temperature > 50 °C	
Voltage	24 V
Current	1 A
Power	24 W
Signal level at "1"	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA
Max. capacitive load	1 µF
Max. duration of off time during self test	330 µs
Switch-off delay	30 ms
Potential isolation	Yes
Short circuit-proof	Yes
Test pulse outputs	
Number of test pulse outputs	4
Voltage	24 V
Current	0,1 A
Max. duration of off time during self test	5 ms
Short circuit-proof	Yes
Potential isolation	No
Times	
Switch-on delay	5 s
Supply interruption before de-energisation	20 ms
Simultaneity, channel 1 and 2 max.	3 s
Simultaneity in the two-hand circuit	0,5 s

Base units PNOZ mm0p-T

Environmental data

Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	-25 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Short-term (only with separated extra low voltage)
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Number of shocks	3
Acceleration	15g
Duration	11 ms
in accordance with the standard	EN 60068-2-27
Number of shocks	500
Acceleration	25g
Duration	6 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Rated impulse withstand voltage	2,5 kV
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between	SC output and system voltage
Type of potential isolation	Basic insulation
Rated surge voltage	2500 V

Base units PNOZ mm0p-T

Mechanical data	
Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Cable length	
Max. cable length per input	1 km
Sum of individual cable lengths at the test pulse output	2 km
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector	0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100 mm
Width	45 mm
Depth	120 mm
Weight	230 g

Where standards are undated, the 2012-07 latest editions shall apply.

Base units PNOZ mm0p-T

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN/IEC 61511	EN/IEC 61511	EN ISO 13849-1: 2015
		PL	Category	SIL CL/ maximum SIL	PFH_D [1/h]	SIL	PFD	T_M [year]

Logic

CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	SIL 3	1,66E-05	20
-----	-----------	------	--------	----------	----------	-------	----------	----

Input

Inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	SIL 2	3,46E-04	20
--------	-----------	------	--------	----------	----------	-------	----------	----

Inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	SIL 3	7,08E-06	20
--------	-----------	------	--------	----------	----------	-------	----------	----

Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,86E-09	SIL 2	9,62E-05	20
--------	-----------------------------------	------	--------	----------	----------	-------	----------	----

Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	SIL 3	3,49E-05	20
--------	-----------------------------	------	--------	----------	----------	-------	----------	----

Output

SC outputs	1-channel with advanced fault detection	PL e	Cat. 4	SIL CL 3	7,65E-10	SIL 3	1,33E-06	20
------------	---	------	--------	----------	----------	-------	----------	----

SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	8,90E-10	SIL 2	1,21E-05	20
------------	-----------	------	--------	----------	----------	-------	----------	----

SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	7,86E-10	SIL 3	1,12E-05	20
------------	-----------	------	--------	----------	----------	-------	----------	----

Explanatory notes for the safety-related characteristic data:


- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.


Base units PNOZ mm0p-T

Supplementary data

Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

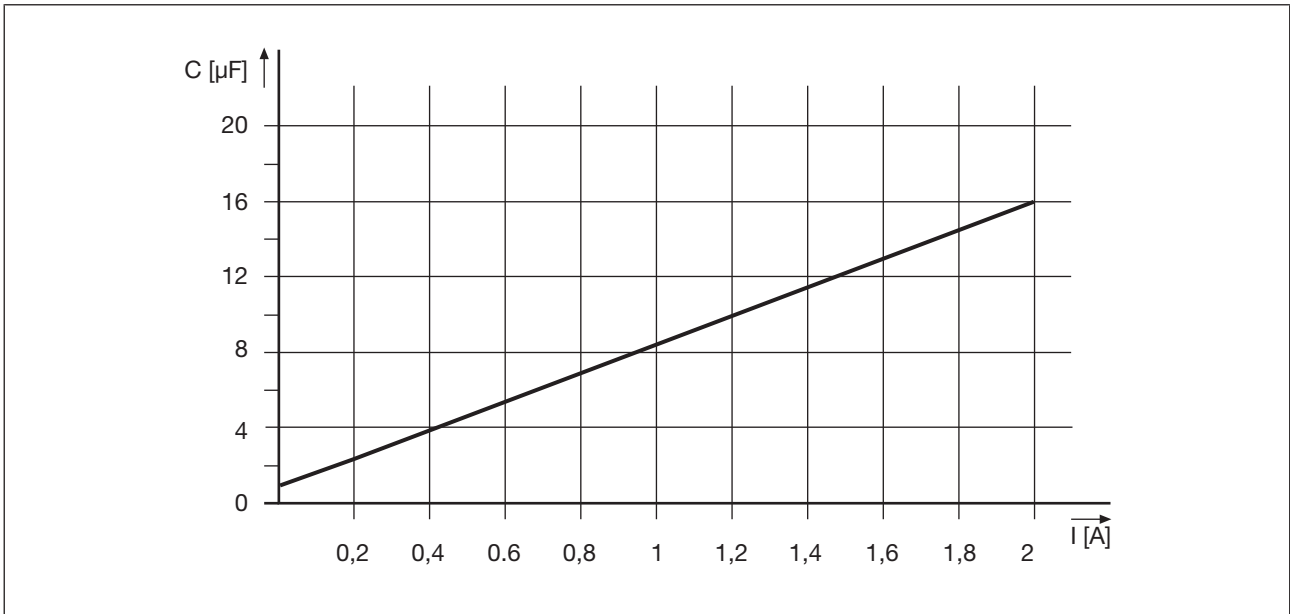

Maximum permitted total current of the semiconductor outputs

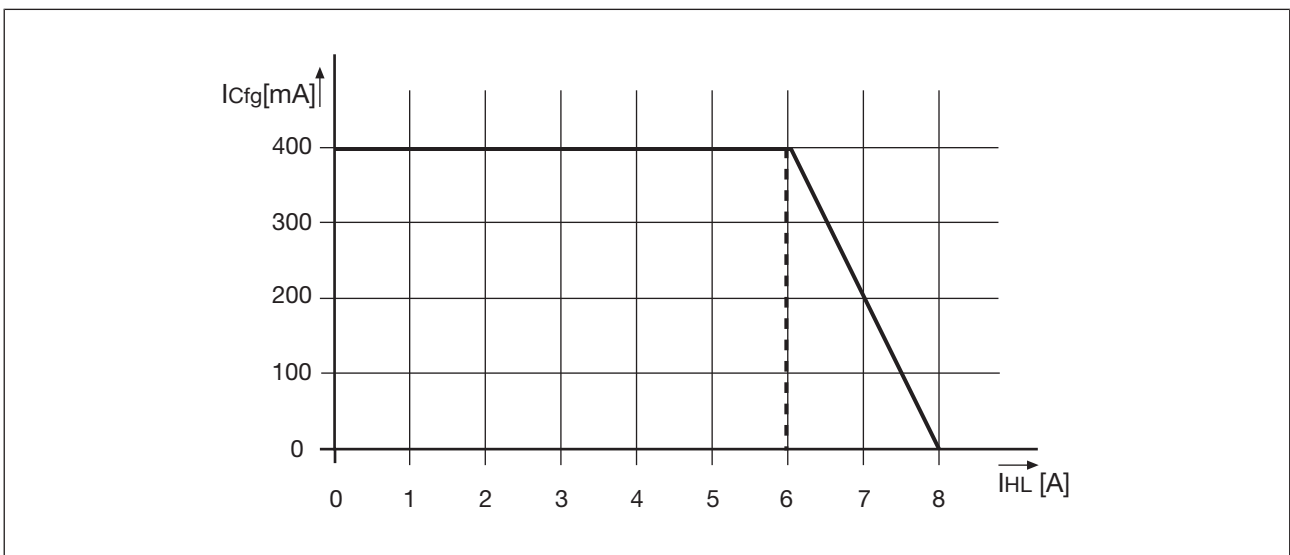

$I_{C_{fg}}$: Total current of the configurable semiconductor outputs (auxiliary outputs)

I_{HL} : Total current: Semiconductor outputs (safety outputs)

Base units PNOZ mm0p-T

Order reference

Product type	Features	Order no.
PNOZ mm0p-T	Base unit	772010

Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751008
PNOZ s Set1 screw terminals	1 set of screw terminals	750008

Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312992
PSSu A USB-CAB05	Mini USB cable, 5 m	312993

Base units PNOZ mm0.1p



Overview

Unit features

Application of the product PNOZ mm0.1p:

PNOZmulti Mini base unit

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 4 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand button
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN
 - Operating mode selector switches
 - Safety mats
- ▶ 8 configurable inputs/outputs
 - Can be configured as:
 - Inputs (see above for connection options)
 - or
 - Outputs for standard applications

Base units

PNOZ mm0.1p

- ▶ 4 configurable outputs
Can be configured as:
 - Outputs for standard applicationsor
 - Test pulse outputs
- ▶ LED indicator for:
 - Error messages
 - Diagnostics
 - Supply voltage
 - Output circuits
 - Input circuits
- ▶ Display for:
 - Error messages
 - State of supply voltage
 - State of the inputs and outputs
 - Status information
 - Unit information
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Rotary knob for menu control
- ▶ Expansion modules can be connected
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)


Chip card

To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Base units PNOZ mm0.1p

Front view

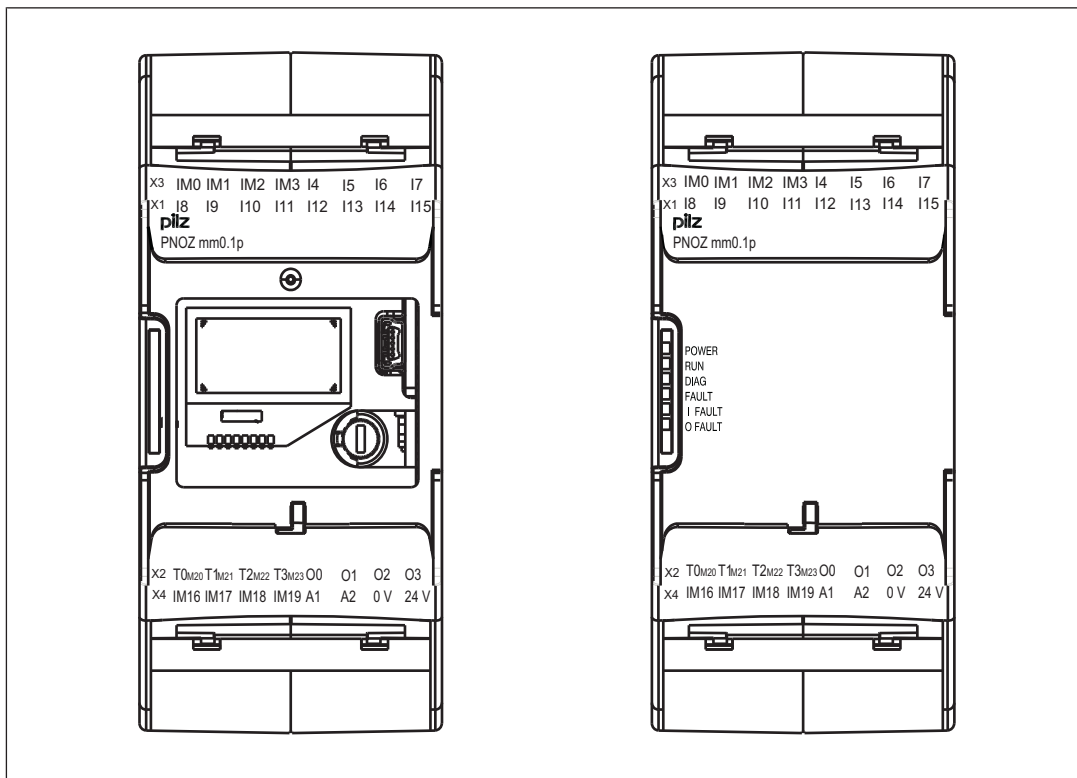

Front view with and without cover

Legend

- X1: Inputs I8 ... I15
- X2: Configurable test pulse/auxiliary outputs T0M20 ... T3M23
Semiconductor outputs O0 ... O3
- X3: Configurable inputs/outputs IM0 – IM3
Inputs I4 ... I7
- X4: Configurable inputs/outputs IM16 – IM19
Supply connections
- LEDs: PWR
RUN
DIAG
FAULT
I FAULT
O FAULT

Base units PNOZ mm0.1p

Function description

Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.


The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Block diagram

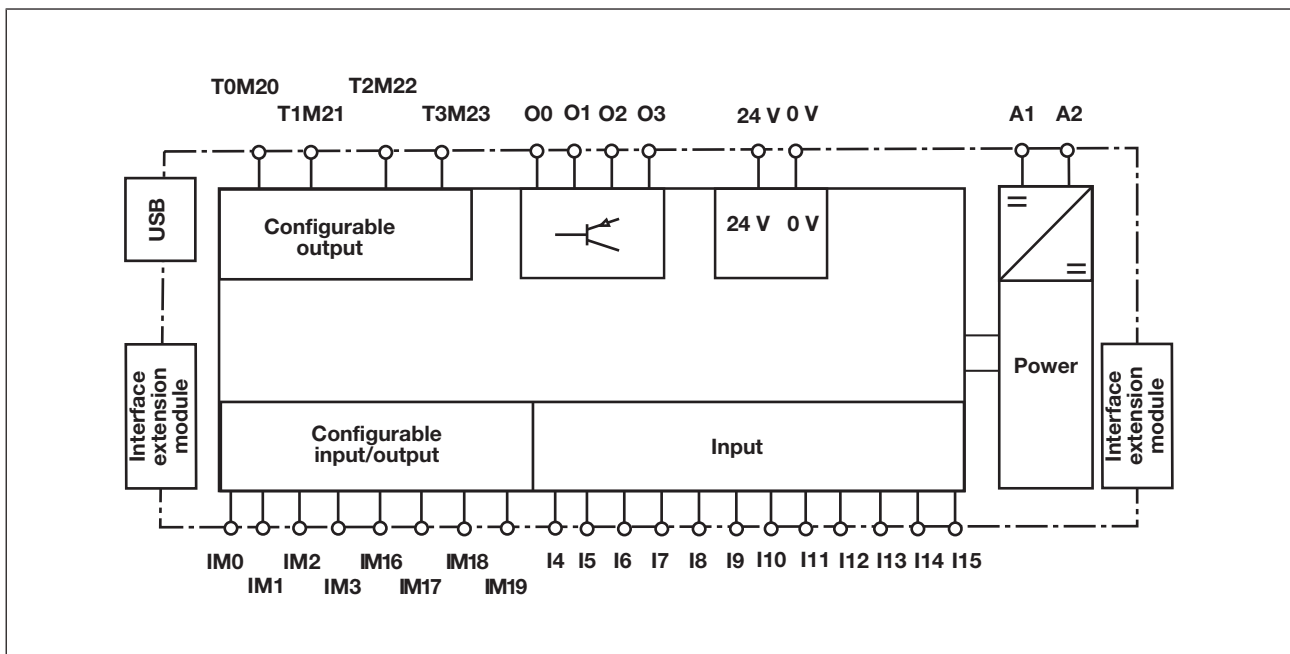


Base units PNOZ mm0.1p

Installation

Dimensions

*with spring-loaded terminals

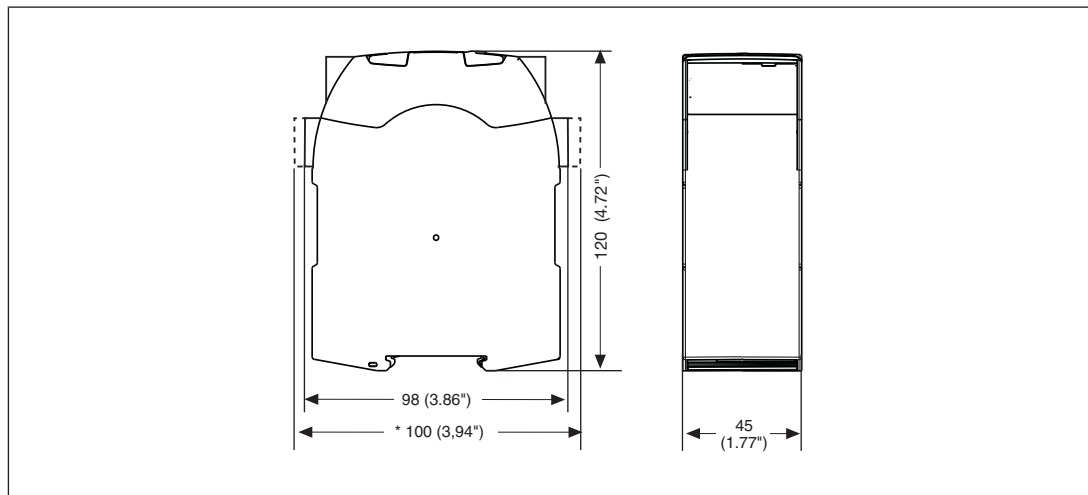

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Note:

- ▶ Information given in the [Technical details \[530\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient protection circuit must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation (SELV/PELV).
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse cables together with actuator cables within an unprotected sheathed cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.


Base units PNOZ mm0.1p

Preparing for operation

Function test during commissioning

Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

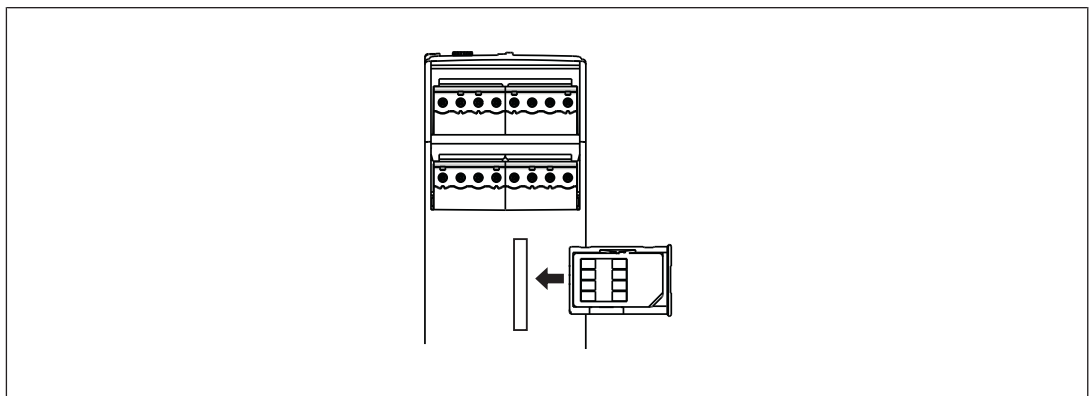

Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
 - Supply voltage for the control system:
 - Terminal A1: + 24 VDC
 - Terminal A2: 0 V
 - Supply voltage for the semiconductor outputs:
 - 24 V terminal: + 24 VDC
 - 0V terminal: 0 V

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

Load project from chip card

Procedure:

- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The LC display shows the project name, CRC sum and the date the project was created. Please check this information.
- ▶ Load the project by pressing the rotary knob. For the project to be downloaded, the rotary knob must be held down for between 3 and 8 seconds. Once the project has been successfully downloaded, the status of the inputs and outputs will be shown on the display.

Base units PNOZ mm0.1p

Load project via USB port

Procedure:









- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown on the display. The "RUN" LED will be lit.

Connection

Supply voltage	AC	DC
For the safety system		
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used		


Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		

Base units PNOZ mm0.1p

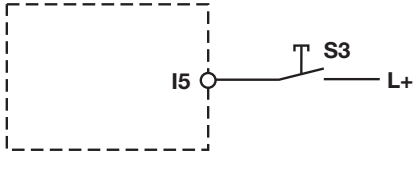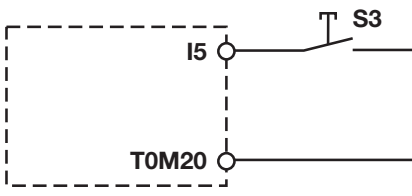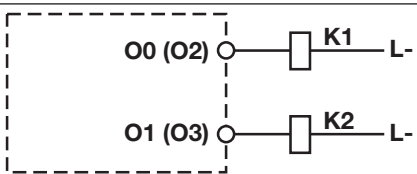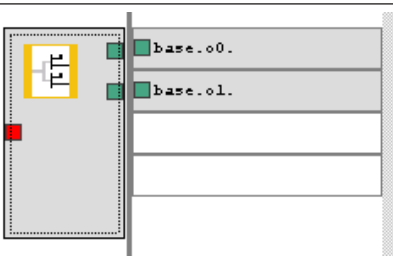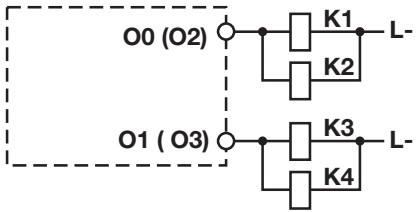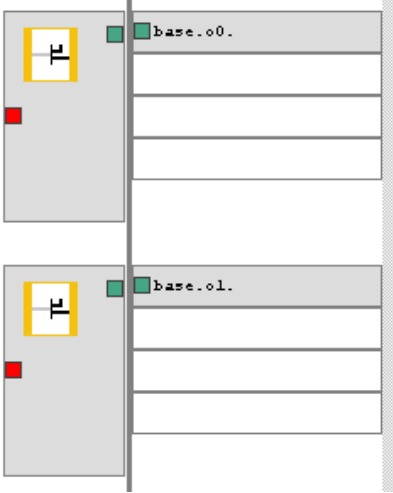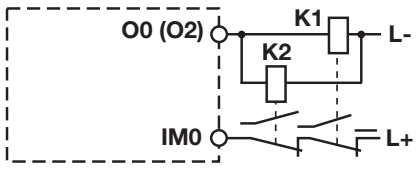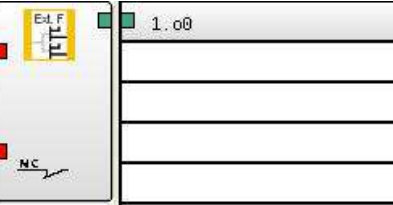Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts
		
Redundant output		
Single output		
Single output with advanced fault detection*		


*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

Base units PNOZ mm0.1p

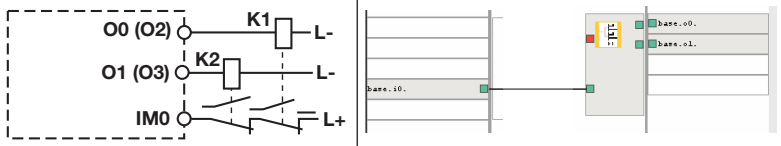Feedback loop	Redundant output
Contacts from external contactors	

Connection example

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

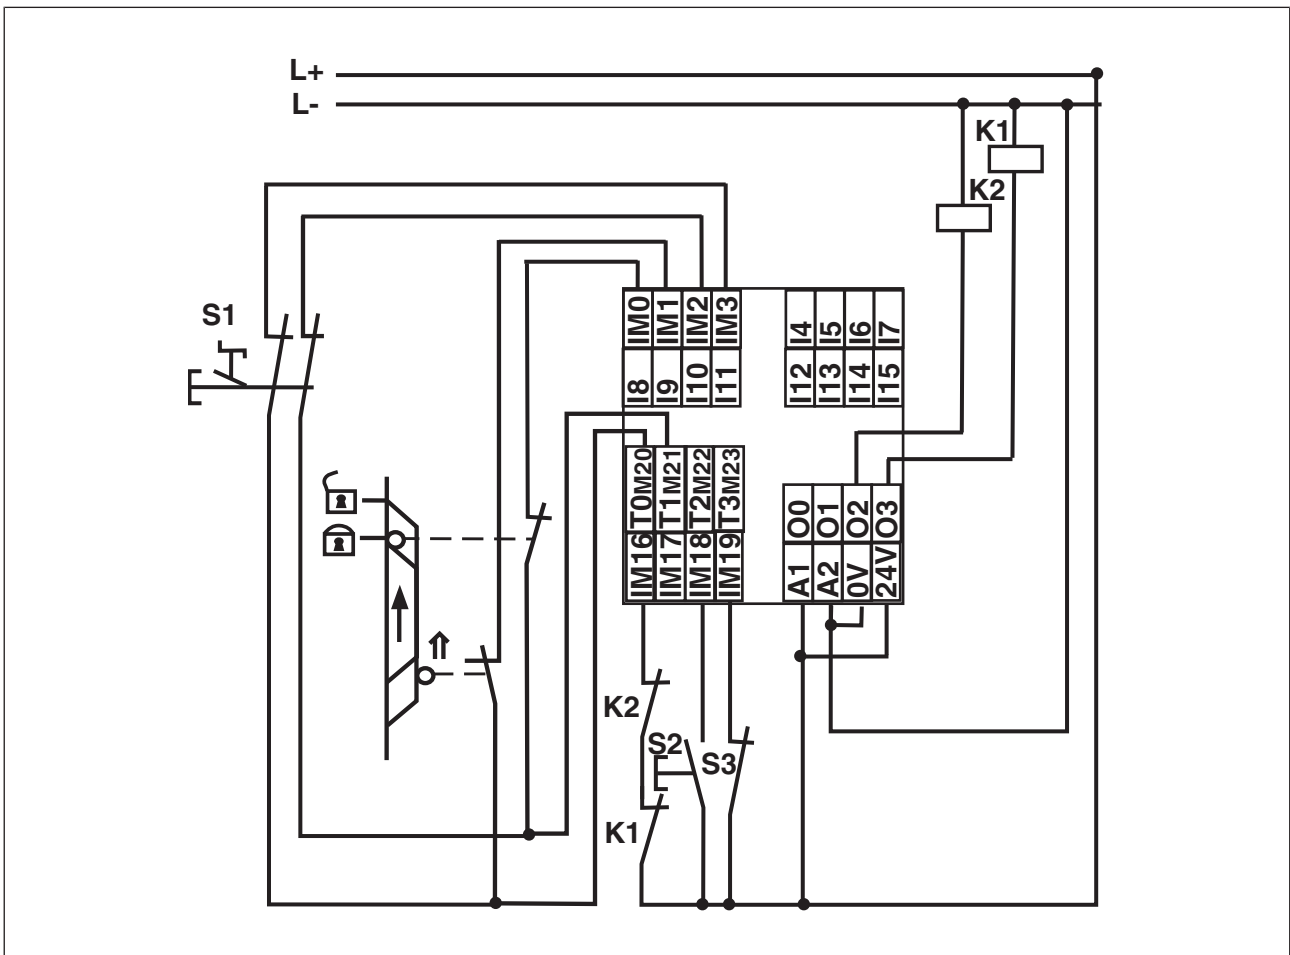

Base units PNOZ mm0.1p

Technical details

General	
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Supply to the system
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	35 W
Output of external power supply (DC) at no load	8 W
Residual ripple DC	5 %
Supply voltage	
for	Supply to the SC outputs
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	192 W
Status indicator	Display, LED
Configurable inputs/outputs (inputs or auxiliary outputs)	
Quantity	8
Galvanic isolation	No
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	24 V
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Signal level at "1"	15 ... 30 V DC
Signal level at g0 h	-3 ... +5 V DC
Maximum input delay	4 ms
Configurable auxiliary outputs	
Voltage	24 V
Output current	75 mA
Power	1,8 W
Short circuit-proof	Yes
Residual current at "0"	0,5 mA
Voltage at "1"	UB - 2 V at 0.1 A

Base units PNOZ mm0.1p

Inputs	
Quantity	12
Signal level at g0 h	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Maximum input delay	4 ms
Potential isolation	No
Semiconductor outputs	
Quantity	4
Switching capability	
Voltage	24 V
Current	2 A
Power	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA
Max. capacitive load	1 µF
Max. duration of off time during self test	330 µs
Switch-off delay	30 ms
Potential isolation	Yes
Short circuit-proof	Yes
Test pulse outputs	
Number of test pulse outputs	4
Voltage	24 V
Current	0,1 A
Max. duration of off time during self test	5 ms
Short circuit-proof	Yes
Potential isolation	No
Times	
Switch-on delay	5 s
Supply interruption before de-energisation	20 ms
Simultaneity, channel 1 and 2 max.	3 s
Simultaneity in the two-hand circuit	0,5 s
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C

Base units PNOZ mm0.1p

Environmental data

Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Rated impulse withstand voltage	2,5 kV
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between	SC output and system voltage
Type of potential isolation	Basic insulation
Rated surge voltage	2500 V

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Cable length	
Max. cable length per input	1 km
Sum of individual cable lengths at the test pulse output	2 km

Base units

PNOZ mm0.1p

Mechanical data

Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm ² , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm ² , 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,2 - 2,5 mm ² , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100 mm
Width	45 mm
Depth	120 mm
Weight	231 g

Where standards are undated, the 2010-08 latest editions shall apply.

Base units PNOZ mm0.1p

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN/IEC 61511	EN/IEC 61511	EN ISO 13849-1: 2015
		PL	Category	SIL CL/ maximum SIL	PFH _D [1/h]	SIL	PFD	T _M [year]

Logic

CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	SIL 3	1,66E-05	20
Expansion right	–	PL e	Cat. 4	SIL CL 3	2,13E-10	SIL 3	3,70E-07	20
Expansion left	–	PL e	Cat. 4	SIL CL 3	2,38E-10	SIL 3	4,14E-07	20

Input

Inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	SIL 2	3,46E-04	20
Inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	SIL 3	7,08E-06	20
Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,86E-09	SIL 2	9,62E-05	20
Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	SIL 3	3,49E-05	20

Output

SC outputs	1-channel with advanced fault detection	PL e	Cat. 4	SIL CL 3	7,65E-10	SIL 3	1,33E-06	20
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	8,90E-10	SIL 2	1,21E-05	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	7,86E-10	SIL 3	1,12E-05	20

Explanatory notes for the safety-related characteristic data:


- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

All the units used within a safety function must be considered when calculating the safety characteristic data.


Base units PNOZ mm0.1p

Supplementary data

Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

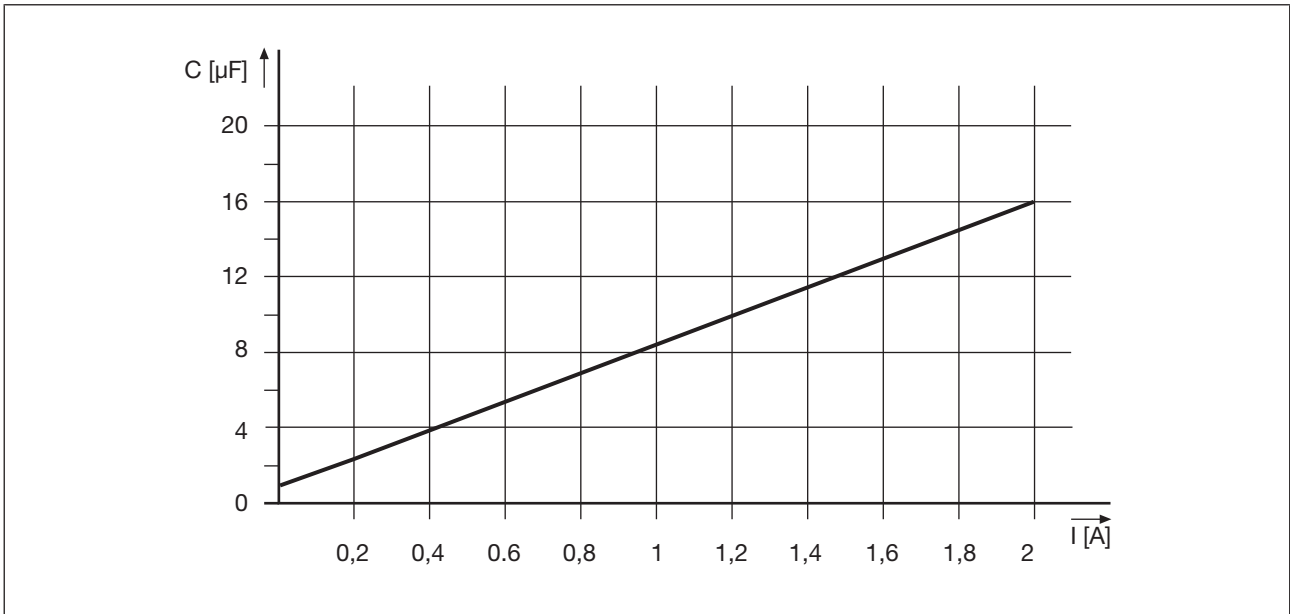

Maximum permitted total current of the semiconductor outputs

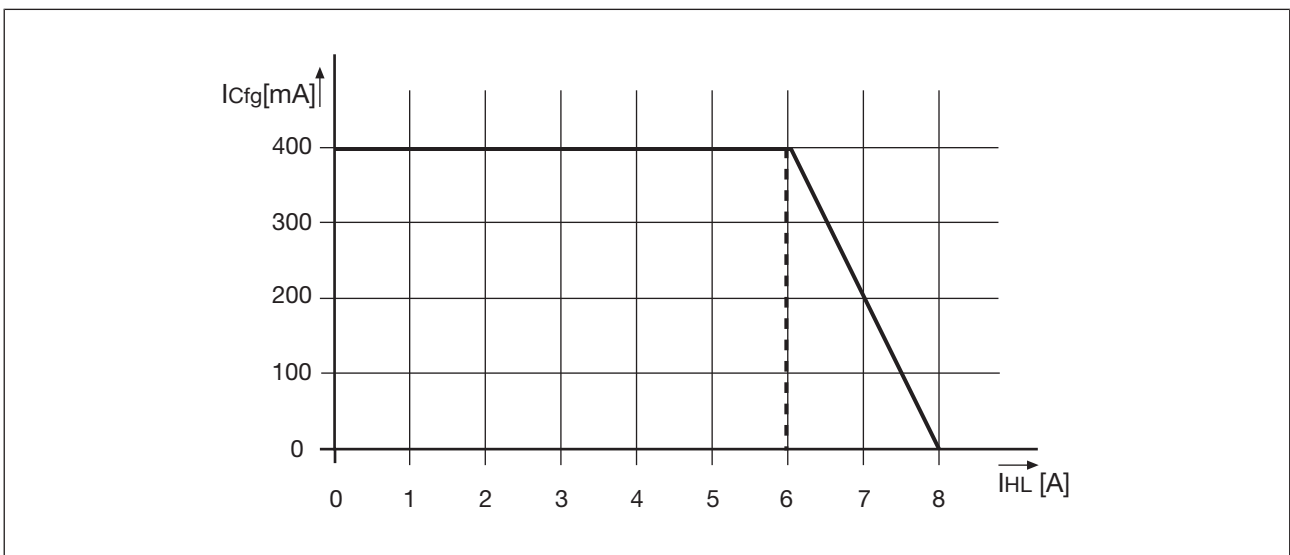

I_{Cfg} : Total current of the configurable semiconductor outputs (auxiliary outputs)

I_{HL} : Total current: Semiconductor outputs (safety outputs)

Base units

PNOZ mm0.1p

Order reference

Product

Product type	Features	Order no.
PNOZ mm0.1p	Base unit	772001

Accessories

Terminator

Product type	Features	Order no.
PNOZ s terminator plug	Right terminator, yellow, x10	750010
PNOZ mm0.xp terminator left	Left terminator, black/yellow, x1	779261

Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312992
PSSu A USB-CAB05	Mini USB cable, 5 m	312993

Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751008
PNOZ s Set1 screw terminals	1 set of screw terminals	750008

Base units PNOZ mm0.2p



Overview

Unit features

Application of the product PNOZ mm0.2p:

PNOZmulti Mini base unit

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Semiconductor outputs:
 - 4 safety outputs
 - Depending on the application, up to PL e of EN ISO 13849-1 and up to SIL CL 3 of EN IEC 62061
- ▶ 12 inputs for connecting, for example:
 - E-STOP pushbuttons
 - Two-hand button
 - Safety gate limit switches
 - Start buttons
 - Light beam devices
 - Scanners
 - Enabling switches
 - PSEN
 - Operating mode selector switches
 - Safety mats
- ▶ 8 configurable inputs/outputs
 - Can be configured as:
 - Inputs (see above for connection options)
 - or
 - Outputs for standard applications

Base units PNOZ mm0.2p

- ▶ 4 configurable outputs
Can be configured as:
 - Outputs for standard applicationsor
 - Test pulse outputs
- ▶ LED indicator for:
 - Error messages
 - Diagnostics
 - Supply voltage
 - Output circuits
 - Input circuits
- ▶ Display for:
 - Error messages
 - State of supply voltage
 - State of the inputs and outputs
 - Status information
 - Unit information
- ▶ Test pulse outputs used to monitor shorts across the inputs
- ▶ Monitoring of shorts between the safety outputs
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see order reference)
- ▶ Rotary knob for menu control
- ▶ Expansion modules can be connected
(please refer to the document "PNOZmulti System Expansion" for details of the type and number that can be connected)
- ▶ Integrated interface (RJ45 socket) for safe connection of two configurable control systems:
 - Connection options:
 - Two PNOZmulti Mini base unitsor
 - One PNOZmulti Mini base unit with one PNOZmulti base unit
(both the units to be connected need either an integrated interface or a link module)
 - Point-to-point connection via 4-core shielded, twisted-pair cable
 - 32 virtual inputs and 32 virtual outputs for data transfer


Base units PNOZ mm0.2p

Chip card

To be able to use the product you will need a chip card.

Chip cards are available with memories of 8 kByte and 32 kByte. For large-scale projects we recommend the 32 kByte chip card (see Technical Catalogue: Accessories chapter).

Front view

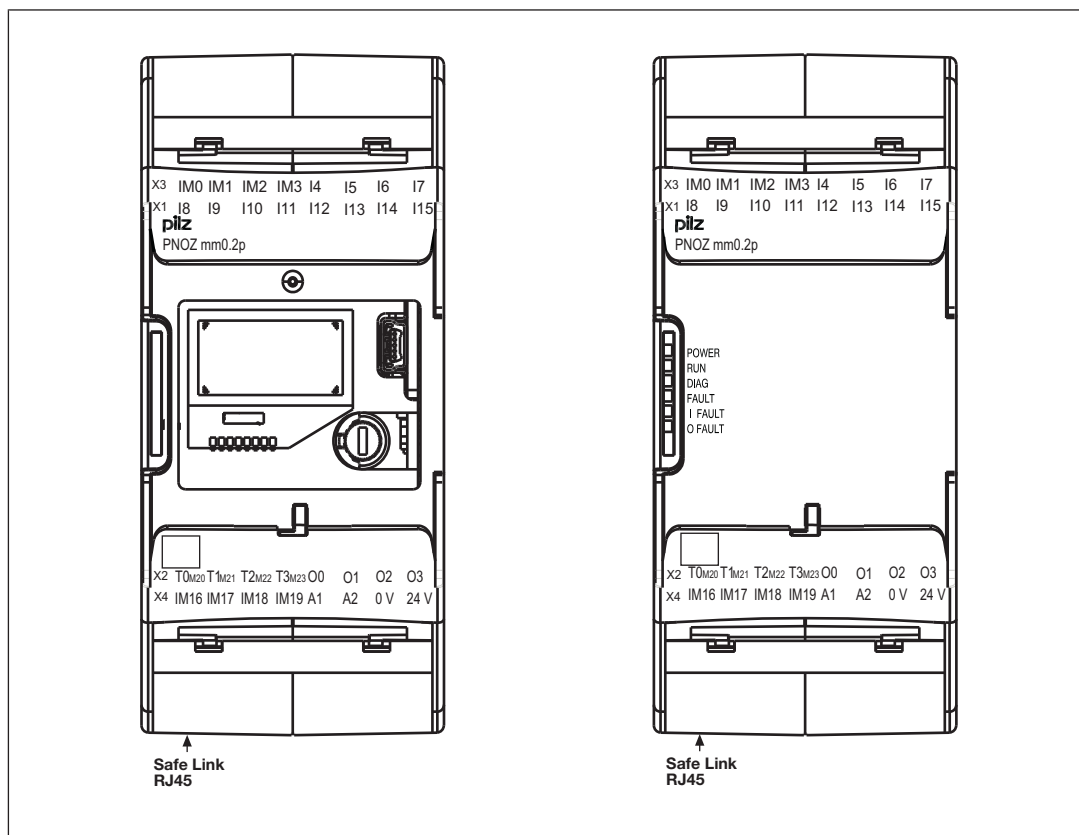

Front view with and without cover

Legend

- X1: Inputs I8 ... I15
- X2: Configurable test pulse/auxiliary outputs T0M20 ... T3M23
Semiconductor outputs O0 ... O3
- X3: Configurable inputs/outputs IM0 – IM3
Inputs I4 ... I7
- X4: Configurable inputs/outputs IM16 – IM19
Supply connections

Base units

PNOZ mm0.2p

LEDs: PWR
RUN
DIAG
FAULT
I FAULT
O FAULT

- ▶ Safe Link RJ45
RJ45 socket for connection of 2 base units

Function description

Functions

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

System reaction time

Calculation of the maximum reaction time between an input switching off and a linked output in the system switching off is described in the document "PNOZmulti System Expansion".

Connection of two base units

The integrated interface for connection of 2 base units is used to safely transfer the input information from 32 virtual inputs and 32 virtual outputs between two PNOZmulti systems.

Each base unit needs either an integrated interface or a link module for the connection.

Data exchange:

- ▶ Data is exchanged cyclically.
- ▶ At the end of the PNOZmulti cycle, each base unit sends its output data to the other base unit or to the link module on the other base unit.
- ▶ At the same time the base unit reads the input data from the other base unit.

Connection of multiple base units:

Base units PNOZ mm0.2p

Any number of base units can be connected via link modules or via the integrated interface. Each base unit needs a link module or an integrated interface for the connection between two base units.

However, only a maximum of 4 link modules may be connected to any one base unit.

Data transmission time:

The t_{BUS} data transmission time is the time between the virtual output at base unit 1 being set and the virtual input at base unit 2 becoming available (see "Technical details").

The maximum reaction time for series connection of n base units

This is the time between the activation of a safety function at the input on one base unit and the switching of an output on the connected base unit.

- ▶ The maximum reaction time t_{SUM} includes the following times:

t_{ON} : Input delay = 4 ms

t_{COND} : Switch-off delay of semiconductor output = 30 ms

t_{REL} : Switch-off delay of relay output = 50 ms

t_{BUS} : Data transmission time between two base units = 35 ms

n: Number of connections between base units

The maximum reaction time t_{SUM} for series connection of n base units

- ▶ On semiconductor outputs:

$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{COND}}$$

- ▶ On relay outputs:

$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{REL}}$$


- ▶ Input delay and switch-off delay are only included once in the reaction time. The data transmission time is multiplied by the number of connections.

- ▶ Please refer to the connection examples under "Preparing for operation".


Virtual inputs and outputs:

Inputs and outputs for both PNOZmulti systems are assigned in the PNOZmulti Configurator. Inputs and outputs with the same number are assigned to each other, e.g. output o5 on one PNOZmulti system to input i5 on the other PNOZmulti system.

Base units PNOZ mm0.2p

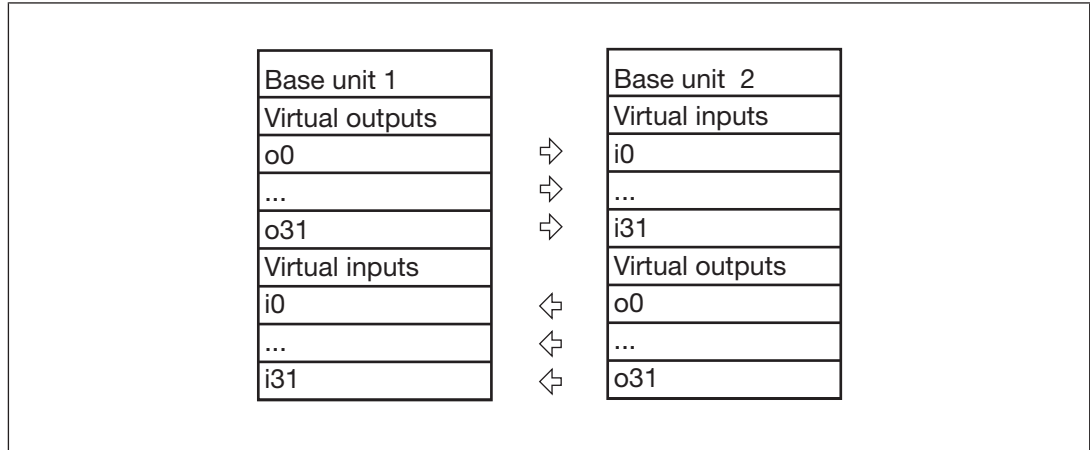

Block diagram

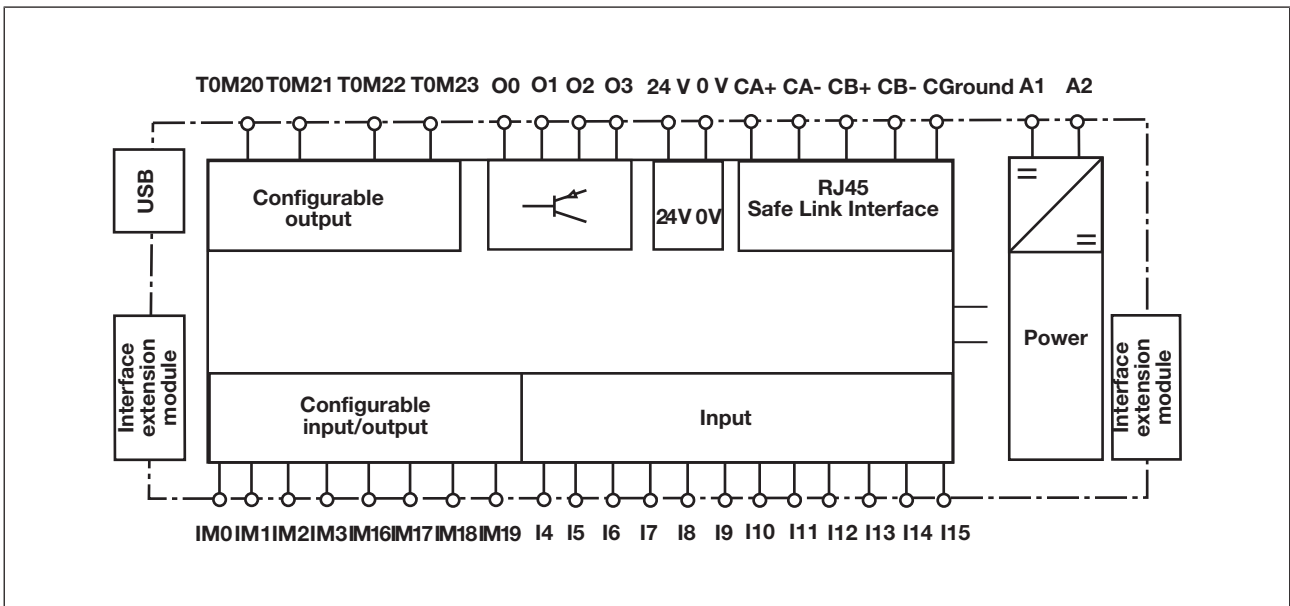


Base units PNOZ mm0.2p

Installation

Dimensions

*with spring-loaded terminals

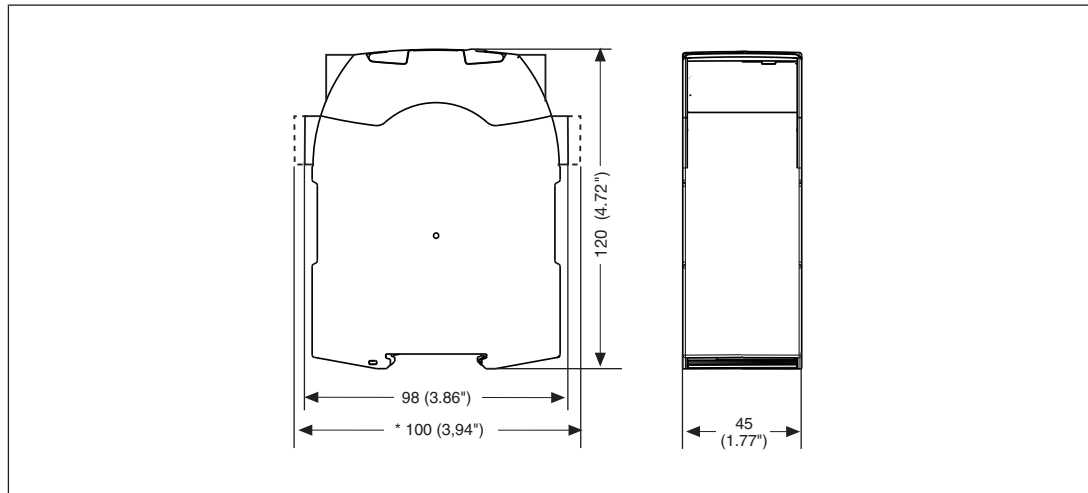

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram in the Configurator. There you can select the inputs that are to perform a safety function and the outputs that are to switch this safety function.

Note:

- ▶ Information given in the [Technical details \[551\]](#) must be followed.
- ▶ Outputs O0 to O3 are semiconductor outputs
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Sufficient protection circuit must be provided on all output contacts with inductive loads.
- ▶ The safety system and input circuits must always be supplied by a single power supply. The power supply must meet the regulations for extra low voltages with protective separation (SELV/PELV).
- ▶ Test pulse outputs must exclusively be used to test the inputs. They must not be used to drive loads.
Do not route the test pulse cables together with actuator cables within an unprotected sheathed cable.
- ▶ Test pulse outputs are also used to supply safety mats that trigger a short circuit.
Test pulses that are used for the safety mat may not be reused for other purposes.

When connecting two base units via the integrated interface please note:

Base units

PNOZ mm0.2p


- ▶ The max. cable length between two base units on a connection with
 - one link module PNOZ ml1p <V2.0: 100 m
 - one link module PNOZ ml1p from V2.0, PNOZ mml1p or one base unit PNOZ mm0.2p: 1000 m
- ▶ Connect the inputs and outputs via the two interfaces using 4-core shielded cable. The cables must be twisted in pairs (see "Preparing for operation").
- ▶ Note the crossover cabling, e.g. CA+ with CB+.
- ▶ The cables must be classified into a minimum of Category 5 in accordance with ISO/IEC 11801.

Preparing for operation

Function test during commissioning

Using the chip card

Make sure that you do not bend the chip card as you insert it into the chip card slot.

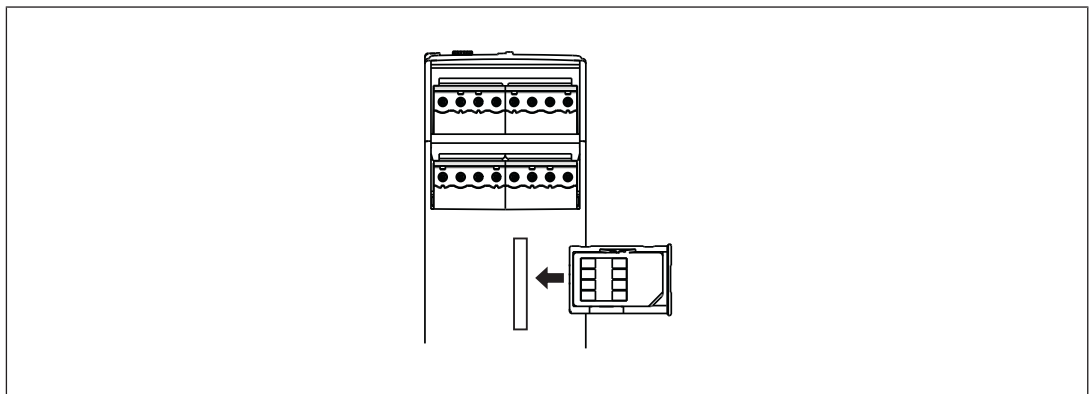

Commissioning the PNOZmulti safety system

Procedure:

- ▶ Wire the inputs and outputs on the base unit in accordance with the circuit diagram.
- ▶ Connect the supply voltage:
 - Supply voltage for the control system:
 - Terminal A1: + 24 VDC
 - Terminal A2: 0 V
 - Supply voltage for the semiconductor outputs:
 - 24 V terminal: + 24 VDC
 - 0V terminal: 0 V

Base units PNOZ mm0.2p

Please note: The supply voltage for the semiconductor outputs must always be present, even if you are not using the semiconductor outputs.

Load project from chip card

Procedure:



- ▶ Insert the chip card containing the current project into the card slot on the base unit.
- ▶ Switch on the supply voltage. The LC display shows the project name, CRC sum and the date the project was created. Please check this information.
- ▶ Load the project by pressing the rotary knob. For the project to be downloaded, the rotary knob must be held down for between 3 and 8 seconds. Once the project has been successfully downloaded, the status of the inputs and outputs will be shown on the display.

Load project via USB port

Procedure:

- ▶ Insert a chip card into the card slot on the base unit.
- ▶ Connect the computer containing the PNOZmulti Configurator to the base unit via the USB port.
- ▶ Switch on the supply voltage.
- ▶ Download the project (see PNOZmulti Configurator's online help).
- ▶ Once the project has been successfully downloaded, the status of the inputs and outputs and the supply voltage will be shown on the display. The "RUN" LED will be lit.


Connection

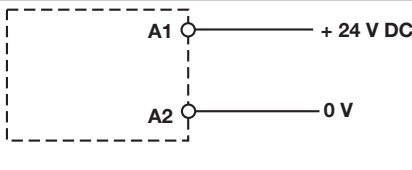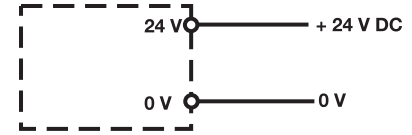Supply voltage	AC	DC
For the safety system	/	
For the semiconductor outputs Must always be present, even if the semiconductor outputs are not used	/	


Base units PNOZ mm0.2p

Input circuit	Single-channel	Dual-channel
E-STOP without detection of shorts across contacts		
E-STOP with detection of shorts across contacts		
Start circuit	Input circuit without detection of shorts across contacts	Input circuit with detection of shorts across contacts
Redundant output		
Single output		

Base units PNOZ mm0.2p

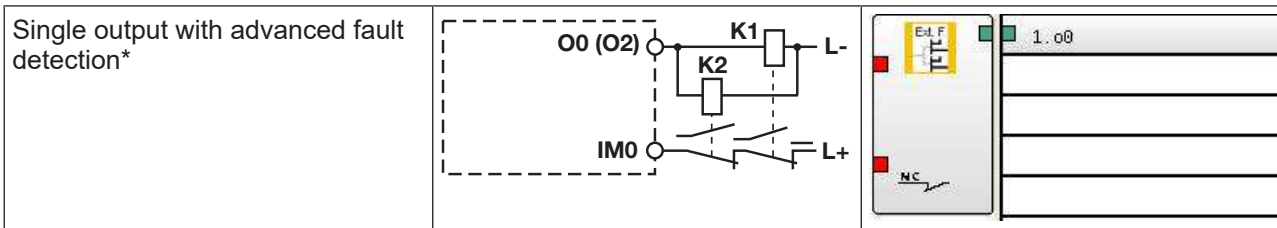

*Two loads may be connected to each safety output with advanced fault detection, even on applications in accordance with EN IEC 62061, SIL CL 3. Prerequisite: Feedback loop is connected, shorts across contacts and external power sources are excluded (e.g. through separate multicore cables). Please note that, in the event of an error in the feedback loop, the safety system switches to a safe condition and shuts down **all** the outputs.

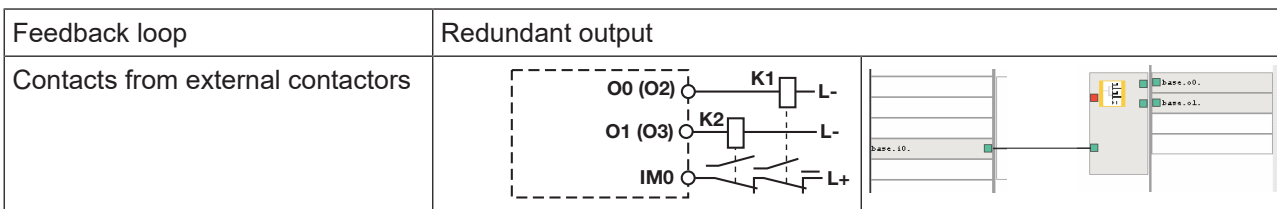


Connection of two base units

Interface assignment

RJ45 socket 8-pin	PIN	Layout
	1	CA+
	2	CA-
	3	CB+
	4	n.c.
	5	n.c.
	6	CB-
	7	n.c.
	8	n.c.
	Shield	CGround

Base units PNOZ mm0.2p


Connection

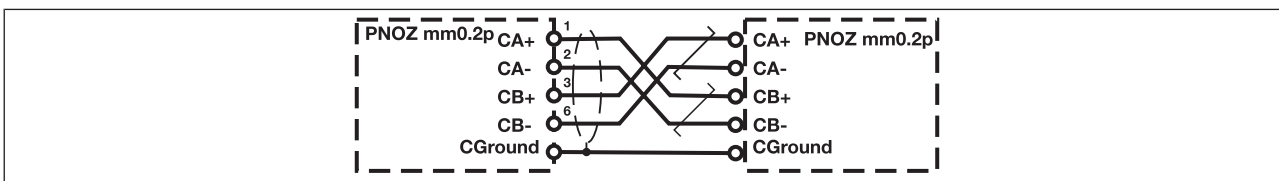

Connection of two base units PNOZmulti Mini via the integrated interface

Connection examples

Dual-channel E-STOP and safety gate wiring, monitored start (IM18), feedback loop (IM16)

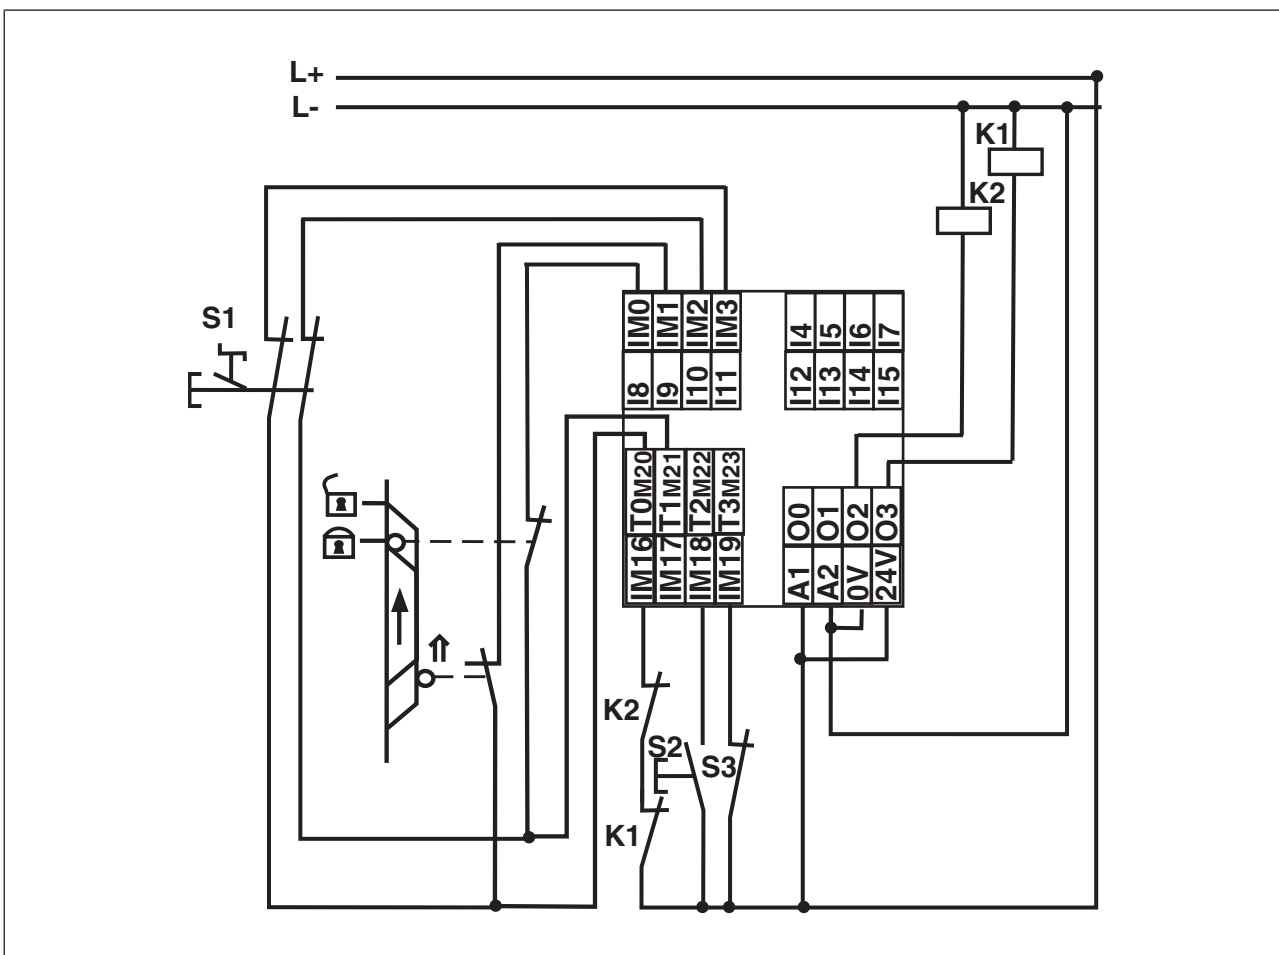

Base units PNOZ mm0.2p

Connection of multiple base units via the integrated interface

Example 1: Series connection of 3 base units

Reaction time t_{SUM} between base unit Base 1 and Base 2:

Input delay t_{ON} at I4 and I6 + data transmission time $1 * t_{BUS}$ through link module/interface + switch-off delay t_{COND} of the semiconductor output at O0

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$


$$t_{SUM} = 4 \text{ ms} + (1 * 35 \text{ ms}) + 30 \text{ ms} = 69 \text{ ms}$$

Reaction time t_{SUM} between base unit Base 1 and Base 3:

Input delay t_{ON} at I4 und I6 + data transmission time $2 * t_{BUS}$ through link modules/interfaces + switch-off delay t_{COND} of the semiconductor output at O1

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$

$$t_{SUM} = 4 \text{ ms} + (2 * 35 \text{ ms}) + 30 \text{ ms} = 104 \text{ ms}$$

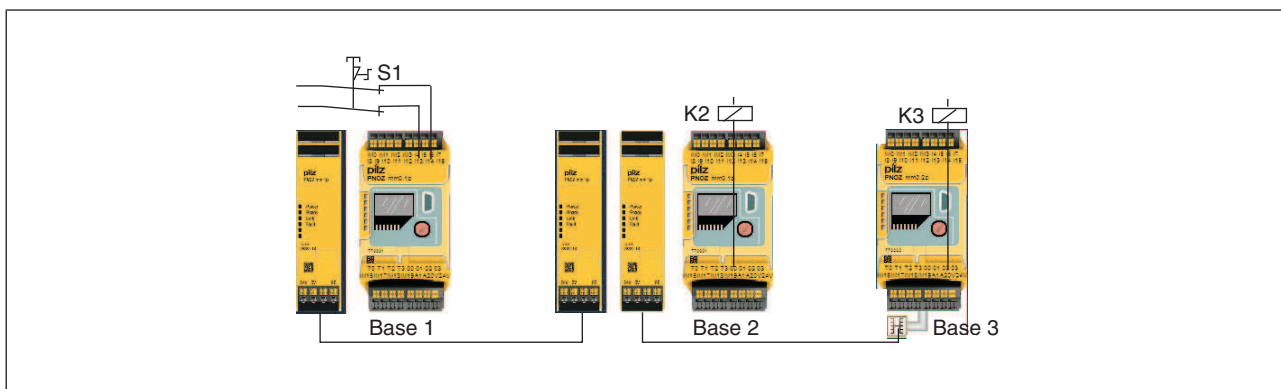

Base units PNOZ mm0.2p

Example 2: Connection of 5 base units


The reaction times are calculated in the same way as application example 1. After pressing S1 on Base 1, the semiconductor outputs switch after the following reaction times t_{SUM} :

O0 on Base 2: 69 ms

O1 on Base 3: 104 ms

O0 on Base 4: 139 ms

O0 on Base 5: 104 ms

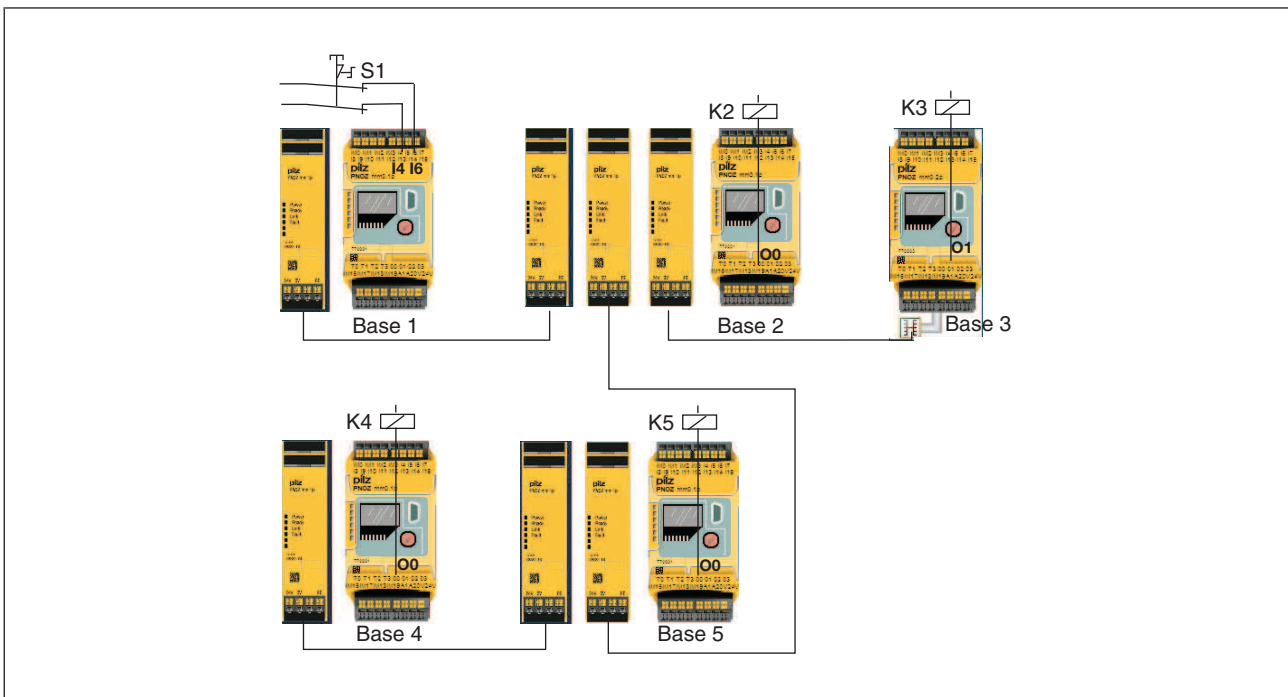

Base units PNOZ mm0.2p

Technical details

General	
Certifications	CE, EAC, KCC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Supply to the system
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	35 W
Output of external power supply (DC) at no load	8 W
Residual ripple DC	5 %
Supply voltage	
for	Supply to the SC outputs
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	192 W
Status indicator	Display, LED
Configurable inputs/outputs (inputs or auxiliary outputs)	
Quantity	8
Galvanic isolation	No
Configurable inputs	
Input voltage in accordance with EN 61131-2 Type 1	24 V
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Signal level at "1"	15 ... 30 V DC
Signal level at g0 h	-3 ... +5 V DC
Maximum input delay	4 ms
Configurable auxiliary outputs	
Voltage	24 V
Output current	75 mA
Power	1,8 W
Short circuit-proof	Yes
Residual current at "0"	0,5 mA
Voltage at "1"	UB - 2 V at 0.1 A

Base units PNOZ mm0.2p

Virtual inputs	
Number of virtual inputs	32
Inputs	
Quantity	12
Signal level at g0 h	-3 - +5 V DC
Signal level at "1"	15 - 30 V DC
Input voltage in accordance with EN 61131-2 Type 1	24 V DC
Input current at rated voltage	5 mA
Min. pulse duration	16 ms
Pulse suppression	0,6 ms
Maximum input delay	4 ms
Potential isolation	No
Virtual outputs	
Number of virtual outputs	32
Semiconductor outputs	
Quantity	4
Switching capability	
Voltage	24 V
Current	2 A
Power	48 W
Signal level at "1"	UB - 0.5 VDC at 2 A
Residual current at "0"	0,5 mA
Max. capacitive load	1 µF
Max. duration of off time during self test	330 µs
Switch-off delay	30 ms
Potential isolation	Yes
Short circuit-proof	Yes
Test pulse outputs	
Number of test pulse outputs	4
Voltage	24 V
Current	0,1 A
Max. duration of off time during self test	5 ms
Short circuit-proof	Yes
Potential isolation	No
Times	
Switch-on delay	5 s
Supply interruption before de-energisation	20 ms
Simultaneity, channel 1 and 2 max.	3 s
Simultaneity in the two-hand circuit	0,5 s
Max. data transmission time	35 ms

Base units PNOZ mm0.2p

Environmental data

Ambient temperature

in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C

Storage temperature

in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C

Climatic suitability

in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C

Condensation during operation

Not permitted

Max. operating height above SL

2000 m

EMC

EN 61131-2

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2

Rated insulation voltage

30 V

Rated impulse withstand voltage

2,5 kV

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between **SC output and system voltage**

Type of potential isolation **Basic insulation**

Rated surge voltage **2500 V**

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Base units PNOZ mm0.2p

Mechanical data

Cable length

Max. cable length per input **1 km**

Sum of individual cable lengths at the test pulse output **2 km**

Max. cable length between two link modules **1 km**

Material

Bottom **PC**

Front **PC**

Top **PC**

Connection type **Spring-loaded terminal, screw terminal**

Conductor cross section with screw terminals

1 core flexible **0,25 - 2,5 mm², 24 - 12 AWG**

2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors **0,2 - 1,5 mm², 24 - 16 AWG**

Torque setting with screw terminals **0,5 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,2 - 2,5 mm², 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **100 mm**

Width **45 mm**

Depth **120 mm**

Weight **236 g**

Where standards are undated, the 2011-01 latest editions shall apply.

Base units PNOZ mm0.2p

Safety characteristic data

Unit	Operating mode	EN ISO 13849-1: 2015	EN ISO 13849-1: 2015	EN IEC 62061	EN IEC 62061	EN/IEC 61511	EN/IEC 61511	EN ISO 13849-1: 2015
		PL	Category	SIL CL/ maximum SIL	PFH _D [1/h]	SIL	PFD	T _M [year]

Logic

CPU	2-channel	PL e	Cat. 4	SIL CL 3	1,54E-09	SIL 3	1,66E-05	20
Expansion right	–	PL e	Cat. 4	SIL CL 3	2,13E-10	SIL 3	3,70E-07	20
Expansion left	–	PL e	Cat. 4	SIL CL 3	2,38E-10	SIL 3	4,14E-07	20
Link interface	–	PL e	Cat. 4	SIL CL 3	6,53E-10	SIL 3	1,13E-06	20

Input

Inputs	1-channel	PL d	Cat. 2	SIL CL 2	3,95E-09	SIL 2	3,46E-04	20
Inputs	2-channel	PL e	Cat. 4	SIL CL 3	4,61E-10	SIL 3	7,08E-06	20
Inputs	Short circuit-forming safety mats	PL d	Cat. 3	SIL CL 2	1,86E-09	SIL 2	9,62E-05	20
Inputs	1-ch., pulsed light barrier	PL e	Cat. 4	SIL CL 3	3,95E-10	SIL 3	3,49E-05	20

Output

SC outputs	1-channel with advanced fault detection	PL e	Cat. 4	SIL CL 3	7,65E-10	SIL 3	1,33E-06	20
SC outputs	1-channel	PL d	Cat. 2	SIL CL 2	8,90E-10	SIL 2	1,21E-05	20
SC outputs	2-channel	PL e	Cat. 4	SIL CL 3	7,86E-10	SIL 3	1,12E-05	20

Explanatory notes for the safety-related characteristic data:


- ▶ Safety characteristic data in accordance with EN IEC 62061 and EN/IEC 61511 was calculated based on EN/IEC 61508.
- ▶ T_M is the maximum mission time in accordance with EN ISO 13849-1. The value also applies as the retest interval in accordance with EN/IEC 61508-6 and EN/IEC 61511 and as the proof test interval and mission time in accordance with EN IEC 62061.

Base units PNOZ mm0.2p


All the units used within a safety function must be considered when calculating the safety characteristic data.

Supplementary data

Maximum capacitive load C (μF) with load current I (A) at the semiconductor outputs

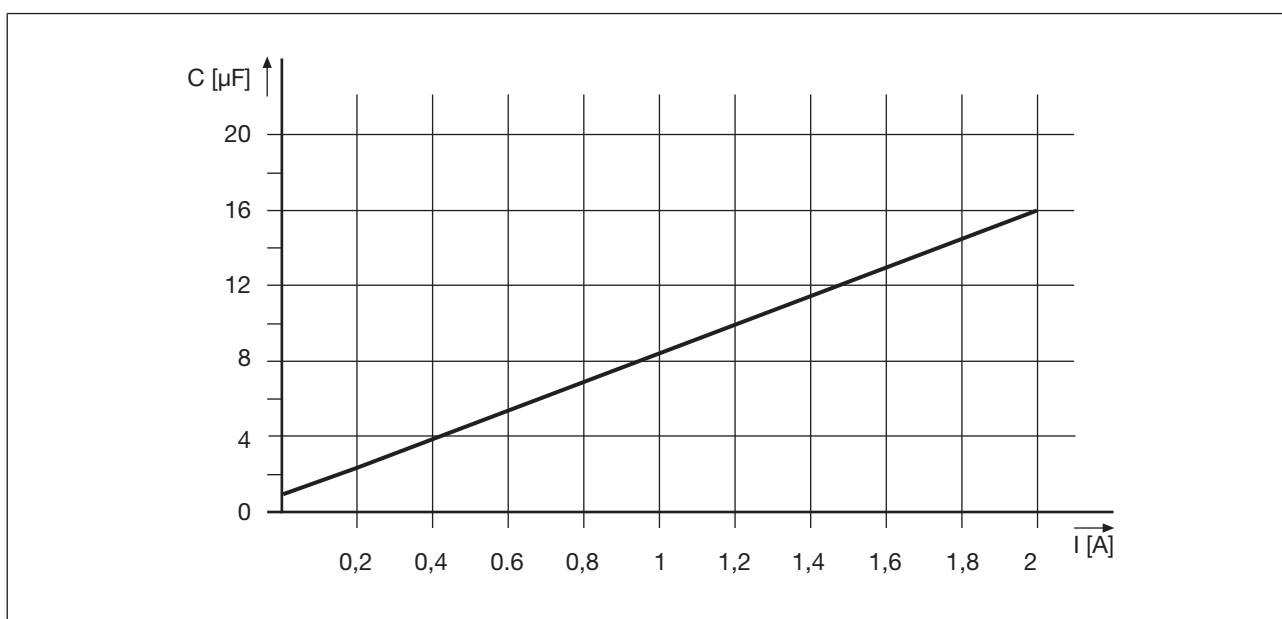

Maximum permitted total current of the semiconductor outputs

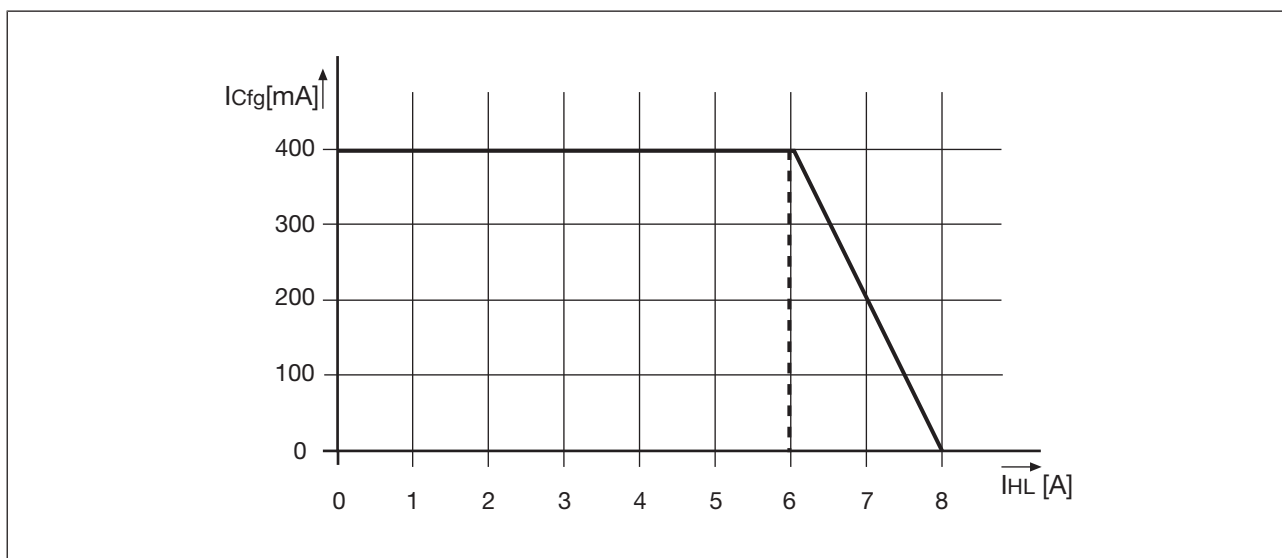

I_{Cfg}: Total current of the configurable semiconductor outputs (auxiliary outputs)

Base units

PNOZ mm0.2p

I_{HL} : Total current: Semiconductor outputs (safety outputs)

Order reference

Product

Product type	Features	Order no.
PNOZ mm0.2p	Base unit	772002

Accessories

Terminals

Product type	Features	Order no.
PNOZ s Set1 spring loaded terminals	1 set of spring-loaded terminals	751008
PNOZ s Set1 screw terminals	1 set of screw terminals	750008

Terminator

Product type	Features	Order no.
PNOZ s terminator plug	Right terminator, yellow, x10	750010
PNOZ mm0.xp terminator left	Left terminator, black/yellow, x1	779261

Cable

Product type	Features	Order no.
PSSu A USB-CAB03	Mini USB cable, 3 m	312992
PSSu A USB-CAB05	Mini USB cable, 5 m	312993

Link modules PNOZ mml1p



Overview

Unit features

Application of the product PNOZ mml1p:


Link module to safely connect two configurable small control systems PNOZmulti.

The product has the following features:

- ▶ Connection options:
 - Two PNOZmulti Mini base units
 - or
 - One PNOZmulti Mini base unit with one PNOZmulti base unit
- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Point-to-point connection via 4-core shielded and twisted-pair cable
- ▶ 32 virtual inputs and 32 virtual outputs
- ▶ Status indicators
- ▶ LED indicators for
 - Operating status
 - Error
 - Connection status
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).

Link modules PNOZ mml1p

Front view

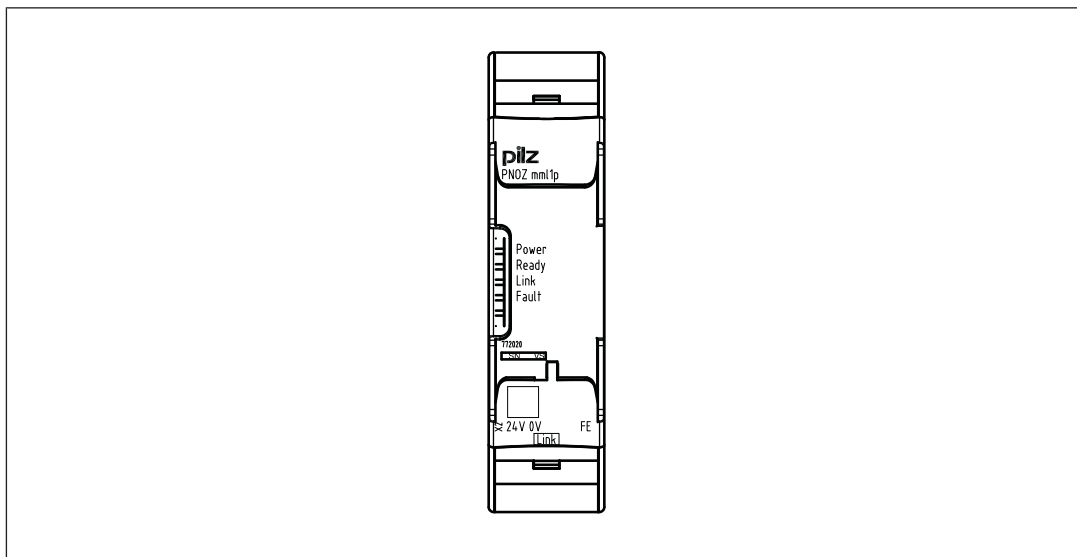

Key:

- ▶ X2:
 - 0 V, 24 V: Supply connections
 - FE: Functional earth
- ▶ Link:
 - Connection
- ▶ LEDs:
 - Power
 - Ready
 - Link
 - Fault

Function Description

Functions

The link module PNOZ mml1p is used to safely transfer the input information from 32 virtual inputs and 32 virtual outputs between two PNOZmulti systems. One link module is assigned to each base unit. Data is exchanged cyclically.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

Link modules PNOZ mml1p

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.

Data exchange:

- ▶ Data is exchanged cyclically.
- ▶ After the end of a PNOZmulti cycle, each base unit sends its output data to its link module. This output data is immediately sent to the link module on the other base unit.
- ▶ At the same time, the base unit reads the input data from the link module.

Connection of multiple base units:

Any number of base units can be connected via link modules. Two link modules are required for a connection between two base units. However, only a maximum of 4 link modules may be connected to any one base unit.

Data transmission time:

The t_{BUS} data transmission time is the time between the virtual output at base unit 1 being set and the virtual input at base unit 2 becoming available (see "Technical details").

The maximum reaction time for series connection of n base units

This is the time between the activation of a safety function at the input on one base unit and the switching of an output on the connected base unit.

- ▶ The maximum reaction time t_{SUM} includes the following times:

t_{ON} : Input delay = 4 ms

t_{COND} : Switch-off delay of semiconductor output = 30 ms

t_{REL} : Switch-off delay of relay output = 50 ms

t_{BUS} : Data transmission time between two base units = 35 ms

n: Number of connections between base units

The maximum reaction time t_{SUM} for series connection of n base units

- ▶ On semiconductor outputs:

$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{COND}}$$

- ▶ On relay outputs:


$$t_{\text{SUM}} = t_{\text{ON}} + (n * t_{\text{BUS}}) + t_{\text{REL}}$$

- ▶ Input delay and switch-off delay are only included once in the reaction time. The data transmission time between the link modules is multiplied by the number of connections.
- ▶ Please refer to the connection examples under "Preparing for operation".


Link modules PNOZ mml1p

Virtual inputs and outputs:

Inputs and outputs for both PNOZmulti systems are assigned in the PNOZmulti Configurator. Inputs and outputs with the same number are assigned to each other, e.g. output o5 on one PNOZmulti system to input i5 on the other PNOZmulti system.

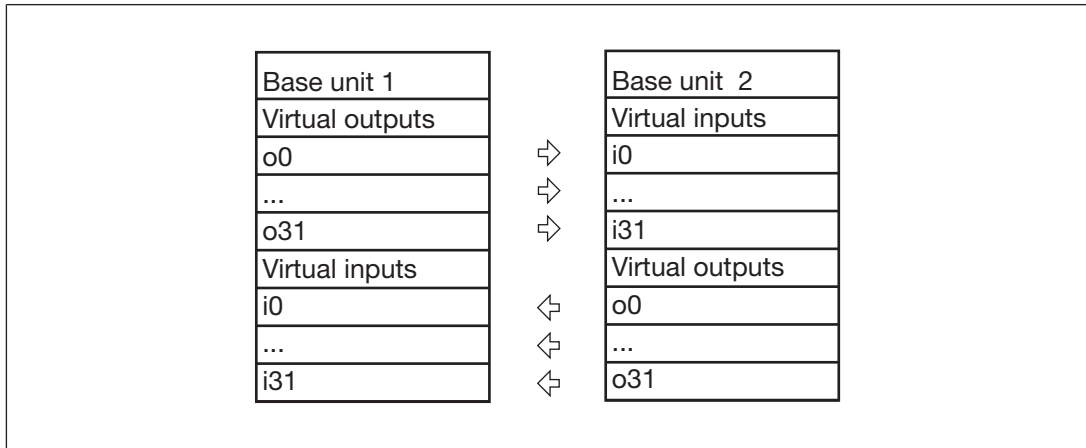


Block diagram

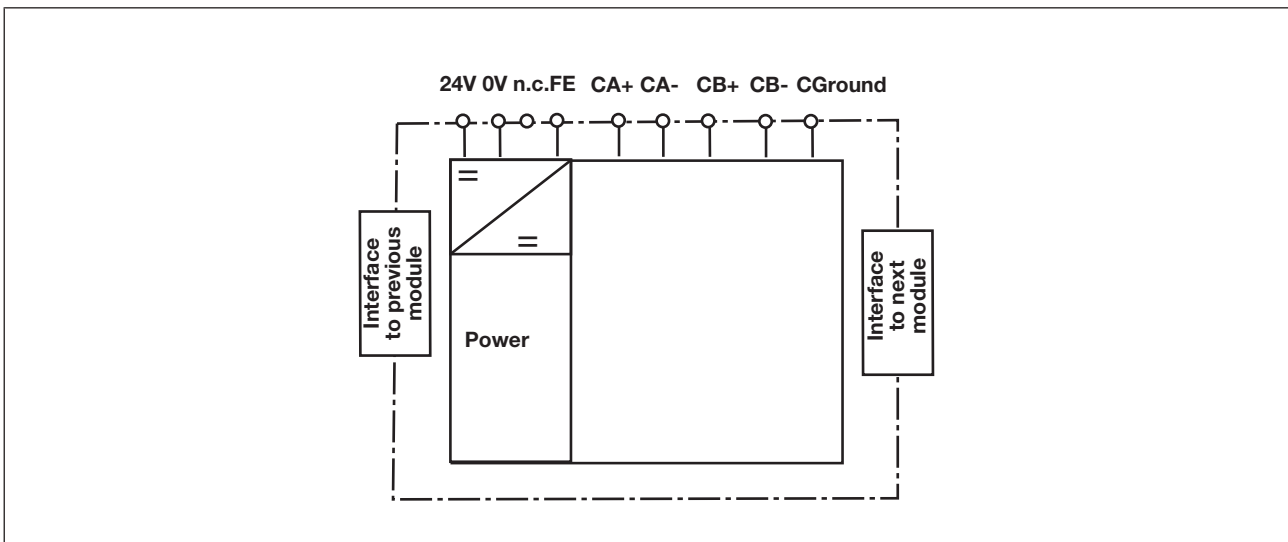

Link modules PNOZ mml1p

Installation

Dimensions

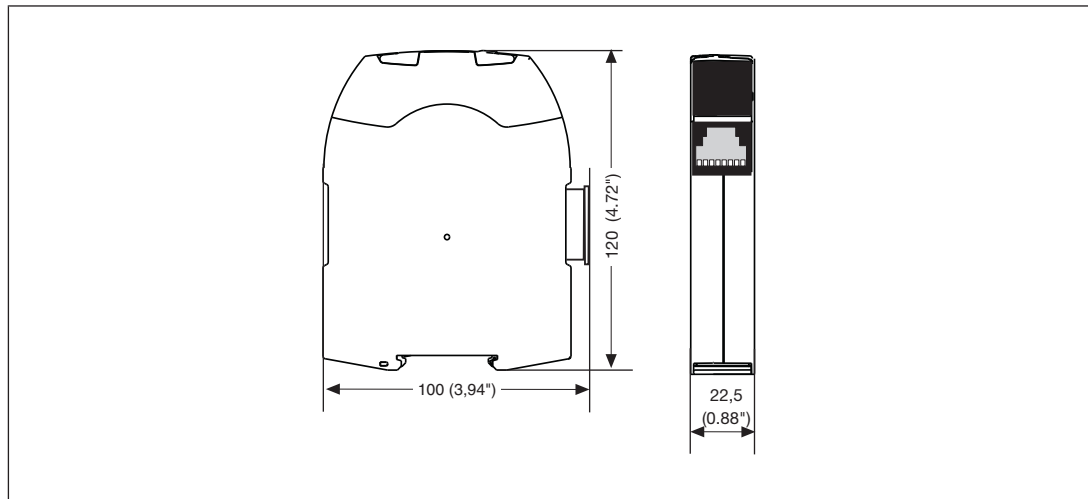

Commissioning

General wiring guidelines


The wiring is defined in the circuit diagram of the PNOZmulti Configurator.


Please note:

- ▶ Information given in the [Technical details \[565\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).
- ▶ 2 connection terminals are available for each of the supply connections 24 V and 0 V. This means that the supply voltage can be looped through several connections. The current at each terminal may not exceed 3 A.
- ▶ The max. cable length between two link modules on a connection with one link module
 - PNOZ ml1p <V2.0: 100 m
 - PNOZ ml1p from V2.0, PNOZ mml1p: 1000 m
- ▶ Connect the inputs and outputs from two link modules with 4-core shielded cable. The cables must be twisted in pairs.
- ▶ Note the crossover cabling, e.g. CA+ with CB+.
- ▶ The cables must be classified into a minimum of Category 5 in accordance with ISO/IEC 11801.


Link modules PNOZ mml1p

Connection

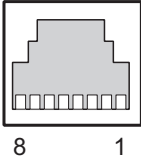RJ45 socket 8-pin	PIN	Layout
	1	CA+
	2	CA-
	3	CB+
	4	n.c.
	5	n.c.
	6	CB-
	7	n.c.
	8	n.c.
Shield	CGround	

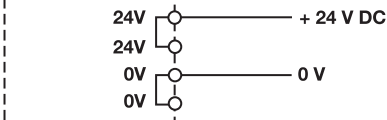Supply voltage	AC	DC
	/	

Supply voltage

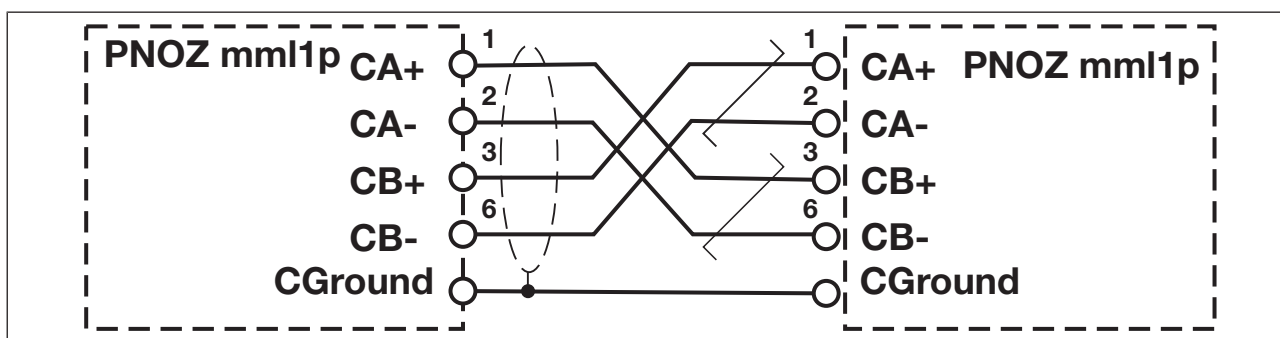

Connection of two base units PNOZmulti Mini via PNOZ mml1p

Link modules PNOZ mml1p

Connection examples

Example: Series connection of 3 base units

Reaction time t_{SUM} between base unit Base 1 and Base 2:

Input delay t_{ON} at I4 and I6 + data transmission time $1 * t_{BUS}$ through link module/interface + switch-off delay t_{COND} of the semiconductor output at O0

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$


$$t_{SUM} = 4 \text{ ms} + (1 * 35 \text{ ms}) + 30 \text{ ms} = 69 \text{ ms}$$

Reaction time t_{SUM} between base unit Base 1 and Base 3:

Input delay t_{ON} at I4 und I6 + data transmission time $2 * t_{BUS}$ through link modules/interfaces + switch-off delay t_{COND} of the semiconductor output at O1

$$t_{SUM} = t_{ON} + (n * t_{BUS}) + t_{COND}$$

$$t_{SUM} = 4 \text{ ms} + (2 * 35 \text{ ms}) + 30 \text{ ms} = 104 \text{ ms}$$

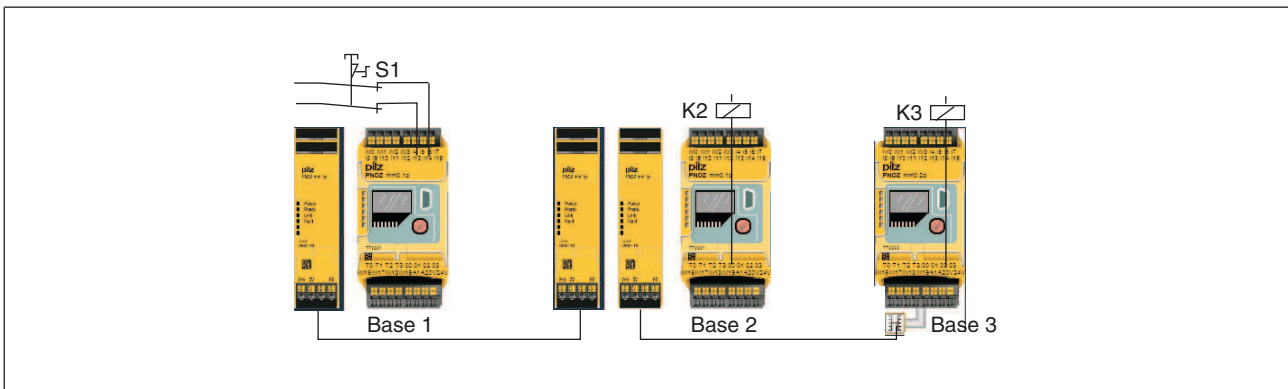

Link modules PNOZ mml1p

Example: Connection of 5 base units


The reaction times are calculated in the same way as application example 1. After pressing S1 on Base 1, the semiconductor outputs switch after the following reaction times t_{SUM} :

O0 on Base 2: 69 ms

O1 on Base 3: 104 ms

O0 on Base 4: 139 ms

O0 on Base 5: 104 ms

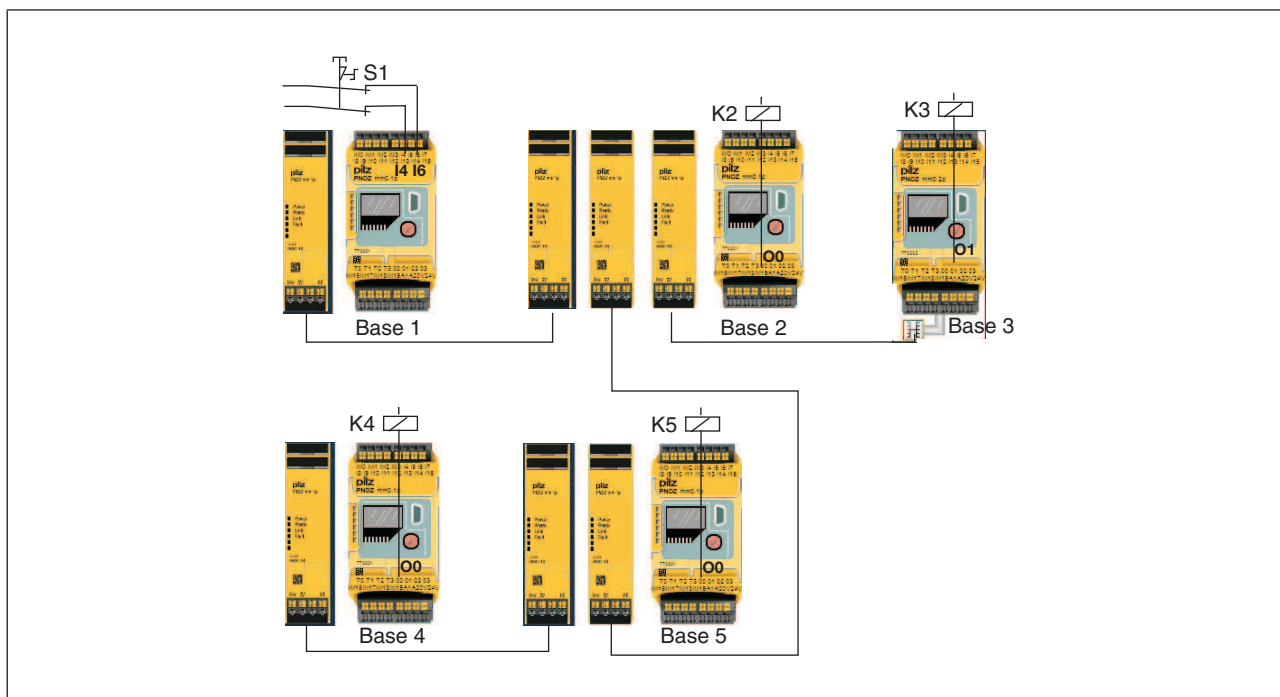

Technical details

General

Certifications **CE, EAC, KOSHA, TÜV, UKCA, cULus Listed**

Electrical data

Supply voltage

for **Module supply**

Voltage **24 V**

Kind **DC**

Voltage tolerance **-15 %/+20 %**

Output of external power supply (DC) **5 W**

Residual ripple DC **5 %**

Status indicator **LED**

Virtual inputs

Number of virtual inputs **32**

Link modules PNOZ mml1p

Virtual outputs

Number of virtual outputs **32**

Times

Switch-on delay **5 s**

Supply interruption before de-energisation **20 ms**

Max. data transmission time **35 ms**

Environmental data

Ambient temperature

in accordance with the standard **EN 60068-2-14**

Temperature range **0 - 60 °C**

Storage temperature

in accordance with the standard **EN 60068-2-1/-2**

Temperature range **-25 - 70 °C**

Climatic suitability

in accordance with the standard **EN 60068-2-30, EN 60068-2-78**

Humidity **93 % r. h. at 40 °C**

Condensation during operation

Not permitted

Max. operating height above SL

2000 m

EMC

EN 61131-2

Vibration

in accordance with the standard **EN 60068-2-6**

Frequency **10 - 150 Hz**

Acceleration **1g**

Shock stress

in accordance with the standard **EN 60068-2-27**

Acceleration **15g**

Duration **11 ms**

Airgap creepage

Overvoltage category **II**

Pollution degree **2**

Rated insulation voltage

30 V

Rated impulse withstand voltage

2,5 kV

Protection type

in accordance with the standard **EN 60529**

Housing **IP20**

Terminals **IP20**

Mounting area (e.g. control cabinet) **IP54**

Mechanical data

Mounting position **horizontally on mounting rail**

Link modules PNOZ mml1p

Mechanical data

DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Max. cable length between two link modules	
	1 km
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	
	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	
	0,5 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	
	2
Stripping length with spring-loaded terminals	
	9 mm
Dimensions	
Height	100 mm
Width	22,5 mm
Depth	120 mm
Weight	
	95 g

Where standards are undated, the 2011-01 latest editions shall apply.

Link modules PNOZ mml1p

Order reference

Product

Product type	Features	Order no.
PNOZ mml1p	Expansion module	772020

Accessories

Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmc2p, mml1p 1 pc.	Spring-loaded terminals, 1 piece	783538
Spring terminals PNOZ mmc2p, mml1p 10 pcs	Spring-loaded terminals, 10 pieces	783539
Screw terminals PNOZ mmc2p, mml1p 1 pc.	Screw terminals, 1 piece	793538
Screw terminals PNOZ mmc2p, mml1p 10 pcs.	Screw terminals, 10 pieces	793539

Terminator, jumper

Product type	Features	Order no.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779260

Link modules PNOZ mml2p



Overview

Unit features

Application of the product PNOZ mml2p:


Link module to safely connect decentralised input/output modules to a configurable control system PNOZmulti Mini.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Max. 4 PNOZ mml2p can be connected to the base unit
- ▶ Max. 4 decentralised modules can be connected to the link module PNOZ mml2p
- ▶ LEDs for
 - Operating state
 - Error
 - Connection status
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).

Link modules PNOZ mml2p

Front view

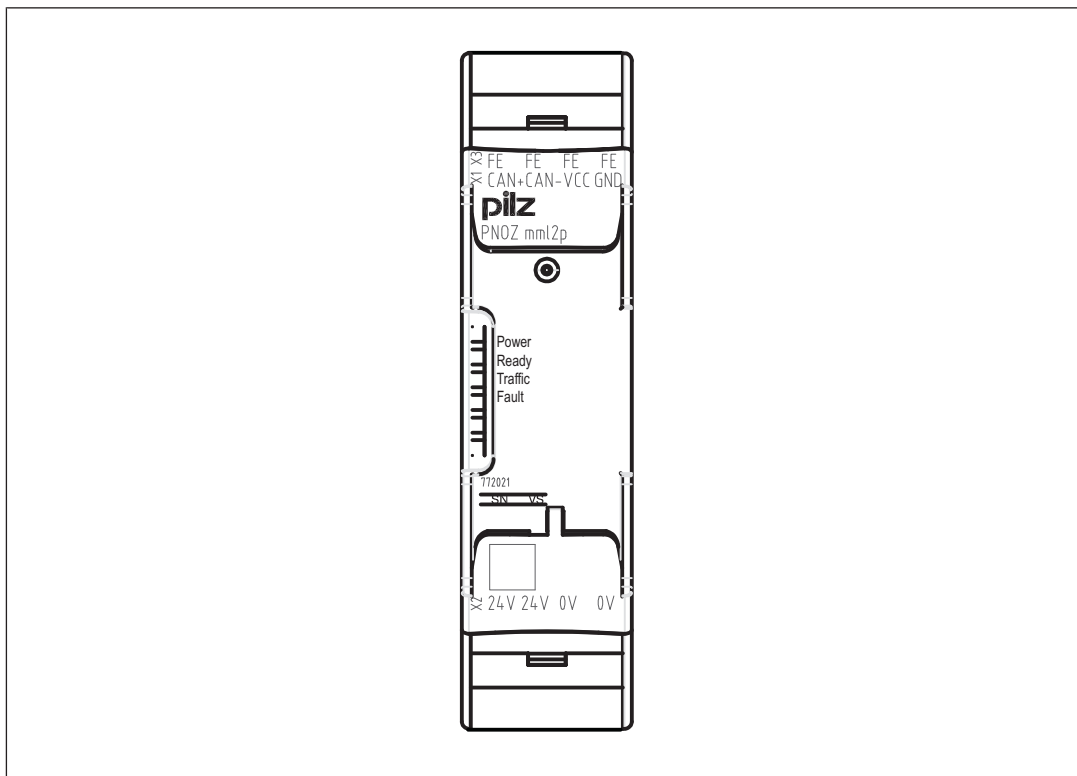

Key:

- ▶ 0 V, 24 V:
Supply connections
- ▶ CAN+, CAN-, VCC, GND:
Connection for decentralised modules
- ▶ FE:
Functional earth

Function description

Operation

The link module PNOZ mml2p is used to safely transfer the input information from decentralised modules to the safety system PNOZmulti.

The function of the inputs and outputs on the control system depends on the safety circuit created using the PNOZmulti Configurator. A chip card is used to download the safety circuit to the base unit. The base unit has 2 microcontrollers that monitor each other. They evaluate the input circuits on the base unit and expansion modules and switch the outputs on the base unit and expansion modules accordingly.

The LEDs on the base unit and expansion modules indicate the status of the configurable control system PNOZmulti.

Link modules PNOZ mml2p

The online help on the PNOZmulti Configurator contains descriptions of the operating modes and all the functions of the control system, plus connection examples.


Data exchange:

- ▶ Communication with the decentralised modules is via a safe data link.
- ▶ The link module PNOZ mml2p reads the input information from the decentralised modules as part of each cycle and then forwards it to the base unit.
- ▶ At the end of a PNOZmulti cycle, the base unit sends its output data to its link module. This output data is immediately sent to the decentralised modules.

Linking several decentralised modules:

- ▶ A maximum of 4 link modules can be connected to a base unit PNOZmulti Mini.
- ▶ A maximum of 4 decentralised modules can be connected to a link module PNOZ mml2p.
- ▶ If a decentralised module receives data intended for a different decentralised module that is connected, the data is forwarded without being processed.

Block diagram

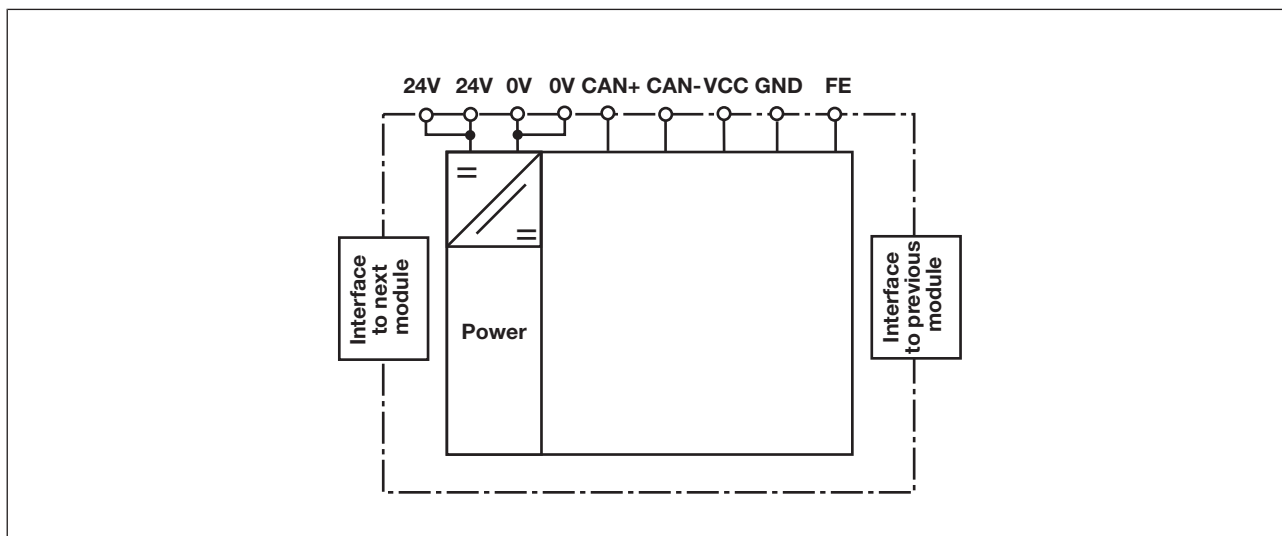


Link modules

PNOZ mml2p

Installation

Dimensions

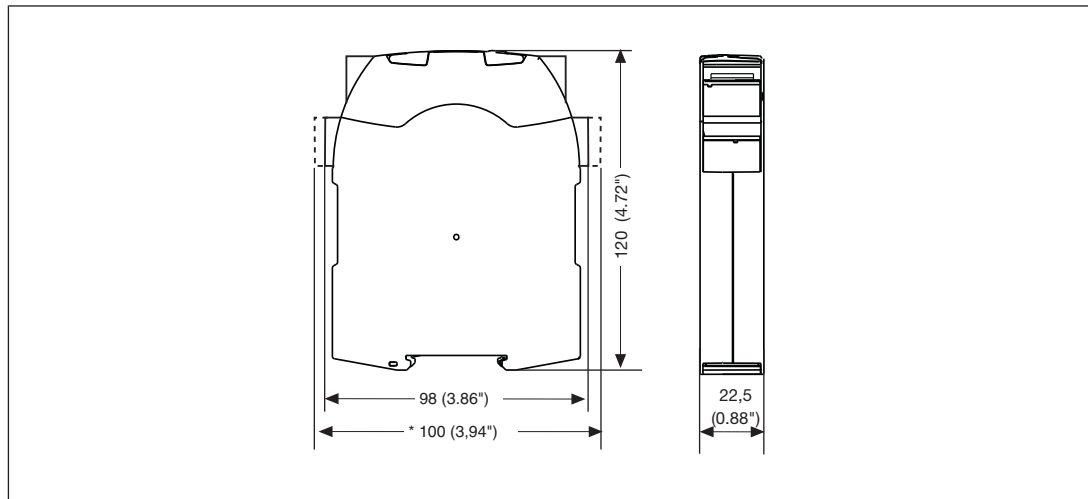

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[576\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ External measures must be used to connect the FE terminal to the function earth (e.g. mounting rail).
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).
- ▶ Two connection terminals are available for each of the supply connections 24 V and 0 V (semiconductor outputs), plus A1 and A2 (power supply). This means that the supply voltage can be looped through several connections. When the supply voltage is looped, the current at each terminal may not exceed 3 A.
- ▶ Please refer to the technical details for information on the maximum cable length. Please also read the section entitled [Voltage drop \[574\]](#).
- ▶ With a cable length of 30 m or above, or in environments with strong interfaces, shielded cables must be used.

Link modules PNOZ mml2p

- ▶ If there are signal interferences/EMC problems that are to be expected or present, we recommend that you use a shielded cable from the beginning. In addition, you can place the braided shield of the cables directly next to the device via a shielded terminal to the functional earth (mounting rail).
- ▶ Pilz pre-assembled cables can be used to connect the decentralised modules (see [Order references](#) [579]).
- ▶ The plug-in connection terminals are either designed as cage clamp terminals or screw terminals (see [Order references](#) [579]).


Insulation voltage test

The product PNOZ mml2p is connected to functional earth via protection elements on the supply voltage. Insulation voltage tests are only possible with voltages up to ca. 42 V.

Connection


Supply voltage	AC	DC
	/	

Supply voltage

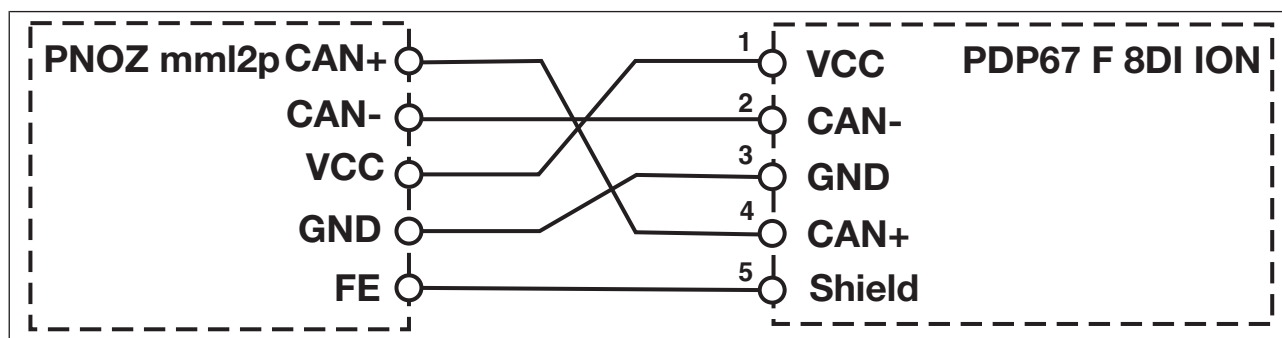

Connection to a decentralised input module PDP67


Link modules PNOZ mml2p

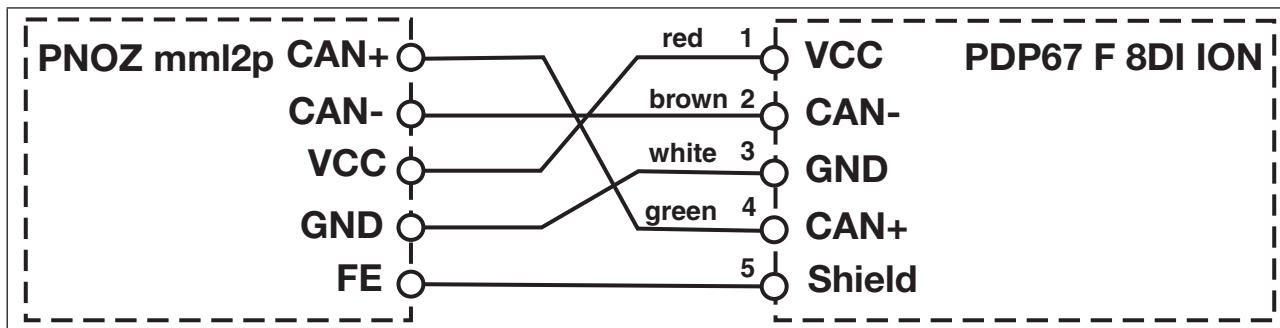

Connection when using the PSS SB BUSCABLE LC in conjunction with a Pilz self-assembly "PSS67 M12 connector" (see order reference in the Technical Catalogue)

Series connection of 4 decentralised modules

You can connect up to 4 decentralised modules in series to a PNOZmulti link module.

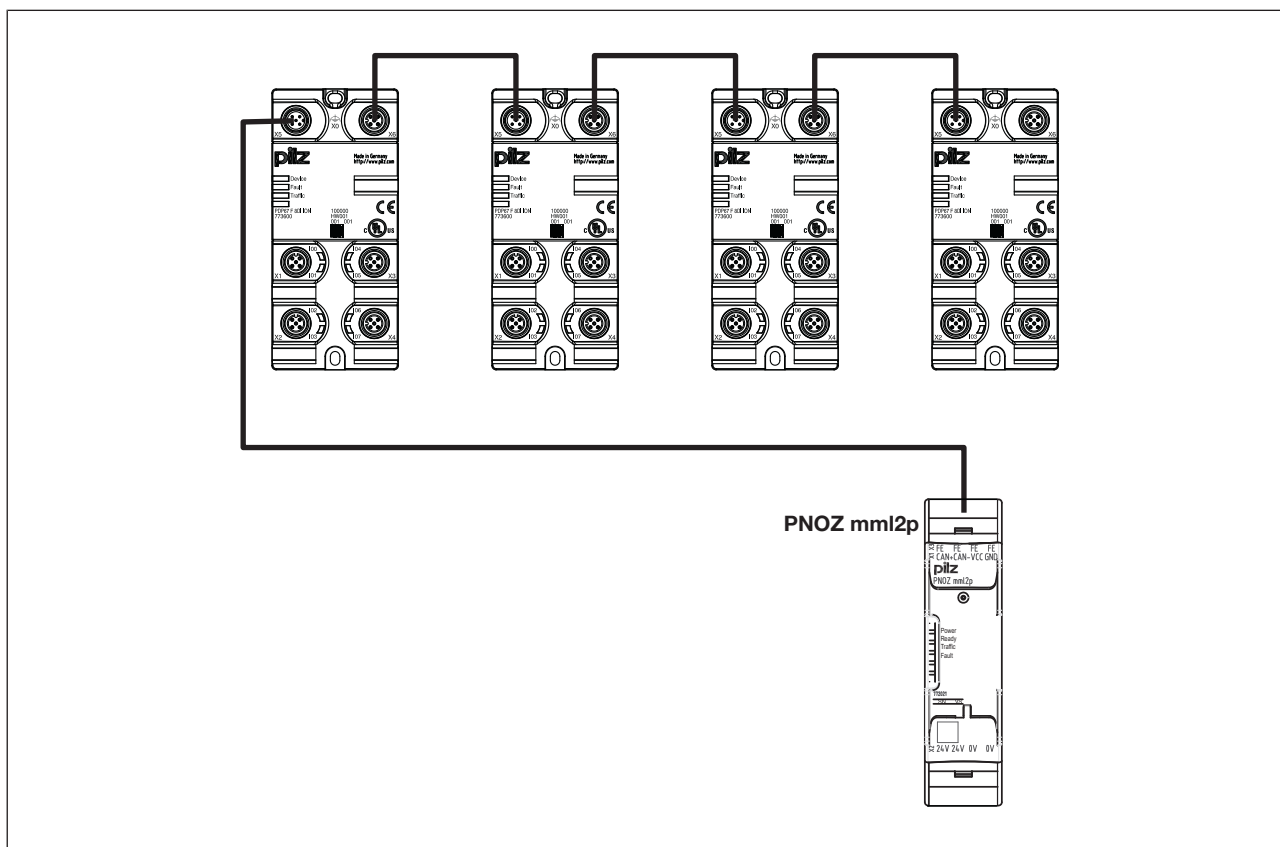

Voltage drop

The max. cable length depends on the voltage drop in the supply voltage cables. The level of voltage drop is determined by the:

- ▶ Cable resistance on the supply voltage cables
- ▶ Operating current of the modules

Link modules PNOZ mml2p

- ▶ Load on the modules


To increase the max. cable length, the input voltage can be permanently increased by the voltage tolerance (see Technical Details).

Guidelines for various cable types

Cable type	Voltage drop per 10 m and per 100 mA
PSS SB BUSCABLE LC	0.1 V
Sensor cable 0.25 mm ²	0.15 V
Sensor cable 0.34 mm ²	0.11 V
Sensor cable 0.5 mm ²	0.07 V

Calculation example

- ▶ The PSS SB BUSCABLE LC is used in accordance with the pin assignment in section 6.2.2.
Voltage drop per 10 m and per 100 mA: 0.1 V

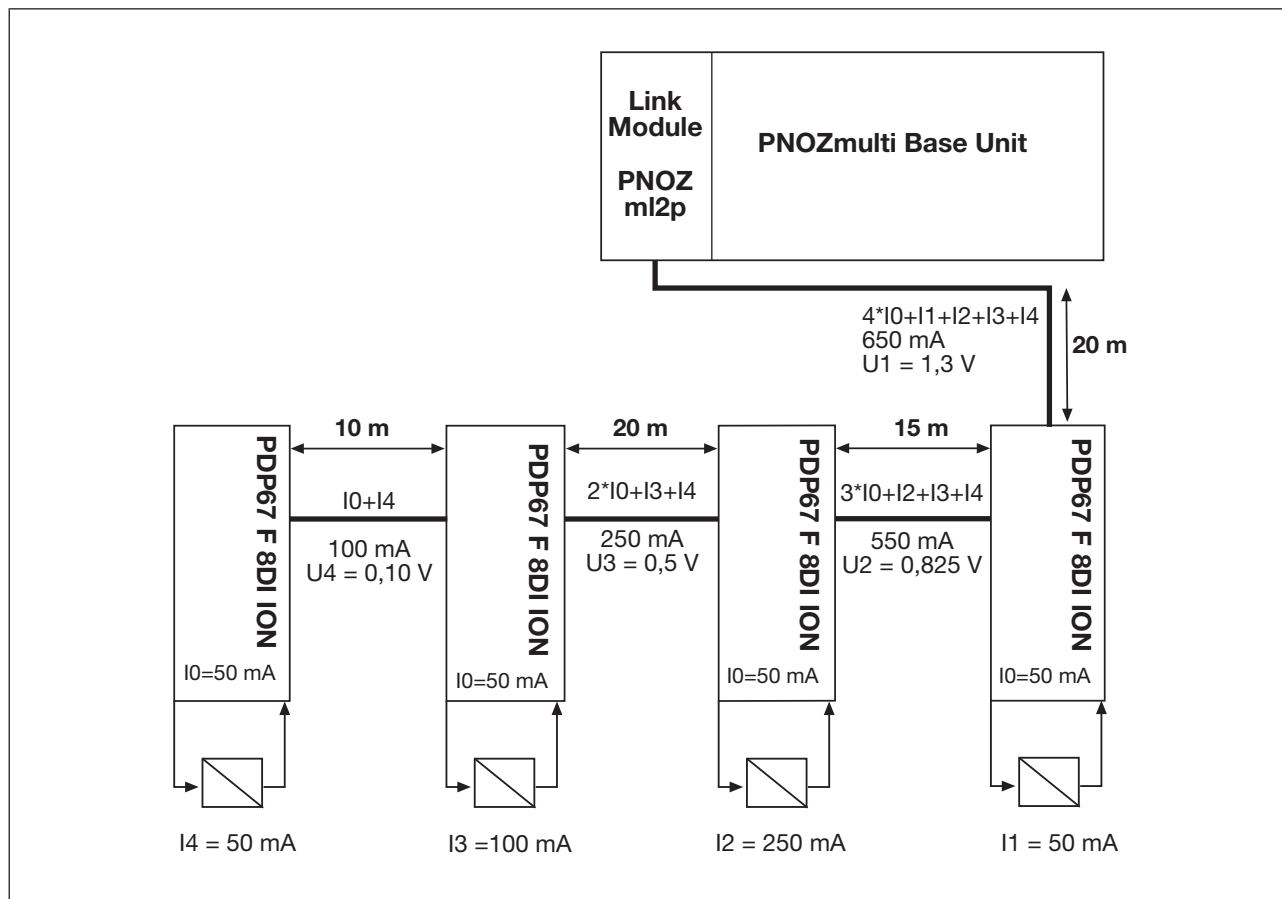

Link modules PNOZ mml2p

Key:

- ▶ I0: Module's consumption.
- ▶ I1 ... I5: Load current taken from the module
- ▶ U1 ... U4: Voltage drop on the respective connection path

Total voltage drop from the link module PNOZ mml2p to the final PDP67 F 8DI ION:

$$U_{\text{total}} = U_1 + U_2 + U_3 + U_4$$

$$U_{\text{total}} = 1.3 \text{ V} + 0.825 \text{ V} + 0.5 \text{ V} + 0.10 \text{ V} = 2.725 \text{ V}$$

Technical details

General	
Certifications	CE, EAC, KOSHA, TÜV, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-15 %/+20 %
Output of external power supply (DC)	101 W
Output of external power supply (DC) at no load	5 W
Residual ripple DC	5 %
Status indicator	LED
Inputs	
Maximum input delay	15 ms
Semiconductor outputs	
Switch-off delay	35 ms
Test pulse outputs	
Maximum output current, decentralised module supply	4 A
Short circuit protection of decentralised module supply	Yes
Times	
Switch-on delay	5 s
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C

Link modules PNOZ mml2p

Environmental data

Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Number of shocks	3
Acceleration	15g
Duration	11 ms
in accordance with the standard	EN 60068-2-27
Number of shocks	500
Acceleration	25g
Duration	6 ms
Airgap creepage	
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Rated impulse withstand voltage	0,5 kV
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Max. cable length unshielded	30 m
Max. cable length shielded	100 m

Link modules PNOZ mml2p

Mechanical data

Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm ² , 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm ² , 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,2 - 2,5 mm ² , 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100 mm
Width	22,5 mm
Depth	120 mm
Weight	98 g

Where standards are undated, the 2011-01 latest editions shall apply.

Link modules PNOZ mml2p

Order reference

Product

Product type	Features	Order no.
PNOZ mml2p	Link module	772021

Accessories

Adapter

Product type	Features	Order no.
PSEN ma adapter	Adapter for connection to safety switch PSENmag	380300
PSEN cs adapter	Adapter for connection to safety switch PSENcode	380301
PSEN sl adapter	Adapter for connection to safety switch PSENslock	380325

Cable

Product type	Features	Order no.
PSS SB BUSCABLE LC	Cable, shielded, 1 - 100 m	311074
PSS67 I/O Cable	Cable, 1 - 30 m	380320
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 3 m	380200
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 5 m	380201
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 10 m	380202
PSS67 Cable M8sf M12sm	Cable, straight M12 connector, straight M8 socket, 4-pin, 30 m	380203
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 3 m	380204
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 5 m	380205
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 10 m	380206
PSS67 Cable M8af M12sm	Cable, straight M12 connector, angled M8 socket, 4-pin, 30 m	380207
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 3m	380208
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 5 m	380209

Link modules PNOZ mml2p

Product type	Features	Order no.
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 10 m	380210
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 20 m	380220
PSS67 Cable M12sf M12sm	Cable, straight M12 connector, straight M12 socket, 5-pin, 30 m	380211
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 3m	380212
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 5 m	380213
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 10 m	380214
PSS67 Cable M12af M12am	Cable, angled M12 connector, angled M12 socket, 5-pin, 30 m	380215
PSEN op cable axial M12 5-pole 3m	Cable, straight, M12, 5-pin, open-ended socket, 3 m	630310
PSEN op cable axial M12 5-pole 5m	Cable, straight, M12, 5-pin, open-ended socket, 5 m	630311
PSEN op cable axial M12 5-pole 10m	Cable, straight, M12, 5-pin, open-ended socket, 10 m	630312
PSEN op cable axial M12 5-pole 20m	Cable, straight, M12, 5-pin, open-ended socket, 20 m	630298
PSEN op cable axial M12 5-pole 30m	Cable, straight, M12, 5-pin, open-ended socket, 30 m	630297

Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mml2p 1 pc.	Spring-loaded terminals, 1 piece	783540
Spring terminals PNOZ mml2p 10 pcs.	Spring-loaded terminals, 10 pieces	783541
Screw terminals PNOZ mml2p 1 pc.	Screw terminals, 1 piece	793540
Screw terminals PNOZ mml2p 10 pcs.	Screw terminals, 10 pieces	793541

Terminator, jumper

Product type	Features	Order no.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779260

Link modules PNOZ mml2p

Connectors

Product type	Features	Order no.
PSS67 M12 connector	Connector, M12, straight, 5-pin, A-coded	380308
PSS67 M12 connector	Socket, M12, straight, 5-pin, A-coded	380309
PSS67 M12 connector	Connector, M12, angled, 5-pin, A-coded	380310
PSS67 M12 connector	Socket, M12, angled, 5-pin, A-coded	380311
PSS67 M8 connector	Connector, M8, straight, 4-pin	380316
PSS67 M8 connector	Socket, M8, straight, 4-pin	380317
PSS67 M8 connector	Connector, M8, angled, 4-pin	380318
PSS67 M8 connector	Socket, M8, angled, 4-pin	380319

Communication modules PNOZ mmc1p



Overview

Unit features

Application of the product PNOZ mmc1p:

Communication module for connection to a base unit from the configurable control systems PNOZmultiMini.


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ 2 Ethernet interfaces
- ▶ Status indicators for supply voltage, communication and errors
- ▶ Max. 1 communication module can be connected to the left of the base unit PNOZmulti Mini

Communication modules

PNOZ mmc1p

Front view

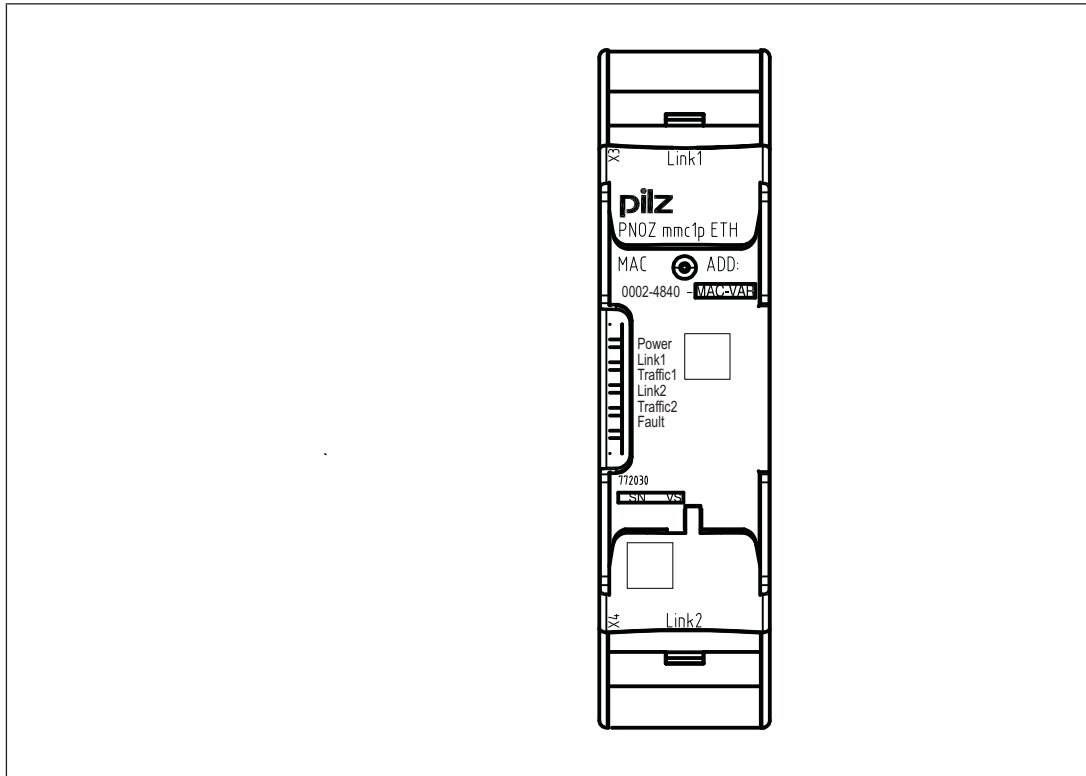

Legend:

- ▶ Link1, Link2:
Ethernet interfaces
- ▶ LEDs:
 - Power
 - Link1
 - Traffic1
 - Link2
 - Traffic2
 - Fault

Function description

Unit properties

The product PNOZ mmc1p has two Ethernet interfaces to

- ▶ Download the project
- ▶ Read the diagnostic data

Communication modules

PNOZ mmc1p

- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions


via Ethernet (TCP/IP, Modbus/TCP).

Information on diagnostics via the Ethernet interfaces can be found in the document entitled "PNOZmulti Mini communication interfaces".

The connection to Ethernet is made via the two 8-pin RJ45 sockets.


The Ethernet interface is configured in the PNOZmulti Configurator and is described in the online help for the PNOZmulti Configurator.

Block diagram

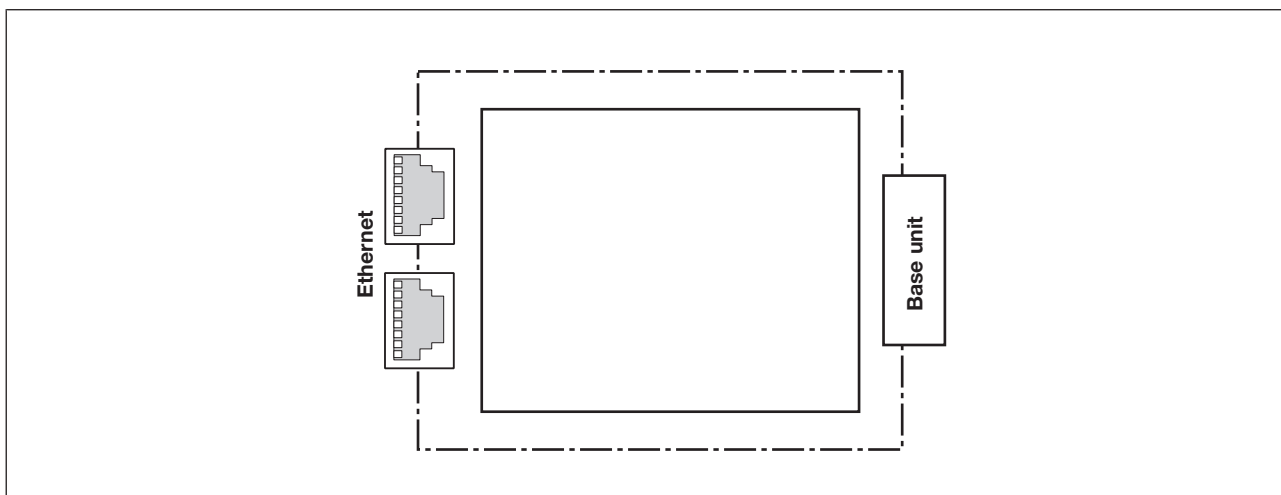

Installation

Dimensions

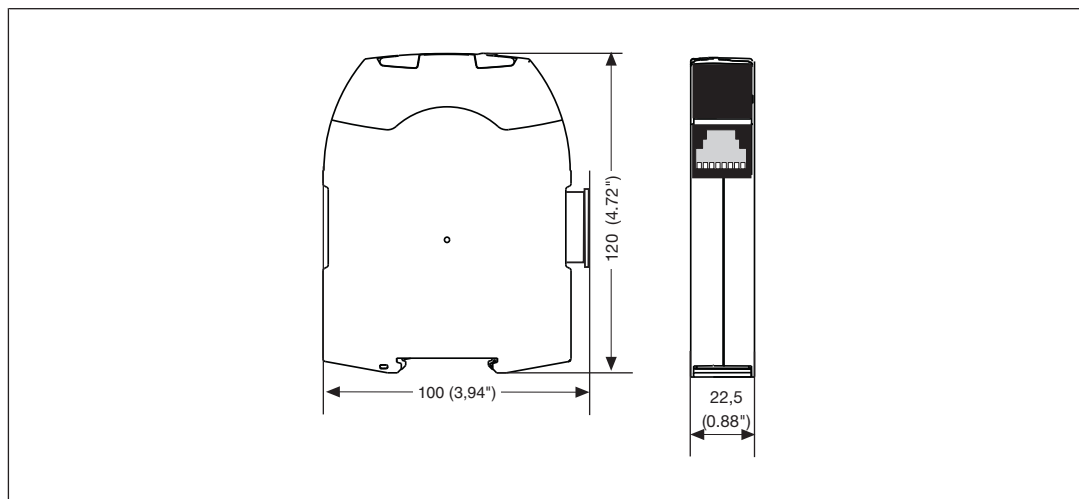

Communication modules

PNOZ mmc1p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[588\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Preparing for operation

Detection and activation of the Ethernet interface, depending on the USB interface on the base unit:

- ▶ **USB interface on the base unit not connected**

If the USB interface on the base unit is not connected, the Ethernet interface will be detected and activated by the base unit as soon as the communication module has been connected to the base unit.

- ▶ **USB interface on the base unit connected**

If the USB interface on the base unit is already connected, the "Ethernet" interface will first need to be selected on the base unit display to enable the Ethernet interface on the base unit to be detected and activated (see operating manual for the base unit for details of the setting).

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Ethernet interfaces

RJ45 interfaces ("Ethernet")

Two free switch ports are provided as Ethernet interfaces via an internal autosensing switch. The autosensing switch automatically detects whether data transfer is occurring at 10 Mbit/s or 100 Mbit/s.

The switch's automatic crossover function means there is no need to distinguish on the connection cable between patch cable (uncrossed data line connection) and crossover cable (crossover data line connection). The switch automatically creates the correct data line connection internally. Patch cable can therefore be used as the connection cable for end devices as well as cascading.

Both Ethernet interfaces use RJ45 technology.

Communication modules


PNOZ mmc1p

Requirements of the connection cable and connector


The following minimum requirements must be met:

- ▶ Ethernet standards (min. Category 5) 10BaseT or 100BaseTX
- ▶ Double-shielded twisted pair cable for industrial Ethernet use
- ▶ Shielded RJ45 connectors (industrial connectors)

Interface configuration

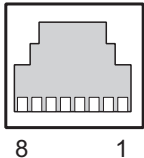RJ45 socket			
8-pin	PIN	Standard	Crossover
	1	TD+ (Transmit+)	RD+ (Receive+)
	2	TD- (Transmit-)	RD- (Receive-)
	3	RD+ (Receive+)	TD+ (Transmit+)
	4	n.c.	n.c.
	5	n.c.	n.c.
	6	RD- (Receive-)	TD- (Transmit-)
	7	n.c.	n.c.
	8	n.c.	n.c.

RJ45 connection cable

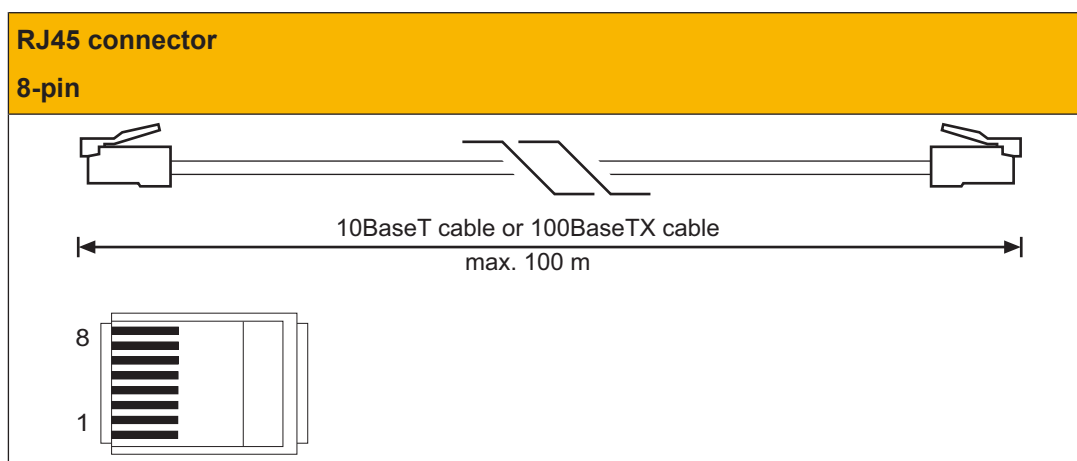

Process data exchange

The RJ45 interfaces on the internal autosensing switch enable process data to be exchanged with other Ethernet subscribers within a network.

The product PNOZ mmc1p can also be connected to Ethernet via a hub (hub or switch).

Communication modules PNOZ mmc1p

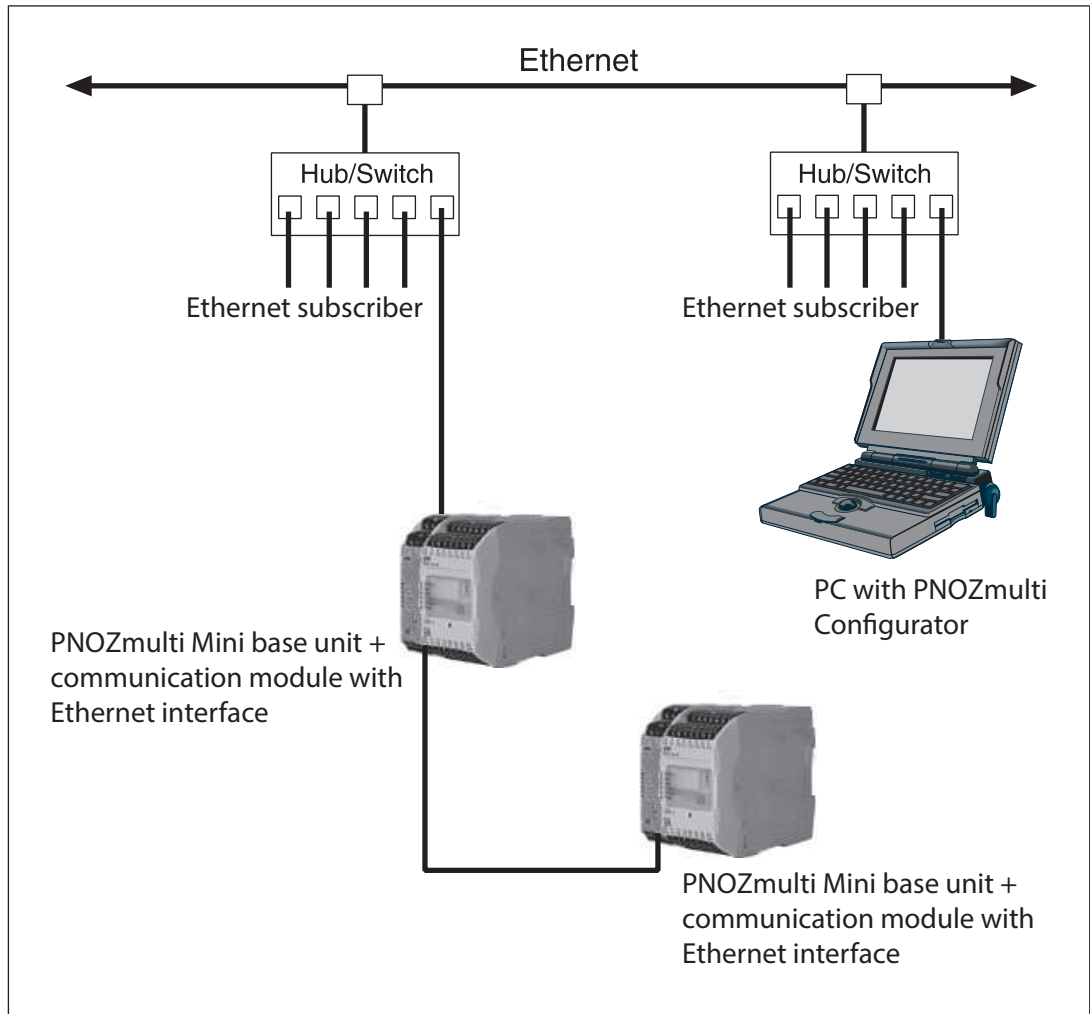


Fig.: PNOZmulti as Ethernet subscriber - possible topologies

Communication modules

PNOZ mmc1p

Technical details

General	
Certifications	CE, EAC, KCC, KOSHA, UKCA, cULus Listed
Electrical data	
Supply voltage	Module supply
for	Via base unit
internal	3,3 V
Voltage	DC
Kind	-2 %/+2 %
Voltage tolerance	1 W
Power consumption	LED
Status indicator	
Ethernet interface	
Quantity	2
Fieldbus interface	
Fieldbus interface	Modbus/TCP
Device type	Slave
Connection	RJ45
Galvanic isolation	Yes
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Communication modules

PNOZ mmc1p

Environmental data

Airgap creepage

Overvoltage category	II
Pollution degree	2

Rated insulation voltage	30 V
--------------------------	------

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Mechanical data

Mounting position	horizontally on mounting rail
-------------------	-------------------------------

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Cable length

Max. cable length per input	0,1 km
-----------------------------	--------

Material

Bottom	PC
Front	PC
Top	PC

Dimensions

Height	100 mm
Width	22,5 mm
Depth	120 mm

Weight	100 g
--------	-------

Where standards are undated, the 07/2010 latest editions shall apply.

Communication modules

PNOZ mmc1p

Order reference

Product

Product type	Features	Order no.
PNOZ mmc1p ETH	Expansion module	772030

Accessories

Terminator, jumper

Product type	Features	Order no.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750010
PNOZ s connector	Jumper, 10 pieces	750020

Communication modules PNOZ mmc2p



Overview

Unit features

Application of the product PNOZ mmc2p:

Communication module for connection to a base unit from the configurable control systems PNOZmultiMini.


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ 1 serial interface RS232
- ▶ Status indicator for supply voltage
- ▶ Max. 1 communication module can be connected to the left of the base unit PNOZmulti Mini
- ▶ Plug-in connection terminals (either cage clamp terminals or screw terminals)

Communication modules

PNOZ mmc2p

Front view

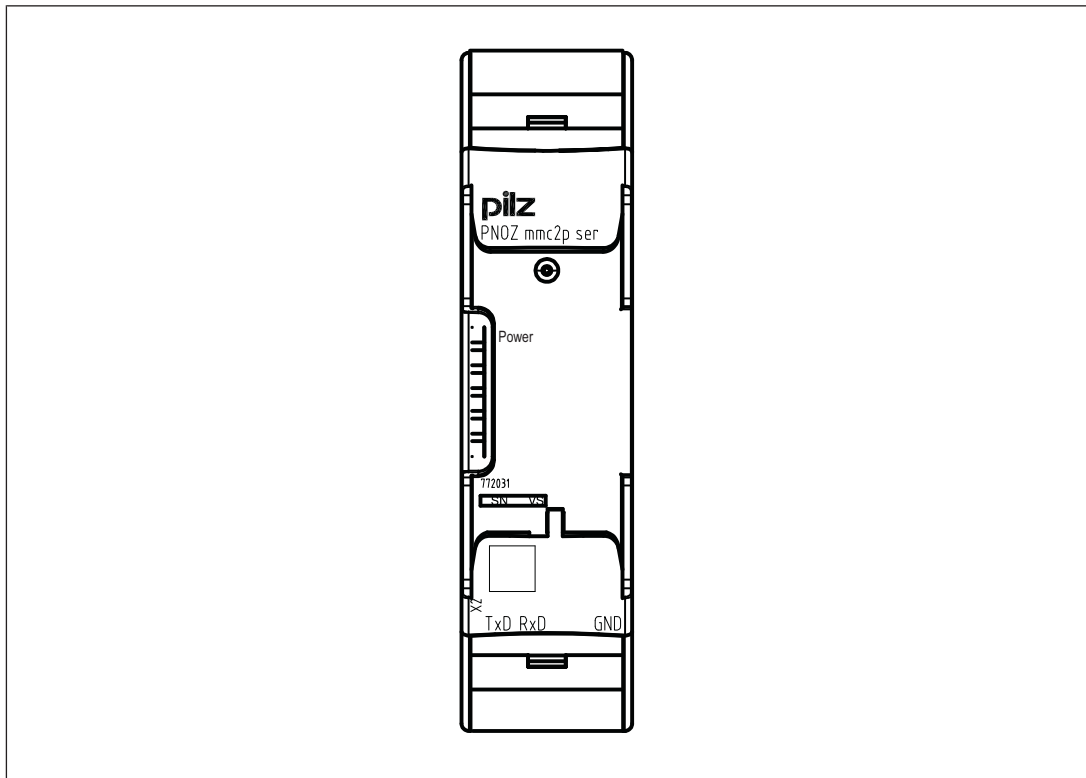

Legend:

- ▶ X2: Serial interface RS232
- ▶ LED:
 - Power

Function description

Functions


The product PNOZ mmc2p has a serial interface RS232 interface to

- ▶ Download the project
- ▶ Read the diagnostic data
- ▶ Set virtual inputs for standard functions
- ▶ Read virtual outputs for standard functions.

Information on diagnostics can be found in the document "Communication Interfaces".


Communication modules PNOZ mmc2p

Block diagram

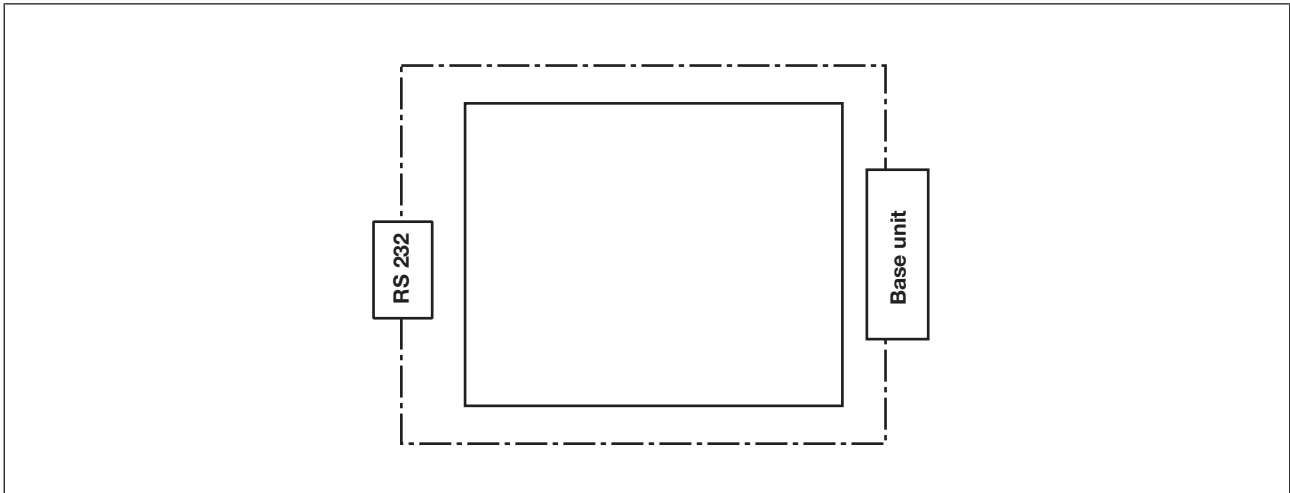

Installation

Dimensions

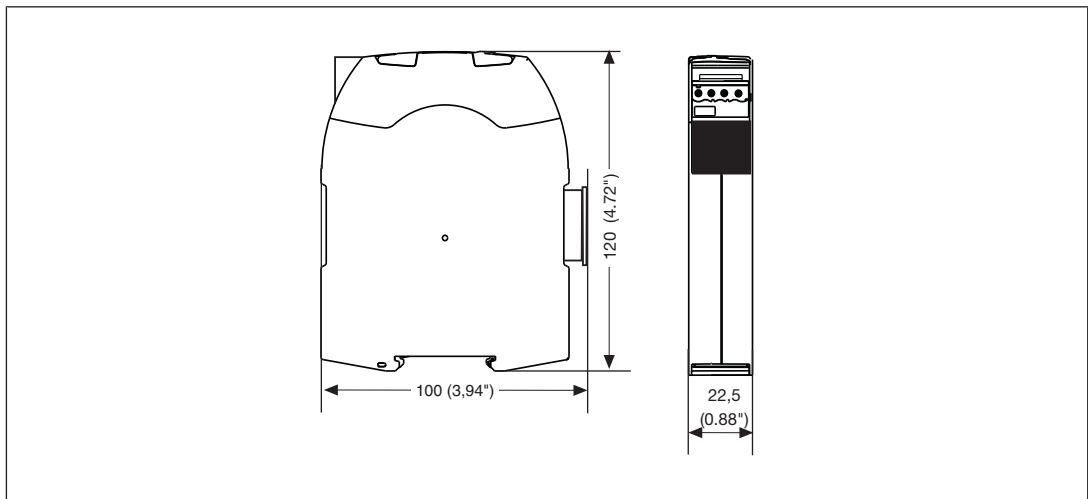

Communication modules

PNOZ mmc2p

Commissioning


General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[595\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Interface configuration

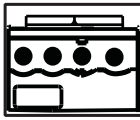Serial interface RS232	Standard
 TxD RxD GND	TxD (Transmit)
	RxD (Receive)
	GND (Ground)

Preparing for operation

The serial interface RS 232 is activated and detected depending on the USB interface on the base unit:

- ▶ **USB interface on the base unit not connected**
In this case, the serial interface RS 232 will be detected and activated by the base unit as soon as the communication module has been connected to the base unit.
- ▶ **USB interface on the base unit connected**
If the USB interface on the base unit is already connected, the "External" interface will first need to be selected on the base unit display to enable the serial interface RS 232 on the base unit to be detected and activated (see operating manual for the base unit for details of the setting).

Communication modules PNOZ mmc2p

Technical details

General	
Certifications	CE, EAC, KOSHA, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	3,3 V
Kind	DC
Voltage tolerance	-2 %/+2 %
Power consumption	30 mW
Status indicator	LED
Fieldbus interface	
Galvanic isolation	No
Serial interface	
Number of RS232 interfaces	1
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
Overvoltage category	II
Pollution degree	2

Communication modules PNOZ mmc2p

Environmental data

Rated insulation voltage **30 V**

Protection type

in accordance with the standard **EN 60529**

Housing **IP20**

Terminals **IP20**

Mounting area (e.g. control cabinet) **IP54**

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail **35 x 7,5 EN 50022**

Recess width **27 mm**

Cable length

Max. cable length per input **22 m**

Material

Bottom **PC**

Front **PC**

Top **PC**

Connection type **Spring-loaded terminal, screw terminal**

Conductor cross section with screw terminals

1 core flexible **0,5 - 1,5 mm², 22 - 12 AWG**

2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors **0,2 - 1,5 mm², 24 - 16 AWG**

Torque setting with screw terminals **0,5 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,2 - 2,5 mm², 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection

2

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **100 mm**

Width **22,5 mm**

Depth **120 mm**

Weight **85 g**

Where standards are undated, the 07/2010 latest editions shall apply.

Communication modules

PNOZ mmc2p

Order reference

Product

Product type	Features	Order no.
PNOZ mmc2p serial	Expansion module	772031

Accessories

Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmc2p, mml1p 1 pc.	Spring-loaded terminals, 1 piece	783538
Spring terminals PNOZ mmc2p, mml1p 10 pcs	Spring-loaded terminals, 10 pieces	783539
Screw terminals PNOZ mmc2p, mml1p 1 pc.	Screw terminals, 1 piece	793538
Screw terminals PNOZ mmc2p, mml1p 10 pcs.	Screw terminals, 10 pieces	793539

Terminator, jumper

Product type	Features	Order no.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750010
PNOZ s connector	Jumper, 10 pieces	750020

Fieldbus modules PNOZ mmc3p



Overview

Unit features

Application of the product PNOZ mmc3p:


Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for PROFIBUS-DP
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Status indicators for communication with PROFIBUS-DP and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus PROFIBUS-DP . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc3p can be connected to the base unit
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti Mini that can be connected.

Fieldbus modules PNOZ mmc3p

Front view

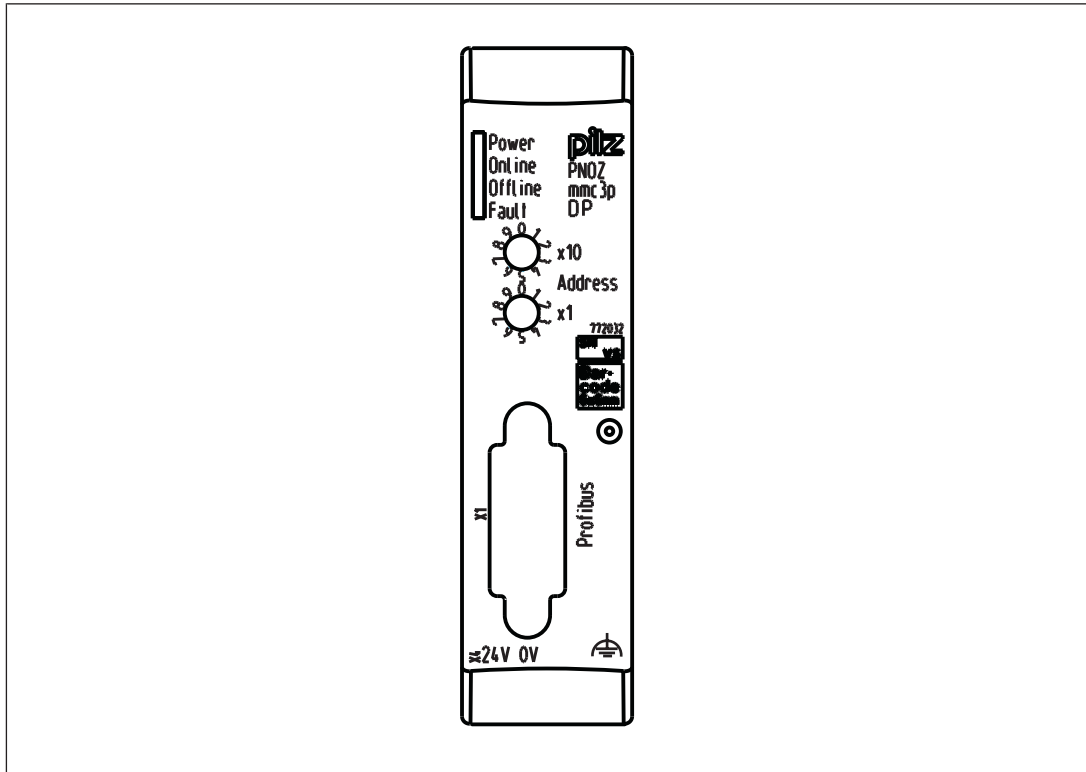

Legend:

- ▶ 0 V, 24 V:
Supply connections
- ▶ X1: PROFIBUS-DP interface (female 9-pin D-Sub connector)
- ▶ : Functional earth
- ▶ LED:
 - Power
 - Online
 - Offline
 - Fault

Fieldbus modules

PNOZ mmc3p

Function description

Operation

The virtual inputs and outputs that are to be transferred via PROFIBUS are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc3p are connected via a jumper.

The station address is set via rotary switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc3p is configured and started automatically.

LEDs indicate the status of the expansion module on PROFIBUS.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

Assigning the inputs/outputs in the PNOZmulti Configurator to the PROFIBUS-DP inputs/outputs


Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23

Fieldbus modules PNOZ mmc3p

Output data PROFIBUS-DP	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
-------------------------	----------------------	----------------------	----------------------


The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Block diagram

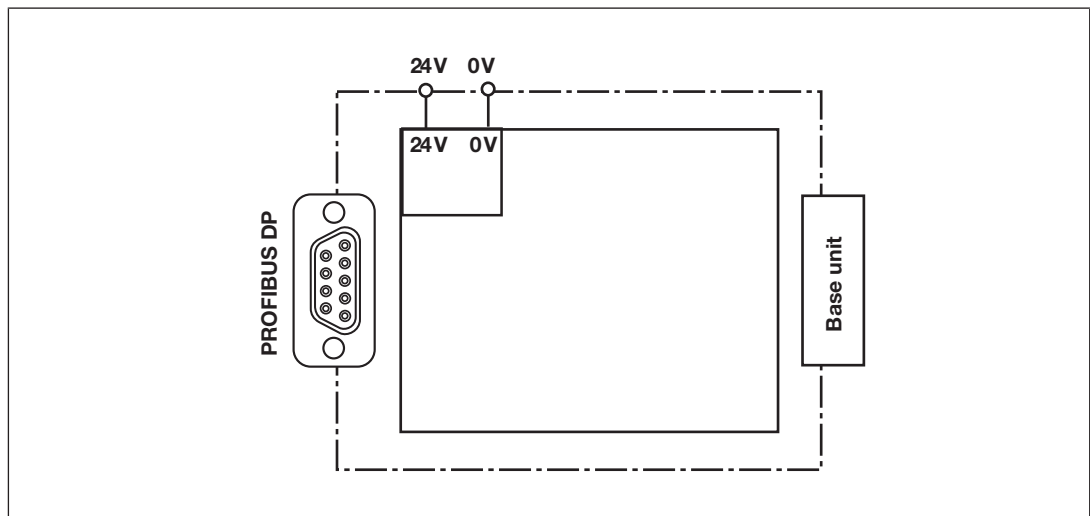

Installation

Dimensions in mm

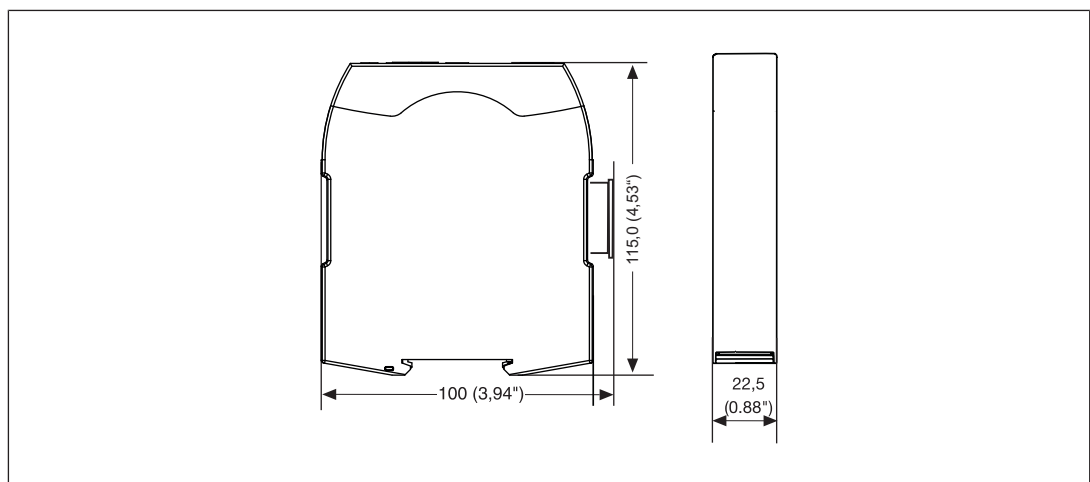

Fieldbus modules


PNOZ mmc3p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[614\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).


Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
 - Circuit breaker, characteristic C - 6 A
 - or
 - Blow-out fuse, slow, 6A

PROFIBUS DP interface

It is possible to define which outputs on the control system will communicate with PROFIBUS-DP. The connection to PROFIBUS-DP is made via a female 9-pin D-Sub connector in accordance with the guidelines of the PROFIBUS User Group (PNO).

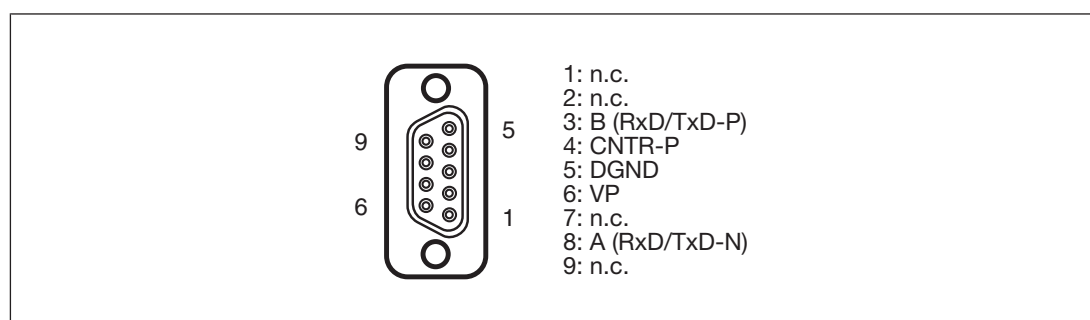

Fieldbus modules

PNOZ mmc3p


n.c. = not connected

Please note the following when connecting to PROFIBUS-DP:


- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

Setting the station address

The station address of the expansion module PNOZ mmc3p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

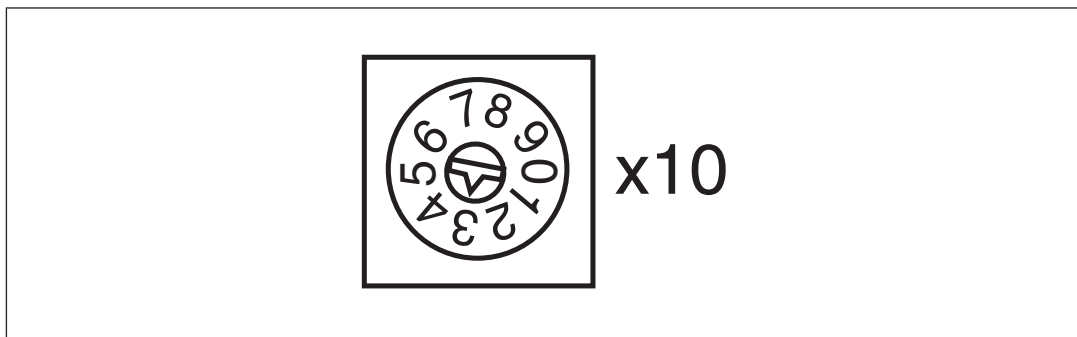

- ▶ On the upper rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

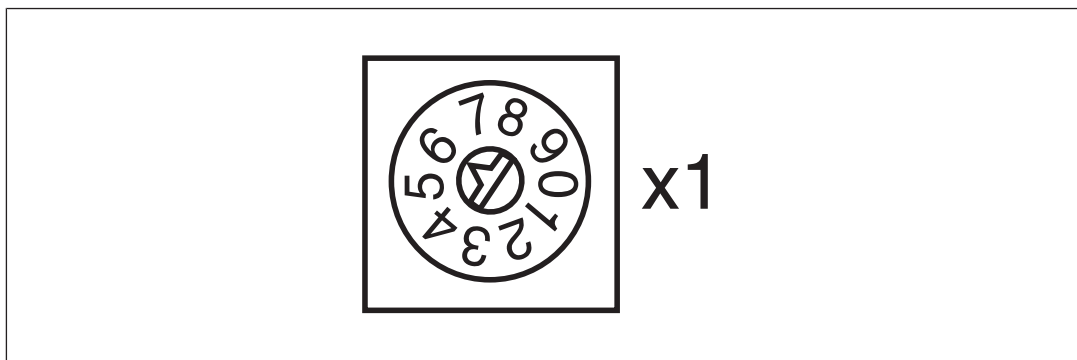

- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example).


Station address 36 is set in the diagrams as an example.

Download modified project to the control system PNOZmulti

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Fieldbus modules PNOZ mmc3p

Connection example

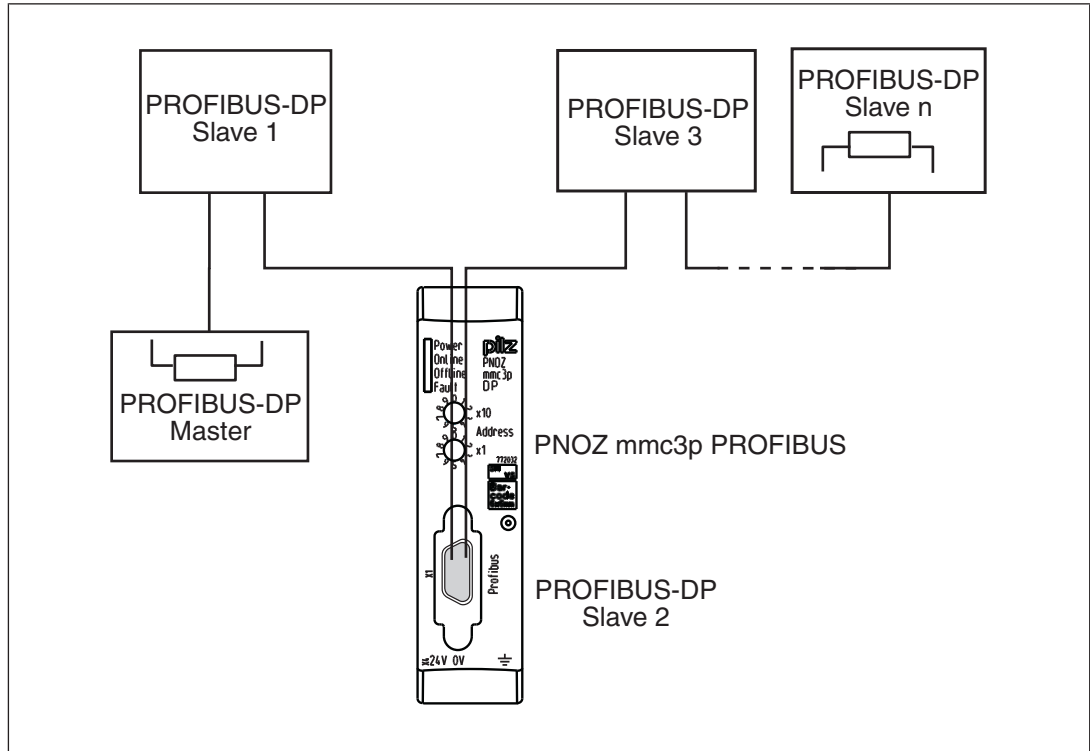

Fieldbus modules PNOZ mmc3p

Technical details

General	
Certifications	CE, EAC, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Output of external power supply (DC)	1,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	PROFIBUS-DP
Device type	Slave DPV0
Station address	0 - 99d
Transmission rate	9,6 kBit/s - 12 MBit/s
Connection	9-pin D-Sub female connector
Galvanic isolation	Yes
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Fieldbus modules PNOZ mmc3p

Environmental data

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2

Rated insulation voltage **30 V**

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between **Fieldbus and module voltage**

Type of potential isolation **Functional insulation**

Rated surge voltage **500 V**

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PC
Front	PC
Top	PC

Connection type **Spring-loaded terminal, screw terminal**

Conductor cross section with screw terminals

1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG

Torque setting with screw terminals **0,5 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,2 - 2,5 mm², 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Stripping length with spring-loaded terminals **9 mm**

Fieldbus modules PNOZ mmc3p

Mechanical data

Dimensions

Height	100 mm
Width	22,5 mm
Depth	115 mm

Weight	95 g
--------	------

Where standards are undated, the 2011-09 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mmc3p	Fieldbus module, PROFIBUS-DP	772032

Accessories


Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmc3p 1 pc.	Spring-loaded terminals, 1 pieces	783542
Spring terminals PNOZ mmc3p 10 pcs.	Spring-loaded terminals, 10 pieces	783543
Screw terminals PNOZ mmc3p 1 pc.	Screw terminals, 1 piece	793542
Screw terminals PNOZ mmc3p 10 pcs.	Screw terminals, 10 pieces	793543

Terminator, jumper

Product type	Features	Order no.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750010
PNOZ s connector	Jumper, 10 pieces	750020

Fieldbus modules PNOZ mmc4p

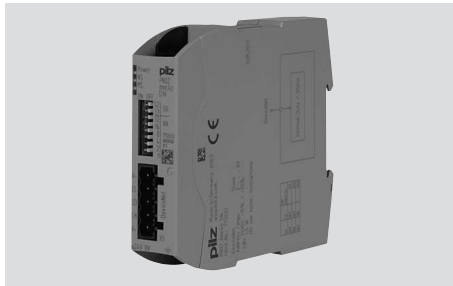

Overview

Unit features

Application of the product PNOZ mmc4p:


Expansion module for connection to a base unit from the PNOZmulti Mini system.

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for DeviceNet
- ▶ Station addresses from 0 ... 63 can be selected via DIP switches
- ▶ Status indicators for communication with DeviceNet and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus DeviceNet . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc4p can be connected to the base unit
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti Mini that can be connected.

Fieldbus modules PNOZ mmc4p

Front view

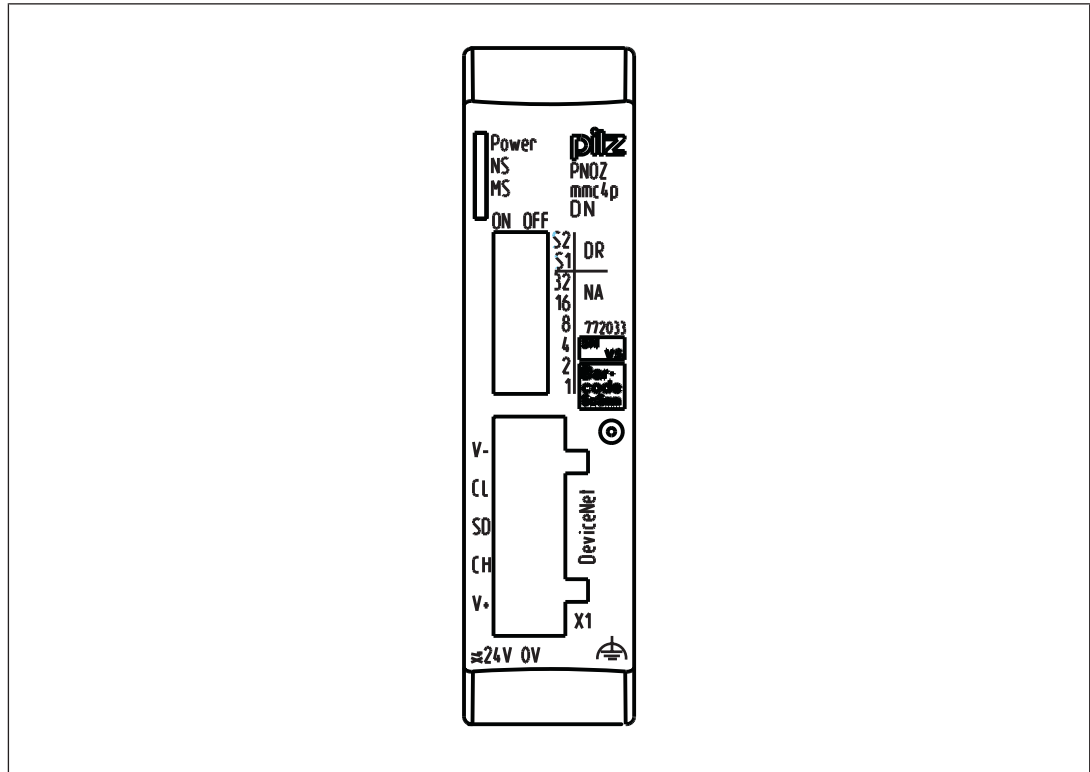

Legend:

- ▶ 0 V, 24 V:
Supply connections
- ▶ X1: DeviceNet interface (5-pin screw connector)
- ▶ : Functional earth
- ▶ LED:
 - Power
 - NS
 - MS

Fieldbus modules

PNOZ mmc4p

Function description

Operation

The virtual inputs and outputs that are to be transferred via DeviceNet are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc4p are connected via a jumper.

The station address and the transmission rate are set using DIP switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc4p is configured and started automatically.

LEDs indicate the status of the expansion module on DeviceNet.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Input and output data

The data is structured as follows:

- ▶ Input area
 - The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.
- ▶ Output range
 - The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.
- ▶ Output range only: Byte 3
 - Bits 0 ... 4: Status of LEDs on the PNOZmulti
 - Bit 0: OFAULT
 - Bit 1: IFAULT
 - Bit 2: FAULT
 - Bit 3: DIAG
 - Bit 4: RUN
 - Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

Assigning the inputs/outputs in the PNOZmulti Configurator to the DeviceNet inputs/outputs


Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23

Fieldbus modules PNOZ mmc4p

Output data DeviceNet	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
-----------------------	----------------------	----------------------	----------------------


The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Block diagram

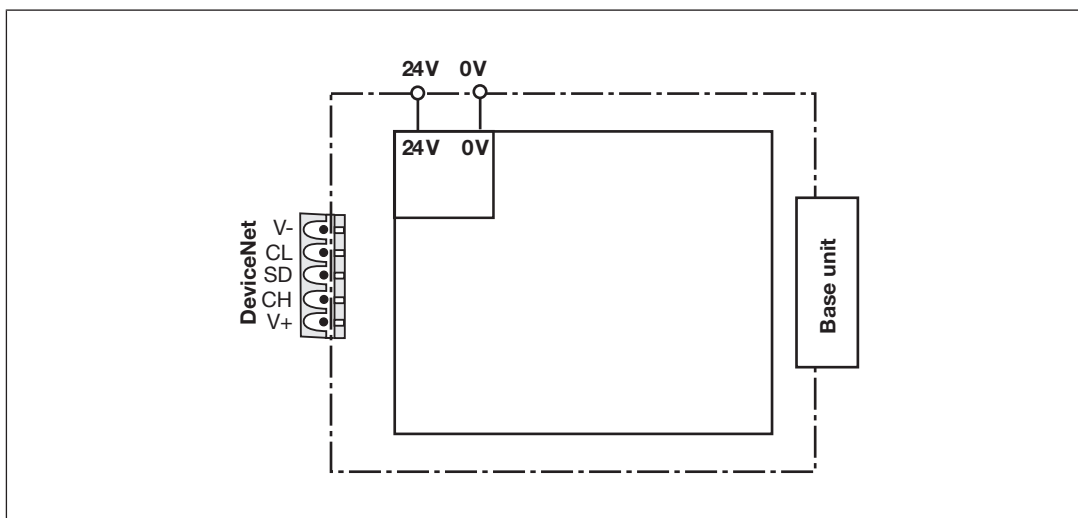

Installation

Dimensions in mm

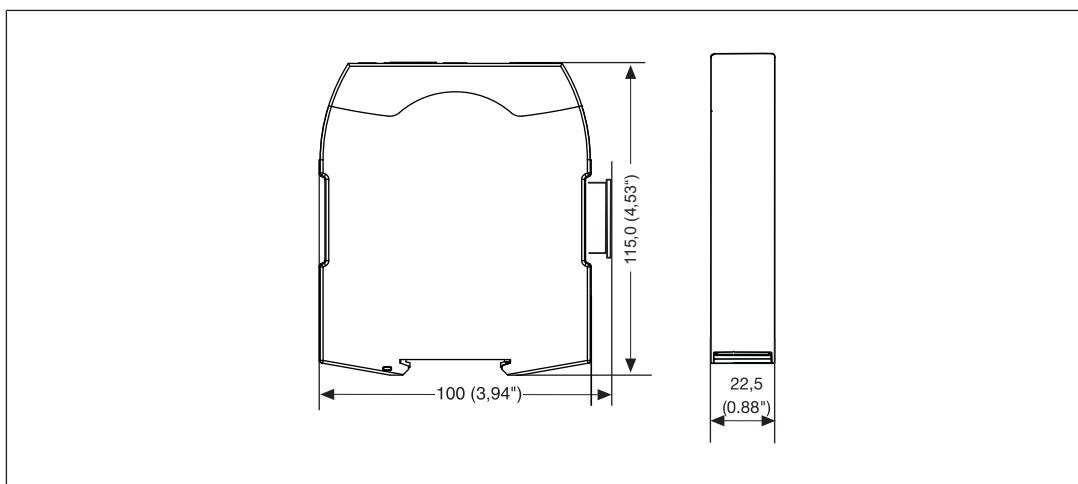


Fieldbus modules PNOZ mmc4p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[614\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).


Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
 - Circuit breaker, characteristic C - 6 A
 - or
 - Blow-out fuse, slow, 6A

DeviceNet interface

It is possible to define which outputs on the control system will communicate with DeviceNet. The connection to DeviceNet is made via a 5-pin screw connector.

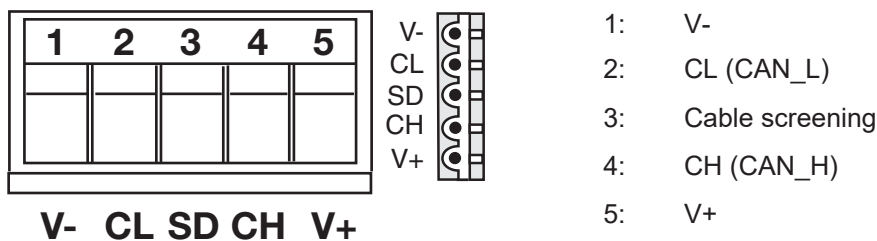

Termination DeviceNet

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, DeviceNet must be terminated at both ends.

Fieldbus modules PNOZ mmc4p

Setting the transmission rate

Set the transmission rate using DIP switches S1 and S2 (DR).

Transmission rate	DIP switch	
	S1	S2
125 kBit/s	Off	Off
250 kBit/s	On	Off
500 kBit/s	Off	On
---	On	On

Setting the station address

The station address of the expansion module PNOZ mmc4p is set from 0 ... 63 (binary) using DIP switches 1 to 32.


Station address	DIP switch					
	32	16	8	4	2	1
0	Off	Off	Off	Off	Off	Off
1	Off	Off	Off	Off	Off	On
2	Off	Off	Off	Off	On	Off
3	Off	Off	Off	Off	On	On
...
62	On	On	On	On	On	Off
63	On	On	On	On	On	On

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Fieldbus modules PNOZ mmc4p

Connection example

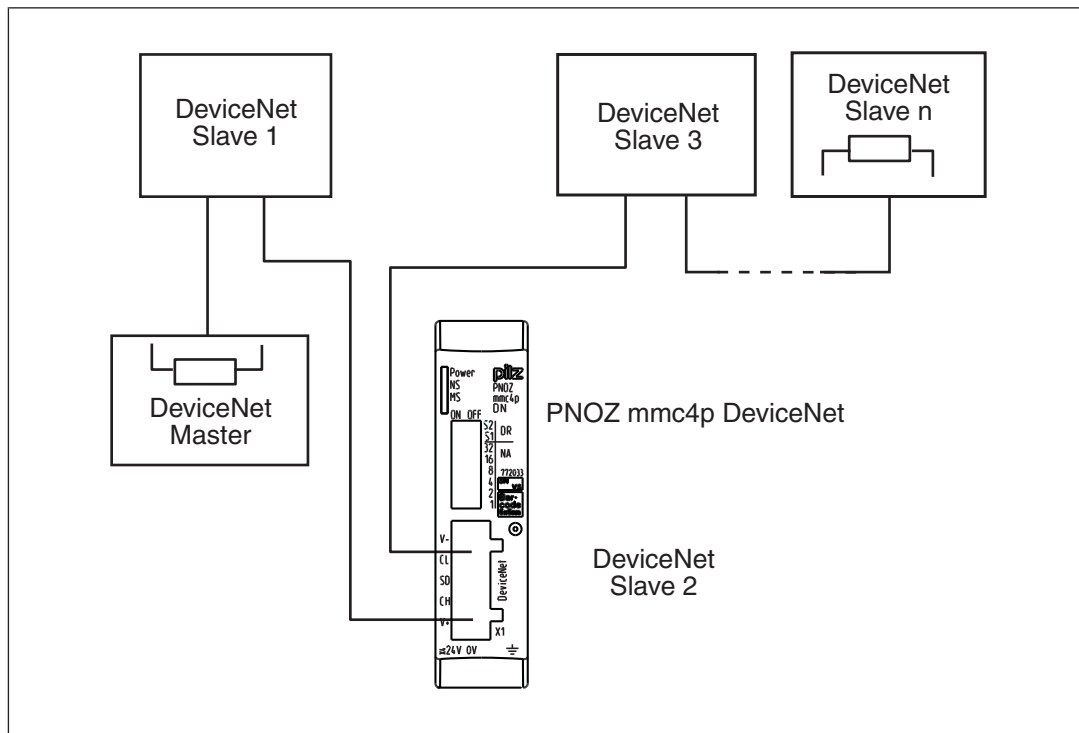

Technical details

General

Certifications **CE, EAC, UKCA, cULus Listed**

Electrical data

Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Output of external power supply (DC)	1,5 W
Status indicator	LED

Fieldbus interface

Fieldbus interface	DeviceNet
External supply (DC)	24 V
Power consumption	0,75 W
Device type	Slave
Station address	0 ... 63d
Transmission rates	125 kBit/s, 250 kBit/s, 500 kBit/s
Connection	5-pin Combicon plug-in connector

Fieldbus modules PNOZ mmc4p

Fieldbus interface	
Galvanic isolation	Yes
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54
Potential isolation	
Potential isolation between	Fieldbus and module voltage
Type of potential isolation	Functional insulation
Rated surge voltage	500 V

Fieldbus modules PNOZ mmc4p

Mechanical data	
Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100 mm
Width	22,5 mm
Depth	110 mm
Weight	95 g

Where standards are undated, the 2011-09 latest editions shall apply.

Fieldbus modules PNOZ mmc4p

Order reference

Product

Product type	Features	Order no.
PNOZ mmc4p	Fieldbus module, DeviceNet	772033

Accessories


Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793543

Terminator, jumper

Product type	Features	Order no.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750010
PNOZ s connector	Jumper, 10 pieces	750020

Fieldbus modules PNOZ mmc6p

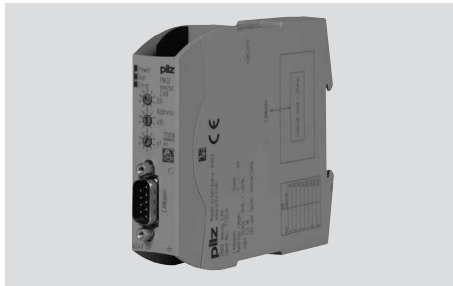

Overview

Unit features

Application of the product PNOZ mmc6p:

Expansion module for connection to a base unit from the configurable control system PNOZmulti Mini


The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CANopen
- ▶ Station addresses from 0 ... 99, selected via rotary switch
- ▶ Transmission rate selected via rotary switch (1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s)
- ▶ Status indicators for communication with CANopen and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CANopen . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc6p can be connected to the base unit
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti Mini that can be connected.


Fieldbus modules

PNOZ mmc6p

Front view

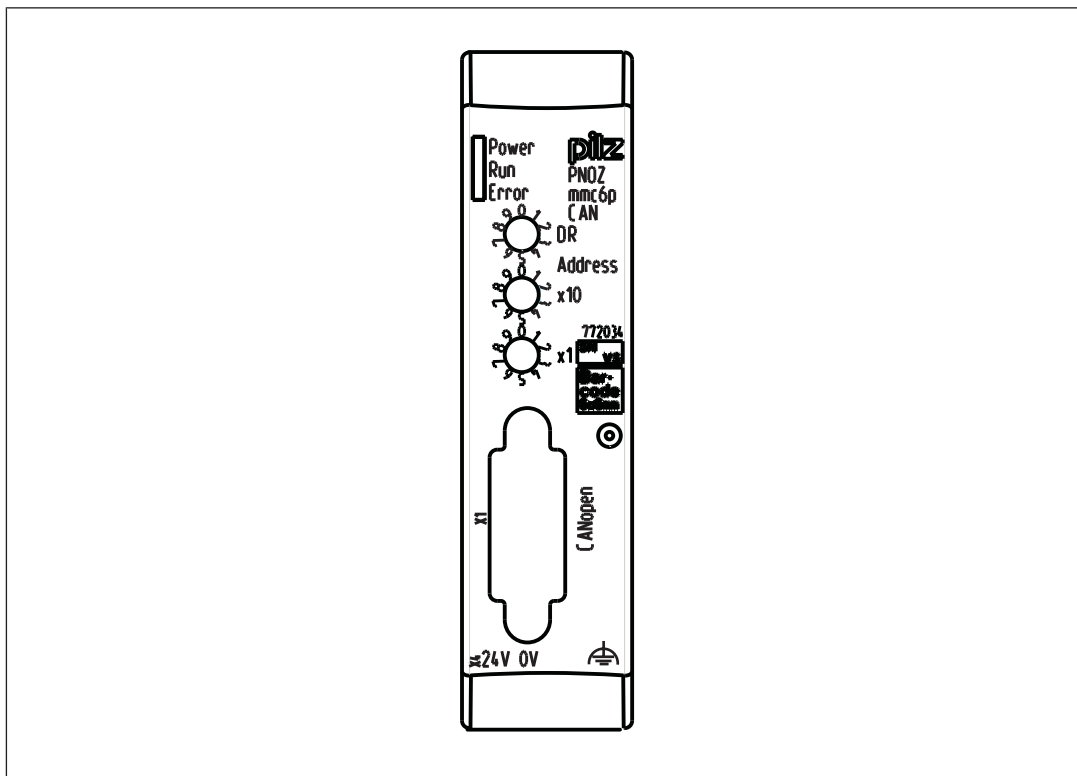

Legend:

- ▶ X4: 0 V, 24 V:
Supply connections
- ▶ X1: CANopen interface (male 9-pin D-Sub connector)
- ▶ : Functional earth
- ▶ LED:
 - Power
 - Run
 - Error

Function description

Operation

The virtual inputs and outputs that are to be transferred via CANopen are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc6p are connected via a jumper. The station address and the transmission rate are set using rotary switches. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc6p is configured and started automatically.

Fieldbus modules

PNOZ mmc6p

LEDs indicate the status of the expansion module on CANopen.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Input and output data

The data is structured as follows:

▶ **Input area**

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ **Output range**

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ **Output range only: Byte 3**

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".


Assigning the inputs/outputs in the PNOZmulti Configurator to the CANopen inputs/outputs

Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23
Output data CANopen	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


Fieldbus modules PNOZ mmc6p

Block diagram

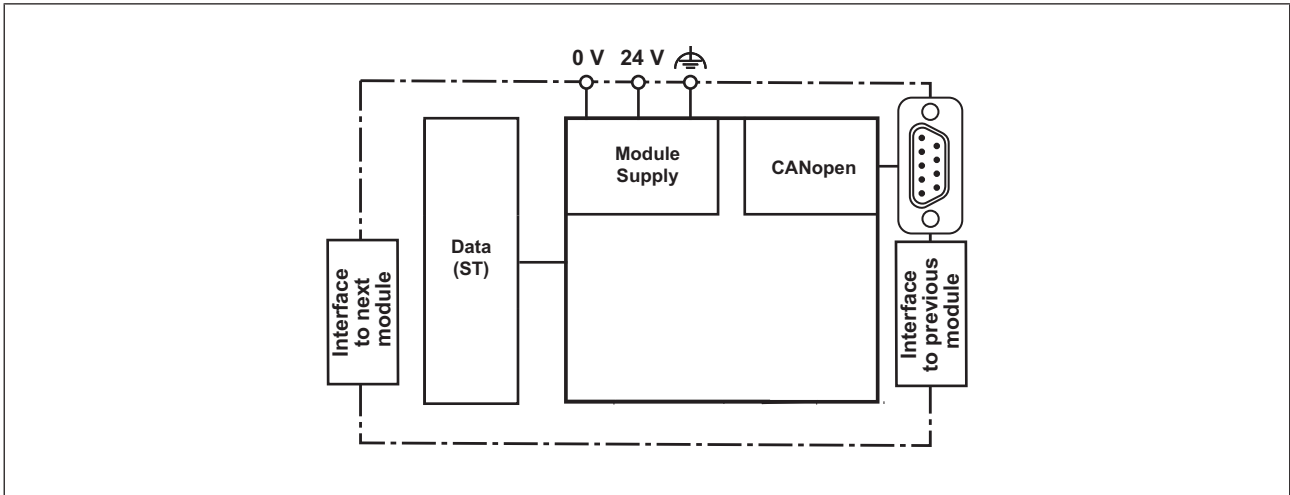

Installation

Dimensions in mm

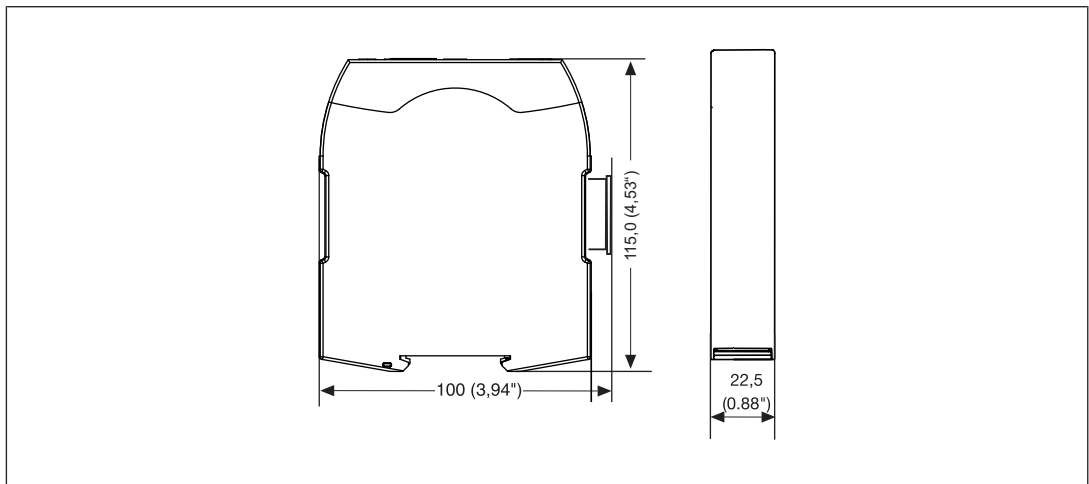

Fieldbus modules


PNOZ mmc6p

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[625\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).


Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
 - Circuit breaker, characteristic C - 6 A
 - or
 - Blow-out fuse, slow, 6A

CANopen interface

The connection to CANopen is made via a male 9-pin D-Sub connector.

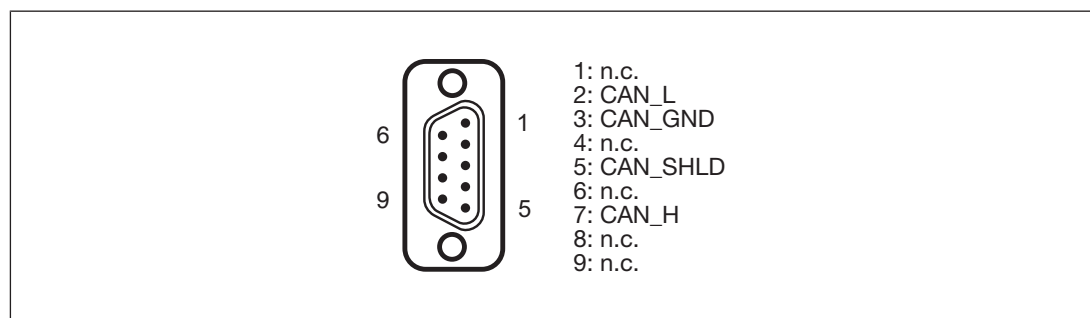

n.c. = not connected

Please note the following when connecting to CANopen:

Fieldbus modules PNOZ mmc6p

- ▶ Only use metal plugs or metallised plastic plugs
- ▶ Twisted pair, screened cable must be used to connect the interfaces

CANopen termination

To minimise cable reflection and to guarantee a defined rest signal on the transmission line, CANopen must be terminated at both ends.

Setting the transmission rate




- ▶ On the upper rotary switch DR, use a small screwdriver to set the transmission rate (in the example, "3" corresponds to 50 kBit/s).

Switch setting	0	1	2	3	4	5	6	7	8	9
Transmission rate	-	10 kBit/s	20 kBit/s	50 kBit/s	125 kBit/s	250 kBit/s	500 kBit/s	800 kBit/s	1 MBit/s	-

Setting the station address


The station address of the expansion module PNOZ mmc6p is set between 0 ... 99 (decimal) via two rotary switches x1 and x10.

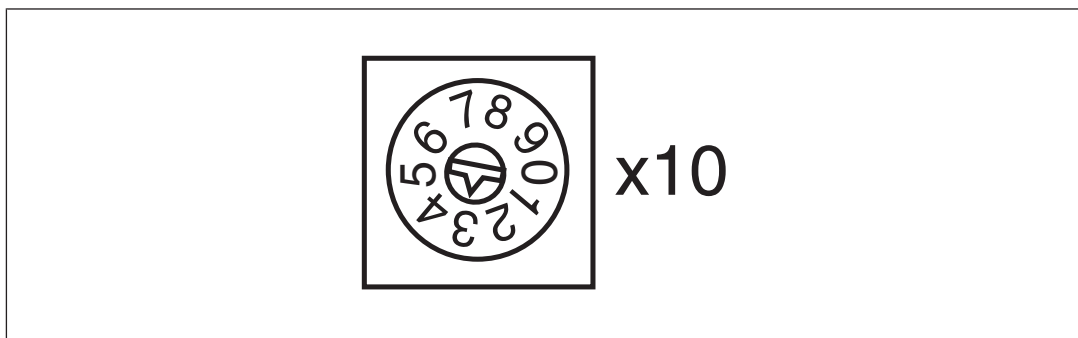

- ▶ On the middle rotary switch x10, use a small screwdriver to set the tens digit for the address ("3" in the example).

Fieldbus modules

PNOZ mmc6p

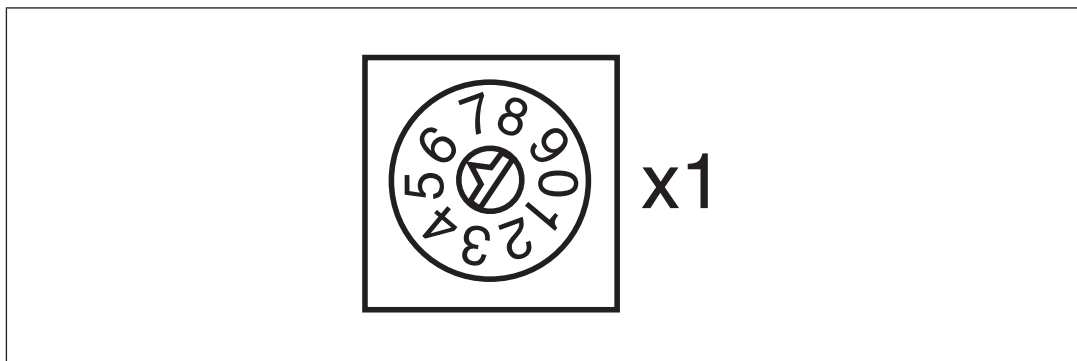


- ▶ On the lower rotary switch x1, set the ones digit for the address ("6" in the example). Station address 36 is set in the diagrams as an example.

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Connection example

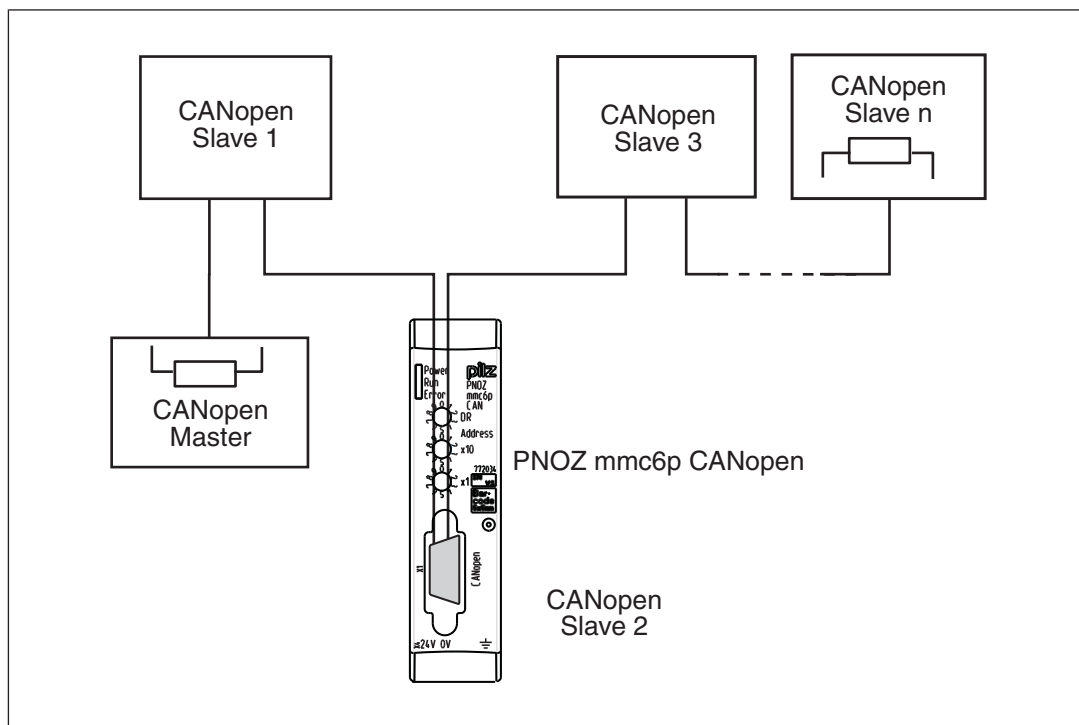

Fieldbus modules

PNOZ mmc6p

Technical details

General	
Certifications	CE, EAC, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Output of external power supply (DC)	1,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	CANopen
Device type	Slave
Protocol	CiA 301 V4.2.0
Station address	0 - 99d
Transmission rates	1 MBit/s, 10 kbit/s, 125 kBit/s, 20 kbit/s, 250 kBit/s, 50 kbit/s, 500 kBit/s, 800 kbit/s
Connection	9-pin D-Sub male connector
Galvanic isolation	Yes
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Fieldbus modules PNOZ mmc6p

Environmental data

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2

Rated insulation voltage **30 V**

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between **Fieldbus and module voltage**

Type of potential isolation **Functional insulation**

Rated surge voltage **500 V**

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PC
Front	PC
Top	PC

Connection type **Spring-loaded terminal, screw terminal**

Conductor cross section with screw terminals

1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG

Torque setting with screw terminals **0,5 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,2 - 2,5 mm², 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Stripping length with spring-loaded terminals **9 mm**

Fieldbus modules PNOZ mmc6p

Mechanical data

Dimensions

Height	100 mm
Width	22,5 mm
Depth	115 mm
Weight	95 g

Where standards are undated, the 2011-09 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mmc6p	Fieldbus module, CANopen	772034

Accessories


Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793543

Terminator, jumper

Product type	Features	Order no.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750010
PNOZ s connector	Jumper, 10 pieces	750020

Fieldbus modules PNOZ mmc7p CC

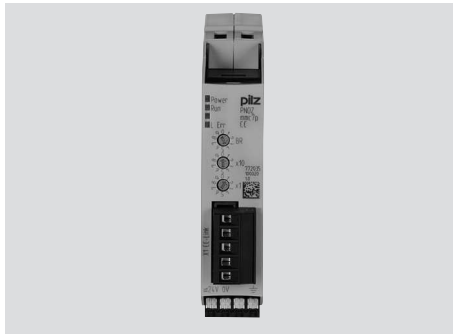

Overview

Unit features

Application of the product PNOZ mmc7p CC:


Expansion module for connection to a base unit from the PNOZmulti Mini system.

The product has the following features:

- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for CC-Link
- ▶ Station addresses from 1 ... 63, selected via rotary switch
- ▶ Station type: Remote Device
- ▶ Occupied stations: 2
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus CC-Link . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc7p CC can be connected to the base unit
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for the PNOZmulti base units that can be connected.

Fieldbus modules PNOZ mmc7p CC

Front view

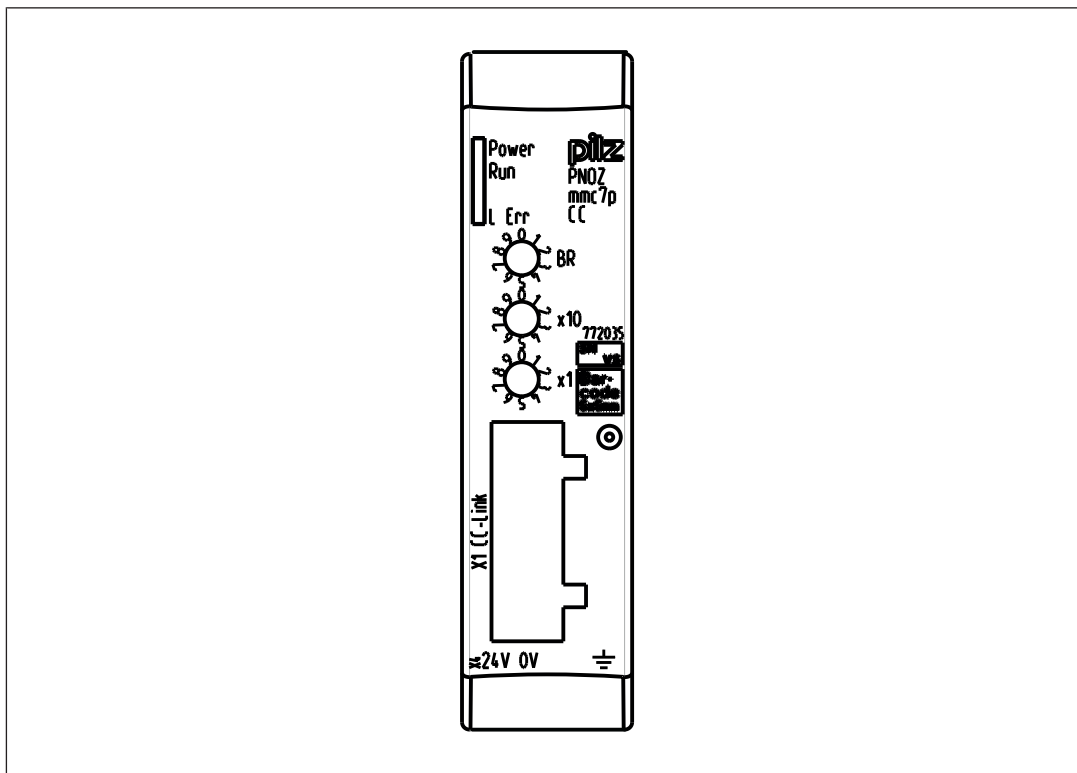

Legend:

- ▶ X1: CC-Link interface
- ▶ 0 V, 24 V: Supply connections
- ▶ LEDs:
 - Power
 - Run
 - L Err

Function description

Functions

The virtual inputs and outputs that are to be transferred via the fieldbus CC-Link are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mmc7p CC are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the fieldbus module PNOZ mmc7p CC is configured and started automatically.

LEDs indicate the status of the fieldbus module CC-Link.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Fieldbus modules PNOZ mmc7p CC

Input and output data

The data is structured as follows:

- ▶ Input area
 - Inputs on PNOZmulti Configurator: i00 ... i23
 - Input data CC-Link: RY0n, RY1n with n = 0 ... F
- Example: i23 -> RY17

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RY0n	i15	i14	i13	i12	i11	i10	i09	i08	i07	i06	i05	i04	i03	i02	i01	i00
RY1n	-	-	-	-	-	-	-	-	i23	i22	i21	i20	i19	i18	i17	i16


- ▶ Output range
 - Outputs on PNOZmulti Configurator: o00 ... o23
 - Output data CC-Link: RXn, RX1n with n = 0 ... F
- Example: o22 -> Rx16

n	F	E	D	C	B	A	9	8	7	6	5	4	3	2	1	0
RX 0n	o15	o14	o13	o12	o11	o10	o09	o08	o07	o06	o05	o04	o03	o02	o01	o00
RX 1n	-	-	-	-	-	-	-	-	o23	o22	o21	o20	o19	o18	o17	o16

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Detailed information on data exchange is available in the document "Communication Interfaces PNOZmulti 2" in the section entitled "Fieldbus modules".

Block diagram

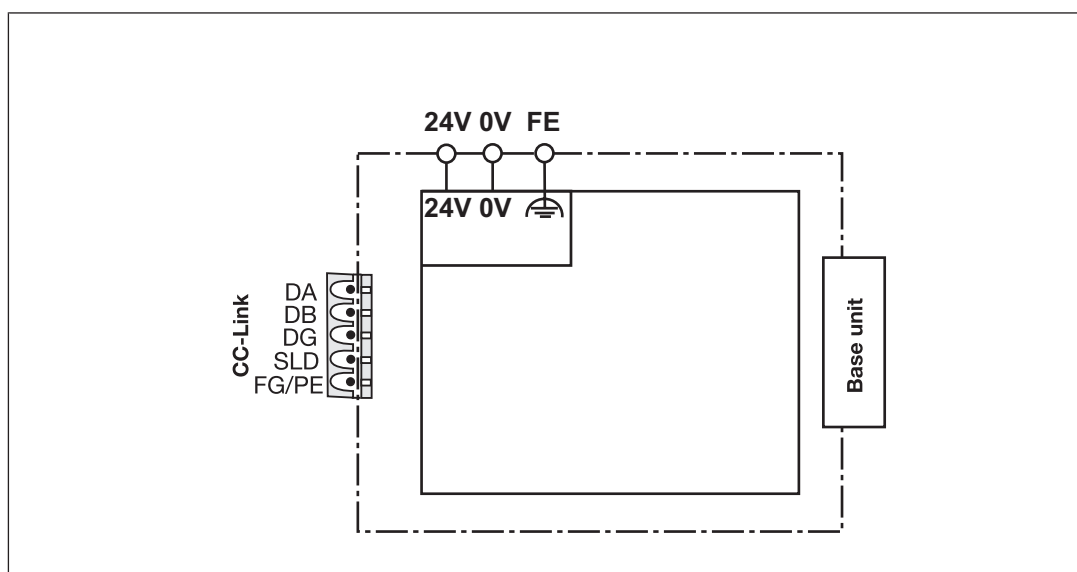


Fieldbus modules

PNOZ mmc7p CC

Installation

Dimensions in mm

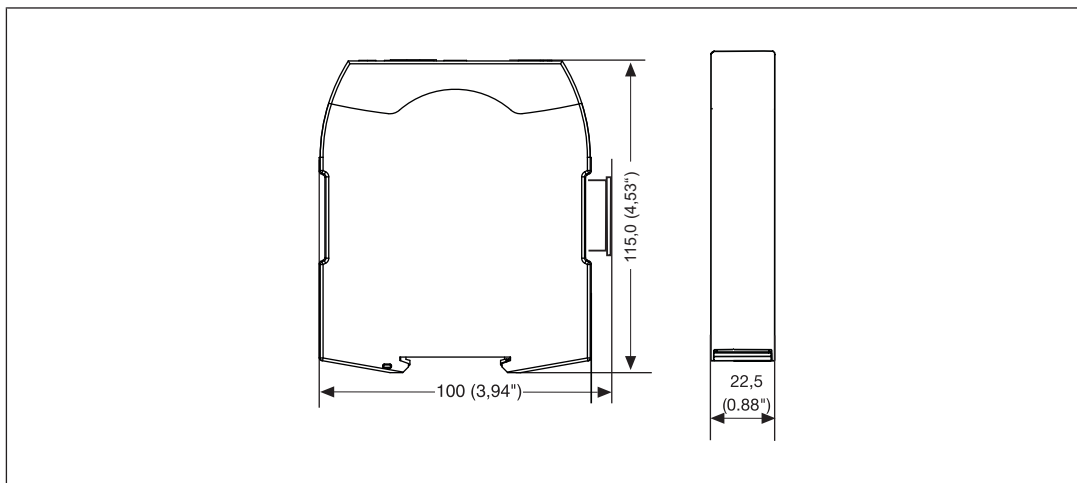

Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

Please note:

- ▶ Information given in the [Technical details \[634\]](#) must be followed.
- ▶ The position of the expansion module is specified in the Hardware configuration of the PNOZmulti Configurator.
- ▶ Use copper wiring with a temperature stability of 75 °C.
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).

Connecting the supply voltage

Connect the supply voltage to the fieldbus module:


- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
 - Circuit breaker, characteristic C - 6 A
 - or
 - Blow-out fuse, slow, 6A

Fieldbus modules

PNOZ mmc7p CC

Interface assignment

It is possible to define which outputs on the safety system will communicate with CC-Link. The connection to CC-Link is made via a 5-pin screw connector.

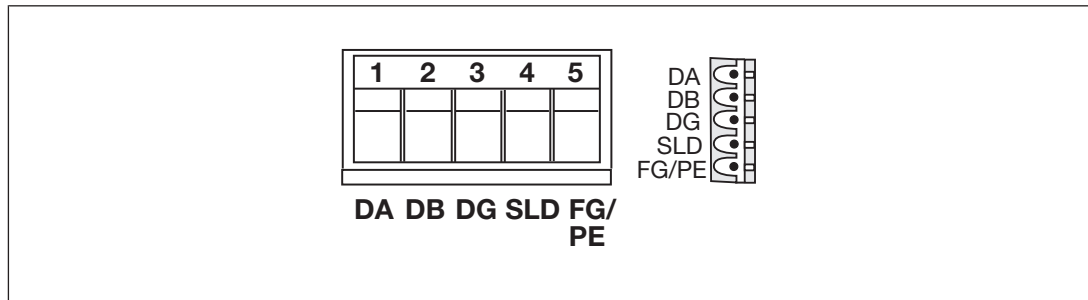


- 1: DA (Channel A)
- 2: DB (Channel B)
- 3: DG (Earth)
- 4: SLD (Cable shield)
- 5: FG/PE (Functional earth)

Download modified project to the PNOZmulti safety system

As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Fieldbus modules PNOZ mmc7p CC

Connection example

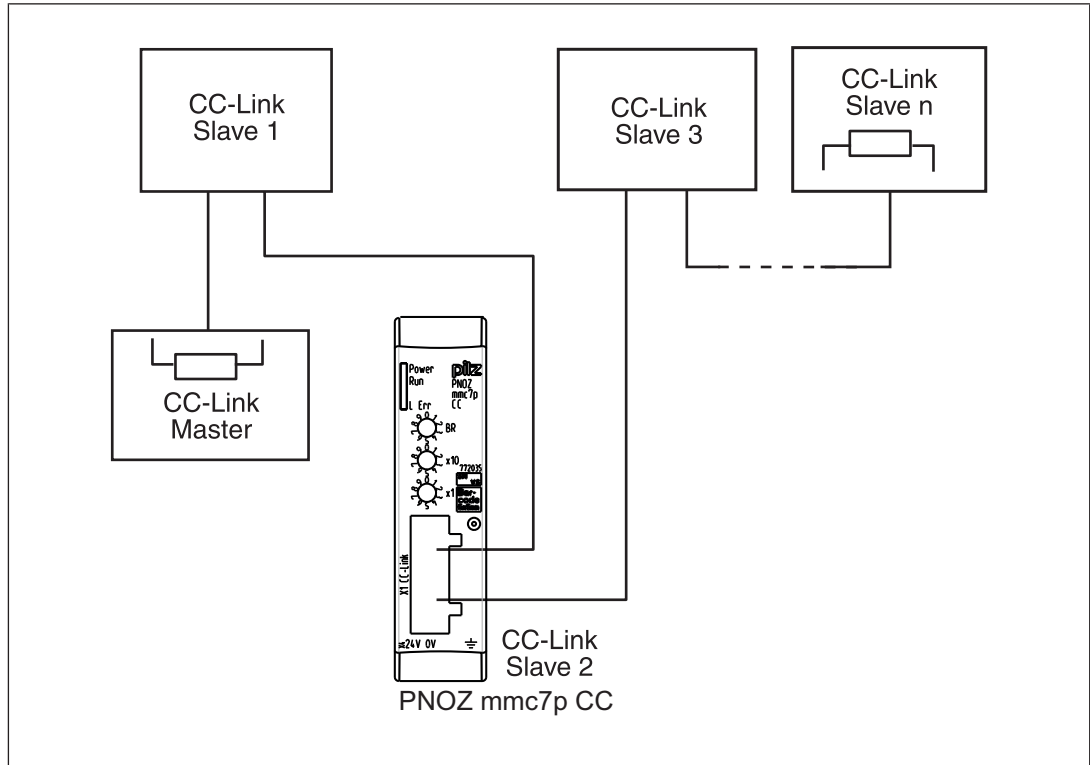

Fieldbus modules

PNOZ mmc7p CC

Technical Details

General	
Certifications	CE, EAC, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Output of external power supply (DC)	1,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	CC-Link V1.10
Device type	Slave
Station address	1 ... 63d
Transmission rates	10 MBit/s, 156 kbit/s, 2,5 MBit/s, 5 MBit/s, 625 kbit/s
Connection	5-pin Combicon plug-in connector
Assigned stations	2
Galvanic isolation	Yes
Test voltage	500 V AC
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2

Fieldbus modules PNOZ mmc7p CC

Environmental data

Vibration

in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g

Shock stress

in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms

Airgap creepage

in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2

Rated insulation voltage

30 V

Protection type

in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54

Potential isolation

Potential isolation between **Fieldbus and module voltage**

Type of potential isolation **Functional insulation**

Rated surge voltage **500 V**

Mechanical data

Mounting position **horizontally on mounting rail**

DIN rail

Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm

Material

Bottom	PC
Front	PC
Top	PC

Connection type **Spring-loaded terminal, screw terminal**

Conductor cross section with screw terminals

1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG

Torque setting with screw terminals **0,5 Nm**

Conductor cross section with spring-loaded terminals:

Flexible with/without crimp connector **0,2 - 2,5 mm², 24 - 12 AWG**

Spring-loaded terminals: Terminal points per connection **2**

Fieldbus modules PNOZ mmc7p CC

Mechanical data

Stripping length with spring-loaded terminals **9 mm**

Dimensions

Height **100 mm**

Width **22,5 mm**

Depth **110 mm**

Weight **90 g**

Where standards are undated, the 2011-09 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mmc7p CC	Fieldbus module, CC-Link	772035

Accessories

Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793543

Terminator, jumper

Product type	Features	Order no.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750010
PNOZ s connector	Jumper, 10 pieces	750020

Fieldbus modules PNOZ mmc11p



Overview

Unit features

Application of the product PNOZ mmc11p:


Expansion module for connection to a base unit from the PNOZmulti Mini system.

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Network protocols: EtherCAT
- ▶ Supports CANopen over EtherCAT (DS301 V4.02 compliant)
- ▶ Status indicators for communication with EtherCAT and for errors
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus EtherCAT . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc11p can be connected to the base unit
- ▶ Plug-in connection terminals:
Either spring-loaded terminal or screw terminal available as an accessory (see Order references for accessories).
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti Mini that can be connected.


Fieldbus modules PNOZ mmc11p

Front view

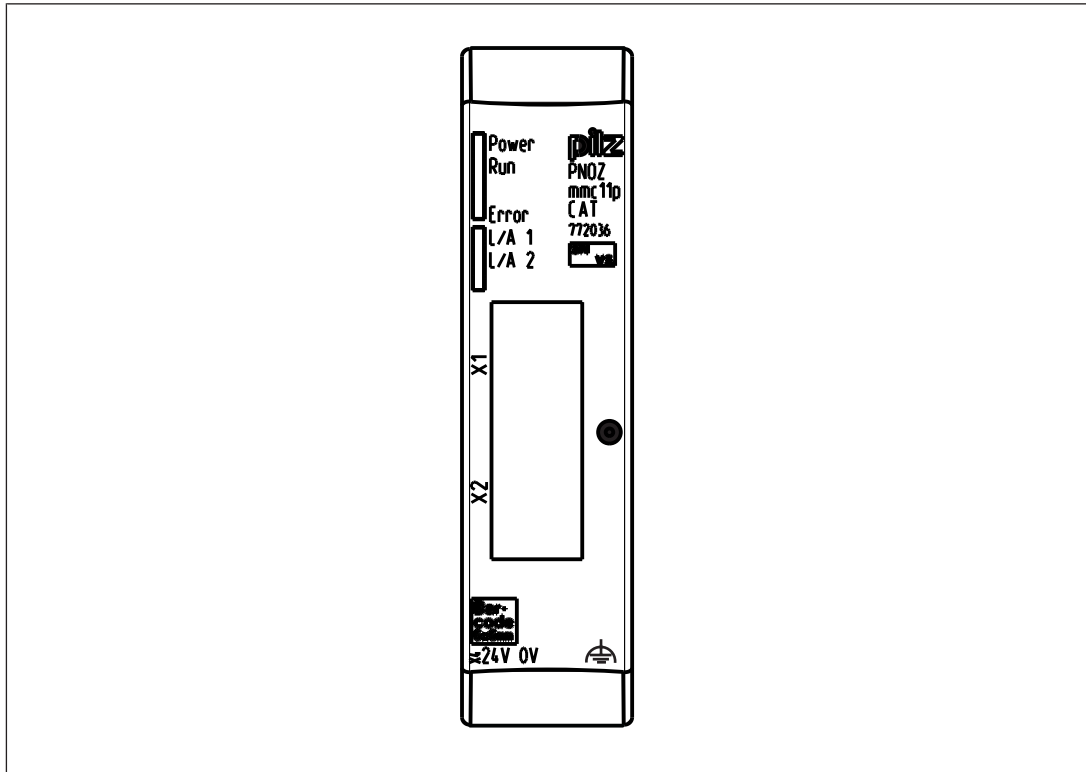

Legend:

- ▶ X1: EtherCAT IN
- ▶ X2: EtherCAT OUT
- ▶ X4: 0 V, 24 V:
Supply connections
- ▶ : Functional earth
- ▶ LEDs:
 - Power
 - Run
 - Error
 - L/A 1
 - L/A 2

EtherCAT  is registered trademark and patented technology, licensed by Beckhoff Automation GmbH, Germany

Fieldbus modules

PNOZ mmc11p

Function description

Operation

The virtual inputs and outputs that are to be transferred via EtherCAT are selected and configured in the PNOZmulti Configurator. The base unit and the expansion module PNOZ mmc11p are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the expansion module PNOZ mmc11p is configured and started automatically.

The connection to EtherCAT is made via the two RJ45 sockets.

LEDs indicate the status of the expansion module on EtherCAT.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Input and output data

The data is structured as follows:

▶ Input area

The inputs are defined in the master and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of byte 1 has the number i12.

▶ Output range

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The status of output o0 is stored in bit 0 of byte 0; the status of output o5 is stored in bit 5 of byte 0 etc.

▶ Output range only: Byte 3

Bits 0 ... 4: Status of LEDs on the PNOZmulti

- Bit 0: OFAULT
- Bit 1: IFAULT
- Bit 2: FAULT
- Bit 3: DIAG
- Bit 4: RUN

Bit 5: Data is being exchanged.

Detailed information on data exchange (tables, segments) is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

Assigning the inputs/outputs in the PNOZmulti Configurator to the EtherCAT inputs/outputs


Virtual inputs on PNOZmulti Configurator	i0 ... i7	i8 ... i15	i16 ... i23
Input data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
Virtual outputs on PNOZmulti Configurator	o0 ... o7	o8 ... o15	o16 ... o23

Fieldbus modules PNOZ mmc11p

Output data EtherCAT	Byte 0: Bits 0 ... 7	Byte 1: Bits 0 ... 7	Byte 2: Bits 0 ... 7
----------------------	----------------------	----------------------	----------------------


The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")

Block diagram

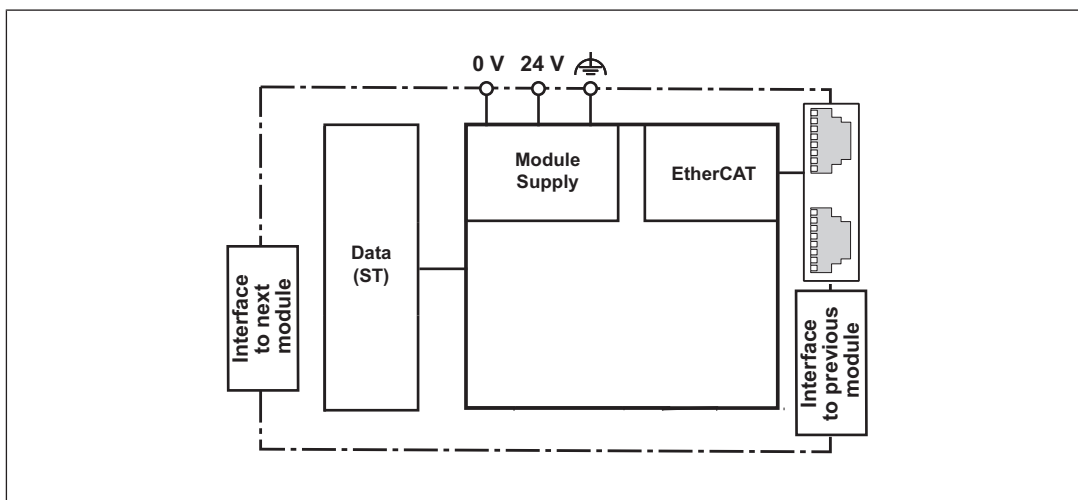

Installation

Dimensions in mm

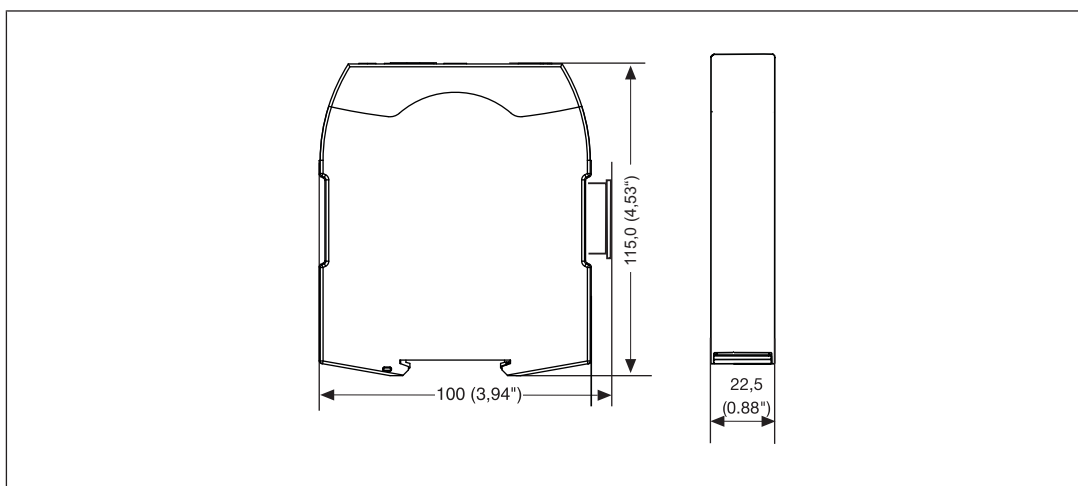

Fieldbus modules PNOZ mmc11p


Commissioning

General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator.

It is possible to define which inputs and outputs on the safety system will communicate with EtherCAT.

Please note:

- ▶ Information given in the "Technical details" must be followed.
- ▶ Use copper wire that can withstand 75 °C.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).

Please note the following when connecting to EtherCAT:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:
Ensure the requirements for the industrial use of EtherCAT are met, as stated in the Installation Manual published by the User Group.

Connecting the supply voltage


Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
 - Circuit breaker, characteristic C - 6 A
 - or
 - Blow-out fuse, slow, 6A

Fieldbus modules

PNOZ mmc11p

Interface assignment

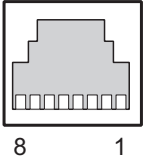RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

Download modified project to the PNOZmulti safety system


As soon as an additional expansion module has been connected to the system, the project must be amended in the PNOZmulti Configurator and downloaded back into the base unit. Proceed as described in the operating manual for the base unit.

Preparing for operation

- ▶ Install Device Description File
Install the *Device Description File* in your configuration software. You can only then use the PNOZ mmc11p.
- ▶ Connect the supply voltage to the base unit:
Terminals **24 V** and **A1 (+)**: + 24 VDC
Terminals **0 V** and **A2 (-)**: 0 V

Fieldbus modules PNOZ mmc11p

Connection example

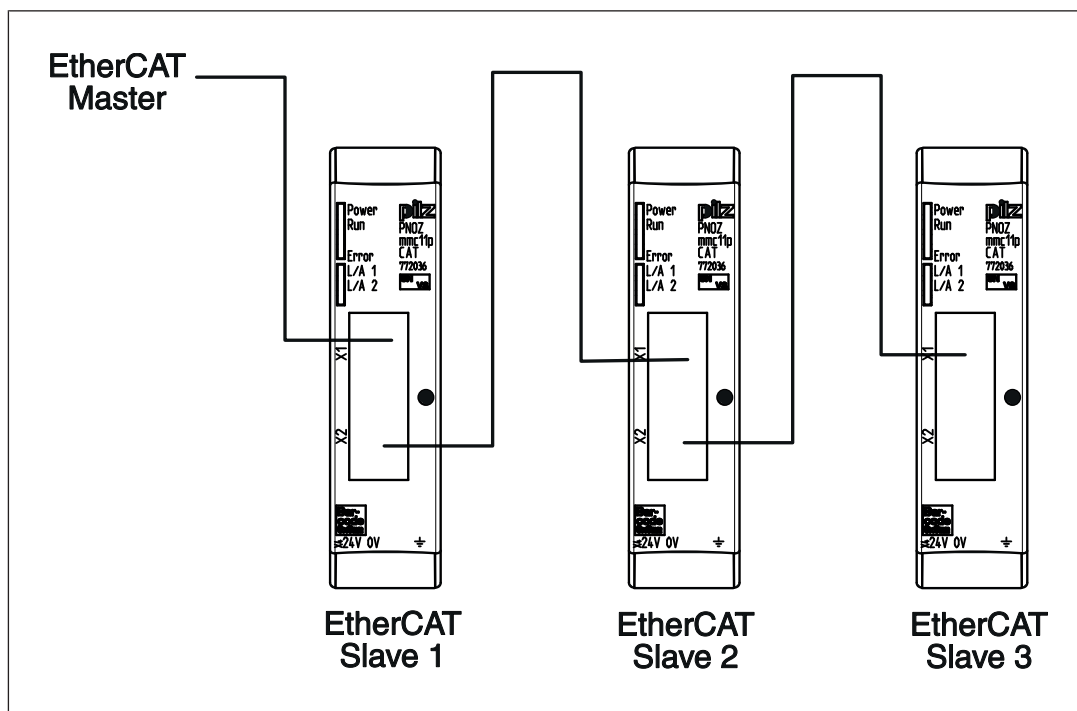

Technical details

General

Certifications **CE, EAC, UKCA, cULus Listed**

Electrical data

Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Output of external power supply (DC)	1,5 W

Status indicator **LED**

Fieldbus interface

Fieldbus interface	EtherCAT
Device type	Slave
Protocol	CANopen over EtherCAT
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	Yes

Fieldbus modules PNOZ mmc11p

Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78
Humidity	93 % r. h. at 40 °C
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54
Potential isolation	
Potential isolation between	Fieldbus and module voltage
Type of potential isolation	Functional insulation
Rated surge voltage	500 V
Mechanical data	
Mounting position	horizontally on mounting rail

Fieldbus modules

PNOZ mmc11p

Mechanical data

DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm
Conductor cross section with spring-loaded terminals:	
Flexible with/without crimp connector	0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection	2
Stripping length with spring-loaded terminals	9 mm
Dimensions	
Height	100 mm
Width	22,5 mm
Depth	115 mm
Weight	81 g

Where standards are undated, the 2012-10 latest editions shall apply.

Fieldbus modules PNOZ mmc11p

Order reference

Product

Product type	Features	Order no.
PNOZ mmc11p	Fieldbus module, EtherCAT	772036

Accessories


Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793543

Terminator, jumper

Product type	Features	Order no.
PNOZ s terminator plug	Terminator, yellow, 10 pieces	750010
PNOZ s connector	Jumper, 10 pieces	750020

Fieldbus modules PNOZ mmc12p

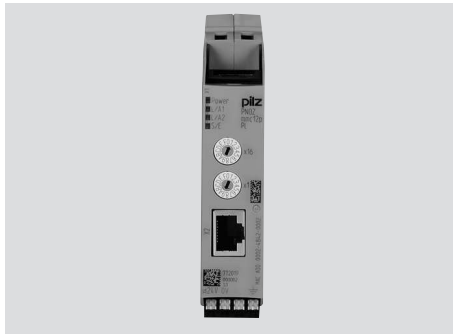

Overview

Unit features

Application of the product PNOZ mmc12p:


Expansion module for connection to a base unit from the PNOZmulti Mini system.

The product has the following features:


- ▶ Can be configured in the PNOZmulti Configurator
- ▶ Connection for Ethernet POWERLINK (Ethernet POWERLINK V 2 protocol)
- ▶ Station addresses from 1 ... 239, selected via rotary switch
- ▶ The minimum cycle time for an application of 20 Byte Output and 20 Byte Input is 250µs. The minimum cycle time is 450 µs at the maximum PDO size of 254 Byte Input and 20 Byte Output (the inputs and outputs in this case are viewed from the Managing Node).
- ▶ 24 virtual inputs and outputs on the control system PNOZmulti can be defined in the PNOZmulti Configurator for communication with the fieldbus Ethernet POWERLINK . The number of inputs and outputs can be extended to 128. Please note that when the extended inputs and outputs 24 - 127 are used they have different properties (see document entitled "Communication Interfaces").
- ▶ Max. 1 PNOZ mmc12p can be connected to the base unit
- ▶ Please refer to the document "PNOZmulti System Expansion" for details of the base units PNOZmulti Mini that can be connected.

Fieldbus modules PNOZ mmc12p

Front view

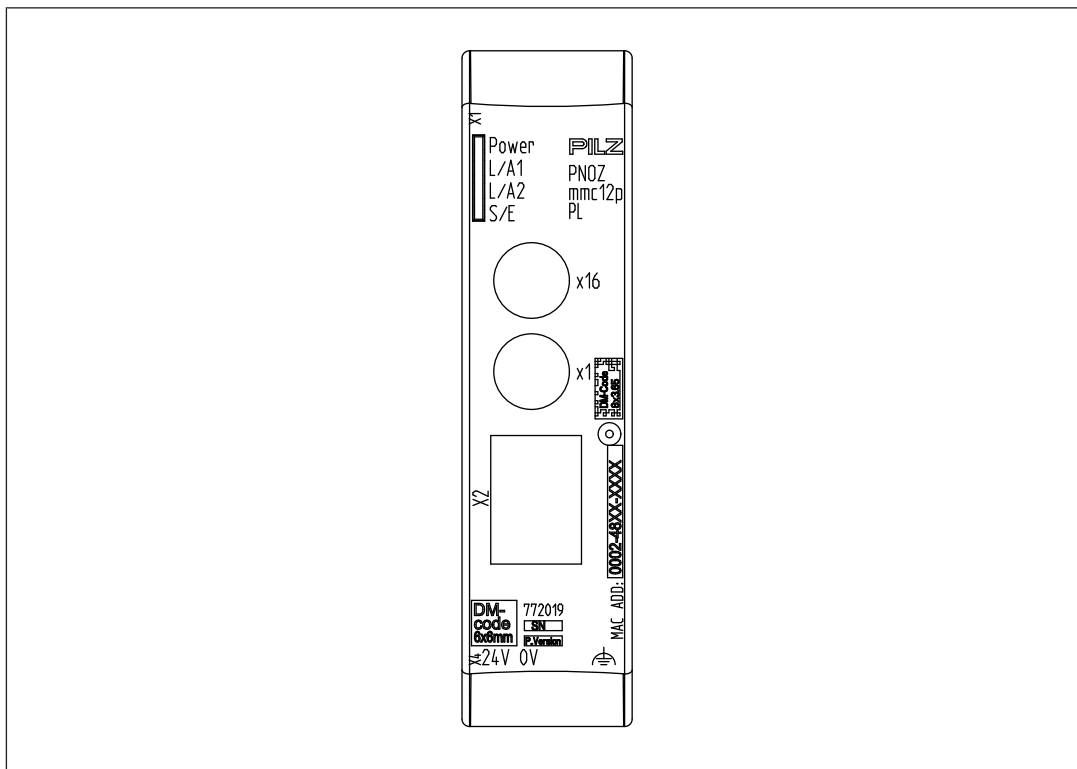

Legend:

- ▶ X1, X2: Ethernet POWERLINK interfaces
- ▶ 0 V, 24 V: Supply connections
- ▶ : Functional earth
- ▶ LED:
 - Power
 - L/A1
 - L/A2
 - S/E (Status/Error)

Function description

Functions

The virtual inputs and outputs that are to be transferred via the fieldbus Ethernet POWERLINK are selected and configured in the PNOZmulti Configurator. The base unit and the fieldbus module PNOZ mmc12p are connected via a jumper. After the supply voltage is switched on or the PNOZmulti control system is reset, the fieldbus module PNOZ mmc12p is configured and started automatically.

Fieldbus modules

PNOZ mmc12p

LEDs indicate the status of the fieldbus module Ethernet POWERLINK.

The configuration is described in detail in the PNOZmulti Configurator's online help.

Input and output data

The data is structured as follows:

▶ **Input area**

The inputs are defined in the Managing Node and transferred to the PNOZmulti. Each input has a number, e.g. input bit 4 of SDO 2100:02 has the number i12.

Virtual inputs PNOZmulti Configurator	I0 ... I7	I8 ... I15	I16 ... I23
Ethernet POWER-LINK	SDO 2100:01: Bit 0 ... 7	SDO 2100:02: Bit 0 ... 7	SDO 2100:03: Bit 0 ... 7

▶ **Output range**

The outputs are defined in the PNOZmulti Configurator. Each output that is used is given a number there, e.g. o0, o5... The state of output o0 is stored in Bit 0 of SDO 2000:01.


Virtual outputs PNOZmulti Configurator	O0 ... O7	O8 ... O15	O16 ... O23
Ethernet POWER-LINK	SDO 2000:01: Bit 0 ... 7	SDO 2000:02: Bit 0 ... 7	SDO 2000:03: Bit 0 ... 7

Detailed information on data exchange is available in the document "Communication Interfaces" in the section entitled "Fieldbus modules".

The number of virtual inputs and outputs can be extended to 128 (see document "Communication Interfaces" in the section entitled "Fieldbus modules")


Fieldbus modules PNOZ mmc12p

Block diagram

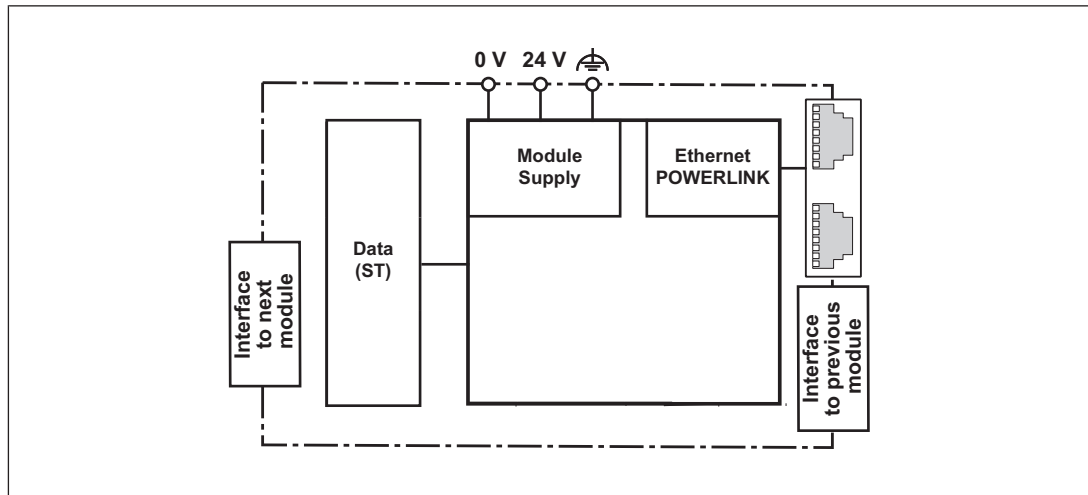

Installation

Dimensions in mm

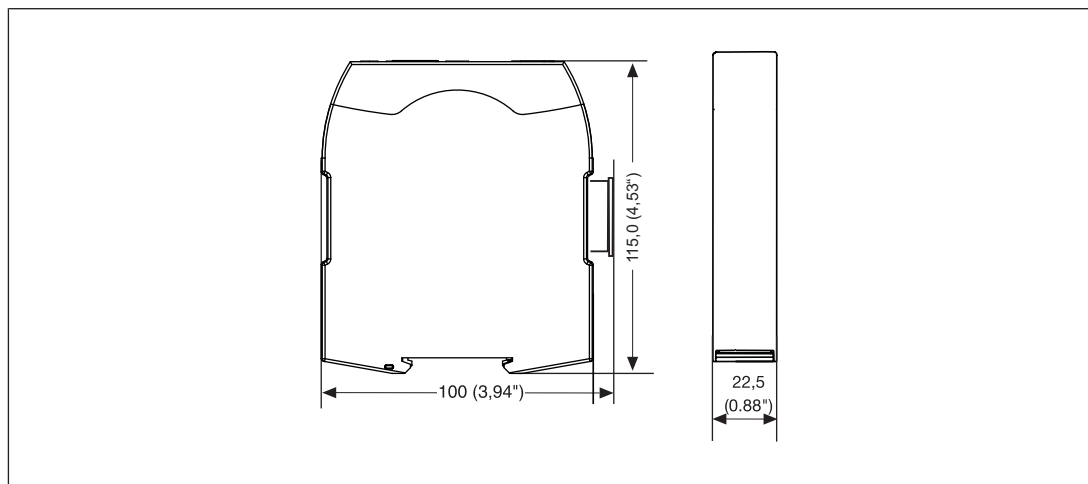

Fieldbus modules PNOZ mmc12p

Commissioning


General wiring guidelines

The wiring is defined in the circuit diagram of the PNOZmulti Configurator. It is possible to define which inputs and outputs on the safety system will communicate with Ethernet POWERLINK.

Please note:

- ▶ Information given in the "[Technical details \[653\]](#)" must be followed.
- ▶ Use copper wiring with a temperature stability of 75 °C.

Please note the following when connecting to Ethernet POWERLINK:

- ▶ The following minimum requirements of the connection cable and connector must be met:
 - Only use standard industrial Ethernet cable and connectors.
 - Only use double-shielded twisted pair cable and shielded RJ45 connectors (industrial connectors).
 - 100BaseTX cable in accordance with the Ethernet standard (min. Category 5)
- ▶ Measures to protect against interference:
Ensure the requirements for the industrial use of Ethernet POWERLINK are met, as stated in the Installation Manual published by the User Group.
- ▶ External measures must be used to connect the  terminal to the function earth (e.g. mounting rail).
- ▶ Always connect the mounting rail to the protective earth via an earthing terminal. This will be used to dissipate hazardous voltages in the case of a fault.
- ▶ The power supply must meet the regulations for extra low voltages with protective electrical separation (SELV, PELV).


Connecting the supply voltage

Connect the supply voltage to the fieldbus module:

- ▶ **24 V** terminal: + 24 VDC
- ▶ **0 V** terminal: 0 V
- ▶ Protect the supply voltage as follows:
 - Circuit breaker, characteristic C - 6 A
 - or
 - Blow-out fuse, slow, 6A


Fieldbus modules PNOZ mmc12p

Interface assignment

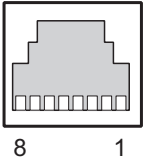RJ45 socket 8-pin	PIN	Standard
	1	TD+ (Transmit+)
	2	TD- (Transmit-)
	3	RD+ (Receive+)
	4	n.c.
	5	n.c.
	6	RD- (Receive-)
	7	n.c.
	8	n.c.

n.c.: Not connected

Connection example

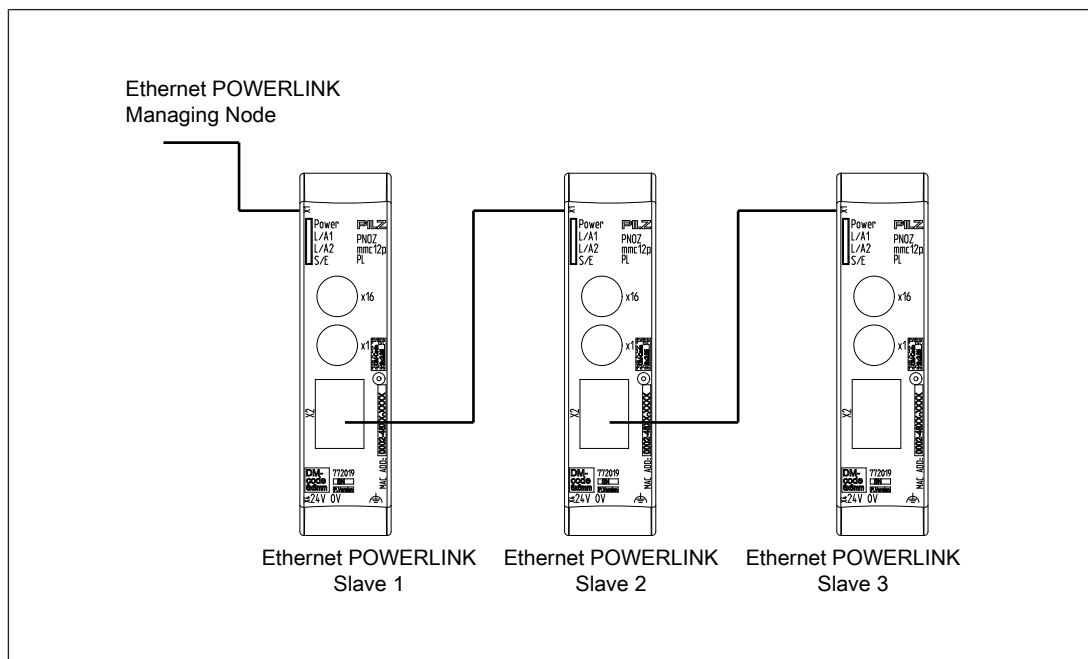

Fieldbus modules

PNOZ mmc12p

Technical Details

General	
Certifications	CE, EAC, UKCA, cULus Listed
Electrical data	
Supply voltage	
for	Module supply
Voltage	24 V
Kind	DC
Voltage tolerance	-20 %/+25 %
Max. continuous current that the external power supply must provide	50 mA
Output of external power supply (DC)	1,2 W
Potential isolation	Yes
Supply voltage	
for	Module supply
internal	Via base unit
Voltage	3,3 V
Kind	DC
Current consumption	60 mA
Power consumption	0,2 W
Max. power dissipation of module	1,5 W
Status indicator	LED
Fieldbus interface	
Fieldbus interface	Ethernet POWERLINK V2
Device type	Controlled Node
Transmission rates	100 MBit/s
Connection	RJ45
Galvanic isolation	Yes
Times	
Supply interruption before de-energisation	20 ms
Environmental data	
Ambient temperature	
in accordance with the standard	EN 60068-2-14
Temperature range	0 - 60 °C
Forced convection in control cabinet off	55 °C
Storage temperature	
in accordance with the standard	EN 60068-2-1/-2
Temperature range	-25 - 70 °C
Climatic suitability	
in accordance with the standard	EN 60068-2-30, EN 60068-2-78

Fieldbus modules PNOZ mmc12p

Environmental data	
Condensation during operation	Not permitted
Max. operating height above SL	2000 m
EMC	EN 61131-2
Vibration	
in accordance with the standard	EN 60068-2-6
Frequency	10 - 150 Hz
Acceleration	1g
Shock stress	
in accordance with the standard	EN 60068-2-27
Acceleration	15g
Duration	11 ms
Airgap creepage	
in accordance with the standard	EN 61131-2
Overvoltage category	II
Pollution degree	2
Rated insulation voltage	30 V
Protection type	
in accordance with the standard	EN 60529
Housing	IP20
Terminals	IP20
Mounting area (e.g. control cabinet)	IP54
Potential isolation	
Potential isolation between	Fieldbus and module voltage
Type of potential isolation	Functional insulation
Rated surge voltage	500 V
Mechanical data	
Mounting position	horizontally on mounting rail
DIN rail	
Top hat rail	35 x 7,5 EN 50022
Recess width	27 mm
Material	
Bottom	PC
Front	PC
Top	PC
Connection type	Spring-loaded terminal, screw terminal
Conductor cross section with screw terminals	
1 core flexible	0,25 - 2,5 mm², 24 - 12 AWG
2 core with the same cross section, flexible without crimp connectors or with TWIN crimp connectors	0,2 - 1,5 mm², 24 - 16 AWG
Torque setting with screw terminals	0,5 Nm

Fieldbus modules PNOZ mmc12p

Mechanical data

Conductor cross section with spring-loaded terminals: Flexible with/without crimp connector		0,2 - 2,5 mm², 24 - 12 AWG
Spring-loaded terminals: Terminal points per connection		2
Stripping length with spring-loaded terminals		9 mm
Dimensions		
Height		100 mm
Width		22,5 mm
Depth		110,4 mm
Weight		90 g

Where standards are undated, the 2015-08 latest editions shall apply.

Order reference

Product

Product type	Features	Order no.
PNOZ mmc12p	Fieldbus module, Ethernet POWERLINK	772019

Accessories

Connection terminals

Product type	Features	Order no.
Spring terminals PNOZ mmcxp 1 pc.	Spring-loaded terminals, 1 pieces	783542
Spring terminals PNOZ mmcxp 10 pcs.	Spring-loaded terminals, 10 pieces	783543
Screw terminals PNOZ mmcxp 1 pc.	Screw terminals, 1 piece	793542
Screw terminals PNOZ mmcxp 10 pcs.	Screw terminals, 10 pieces	793543

Terminator, jumper

Product type	Features	Order no.
PNOZ mm0.xp connector left	Jumper yellow/black to connect the modules, 10 piece	779260

PNOZmulti Configurator Illustration



PNOZmulti Configurator Features

- ▶ Graphic configuration of safety circuit
- ▶ Project configuration, configuration generation, documentation, commissioning
- ▶ Data transfer via integrated interface or chip card
- ▶ User interface in German, English, French, Italian, Spanish, Japanese, Chinese (selectable)

PNOZmulti Configurator System requirements

Please refer to the readme file for the PNOZmulti Configurator for details of the current system requirements.

PNOZmulti Configurator

Description

The PNOZmulti Configurator is a graphic tool for the configuration and programming of the configurable control system PNOZmulti.

The elements of the safety circuit are depicted as icons on the Configurator user interface.

The safety circuit can be created quickly and easily using drag & drop.

The PNOZmulti Configurator downloads the complete safety circuit to the PNOZmulti via a chip card or via the integrated interface.

The safety circuit can also be uploaded from the PNOZmulti to the PNOZmulti Configurator for revision.

Safety functions that can be created using the PNOZmulti Configurator include, for example:

- ▶ E-Stop
- ▶ Two-hand button
- ▶ Enabling switch
- ▶ Operating mode selector switches
- ▶ Press functions
- ▶ Light beam device
- ▶ Light grid
- ▶ Pressure sensitive mat
- ▶ Speed monitoring
- ▶ Muting

Users can configure fieldbus inputs and outputs in conjunction with the fieldbus modules. These inputs and outputs can only be used for standard functions.

Virtual inputs and outputs can be configured via the integrated interface. They are handled in exactly the same way as fieldbus inputs and outputs.

Inputs and outputs for standard functions are supported.

The PNOZmulti Configurator contains a wide range of test and diagnostic options, such as:

- ▶ Dynamic program display
- ▶ Diagnostic word for evaluating the element status
- ▶ Display PNOZmulti error stack

The project can be protected through passwords.

PNOZmulti Configurator

Licences and versions for PNOZmulti Classic, PNOZmulti Mini

In order to use the full scope of the PNOZmulti Configurator, you will need a valid licence in addition to the software package.

Without a licence, the PNOZmulti Configurator can only be used in a demo version.

A range of licences are available to meet varying requirements:

▶ **Basic licence**

Single user licence, issued to one owner (company name and location/project must be stated)

▶ **User licence**

Discounted licence for an additional workstation, issued to the owner of a basic licence.

▶ **Lite licence**

Licence limited to the base units PNOZ m0p and the base units PNOZmulti Mini, for use on one workstation.

▶ **Multi user licence**

Multi user licence, graduated according to the number of workstations (up to 25, 50, 100 and over 100)

▶ **Project licence**

Licence to use the software within a contractually limited framework.

▶ **Basic/User/Multi user/Project upgrade licence**

Discounted licence enabling owners of a licence to change to a newer version of the software

▶ **Time limited licence**

Basic licence restricted to 2, 3 or 4 months

These licence types are available as a full version or service version.

Full version The full version provides the whole functional range of a licence.

Service version: The service version of a licence is suitable for service and maintenance. The service version only offers limited editing features.

The following functions are available on the respective versions:

Functions	Demo version	Service version	Full Version
Load and save error stack	x	x	x
Function elements	max. 10	Unlimited	Unlimited
Save project		x	x
Load project from hardware		x	x
Save project to hardware		x	x
Dynamic program display		x	x
Print function		x	x
Change project	x		x

PNOZmulti Configurator

Licences and versions for PNOZmulti Classic,
PNOZmulti Mini

Functions	Demo version	Service version	Full Version
Password level 1	x		x
Password level 2	x	x	x
Password level 3	x	x	x
Project write protection	x		x
Project read protection	x		x
Import / export	x		x
Create macro	x		x

PNOZmulti Configurator

Order reference license for PNOZmulti Classic,
PNOZmulti Mini

PNOZmulti Configurator	Features	Order no.
Basic licence	Single user licence, issued to one owner (company name and location/project must be stated), full version	773010B
User licence	Discounted licence for an additional workstation, issued to the owner of a basic licence, full version	773010K
Lite licence	Licence limited to PNOZ m0p and the base units PNOZmulti Mini, for use on one workstation, full version	773010L
Project licence	Licence issued for a specific project. In contrast to the multi user licence, this licence is not limited to one legal entity. Full version	773010G
Basic Upgrade Licence	Discounted licence enabling owners of a basic licence to change to a newer version of the software, full version	773010U
User Upgrade Licence	Discounted licence enabling owners of a user licence to change to a newer version of the software, full version	773010V
Project Upgrade Licence	Discounted licence enabling owners of a project licence to change to a newer version of the software, full version	773010W
Basic Licence, Service	Single user licence, issued to one owner (company name and location/project must be stated), service version	773011B
User Licence, Service	Discounted licence for an additional workstation, issued to the owner of a basic licence, service version	773011K
Lite Licence, Service	Licence limited to the PNOZ m0p and the base units PNOZmulti Mini, for use on one workstation, service version	773011L
Project Licence, Service	Licence issued for a specific project. In contrast to the multi user licence, this licence is not limited to one legal entity. Service version	773011G
Basic Upgrade Licence, Service	Discounted licence enabling owners of a basic licence to change to a newer version of the software, service version	773011U
User Upgrade Licence, Service	Discounted licence enabling owners of a user licence to change to a newer version of the software, service version	773011V
Project Upgrade Licence, Service	Discounted licence enabling owners of a project licence to change to a newer version of the software, service version	773011W

Contents	Page
Chip card, USB memory	665
Cable, adapter	666
Connectors, terminals	670

Chip card, USB memory

Tool Kit, chip card	Order no.
Tool Kit, in a carry case, consisting of: PNOZmulti Configurator software and manual, German (773 000), chip card and set of 10 labels, chip card reader, programming cable, magnetic safety switch, 5 m connection cable, bracket	779000
Chip card 8 kByte, 1 piece	779201
Chip card 8 kByte, 10 pieces	779200
Chip card 32 kByte, 1 piece	779211
Chip card 32 kByte, 10 pieces	779212
Chip card holder	779240
Chip card reader	779230
Labels for chip card, seal, 10 pieces	779250
Accessories package, set of plug-in, spring-loaded terminals PNOZmulti classic and PNOZmulti chip card 32 kB	779126
Adapter for converting USB interface to RS232	305160

Cable, adapter

Cable, adapter	Order no.
PSS SB BUSCABLE LC cable, shielded, 1 -100 m	311074
PSSu A USB-CAB03 Mini-USB cable, 3 m	312992
PSSu A USB-CAB05 Mini-USB cable, 5 m	312993
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 3 m	380200
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 5 m	380201
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 10 m	380202
PSS67 Cable, M8sf M12sm cable, straight M12 connector, straight M8 socket, 4-pin, 30 m	380203
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 3 m	380204
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 5 m	380205
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 10 m	380206
PSS67 Cable, M8af M12sm cable, straight M12 connector, angled M8 socket, 4-pin, 30 m	380207
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 3 m	380208
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 5 m	380209
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 10 m	380210
PSS67 Cable, M12sf M12sm cable, straight M12 connector, straight M12 socket, 5-pin, 30 m	380211
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 3 m	380212
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 5 m	380213
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 10 m	380214
PSS67 Cable, M12af M12am cable, angled M12 connector, angled M12 socket, 5-pin, 30 m	380215
PSS67 Cable M12sf, M12sm, 20 m	380220
PSS67 Supply Cable IN sf OUT sm, B, 3 m	380250
PSS67 Supply Cable IN sf OUT sm, B, 5m	380251
PSS67 Supply Cable IN sf OUT sm, B, 10m	380252

Cable, adapter

Cable, adapter	Order no.
PSS67 Supply Cable IN sf, B, 3m	380256
PSS67 Supply Cable IN sf, B, 5m	380257
PSS67 Supply Cable IN sf, B, 10m	380258
PSEN ma adapter for connection to safety switch PSENmag	380300
PSEN cs adapter for connection to safety switch PSENcode	380301
PSS67 M12 connector, plug, M12, straight, 5-pin, A-coded	380308
PSS67 M12 connector, socket, M12, straight, 5-pin, A-coded	380309
PSS67 M12 connector, plug, M12, angled, 5-pin, A-coded	380310
PSS67 M12 connector, socket, M12, angled, 5-pin, A-coded	380311
PSS67 M8 connector, plug, M8, straight, 4-pin	380316
PSS67 M8 connector, socket, M8, straight, 4-pin	380317
PSS67 M8 connector, plug, M8, angled, 4-pin	380318
PSS67 M8 connector, socket, M8, angled, 4-pin	380319
PSS67 I/O Cable, 1 - 30 m	380320
PSEN sl adapter	380325
PDP67 cable M12-5sm, 5 m, open-ended	380705
PDP67 cable M12-5sm, 10 m, open-ended	380706
PDP67 cable M12-5sm, 10 m, open-ended	380707
PDP67 cable M12-5sm, 30 m, open-ended	380708
PDP67 cable M12-5sm, 3 m, open-ended	380709
PNOZ msi22Ap Adapter B&R ACOPOS 2.5 m for speed monitor PNOZ msxp	773832
PNOZ msi1Bp adapter and cable, 25-pin, 5.0 m for speed monitor PNOZ msxp	773839
PNOZ msi1Ap adapter and cable, 25-pin, 2.5 m for speed monitor PNOZ msxp	773840
PNOZ msi1Bp adapter and cable, 25-pin, 2.5 m for speed monitor PNOZ msxp	773841
PNOZ msi3Ap adapter and cable, 15-pin, 2.5 m for speed monitor PNOZ msxp	773842
PNOZ msi3Bp adapter and cable, 15-pin, 2.5 m for speed monitor PNOZ msxp	773843
PNOZ msi1Ap adapter and cable, 25-pin, 5.0 m for speed monitor PNOZ msxp	773844
PNOZ msi b4 Box	773845
PNOZ msi19p connection cable, 1.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773846
PNOZ msi19p connection cable, 2.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773847
PNOZ msi4Bp adapter and cable, 15-pin, 5 m for speed monitor PNOZ msxp	773848
PNOZ msi4Bp adapter and cable, 15-pin, 2.5 m for speed monitor PNOZ msxp	773849
PNOZ msi1p adapter and cable, 25-pin, 2.5 m for speed monitor PNOZ msxp	773850
PNOZ msi2p adapter and cable, 25-pin, 1.5 m for speed monitor PNOZ msxp	773851

Cable, adapter

Cable, adapter	Order no.
PNOZ msi3p adapter and cable, 25-pin, 2.5 m for speed monitor PNOZ msxp	773852
PNOZ msi4p adapter and cable, 25-pin, 1.5 m for speed monitor PNOZ msxp	773853
PNOZ msi10p adapter cable 2.5 m for speed monitor PNOZ msxp	773854
PNOZ msi11p adapter cable 1.5 m for speed monitor PNOZ msxp	773855
PNOZ msi9p adapter cable 5.0 m for speed monitor PNOZ msxp	773856
PNOZ msi5p adapter and cable, Bos/Rex, 15-pin, 2.5 m for speed monitor PNOZ msxp	773857
PNOZ msi5p adapter and cable, Bos/Rex, 15-pin, 1.5 m for speed monitor PNOZ msxp	773858
PNOZ msi6p adapter and cable, Elau, 9-pin, 7.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773859
PNOZ msi6p adapter and cable, Elau, 9-pin, 2.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773860
PNOZ msi6p adapter and cable, Elau, 9-pin, 1.5 m for PNOZ ms2p/PNOZ ms3p/PNOZ ms4p	773861
PNOZ msi8p adapter and cable, Lenze, 9-pin, 2.5 m for speed monitor PNOZ msxp	773862
PNOZ msi8p adapter and cable, Lenze, 9-pin, 1.5 m for speed monitor PNOZ msxp	773863
PNOZ msi7p adapter and cable, SEW, 15-pin, 2.5 m for speed monitor PNOZ msxp	773864
PNOZ msi7p adapter and cable, SEW, 15-pin, 1.5 m for speed monitor PNOZ msxp	773865
PNOZ msi4Bp adapter and cable RJ45 and 25-pin, 1.5 m for speed monitor PNOZ msxp	773866
PNOZ msi16p Adapter Baumuell, 15/15 2.5 m	773867
PNOZ msi12p Rockwell 15/15 2.5 m	773868
PNOZ msi13p Fanuc 20/20 2.5 m	773869
PNOZ msi S09 9-pin adapter for speed monitor PNOZ msxp, connector set	773870
PNOZ msi S15 15-pin adapter for speed monitor PNOZ msxp, connector set	773871
PNOZ msi S25 25-pin adapter for speed monitor PNOZ msxp, connector set	773872
PNOZ msi 6p ELAU RJ45 and 9-pin adapter for speed monitor PNOZ msxp	773873
PNOZ msi15p adapter, Tendo, 15/15 2.5 m	773874
PNOZ msi17p Bos/Rex 15/15 5.0 m	773875
PNOZ msi1Ap Si/He 25/25 1.5 m	773876
PNOZ msi1Bp Si/He 25/25 5.0 m	773877
PNOZ msi14p Leroy 15/15 2.5 m	773878
PNOZ MSI20P PARKER HD 15/15 2.5m	773879
PNOZ msi b1 Box 15p	773880
PNOZ msi b0 cable 15/RJ45	773881

Cable, adapter

Cable, adapter	Order no.
PNOZ msi b1 Box 9p	773882
PNOZ msi b1 Box 25p	773883
PNOZ msi b0 cable 25/RJ45	773884
PNOZ msi21p Bos/Rex 15/15 2.5 m	773885
PNOZ msi21p Bos/Rex 15/15 1.5 m	773886
PNOZ msi18p Bos/Rex 15/15 1.5 m	773888
PNOZ mli1p 5m screw, 5-pin cable, shielded, screw terminal, 5 m	773890
PNOZ mli1p 10m screw, 5-pin cable, shielded, screw terminal, 10 m	773891
PNOZ mli1p 50m screw, 5-pin cable, shielded, screw terminal, 50 m	773892
PNOZ mli1p 5m spring, 5-pin cable, shielded, spring-loaded terminal, 5 m	773893
PNOZ mli1p 10m spring, 5-pin cable, shielded, spring-loaded terminal, 10 m	773894
PNOZ mli1p 50m spring, 5-pin cable, shielded, spring-loaded terminal, 50 m	773895
PNOZ mli1p 50m spring, 5-pin cable, shielded, spring-loaded terminal, 1.5 m	773896
PNOZ mli1p 50m screw cable 5-pin, shielded, screw terminal, 5 m	773897
KOP-XE jumper	774639
PNOZmulti bus terminator	779110
PNOZmulti bus terminator coated	779112
Connector plug	779260
Terminator	779261

Connectors, terminals

For details of the respective connection terminals, terminators and jumpers, please refer to the data sheets for the relevant products.

Support

Technical support is available from Pilz round the clock.

Americas

Brazil

+55 11 97569-2804

Canada

+1 888-315-PILZ (315-7459)

Mexico

+52 55 5572 1300

USA (toll-free)

+1 877-PILZUSA (745-9872)

Asia

China

+86 21 60880878-216

Japan

+81 45 471-2281

South Korea

+82 31 450 0680

Australia

+61 3 95446300

Europe

Austria

+43 1 7986263-0

Belgium, Luxembourg

+32 9 3217575

France

+33 3 88104000

Germany

+49 711 3409-444

Ireland

+353 21 4804983

Italy

+39 0362 1826711

Scandinavia

+45 74436332

Spain

+34 938497433

Switzerland

+41 62 88979-30

The Netherlands

+31 347 320477

Turkey

+90 216 5775552

United Kingdom

+44 1536 462203


You can reach our international hotline on:

+49 711 3409-444

support@pilz.com

Pilz develops environmentally-friendly products using ecological materials and energy-saving technologies. Offices and production facilities are ecologically designed, environmentally-aware and energy-saving. So Pilz offers sustainability, plus the security of using energy-efficient products and environmentally-friendly solutions.

The 4-fold safety of automation

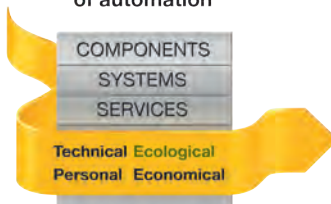

Presented by:

Energy saving by Pilz



Pilz GmbH & Co. KG
Felix-Wankel-Straße 2
73760 Ostfildern, Germany
Tel.: +49 711 3409-0
Fax: +49 711 3409-133
info@pilz.com
www.pilz.com

PILZ
THE SPIRIT OF SAFETY