

PROFIBUS-DP Communication Module



- COMPATIBLE WITH
 CR3000 HMIs
 DA30D High Performance Data Station
- CONNECTS HOST PRODUCTS TO PROFIBUS-DP NETWORK
- CONFIGURED USING CRIMSON® SOFTWARE (VERSION 3.1 OR LATER)
- STANDARD 9-PIN D-SUB CONNECTOR INTERFACE
- OPERATES FROM 9.6 KBAUD TO 12 MBAUD WITH AUTOMATIC BAUD RATE DETECTION
- DIAGNOSTIC LEDs INDICATE MODULE STATUS



FOR USE IN HAZARDOUS LOCATIONS:
 Class I, Division 2, Groups A, B, C, and D
 T4



GENERAL DESCRIPTION

The PROFIBUS Module adds PROFIBUS DP connectivity to any host device product. This allows a high speed exchange of blocks of data, at data rates up to 12 MBaud, between the host device and a Master PLC on a PROFIBUS network. The DP suffix refers to “Decentralized Periphery”, which is used to describe distributed I/O devices connected via a fast serial data link with a central controller.

The PROFIBUS-DP Network connects through a 9-pin D-subminiature female connector. Power for the module is provided by the host device. The PROFIBUS-DP Network is fully isolated from the host.

The modules connect and communicate via proprietary USB connection to the various devices. The devices, equipped with serial ports as well as Ethernet port(s), allows the system to share data with PCs, PLCs and SCADA systems.

CONFIGURATION

The module is configured with Windows® compatible Crimson 3.1 software. The software is an easy to use, graphical interface which provides a means of configuring and commissioning of new systems, as well as routine module re-calibration.

SAFETY SUMMARY

All safety related regulations, local codes and instructions that appear in this literature or on equipment must be observed to ensure personal safety and to prevent damage to either the instrument or equipment connected to it. If equipment is used in a manner not specified by the manufacturer, the protection provided by the equipment may be impaired.

Do not use this unit to directly command motors, valves, or other actuators not equipped with safeguards. To do so can be potentially harmful to persons or equipment in the event of a fault to the unit.



CAUTION: Risk of Danger.

Read complete instructions prior to installation and operation of the unit.



WARNING - EXPLOSION HAZARD - DO NOT DISCONNECT EQUIPMENT UNLESS POWER HAS BEEN SWITCHED OFF OR AREA IS KNOWN TO BE NON-HAZARDOUS.

ORDERING INFORMATION


DESCRIPTION	PART NUMBER
PROFIBUS Communication Module	CRM000 CM PBDP0 000

A listing of the entire CR3000 and DA30D family of products and accessories can be found at www.redlion.net.

TRADEMARK ACKNOWLEDGMENTS

PROFIBUS® and PROFINET® are registered trademarks of PROFIBUS and PROFINET International (PI).


All other company and product names are trademarks of their respective owners.

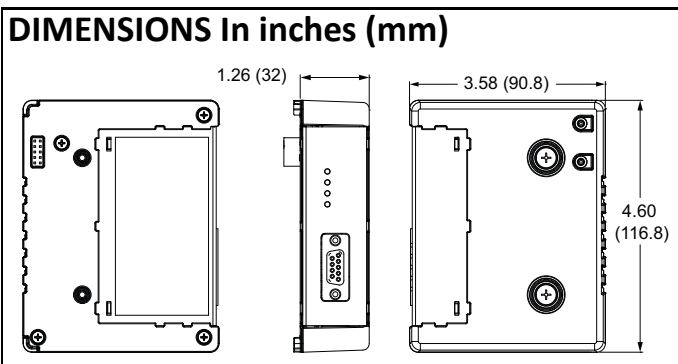

SPECIFICATIONS

- POWER:** Power will be supplied by the host device.
PB Max Power: 2.6 W
- LEDs:**
 STS - Status LED shows module condition.
 DP - LED shows communications state.
 WD - LED shows communications state.
 DATA - LED shows data exchange.
- COMMUNICATIONS:**
 PROFIBUS Port: FIELDBUS TYPE: PROFIBUS-DP per EN 50 170.
 Baud Rates: 9.6 KBaud to 12 MBaud, auto baud rate detection.
 Station Address: software programmable in the range 1 to 125.
 Output Power: +5 VDC @ 90 mA max. on the D-Sub connector pins 5 (GND) and 6 (+5 V).
 Network Isolation: 500 Vrms @ 50/60 Hz for 1 minute between PROFIBUS-DP network and host device.
- ENVIRONMENTAL CONDITIONS:**
 Operating Temperature Range: -10 to 50 °C
 Storage Temperature Range: -40 to +85 °C
 Operating and Storage Humidity: 85% max. relative humidity, non-condensing.
 Altitude: Up to 2000 meters
- CERTIFICATIONS AND COMPLIANCES:**
CE Approved
 EN 61326-1 Immunity to Industrial Locations
 IEC/EN 61010-1
 RoHS Compliant
UL Hazardous: File #E317425
- CONSTRUCTION:** Case body is polycarbonate with stainless steel cover.
- CONNECTIONS:** Pluggable DB9F connector.
- MOUNTING:** Screws to host
- WEIGHT:** 6.2 oz (175.77 g)

Block Diagram for PB

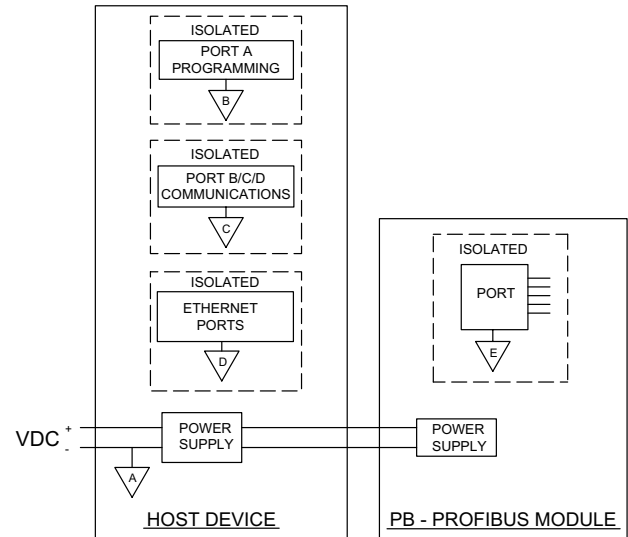

EMC INSTALLATION GUIDELINES

Although Red Lion Controls products are designed with a high degree of immunity to Electromagnetic Interference (EMI), proper installation and wiring methods must be followed to ensure compatibility in each application. The type of the electrical noise, source or coupling method into a unit may be different for various installations. Cable length, routing, and shield termination are very important and can mean the difference between a successful or troublesome installation. Listed are some EMI guidelines for a successful installation in an industrial environment.

- A unit should be mounted in a metal enclosure, which is properly connected to protective earth.
- Use shielded cables for all Signal and Control inputs. The shield connection should be made as short as possible. The connection point for the shield depends somewhat upon the application. Listed below are the recommended methods of connecting the shield, in order of their effectiveness.
 - Connect the shield to earth ground (protective earth) at one end where the unit is mounted.
 - Connect the shield to earth ground at both ends of the cable, usually when the noise source frequency is over 1 MHz.
- Never run Signal or Control cables in the same conduit or raceway with AC power lines, conductors, feeding motors, solenoids, SCR controls, and heaters, etc. The cables should be run through metal conduit that is properly grounded. This is especially useful in applications where cable runs are long and portable two-way radios are used in close proximity or if the installation is near a commercial radio transmitter. Also, Signal or Control cables within an enclosure should be routed as far away as possible from contactors, control relays, transformers, and other noisy components.
- Long cable runs are more susceptible to EMI pickup than short cable runs.
- In extremely high EMI environments, the use of external EMI

suppression devices such as Ferrite Suppression Cores for signal and control cables is effective. The following EMI suppression devices (or equivalent) are recommended:

Fair-Rite part number 0443167251 (Red Lion Controls #FCOR0000)
 Line Filters for input power cables:

Schaffner # FN2010-1/07 (Red Lion Controls #LFIL0000)

- To protect relay contacts that control inductive loads and to minimize radiated and conducted noise (EMI), some type of contact protection network is normally installed across the load, the contacts or both. The most effective location is across the load.
 - Using a snubber, which is a resistor-capacitor (RC) network or metal oxide varistor (MOV) across an AC inductive load is very effective at reducing EMI and increasing relay contact life.
 - If a DC inductive load (such as a DC relay coil) is controlled by a transistor switch, care must be taken not to exceed the breakdown voltage of the transistor when the load is switched. One of the most effective ways is to place a diode across the inductive load. Most Red Lion products with solid state outputs have internal zener diode protection. However external diode protection at the load is always a good design practice to limit EMI. Although the use of a snubber or varistor could be used.

Red Lion part numbers: Snubber: SNUB0000


Varistor: ILS11500 or ILS23000

- Care should be taken when connecting input and output devices to the instrument. When a separate input and output common is provided, they should not be mixed. Therefore a sensor common should NOT be connected to an output common. This would cause EMI on the sensitive input common, which could affect the instrument's operation.

Visit www.redlion.net/emi for more information on EMI guidelines, Safety and CE issues as they relate to Red Lion products.

MODULE INSTALLATION


Remove polycarbonate module plug and attach module to host device. Torque screws to 6.0 pound-force inch [96 ounce-force inch] (0.68 Nm).




WARNING: Disconnect all power to the unit before installing or removing modules.

EARTH GROUND

This module has a chassis ground-screw connection on the front of the module used to provide connection to earth ground. The chassis ground is not connected to signal common of the module. Connection to chassis/earth ground is required as part of the protocol specifications.

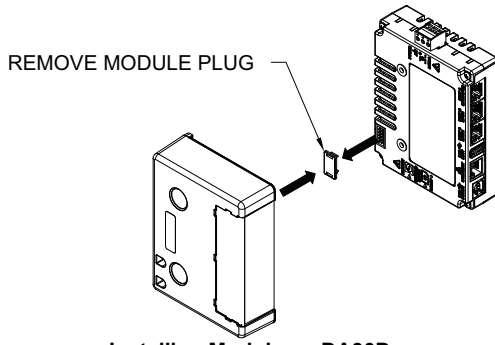

Installing Module on DA30D

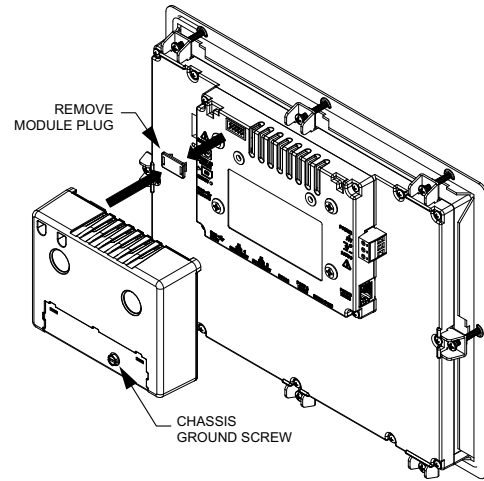


Installing Module on CR3000


COMMUNICATING WITH THE PB MODULE

CONFIGURATION

Programming is done via Crimson 3.1 software, a Windows® compatible configuration interface. Please see the Crimson 3.1 manual for more information.

LEDs

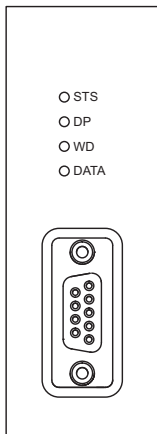



WARNING - EXPLOSION HAZARD - DO NOT CONNECT OR DISCONNECT CABLES WHILE POWER IS APPLIED UNLESS AREA IS KNOWN TO BE NON-HAZARDOUS.

STS – STATUS LED

The Status LED is a green LED that provides information regarding the state of the module. This includes indication of the various stages of the start-up routine (power-up), as well as any errors that may occur.

Startup Routine

Off	Module is currently running the boot loader and/or being flash upgraded by Crimson.
Flashing Green	Module switching to configuration.
Green	Module performing normally.

Error States

Flashing Green	Module is running, but has lost communication with the Host.
----------------	--

COMMUNICATIONS LEDs

The module has 3 LEDs that provide communications state information.

DP (RED)	WD (GREEN)	DATA (RED)	DESCRIPTION
SLOW ALTERNATING FLASH	SLOW ALTERNATING FLASH	OFF	Baud Search
ON	OFF	OFF	Baud Control
FAST FLASH	SLOW FLASH	OFF	Waiting for Parameter Telegram
SLOW FLASH	FAST FLASH	OFF	Waiting for Configuration Telegram
OFF	OFF	ON	Data Exchange

FIRMWARE UPGRADE

The module's firmware is stored in flash memory so that software/hardware conflicts are avoided, and so features can be added in the future.

During a download, Crimson compares its own library of firmware files with those stored in the module. If they do not match, Crimson will download the necessary firmware.

TROUBLESHOOTING

If for any reason you have trouble operating, connecting, or simply have questions concerning your new unit, contact Red Lion's technical support.

Email: support@redlion.net
Website: www.redlion.net
Inside US: +1 (877) 432-9908
Outside US: +1 (717) 767-6511

GSD FILE

The GSD file and associated bitmap are part of the Crimson installation, and can also be downloaded from the Red Lion website.

DATA TAGS

PROFIBUS data blocks have no concept or knowledge of data type or structure – they are described by a size in bytes. Crimson's Tag based approach to data allows for data of mixed types, bytes, 16-bit words and 32-bit words, to be mapped into a single data block.

A PROFIBUS master exchanges data with slaves as separate input and output blocks. Data transfer direction is described with respect to the PROFIBUS Network such that input data is transferred to the network, or written by the host device, and output data is transferred from the network, or read by the host device.

Data Tags are mapped to either an Input Block and are Write only, or an Output Block and are Read Only. The Access must be selected to reflect this.

The Data Offset is the byte address of the Data Tag within the Data Block.

The Data Type is the actual size in bytes of the data that will be mapped into the Data Block.

LIMITED WARRANTY

(a) Red Lion Controls Inc. (the "Company") warrants that all Products shall be free from defects in material and workmanship under normal use for the period of time provided in "Statement of Warranty Periods" (available at www.redlion.net) current at the time of shipment of the Products (the "Warranty Period"). **EXCEPT FOR THE ABOVE- STATED WARRANTY, COMPANY MAKES NO WARRANTY WHATSOEVER WITH RESPECT TO THE PRODUCTS, INCLUDING ANY (A) WARRANTY OF MERCHANTABILITY; (B) WARRANTY OF FITNESS FOR A PARTICULAR PURPOSE; OR (C) WARRANTY AGAINST INFRINGEMENT OF INTELLECTUAL PROPERTY RIGHTS OF A THIRD PARTY; WHETHER EXPRESS OR IMPLIED BY LAW, COURSE OF DEALING, COURSE OF PERFORMANCE, USAGE OF TRADE OR OTHERWISE.** Customer shall be responsible for determining that a Product is suitable for Customer's use and that such use complies with any applicable local, state or federal law.

(b) The Company shall not be liable for a breach of the warranty set forth in paragraph (a) if (i) the defect is a result of Customer's failure to store, install, commission or maintain the Product according to specifications; (ii) Customer alters or repairs such Product without the prior written consent of Company.

(c) Subject to paragraph (b), with respect to any such Product during the Warranty Period, Company shall, in its sole discretion, either (i) repair or replace the Product; or (ii) credit or refund the price of Product provided that, if Company so requests, Customer shall, at Company's expense, return such Product to Company.

(d) **THE REMEDIES SET FORTH IN PARAGRAPH (c) SHALL BE THE CUSTOMER'S SOLE AND EXCLUSIVE REMEDY AND COMPANY'S ENTIRE LIABILITY FOR ANY BREACH OF THE LIMITED WARRANTY SET FORTH IN PARAGRAPH (a).**